




ERTS-5000_X Axis & Y Axis



ERTS-5000_Z Axis

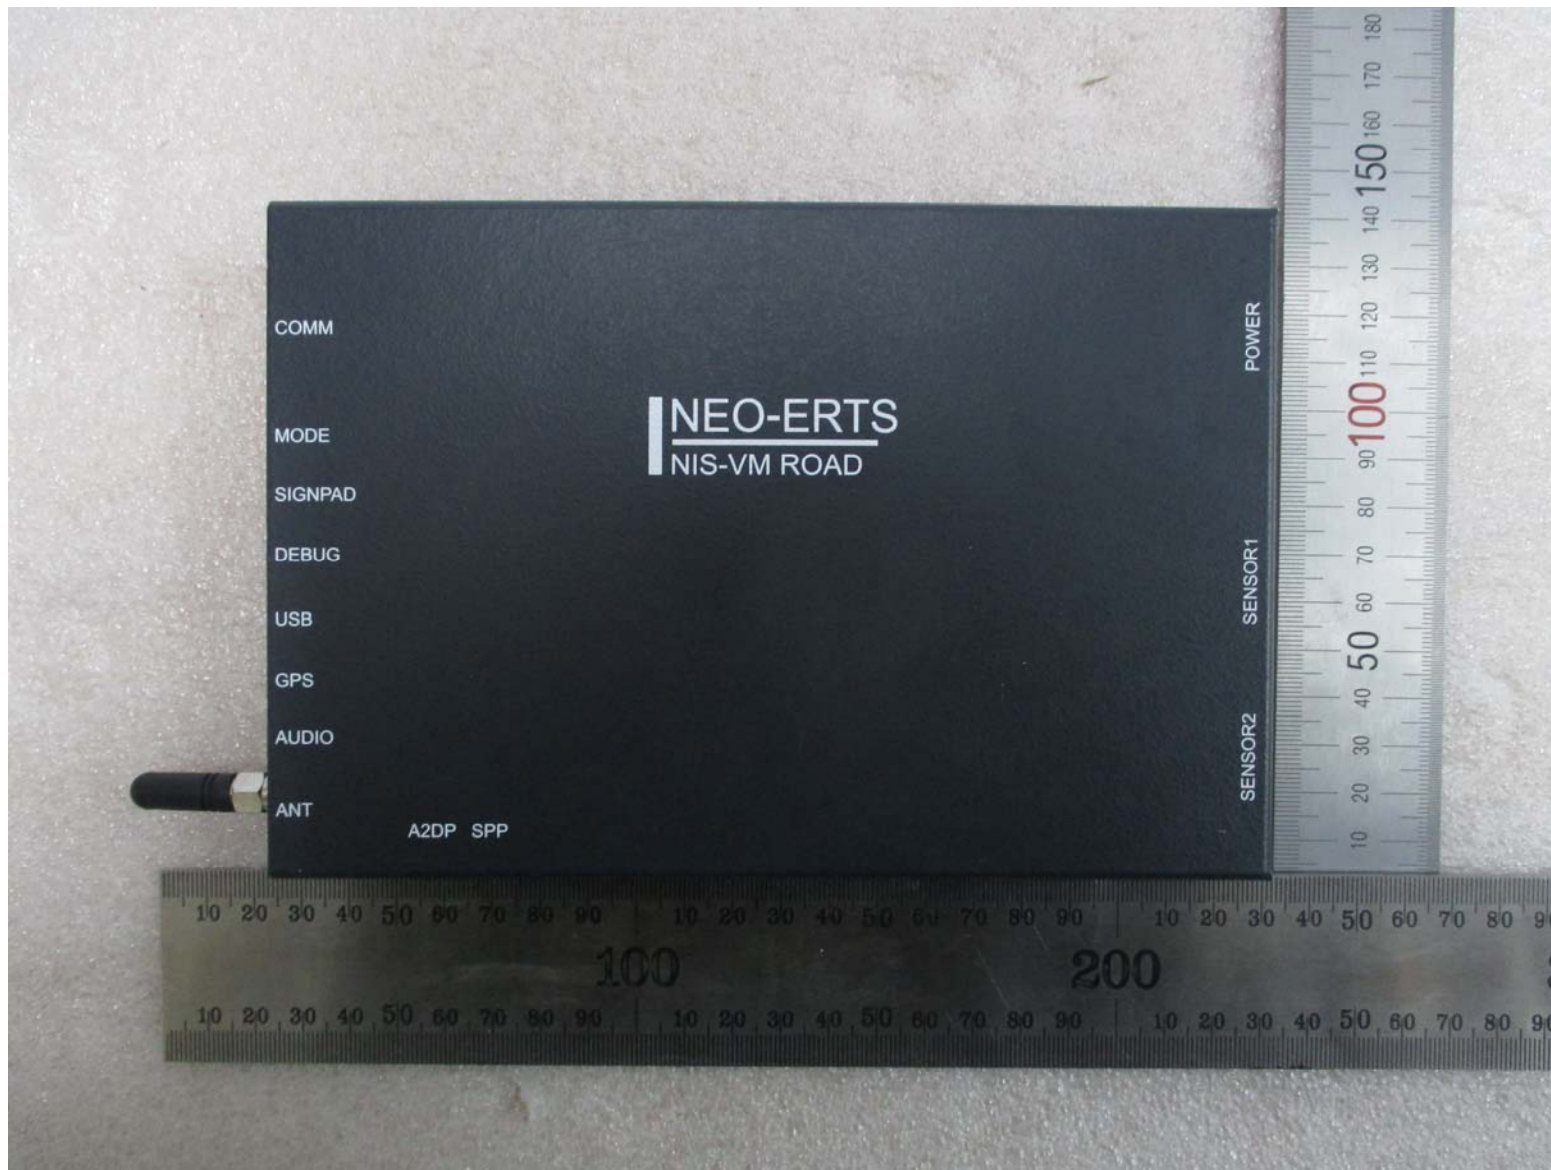

ERTS-5000_EUT Front




ERTS-5000_EUT Rear



ERTS-5000_EUT Left



ERTS-5000_EUT Right

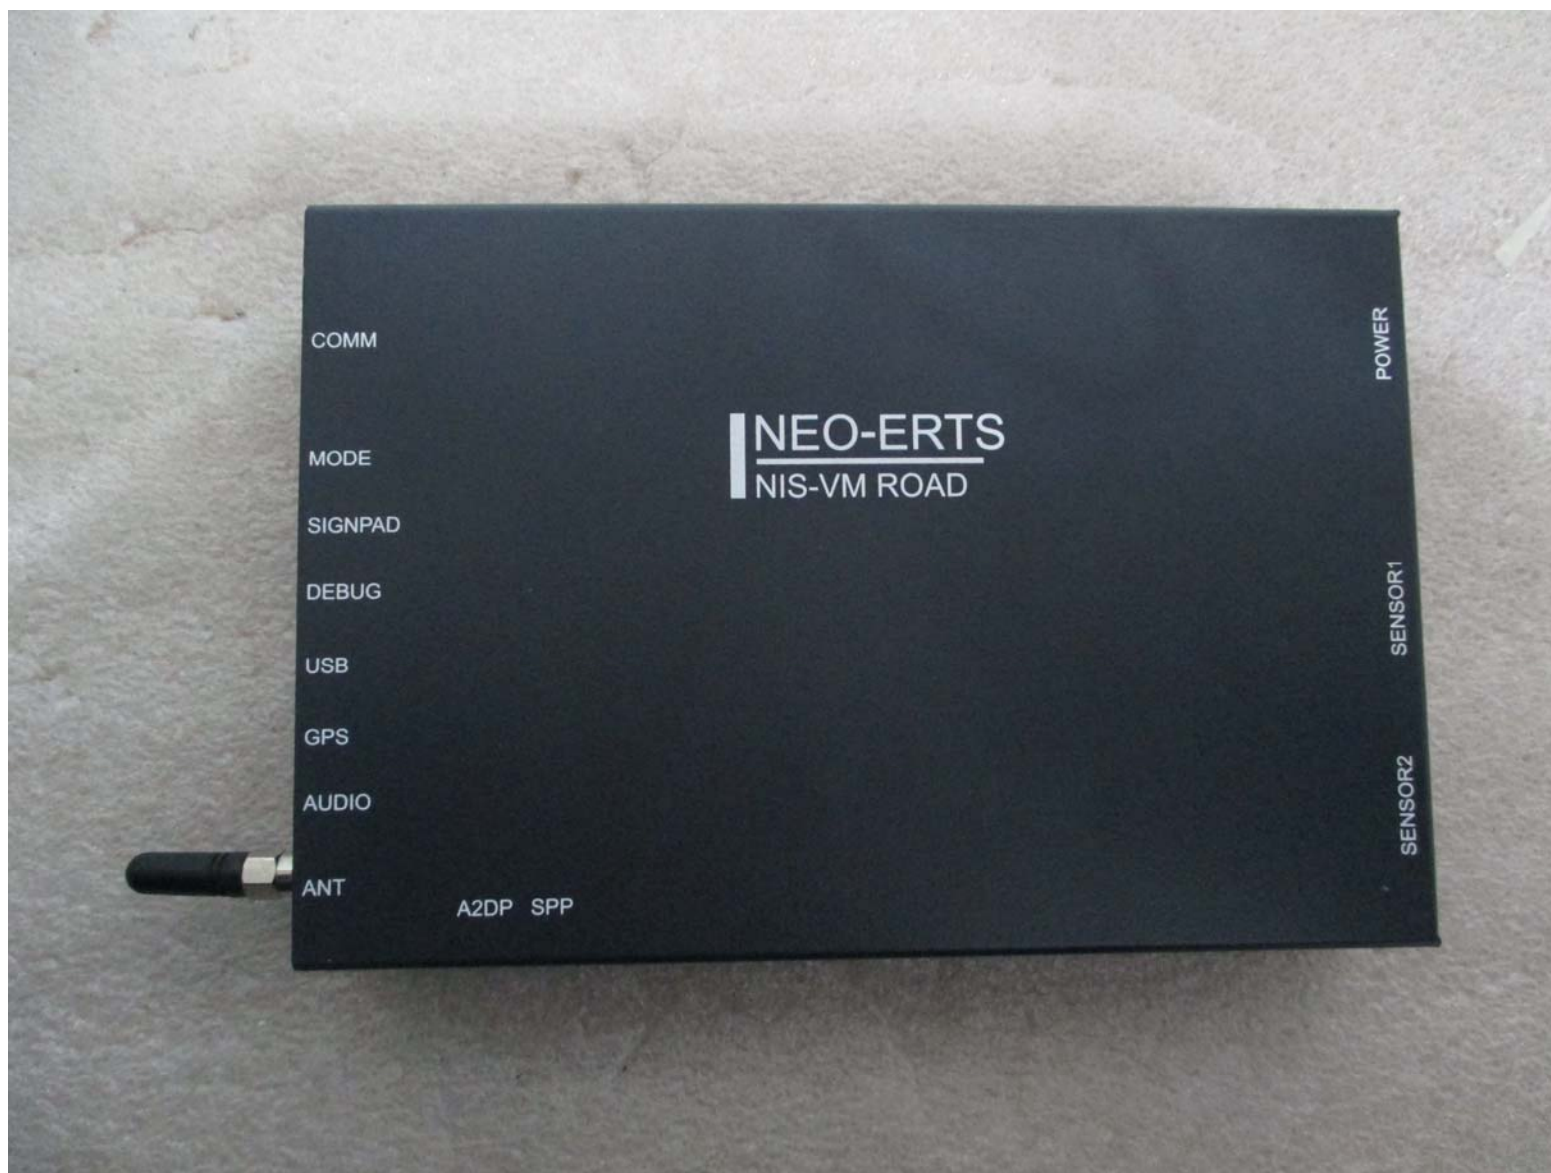

ERTS-5000_EUT Top



ERTS-5000_EUT Bottom