


### • 不同闪光模式的无线多重闪光拍摄

将主控灯闪光组（A、B、C、D）设为不同的闪光模式，并设置所需曝光补偿 / 闪光功率，从属灯自动根据所在组设置进行拍摄。

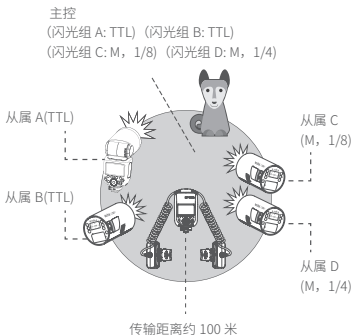

- 注：1. 当相机的拍摄模式设为全自动模式或程序影像控制区模式时，无法利用本章中的操作。将相机的拍摄模式设为 P/Tv/Av /M/B( 创意拍摄区模式) , 才能操作无线闪光。
2. 为避免干扰，请清除主控灯和从属灯之间的障碍物。
3. 开始无线多重闪光拍摄前，需进行测试闪光和试拍。

## 神牛 2.4G 无线漏闪原因及解决办法

### 1. 外部环境干扰（如无线基站、2.4G WiFi 路由、蓝牙设备等）

→ 解决办法：调节频道 CH 设置（建议 +10），找到无干扰的频道，并在工作时关闭其他 2.4G 设备。

2. 请确认闪光灯是否已经回电或回电速度是否跟上连拍速度且没有处于过热保护或者其他异常状态中。

→ 解决办法：下调闪光灯档位，如是 TTL 模式可以尝试改为 M 模式（TTL 模式下需要预闪一次）。

### 3. 主控灯和从属灯距离过近

→ 解决办法：设置引闪距离为 0.3 - 10 m。

#### 4. 设备电量低

→ 解决办法：请更换电池或及时充电。

#### 5. 闪光灯固件版本为旧版本

→ 解决办法：升级闪光灯固件。

#### 6. 相机固件版本为旧版本

→ 解决办法：升级相机固件。具体升级方法请参考相机说明书。

### 过热保护

为防止闪光灯头过热并损坏，请勿在 1/1 档时进行超过 40 次快速连续闪光，或在高速同步且 1/1 档时进行超过 30 次快速连续闪光。

如果超出表中提示次数后仍继续多次闪光，过热保护可能会被激活，显示屏右上角显示 。如果发生这种情况，请让闪光灯冷却 10 分钟。

#### 激活过热保护功能的连续闪光次数

| 档位                                  | 连续闪光次数 |
|-------------------------------------|--------|
| 1/1、1/2+0.7                         | 40     |
| 1/2+0.3                             | 50     |
| 1/2                                 | 60     |
| 1/4+0.3、1/4+0.7                     | 100    |
| 1/4                                 | 120    |
| 1/8 (+0.3、+0.7)                     | 200    |
| 1/16 (+0.3、+0.7)                    | 300    |
| 1/32 (+0.3、+0.7)                    | 500    |
| 1/64 (+0.3、+0.7)                    | 1000   |
| 1/128 (+0.3、+0.7)、1/256 (+0.3、+0.7) | 2000   |

## 高速同步模式下，激活过热保护功能的连续闪光次数

| 档位               | 连续闪光次数 |
|------------------|--------|
| 1/1              | 30     |
| 1/2 (+0.3、+0.7)  | 30     |
| 1/4 (+0.3、+0.7)  | 34     |
| 1/8 (+0.3、+0.7)  | 40     |
| 1/16 (+0.3、+0.7) | 50     |
| 1/32 (+0.3、+0.7) |        |

## 其他保护

| 显示屏显示 | 警示内容                               |
|-------|------------------------------------|
| E0    | 设备内部温度传感器有问题，请维修。                  |
| E1    | 闪光灯回电系统出现问题，无法回电引闪，请重新开机，如无法解决请维修。 |
| E2    | 设备内温度过高，请停止引闪 10 分钟。               |
| E3    | 闪光灯两端电压过高，请维修。                     |

## 故障排除指南

使用中遇到问题，请参考此故障排除指南

| 问题     | 可能原因                                                                    | 解决办法              |
|--------|-------------------------------------------------------------------------|-------------------|
| 闪光灯不闪光 | 闪光灯没有正确安装                                                               | 请将闪光灯热靴牢固地安装在相机上  |
|        | 闪光灯和相机的电子触点变脏                                                           | 请将闪光灯和相机的电子触点清理干净 |
| 电源自动关闭 | 微距闪光灯作为主控灯时，菜单 STBY 选择 ON 选项，> 90 秒无人操作，进入休眠以节能                         | 可按机身任意按键唤醒        |
|        | 微距闪光灯作为从属灯时，菜单 RX STBY 选择 60mins 或 30mins 选项，> 60 分钟或 30 分钟无人操作，进入休眠以节能 | 可按机身任意按键唤醒        |
| 无法开机   | 电池没电或电池已损坏                                                              | 请更换充满电的电池或新电池     |

| 问题        | 可能原因                                        | 解决办法                                          |
|-----------|---------------------------------------------|-----------------------------------------------|
| 作为从属灯时不闪光 | 从属灯设置的闪光组别不正确；例如主控灯 B 组处于关闭状态，而从属灯闪光灯组设置为 B | 正确设置从属灯的闪光组                                   |
|           | 主控灯和从属灯设置的传输频道不一致                           | 请将主控灯和从属灯的传输频道设置为一致，例如将主控灯频道设为 01，从属灯频道也设为 01 |
|           | 从属灯不在主控灯的无线传输范围内                            | 请将从属灯放置在主控灯传输范围内，无线传输范围为 0-100m               |
|           | 主控灯和从属灯过于靠近，无法正常进行传输                        | 请设置闪光灯的引闪距离；在 MENU-RF DIST 中设置为 0.3-10m       |

## 相机兼容列表

### MF-T76 C 兼容以下佳能相机：

A 类相机：80D、90D、7D、6D、70D、750D、760D、5DMarkIV、EOS 1DX、6DMarkII、77D、800D、5DMarkIII、5DMarkII、60D、7D Mark II、200DII、1500D、3000D

B 类相机：600D、50D、30D、500D、Digital X

C 类相机：M5、M50、R、RP、R7

### MF-T76 S 兼容以下索尼相机：

α77II、α99、α77、DSC-RX10、α6000、α7R、α350、α7RIII(4.0)、α7RIII、α7M3、α9、α7RIV、α7R5、α7MIV、ZV-E10、A9III、A7C、A7CII、α6400、α6500

### MF-T76 N 兼容以下尼康相机：

D800、D750、D700、D610、D500、D200、D300S、D5、D4、D810、D780、D5300、D5200、D5100、D5000、D3300、D3100、D60、Z6、Z7II、Z8、ZFC

注：1. 此表格仅列举目前已测试的相机型号，其他型号，用户可自行测试。

2. A 类相机不兼容 2.4G 无线后帘同步。B 类相机不兼容 2.4G 无线后帘同步和 Gr 模式。

C 类相机不兼容 2.4G 无线后帘同步和 AF 对焦辅助灯。

3. 本公司保留未来修改内容的权利。

## 固件升级

访问神牛官网 <https://www.godox.com.cn/firmware-G3/> 下载软件及最新固件文件。

**连接：**关机状态下，使用随附的 USB-C 线连接电脑。

**升级：**打开 G3 软件，选择固件文件并执行升级。

## 技术参数

|                |                                |
|----------------|--------------------------------|
| 名称             | 微距双头闪光灯                        |
| 型号             | MF-T76 C / MF-T76 S / MF-T76 N |
| 闪光灯功率 (1/1 档位) | 76 Ws                          |
| 闪光指数 (1/1 档)   | 约 GN22.4 (ISO100, 以米为单位)       |
| 闪光功率           | 范围 1/1 ~ 1/256, 步长 1/3         |
| 闪光曝光补偿         | 范围 -3.0 ~ +3.0, 步长 1/3         |
| 闪光持续时间 (t0.1)  | 1/700s ~ 1/19300s              |
| 闪光次数 (1/1 档)   | 约 550 次                        |
| 回电时间 (1/1 档)   | 约 1.2 秒                        |
| 闪光模式           | TTL 自动闪光、M 手动闪光                |
| 闪光灯头旋转角度       | 0° ~ 150°                      |
| 造型灯功率          | 1 W × 2                        |
| 造型灯色温          | 4800K±300K                     |
| 无线传输距离         | 0-100 m                        |
| 频道             | 32 组: 01-32                    |
| ID 号           | 99 个: 01-99                    |
| 高速同步           | 具备                             |
| 后帘同步           | 具备                             |
| 前帘同步           | 具备                             |
| 锂电池            | 7.2V/2980mAh                   |
| 工作环境温度         | -10 ~ 50°C                     |
| 闪光灯头尺寸 (不含连接线) | 75.5 mm × 81.5 mm × 30 mm      |
| 控制器尺寸 (不含连接线)  | 136 mm × 70.5 mm × 62 mm       |
| 重量 (不含电池)      | 约 466 g                        |

上述所有规格均基于神牛测试标准。规格和参数如有变更，恕不另行通知。

## 维护保养

**防震保护：**设备可能因强烈碰撞或振动引发功能异常。

**保持干燥：**本产品不防水。严禁湿手操作或在雨天、浴室等潮湿环境中使用。

**温度适应：**避免设备经历极端温度变化，如从低温环境迅速进入高温环境，可能导致内部冷凝。在温度变化较大时，可预先将设备存放于保护袋内，以减少温度冲击。

**避免磁场干扰：**远离无线电广播发射设备等强电磁场源，以防止电磁干扰导致设备性能下降。

## Important Safety Instructions

This product is a professional photographic equipment, to be operated by professional personnel only.

All transport protective materials and packaging on the product must be removed before use.

The following basic safety precautions must be followed when using this product:

1. Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in serious injury, damage to the product, or other property damage.
2. High voltage exists when the flash is powered on. Internal capacitors will remain charged for some time after power off.
3. This product is a professional lighting fixture, children are prohibited from using it. Children must be closely supervised by adults when approaching the fixture, to prevent collisions with the fixture or unauthorized use that could cause personal injury.
4. This is not an ordinary lighting fixture and must not be used for general illumination. Anyone with a history of eye damage or sensitivity should avoid using this fixture or looking directly at it.
5. Extreme caution must be exercised when using it, do not touch high-temperature parts such as flash tubes and surrounding metal components to avoid burns.
6. Do not point the flash directly at the eyes (especially baby's eyes) under any circumstances, as this could impair vision in a short time. Turn off immediately if discomfort occurs, stop using, and seek medical attention promptly.
7. If the flash tube or LED Modeling Lamp is damaged or thermally deformed, stop using it immediately and contact the manufacturer, service agent, or qualified repair personnel for a replacement to prevent accidents.
8. Do not use damaged equipment or accessories. Allow professional repair technicians to inspect and confirm normal operation before continuing use after repairs.
9. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
10. This device is not waterproof. Keep it dry and avoid immersing it in water or other liquids. It should be installed in a ventilated and dry location and avoid using in rainy, humid, dusty, or overheated environments. Do not place items above the device or allow liquids to flow into it to prevent danger.
11. Do not disassemble without authorization. If the product malfunctions, it must be inspected and repaired by our company or authorized repair personnel.
12. Before storing, make sure that the equipment has cooled down completely. The equipment should be placed in the carrying case or in a ventilated dry place.
13. Do not place the device near alcohol, gasoline, or other flammable volatile solvents or gases such as methane and ethane.
14. Do not use or store this device in potentially explosive environments.

15. Do not use accessories not been approved by our company, as this may cause fire, electric shock or personal injury.
16. Clean gently with a dry cloth. Do not use a wet cloth as it may damage the device.
17. This instruction manual is based on rigorous testing. Changes in design and specifications are subject to change without notice. Check official website for latest instruction manual and product updates.
18. Use only specified charger and follow proper usage instructions for certain products with built-in lithium batteries, within the rated voltage and temperature range.
19. Some products are powered by lithium batteries. These lithium-ion batteries have a limited lifespan, typically lasting 300-500 complete charge-discharge cycles. As usage frequency and duration increase, its maximum storage capacity will gradually decrease, which is a normal phenomenon. Please regularly check the battery's condition, and if the charging time significantly increases or the battery life significantly decreases, consider replacing it with a new battery.
20. Some products are equipped with lithium batteries. The recommended storage guidelines are as follows: Before storage, charge the battery to approximately 50% capacity. Charge it to about 50% at least every six months. Failure to perform maintenance charging over an extended period may cause the battery to suffer permanent performance degradation or even become unusable due to excessive discharge. If the battery is removable, store it separately. The storage temperature should be within the range of 0°C to 40°C.
21. Some products are powered by lithium batteries. Please note:
  - Do not disassemble, crush, or puncture the battery;
  - The battery is not waterproof, do not immerse it in fog or water;
  - Avoid short-circuiting the battery contacts;
  - Do not expose the battery to or put it into fire;
  - Do not expose the battery to temperatures above 60°C;
  - Keep out of reach of children;
  - Protect the battery from excessive shock or vibration;
  - Do not use a damaged battery;
  - If the battery leaks, avoid contact with the leaking fluid;
  - If the battery fluid comes into contact with your eyes, immediately rinse with water for at least 15 minutes. Lift your eyelids until there are no signs of fluid and seek medical attention promptly.
22. Confirm and comply with all relevant local laws and regulations when handling any batteries.
23. The warranty period for this device as a whole is one year. Consumables (such as batteries), adapters, power cords, and other accessories are not covered by the warranty. Unauthorized repairs will void the warranty and will incur charges.
24. Please check the status and power of the lithium battery upon receipt. If there are any quality issues, please contact Godox or our authorized dealer within the warranty period.
25. Failures from improper operation is not covered under warranty.
26. When using the product with an adapter (e.g., in charging mode), the maximum ambient temperature must not exceed 40°C.

# Contents

|    |                                                                      |
|----|----------------------------------------------------------------------|
| 25 | <b>Foreword</b>                                                      |
| 25 | <b>Key Features</b>                                                  |
| 26 | <b>What's Inside</b>                                                 |
| 27 | <b>Names of Part</b>                                                 |
|    | Controller                                                           |
|    | Flash Head                                                           |
|    | Adapter Ring                                                         |
|    | Display                                                              |
| 30 | <b>Install and Remove</b>                                            |
|    | Battery                                                              |
|    | Controller                                                           |
|    | Flash Head                                                           |
|    | Diffuser                                                             |
| 32 | <b>Power Switch</b>                                                  |
| 32 | <b>Flash Mode</b>                                                    |
|    | TTL Auto Flash                                                       |
|    | M Manual Flash                                                       |
| 34 | <b>Operation Mode</b>                                                |
|    | TX Transmitter Mode                                                  |
|    | RX Receiver Mode                                                     |
| 35 | <b>Menu Setting</b>                                                  |
| 37 | <b>Other Function Settings</b>                                       |
|    | Modeling Lamp                                                        |
|    | Locking Function                                                     |
|    | Sync Cord Jack Triggering                                            |
|    | Factory Reset                                                        |
| 38 | <b>Wireless Multi-Flash Photography (2.4G Wireless Transmission)</b> |

TTL: Wireless Multiple Flash Shooting in TTL Auto Flash Output Mode

M: Wireless Multiple Flash Shooting in M Manual Flash Output Mode

Wireless Multiple Flash Shooting in Different Flash Modes

40 **The Reason & Solution of Not Triggering in Godox 2.4G Wireless**

41 **Over-Temperature Protection**

42 **Other Protections**

43 **Troubleshooting**

44 **Compatible Camera Models**

44 **Firmware Upgrade**

45 **Technical Data**

46 **Maintenance**

## Foreword

Thank you for purchasing a Godox product! The MF-T76 is a TTL Macro Twin Flash with adjustable angles, suitable for macro photography subjects such as insects, plants, jewelry, and dental work.


- MF - T76 C: For Canon cameras
- MF - T76 S: For Sony cameras
- MF - T76 N: For Nikon cameras

Note: The product images and interface displays in this manual are based on the MF-T76 C.

## Key Features

- **Dual Flash Units:** Independent settings for both flash tubes. Flash angles are adjustable using the included mounting ring.
- **2.4G Wireless X System:** Supports switching between Transmitter and Receiver modes.
- **Precise Light Control:** Power range from 1/256 to 1/1 in 1/3 increments.
- **Outstanding Performance:** Approx. 550 full power flashes on a full charge.
- **Built-in Modeling Lamp:** Brightness adjustable from 1 to 10 levels.

## What's Inside

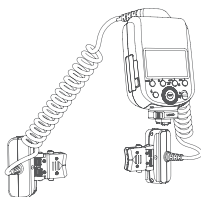

Flash Body ×1



Adapter ×1




Lithium Battery ×1



USB-C to USB-A  
Cable ×1



Diffuser ×2

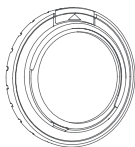

Adapter Ring ×1



49mm



52mm



55mm



58mm



62mm



67mm



72mm



77mm

Adapter Rings Kit AR-R Kit ×1



Storage Bag ×1





Instruction Manual ×1

# Names of Parts


## Controller

1. Display
2. < MODE > Button
3. <  > Modeling Lamp Button
4. < MENU/ > MENU/LOCK Button
5. < RATIO > Button
6. < SET > Settings Button
7. Test Button / Recycle Indicator  
(Green: Ready / Red: Recycling)
8. Select Dial
9. Power Switch Button
10. Hot Shoe Locking Ring
11. Hot Shoe
12. Battery Charging Indicator  
(Green: Fully Charged / Red: Charging)
13. USB Charging Port
14. 2.5mm Sync Cord Jack
15. USB Upgrading Port
16. Battery Release Button
17. Lithium Battery


(Press and hold  
at the same  
time to reset)

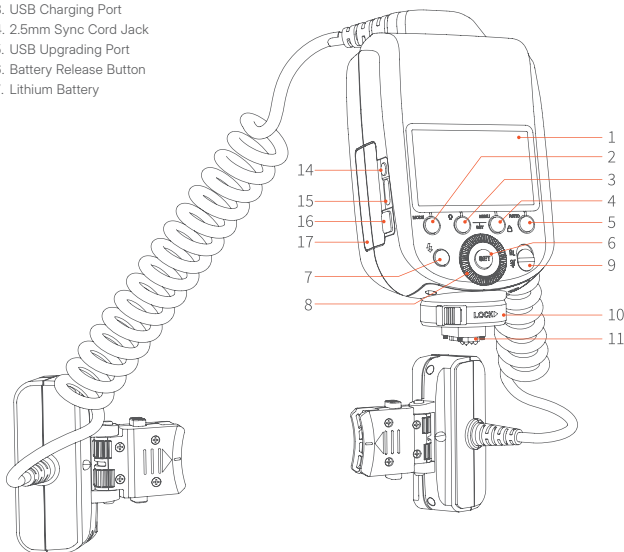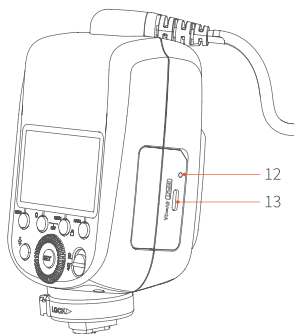


## Flash Head

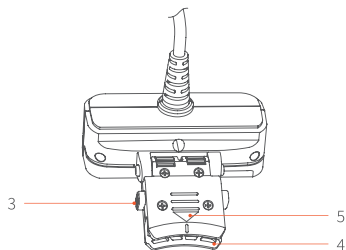

1. Flash Head A
2. Flash Head B
3. Flash Head Release Button
4. Installing Slot
5. Indicator Arrow
6. Modeling Lamp A
7. Modeling Lamp B

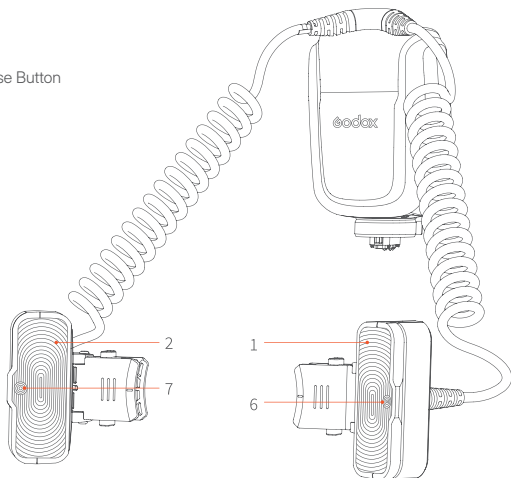


## Adapter Ring

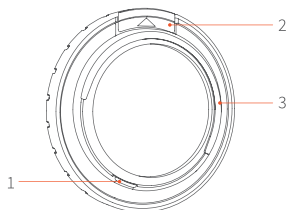

1. Detaching Mount
2. Installing Spot/Indicator Arrow
3. Adapter Ring Connecting Port


## Display

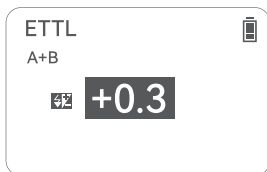


TTL II Auto Flash Mode



M (Manual) Flash Mode

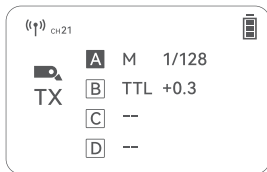

Transmitter

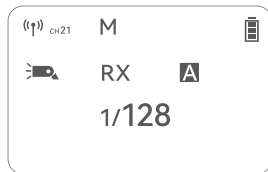


Sender


## Install and Remove

### 1. Battery

**Installation:** Insert the battery into the battery compartment in the correct orientation as shown until it locks into place.

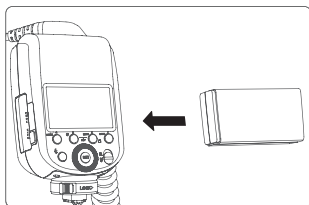


**Removal:** Press and hold the Battery Release Button, and slide the battery to the right to remove it.

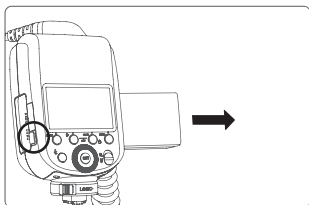


### 2. Controller

**Installation:** Turn the Hot Shoe Locking Ring counter-clockwise to the top. Slide the hot shoe into the camera hot shoe, then turn the ring clockwise to lock.

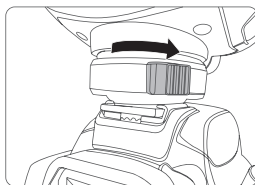


**Removal:** Press and hold the release button on the locking ring, turn the ring counter-clockwise to unlock, and remove the controller.

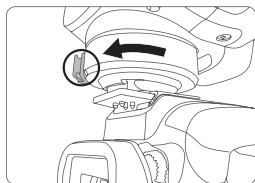


### 3. Flash Head

#### Installation


- Install the included lens adapter ring onto the camera lens.

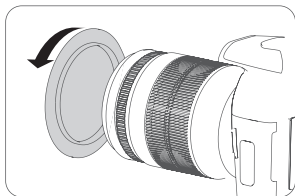

- Hold the Mounting Position on the mounting ring. Insert the flash head in the correct orientation until it clicks into place.
- Press and hold the release buttons on both sides of the flash head to adjust its position.


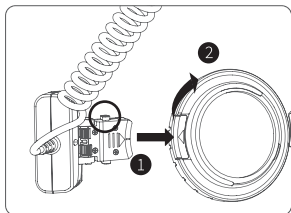


- Align the mounting ring connector with the adapter ring, insert it vertically, and lock it into place.

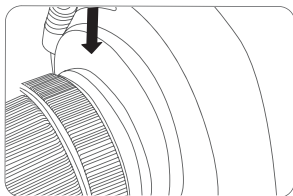



## Removal

- Position the flash head at the mounting location and pull outward to detach.
- Pull the mounting ring outward to release the locking mechanism, then slide it upward to remove.

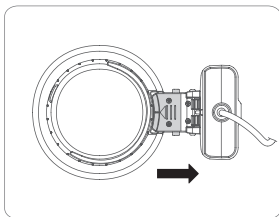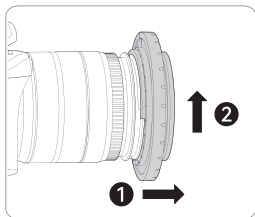

## 4. Diffuser

Align the short bayonet mount with the upper slot on the flash head and the long bayonet mount with the lower slot. Push until it locks securely into place.

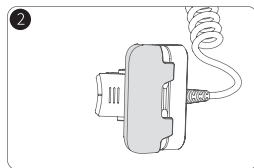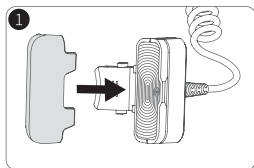

## Power Switch

**Power On:** Slide the switch to the ON position.

**Power Off:** Slide the switch to the OFF position.

## Flash Mode

Short press the < MODE > button to switch to TTL / mode.

## • TTL Auto Flash

The flash unit works with the camera's metering system to automatically adjust optimal flash output. This mode triggers a pre-flash before the shutter releases, allowing the flash to receive camera data for the main flash.

**Flash exposure compensation:** Range -3.0 ~ +3.0, Step:1/3

### 1. Set Overall Exposure Compensation

Short press the < RATIO > button to make "A+B" icon on the display. Turn the select dial to set exposure compensation.



### 2. A:B Flash Ratio Setting

Short press the < RATIO > button until "A : B" is displayed on the screen. Turn the Select Dial to set the flash ratio.(Range: 8 : 1 - 1 : 1 - 1 : 8, Step: 1 / 2 ).

Short press the < SET > button and turn the select dial to set the exposure compensation.



### 3. Set individual flash exposure compensation

Short press the < RATIO > button until "A" and "B" are displayed. Press the < SET > Button to switch between flash tube A and B, then turn the Select Dial to set the Flash Exposure Compensation.



- Note: 1. Adjust the FEB value to "±0.0" can cancel the FEB.  
2. Flash ratio settings are as follow:



## • M Manual Flash

Manually set the flash output. Range: 1 / 256 - 1 / 1, Step: 1 / 3

### 1. Overall Flash Ratio Setting


Short press the RATIO button until "A+B" is displayed. Turn the Select Dial to set the Flash.



### 2. A : B Flash Output Setting

Short press the RATIO button until "A" and "B" are displayed with individual power values.


Press the <SET> Button to switch between flash tube A and B, then turn the Select Dial to set the Flash.

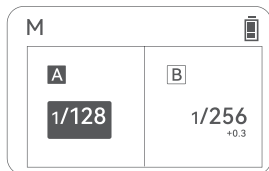

### 3. Single Group Flash Output Setting

Short press the RATIO button to make "A" and "B" icon and single group output value on the display.

Press the < SET > Button to switch between flash tube A and B, then turn the Select Dial to set the Flash.

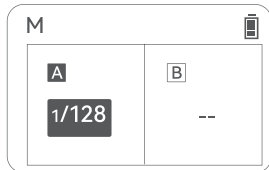

## Operation Mode

- Short press the < MENU/☰ > button to enter the menu.
- Turn the Select Dial to select "WIRELESS", then press the < SET > Button to enter.
- Turn the Select Dial to cycle through OFF / TX / RX, then press the <SET> Button to confirm.
- Press the < MENU/☰ > Button to exit.

## • TX Transmitter Mode


Wirelessly controls other Godox X system flashes.

Turn the Select Dial to select a group, then press the < SET > Button to enter. Press the < MODE > Button to switch among TTL / M / -- (OFF). Turn the Select Dial to Flash Exposure Compensation or power output.

### Transmitter Groups:

Groups A, B, C, D ( MF-T76 C )

Groups M, A, B, C ( MF-T76 S / N )

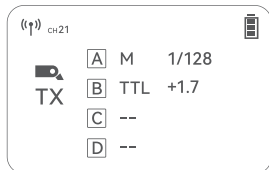

## • RX Receiver Mode


Receives wireless trigger signals as a receiver unit.

Press the < SET > Button or turn the Select Dial to switch groups.

### Receiver Groups:

Groups A, B, C, D ( MF-T76 C )

Groups A, B, C ( MF-T76 S )

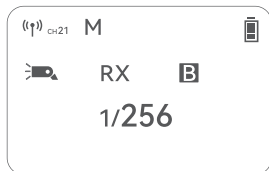

## Menu Setting

- Short press the < MENU/⏏ > button to enter.
- Rotate the select dial to choose an item.
- Short press the < SET > button and rotate the select dial to adjust settings.
- Short press the < SET > button to confirm and return to the previous menu.
- Short press the < MENU/⏏ > button to exit the menu.


| Level 1 Option | Level 2 Option | Description                                                     |
|----------------|----------------|-----------------------------------------------------------------|
| WIRELESS       | OFF            | Turn off wireless                                               |
|                | TX             | Turn on transmitter's wireless .The flash is in on-camera mode. |
|                | RX             | Turn on receiver's wireless                                     |
| CH             | 01-32          | 32 channels                                                     |

| Level 1 Option                                    | Level 2 Option                                                                          | Description                                                                                                                                                  |
|---------------------------------------------------|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ID                                                | OFF                                                                                     | Turn off ID                                                                                                                                                  |
| TX FLASH (Available only on MF-T76C)              |        | Turn off the transmitter's flash when using as a transmitter unit                                                                                            |
|                                                   |        | Turn on the transmitter's flash when using as a transmitter unit                                                                                             |
| TCM (Convert TTL metered value to M power value.) | OFF                                                                                     | Function unavailable                                                                                                                                         |
|                                                   | ON                                                                                      | Short press the MODE button can realize TCM transform when this function is switched on. This function is unavailable in wireless flash or single port flash |
| SYNC                                              |        | First curtain sync                                                                                                                                           |
|                                                   |        | High speed sync (Minimum power in M mode is 1/32 in this state)                                                                                              |
|                                                   |        | Rear-curtain sync (Available only on MF-T76C in on-camera mode)                                                                                              |
| RF DIST                                           | 0.3-10m                                                                                 | Suitable for close-up photography                                                                                                                            |
|                                                   | 1-100m                                                                                  | Suitable for long-distance photography                                                                                                                       |
| MODEL                                             |  CONT  | Turn on the modeling lamp, it will not go out when the flash fires                                                                                           |
|                                                   |  INTER | Turn on the modeling lamp, it will go out when the flash fires                                                                                               |
| STBY                                              | ON                                                                                      | Turn on sleep mode. Enters sleep mode after 100 seconds of inactivity                                                                                        |
|                                                   | OFF                                                                                     | Function unavailable                                                                                                                                         |
| RX STBY                                           | 60 mins                                                                                 | Enter sleep mode after 60 minutes of idle use when using as a receiver unit                                                                                  |
|                                                   | 30 mins                                                                                 | Enter sleep mode after 30 minutes of idle use when using as a receiver unit                                                                                  |
|                                                   | OFF                                                                                     | Turn off sleep mode when using as a receiver unit                                                                                                            |
| BL                                                | 12 secs                                                                                 | Backlight off over 12 seconds of idle use                                                                                                                    |
|                                                   | OFF                                                                                     | Display Backlight: Off                                                                                                                                       |
|                                                   | ON                                                                                      | Display Backlight: Always On                                                                                                                                 |
| LCD                                               | -3~+3                                                                                   | The contrast ration can be set in 7 levels                                                                                                                   |

## Other Function Settings

### • Modeling Lamp

- Long press the <  > button to enter settings.
- Short press the < SET > button to switch between Modeling Lamp A and B.
- Short press the <  > button to turn the lamp on or off.
- When turned on, rotate the select dial to adjust brightness ( Range: 01-10 ).
- Long press the <  > button to return to the main interface.

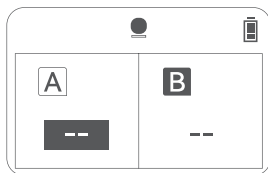


Quick Control in Main Interface:

Short press once: Turn Modeling Lamp A on/off.

Short press twice: Turn Modeling Lamp B on/off.

### • Locking Function


Long press the < MENU/ > button to lock or unlock the display.

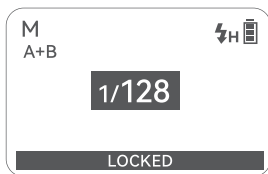

Note: Long press the < MENU/ > button won't work in menu interface means it's not locked.


### • Sync Cord Jack Triggering

The sync cord can be inserted into the 2.5mm sync port to fire the flash.

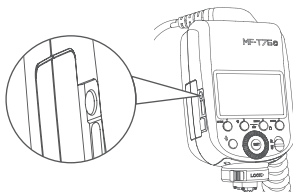

### • Factory Reset

Long press the <  > button and the < MENU/ > button until, "RESET" icon appears on the display, the icon disappears means resetting is completed.

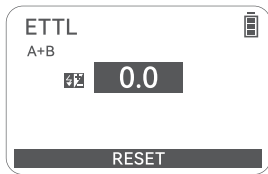

## Wireless Multi-Flash Photography (2.4G Wireless Transmission)

This chapter describes how to use the MF-T76 as a transmitter for wireless multi-flash photography when paired with flashes featuring 2.4G wireless receiving functions (sold separately).

Compatible models include:

Outdoor Flashes: AD100Proll, AD200Proll, AD600Proll, AD600BMII, etc; On-camera Flashes: MF-T76, iT32, iT30Pro, V100, V480, etc; Retro Flashes: LUX Master, etc.

In this chapter, the MF-T76 mounted on the camera is referred to as the "Transmitter," and the controlled flashes are referred to as "Receivers."

Note:

- 1.Ensure the transmitter and receivers are set to the same channel, group, and wireless ID.
- 2.The MF-T76 is compatible with various receiver models; those listed above are for reference only.
- 3.The MF-T76 S transmitter does not support Group D.