

Frequency Channel:
27 MHz 49 MHz

Frequency Channel:
27 MHz 49 MHz

- STAND
- FLIP
- 360° SPIN
- VERTICAL SPIN
- HYPER SPIN
- SOMERSAULT
- SIDE FLIP
- WHEEL STAND

8 AWESOME STUNTS



ECHO TECH

MAX RUMBLER

RC

ECHO TECH

RC MAX RUMBLER

RADIO CONTROLLED STUNT VEHICLE



DUAL FREQUENCY
FOR MULTI-RACER ACTION

8 AWESOME STUNTS

- STAND
- FLIP
- 360° SPIN
- VERTICAL SPIN
- HYPER SPIN
- SOMERSAULT
- SIDE FLIP
- WHEEL STAND

WINDOW 79867
12w7.25h8d

ECHO TECH



DUAL FREQUENCY
FOR MULTI-RACER ACTION

ECHO TECH



RC MAX RUMBLER

RADIO CONTROLLED STUNT VEHICLE

8 AWESOME STUNTS!

AGES
8+



DUAL FREQUENCY
FOR MULTI-RACER ACTION

HYPER SPIN!

FLIPS!

SPINS!



STAND



FLIP



HYPER SPIN



360° SPIN



RC MAX RUMBLER
RADIO CONTROLLED STUNT VEHICLE
8 AWESOME STUNTS!



WHEEL STAND



SOMERSAULT



VERTICAL SPIN



SIDE FLIP



STAND

To make the Max Rumbler stand, push both joysticks up to drive forward about half a second. Release about 2-3 seconds. At full speed, hold both joysticks down for stand.




FLIP

To flip the Max Rumbler, push both joysticks up to drive forward about half a second. Release about 2-3 seconds. At full speed, hold both joysticks down while holding the left joystick to flip to the right. To flip to the left, push the left joystick down while holding the right joystick up at the same time.




360° SPIN

For 360° spin, just push the left joystick up and the right joystick down at the same time. To spin in the opposite direction, push the left joystick down and the right joystick up at the same time.

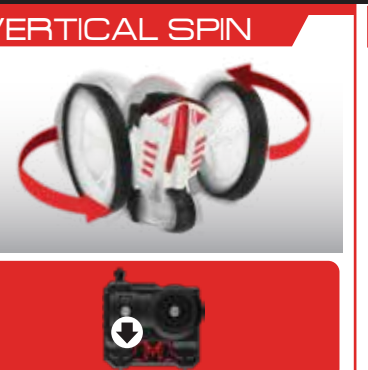


VERTICAL SPIN

To do this stunt, simply push the left joystick down. To spin in the opposite direction, push the right joystick down.

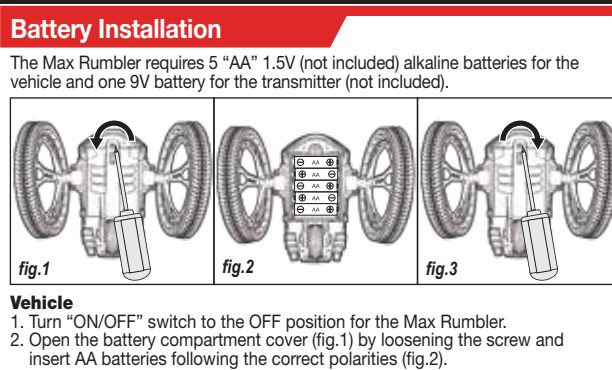


HYPER SPIN!

To perform this amazing stunt, push the left joystick down and simultaneously push the right joystick up. Hold to gain speed and then push both joysticks up for Hyper Spin.

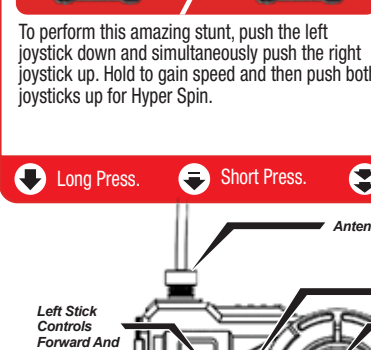


SOMERSAULT

To do this stunt, hold the left joystick down to perform a vertical spin. Then, tap the right joystick downwards repeatedly to advance to a Somersault stunt.

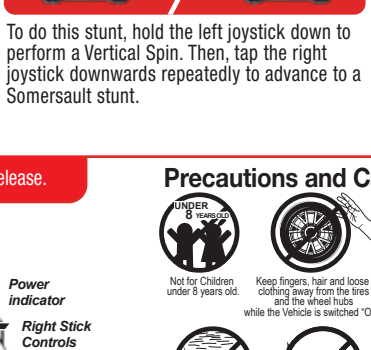


SIDE FLIP

Push both joysticks up to drive forward and accelerate about 4-5 seconds. Then push the right joystick down while holding the left joystick to flip to the right. To flip to the left, push the left joystick down while holding the right joystick up.

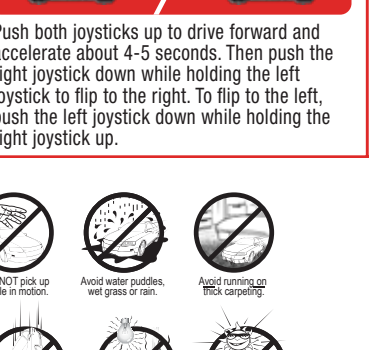

WHEEL STAND

To do this stunt, push both joysticks up to drive forward about 3-4 seconds. At slow speed, push the right joystick down and then release the left joystick.

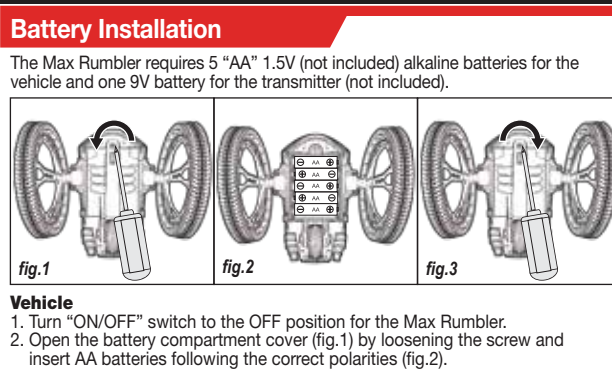

Battery Installation

The Max Rumbler requires 5 "AA" 1.5V (not included) alkaline batteries for the vehicle and one 9V battery for the transmitter (not included).

Vehicle

1. Turn "ON/OFF" switch to the OFF position for the Max Rumbler.
2. Open the battery compartment cover (Fig. 1) by loosening the screw and insert AA batteries following the correct polarities (Fig. 2).
3. Replace the battery compartment cover and tighten the screw (Fig. 3).

Transmitter

1. Turn "ON/OFF" switch to the OFF position for the transmitter.
2. Open the battery compartment cover by loosening the screw (Fig. 4) and insert 9V battery inside following the correct polarities (Fig. 5).
3. Replace the battery compartment cover and tighten the screw (Fig. 6).

Note: When replacing RC Max Rumbler battery:

Use alkaline battery only.

FCC Statement


The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this document are not permitted without the express written permission of the manufacturer. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

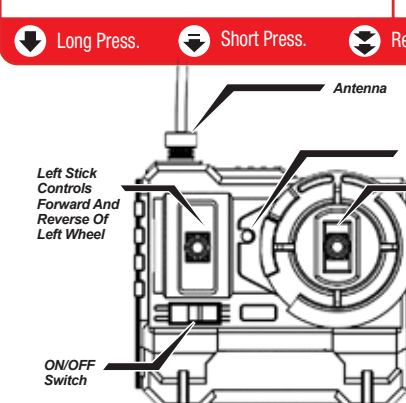

Cautions:

Important! Only adults should operate this device.

- Alkaline batteries are recommended.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Spent batteries are to be removed from the toy.
- The supply batteries are not to be short-circuited.
- Please keep this information for future reference.
- Remove batteries from the product when extended storage.
- Do not dispose of battery in fire, battery may explode or leak.

CONTENTS AND SPECIFICATIONS MAY VARY FROM THOSE ILLUSTRATED. PLEASE RE-EXAM THIS INFORMATION FOR FUTURE REFERENCE.



