



Le Max 海外项说明书

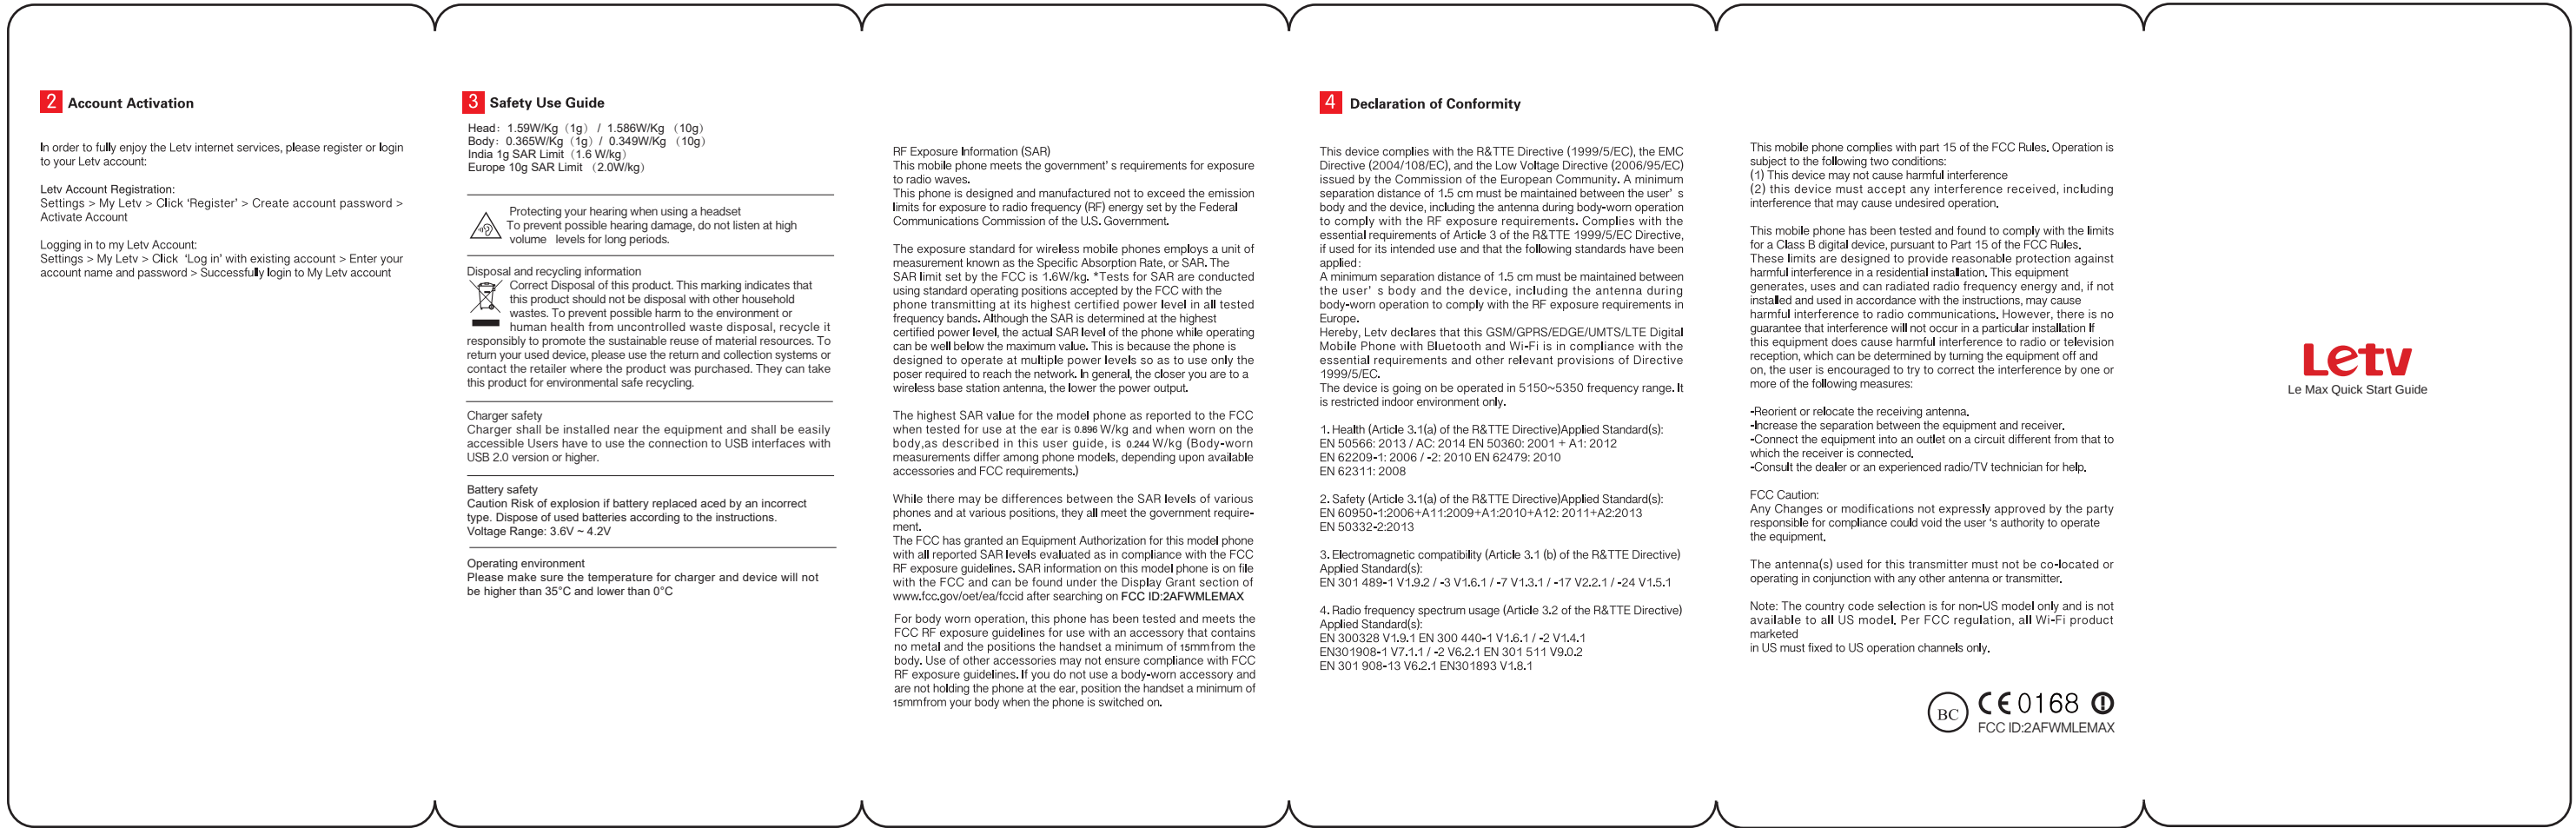

SCALE: 1:1

1 DEVICE OVERVIEW

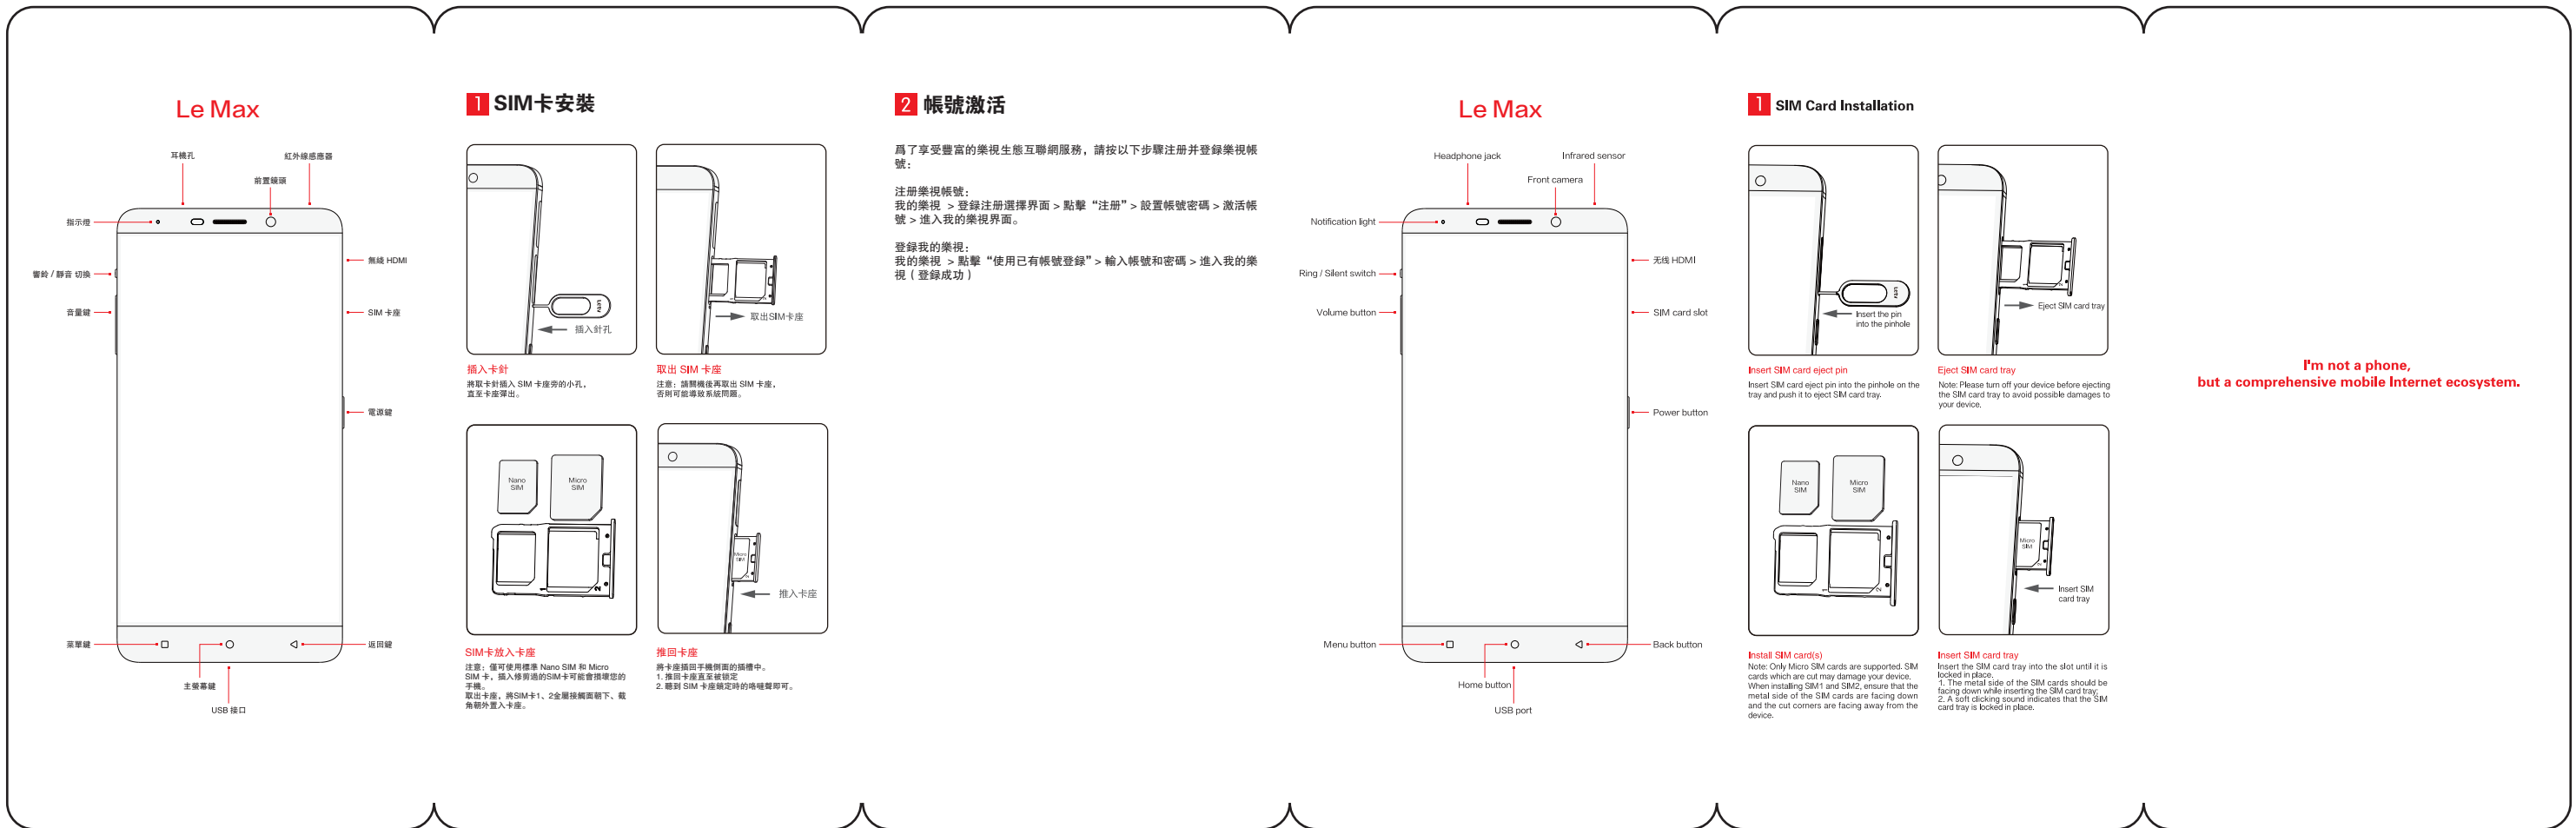

2. GETTING STARTED

POWERING ON/OFF THE DEVICE

Turning On the Device

After installing the SIM card/s and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon sideways to unlock the screen.
- If the screen turns off, then short press the Power Key to turn on the display.

Turning Off the Device

- Press and hold the Power Key.
- A pop-up window appears, select Power off.
- Select OK to confirm.

3. SYSTEM GUIDE

3.1 MAIN SCREEN OPERATING

Notification Panel

The table below lists various icons that might appear on the notification Panel of the device.

3.2 USING YOUR PHONE

Enter main menu

In idle mode press the  key to enter the main menu on the desktop and press the (Home) key to return.

Enter sub menu

In the main menu click the icon to select the sub menu, press the Back key to return to the previous menu, and press the Home key to return to the Home screen.

3.3 CALLING

To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Tap , enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .

- To end the call, tap 

3.4 MESSAGING

For using your device for sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service), go to Main Menu and then select Messaging.

Creating a Message

- Tap  Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.

Receiving and Managing Messages

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:

- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- Select Menu > Add subject.
- In the To field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, etc, tap .
- To insert text, tap Type to compose, and then enter your message.

3.5 CONTACTS

You can save information such as name, phone numbers, etc. for each contact listed in your Contacts menu.

To add a Contact

- Enter the Main Menu select Contacts.
- Tap  add to contacts .
- Store the contact to SIM card or Phone contact.
- You can fill out as many or as little fields as you'd like for the contact.
- Tap Done to save the contact.

3.6 BROWSER

The Browser is the tool which enables you to access the Internet.

4. HOME SCREEN

4.1 CUSTOMIZING SCREEN

The device features a touchscreen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

Shortcuts

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

Widgets

Save time with live updates right on Home screen and get all of your personalized updates at one place.

Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- Long press the Menu Key > Wallpapers.

Rotating Your Mobile Phone Screen

- The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.
- On the Home screen, tap  > Settings > Display > Auto-rotate screen to disable this function.

5. MULTIMEDIA

Your device features various multimedia options, such as Music Player, Camera and Video Player.

5.1 FILE MANAGER

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

5.2 CAMERA

Your device is equipped with a camera and camcorder that enable you to capture photos and videos.

5.3 GALLERY

You can view the captured images, recorded video clips, and downloaded images in the Gallery.

The picture folder and video folder will be displayed.

Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

6. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

6.1 CALCULATOR

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

6.2 CLOCK

This function gives you an access to the alarm clock.

- Go to  → Clock
- Tap  > tap  to add alarm.