



MARATHON



★★★★★

HOTEL COLLECTION

BY MARATHON | 88
EST. 1939

**WIRELESS FAST DUAL CHARGING CLOCK
USER MANUAL**


**HORLOGE À DOUBLE RECHARGE RAPIDE
SANS FIL MODE D'EMPLOI**

**OROLOGIO A DOPPIA RICARICA VELOCE E
SENZA FILI ISTRUZIONI PER L'USO**

**INSTRUCCIONES DE FUNCIONAMIENTO DEL
RELOJ INALÁMBRICO DE CARGA DUAL RÁPIDA**

**SCHNELLER DRAHTLOSER DOPPELTER
LADETAKT BENUTZERHANDBUCH**

OVERVIEW

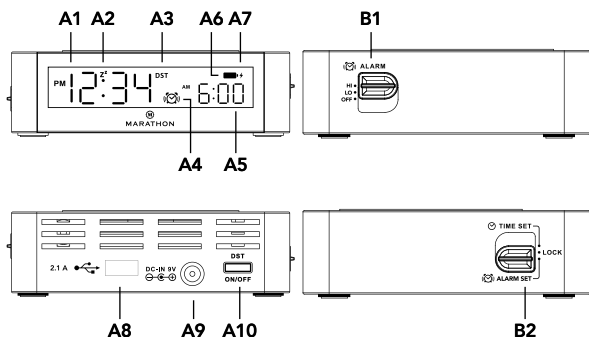


Part A – Front and Back

- A1: Time
- A2: z^z Icon
- A3: **DST** Icon
- A4: Alarm Icon
- A5: Alarm Time
- A6: Battery Icon
- A7: Lightning Bolt Icon
- A8: USB Port
- A9: A/C Adapter Jack
- A10: **DST** ON/OFF Button

Part B – Sides

- B1: Alarm Switch
- B2: TIME SET / ALARM SET Switch

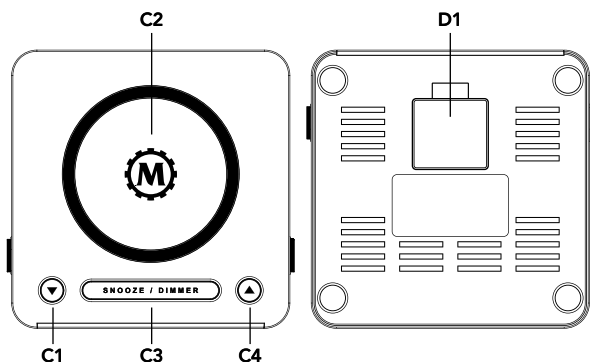

Part C – Top

- C1: ▼ Button
C2: Charging Pad
C3: SNOOZE / DIMMER Button
C4: ▲ Button

Part D – Bottom

- D1: Battery Compartment

FEATURES

- Qi wireless charging: Simply place any Qi enabled wireless charging device on the charging pad. No cable connection required.
- Digital clock with daily alarm function.
- Crisp and vibrant full colour LED display.

POWER SOURCE

This unit uses 1 A/C power adapter and 1 x CR2032 battery for backup.

GETTING STARTED

1. Plug in the A/C adaptor into the adaptor jack **(A9)**, remove the battery tag from the rear compartment **(D1)** to activate the clock backup battery which is already installed in the clock when you first receive it.
2. When both the A/C adaptor and CR2032 battery have been installed, the unit will automatically switch to the external power supply.
3. The CR2032 battery will store all programmed settings in case the A/C adaptor is unplugged. If the CR2032 battery is removed, all programmed settings will be lost immediately when the A/C adapter is unplugged.

NOTE: The clock will not operate without the A/C adapter.

SETTING THE TIME

Hold the **SNOOZE / DIMMER (C3)** button for 2 seconds to select time display in 12-hour or 24-hour format.

1. Slide TIME SET / ALARM SET switch **(B2)** to TIME SET to enter time setting mode.
2. Press or button **(C1 or C4)** to adjust the time setting. Press and hold the or button to speed up the rate at which the value changes.
3. Slide TIME SET / ALARM SET switch **(B2)** to **LOCK** to confirm the current displayed settings.

NOTE: The HOUR value CANNOT be adjusted directly. The HOUR value can only be changed through the adjustment of the MINUTE value.

DAYLIGHT SAVINGS TIME (DST)

- To activate daylight savings time for the clock, press the **DST ON/OFF** button **(A10)**. You will note that on the display, the time **(A1)** will increase by 1 hour and the **DST** icon **(A3)** will appear.
- To deactivate daylight savings time, press the **DST ON/OFF** button **(A10)**. You will note that on the display, the time **(A1)** will decrease by 1 hour and the **DST** icon **(A3)** will disappear.

SETTING THE ALARM

1. Slide **☉ TIME SET / ⚙️ ALARM SET** switch **(B2)** to **⚙️ ALARM SET** to enter alarm setting mode.
2. Press **▼** or **▲** button **(C1 or C4)** to adjust the alarm time setting, slide **☉ TIME SET / ⚙️ ALARM SET** switch **(B2)** to **LOCK** to confirm setting.
3. Press and hold the **▼** or **▲** button to speed up the rate at which the value changes.

NOTE: The HOUR value CANNOT be adjusted directly. The HOUR value can only be changed through the adjustment of the MINUTE value.

USING THE ALARM AND SNOOZE FUNCTION

1. Slide **⚙️ ALARM** switch **(B1)** to activate or deactivate the alarm function. There are three options: **HI** (alarm sound will be louder), **LO** (alarm sound will be quieter), **OFF** (alarm will not sound at all).
2. When the alarm function is activated, the **⚙️** icon **(A4)** will appear on the display.
3. When the alarm sounds, press the **SNOOZE / DIMMER** button **(C3)** to pause it and enter snooze mode which will delay the alarm for 5 minutes.