



CUBE WIRELESS SPEAKER INSTRUCTION MANUAL Model no.: DESPK-1500

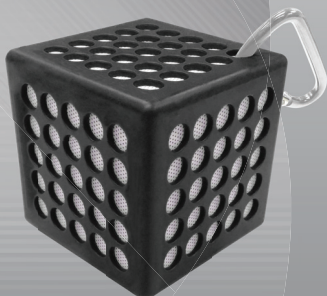


Table of contents

1 Introduction	1
2 Packaging Contents	2
3 Connection Diagram	2
4 How to use	3
4.1 General function	3
4.2 Pairing to mobile phone	4
4.3 Charging your speaker	6
5 Product Specification	7
6 FAQ	7

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


1.Introduction

Congratulations, and thank you for choosing the Cube Wireless Speaker. This manual will help you operate the Cube Wireless Speaker, but you should first familiarize yourself with the Wireless functionality of your mobile phone or other devices before using the Cube Wireless Speaker.


Safety Rules

- 1 Please follow the rules depicted in this manual closely to ensure your safety. Before using this wireless speaker, we would strongly encourage you to read through this user manual.
- 2 Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- 3 Do not modify, repair or dismantle this wireless speaker. Doing so may result in fires, electric shocks, complete breakdown of this wireless speaker, etc., All of which, are not covered under warranty.
- 4 Do not use any diluents or volatile liquid to clean the wireless speaker.
- 5 Do not use the wireless speaker in a hazardous location.

2.Packaging Contents

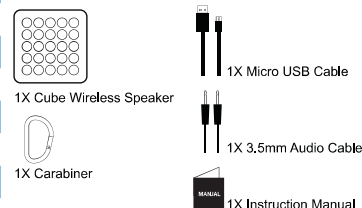

3.Connection Diagram

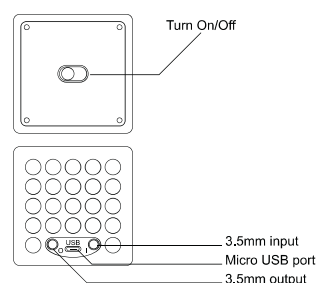

4.How to use

4.1.General Functions

Desired Result	Required Action
Turn on & Enter the pairing mode	Press the button to the right.
Pairing	You should use a Bluetooth function mobile phone or other Bluetooth Master Device and to perform pairing action.
Turn off	Press the button to the left.
Charging	Plug the Micro USB cable to port of the device.

4.2.Pairing to Mobile phone or other device

To use your wireless speaker, you must first pair your speaker with a phone or a computer. Once your wireless speaker is paired to a specific mobile phone, they will remain paired and automatically recognize each other whenever they are within range.

Pairing to a phone and Entertainment:

- Turn on your phone and ensure its Bluetooth function is activated
- Turn on the speaker go to the pairing mode.
- Search your Bluetooth devices on your phone by following the phone's instructions. Refer to your phone's user manual for more information.
- After a few second the phone will list the "Cube BT Speaker" as a discover device. Select it and follow your phone instruction to select this pairing.
- Your phone will confirm the pairing, and then press Yes/Ok.
- Finally, select to connect with Round speaker from your phone.
- You can play music; watch TV/movie and play game with your phone, then you can hear all the sound or music from the speaker. Also you can control the player by operating the speaker. Example, volume up and next music.

Pairing to a computer and Entertainment:

- If there is no Bluetooth function supported by your computer, a Bluetooth adapter is necessary. Fix the adapter with your computer and ensure its Bluetooth function is activated.
- Turn on the speaker go to the pairing mode.
- Open the Bluetooth software (such as BlueSoleil) installed on your computer, and selects "Search your Bluetooth devices" function. Refer to user manual of the Bluetooth software for more information.
- After a few second the "Cube BT Speaker" will list in Bluetooth software of your computer as a discover device. Select this icon and click right button of mouse to select "pairing" item, then select "connect with audio device" with same operation.
- Open your media player soft to play music, watch TV/movie and play game, then all the sound will be playback on your speaker.

4.3.Charging your speaker

The speaker is convenient to connect to Micro USB charger with Micro USB port marked with . Make sure that your speaker is full charged for at least 6 hours before initial use. Insert one terminal of your charger to USB port of PC and other terminal to Micro USB cable.



Warning:

- You must select a qualified charger from a regular manufacturer.
- You must charge the wireless speaker if it has been not used for more than 12 months.

5. Product Specification

Parameter	Value
Driver Diameter	36mm
Impedance	4 Ohms
Bluetooth Version	3.0
Battery Capacity	300 mAh Li-Ion
Bluetooth Range	10m

6.FAQ

1. Why is there no power even when the Speaker is power on?
Ans: Ensure the battery is being charged up to 6 hours for first time using.
2. There is no sound when playback.
Ans: Check the connection between speaker with phone or computer, if the connection is not established, please reconnect again. Make sure the speaker is paired and connected with your target phone or other master device.

Manufactured by:



Marketed in India by:

Zeeva Electronics Pvt.Ltd
901-902,Trade World C wing
Kamla Mill Compound
Senapati Bapat Marg, Lower Parel West
Mumbai-400013

www.digitalessentials.in

© 2016 Digital Essentials. All rights reserved.



WARRANTY CARD

All Digital Essentials products come with a limited warranty and have been subjected to a thorough series of tests to ensure the highest level of dependability and compatibility. It is unlikely that you will experience any problem, but if a defect does become apparent during the use of this product, Digital Essentials warrants to the original consumer purchaser that this product will be free from defects in material and workmanship for a period of 12 months from the date of your original purchase. If a defect covered by this warranty occurs, Digital Essentials, at its option, will repair or replace the product purchased at no repair charge (postage charges will apply). If a replacement is necessary and your product is no longer available, a comparable product may be substituted at the sole discretion of Digital Essentials.

This warranty does not cover normal wear and tear, abusive use or misuse, modification, tampering or by any other cause not related to either materials or workmanship.

This warranty does not apply to product used for any industrial, professional or commercial purposes.

For service on any defective under 12 months warranty policy, please contact Consumer Support.



E-mail: consumersupport@zeeva.com
Telephone Number: 022-67368877
Fax Number: 022-67368889

Keep all relevant information for future reference.

250 mm(W)
x
172 mm(H)