

# MANUAL BOOK



Product Name:Wireless HD/SDI video transmission system with TALLY and TALKBACK

Model Name:1000tr

Manufacture:ShenZhen LanGi Technology Co. LTD

|                                       |    |
|---------------------------------------|----|
| ■ Cautions                            | 2  |
| ■ Wireless Video Transmission Systems | 3  |
| ■ Product Features                    | 4  |
| ■ Specifications                      | 5  |
| Transmitter                           | 7  |
| Receiver                              | 9  |
| ■ User Manual                         | 11 |
| Setting Up the Unit                   | 11 |
| Setting Up the Intercom               | 13 |
| Setting Transmission Output Power     | 13 |
| Channel Settings                      | 14 |
| Turning Fan On/Off                    | 14 |
| Troubleshooting                       | 15 |
| Disclaimers                           | 17 |

### **Warning**

Please read this user introduction manual to become familiar with the features before operation. Failure to operate the product correctly can result in damage to the product, or interference with other devices. This is a sophisticated product which must be operated with caution and common sense. Failure to operate this product properly might result in disturbing other film equipment on set. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components, or alter this product in any way outside of the documents provided by. These safety guidelines contain instructions for installation, operation, and maintenance. It is essential to read and follow all of the instruction in the manual, and all the notices and warnings regarding series products prior to assembly, setup, or use to prevent any damage or interference.

1. Do not use this product in extreme heat, cold, dusty, or humid environments.
2. Prevent friction against hard objects.
3. Prevent jarring, such as from falling from high places, or from improper packaging during transportation.
4. These products are not waterproof; prevent moisture from getting in, on, or around the unit(s).
5. Do not dismantle, assemble, or otherwise alter the product(s) arbitrarily.

### **Electrical Considerations**

1. When this device is sharing a power supply or battery with other equipment, please make sure all signal and power cables are well connected before turning on the unit power.
2. When this device is sharing a power supply or battery with other equipment, please make cables from the unit.
3. When this device is sharing a power supply or battery with other equipment, please check the polarity of the power connectors of all equipment to ensure the inside conductor is positive. If the polarity of the power connector is unknown, please check the user manual to make sure the outer conductor of the SDI or HDMI connector is connected to the negative of the power supply. Otherwise, the equipment will not be able to share the same power supply with the unit.

# Product Features

- Transmits 10-bit color, YCbCr, 4:2:2 color depth, proprietary color matching algorithm on OFDM chips.
- Optimized uncompressed 10-bit 4:2:2 2GBps video stream, or 12-bit 4:4:4 3GBPs wireless video transmission on other models.
- Optimized video processor for on-screen movement.
- Fully supports all audio formats.
- Static channel selection. The channel number and frequency can be modified by software to avoid interference from other devices. Supports multiple receivers and AES 128 bit video encryption.
- FPGA technology adopting American IRTA programmable logic matrix chips.
- Follows the international film association time code protocols. Accurate time code extraction, transmission, and encryption using embedded time code transmission method. Hardware encrypted time code to IRTA chips.
- Software allows user to adjust transmission output power to avoid interference.
- Uses a separate channel to transmit tally information. Fully supports different intercom interfaces.
- Integrated wireless intercom feature supports up to 300 meters for microphone and speakers.

| Transmitter                     | SPECIFICATION                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Frequency                       | Low band: 5190 and 5230MHz                                                                                                                        |
|                                 | High band: 5755 and 5795MHz                                                                                                                       |
|                                 | 2.4-2.483GHz with ISM band                                                                                                                        |
| Modulation method and Bandwidth | OFDM/40MHz for video                                                                                                                              |
|                                 | GFSK/1MHz for intercom system                                                                                                                     |
| Video Formats Supported         | 1080p 23.98/24/25/30/50/60<br>1080psf 23.98/24/25<br>1080i 50/59.94/60<br>720p 50/59.94/60<br>576p 576i 480p 480i                                 |
| Audio Formats Supported         | PCM, DTS-HD, Dolby TrueHD                                                                                                                         |
| Time Code                       | SMPTE-12M                                                                                                                                         |
| Transmission Range              | 2500ft(Line of sight)                                                                                                                             |
| Transmitter                     |                                                                                                                                                   |
| Antenna                         | External Antenna 5G × 2pcs                                                                                                                        |
|                                 | External Antenna 2.4G x1pcs                                                                                                                       |
| Transmission Power              | 18dBm                                                                                                                                             |
| Functional Interface            | HDMI Input; SDI Input; SDI Loop Output; Mini USB; LEMO Power IN; Antenna RPSMA Socket; Power ON/OFF,3.5mm HP/MIC socket<br>TALLY output for Wrist |
| Mounting Structure              | 1/4" Hot-shoe connection                                                                                                                          |
| OLED Display                    | Channel Info; Video status; Battery capacity; Status Menu, Audio Volume                                                                           |
| Power Source                    | 9-18V for DC input, V-Mount or G-Mount battery (depending on the model)                                                                           |
| Power Consumption               | 7.5-8.5W                                                                                                                                          |

## Specifications


|                          |                                                                                                                                                  |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Net Weight(with antenna) | 400g                                                                                                                                             |
| Temperature              | -10-40° (Operating); -40-80° (Storage)                                                                                                           |
| Receiver                 |                                                                                                                                                  |
| Antenna                  | External Antenna for 5G × 5pcs                                                                                                                   |
|                          | External Antenna for 2G x1pcs                                                                                                                    |
| Receiving Sensitivity    | -70dBm                                                                                                                                           |
| Functional Interface     | SDI Dual Output; HDMI Output; Mini USB; LEMO Power IN; Antenna RPSMA Socket; Power ON/OFF, 3.5mm HP/MIC socket;3.5mm TALLY socket; LEMO 6 needle |
| Locating Structure       | 1/4" Hot-shoe connection                                                                                                                         |
| OLED Display             | Channel Info; Signal Strength; Power Info; TALLY indicator                                                                                       |
| Power Source             | 9-18V for DC input; V-Mount or G-Mount battery (depending on the model)                                                                          |
| Power Consumption        | 7.5-8.5W                                                                                                                                         |
| Net Weight(with antenna) | 800g                                                                                                                                             |
| Temperature              | -10-40° (Operating); -40-80° (Storage)                                                                                                           |

# Transmitter

14 5G Antenna

15 Battery Clip

16 Rear TALLY

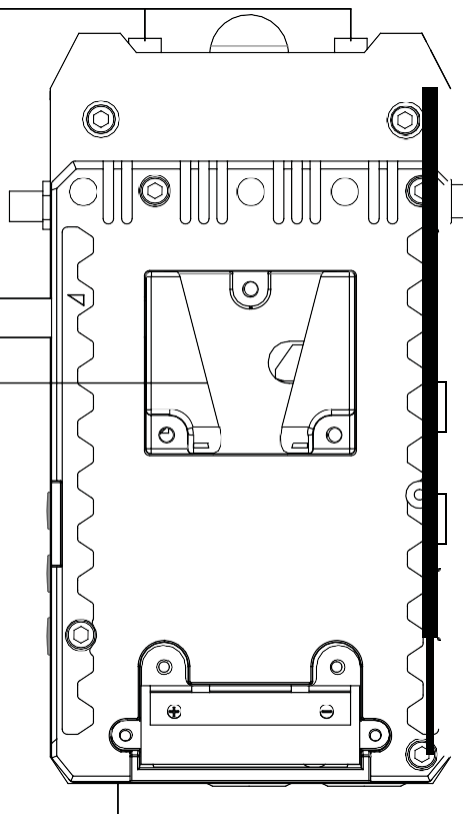

1 Front TALLY



2 2.4G Antenna

3 LCD Display

4 VOL +/sel

5 VOL -/sel

6 MENU

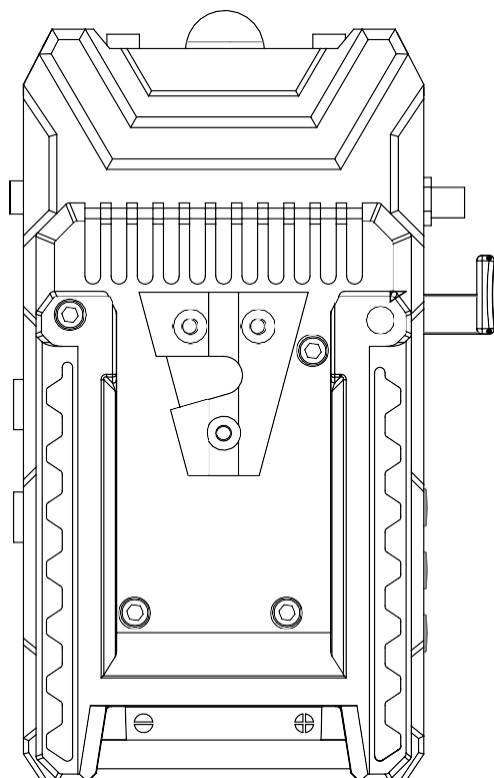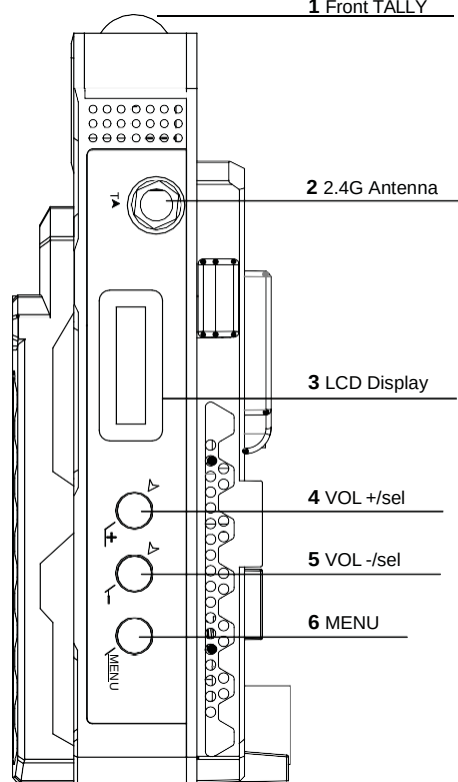

7 Power ON/OFF

8 EXT TALLY output

9 MIC/HP


10 SDI IN

11 SDI OUT(Loop Through)

12 HDMI IN





9V-18V

13 Power Supply IN(Lemo)

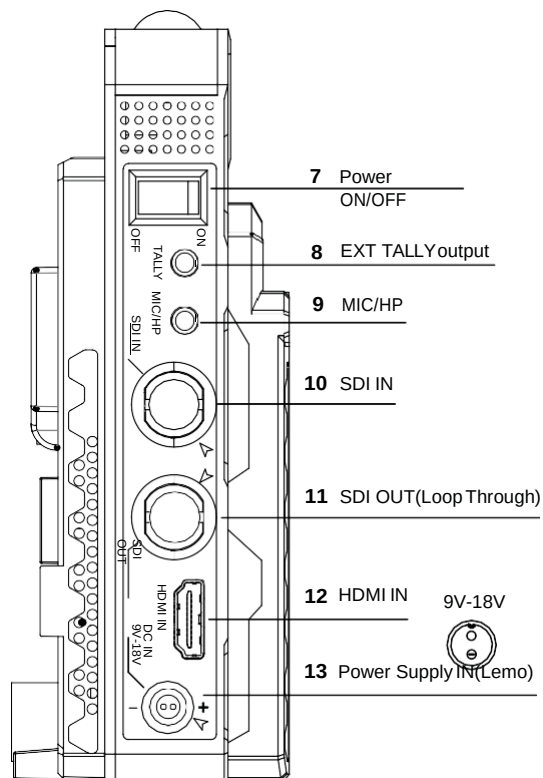

| STRUCTURE |                                                                                                                                          |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>1</b>  | <b>15mm Front TALLY indicator (Red/Yellow)</b><br>The indicator color will be the same (Red/Yellow) for rear, front, and external TALLY. |
| <b>2</b>  | <b>2G Antenna Connector</b><br>SMA connector for 2.4G antenna.                                                                           |
| <b>3</b>  | <b>OLED Display</b><br>Displays information for channel, video status, signal strength, battery voltage indicator, and MENU information. |
| <b>4</b>  | <b>VOL + / UP Button</b><br>Volume + function. In MENU mode, the button functions as an UP key.                                          |
| <b>5</b>  | <b>VOL - / DOWN Button</b><br>Volume - function. In MENU mode, the button functions as a DOWN key.                                       |
| <b>6</b>  | <b>MENU Button</b><br>MENU select. In MENU mode, the button functions as a confirm key.                                                  |
| <b>7</b>  | <b>Power ON/OFF</b><br>Power ON or OFF the transmitter.                                                                                  |
| <b>8</b>  | <b>3.5mm External TALLY Output Interface</b><br>Maximum output current of 20mA, can support LED.                                         |
| <b>9</b>  | <b>3.5mm MIC/HP Interface</b><br>Connect to external converter box.                                                                      |
| <b>10</b> | <b>SDI IN</b><br>Connect to video source. Supports 3G-SDI, HD-SDI, SD-SDI.                                                               |
| <b>11</b> | <b>SDI OUT (Loop Through)</b><br>Connect to other SDI equipment if needed.                                                               |
| <b>12</b> | <b>HDMI IN</b><br>Connect to HDMI video source.                                                                                          |
| <b>13</b> | <b>DC Power In (Lemo)</b><br>Supports 9-18V.                                                                                             |
| <b>14</b> | <b>5G Antenna Connectors</b><br>RPSMA connectors for 5G antennas.                                                                        |
| <b>15</b> | <b>Battery Clip</b><br>Battery compartment, for F550/F970 batteries.                                                                     |
| <b>16</b> | <b>Rear TALLY (Red/Yellow)</b><br>The indicator color will be the same (Red/Yellow) for rear, front, and external TALLY.                 |

Receiver

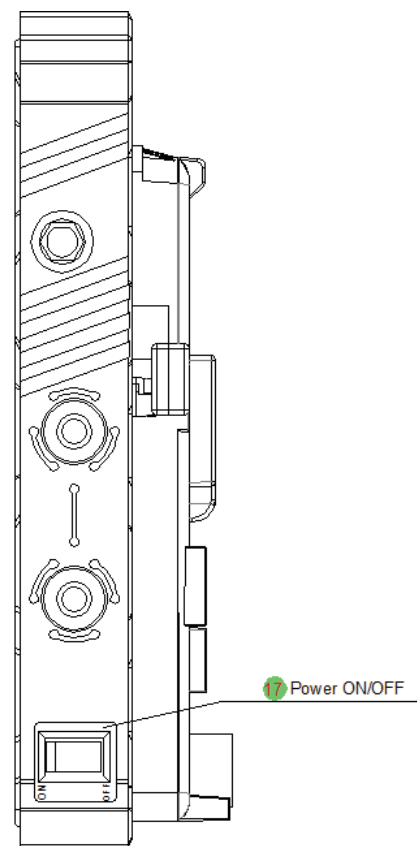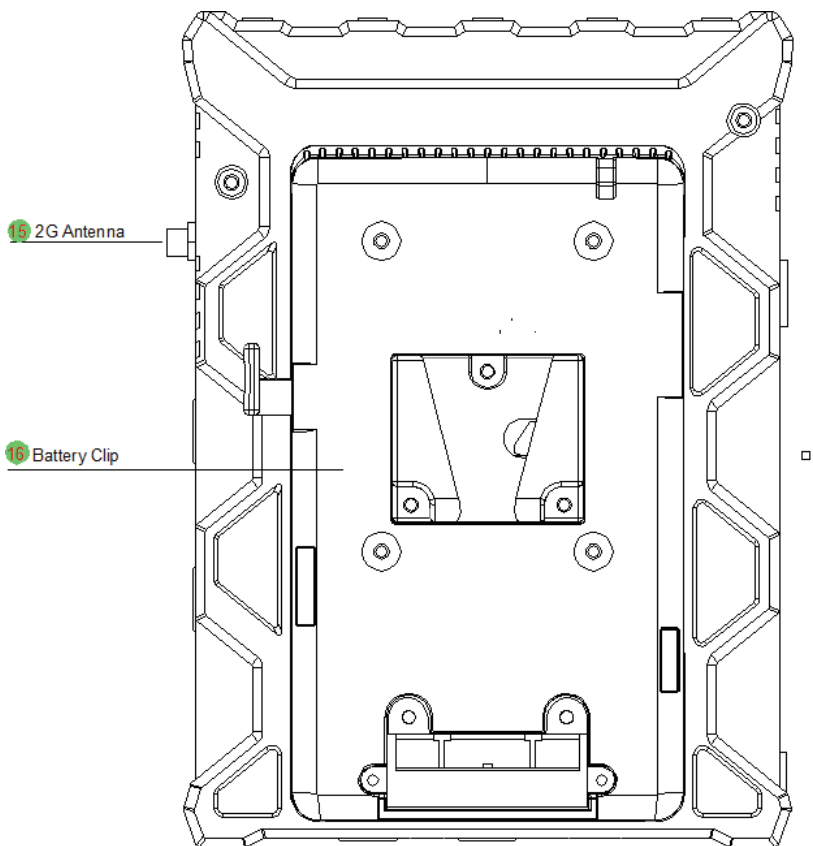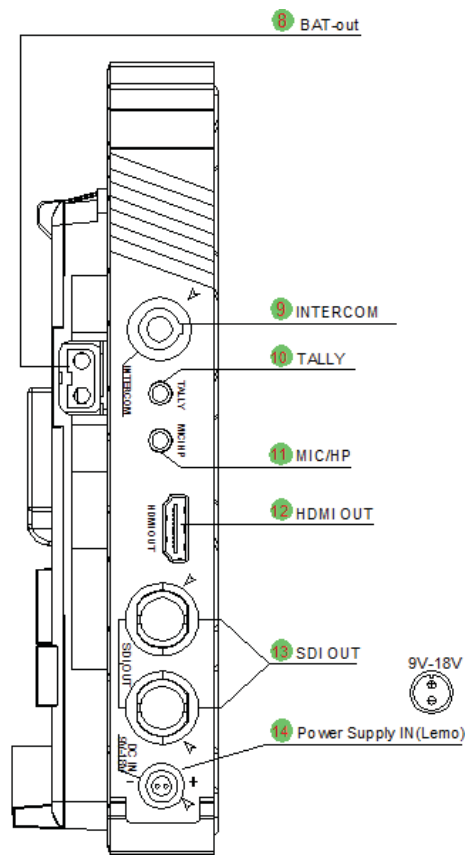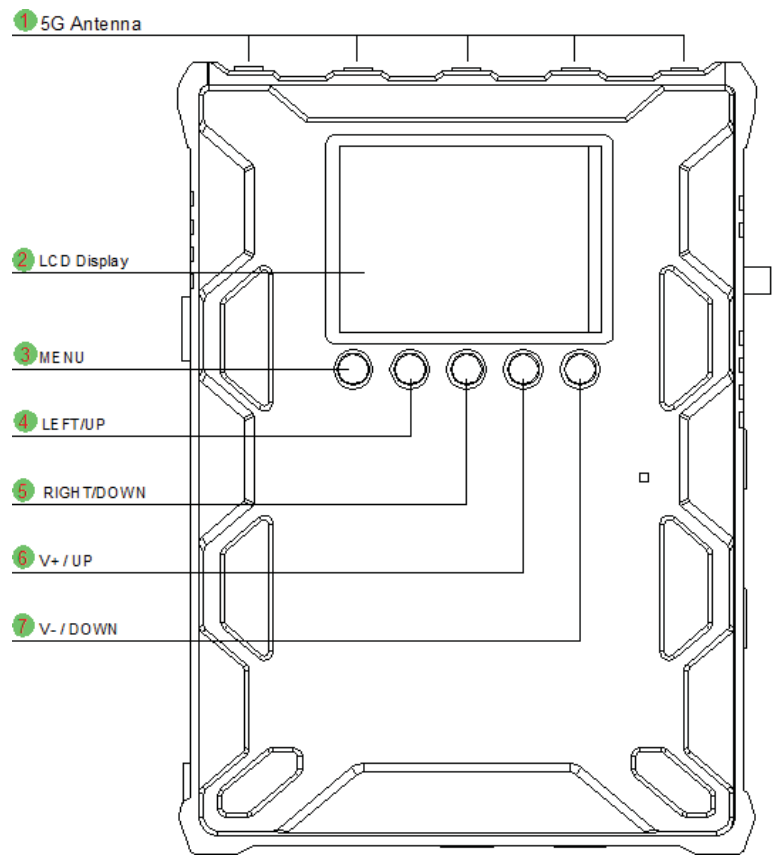

| STRUCTURE |                                                                                                                           |
|-----------|---------------------------------------------------------------------------------------------------------------------------|
| <b>1</b>  | <b>5G Antenna Connectors</b><br>RPSMA connectors for antennas.                                                            |
| <b>2</b>  | <b>OLED Display</b><br>Channel, signal strength, battery voltage, audio volume, and MENU.                                 |
| <b>3</b>  | <b>MENU Button</b><br>Unlock and confirm selection.                                                                       |
| <b>4</b>  | <b>LEFT / UP Button</b><br>Select channels.                                                                               |
| <b>5</b>  | <b>RIGHT / DOWN Button</b><br>Select channels.                                                                            |
| <b>6</b>  | <b>V+ / UP Button</b><br>Volume +.                                                                                        |
| <b>7</b>  | <b>V- / DOWN Button</b><br>Volume -.                                                                                      |
| <b>8</b>  | <b>BAT-OUT</b><br>Provides DC power from the battery for an external device.                                              |
| <b>9</b>  | <b>INTERCOM</b><br>6pin LEMO for TALLY and intercom system.                                                               |
| <b>10</b> | <b>3.5mm External TALLY Output Interface</b><br>Maximum output of 20mA, can support LED.                                  |
| <b>11</b> | <b>3.5mm MIC/HP Interface</b><br>Connect to external headphone.                                                           |
| <b>12</b> | <b>HDMI OUT</b><br>Video output, connect to HDMI receiver or device.                                                      |
| <b>13</b> | <b>SDI OUT</b><br>Video output (video output is the same from the two SDI interfaces), connect to SDI receiver or device. |
| <b>14</b> | <b>DC Power In (LEMO)</b><br>Supports 9-18V.                                                                              |
| <b>15</b> | <b>2.4G Antenna Connector</b><br>SMA connector for 2.4G antenna.                                                          |
| <b>16</b> | <b>Battery Clip</b><br>V-Mount battery (default) battery plate.                                                           |
| <b>17</b> | <b>Power ON/OFF</b><br>Power ON or OFF the receiver.                                                                      |

1. Fix the three antennas to the transmitter and arrange them to be a right angle as below figure to get better performance.



2. On transmitter side, when both SDI and HDMI source are inputted, the transmitter will automatically select the SDI source for transmission
3. Fix the five antennas to receiver and arrange them to a right angle as figure to get better performance.



4. Setting the receiver higher will enhance the transmission distance.

## Transmitter

- Fix the three antennas (5G x2, 2.4G x1) respectively.
- Connect the SDI or HDMI video source to the “SDI IN”/”HDMI IN” of transmitter (when both SDI and HDMI video are inputted, it will auto select the SDI video for transmission).
- If needed, you can connect the SDI out (loop through) to other equipment as well.
- Connect the DC power to the transmitter or use a battery on the battery plate.
- Power on the transmitter.
- Set the Channel (must set both transmitter and receiver to the same channel)

## Receiver

- Fix the six antennas (5Gx5, 2.4Gx1) respectively.
- Connect the “SDI OUT”/”HDMI OUT” port of the receiver to the monitor or other device.
- Connect DC power via power cable or use V-lock battery on the battery plate.
- Power on the receiver.
- Set the Channel (must set both transmitter and receiver to the same channel).
- After 5-10s, the video transmission will be shown on the monitor.

## Setting Up the Intercom

- After connecting the units, power on both Transmitter and Receiver.
- On the Transmitter side, you will hear sound from the receiver end if “TALK” is not pressed on converter box.
- When the “TALK” button is pressed and held, both the receiver end and the transmitter end can conversation normally.
- The receiver end can hear “call sound” when the operators on the Transmitter side press down the “CALL” button on CALL box.
- When TALLY is triggered via a professional broadcast switcher, the OLED area on the receiver glow red. At the same time, the “TALLY” LED will be lit on the Transmitter (You can also insert your wrist indicator if desired).
- Note: The external TALLY ( wrist LED) interface only supports LED lights at 3.3V@20mA.

## Intercom System Pairing

- Transmitter (TX) side: Press “MENU” button first, then press “UP” or “DOWN” buttons to choose “Talk Pair” on screen and press “MENU” button again to confirm.
- Receiver (RX) side: Press “VOL-” button first, then press “RIGHT” button to start intercom pairing.
- Transmitter (TX) side will auto restart, Receiver(RX) side should be manually restarted.
- When both sides are restarted, Intercom system pairing is complete.

## Channel Settings

Both Transmitter and Receiver are set to the same channel by default. If you want to change to a new channel, please follow the instructions below.

Note: Both transmitter and receiver must be set to the same channel to work.

## Changing Channel on Transmitter

- Power on the Transmitter
- Press the “MENU” button, then press “UP” or “DOWN” to choose “Channel Set” on screen. Press “MENU” to confirm.
- Press “UP” or “DOWN” to choose channel, then press “MENU” to confirm.
- Transmitter channel setting accomplished.

## Changing the Channel on Receiver

- Power on the Receiver.
- Press and hold “MENU” button until display unlock icon appears 
- Click “LEFT” or “RIGHT” buttons to choose channel, then click “MENU” to confirm.
- Receiver channel setting accomplished.

## Turning the Fan On or Off

- Press the “+” and “-” buttons on the transmitter simultaneously for 3 seconds.
- Press “+” or “-” to select “FAN.” Press MENU to confirm.
- Press “+” or “-” to turn fan ON or OFF.
- Press MENU to confirm.

## Troubleshooting

If the Receiver fails to output video correctly, follow the chart below to find possible causes and solutions.

| ISSUE                 |                                                                      | SOLUTION                                                   |
|-----------------------|----------------------------------------------------------------------|------------------------------------------------------------|
| OSD Information on TV | <b>Displaying “Waiting for Connection...” for a Prolonged Period</b> |                                                            |
|                       | Transmitter is not powered up.                                       | Turn on the transmitter.                                   |
|                       | Transmitter or receiver is not placed correctly.                     | Place the TX or RX correctly.                              |
|                       | The transmitter and receiver are too far away.                       | Move the receiver closer to the transmitter.               |
|                       | Several solid wall partition on TX and RX.                           | Reduce the number of obstructions between the TX and RX.   |
|                       | There are too many obstacles between TX and RX.                      | Move the receiver closer to the transmitter.               |
|                       | Other transmitter is working on the same or adjacent channel         | Turn off other transmitter, or change channel.             |
|                       | <b>No Video Signal Received</b>                                      |                                                            |
|                       | Transmitter and video source are not connected.                      | Connect the transmitter to video source by SDI/HDMI cable. |
|                       | The video source is turned OFF                                       | Turn on the video source.                                  |
|                       | Bad connection of transmitter cable                                  | Disconnect and re-connect the transmitter.                 |
|                       | Transmitter is working abnormally                                    | Restart the transmitter.                                   |
|                       | Problem with the cable between TX and video source                   | Change the SDI/HDMI cable.                                 |
|                       | Player does not support the output resolution format                 | Switch the output video resolution to other modes.         |
|                       | The TV/Monitor does not support HDCP authentication                  | Replace TV/Monitor with HDCP-Certified TV/Monitor.         |

|       |                                                        |                                                                         |
|-------|--------------------------------------------------------|-------------------------------------------------------------------------|
| Image | <b>No Signal Input to Receiver or TV/Monitor</b>       |                                                                         |
|       | Receiver is turned off.                                | Turn on the receiver.                                                   |
|       | Receiver and TV are not connected.                     | Connect receiver and TV/Monitor via SDI/HDMI input.                     |
|       | TV/Monitor not switched to SDI/HDMI input              | Switch TV/Monitor to SDI/HDMI input.                                    |
|       | Bad cable connection of receiver or TV/Monitor.        | Disconnect and re-connect the SDI/HDMI cable.                           |
|       | TV/Monitor turned to standby mode.                     | Switch the TV/Monitor to normal operation mode.                         |
|       | Receiver is working abnormally.                        | Restart the receiver.                                                   |
|       | <b>No Image Appears on the TV/Monitor</b>              |                                                                         |
|       | Bad connection from receiver or cable.                 | Reconnect the cable of the receiver or TV/Monitor.                      |
|       | Receiver is working abnormally.                        | Restart the receiver.                                                   |
|       | Receiver failure.                                      | Please contact your retailer.                                           |
|       | <b>Abnormal Color on TV Screen</b>                     |                                                                         |
|       | Bad connection from receiver cable or TV/Monitor.      | Disconnect and re-connect the HDMI cable of the receiver or TV.         |
|       | Bad connection from transmitter cable or video source. | Disconnect and re-connect the HDMI cable of the transmitter and player. |
|       | Transmitter or receiver working abnormally.            | Restart transmitter and receiver.                                       |

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -----

- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example use only shielded interface cables when connecting to computer or peripheral devices).

## FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.

- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Cautions

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

#### IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme aux limites d'exposition aux radiations de la FCC définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

This radio transmitter [IC: 23214-1000TR] has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

2.4G transmitting antenna:

Antenna type: whip antenna with RP-SMA connector;

Maximum antenna gain: 3.5dBi;

Model name: 1000tr.