
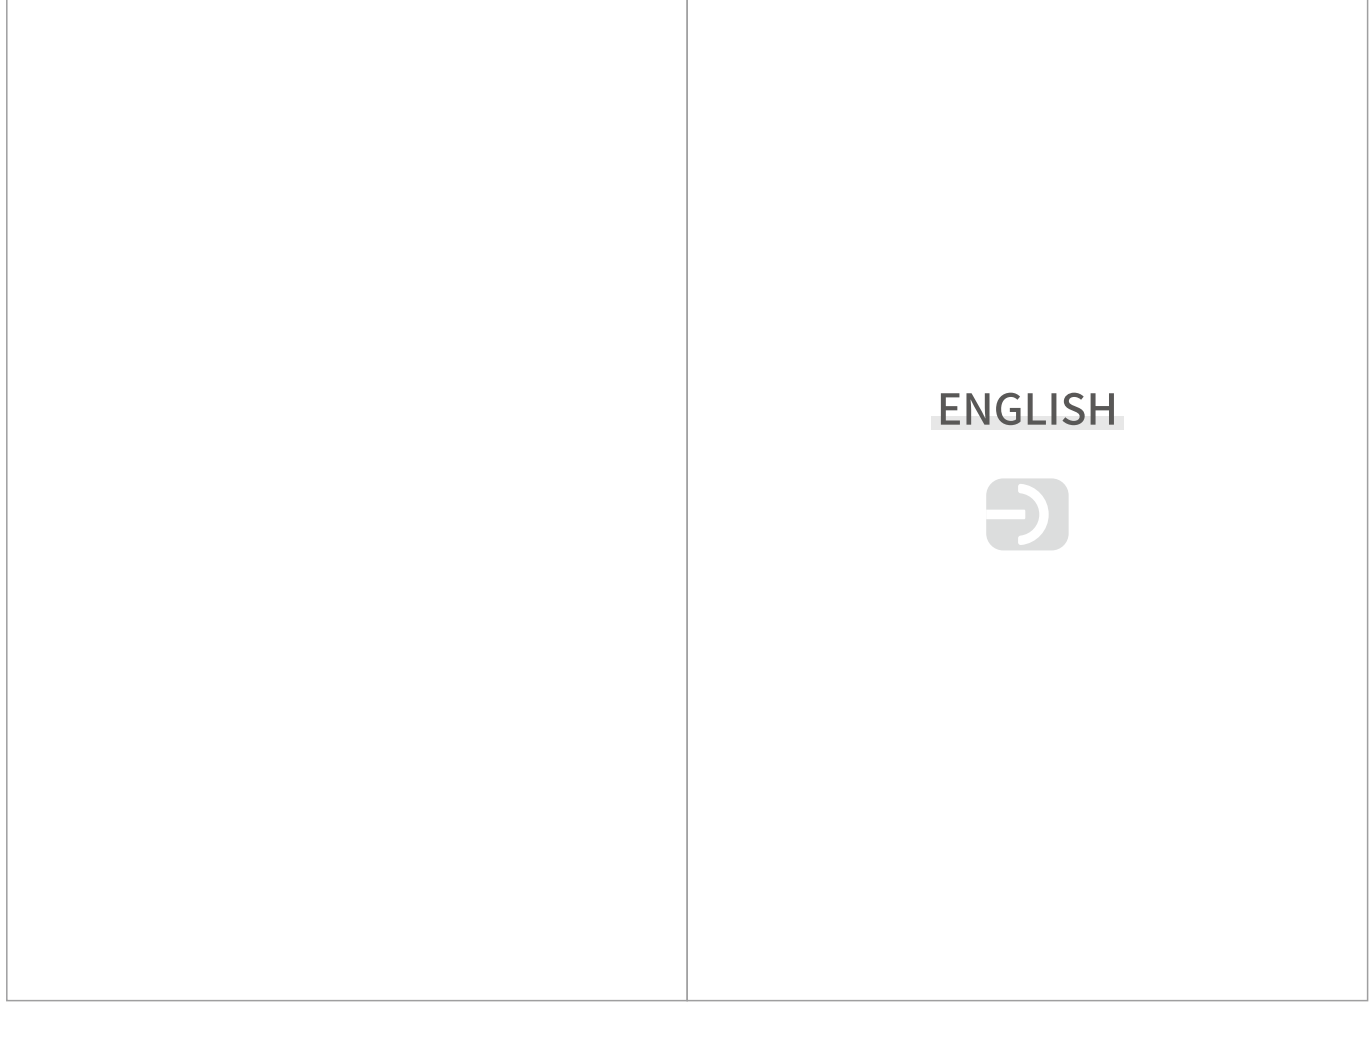
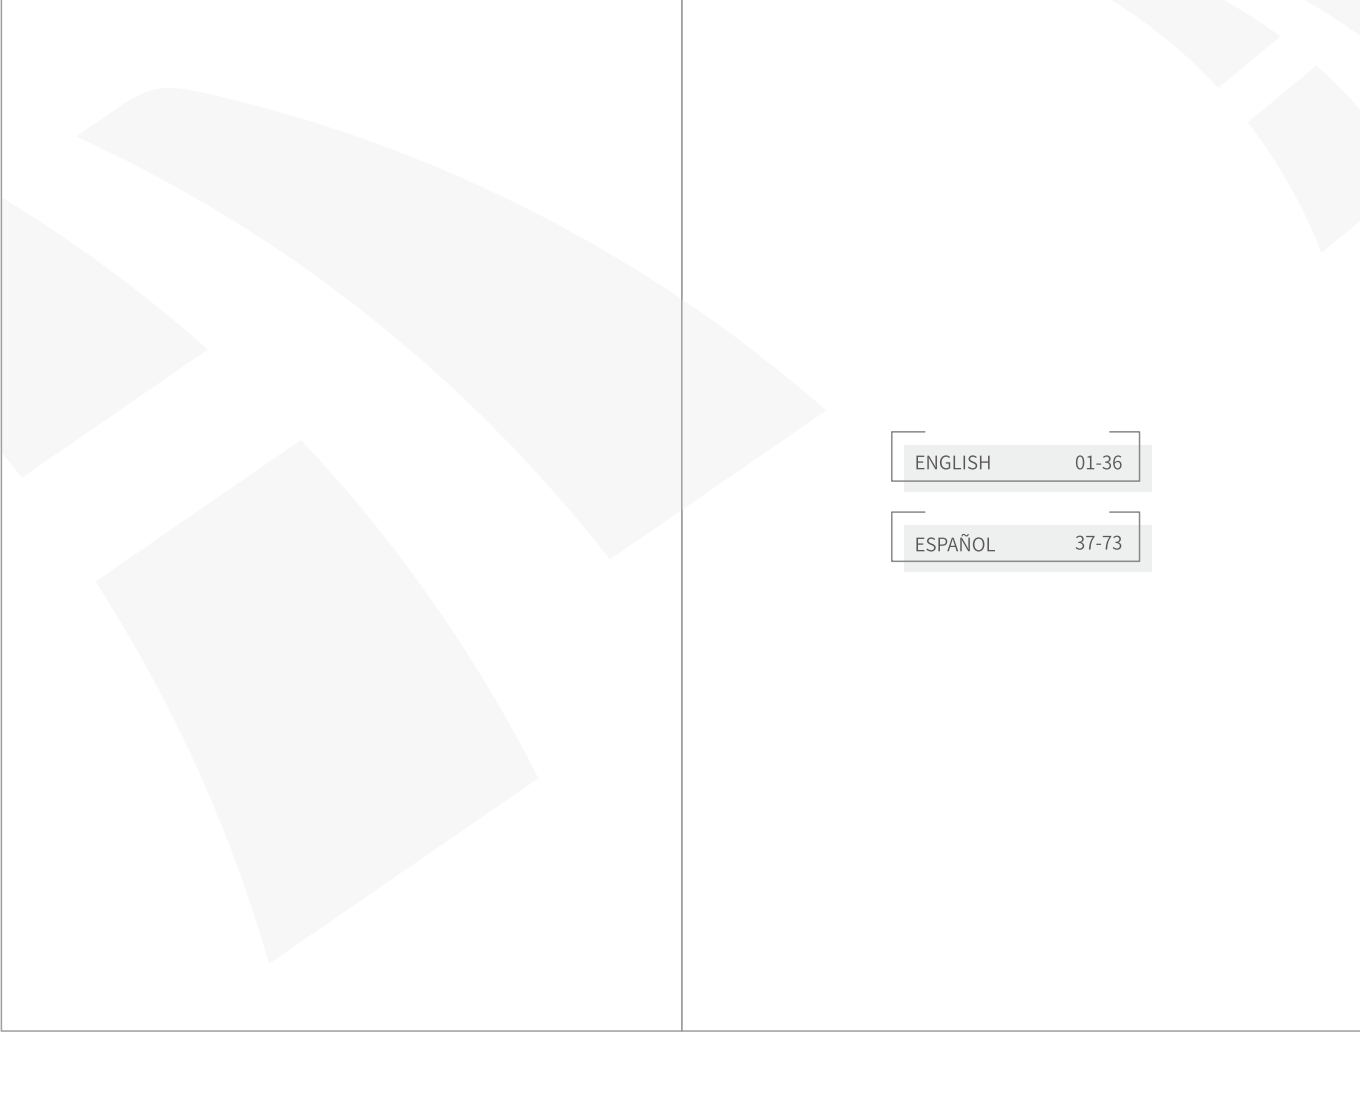


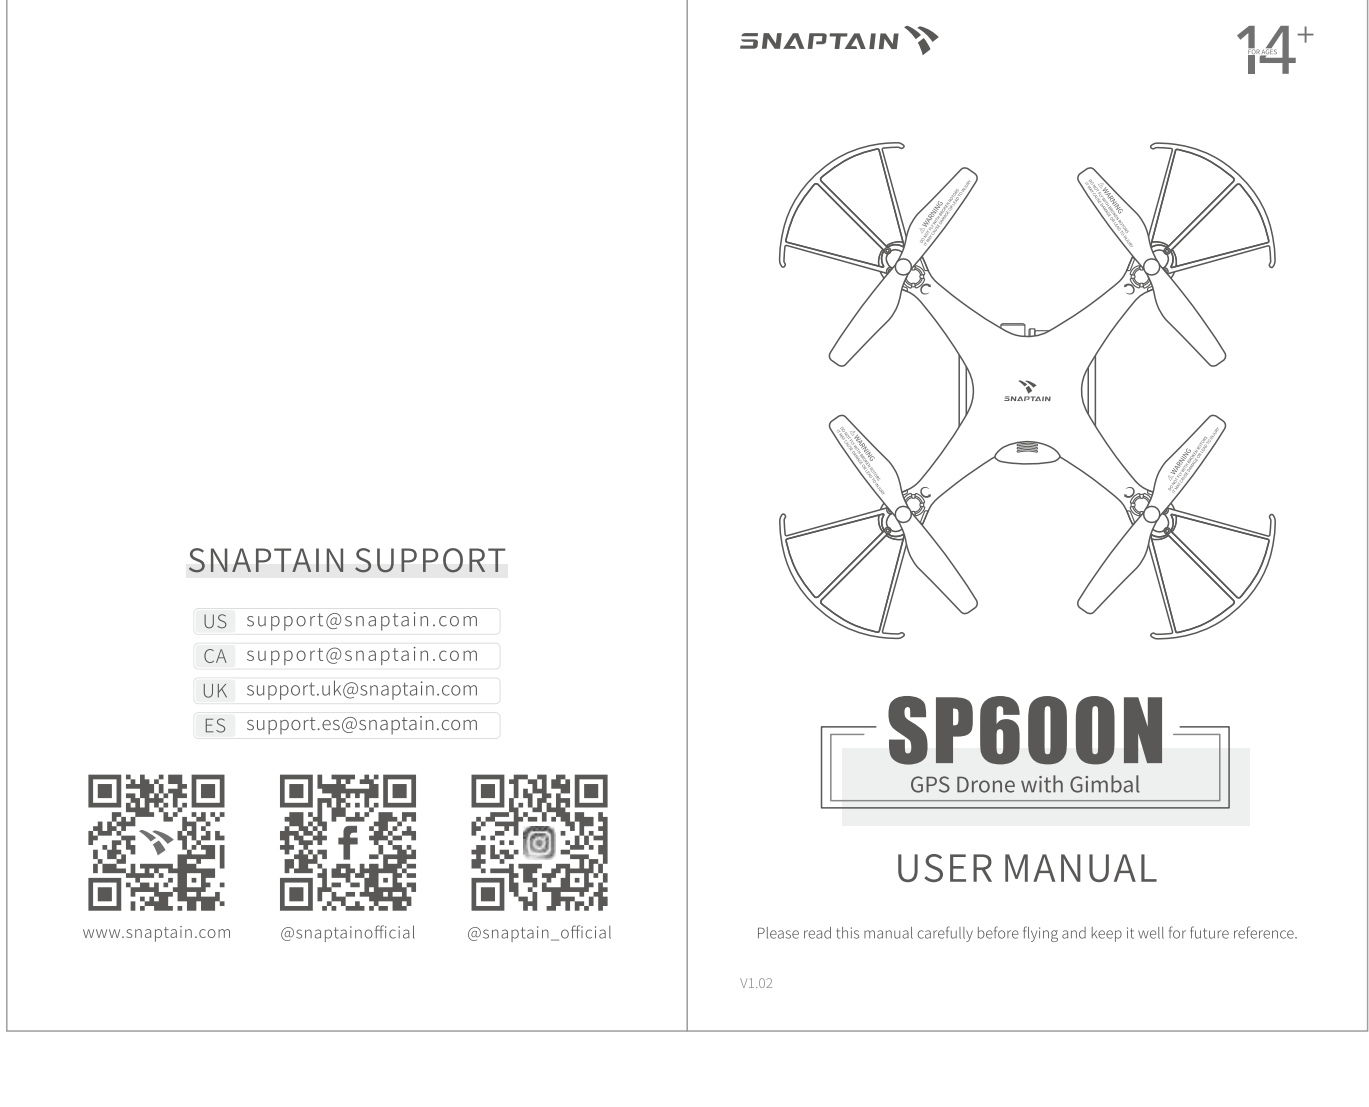

CONTENTS	
DISCLAIMER AND SAFETY GUIDELINES	01
MAINTENANCE AND CARE	01
PRODUCT OVERVIEW	04
FLIGHT PREPARATION	06
FLIGHT OPERATION GUIDE	09
Remote Operation Guide	09
Pair the Remote with the Drone	09
Flight Calibration	11
1. Compass Calibration	11
2. Gyro Calibration	12
GPS Satellites Searching	12
Connecting to Your Mobile Device	12
App Downloading and Installation	14
App Launch	14
Flight Instructions	16
Take-off	16
Flight Directions	17
Camera Tilt	18
Speed Switch	18
Headless Mode	19
Attitude (ATTI) Mode	20
Return-to-Home (RTH)	21
Smart RTH	21
Fail-safe RTH	22
Low Battery RTH	23
Landing	24
App Operation Guide	25
Function Overview of the App	25
Settings	26
Take-off	27
Point of Interest (POI)	27
Mark and Track	29
Follow Me	30
Waypoints	30
Photo/Video	32
Gestures for Photo/Video	33
Smart RTH	33
Landing	33
TROUBLESHOOTING	34
SPECIFICATIONS	36

DISCLAIMER AND SAFETY GUIDELINES

Please read the disclaimer carefully before using this product. By using it, you hereby agree to this disclaimer and signify that you have read them fully.

- Before flying, please make some practice with a simulator or seek for the instruction from a professional.
- DO NOT fly above or near obstacles, crowds, open water, public road, high-voltage power lines or trees.
- DO NOT use the drone in severe weather conditions, such as a rainy day or windy day (the wind speed is more than 3.5m/s), snow, hail, lightning, tornadoes, hurricanes, etc.
- DO NOT fly the drone in the magnetic interference area, radio interference area, and power lines or other nearby areas.
- The fast rotating motors and propellers are a potential hazard to cause serious damage and injury. A safe distance of 5m must be maintained from the drone at all times while it is operational. Fly with responsibility.

Please maintain line-of-sight of your drone at all times after it is powered up. Do not rely on the camera image to control your drone.

This product is not a toy and is not recommended for users under age 14.

All parts must be kept out of the reach of children to avoid CHOKE HAZARD.

CAUTION: Dispose of drone and batteries in accordance with local regulations. DO NOT treat as household waste.

Be sure to observe all local regulations, obtain appropriate authorizations and understand risks. Please note it is solely your responsibility to comply with all flight regulations.

SNAPTAIN accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in these Disclaimer and Safety Guidelines. SNAPTAIN reserves the right to update this user manual.

MAINTENANCE AND CARE

- Thoroughly check the drone after a crash or a violent impact.
- Do not use or store the battery near fire.
- Do not charge the battery near to inflammable materials, such as carpet, wood floors, etc., or on surfaces that are electrically conductive. Do not leave the battery unattended while charging.
- Only use the original USB cable provided. Unplug the charger once the battery is fully charged.
- Remove the battery from the drone if it will not be used for a long time.
- Store the drone and remote in a cool, dry place away from direct sunlight.
- Be sure to clean off the drone with a dry cloth to prevent any moisture from getting onto the electronics.
- Do not try to disassemble or repair the product yourself. Please contact SNAPTAIN for more help.
- Please use the original battery provided. Use an incorrect type of battery may lead to fire hazards.
- Do not dispose of the battery in fire or a hot oven, cut or mechanically crush the battery, as this may cause explosions.
- Do not leave the battery in an extremely high-temperature environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not expose the battery to the extremely low air pressure, as this may result in an explosion or the leakage of flammable liquid or gas.

PRODUCT OVERVIEW

SP600N Drone

Remote

- Antenna
- Smart RTH (Return to Home)
- Headless Mode
- Left Control Stick
- ON/OFF
- Handle
- Phone Clamp
- GPS Mode On/Off (long press)
- Compass Calibration (long press)
- Right Control Stick
- One Key Take-off/Landing
- Speed Indicator
- Photo/Video Indicator
- Headless Mode Indicator
- RTH Indicator

- Charging Port
- Speed Switch
- Video
- Camera Tilt
- Photo

FLIGHT PREPARATION

1. Install the landing skids and propeller guards into the drone, then tighten the screws.

2. Charge the battery of the drone.

Charging: Red LED (Fully Charged: Green LED)

Notes:

- Please use the original battery and USB cable provided.
- Keep the battery away from any sharp objects that could puncture into the battery to avoid risks of explosion and fire.
- It is not recommended that you charge the battery from the USB port of a PC.
- Flight time may be reduced when flying in low-temperature environments.

3. Install the battery into the drone after it's fully charged.

4. Insert a memory card (not included) into the drone.

* Support up to 32GB.
* Memory card of FAT32 format is recommended.
* Please use a high-speed memory card of a reliable brand.

5. Charge the remote.

Charging: Red LED (Fully Charged: Green LED)

* Check the remote battery status on **Snaptain Atlas** App. There are continuous beeps from the remote when the remote battery is low.

6. Unfold the **Handle** and **Antenna**.

7. Unfold the **Phone Clamp** and mount your mobile device.

8. Replace the propeller when it's needed. (Optional)

FLIGHT OPERATION GUIDE

IMPORTANT

- Make sure you power on the drone first, then the remote in each flight.
- Do repeat this pairing procedure each time when the drone or remote is restarted.
- For all flight functions and modes, the operator and tail of the drone must be aligned.
- No recommended flying in the open air and within the control range.

Remote Operation Guide

Pair the Remote with the Drone

Step 1: Long press the **ON/OFF** button for 5s until the four **Battery Level Indicators** light up to turn on the drone. The front LEDs flash red and the rear LEDs flash green when the drone is powered on. Place the drone on a flat surface with its head forward.

Tip: Long press the **ON/OFF** button to turn off the drone.

Step 2: Press the **ON/OFF** button down to turn on the remote, and you'll hear a beep from it.

Tip: Press the **ON/OFF** button again to turn off the remote.

Step 3: Push the **Left Control Stick** forward to the top, then pull it backward to the bottom. Pairing is completed when you hear a long beep from the remote. The front LEDs of the drone turn solid red and the rear LEDs solid green.

Flight Calibration

Step 1: Compass Calibration

Long press the **ON/OFF** button until you hear a beep from the remote to start compass calibration. The front LEDs of the drone flash red and the rear LEDs flash green.

Step 2: Hold the drone horizontally and make a full rotation at least twice until you hear a beep from the remote, which indicates a successful horizontal calibration. The front LEDs of the drone turn solid red.

Step 3: Hold the drone vertically with its head facing down and make a full rotation at least twice until you hear a beep from the remote, which indicates a successful vertical calibration. The rear LEDs of the drone turn solid red.

2. Gyro Calibration

Place the drone on a flat surface after finishing compass calibration. Push both control sticks to lower left at 45° and there is a beep from the remote. Gyro calibration completes when the front LEDs turn solid red and the rear LEDs solid green.

GPS Satellites Searching

Wait for the drone to search satellites. When you hear a long beep from the remote and the drone's rear LEDs turn to flash green, the drone has found enough satellites and is ready to take off in **GPS Mode**.

Connecting to Your Mobile Device

App Downloading and Installation

Download and install **Snaptain Atlas** into your mobile device on **App Store™** "Google Play™" or by scanning the QR code below.

Note: Google Play™ is a trademark of Google Inc., and App Store™ is a trademark of Apple Inc.

App Launch

Step 1: Go to the Wi-Fi settings of your mobile device and connect to the drone's **WIFI SNAPTAIN-SP600N-xxxxxx**.

The drone is set to **GPS Mode** by default. In this mode, the drone utilizes the GPS module to locate itself and make a precise hovering flight.

Notes:

- GPS Mode** works only when there is a strong GPS signal. Please fly the drone outdoors.
- We strongly recommend this mode for beginners.

The rear LEDs remain solid green if the drone can't find enough satellites. Please go to another place as the drone you want to take off in **GPS Mode**.

If you will want the drone to take off when **GPS Mode** is unavailable, you can switch it to **Attitude (ATTI) Mode** (refer to **Page 20**).

Flight Instructions

Take-off

Option 1: Simultaneously move the **Left Control Stick** to lower left at 45° and the **Right Control Stick** to lower right at 45° until the four rotor blades start rotating, then press the **ON/OFF** button to take off.

Option 2: Simultaneously move the **Left Control Stick** to lower left at 45° and the **Right Control Stick** to lower right at 45° until the four rotor blades start rotating, then slowly push the **Left Control Stick** forward to take off.

Tip: Simultaneously move the **Left Control Stick** to lower left at 45° and the **Right Control Stick** to lower right at 45° (P+Q), again to make the propellers stop rotating if you don't want the drone to take off after unlocking it.

Headless Mode

Press the **ON/OFF** button to activate **Headless Mode**, and the **Headless Mode Indicator** on the remote starts flashing.

In this mode, the drone will fly following the direction of the **Right Control Stick** regardless of the position of your drone's head or the tail.

Press the same button again to cancel this mode.

Flight Directions

Left Control Stick

Right Control Stick

Photo/Video

Press the **ON/OFF** button to take a photo. Press it again to stop and save the video to your mobile device and memory card.

Photo/Video Indicator: Taking a photo: flash once. Recording a video: flash slowly.

Camera Tilt

Push **ON/OFF** upward to tilt the camera upward; push it rightward to tilt the camera downward.

Speed Switch

The speed of the drone is set to **Low** speed by default.

Push **ON/OFF** downward to switch to **Medium** speed and there are two beeps from the remote.

Push it rightward again to switch to **High** speed and there are three beeps from the remote.

Photo/Video

Press the **ON/OFF** button to take a photo. Press it again to stop and save the video to your mobile device and memory card.

Photo/Video Indicator: Taking a photo: flash once. Recording a video: flash slowly.

Camera Tilt

Push **ON/OFF** upward to tilt the camera upward; push it rightward to tilt the camera downward.

Speed Switch

The speed of the drone is set to **Low** speed by default.

Push **ON/OFF** downward to switch to **Medium** speed and there are two beeps from the remote.

Push it rightward again to switch to **High** speed and there are three beeps from the remote.

Attitude (ATTI) Mode

In **ATTI Mode**, the drone will maintain a specific flight altitude, but it will drift around in the wind.

Option 1: Before take-off, long press the **ON/OFF** button for 3s until you hear two beeps from the remote to activate **ATTI Mode**.

Long press the **ON/OFF** button again to cancel **ATTI Mode**.

Option 2: During the outdoor flight, the **ATTI Mode** will be automatically on if the drone flies to a place where GPS signal is weak.

Notes:

- ATTI Mode** functions based on **GPS Mode**, including **RTH**, **Follow Me**, **Waypoints** and **POI** can't be activated.
- We recommend **ATTI Mode** only when the pilot has sufficient skills in operating the drone.

Speed Switch Indicator

Low speed: Solid red
Medium speed: Flash slowly
High speed: Flash quickly

Push **ON/OFF** leftward to switch to **Medium** (two beeps) or **Low** speed (one beep).

Return-to-Home (RTH)

The **Return-to-Home (RTH)** function brings the drone back to the last recorded **Home Point** when the drone lost all last time. **RTH** works only when the GPS signal is strong enough and the compass functions normally.

Smart RTH

Press the **ON/OFF** button on the remote to initiate **Smart RTH**.

*** RTH Distance:** The distance between the drone and the last recorded **Home Point** where the drone took off last time.

1. Current Flight Altitude > Pre-set RTH Altitude

The drone will first ascend to the preset RTH altitude, then fly back and land.

2. Current Flight Altitude > Pre-set RTH Altitude

The drone will directly fly back at its current flight altitude and land.

Press the **ON/OFF** button again to cancel **RTH** and regain control of the drone.

Notes:

- The RTH altitude is 15m by default. You can reset it in the **Settings** of **Snaptain Atlas** App.
- During **RTH**, there are continuous beeps from the remote and the **RTH** indicator keeps flashing.

Fail-safe RTH

Fail-safe RTH will be activated automatically when the drone disconnects with the remote. The drone will fly back to the last recorded **Home Point** under the control of the flight system itself.

The process of **Fail-safe RTH** is the same as **Smart RTH**.

If the connection between the remote and the drone is re-established, the pilot can cancel **RTH** by pressing the **ON/OFF** button and regain control of the drone. If no operation is performed, the **RTH** process will continue. When the remote disconnects with the drone and the **GPS Mode** is not available, the drone will slowly descend from the current altitude till landing.

Low Battery RTH

The **Low Battery RTH** will be triggered when the drone battery is low.

Notes:

- The drone will fly back to where **RTH** distance is 20m and home, and **RTH** will be canceled automatically. The drone can't fly beyond 20m anymore no matter how the pilot operates.
- If you cancel **Low Battery RTH**, it won't be triggered again unless the battery is critical low.
- The **Critical Low Battery RTH** will be triggered when the drone battery is critical low. The drone will automatically fly back and land on the last recorded **Home Point**.

Beginner Mode

Beginner mode with preset flight parameters is recommended for beginners.

*** Flight distance:** Reset the maximum flight distance between the drone and the last recorded **Home Point**.

*** Flight altitude:** Reset the maximum flight altitude.

*** RTH altitude:** Reset the RTH altitude.

Take-off

Push **ON/OFF** and slide rightward on the pop-up window to take off.

Point of Interest (POI)

Tap **ON/OFF** to select **Point of Interest (POI)** during the flight, enter the **POI** radius and tap **YES** to start. The drone will circle around the current point of the drone while keeping that point centered in the frame.

Landing

Option 1: Press the **ON/OFF** button to land the drone.

Option 2: Slowly pull the **Left Control Stick** backward to land the drone until the propellers stop rotating.

App Operation Guide

Function Overview of the App

Home

Media Gallery

VR Mode

Play Image

Flight Records

Return-to-Home (RTH)

Mark and Track

Follow Me

Waypoints

Gestures for Photo/Video

Shutter

GPS Signal

Wi-Fi Signal

Battery Status

Settings

Return-to-Home (RTH)

One Key Take-off/Landing

Live Map

Flight Distance

Flight Altitude

Horizontal Flight Speed

Vertical Flight Speed

Media Gallery: Tap to check the photos and videos saved.

*** VR Mode:** Tap **ON/OFF** to activate VR mode (VR device is not supplied).

*** Flip Image:** Tap **ON/OFF** to flip the image 180°.

*** Flight Records:** Click to check flight records here.

*** GPS Signal:** Check the signal of the GPS satellites.

*** Wi-Fi Signal:** Check Wi-Fi signal strength to avoid losing control of the drone. When it shows low signal strength (1-3 bars), please fly the drone back immediately.

*** Drone Battery Status:** Check the battery status of the drone.

*** Remote Battery Status:** Check the battery status of the remote.

Settings

Tap **ON/OFF** to start setting up your drone.

Option 1: Select Waypoints

Step 1: Tap **ON/OFF** then tap some desired waypoints on the map. Tap **ON/OFF** to delete waypoints if you want to.

Step 2: Tap **ON/OFF** to upload waypoints.

Step 3: Slide rightward on the pop-up window to start to fly following the route of waypoints.

Tip: Tap **ON/OFF** again to cancel this mode and regain control of the drone.

Note: This function can't be activated when the battery of the drone is low.

Option 2: Draw a Trajectory

Step 1: Tap **ON/OFF** then tap **ON/OFF** and draw a path on the map.

Step 2: Tap **ON/OFF** to upload waypoints.

Step 3: Slide rightward on the pop-up window to start to fly following the route of waypoints.

Tip: Tap **ON/OFF** again to cancel this mode and regain control of the drone.

Note: This function can't be activated when the battery of the drone is low.

Mark and Track

When **Mark and Track** is enabled during the flight, the drone's camera lens will keep pointing at the chosen object. Please make sure you're operating in a line-of-sight environment.

Step 1: Tap **ON/OFF**, then tap **ON/OFF** to enable **Mark and Track**.

Tap on an object that is framed on the screen. The red frame will turn green once the object is selected.

Tip: Tap **ON/OFF** again during the flight to cancel this mode and regain control of the drone.

Notes:

- Please maintain a safe and effective distance between the object and the drone when enabling this function.
- This function is not working if the chosen object is moving in a dim circumstance, blocked or out of sight, out of effective distance, etc.
- This function can't be activated when the drone battery is low.

Follow Me

When **Follow Me** is enabled during the flight, the drone will fly follow your mobile device with its camera lens pointing at it.

Tap **ON/OFF**, then tap **ON/OFF** to enable **Follow Me**.

Tip: Tap **ON/OFF** again during the flight to cancel this mode and regain control of the drone.

Notes:

- The function **Follow Me** may have deviation due to the GPS signal. Please maintain a safe distance between you and the drone when enabling this function.
- Activate this function only when there is no obstacle around you in case of unexpected accidents.
- This function can't be activated when the battery of the drone is low.

Waypoints

Waypoints function allows you to define an exact flying route on a map during the flight. Tap **ON/OFF** to enter the interface of waypoints.

Option 1: Select Waypoints

Step 1: Tap **ON/OFF** then tap some desired waypoints on the map. Tap **ON/OFF** to delete waypoints if you want to.

Step 2: Tap **ON/OFF** to upload waypoints.

Step 3: Slide rightward on the pop-up window to start to fly following the route of waypoints.

Tip: Tap **ON/OFF** again to cancel this mode and regain control of the drone.

Note: This function can't be activated when the battery of the drone is low.

Option 2: Draw a Trajectory

Step 1: Tap **ON/OFF** then tap **ON/OFF** and draw a path on the map.

Step 2: Tap **ON/OFF** to upload waypoints.

Step 3: Slide rightward on the pop-up window to start to fly following the route of waypoints.

Tip: Tap **ON/OFF** again to cancel this mode and regain control of the drone.

Note: This function can't be activated when the battery of the drone is low.

FAQ

Q5. Why can't I see the map after launching the App?

* Ensure you've installed a map App on your mobile device.

* The drone's Wi-Fi has no internet access. Please disconnect it and turn on your cellular data to preload the map, then turn off your cellular data and connect to the drone's Wi-Fi again.

Q6. The drone can't take off and return.

* The drone is set to **GPS Mode** by default. Please switch to **ATTI Mode** (long press the **ON/OFF** button on the remote) if you would like to fly the drone indoors.

Q7. The FOLLOW ME function doesn't work.

* Ensure you've turned on the location service on your mobile device, and the drone is flying in **GPS Mode**.

Q8. How can I fly the drone back when I can't find the head or tail of the drone?

* Ensure you've turned on **GPS Mode**, press the **ON/OFF** button to trigger **RTH** function, then the drone will automatically fly back home.

Q9. How can I cancel Fail-safe RTH?

* Press the **ON/OFF** button to cancel **Fail-safe RTH** when the remote receives the signal from the drone again.

Q10. It is necessary to fly the drone back when the drone battery is low?

* When the battery is low, please fly the drone back when a distance of 20m. The drone will automatically fly back home when the battery is critical low.

TROUBLESHOOTING

Q1. The four LEDs of the drone keep flashing.

* Ensure you've paired the drone with the remote.

* Ensure the drone battery has enough power.

Q2. Fail to power on the remote.

* Ensure the remote has enough power.

Q3. The drone can't take off after I power on it outdoors.

* Ensure the drone has found enough satellites. Check if the rear LEDs are flashing green. If not, please wait for the drone to search satellites. Move to another place to fly the drone if the GPS signal is weak.

Q4. Why can't I connect to the drone's Wi-Fi?

* Ensure only **ONE** device is connecting to the drone's Wi-Fi.

SPECIFICATIONS

Gimbal	
Controllable Range	111°-99° to 0°
USB Cable	
Input	5V/1-2A
Output	4.2V/2-3.5A
Rated Power	12.6W
Battery	
For Drone Battery	5V/2-3A
For Remote	5V/2-3A

FCU Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other equipment or antennas.

ISED Certification

This device complies with Industry Canada license-exempt RSS (standard). Operation is subject to the following conditions:

- (1) This device may not cause interference,
- (2) this device must accept any interference, including interference that may cause harmful interference to radio communications; however, there is no assurance that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. This transmitter