

HyBook Manual

Manual HyBook



HYUNDAI
TECHNOLOGY,
INC.

Laptop HyBook

Thank you for purchasing a Hyundai product. This limited warranty covers manufacturing defects in materials or workmanship under normal usage conditions, for the period specified on the proof of purchase.

This warranty does NOT cover:

Additional costs related to product repair or replacement, including:

- Labor.
- Installation or removal.
- Removal or replacement of parts that are soldered or permanently attached to the printed circuit board.

Damage caused by external factors, such as:

- Accidents, impacts, drops, or spills.
- Electrical fluctuations or failures.
- Abnormal environmental or usage conditions.
- Misuse, negligence, unauthorized modifications, or repairs.

Tampered or altered products, including:

- Those operated outside their technical specifications.
- Products with altered, removed, or unreadable labels, security screws, or serial numbers.

Additional Information

- Always consult the user manual before using your laptop.
- This warranty does not cover issues resulting from third-party applications.
- The warranty is valid only if the product has been used according to the manufacturer's specifications.

Read Me First

Before using your Hyundai laptop, please read this manual and keep it for future reference.

- Instructions and screenshots may vary depending on model or software configuration.
- Some features may differ depending on service provider, region, or operating system version.

The company is not responsible for the operation of third-party applications.

Getting Started

Power On and Initial Charging:

1. Connect one end of the power adapter to the charging port and the other end to a power outlet.
2. The LED indicator should turn red to indicate charging.
3. It is recommended to charge the laptop for at least 3 hours before first use


First Startup:

1. Press the power button.
2. Follow the on-screen instructions to set up Windows 11.
3. You may need to sign in with a Microsoft account to access all features.


Desktop and Start Menu

Desktop: After completing setup, you will access the desktop. Here you'll find shortcuts to your applications. Double-click to open them.

Start Menu: Click the Windows icon (bottom left) to access installed applications. You'll also see your most recent apps and can visit the Microsoft Store to download more tools.

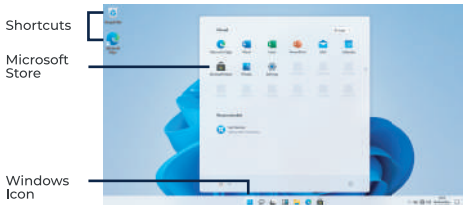


Notification Menu: Click the date/time (bottom right) to open the notification center, where you can view system alerts and quickly access settings like Wi-Fi, Bluetooth, or brightness.

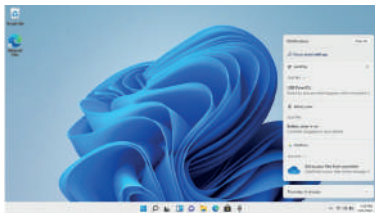

Multitasking

To split the screen:


1. Drag a window to one side of the screen until it occupies half.
2. Select another window to fill the other half.

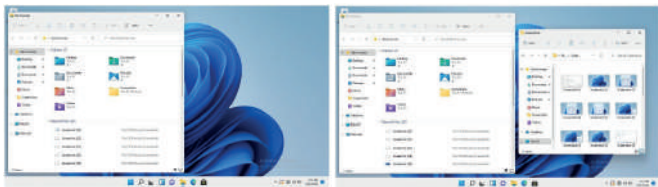

Sleep, Restart, and Shutdown

1. Click the Windows button.
2. Then click the power icon.
3. Select "Sleep," "Restart," or "Shut Down" as needed.

To wake from sleep mode, briefly press the power button. If unresponsive, press and hold the button to force shutdown, then turn it on again.

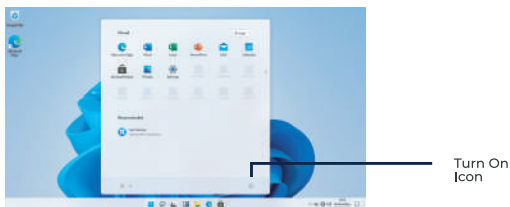

Troubleshooting

Laptop does not power on:

- Ensure it is charged. Connect it for at least one hour before trying again.
- Check if any LED lights turn on or if the fan makes noise when pressing the power button.

Recommendation: If the laptop will be stored for a long time, charge it periodically to prevent battery degradation.

Laptop does not charge:

- Check the charger, cable, and port for damage.
- If any damage is detected, do not use it and contact technical support.

Cannot connect to Wi-Fi:

- Restart the modem and the laptop.
- Ensure you are close to the router.
- Verify the network password.
- If experiencing slowness or disconnections, try disconnecting and reconnecting.

Screen dims when unplugged:

- Go to Control Panel > Power Options > Change plan settings.
- Adjust brightness settings to remain consistent even when unplugged.

Forgotten password:

- Use a USB reset disk if previously created.
- Reset your password online from another device.
- As a last resort, restore Windows 11 to factory settings (this will delete all personal files).

HYUNDAI TECHNOLOGY, INC.

The information contained here is subject to change without notice. The only warranties for Connect products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Connect is not liable for technical or editorial errors or omissions contained in this document.

First Edition: May 2023

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Warning for Use in Mexico

This equipment complies with legal provisions and operates under the following conditions:

1. It must not cause harmful interference.
2. It must accept any interference received, including interference that may cause undesired operation.

Advertencia FCC

- This equipment complies with Part 15 of the FCC Rules.
- It must not be placed or operated next to another antenna or transmitter.
- It must be installed at a minimum distance of 0 mm between the radiator and the user's body.
- It may cause interference if not properly installed. If problems occur, try the following:
 - Reorient the receiving antenna.
 - Increase the distance between the device and the receiver.
 - Plug the device into a different outlet.
 - Consult a radio/TV technician for additional help.

Laptop HyBook

Gracias por adquirir un producto Hyundai. Esta garantía limitada cubre defectos de fabricación en materiales o mano de obra bajo condiciones normales de uso, durante el período establecido en el comprobante de compra.

Esta garantía NO cubre:

Costos adicionales relacionados con la reparación o reemplazo del producto, incluyendo:

- Mano de obra.
- Instalación o desinstalación.
- Remoción o reemplazo de piezas que estén soldadas o adheridas permanentemente a la placa de circuito impreso.

Daños causados por factores externos, tales como:

- Accidentes, golpes, caídas o derrames.
- Fluctuaciones o fallas eléctricas.
- Condiciones ambientales o de uso anormales.
- Uso inadecuado, negligencia, modificaciones o reparaciones no autorizadas.

Productos alterados o manipulados, incluyendo:

- Aquellos que hayan sido operados fuera de sus especificaciones técnicas.
- Productos con etiquetas, tornillos de seguridad o números de serie alterados, retirados o ilegibles.

Información adicional

- Consulta siempre el manual del usuario antes de utilizar tu laptop.
- Esta garantía no cubre problemas derivados del uso de aplicaciones de terceros.
- La garantía es válida únicamente si el producto se ha usado conforme a las especificaciones del fabricante.

Léeme Primero

Antes de utilizar tu laptop, por favor lee este manual y consérvalo para futuras referencias.

- Las instrucciones y capturas de pantalla pueden variar dependiendo del modelo o configuración del software.
- Algunas funciones pueden diferir según el proveedor de servicios, la región o la versión del sistema operativo.

La empresa no se hace responsable por el funcionamiento de aplicaciones de terceros.

Empezando

Encendido y carga inicial:

1. Conecta un extremo del adaptador de corriente al puerto de carga y el otro a una toma de corriente.
2. El indicador LED debe encenderse en color rojo para señalar que está cargando.
3. Se recomienda cargar la laptop durante al menos 3 horas antes del primer uso.

Primer encendido:

1. Presiona el botón de encendido.
2. Sigue las instrucciones en pantalla para configurar Windows 11.
3. Es posible que se requiera iniciar sesión con una cuenta de Microsoft para disfrutar de todas las funciones.


Escritorio y Menú de Inicio

Escritorio: Después de configurar el sistema, accederás al escritorio. Aquí encontrarás accesos directos a tus aplicaciones. Haz doble clic sobre ellos para abrirlos.

Menú de Inicio: Haz clic en el icono de Windows (abajo a la izquierda) para acceder a las aplicaciones instaladas. También podrás ver tus apps más recientes y acceder a la Microsoft Store para descargar más herramientas.




Menú de Notificaciones: Haz clic en la fecha/hora (abajo a la derecha) para abrir el centro de notificaciones, donde podrás ver alertas del sistema y acceder rápidamente a configuraciones como Wi-Fi, Bluetooth o brillo.

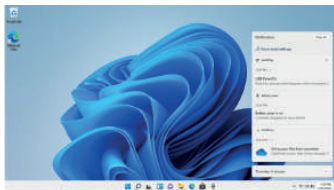

Multitareas

Para dividir la pantalla:

1. Arrastra una ventana hacia un lado de la pantalla hasta que ocupe la mitad.
2. Selecciona otra ventana para que ocupe la otra mitad.

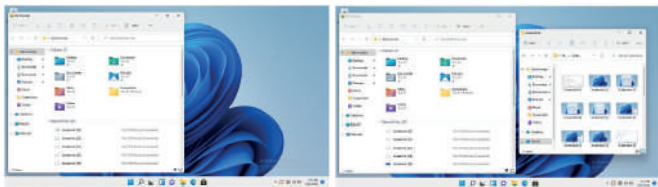

Suspender, Reiniciar y Apagar

1. Haz clic en el botón de Windows.
2. Luego haz clic en el icono de encendido.
3. Selecciona “Suspender”, “Reiniciar” o “Apagar” según sea necesario.

Para salir del modo suspensión, presiona brevemente el botón de encendido. Si no responde, mantén presionado el botón para forzar el apagado y vuelve a encenderla.



Ícono de
Encendido

Solución de Problemas

La laptop no se enciende:

- Asegúrate de que esté cargada. Conéctala durante al menos una hora antes de volver a intentarlo.
- Verifica si se enciende algún LED o si el ventilador hace ruido al presionar el botón de encendido.

Recomendación: Si la laptop estará guardada por largo tiempo, cárgala periódicamente para evitar la degradación de la batería.

La laptop no carga:

- Revisa el cargador, el cable y el puerto por posibles daños.
- Si detectas daños, no lo uses y contacta al soporte técnico.

No se conecta al Wi-Fi:

- Reinicia el módem y la laptop.
- Asegúrate de estar cerca del router.
- Verifica la contraseña de red.
- Si hay lentitud o desconexiones, prueba desconectarte y volver a conectarte.

La pantalla se oscurece al desconectar el cargador:

- Ve al Panel de Control > Opciones de energía > Cambiar configuración del plan.
- Ajusta el brillo para que se mantenga constante incluso sin estar conectado a la corriente.

Contraseña olvidada:

- Usa un disco USB de restablecimiento si lo creaste previamente.
- Restablece tu contraseña en línea desde otro dispositivo.
- Como último recurso, puedes restaurar Windows 11 de fábrica (esto eliminará todos tus archivos personales).

HYUNDAI TECHNOLOGY, INC.

La información contenida aquí está sujeta a cambios sin previo aviso. Las únicas garantías para los productos y servicios de Connect se establecen en las declaraciones de garantía expresas que acompañan a dichos productos y servicios.

Nada de lo aquí contenido debe interpretarse como una garantía adicional. Connect no será responsable de errores u omisiones técnicas o editoriales contenidos en este documento.

Primera Edición: Mayo de 2023

Los términos HDMI, HDMI High-Definition Multimedia Interface y el logotipo de HDMI son marcas comerciales o marcas comerciales registradas de HDMI Licensing Administrator, Inc.

Advertencia para uso en México

Este equipo cumple con las disposiciones de la ley y opera bajo las siguientes condiciones:

1. No debe causar interferencia perjudicial.
2. Debe aceptar cualquier interferencia recibida, incluyendo la que pueda causar un funcionamiento no deseado.

Advertencia FCC

- Este equipo cumple con la Parte 15 de las reglas de la FCC.
 - No debe colocarse ni operarse junto a otra antena o transmisor.
 - Debe instalarse a una distancia mínima de 0 mm entre el radiador y el cuerpo del usuario.
 - Puede causar interferencias si no se instala correctamente. En caso de problemas, prueba lo siguiente:
 - Reorienta la antena receptora.
 - Aumenta la distancia entre el equipo y el receptor.
 - Conecta el dispositivo en un enchufe diferente.
 - Consulta a un técnico en radio/TV para mayor asistencia.
-

Contact Us / Contáctanos

U.S. & WORLDWIDE

Monday to Friday 8:00 am - 5:00 pm PST
1964 W. Corporate Way, Anaheim, CA 92801
Email: support@hyundaitechnology.com
Website: www.hyundaitechnology.com

REPÚBLICA MEXICANA

Responsable de Garantía: Pactech Retail S DE RL DE CV
RFC: PRE190122259
Av. Jardines de San Mateo 18, Primer Piso Int. 3-B,
Col. Santa Cruz Acatlán, Naucalpan de Juárez,
Estado de México, C.P. 53150
Lunes a Viernes 9:00 am - 6:00 pm CST
Email: soporte@hyundaitechnology.com.mx
Website: www.hyundaitechnology.com.mx

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This HY Book meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: HY Book has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the HY Book kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the HY Book. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.



HYUNDAI
TECHNOLOGY,
INC.