



骑马钉

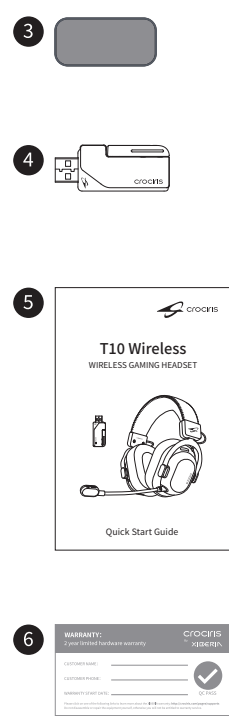

English	4-10
Portugals	8
Español	9
简体中文	10
Русский	13
日本語	12
한국어	13
العربي	14
ไทย	15
Tiếng Việt	16
Bahasa Indonesia	17
हिन्दी	18
Deutsch	19
Français	20

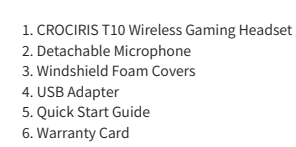

The diagram shows the Sony WH-1000XM3 headphones with various components labeled with numbers 1 through 12. The components are:

- 1. Headband
- 2. Earcup
- 3. Earpad
- 4. Headband padding
- 5. Headband adjustment lever
- 6. Headband adjustment lever cover
- 7. Headband adjustment lever cover cap
- 8. Headband adjustment lever cover cap cap
- 9. Headband adjustment lever cover cap cap cap
- 10. Headband adjustment lever cover cap cap cap cap
- 11. Headband adjustment lever cover cap cap cap cap cap
- 12. Headband adjustment lever cover cap cap cap cap cap cap

1. USB Adapter
2. Type-C Adapter
3. Sound Mode Button
4. Type-C Port
5. Power Indicator Light
6. Power Button
7. Mode Switch
8. Detachable Microphone
9. Microphone Status Indicator Light
10. Microphone Function Button
11. Volume Adjustment Wheel
12. Microphone Mute Button

Music Mode	Default	Default	Default
Sound Mode Button		v-1	Gaming Mode 1 / Gaming Mode 2 / Music Mode, Movie Mode
Power On		006	Green light stays on for 1 second
Power Off		006	Red light stays on for 1 second
Hic Gain On/Off		006	On (Red light On)
Microphone Noise Cancellation On/Off		v-2	/
Microphone On/Off		v-1	/
Mode Switch			2.40Hz Mode / Dual Device Mode / Bluetooth Mode
Volume Control			/

Wearing the Headset:

1. Adjust the adjustable arm to the appropriate length.
2. The headband should rest comfortably on the top of your head.
3. The ear cushions should fully cover your ears.
4. The boom microphone should be positioned in front of your mouth.

ideal placement of the microphone is at the corner of your mouth. In this position, your voice can be heard clearly without the microphone picking up breath sounds.

Bluetooth Mode:

- 
1. Select the "BT" button on your headphones.
 2. Turn on Bluetooth on your device, find "CROCIRIS T10 Wireless" in the search bar, and click to connect.

1. Select the "2.4G" button on the headphones.

2. Connect the 2.4GHz wireless adapter to the device's port.

Notes:

After the headphones are successfully connected to the adapter, the headphone's status indicator flashes green once every 10 seconds.

1. Select the "B" button on your headphones.
2. Turn on Bluetooth on your device, find "ORCIRIS T30 Wireless" in the search bar, and click to connect.
3. Connect the 2.4GHz wireless adapter to the device's port.

Notes:
If only Bluetooth or 2.4GHz is connected, the other mode will enter pairing mode and wait for a connection, with no indicator light.

A diagram showing a device connected to a PC via a USB cable. The device is labeled "USB Audio Mode".

Notes:
The USB audio mode is only available when the headset is turned on and connected via a Type-C cable.

	x1 Press Play/Pause	Answer/ End a call
	x1.5" Press 1.5 seconds 	Reject a call

Notes:
This feature is available in Bluetooth mode.

1. With the device powered on, press and hold the power button and microphone mute button simultaneously for 3 seconds to restore factory settings.
2. After completion, the green indicator light will flash 4 times. When powering off, the red indicator light will stay on for 1 second and then turn off automatically.

1. Insert the detachable microphone into the headset microphone jack.
2. Rotate the microphone to the right to lock it in place.
3. Rotate the microphone so that the icon is aligned with your mouth.

Headphone:
Driver: 50 mm neodymium
Frequency response: 20 Hz-20 kHz
Impedance: 32 Ω
Sensitivity: 98 $\pm$ 3 dB
Yoke material: Aluminum alloy
Ear pads and headband pad: Memory foam leatherette ear cushions
Wireless range: Up to 10 m
Weight: 346.7 g

Microphone:
Microphone size: ϕ 10 mm
Microphone type: Boom
Pickup pattern: Unidirectional
Microphone frequency response: 100 Hz-10 kHz

Battery type: Rechargeable lithium battery
Bluetooth battery life: Up to 250 Hours
2.4GHz: Up to 350 Hours
Tested at 50% headphone volume. Battery life varies based on volume and usage.

Compatibility:

PlayStation PC | MAC Laptop Handheld | Switch Android | iPhone

Specifications are subject to change without notice.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to other equipment. It is recommended that this equipment be installed and used according to the instructions.

and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

A warning that batteries, battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.

- (1) Replacement of a battery with an incorrect type that can defeat a safeguard;
- (2) Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- (3) Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- (4) A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



Service | Support

CROCIRIS
by **XIBERIN**

CROCIRIS is the flagship premium brand of XIBERIN.
Copyright CROCIRIS CROCHERS, "CROCIRIS" and "XIBERIN" are trademarks or registered trademarks of its affiliated companies in China and other countries/regions. All other trademarks are the property of their respective owners. CROCIRIS assumes no responsibility for any errors or omissions in this manual. Actual products may vary from the images shown. Information contained herein is subject to change without notice. Warranty services are valid only within designated sales regions.