


Your grace, meet Ace.

TUSHY Ace Owner's Manual

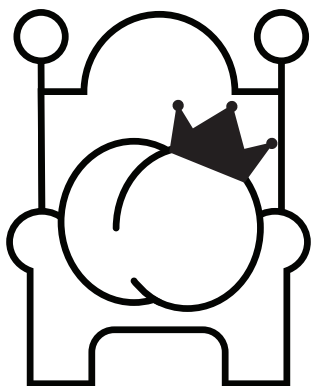

TUSHY

Congratulations!

**You've earned the right to be called
Your Hiney-ness.**

This manual will guide you step by step through your TUSHY Ace installation. Get ready for a sparkly butt, a smaller footprint and a toilet that truly feels like a throne.

<http://hellotushy.com/aceinstall>


Table of Contents

4	33
Meet Your TUSHY Ace	Warnings & Safety
5	36
Before You Start	Storage & Cleaning
15	37
Prepare Your Toilet	Troubleshooting
18	39
Connecting Your TUSHY Ace	Warranty
30	41
How To Use Your TUSHY Ace	Contact Information



GOOD DAY TO YOUR
HIGH-CLASS ASS

Meet Your TUSHY Ace

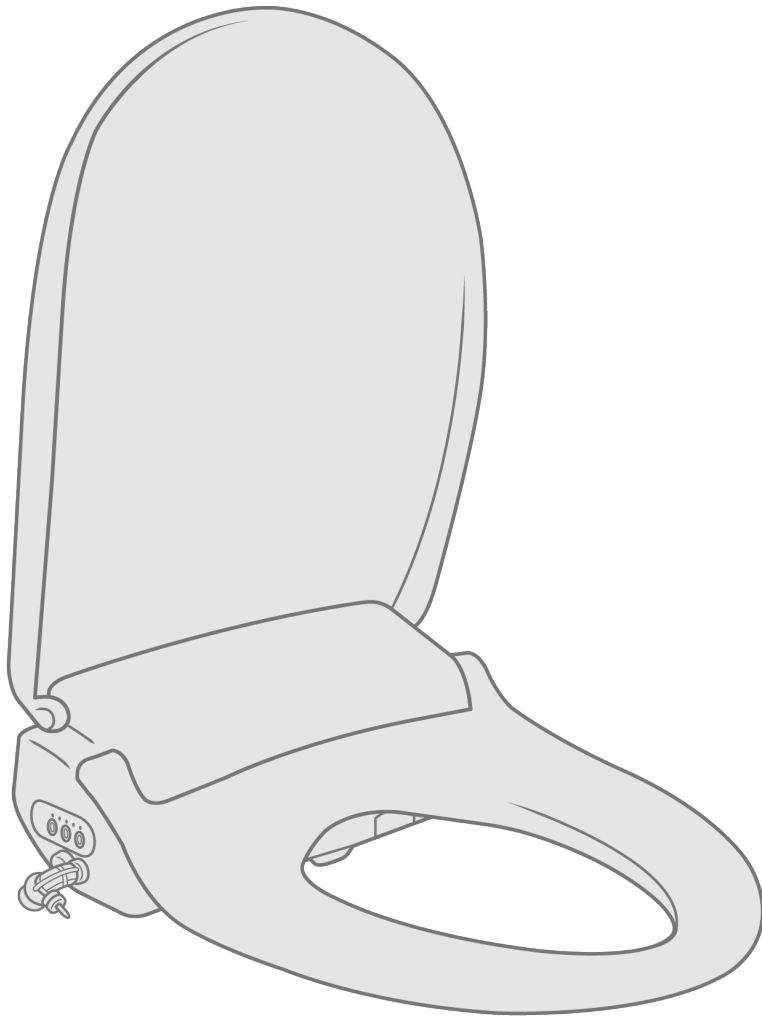

Before You Start

Warnings and Safety

Read all instructions before installing or using your TUSHY Ace. Failure to do so could result in property damage, injury or death. Always turn off the water supply and disconnect all power sources before installing or performing maintenance on your TUSHY Ace.

When tightening connections, make sure they are finger tight, but be careful not to overtighten as this could result in leaks or property damage. Make sure you check for leaks after installing your TUSHY Ace and periodically thereafter.

Do not attempt to open or perform internal maintenance on the TUSHY Ace as this could result in injury or death as the device has electrical components.

Get into the groove

Let's get this POTTY STARTED! Turn on some rump-shakin' TUSHY Tunes. We've assembled the perfect tracks to get you in the mood to upgrade your toilet, your booty and your life.

hellotushy.com/tunes

Use the QR reader

You'll find an itty-bitty, funky-looking square like this next to every step of this installation. **This is a QR code. Each step of the installation has its own unique QR code.**




Scan this with your phone's camera to give it a test drive. Technology, right?


Contact us

Have a question? Our Customer Experience Poo-rus are ready to help. Email us at aceinstall@hellotushy.com

Included Parts

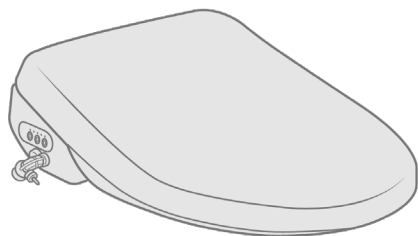

TUSHY Ace




Remote




Mounting Dock




3x AAA
Batteries




Tank Adapter
(7/8" Compression)

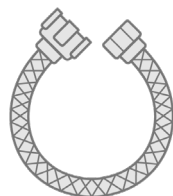


Flexible TUSHY Ace Hose
(1/2" Compression)

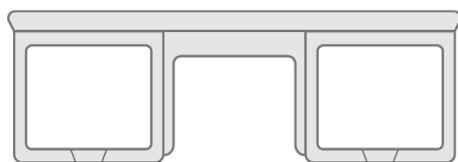

Base Plate

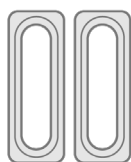


2x Mounting Brackets



2x Mounting Bolts



2x Bolt Washers

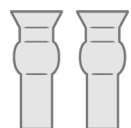

2x Top-Mounting
Rubber Inserts



TUSHY TIP

Keep all of these parts (and this manual)
just in case you need them in the future!


You'll Also Need:



Flathead
Screwdriver




Phillips Head
Screwdriver

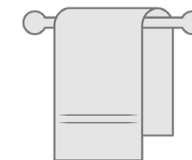

Towels
(For any spills)

Access to Power Outlet Within 3'

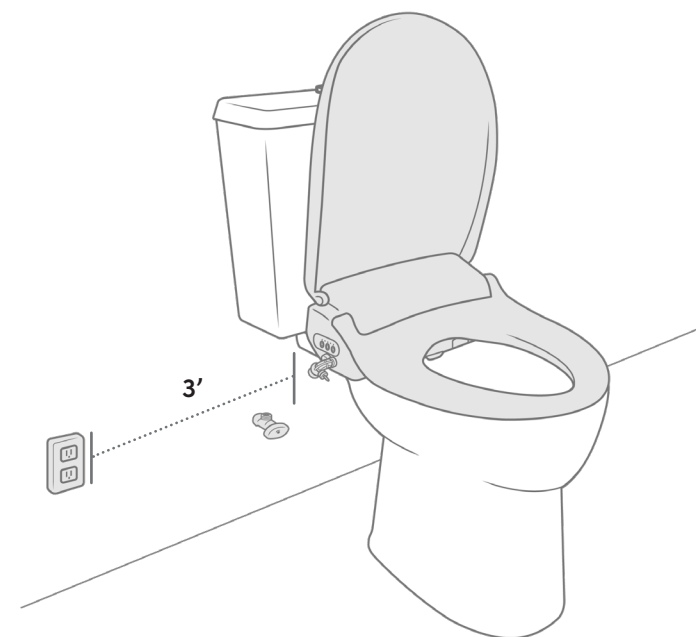

YOUR TOASTY SEAT FOR THE
POOPING ELITE AWAITS



For a guided installation, scan this code to watch our TUSHY Ace install video or go to hellotushy.com/aceinstall


Check your toilet.

(There are different kinds of toilets? Who knew?)

1. Which bowl shape do you have?


Round

A round bowl is typically shorter and rounder. It is commonly found on older toilets.

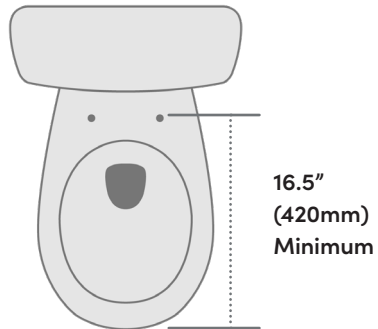

Elongated

An elongated bowl is typically longer and more egg-shaped. It is commonly found on newer toilets.

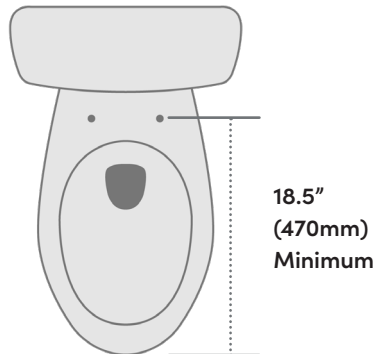

Make sure your TUSHY Ace matches your toilet's bowl shape. If they don't match or if you are unsure, reach out to aceinstall@hellotushy.com and we'll help you out.

2. Which type of toilet do you have?

The Standard


MOST POPULAR



The Standard toilet is the most common toilet you'll find in the majority of residential homes. It typically has two pieces, consisting of the bowl and the tank, and has a flexible steel hose connection between the water supply and tank. Most importantly, all of the water supply connections are visible. If you've got the Standard, you'll be good to go in no time!

If you have any questions at all, email aceinstall@hellotushy.com and we will be able to assist you.

The Skirted

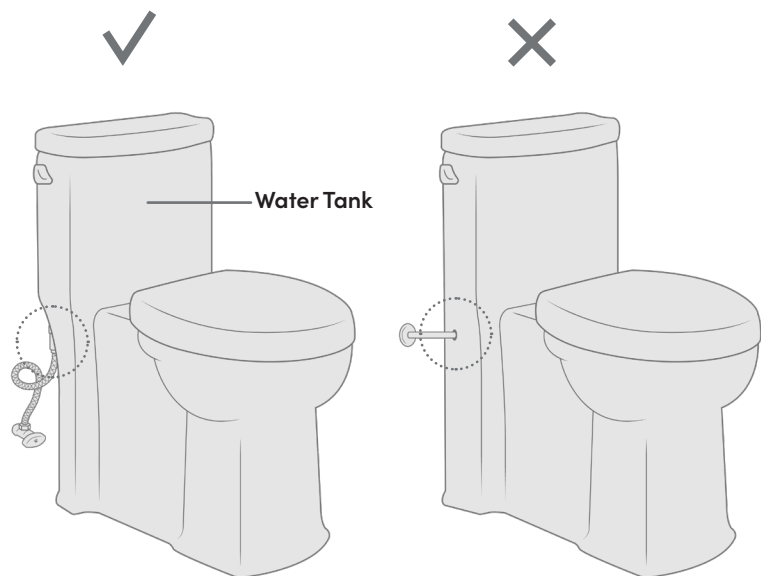


Skirted toilets are a more modern, clean design that may hide the external tank connection. If you are able to access the tank connection, awesome! You shouldn't have too much trouble.

If you aren't able to access the tank connection, check out hellotushy.com/aceskirted for tips on how to connect these toilets with the valve adapter. We'll get you set up in no time.

If you have any questions at all, email aceinstall@hellotushy.com and we will be able to assist you.

The Flushometer

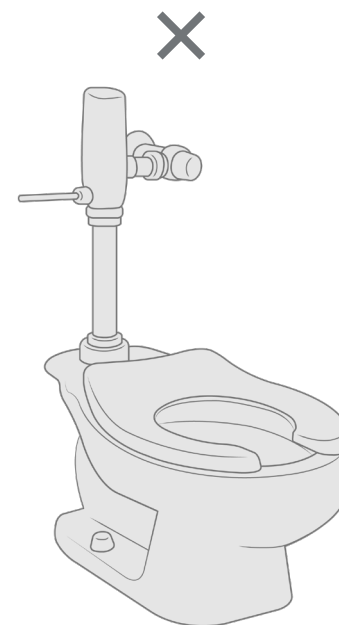

The Flushometer toilet is normally found in commercial buildings, but some residential apartment buildings have these toilets too (looking at you, NYC friends). They have a lever with a powerful flush and no easy access to a water supply connection. At first glance, these toilets don't look TUSHY compatible, BUTT... we have a hack for that. ;)

You can connect your TUSHY to your sink's water supply. If you want to start a Flushometer installation, visit our Flushometer page hellotushy.com/aceflushometer for an instruction video and a parts kit you will need.

If you have any questions at all, email aceinstall@hellotushy.com and we will be able to assist you.

The French Curve

MAYBE




Do you oui oui in this type of potty? **French Curve toilets** are one-piece toilets that are curved in the back. Though they are very high-end, they also tend to be hard to fit when it comes to any bidet seats or attachments.

To see if your toilet is compatible, check out hellotushy.com/pages/compatibility-list.

If you have any questions at all, email aceinstall@hellotushy.com and we will be able to assist you.

3. Check your water connection

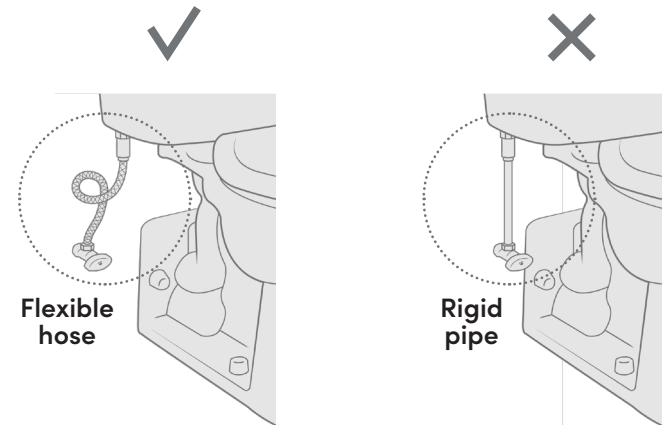

What kind of water connection does your toilet have? If you have a flexible hose (left), you're good to go. If you have a hard pipe, contact our Poo-rus and we will send you a flexible pipe to replace it. For an installation video on how to replace your hard pipe, go to hellotushy.com/acetoilethose.




TURN YOUR CAN INTO
A CAN D'OR

If you have any questions at all, email aceinstall@hellotushy.com and we will be able to assist you.

4. Check your power outlet

WARNING: Failure to read this may result in serious injury or death due to potential shock hazard. Before getting started, your TUSHY Ace must have access to a GFCI power outlet to ensure safe operation.

First, check the distance from the toilet to the outlet. If it is greater than **3 feet**, you will need an extension cord. Pick one up at hellotushy.com/aceextension or grab any 3-prong extension cord you have handy. If you're not sure, reach out to us at aceinstall@hellotushy.com and we can recommend one to you.

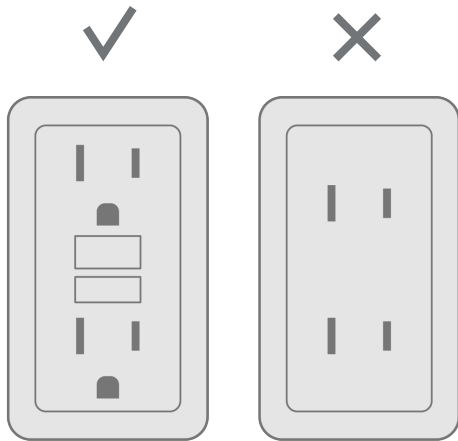

Next, check the outlet itself. If it looks like the one to the left, you are good to go!

If it is a 2-prong outlet, you will need a grounded converter available at hellotushy.com/collections/parts-and-accessories or your local hardware store.


(Refer to page 27 for applicable warnings.)

If you have any questions at all, email aceinstall@hellotushy.com and we will be able to assist you.

Prepare Your Toilet

STEP 1: Turn off your water supply valve

Turn off the water valve beside the toilet by turning it clockwise.

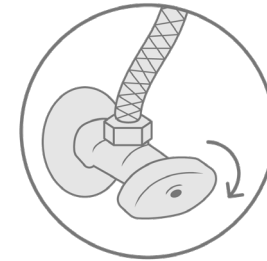


TUSHY TIP

If you don't have access to the water supply connection beside the toilet, you can use your sink's water supply instead. For an installation video, go to hellotushy.com/acesinkinstall.

If the valve is tight, there may be some mineral buildup. In that case, try twisting in one direction and then the other, each time rotating a little further until it's free to turn all the way around. Slow and steady wins the race!


STEP 2: Empty the toilet tank

Flush your toilet to drain the tank. Hold down that flusher until the tank empties nearly completely! An inch of water at the bottom is okay, though.

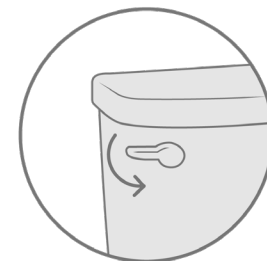

STEP 3: Remove the toilet seat

For most toilet seats, flip up the screw caps behind the seat with a flathead screwdriver to access the screws. Turn counter-clockwise to loosen the screws. Remove the seat and either store it (in case you ever need it) or bury it (in case you want to give your old toilet a proper goodbye). Just kidding, recycle it!

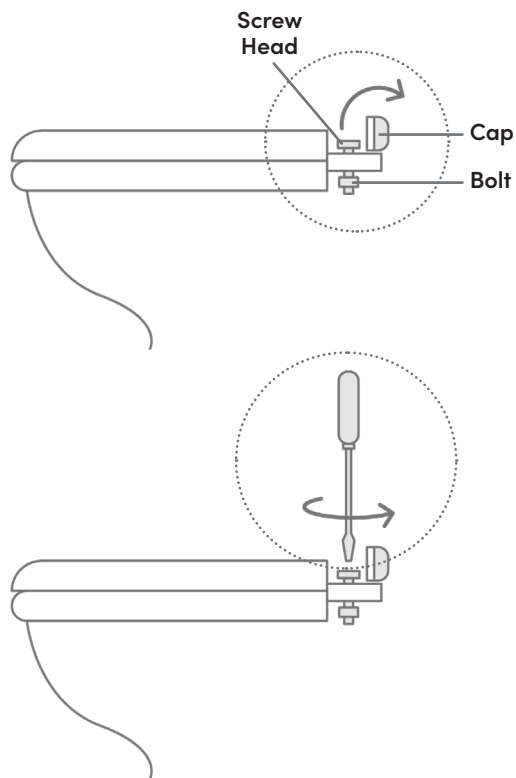

MIGHT WE ADD: YOUR
SH*T SMELLS OF ROSES



TUSHY TIP

You may need to hold the nut on the underside of the screw with your other hand (using pliers or a towel if necessary) while unscrewing.

If your toilet is dirty—hey, it happens!—it's the perfect time to clean it!


Dealing with a unique quick-release or mounted toilet seat?

There's a super easy fix. Simply unscrew the bolts fastening the quick-release mounts to the toilet. Then you can remove them and store them with your seat if you ever need to re-install it. The bolts may be under a plastic or metallic cover.

Check out hellotushy.com/mountedseatremoval for some video tips if you're having trouble. Once you've got the seat off, set it aside and you're done!



Scan this code for a quick video showing how to remove your quick release seat.

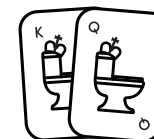


A ROYAL FLUSH LIES IN THE
CARDS FOR YOU


Connecting Your TUSHY Ace




STEP 4: Connect to the water line

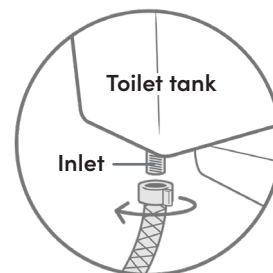

a. Disconnect the existing flexible hose from your toilet tank by turning it clockwise if you're looking at the connection from above. Be prepared to catch or wipe up some residual water that might spill onto the floor.

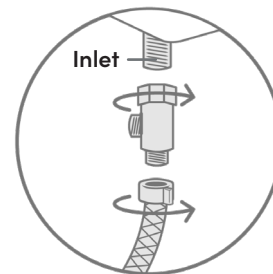

b. Screw the existing flexible hose to the bottom of the Tank Adapter and then screw the top of the Tank Adapter counter-clockwise onto the tank if you're looking from above. Be careful not to overtighten!

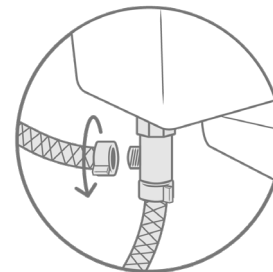

c. Screw the provided Flexible TUSHY Ace Hose to the Tank Adapter's side connection. Be careful not to overtighten!

WARNING: Connect to cold water line only (not the hot water line).




TUSHY TIPS

If you don't have access to the tank connection, you will need a valve adapter for installation at the shutoff valve at the wall or the sink instead. Check out our installation video at hellotushy.com/valveadapter and email us at aceinstall@hellotushy.com for that part.

Got a hard metal pipe instead of a flexible hose connected to your toilet? No problem! You can swap that hard metal pipe out and replace it with the Flexible TUSHY Ace Hose included in your TUSHY Ace spare parts kit!

STEP 5: Attach your TUSHY Ace Base Plate to the bowl


a. Insert the included Top-Mounting Rubber Inserts into the toilet bolt holes until they are nearly flush with the toilet rim. Keep the bolts in the rubber inserts to make it easier to get the inserts in the toilet bolt holes. Once the rubber inserts are in place, unscrew the Mounting Bolts and set them aside until the end of step 5.

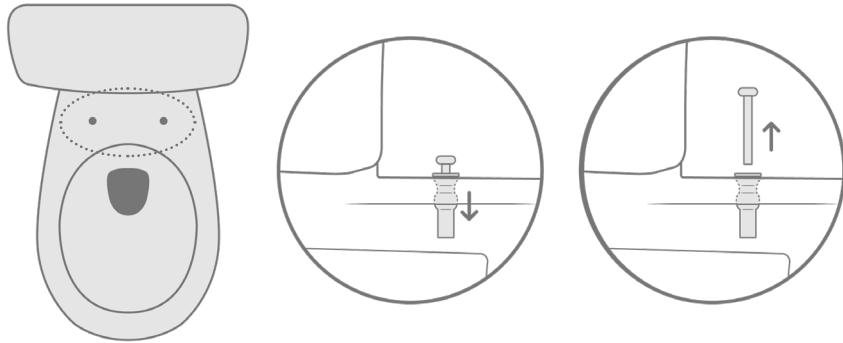


TUSHY TIP

If you're having trouble getting the rubber inserts into the toilet bolt holes, use some soapy water to help them slide in easier!


b. Place the included Base Plate over the toilet bolt holes, making sure it is centered and straight. Please also make sure the side of the Base Plate with rubber non-slip pads is facing down, not up. Align the back of the Base Plate with the tank, leaving a gap of at least 3/4" or the thickness of your thumb. It is okay if your gap is bigger than that.

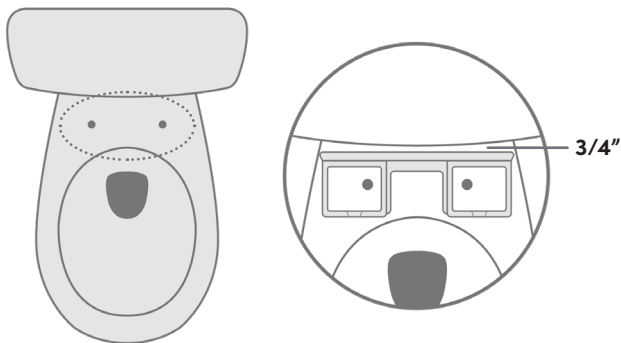

c. Line up the included mounting brackets on the Base Plate directly over the toilet bolt holes. The mounting brackets should click into the grooves in the Base Plate to stay in place.

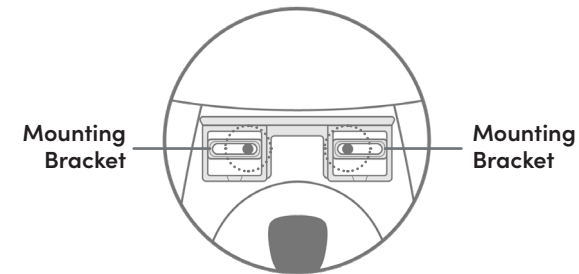

d. Slide the Bolt Washers onto the bolts. Insert the Mounting Bolts through the top of the mounting brackets. Tighten them using a Phillips head screwdriver by turning clockwise until the Base Plate is tight enough to stay in place. Be careful not to overtighten.

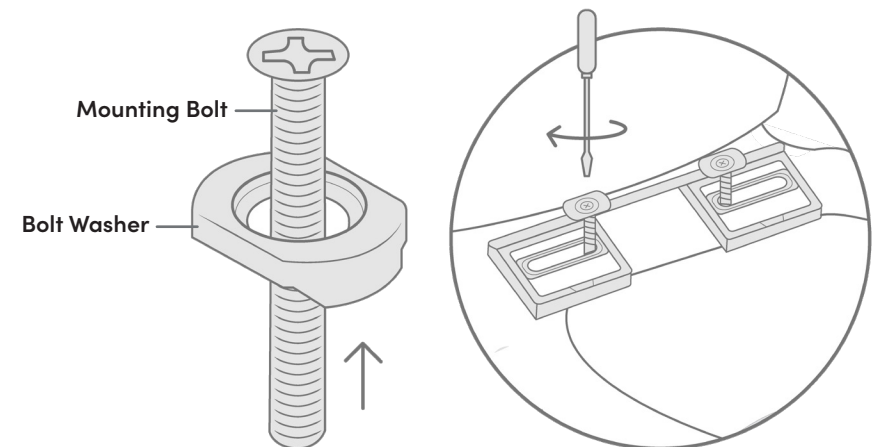


TUSHY TIP

While you're tightening the screws, check intermittently to see if the mounting bracket feels snug. If it still wiggles, keep tightening. If it feels snug, you're all set!

STEP 6: Attach your TUSHY Ace to the Base Plate

Next, place your TUSHY Ace onto your bowl in front of the Base Plate. You will notice that on the bottom of the main body there are two slots that will slide onto the Base Plate. Line those up with the Base Plate and slide towards the back of your toilet until it clicks into place and securely locks.

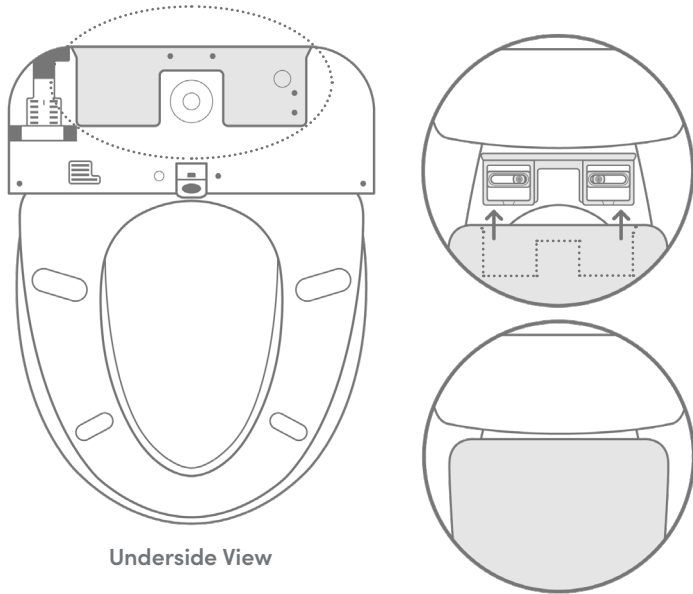


Underside View




PREPARE TO POOP WITH
EXCELLENCE

Check your Ace alignment

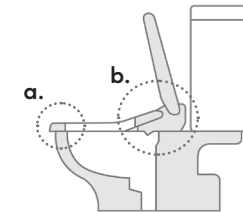


a. Lip over / under hang


If you need to adjust the position of your TUSHY Ace, measure the amount of overlap at the front of your bowl so you can adjust the Base Plate accordingly.

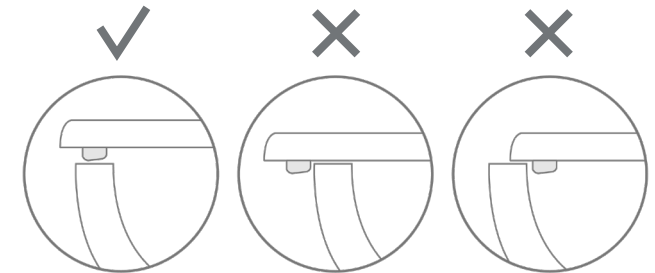

b. Flat on toilet bowl


Make sure your TUSHY Ace lies flat on your toilet bowl so the nozzle can function properly. Move it forward if the nozzle is resting on the edge of the bowl.

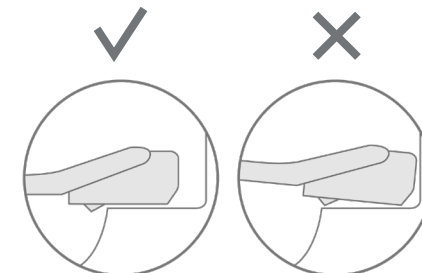

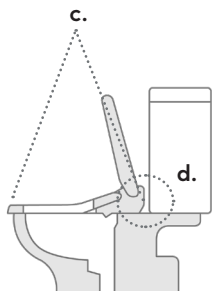


c. Straight

Make sure your TUSHY Ace is straight on the toilet bowl.

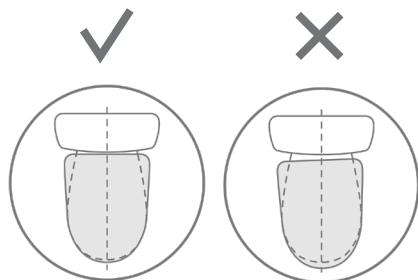


d. Allow space for lid

Make sure there is enough space between the TUSHY Ace and your tank so the lid can open properly.

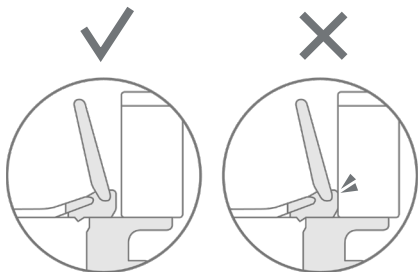

TUSHY TIP


To remove TUSHY Ace from the Mounting Plate, press the unlock button on the right side of the seat and pull the seat away from the tank. Then, loosen the Mounting Bolts and adjust the Base Plate until it is in the desired location before reattaching your TUSHY Ace.

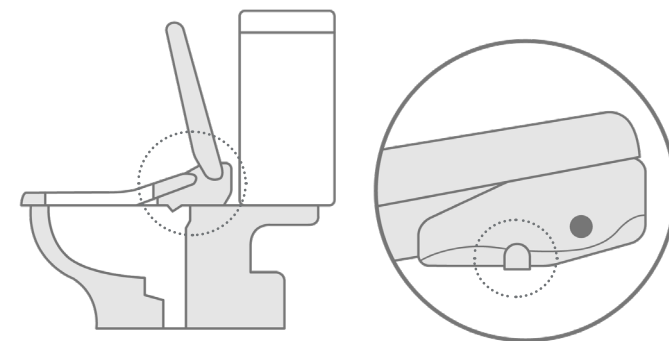

WE DON'T MEAN TO BE
ARISTOCROSS, BUT YOU'RE
THE CREAM OF THE PLOP

STEP 7: Finish the water connection


Take the open end of the Flexible TUSHY Ace Hose attached to the Tank Adapter and screw it onto the inlet port of the bidet in a counter-clockwise direction if you're looking from above. Do not overtighten—finger tight should be perfect.

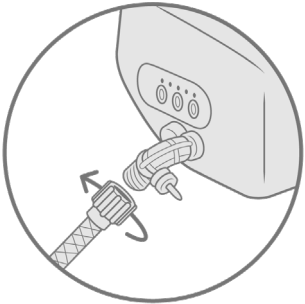

STEP 8: Check for leaks

Turn on your water shutoff valve and check all connection points to make sure there are no visible leaks. If you see a leak, turn off your water shutoff valve and check your connections to make sure they are threaded straight and tight before you go to the next step.

If you are still having leaks, flip to our Troubleshooting section before continuing.

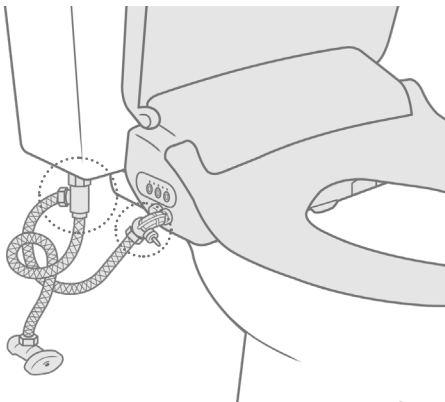

STEP 9: Plug in your TUSHY Ace

Once the connections are leak-free and the area around you is dry, plug your Ace into a grounded, 3-prong 120V outlet. Is your butt tingling yet!?



TUSHY TIP

If your outlet is out of reach, go to hellotushy.com/aceextension to get a 3-prong, grounded extension cord. While you wait, you can leave the TUSHY Ace on the toilet. It's still a functioning toilet seat!


If you have a 2-prong outlet, purchase a grounding converter from a local hardware store or email us at aceinstall@hellotushy.com for recommendations. The grounding converter should be used only until a properly grounded outlet can be installed by a qualified electrician.

Grounding Instruction

DANGER: Improper use of the grounding plug may result in a risk of electric shock. Refer to Warnings and Safety page.

This product has a 3-prong grounding plug, which must be plugged into an outlet that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. Check with a qualified electrician if you don't understand the grounding instructions, or if you're not sure whether the product is properly grounded.


TUSHY Ace is intended for use on a nominal 120V circuit, and has a grounding plug that looks like the plug illustrated below.

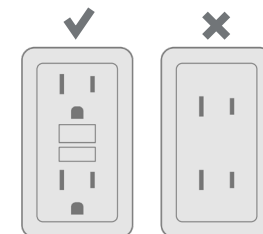


STEP 10: Set up your remote

WARNING: Only install the remote in a dry area.

The future of toileting is here! Select an area of the wall that will be within reach of the toilet while seated. Clean that area and then make sure it is fully dry. The adhesive works best on dry wall or tile.

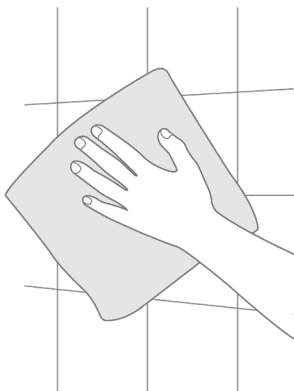

Remove the adhesive protection to attach the remote control dock to the cleaned area.

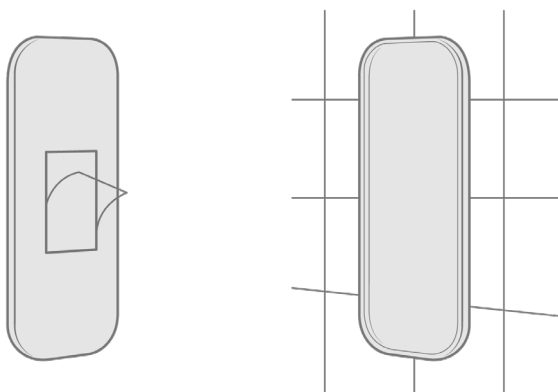


TUSHY TIP


Can't decide on a mounting location? Set the dock aside and leave the remote on the toilet tank when not in use. You know your household—if kids or pets are in the mix, the remote is likely to disappear if undocked.

Slide the battery cover off and insert the provided AAA batteries into the back of the remote, then replace the battery cover.

WARNING: Keep batteries away from children.

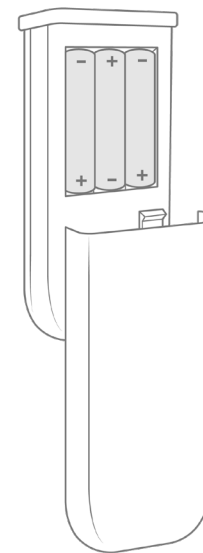

To attach the remote to the dock, simply line it up and press the remote against the dock. The embedded magnets will hold it in place.

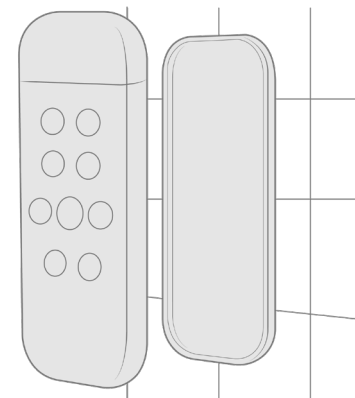


You've done it! Your ass-terpiece is complete! Now you get to sit on your throne.

How To Use Your TUSHY Ace

Before using your TUSHY Ace, make sure it is plugged into a grounded, 3-prong 120V outlet, there are batteries in the remote and your water valve is open.

Remote Functions:

SINGLE TAP FUNCTIONS

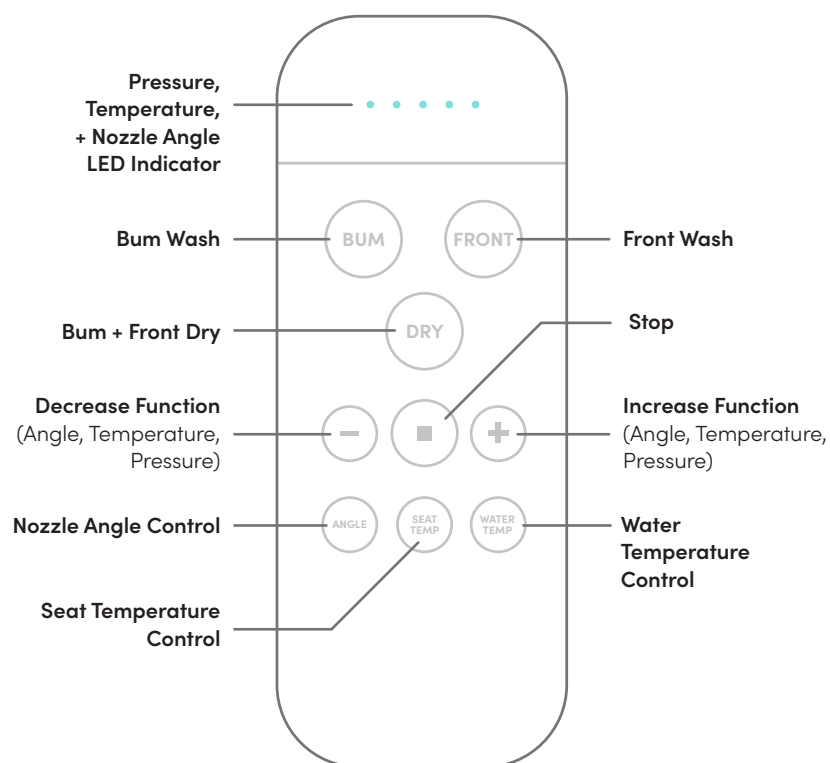

To operate your TUSHY Ace with the remote, tap the setting button you want to change (nozzle angle, pressure, or temperature), then use the increase or decrease buttons to adjust that setting. Next, press Bum or Front wash to activate the spray. You can also change these settings during operation to fine tune your preferences.

Once you have completed your wash, tap the Dry button to activate the bum dryer. Use the Stop button to stop any function.

Special functions/modes

Oscillating Power Wash
Double click on the Bum or Front wash buttons to activate the power wash setting which will oscillate the nozzle during wash sequence.



Manual Self-Cleaning Function
Press and hold the Seat Temperature and Water Temperature buttons for 5 seconds to activate the self-cleaning function. The Ace automatically cleans the nozzle after every use, but you can do it manually too if you're a clean freak!

Soft Reset
Press and hold both the + and - buttons for 5 seconds to reset the TUSHY Ace to factory conditions. Try this if your Ace is acting a little funky.

Mute Function
Want Ace to whisper softly into your rear? Activate the Mute Function by holding the stop button for 10 seconds.

- After 5 seconds, you'll notice the lights turning white—keep holding!
- These lights will act as a visual countdown for 5 more seconds. Once they turn completely off, you're muted!

Lost remote, dead batteries? Check your couch cushions! If you still can't find it, TUSHY Ace has a simple spray function that can be accessed on the side of the bidet. To operate the Bum or Front wash, press the corresponding button once to activate, and again to stop. To operate the Dryer, press the Dry button once to activate, and again to stop. Please properly dispose of old batteries.

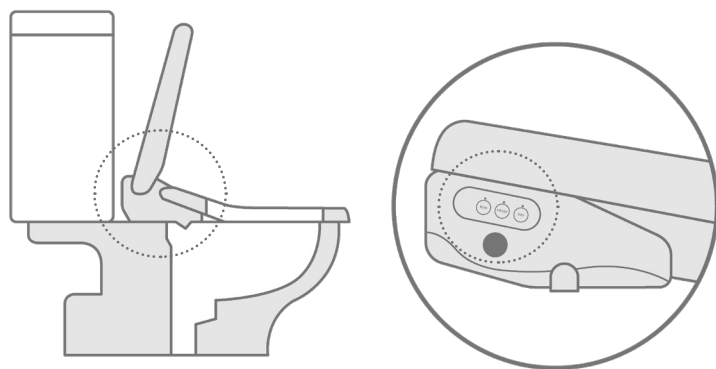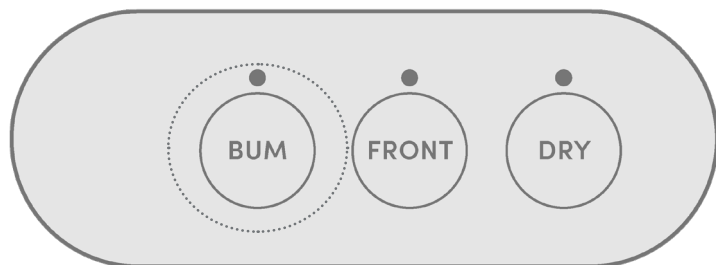

Warnings & Safety

Read all instructions before installing or using your TUSHY Ace.

Failure to do so could result in property damage, injury or death. Always turn off the water supply and disconnect all power sources before installing or performing maintenance on your TUSHY Ace.

When tightening connections, make sure they are tight, but be careful not to overtighten as this could result in leaks or property damage. Make sure you check for leaks after installing your TUSHY Ace and periodically thereafter.

Do not attempt to open or perform internal maintenance on the TUSHY Ace as this could result in injury or death as the device has electrical components.

Important Safeguards

Keep children away during installation process and exercise caution when using the device around children. To avoid danger of suffocation, keep the plastic bags away from babies and children. Do not use this bag in cribs, beds, carriages, or playpens. This bag is not a toy.

Read all instructions before using

- For 120V 60Hz: Power supply must be a 15 Amp GFCI outlet that is 1 ft. above the floor.
- Avoid using extension cords if possible. If using an extension cord, make sure it is a 3-prong, grounded extension cord rated to 15 Amps.
- Install only in well-ventilated areas to avoid excess humidity.
- Do not install in narrow toilet stalls or in shower stalls.
- Install only where direct contact with water is minimized.
- Do not install near any heat source.

DANGER: To reduce the risk of electrocution:

- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.

- Do not reach for the product if it has fallen into water. Unplug immediately.
- Connect the product to a properly grounded outlet only (refer to grounding instructions).
- Do not attempt to disassemble, modify, or alter the product.
- Do not pull the product by the power plug.
- Do not plug the product into an outlet that is being used by too many other products, is the incorrect voltage, or is loose.
- A damaged cord should be replaced or repaired immediately.
- Do not use a damaged power plug or plug into a loose electric outlet.
- Do not handle the product or power plug with wet hands.
- Do not handle the power plug forcefully or place heavy objects on the power plug.
- Remove any dust or water from the power plug before plugging in.

WARNING: To reduce the risk of burns, electrocution, fire or injury:

- Use supervision when this product is used by, on, or near children or individuals with disabilities.
- For children and seniors who may have difficulties with adjusting temperature or pressure or those with sensitive skin or impaired heat sensitivity, set the temperature and/or pressure of the wash spray and seat to “low” or “off” to prevent burning or injury.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, has been dropped or damaged, or has been dipped into water. Contact customer support for diagnosis and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use industrial or gray water for the water supply (may cause skin damage or disease).
- Do not block air outlets.
- Do not place the product on soft surfaces where air openings may be blocked.
- Keep openings free of lint, hair, and other materials.
- Do not push buttons with excessive force or open the seat cover using excessive force.

- Do not place heavy objects on the seat cover.
- Do not use this product while sleeping or drowsy.
- Do not operate or use the product around flammable or combustible materials.
- Unplug and drain the product if it will not be used for a long period of time.
- Do not use thinner, benzene, acidic chemicals, chloride, or hydrochloric acid detergent to clean the product, because this could result in corrosion or discoloration/scratches to the product.
- Check all water supply connections regularly for leaks.
- Do not connect the product to the warm water supply during installation.

WARNING: Do not stand on the TUSHY Ace. Doing so could result in property damages, injury or death.


WATER HAMMER WARNING: In the event that a loud banging noise occurs in the existing plumbing during installation, please cease using the device and consult a plumbing professional in order to prevent voiding your warranty and/or damaging your TUSHY Ace.



Storage & Cleaning

Storing or moving your TUSHY Ace

To uninstall your TUSHY Ace, turn off your water valve, disconnect the plug from power, disconnect your Flexible TUSHY Ace Hose, disconnect your Tank Adapter, and use the detach button to slide your TUSHY Ace off of the Mounting Plate.

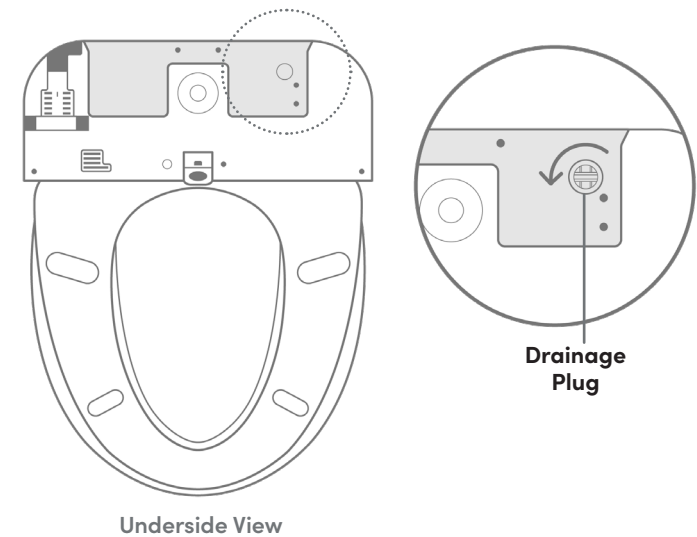

Drain your TUSHY Ace before storing or moving by locating the drain plug on the bottom of the device. Using a flathead screwdriver, turn the plug counter-clockwise a quarter turn to open the drain. The plug will not remove completely. Drain into a toilet, tub or sink and then tighten the plug before storing.

Cleaning your TUSHY Ace

You should clean your TUSHY Ace as frequently as you clean your toilet with a mild, neutral-PH cleaner.

Cleaning products we recommend include Simple Green, Dr. Bronner's or any soap that isn't too harsh or caustic. If you have any doubt, please send a photo of the label to aceinstall@hellotushy.com, and we can confirm that it is a good match!



Troubleshooting

My TUSHY Ace buttons don't seem to work.	Possible Causes: 1. TUSHY Ace not plugged in.	Possible Solutions: 1. Make sure the TUSHY Ace is plugged in. 2. Check and reset the GFCI outlet. 3. Replace the batteries in the remote. Then perform a soft reset on the remote. 4. Adjust sitting position to fully cover the Seat Sensor.
	2. No power to TUSHY Ace.	
	3. There is power, but the remote's batteries are dead.	
	4. Not activating Seat Sensor.	
The water is too hot!	Possible Causes: 1. The temperature setting is too high.	Possible Solutions: 1. Adjust the temperature setting on the remote. 2. Connect the TUSHY Ace to the cold water supply.
	2. TUSHY Ace may be connected to the warm water supply.	
TUSHY Ace shuts off during use.	Possible Causes: 1. Washing time exceeded the cycle time.	Possible Solutions: 1. Press the wash button again to extend the cycle time. 2. Check and reset the GFCI outlet.
	2. Power failure.	
There is leaking from the TUSHY Ace body or hose connections.	Possible Causes: 1. The black rubber gasket(s) are not properly installed on the hose or adapters.	Possible Solutions: 1. Make sure that the black gasket(s) are properly installed on both ends of the Flexible TUSHY Ace Hose and the Tank Adapter. 2. Unscrew the hose and screw it back on making sure it is
	2. The hose connection is cross-threaded.	

3. There is Teflon tape on the threads.
- straight and aligned properly.
3. Remove all Teflon tape from threads and reinstall.

The tank adapter isn't the same size as my toilet connection hose.

Possible Causes:

1. We bet you have a unique plumbing setup.

Possible Solutions:

1. Contact our TUSHY Ace installation Poo-rus at aceinstall@hellotushy.com and we'll get you set up!

There's no access to water next to my toilet.

Possible Causes:

1. You have a Flushometer or commercial toilet.

Possible Solutions:

1. You can connect your TUSHY to your sink's water supply. If you want to start a Flushometer installation, visit our Flushometer page at hellotushy.com/aceflushometer for an instruction video and a parts kit you will need.

2. You have a skirted toilet.

2. Go to hellotushy.com/aceskirted for tips on how to connect these toilets with the valve adapter.

3. You have a wall-mounted toilet or a unique plumbing situation that doesn't allow you to connect at the water valve at the wall.

3. Contact our TUSHY Ace install Poo-rus at aceinstall@hellotushy.com and we'll get you set up!

Still not getting the Ace experience?

Drop us an email at aceinstall@hellotushy.com—we won't stop until your butt is beaming.

One Year Limited Warranty

1. TUSHY warrants this product to be free from defects in materials and workmanship under conditions of normal use for a period of one (1) year from the date of purchase. This warranty is extended only to the original purchaser and is not transferable if the original purchaser sells or otherwise transfers the product. TUSHY may require proof of purchase to determine whether a claim falls within the warranty period.

2. To report any product issues and to open a claim under the warranty, contact TUSHY at warranty@hellotushy.com. TUSHY will reach out to you to attempt to help resolve the issue.

3. If a defect covered by this warranty arises, TUSHY's obligations under this warranty are limited to repair or replacement, at TUSHY's option, provided that such products were used in accordance with the instructions. Replacement may be of the same or similar product at TUSHY's discretion and based on availability. TUSHY reserves the right to inspect the product to confirm that the issue is covered by this warranty.

4. TUSHY is not responsible for the cost of return shipping of this product.

5. This warranty does NOT apply to:

- Damage or loss that occurs during shipment.
- Damage, loss, or injury resulting from negligent or improper use or the user's failure to follow instructions and safety warnings.
- Damage or loss resulting from modification of the product.
- Damage or loss resulting from normal "wear and tear" of the product.
- Damage based on claims of personal injury or property damage, including, but not limited to, claimed damages that are incidental, or consequential in nature.

6. THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY TUSHY. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE

PURCHASER. TUSHY SHALL NOT BE RESPONSIBLE FOR LOSS OF USE OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES OR EXPENSES INCURRED BY THE PURCHASER OR A THIRD PARTY, OR FOR ANY OTHER EXPENSES NOT SPECIFICALLY STATED ABOVE. EXCEPT TO THE EXTENT PROHIBITED BY THE APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.

7. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



YOUR MAJESTY, YOUR
THRONE AWAITS

Meet the TUSHY Poo-rus

GENERAL

Say hi! Comments! Compliments! Butt puns!

hello@hellotushy.com

TUSHY QUESTIONS

Have general Qs? i.e. Shipping options, product availability:

questions@hellotushy.com

ORDER INQUIRIES

Track, modify, cancel or change your order or address:

myorder@hellotushy.com

INSTALLATION SUPPORT

Need a hook up with the hook up? Install help, spare parts and troubleshooting:

aceinstall@hellotushy.com

TOILET PAPER SUBSCRIPTION

Change address, change frequency, or cancel:

tpsubscriptions@hellotushy.com

RETURNS

Send it back?! OK, I guess:

bootyblissguarantee@hellotushy.com

We bend over backwards for your backside.

Email aceinstall@hellotushy.com for assistance.



FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Product Description

Device Type	remote control
Operating Frequency	2 423 MHz (Tx Only)
RF Output Power	-8.72 dBm
Number of Channel	1 Channels
Modulation Type	GFSK
Antenna Type	PCB Antenna
Antenna Gain	-0.31 dBi
Rated Supply Voltage	DC 4.5 V
List of each Osc. or crystal Freq.(Freq. >= 1 MHz)	16 MHz