


NEBO[®]

INTREPID[®] 1800 POWER STATION

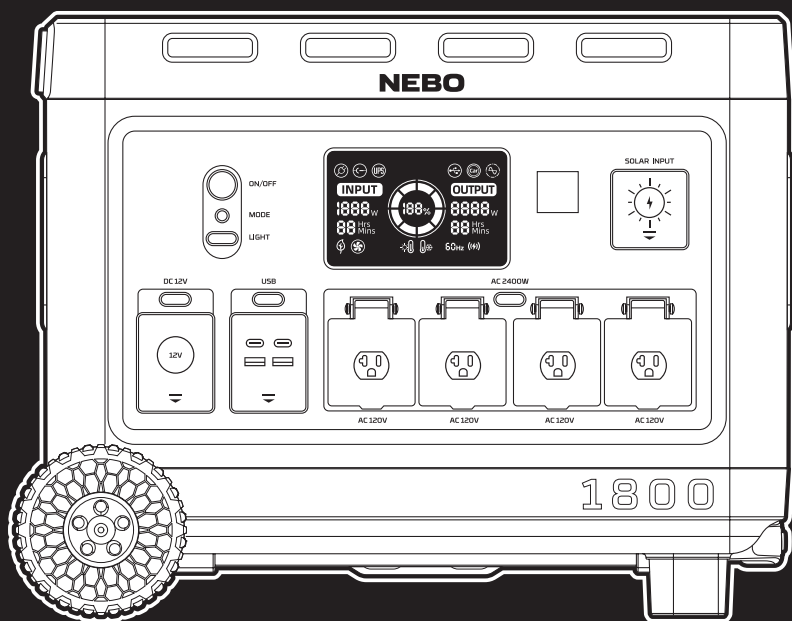

USER MANUAL

CONTENTS

Safety Instructions	2
Introduction	4
In the Box	4
Device Compatibility	5
Product Overview.....	6
LCD Display.....	7
Using the Trolley.....	8
Charging Your Power Station.....	9
Powering Your Devices	11
Cable Storage.....	12
Additional Features.....	13
Maintenance and Storage	14
Disposal / Recycling	14
Transport of Dangerous Goods	15
Technical Specifications.....	16
Troubleshooting	17
FCC Note	18
Product Registration	20

SAFETY INSTRUCTIONS

**FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY
OR EXCHANGE REQUESTS, PLEASE CONTACT US.**

1-800-255-6061

YOUR SAFETY IS IMPORTANT TO US.

Please read instructions carefully and utilize the proper precautions before operating this equipment. Save instructions for future reference.

- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire, or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your power station may cause electric shock to users and damage equipment.
- Keep your power station dry and away from moisture, water, and corrosive materials.
- Do not expose your power station to moisture, water, rain, or snow.
- Keep your power station away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher.
- Your power station may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict air flow around the power station during operation.
- Do not disassemble your power station. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.
- Do not drop or subject to strong impacts. Do not operate your power station if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush, or subject to mechanical shock.
- Keep away from children and pets. The power station, along with its accessories are not toys.
- Make sure the power station's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.



**IF THE PRODUCT OVERHEATS, BECOMES SWOLLEN, OR
IS DEFORMED IN ANY WAY, IMMEDIATELY STOP USING
AND CONTACT CUSTOMER SERVICE.**



WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov


**CONFORMS TO
UL2743**



INTRODUCTION

Whether you're a modern nomad taking your RV to new horizons, or a homeowner seeking reassurance during unexpected outages, the **NEBO Intrepid® 1800** is your answer to staying charged and connected. A fusion of power, portability, and versatility, this power station promises to empower your experiences and keep you charged at home, in the backyard and even the backcountry.

IN THE BOX

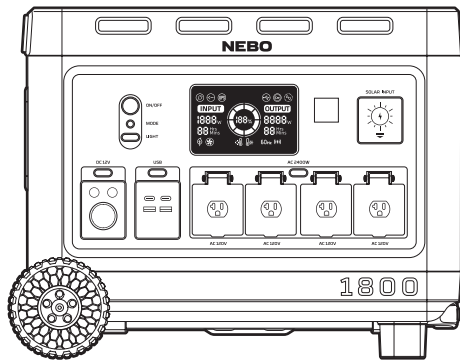

NEBO Intrepid 1800




120V AC Power Cord



12V DC to HPP (High Power Port) Cable



5525 to HPP (High Power Port) Cable



User Manual

DEVICE COMPATIBILITY

The power requirements, run times and recharge figures below are estimates and are provided for reference purposes only. Actual results may vary by device.



Laptop
52.6Wh
~28 Recharges



Smartphone
20Wh
~74 Recharges



32" TV
49W
~30 Hours



Camera
6.8Wh
~217 Recharges



Drone
77Wh
~19 Recharges



Mid-Size Fridge
265 kWh per year
~49 Hours



Floodlight
5W
~295 Hours



CPAP
60W
~24 Hours



String Lights
50W
~29 Hours



Pellet Smoker
75W
~20 Hours




Game Console
205W
~7 Hours




Modem
48W
~31 Hours

PRODUCT OVERVIEW

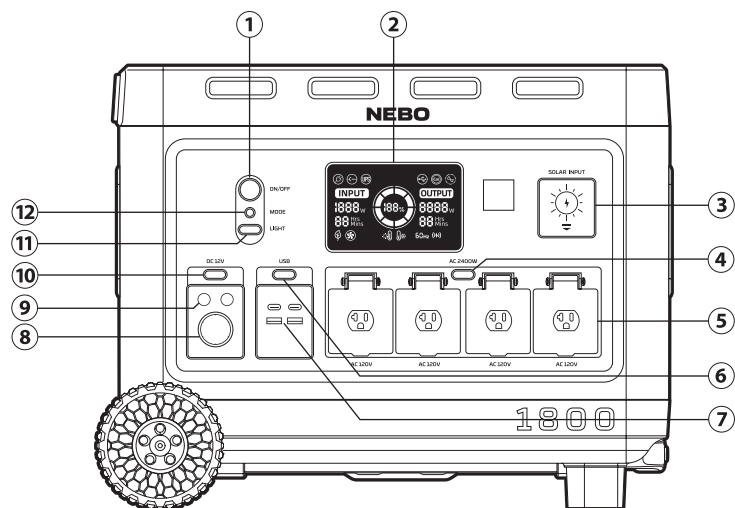


- | | | |
|----------------------------|---------------------------------|----------------------------------|
| 1. Power On/Off Button | 5. AC Output Ports | 9. DC Output Ports (5521) |
| 2. LCD Display | 6. USB Output On/Off Button | 10. DC Output On/Off Button |
| 3. DC/Solar Input Port | 7. USB-A and USB-C Output Ports | 11. LED Light On/Off Button |
| 4. AC Output On/Off Button | 8. 12V Output Port | 12. Fast/Slow Charge Mode Button |

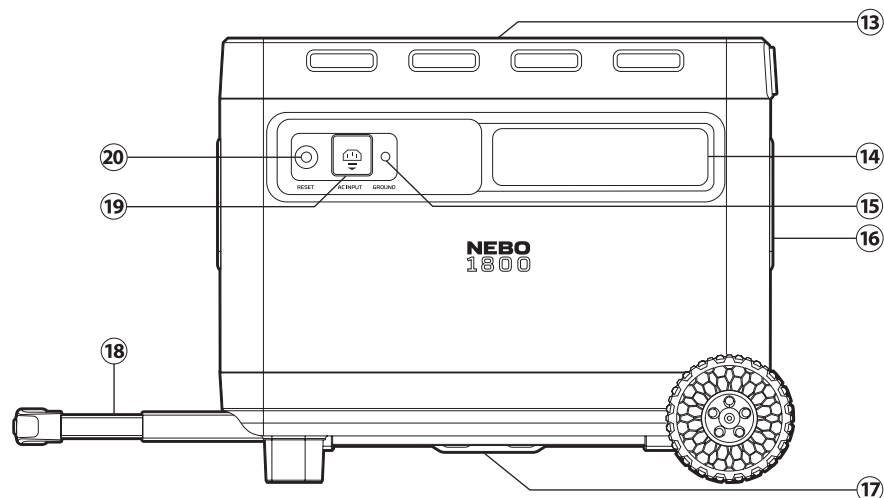

- | | |
|---------------------------------|-------------------------------------|
| 13. Wireless Output (top panel) | 17. On Board Cable Storage |
| 14. LED Floodlight | 18. Telescoping Handle |
| 15. Ground Terminal | 19. AC Input Port |
| 16. Air Vents (side panels) | 20. Overload Protection (OLP) Reset |

LCD DISPLAY

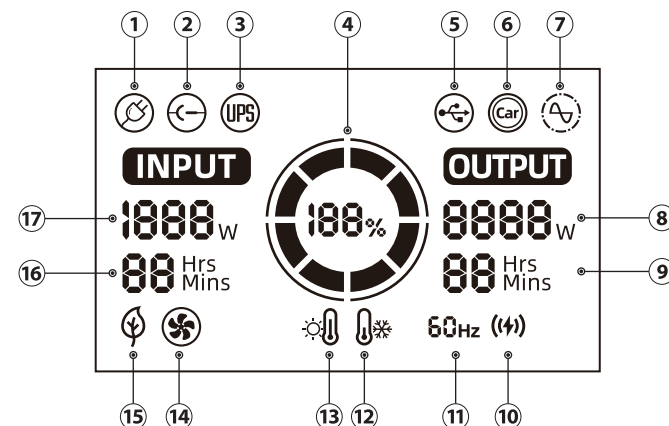

- AC Input:** During AC charging, this icon displays on the LCD.
- DC Input:** When solar panel or DC source is connected to the DC/Solar input, the icon will turn on.
- Uninterruptible Power Supply (UPS):** An uninterruptible power supply (UPS) is a backup feature that provides near instantaneous power in the event of an unexpected power failure or outage which protects sensitive equipment from damage.


Devices with sensitive electronics like CPAP machines, some medical equipment, or computers can benefit from the UPS feature. Instead of powering down during an outage, they maintain performance despite the power outage.

- Battery Level Indicator:** Indicates the level to which the battery is charged.
- USB-C Output:** This icon indicates the USB-C output is enabled.
- 12V Output:** This icon indicates the 12V Car Charger socket is enabled.
- AC Output:** This icon indicates the AC output is enabled.
- Output Power:** This value displays real-time power consumption, which changes according to the devices currently connected.
- Discharge Time:** Estimated time to fully discharge the internal battery.
- Wireless Icon:** Wireless output is on when this icon is displayed.
- AC Output Frequency:** Indicates the AC output frequency
- Low Temperature Warning:** When this icon illuminates, the internal temperature has reached its low temperature limit. The power station will not be able to charge or discharge until operating temperature is reached.
- High Temperature Warning:** When this icon illuminates, the internal temperature has reached its high temperature limit and the unit will shut off automatically. The power station will not be able to charge or discharge until operating temperature is reached.
- Cooling Fan Status:** Cooling fan is on when the fan icon is displayed.
- Slow Charge Mode Status:** When this icon illuminates, the AC input is limited to 300W. This will result in a longer recharge time, but reduces the strain on the battery cells to promote a longer lifespan. Additionally, this can prevent tripping your circuit breaker if you are powering multiple high wattage devices at the same time.
- Input Time:** Estimated time to fully charge the internal battery.
- Input Power:** When being charged by AC, DC, or AC and DC, the total will be displayed under "INPUT". DC/Solar input takes priority over AC input, when both are being used.


USING THE TROLLEY

EXTENDING THE HANDLE

Press button on hand grip and extend handle outward, making sure that it locks into place. Slowly tilt your power station upward to roughly 45° degrees.

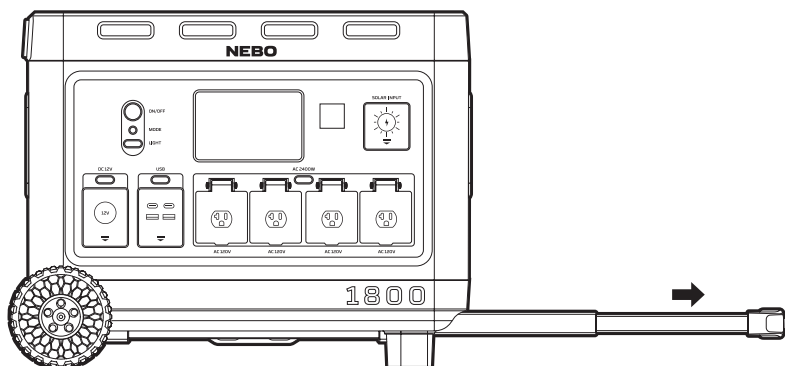


CAUTION: Never operate the power station while it is standing fully on its side, as doing so could damage the device and/or restrict air flow to the cooling vents. The power station is designed to be used and stored only while the wheels and rubber feet are placed fully on the ground.

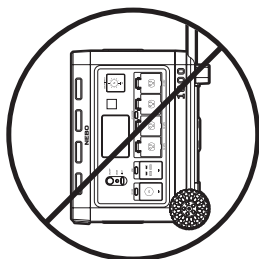

STOWING THE HANDLE

Gently lower your power station back down so it is resting on the rubber feet. Press button on hand grip and collapse handle inward, making sure that it locks into place.

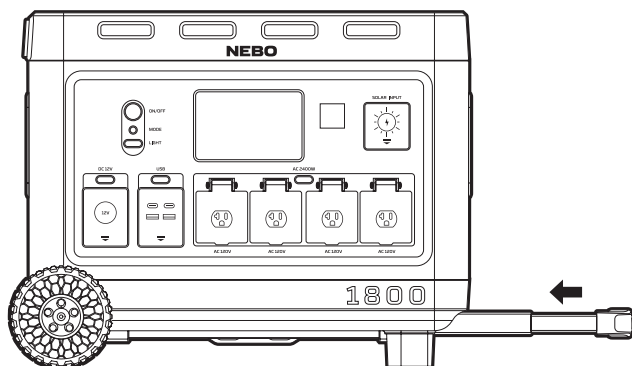

CHARGING YOUR POWER STATION

CHARGING

Before using your Intrepid 1800 for the first time, fully charge it using the AC cable. The full charge time is about 2 hours. When charging, the LCD screen will be lit, the LCD display will provide real-time display data of battery charging, and the device will display 100% when fully charged. It is recommended to fully charge the device every 3 months to maintain the life of the device.

There are three ways to charge your power station:



AC Charging (wall outlet)
1200W Max Input




12V Car Charger
120W Max Input



Solar Charging
800W Max Input

AC CHARGING

There are two charging modes, Fast (1200W) and Slow (300W), which are selectable using the Mode button. In Fast mode, it takes less than 2 hours to charge from 5% to full capacity. Slow mode will limit the input to 300W which will result in a longer recharge time, but reduces the strain on the battery cells to promote a longer lifespan. Additionally, this can prevent tripping your circuit breaker if you are powering multiple high wattage devices at the same time. When battery level reaches 100% and input power is 0, this means the internal battery has been fully charged, the screen will turn off.

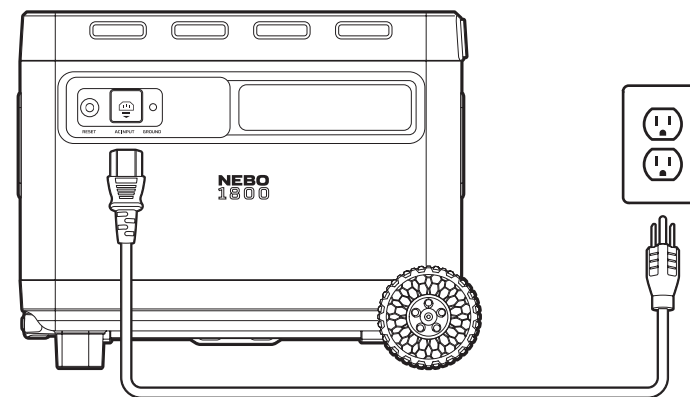

AC Power Cable

OVERLOAD CONDITION

When the power supply current is unstable due to lightning or other reasons, and there is a large current at the AC input, the overload protection function will activate and cut off the AC input port.


Follow the below steps to restore the AC input function:

1. Turn off the power button and unplug all ports.
2. After confirming there are no issues, turn on the power button.
3. Press the **Reset** button and connect the AC cable.

CHARGING YOUR POWER STATION

12V CAR CHARGER


Use the car charger provided to charge. It takes up to 12 hours to fully charge. When the LCD display shows that the battery power is 100%, it means that the battery is fully charged.

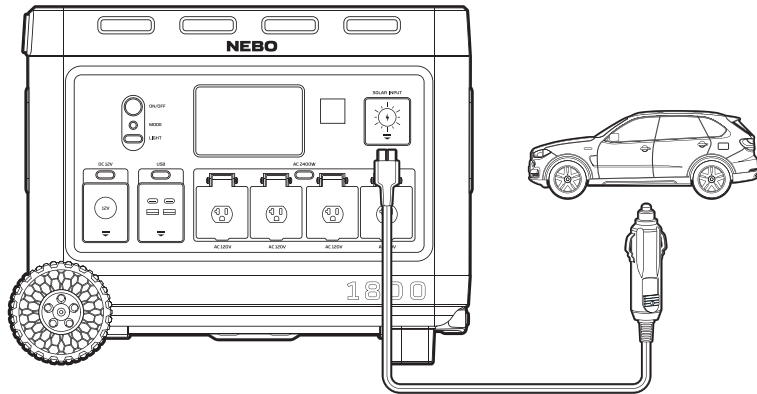

12V DC to High Power Port (HPP) Cable

SOLAR CHARGING

Connect the 5525 HPP Cable (included) to your solar panel, then into the HPP Input Port. Position your solar panel to receive direct sunlight. The DC icon will appear on the Power Station display along with the current input watts and estimated recharge time. When the charge percentage reaches 100%, your power station is fully charged.

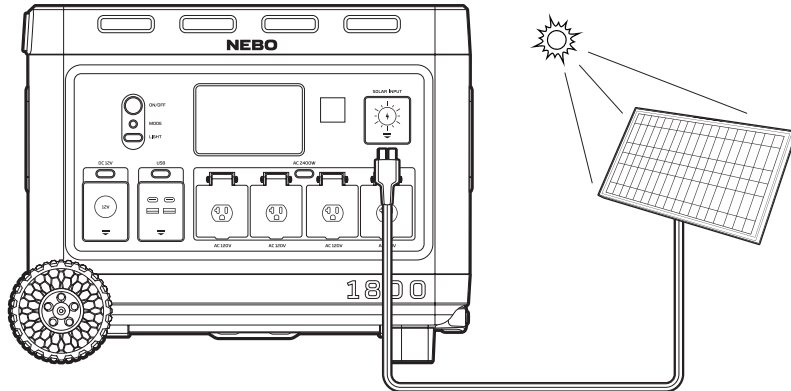

5525 to High Power Port (HPP) Cable



CAUTION: Do not connect power sources with different voltages to the HPP port in parallel as **OVERLOAD IS POSSIBLE AND CAN CAUSE DAMAGE TO EQUIPMENT.** Ensure the voltage at the HPP port does not exceed 75V.

POWERING YOUR DEVICES

1 POWER UP THE INTREPID

Press the Power button for 2-3 seconds to turn the Intrepid on or off. Your devices will not charge if you skip this step.


2 PLUG IN YOUR DEVICE

Plug the device you wish to power/charge into the appropriate port. You can charge up to 12 devices at once using the various ports.

3 TURN ON THE PORT

Press the ON/OFF button corresponding to the port you're using. For example, if you're charging a device from one or more of the 4 USB ports, press the **USB ON/OFF** button to activate the ports.


Note: The Wireless output will turn on automatically when a compatible device is detected.

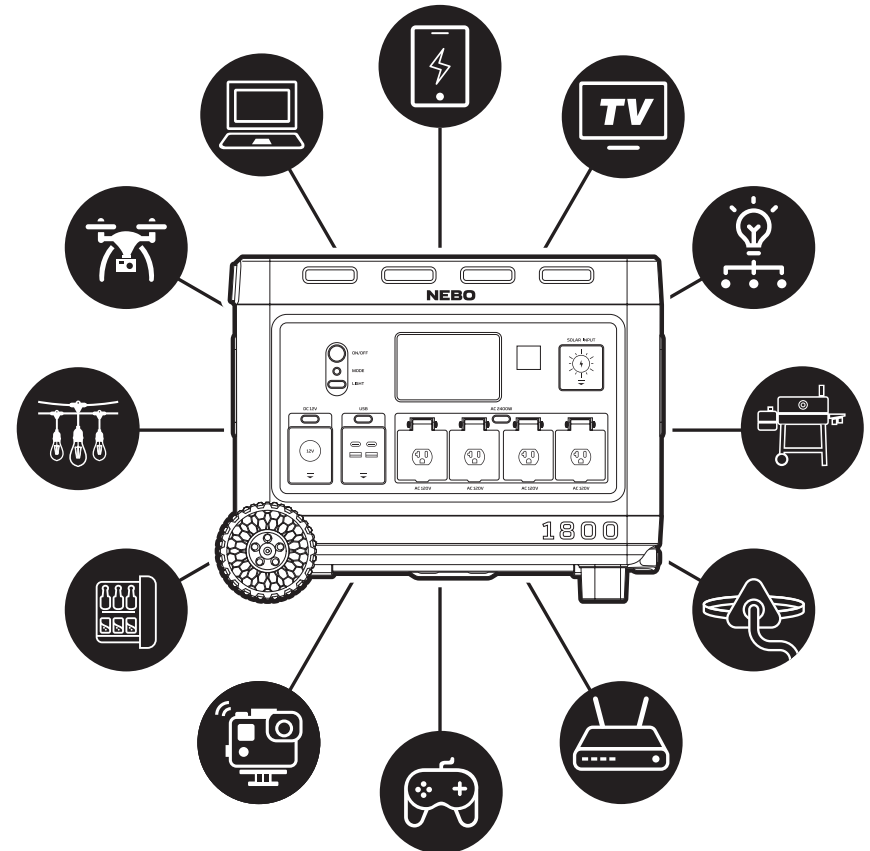

CABLE STORAGE

ON BOARD CABLE STORAGE:

Press button on hand grip and extend handle outward, making sure that it locks into place. Slowly tilt your power station upward to 90° degrees, so that it is resting on the rubber frame cushions. The cable storage system is located on the bottom of the power station. Gently wrap power cables around the cord holder.

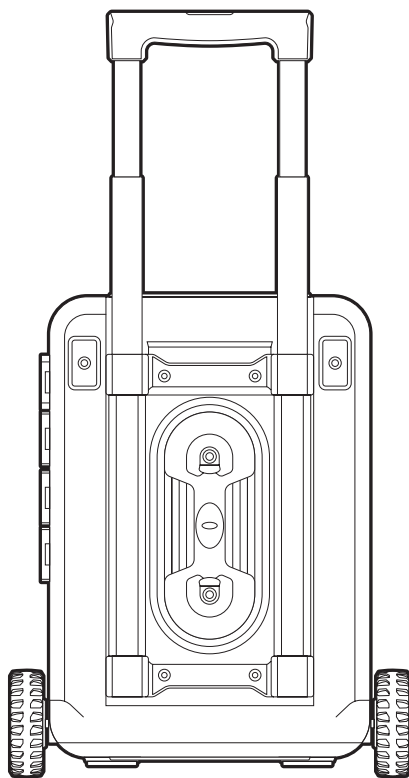

ADDITIONAL FEATURES

NEBO OVERDRIVE™

NEBO's exclusive technology provides extra versatility to power devices beyond its standard 2400W rating by dynamically adjusting the output voltage and allowing you to run power tools and appliances that require up to 3000W.

Note: Some appliances and tools have precise voltage and wattage requirements and may experience reduced relative performance. For best results, only connect one device when attempting to use this feature.

SWIFT CHARGE™

One of the quickest recharging rates on the market, the NEBO Intrepid 1800 can recharge from 5% to 100% in under 2 hours.

UNINTERRUPTIBLE POWER SUPPLY (UPS)

UPS mode ensures uninterrupted power supply during power outages or fluctuations by automatically switching to battery power. This protects connected devices from power loss and maintains continuous operation of connected devices.

PURE SINE WAVE INVERTER

The integrated inverter provides 2400W of smooth and efficient power that is safe for sensitive devices like medical equipment but powerful enough for larger appliances and tools.

MAINTENANCE AND STORAGE

EQUIPMENT CLEANING

- Make sure the device is unplugged and no devices are connected.
- Wipe with a clean, dry cloth.
- Do not use corrosive cleaners or solvents.
- Blow out debris from ports with compressed air.
- Remove any foreign objects, dirt or other obstructions from the vents on both sides. Do not allow debris, dirt or other blockage to enter the equipment.



CAUTION: To avoid the risk of electric shock, do not use metal objects to clean the ports.

STORAGE

- When not in use, store the Intrepid 1800 in a cool, dry place.
- Do not store in direct sunlight. Excessive temperature will lead to reduced service life, overheating and fire.
- Extremely cold conditions below the specified storage range can also impair the performance and service life of the equipment.
- Please keep away from corrosive chemicals and gases.
- Do not cover the equipment with towels, clothes or other items.
- Regularly check the side vents for dust and foreign matter, and clean them according to the cleaning procedures specified in the manual.
- After taking it out of storage, perform a visual inspection to ensure that the appearance of the equipment and all accessories are qualified. Check the vents on the intake and exhaust sides to make sure they are free of foreign objects.

BATTERY MAINTENANCE:

- To get the maximum life out of your battery, we recommend that every 3 months you charge the Intrepid for 2 hours. During charging, the fans may turn on and the unit may get warm. This is normal. Leave the unit plugged in until the fan stops.

DISPOSAL / RECYCLING



Do not put the device and its accessories in the trash can. Items must be properly handled in accordance with local laws and regulations. For additional information, please see www.epa.gov.

TRANSPORT OF DANGEROUS GOODS

The **NEBO Intrepid 1800** meets all legal requirements for the transportation of dangerous goods. The capacity of the lithium battery pack exceeds 100Wh.

According to international standards, if the power station is transported by air, it must be transported in accordance with IATA standard packaging. The instructions and labeling requirements of the International Air Transport Association and related declarations must be completed.

TECHNICAL SPECIFICATIONS

INPUT

AC	1x AC 100V-130V, 10A 60Hz (1200W Max)
DC	1x High Power Port (HPP) Port 12-75V, 25A (800W Max)

OUTPUT

AC	4x AC Ports 120V 60Hz, 2400 Rated (4800W Surge)
DC	2x DC5521 Ports 12V/10A (120W Max) 1x CLA/Car Port 12V/10A (120W Max)
USB	2x USB-A, QC (Quick Charge) 18W (36W Max) 2x USB-C, Power Delivery (PD) 100W (200W Max)
Wireless	1x Charging Pad (10W Max)
LED	1x Floodlight (5W Max)

BATTERY

Chemistry	Lithium Iron Phosphate (LFP)
Energy	1843.2Wh, 51.2V
Capacity	36000mAh (6*6000mAh)

INVERTER

Type	Pure Sine Wave
------	----------------

UNINTERRUPTIBLE POWER SUPPLY (UPS)

Switching Time	<10 milliseconds (ms)
----------------	-----------------------

PRODUCT

Dimensions	17.6 x 15.3 x 13.6 inches (44.7 x 38.9 x 34.5 cm)
Weight	59 lb (26.75 kg)

LIST OF FAULT CODES

Error Code	Potential Cause	Solutions
	High temperature warning	Please stop using the product and let it cool down until the icon disappears.
	Low temperature warning	Please stop using the product and let it warm up until the icon disappears.
E01	Battery overvoltage	Please disconnect the charging cable and stop charging.
E02	Battery undervoltage	Please disconnect the output and charge the device.
E03	Inverter overheating	Please disconnect the output and wait 1-2 hours before operation.
E04	Abnormal input voltage	Please disconnect the charging cable.
E05	Abnormal grid frequency	Please disconnect the charging cable.
E06	Abnormal output voltage	Please contact customer service center.
E07	Short circuit is detected on one of the output port	Please disconnect the output and check the electrical equipment.
E08	Overload is detected	Please disconnect output.
E09	Inverter failure	Please contact customer service center.
E16	Charge overload	Please disconnect the output load.

NOTE: When the DC load is abnormal, the system will automatically turn off the output and will not show the fault code. Please disconnect the output and check the electrical equipment then try again. When the USB load is abnormal, the corresponding output power will be zero and the system will not show the fault code. Please disconnect the outputs and check the electrical equipment, then try again.

TROUBLESHOOTING

OUTPUT PORTS WILL NOT TURN ON

1. Check whether the connecting cable has been inserted in the right place.
2. Check whether the total output power exceeds the rated output power.
3. Check whether the temperature of the equipment outside of its operating range.

THE POWER STATION IS NOT CHARGING

1. Confirm that the AC socket on the wall and the AC charging cable are fully inserted into the AC input terminal.
2. The device cannot be charged immediately after it is discharged. Please put it aside for an hour and try again, because it may enter the over-temperature protection.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

PRODUCT REGISTRATION

Scan the QR code below to register your product.
For product information and videos, visit **WWW.NEBOPOWER.COM**



PRODUCT REGISTRATION

ACTIVATE YOUR WARRANTY TODAY

Your NEBO power station has a two year warranty from the date of purchase. By registering your warranty, you will help protect your investment and save a record of your purchase with our customer service team.

NEBO[®]
POWER POSSIBILITIES[®]

WWW.NEBOPOWER.COM