


Operation Panel Instructions

1.PROGRAMMING

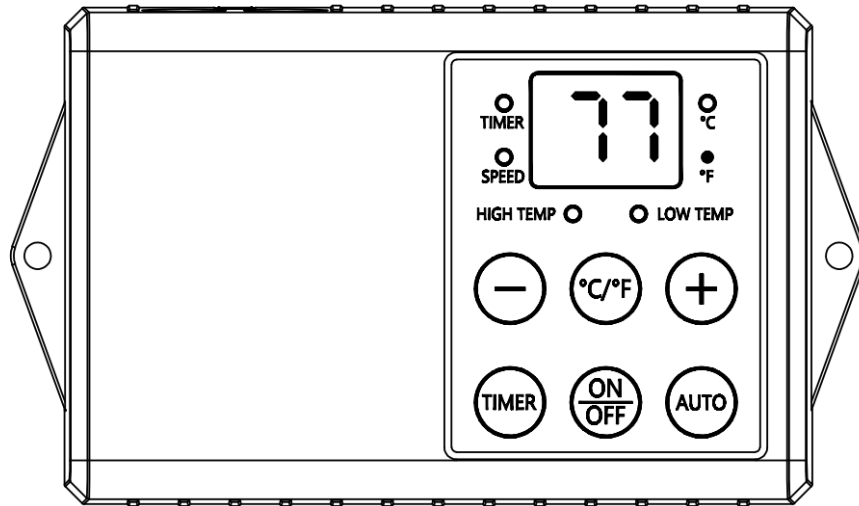

BUTTON DESCRIPTION

1)TIMER BUTTON

Press the button to set the fan's shutdown time.

2)ON/OFF BUTTON

Press the button to set power ON/OFF.

3)AUTO BUTTON

Press the button to set the following 4 automatic modes: Environmental temperature display mode, low-temperature mode, high-temperature mode and cancellation of high-low temperature mode.

4)- BUTTON

Press the button to reduce the set parameters.

5)°C/°F BUTTON

Press the button to set the temperature conversion between degrees Celsius and Fahrenheit.

6)+ BUTTON

Press the button to add setting parameters.

2. OPERATION DESCRIPTION

1) POWER ON/OFF

Press the button to set power on and off.

2) - BUTTON


Press the button to reduce the set parameters.

3) + BUTTON

Press the button to add setting parameters.


4) TIMER

Press the button to set the fan's shutdown time, press the "+" or "-" button to set the fan off time, The timing range is from 1 to 18 hours.

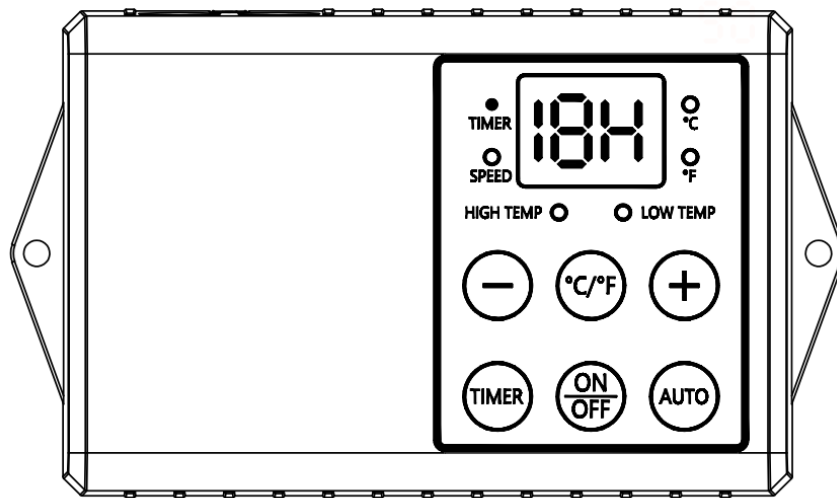


5) AUTOMATIC MODE: ENVIRONMENTAL TEMPERATURE DISPLAY

Press the button, and the display will show the current ambient temperature, The fan will operate in the previous mode.

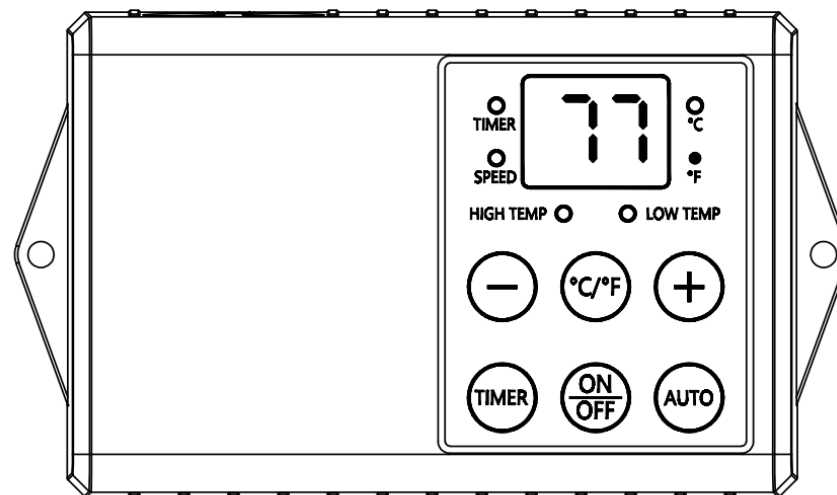


6)AUTOMATIC MODE: LOW TEMPERATURE

Press the button the low-temperature mode indicator light remains constantly on, and the display screen flashes. Press the + or - button to set the temperature for the low-temperature mode. When the ambient temperature is lower than or equal to the set temperature, the fan will start running, when the ambient temperature is higher than the set temperature, the fan will stop.

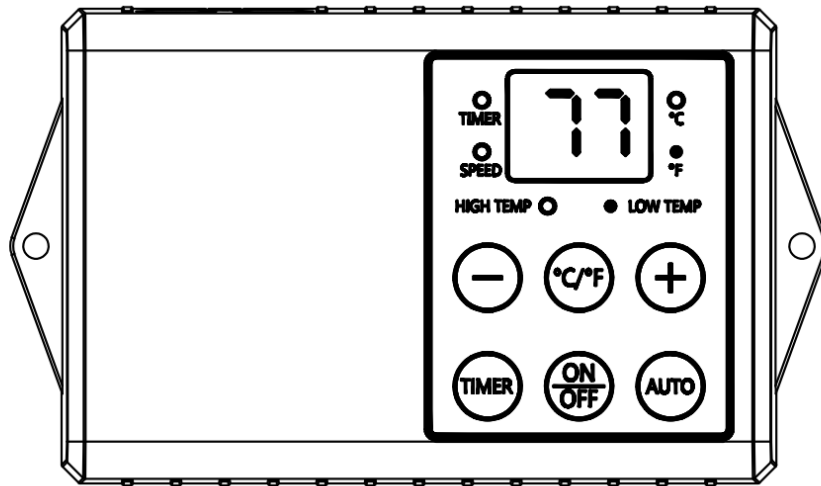


7)AUTOMATIC MODE: HIGH TEMPERATURE

Press the button, the high-temperature mode indicator light will remain on continuously, and the display screen will flash. Press press the "+" or "-" button to set the temperature for the high-temperature mode. When the ambient temperature is higher than or equal to the set temperature, the fan will start running; when the ambient temperature is lower than the set temperature, the fan will stop.

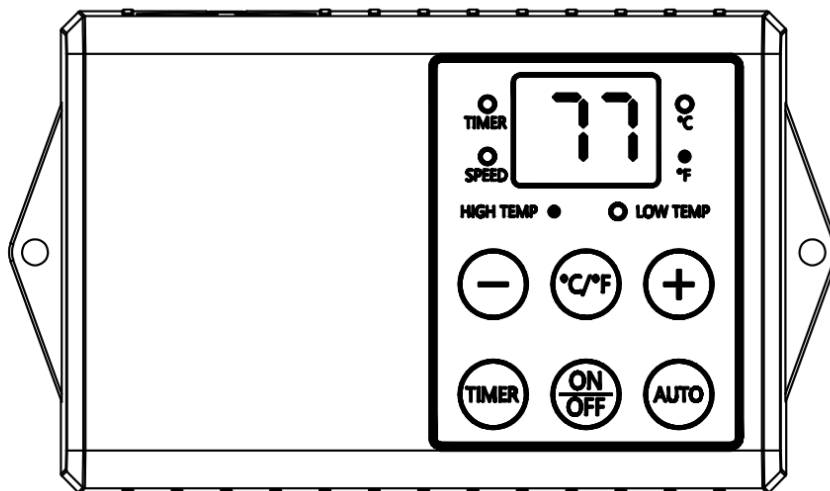

8)AUTOMATIC MODE: CANCEL HIGH AND LOW TEMPERATION


Press the button to cancel the high and low temperature mode and switch to the normal mode. The high-temperature mode indicator will go off, and the fan will operate as it did in the previous normal mode.

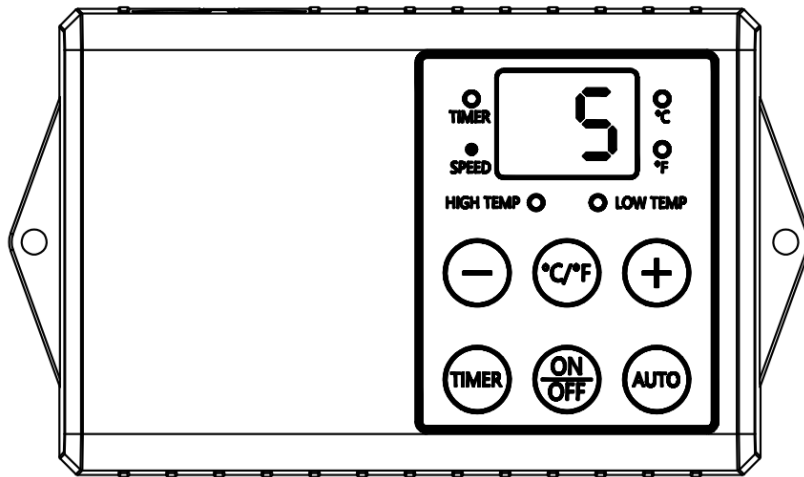

9)CELSIUS AND FAHRENHEIT SWITCH

In the startup state, press the " °C/°F " button to set the Celsius and Fahrenheit units to switch.

Remote Control Usage Instructions

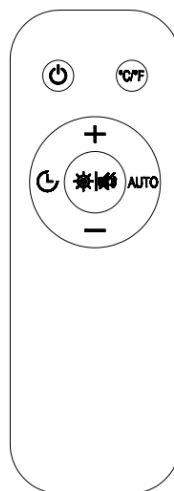

NOTE:

Batteries are not included.
Install 2 AAA batteries
before using the remote.

1) BUTTON

Plug in the power plug, press the button for more than 5 seconds. There will be a beep sound, and the remote control will be successfully paired.

2) BUTTON

Press the button to add setting parameters.

3) BUTTON

Press the button to reduce setting parameters.

4) AUTO BUTTON

Press the button to set the following automatic modes: high temperature mode, low temperature mode, high humidity mode, low humidity mode.

5) TIMER BUTTON

Press the button to set the fan's shutdown time, press the "+" or "-" button to set the fan off time, The timing range is from 1 to 18 hours.

6) °C/°F BUTTON

Press the " °C/°F " button to set the Celsius and Fahrenheit units to switch.

7) BUTTON

Press the button to turn on/off the screen brightness. Press the button for more than 3 seconds to turn on/off the sound.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.