



Sherman-P

User Manual

Catalogue

1.Overview of the User Manual	1
2.Riding Instructions	2
2.1 Safety Checklist	3
2.2 Permitted & Prohibited Users	4
2.3 First-time Use & Beginner Training	5
2.4 Pre - ride Check - List	6
2.5 Protective Gear & Wearing Requirements	7
2.6 Prohibited Riding Scenarios	8
2.7 No Dangerous Operations	9
2.8 Vehicle Alerts, Speed-Limiting and Pedal Tilt- Back	10
2.9 Low- Battery, High / Low Temperature and Power-Margin Risks	11
2.10 Handling After Falls, Crashes and Water Exposure	12
2.11 Battery and Charging Safety	13
3.Unlocking Sleep Mode	14
4.Description of Product	15
4.1 Function Schematic	15
4.2 Product Size Drawing	16
4.3 Product Specification	17
5.Setting Page	18
5.1 Introduction of Display Basic Page	18
5.2 Information	19

5.3 Button Settings Introduction	20-21
5.4 Password setting	22
5.5 Lock Mode and Unlock	23
5.6 Pedal Settings	24
5.7 Tilt-back Settings	25
5.8 Over-speed Alarm Settings	26
5.9 Screen Brightness Settings	27
5.10 Vehicle Balance Calibration	28
5.11 Sleep Mode Setting	29
5.12 Kilometers/Miles Unit Switching	30
5.13 Voltage Adjustment	31
5.14 Low Battery Mode Setting	32
5.15 High Speed Mode	33
5.16 Angle Protection Settings	34
5.17 Button Volume Settings	35
5.18 Charging Voltage Settings	36
5.19 Acceleration Assist Settings	37
6.Error Codes and Causes	38
7.Closed Hydraulic Suspension	39
8.Maintenance, Modification and Non- Original Accessories	40
9.Lending, Transfer and Local Regulations	41
10.Abnormal Conditions, Accidents and After-Sales Service	42-45
11.Packing List	44

1.Overview of the User Manual

Thanks for purchasing LeaperKim electric unicycle. We will wholeheartedly provide you with satisfactory products and services.

This vehicle is strictly prohibited to drive on the motorway. It must be confirmed that it fits to the requirements of local laws and regulations. Do not use this product in the areas prohibited by laws and regulations. Do not use this product at the speed specified by local laws and regulations.

In order that you can ride LeaperKim electric unicycle more safely, please carefully read and understand all the product information and precautions listed in this manual before riding, and refer to the instruction to use LeaperKim electric unicycle.

Please maintain the vehicle regularly, which will help to keep the performance and resale value of the vehicle product.

Please keep this manual for future after-sales use.

Your satisfaction with LeaperKim electric unicycles is our driving force!

Guangzhou Coyote Intelligent Equipment Co., Ltd

2.Riding Instructions

This document is a statutory safety notice with legal notification effect. By powering on and riding the unicycle, the user shall be deemed to have fully acknowledged, understood and agreed to all terms, voluntarily assumed all riding risks, and confirmed that the Company has fully fulfilled its safety notification obligations. The Company shall be exempted from or relieved of corresponding liabilities in accordance with the law.



Dangerous

This product is an electric self-balancing unicycle, a personal mobility and recreational device with inherent riding risks. During riding, there are risks of loss of balance, loss of control, crashes, falls that may result in serious personal injury or even death. Reading and complying with these safety notice, the user manual, vehicle alarms and speed-limit reminders can reduce risks, but cannot eliminate them entirely. If you cannot understand or fail to abide by these safety instructions, do not use this product.

Users must read and understand all safety warnings in this user manual before using the product. Even if you follow all instructions, accidents may still result from road conditions, other people's actions, vehicle faults or your physical condition. The company is not legally responsible for any injuries or property damage caused by ignoring safety instructions or the user manual, breaking local laws, wrong operation, modification, over-speeding or using non-original parts.



Warning

The unicycle stays stable through both the rider's balance skill and the vehicle's dynamic control system. Improper operation, over-speeding, riding fast with low battery, sharp acceleration, hard braking, sharp turning, ignoring alerts, ignoring tilt-back warnings, slippery surfaces, uneven roads, crashes, water damage and product modification may cause the vehicle to lose balance, resulting in falls, crashes, serious injury or even death.

These instructions apply to all electric unicycle products from our company. For specific parameters including speed, load weight, slope, tire pressure, temperature, water-resistance and charging, please refer to the user manual, vehicle nameplate, App prompts and official safety announcements. All the above documents carry equal legal validity.

Our products may undergo design changes and improvements during production and sales. In case of any inconsistency with this manual, the actual product shall prevail.

2.1 Safety Checklist

Item	Requirement
Must- do	Wear helmet and protective gear; complete beginner training; check battery level, tire pressure, tires, pedals, screws, alerts and fault codes before riding.
Must- avoid	Motor vehicle lanes, crowded areas, slippery / flooded / icy surfaces / muddy ground, potholes and steps, poor night visibility, low- battery or fault- alert status.
Must- stop use	Immediately stop using the vehicle when you get alerts, vibration, speed limiting, pedal tilt- back, falls, crashes, water exposure, strange odors, smoke or abnormal overheating.
Prohibited actions	Ignoring alerts or pedal tilt- back; high- speed riding under low battery; sharp acceleration and hard braking; jump stunts; carrying passengers; product modification; firmware cracking; using non- original chargers.

2.2 Permitted & Prohibited Users

The following persons are strictly prohibited from using this product. Users voluntarily assume all personal-injury, property and legal risks:

1. Persons under 14 years old, or those who have not reached the minimum age required by local laws and regulations;
2. Persons under the influence of alcohol, or after taking medicines that may impair judgment, reaction and balance;
3. Persons with heart disease, high blood pressure, epilepsy, vertigo, balance disorders, movement disorders, or any other medical conditions unsuitable for strenuous exercise;
4. Pregnant women;
5. Persons whose height or weight exceeds the limits stated in the user manual;
6. Persons who cannot understand the user manual, App safety alerts or vehicle warning signals;
7. Persons who have not completed beginner training and cannot independently mount, dismount, ride straight at low speed, turn and brake to a stop.

Minors shall learn and use this product only under guardian supervision. Vehicle owners must not lend the vehicle to anyone who does not meet the above requirements.

2.3 First-time Use & Beginner Training

Warning

We recommend users purchase personal accident insurance and third-party liability insurance suitable for electric unicycles before use. Local laws in some regions may require mandatory insurance. Please check and comply with relevant local regulations. Before first-time use, users must complete vehicle activation, review safety instructions and finish the beginner tutorial. When activating the vehicle or logging into the App for the first time, confirm that you have fully read and understood these safety instructions.

1. Beginners shall practice on flat, dry, open ground free of motor vehicles, pedestrians and obstacles.
2. First-time practice should be assisted by an experienced adult.
3. Do not practice on roads, among crowds, on slopes, slippery surfaces, at night or in complex environments.
4. Do not enter public areas or open roads until you have fully mastered mounting, dismounting, low-speed straight riding, deceleration, braking to stop and turning.
5. Do not skip, bypass or tamper with the beginner tutorial, speed-limit logic or safety-confirmation procedures.

Usage Stage	Safety Requirements
New vehicle / Beginner Mode	Keep low speed, low-sensitivity or stay in Beginner Mode.
Initial mileage after tutorial completion	Continue practicing at low speed. Avoid high speed, sharp acceleration, hard braking and complex road conditions.
Disabling beginner speed limit	You must fully understand the risks of falls, crashes, serious injury or even death.
Borrowing or changing rider	New riders shall re-read these instructions and start over with low-speed beginner training.

2.4 Pre - ride Check - List

Complete at least the following checks before every ride. Do not ride the vehicle if any item shows an abnormality.

Check Item	Action for Abnormality
Battery level	Do not ride at high speed with low battery. Charge the unit promptly.
Tire pressure	Inflate tires if pressure is insufficient. Do not ride with low tire pressure.
Tire condition (bulges, cracks, heavy wear)	Stop use and replace the tire.
Pedals (looseness, deformation, strange noise)	Stop use and inspect / repair.
Pedal anti-slip surface	Replace if damaged, peeling or slippery.
Housing, frame and screws (loose or damaged)	Stop use and inspect / repair.
Tire rotation smoothness	Do not ride if there is abnormal resistance or strange noise.
Alerts or App fault codes on power-on	Do not ride until faults are cleared.
Signs of fall, crash or water exposure	Do not ride or charge before full inspection.
Accessories such as clip-jump and seat	Do not ride unless firmly secured.

2.5 Protective Gear & Wearing Requirements

You must wear a safety-standard-compliant helmet and fasten its chin strap for every ride. Wrist guards, knee pads, elbow pads, arm guards, gloves and non-slip footwear are also recommended. For high-speed riding, off-road riding or night-time riding, wear a full-face helmet, chest-back protector and reflective gear. Failure to wear protective gear greatly increases the risk of head, facial, wrist, knee and spinal injuries in the event of a fall.



Prohibited Wearing

Do not ride bare-footed, or while wearing slippers, high-heeled shoes, long dresses, loose-fitting clothing or any other items that may impair control, get caught in the wheel or cause slipping.

2.6 Prohibited Riding Scenarios

Do not use this product under the following conditions:

Prohibited Scenarios	Risk Note
Motor-vehicle lanes, arterial roads, highways and public roads	Mixing with motor vehicles may cause severe injury or death.
Roads or areas where electric unicycles are banned by law	You must check and follow local laws and regulations.
Crowded areas, shopping malls, subway stations, school gateways	Risk of hitting others or being disturbed by pedestrians.
Rain, snow, icy surfaces, slippery and muddy ground	Reduced grip may lead to skidding and falls.
Puddles, pooled-water and water-covered surfaces	Water ingress may cause short-circuit and loss of control.
Sand, gravel, fallen leaves, potholes, curbs and steps	Wheel jamming, bouncing or loss of balance may occur.
Uphill or downhill slopes steeper than the manual-specified limit	Insufficient power, braking performance or grip.
Night-time areas with no lighting or poor visibility	Poor ability to detect obstacles.
Harsh conditions: strong wind, heavy rain, extreme high or low temperature	Reduced handling, battery output and braking performance.
Low-battery, over-temperature or fault-alarm status	Insufficient safety margin of the vehicle.
After falls, crashes or water exposure without inspection	Hidden faults may exist.

2.7 No Dangerous Operations



Dangerous

When the unit triggers alerts, vibration, speed-limiting or pedal tilt-back, do not keep accelerating and do not lean your body forward. Ignoring these limits may cause loss of balance, resulting in falls, crashes, serious injury or even death.

1. Do not perform sharp acceleration, hard braking or sharp turning.
2. Do not keep accelerating when the unit gives alerts, vibration, speed-limiting or pedal tilt-back.
3. Do not attempt to exceed speed limits, disable warnings, tamper with firmware or bypass safety protections.
4. Do not ride at high speed with low battery.
5. Do not perform long-duration high-power climbing, off-road hill jumping or repeated sharp acceleration.
6. Do not pass speed bumps, potholes, steps, curbs or gravel roads at high speed.
7. Do not jump, launch off ramps, perform stunts, ride with one foot, ride backwards or weave side-to-side.
8. Do not carry passengers or children, tow others or be towed by other vehicles.
9. Do not use mobile phones, headphones, cameras or any other distracting devices while riding.
10. Do not hold objects in both hands or carry large items that affect balance.
11. Do not modify the battery, motor, controller, tire, pedals, suspension, firmware or any safety-related components.
12. Do not use non-original chargers, batteries, critical structural parts or unapproved accessories.
13. Do not disassemble or repair the unit unless you are a qualified professional. Self-disassembly will void your product warranty.

2.8 Vehicle Alerts, Speed-Limiting and Pedal Tilt-Back

When the unit triggers alerts, vibration, speed-limiting, pedal tilt-back or risk pop-ups in the App, the vehicle is nearing or has entered safety-protection status. You must stop accelerating at once, reduce speed, and stop for inspection in a safe location. Do not lean forward, keep accelerating or attempt to bypass these limits. Such actions may cause loss of balance, leading to falls, crashes, serious injury or even death.

Alert Type	Meaning	Mandatory User Action
Over-speed alert	Current speed is approaching the safe upper limit	Slow down immediately
Pedal tilt-back	The unit is enforcing acceleration limits	Do not lean forward; slow down gradually
Low-battery alert	Battery output capacity is reduced	Reduce speed and stop to charge as soon as possible
Over-temperature alert	Controller / motor / battery temperature too high	Stop for cooling; do not ride under high-power conditions
Over-current / overload alert	Current load exceeds the safe range	Stop climbing, sharp acceleration or overloaded operation
Fault alert	The unit detects an abnormality	Stop riding right away and contact official after-sales support
Post-fall / post-crash alert	Hidden faults may exist in the vehicle	Do not resume riding until full inspection is completed

2.9 Low-Battery, High / Low Temperature and Power-Margin Risks

In low-battery conditions, the vehicle's available power, acceleration, climbing capability and safety margin will decrease. Riding at high speed, accelerating sharply, climbing uphill, riding against headwinds or carrying loads under low-battery conditions may prevent the unit from delivering enough power to maintain balance, which can result in sudden loss of balance or falls.



Dangerous

Once the unit shows low-battery prompts, speed-limiting, alerts or auto power-off, do not restart it to continue riding. Push the vehicle or recharge it before further use.

Risk Scenarios	Risk Note	Proper Operations
High-speed riding with low battery	Insufficient power margin; balance may not be maintained.	Reduce speed immediately; stop and charge as soon as possible.
Low-temperature environment	Reduced battery discharge capability.	Reduce speed; avoid sharp acceleration and climbing.
High-temperature environment or over-temperature alert	Controller / motor / battery may enter protection mode.	Stop for cooling; do not ride under high-power conditions.
Long downhill slope	Continuous braking may trigger over-charge, over-temperature or system protection.	Control your speed; get off and push if necessary.
Strong headwind / over-load / uphill riding	Significantly increased load.	Reduce speed; avoid sharp acceleration.

2.10 Handling After Falls, Crashes and Water Exposure

Warning

After a fall, crash, water exposure or heavy impact, or when the unit shows abnormal alerts, hidden damage may exist to the battery, controller, sensors, tires, pedals, housing or structural components — even if the unit can still power on. Continuing to ride may cause sudden loss of control, power cut-off, alerts or loss of balance. Stop using the unit immediately. Do not use it again until it has been inspected and approved by official after-sales support. Users must not conceal incidents such as falls, crashes or water exposure, and must not keep using the unit or transfer it to others. If personal injury occurs due to concealed incidents, the user shall bear corresponding legal liabilities.

Dangerous

If the unit gets wet, do not charge it, do not power it on for testing and do not ride it. Keep it away from flammable materials, stop use and contact official after-sales support.

In case of severe collision, cracked housing, deformed battery compartment, strange odors, smoke, abnormal heating, failed power-on / power-off or constant alerts: stop using the unit right away and keep it away from flammable materials.

2.11 Battery and Charging Safety


Only use the original- manufacturer charger and manufacturer- approved batteries, wiring harnesses and charging ports. Using non- original chargers, non- original or modified batteries may cause over- charging, short- circuit, fire, explosion, vehicle loss- of- control or personal injury.

Do not charge under any of the following conditions:

1. The charging port, charger, charging cable or power socket is wet.
2. The unit has suffered water exposure, a fall or crash and has not been fully inspected.
3. The battery case is damaged, bulging, gives off strange odors, smokes or shows abnormal heating.
4. Ambient temperature is outside the charging- temperature range specified in the user manual.
5. Use non- original or unapproved chargers.
6. Flammable materials are nearby, or the unit is placed in enclosed, high- temperature or direct- sunlight environments.

Keep good ventilation during charging and stay away from flammable items. Disconnect the power once charging is finished. When storing the unit for a long time, recharge it regularly following the user- manual instructions to prevent damage caused by over- discharge.

3.Unlocking Sleep Mode

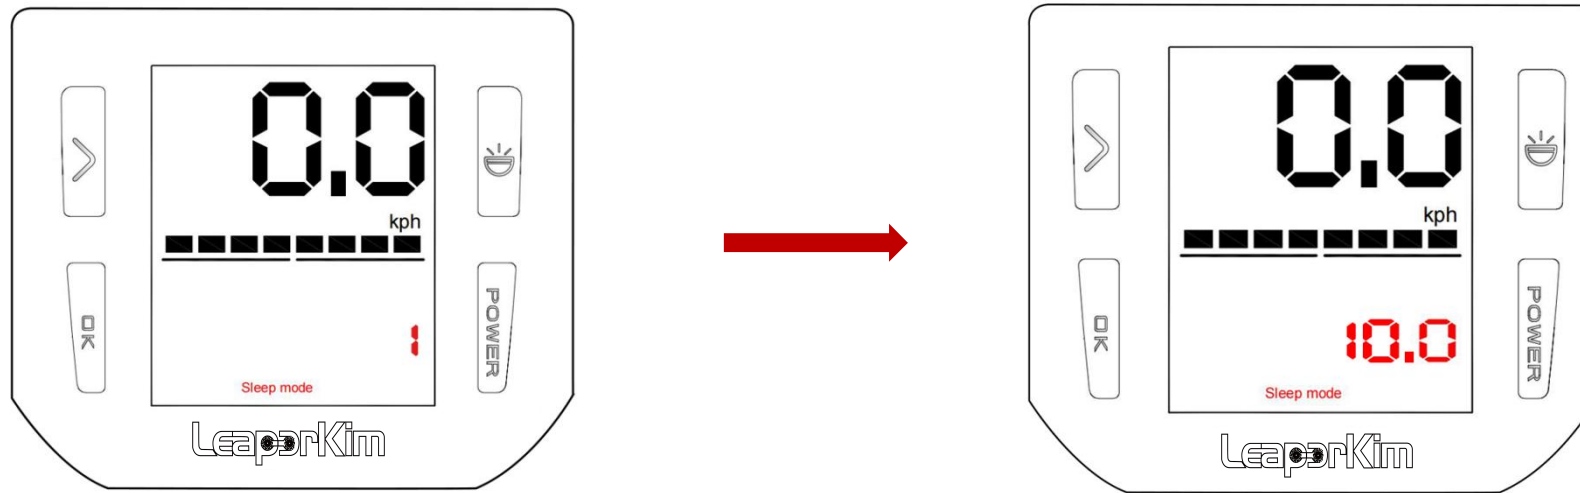

- Long press and hold the 'POWER' button for 10s, number on display will change from 1 to 10, the vehicle will make a long sound and release button to unlock Sleep Mode;
- Connecting charger will allow you to unlock Sleep Mode directly;

Setting it to Sleep Mode during transportation prevents the 'POWER' button from being accidentally pressed to power it on;

4.Description of Product

4.1 Function Schematic



4.2 Product Size Drawing

720



215



513

515



630




4.3 Product Specification

Model Name	Sherman-P	Charge Port	Dual charging ports support up to 20A.
Safe Speed	19km/h	Headlight	20W, 2500lm high-brightness lens headlight.
Motor Power	Rated Power 3800W Peak power 10000W	Taillight	Turning, braking warning light.
Operating Temperature	-10℃~80℃	Software	
Battery	Samsung INR21700-50S, 2 packs, 42 strings in 3 parallel (176.4V).	Fault Self-Inspection	High temperature, over-discharge, over-voltage of left and right battery packs, charging current exceeding the set value, motor hall abnormality, high temperature of vehicle, etc.
Max Load	120kg	Angle Protection	Front and back tilt to 68°, the left and right tilt can be set to 35°~75° through display.
Charger	176.4V, 5A	Riding Model	Riding hardness value could be set from 0%-100% through display.
Charger Time	6h (5A), 3h (10A)	PWM Tilt-back	PWM tilt-back value could be set from 30%-100% through display.
Color	Black	Speed Tilt-back	Speed tilt-back value could be set from 10kph-200kph through display.
Dimension and Weight		Speed Alarm	Speed alarm value could be set from 10kph-200kph through display.
Dimension	515mm*210mm*740mm	Button Volume	Button volume value could be set from 0%-100% through display.
Net Weight	≈52kg	Low Battery Mode	Could be switched on through display.
Pedal Dimensions	130mm*310mm	High Speed Mode	Could be switched on through display.
Height of the Pedals	20mm height adjustment range	Low Voltage Protection	Alarm at 136.5V, tilt back at 132.3V. In Low Battery Mode, alarm at 128.1V, tilt back at
Hardware		Temperature Alarm	80℃
Shock Absorption	Closed Hydraulic suspension, independent adjustment of rebound and compression damping, travel range 90mm.	Other Functions	Multiple functions adjustable, supports data logging.
Pedal	Magnesium alloy material.	Hall Error Fixment Algorithm	Smart Field Weakening to speed up.
Intelligent Protection Board	Monitoring voltage of each string, with 6 different zones for temperature monitoring, current display, etc.	No Hall Emergency Mode	Supports lightweight off-roading.
Control Board	Double layer control board, aluminum substrate thermal conductivity, the use of copper strips and columns to accelerate the conductivity and heat dissipation, 36 high-voltage mos, support up to 960A current.	Smart Field Weakening to Speed up	Increase speed safety margin through software algorithm.
Motor	Magnesium alloy rim, wider and thicker side cover.	Motor Anti Blocking Rotation	Blocking motor rotation will not damage motor or controller.
Tire Size	2.75-14	APP	
Trolley Handle	Magnesium alloy hidden trolley handle.	Vehicle Information	Vehicle speed, voltage, distance and battery information are viewable.
Display	Displays speed, voltage, mileage, mode switching, calibration, battery status, etc.	Vehicle Setting	Vehicle mode changing, calibration, power tilt-back setting, speed tilt-back setting, speed alarm setting etc.

5.Setting Page


5.1 Introduction of Display Basic Page

After powering on vehicle, press and hold the 'OK' button for 2s, after 2 beeps you will enter the setup page.

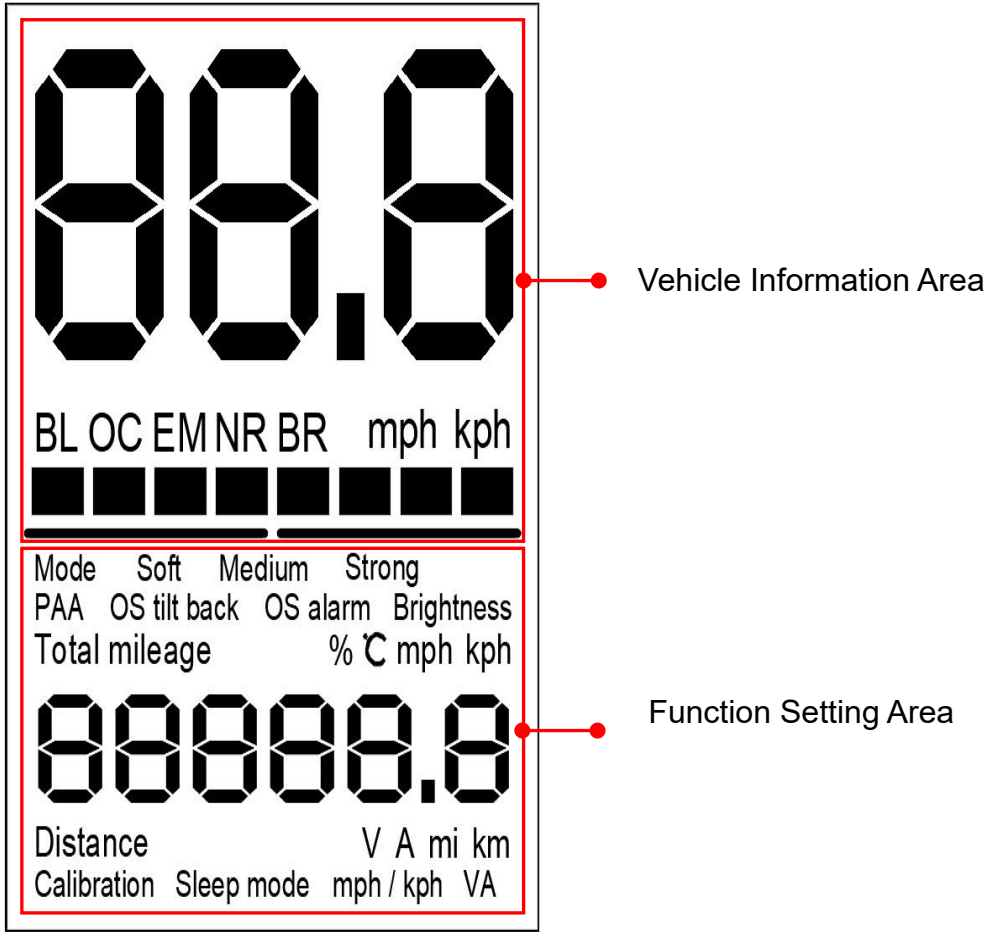

Icon	Name
Distance	Short distance
Total mileage	Total mileage
°C	Bottom board temperature
V	Battery Voltage
A	Output Current
V A	Output Power

5.2 Information

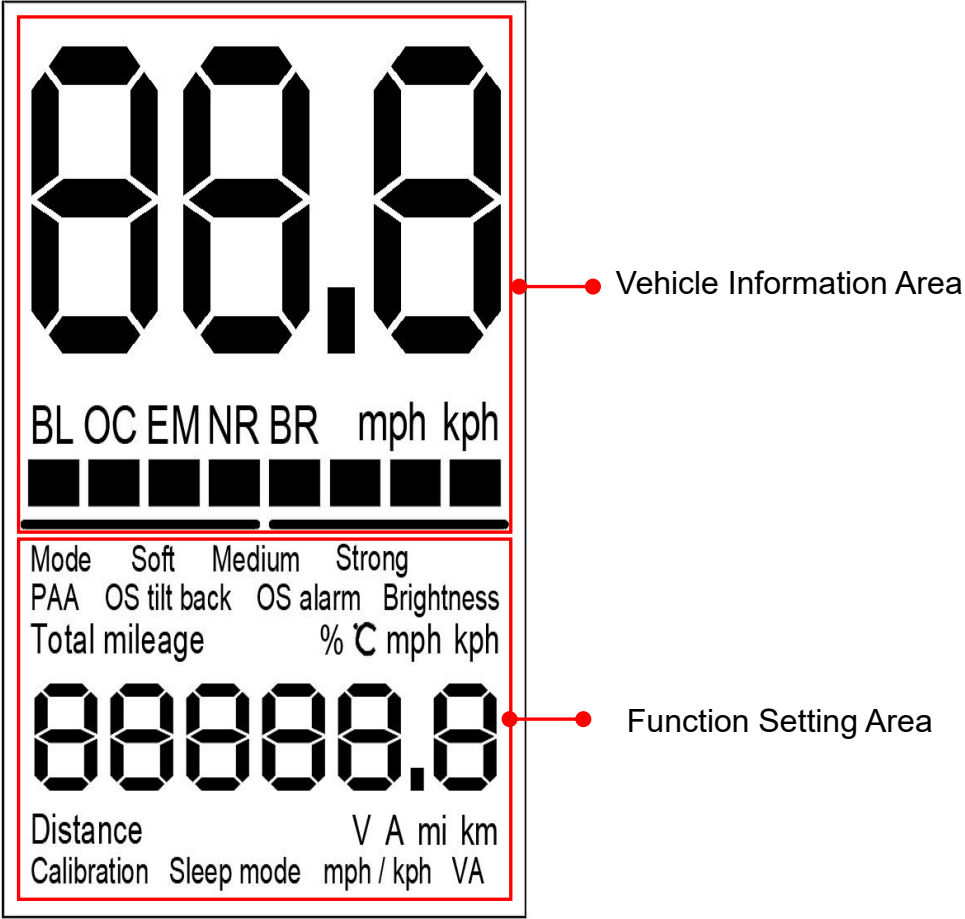

Icon	Name
88.8	Speed per hour
BL	Left battery pack status
OC	_____
EM	_____
NR	_____
BR	Right battery pack status
mph	Miles per hour
kph	Kilometer per hour
■ ■ ■ ■ ■ ■ ■	Vehicle power
— —	Left battery pack signal
— —	Right battery pack signal

5.3 Button Settings Introduction

Switch button

On the short mileage interface, long press for more than 3s to clear short mileage to 0

Light button


Short press to turn on/off headlight

Power button

1. Long press to turn on/off
2. Short press to turn on/off taillight

OK button

1. Long press enter setting mode after 2 beeps.
2. Long press enter the advanced mode after 3 beeps.
3. Long press enter log mode after 4 beeps.
4. Long press enter left battery pack after 5 beeps.
5. In left battery pack mode, long press the 'switch' button to enter right battery pack mode.

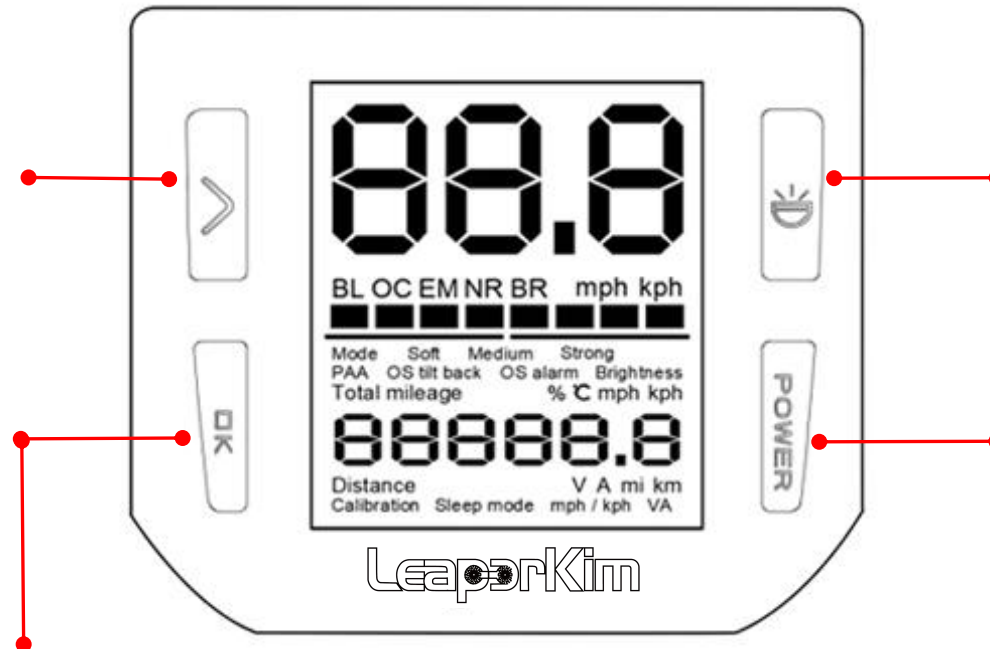

5.3 Button Settings Introduction



1. Power on wheel to enter basic page, long press 'OK' button on the basic page, after release it hearing two beeps to enter setting page;
2. On setting page, press 'Switch' button to select setting item, press 'OK' button to adjust the specific value of the setting item;
3. Short press 'OK' button is for forward settings; Long press 'OK' button for 0.5s and release it immediately after hearing one sound is backward settings;
4. After completed settings, press and hold the 'OK' button for 1s, release it until hearing the sound and display returning to basic page; Wait for 20s, it will save settings automatically, or power off it and re-power on will save it automatically. In these two ways to finish settings ;

5.4 Password setting



Figure 1


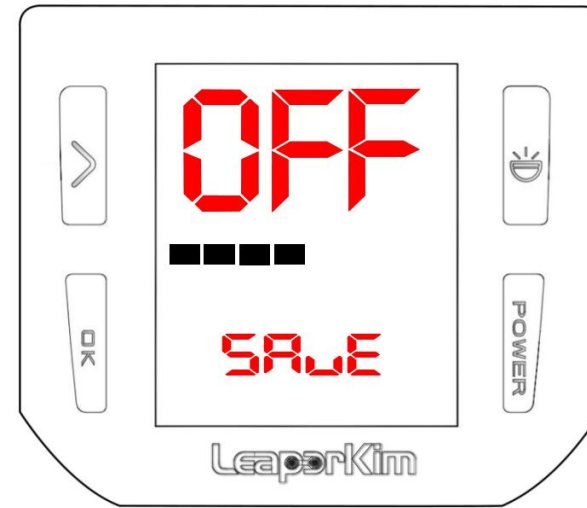


Figure 2

Password Setting :

- Step 1: Long press 'OK' button on the basic page to enter setting page; Short press the 'Switch' button to enter — — O P — — interface.
- Step 2: Input the old password (default: 000000). Press the 'Switch' button to select the digit position for modification, and press 'OK' button to change the content. The system will automatically switch to the new password setup page after the old password is verified. (Figure 1)
- Step 3: Set the new password, configure the lock mode(ON: Automatic locking for each operation, OFF: Manual locking mode). SAVE to confirm (Figure 2). Setting the password 000000 will cancel the password function.

5.5 Lock Mode and Unlock

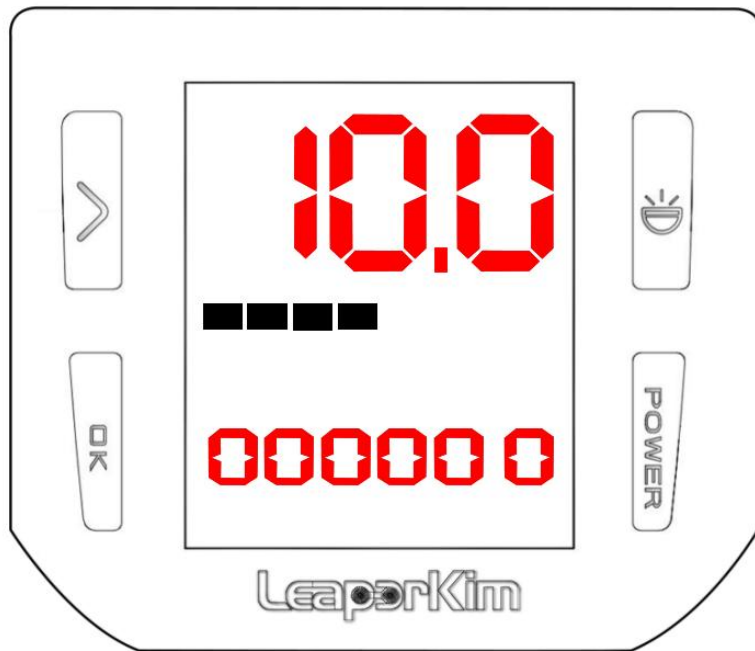

When in OFF mode, it needs to be locked manually:

- Method 1: Press and hold 'OK' button while pressing 'power' button;
- Method 2: Press 'power' button three times within 1 second, with the third press being a long press;

When in ON mode, automatic locking is enabled;

Unlocking: Enter the correct password and press the 'power' button to confirm.

Restrictions in case of password error:

- If the password is entered incorrectly, the vehicle cannot be power off for 5 minutes. It can be powered on by re-entering the correct password;
- If there are more than four incorrect password attempts, the locking time will be extended;
- If the vehicle stays on the locked interface for more than 20s, moving it will trigger an alarm.

5.6 Pedal Settings



Pedal softness settings:

- Long press 'OK' button to enter the pedal settings;
- Short press 'OK' button to adjust the value;
- Adjust the value from 0 to 32% as Soft; 34% to 66% as Medium; 68% to 100% as Strong;



Pedal angle adjustment:

- Short press the 'Switch' button to enter the pedal angle adjustment;
- Short press 'OK' button to adjust the angle value , $\pm 8^\circ$ can be adjusted;
- Foot pedal tilt angle, according to the user's personal habits and preferences to adjust it;

5.7 Tilt-back Settings



Speed tilt-back settings:

- Short press the 'Switch' button to enter the speed tilt-back settings ;
- Short press 'OK' button to adjust the speed value, the adjustable range is 10kph to 200kph, the speed tilt-back will NOT activate at 200 kph;
- For example: adjusting the speed value to 20kph, when vehicle's speed reaches 20kph, pedal will be slightly tilt-back to warn user, it has reached speed limit;
- Adjust settings properly according to your riding conditions. This feature is only an over-speed warning aid. Do not rely on it to control your riding speed.



Power tilt-back settings:

- Short press the 'Switch' button to enter the power tilt-back settings;
- Short press 'OK' button to adjust the power value, the adjustable range is from 30% to 200%, set it to 200% is to disable power tilt-back settings;
- For example: adjust the power value to 65%, when vehicle driving power reaches 65%, pedal will be slightly tilt-back to warn user, it has reached power limit;

5.8 Over-speed Alarm Settings



Function introduction:

- Short press the 'Switch' button to enter the over-speed alarm settings;
- Short press 'OK' button to adjust the speed value, adjustable range of 10kph ~ 200kph, the speed alarm will not trigger when set to 200 kph;
- Buzzer sound reminder, when the vehicle reaches the speed that the user set, buzzer will beep to warn user about the over-speed;


5.9 Screen Brightness Settings



Function introduction:

- Short press the 'Switch' button to enter screen brightness settings;
- Short press 'OK' button to adjust the brightness of the screen backlight, the adjustment range is 0-100%;


5.10 Vehicle Balance Calibration

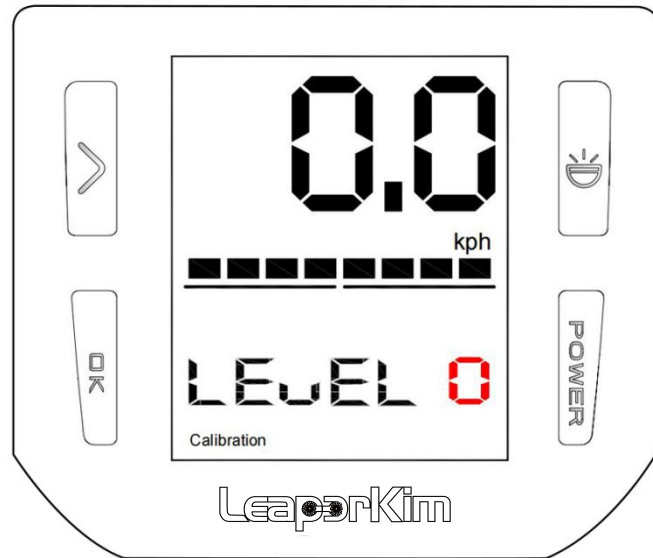

Function introduction:

- Short press the 'Switch' button to enter the Vehicle balance calibration;
- Vehicle leveling settings;
- Horizontally stand up the vehicle, when display shows '0', press 'OK' button, number '1' will appears on display, then vehicle power off, adjust the horizontal position of the vehicle to complete the horizontal angle adjustment. Keeping the vehicle stationary, press the 'OK' button again, number '3' will appears on display then vehicle makes two beeps. These mean the vehicle complete the horizontal calibration setting;


5.11 Sleep Mode Setting

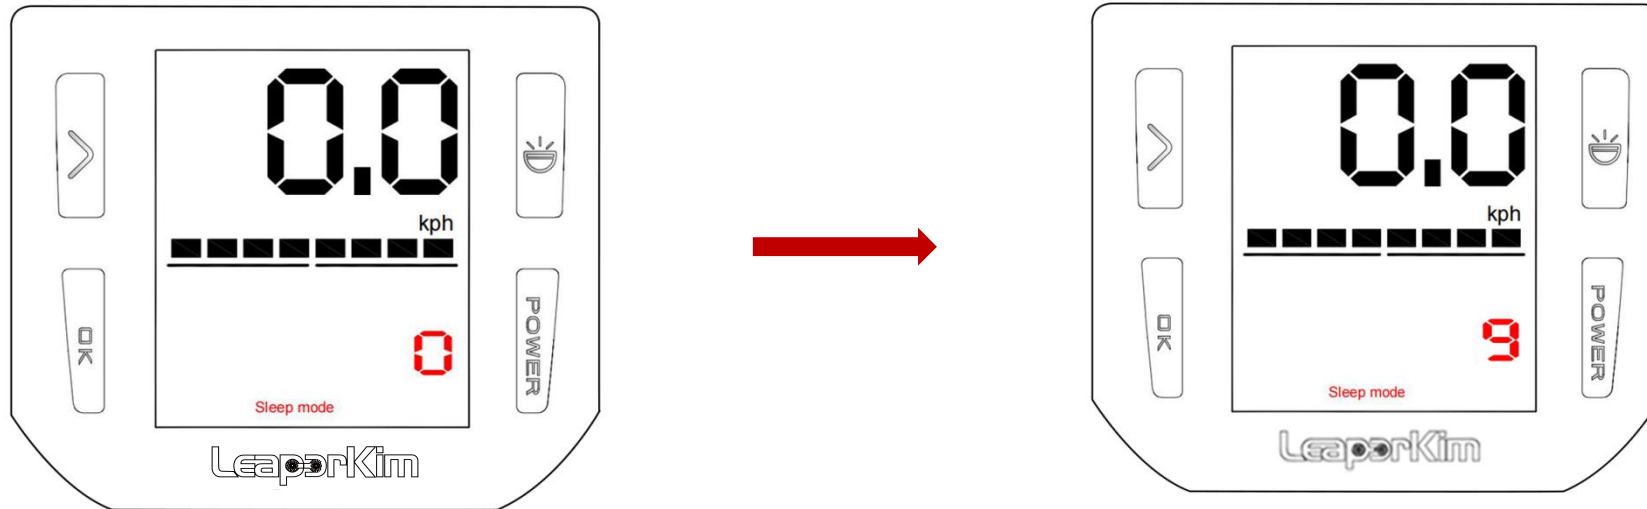

Function introduction:

- Short press the 'Switch' button to enter the sleep mood setting;
- Short press 'OK' button, screen will show 0 to 9, the vehicle will make a long beep then enter the sleep mode;
- Press 'POWER' button to power off vehicle to finish sleep mode setting;

5.12 Kilometers/Miles Unit Switching

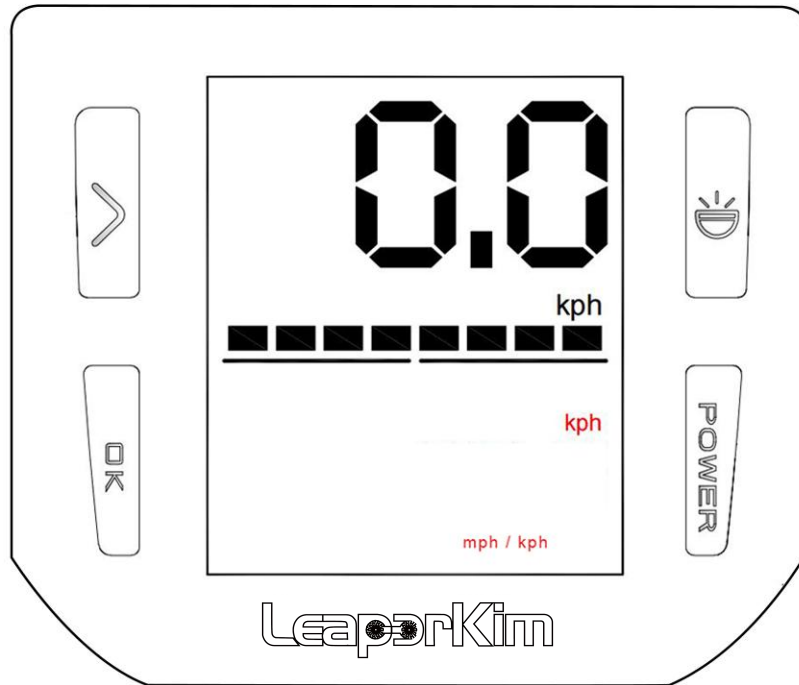

Switch speed unit:

- Short press the 'Switch' button to enter the km/mi unit setting;
- Short press 'OK' button to switch the vehicle speed unit from mph to kph;


5.13 Voltage Adjustment



Voltage adjustment:

- Short press the 'Switch' button to enter the Voltage Adjustment;
- Different environment temperature, and different resistance of electronic components will make voltage float. Users can slightly adjust voltage by enter this page and press the 'OK' button to set it;

5.14 Low Battery Mode Setting

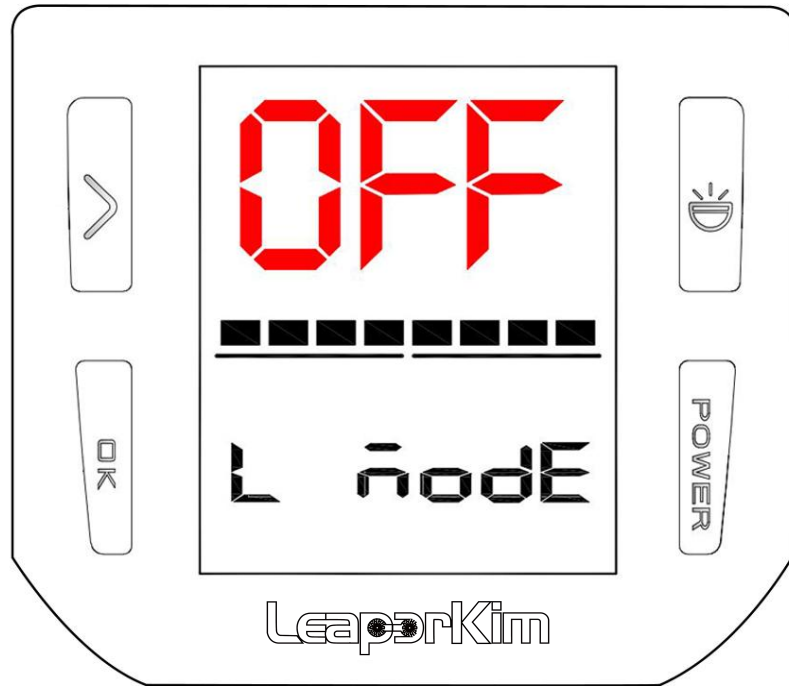

Function introduction:

- Short press the 'Switch' button to enter the low battery mode setting;
- OFF mode: alarm when voltage is lower than 136.5V, tilt-back when voltage is lower than 132.3V;
- ON mode: alarm when voltage is lower than 128.1V, tilt-back when voltage is lower than 123.9V;
- Low battery mode is a power emergency mode, use it too often shorten battery life, so it is not recommended to use is at normal situation;
- When the vehicle voltage lower than 136.5V and starts to tilt-back, turn on this mode will have 5km range for emergency;
- Do not ride it too fast, and do not accelerate or decelerate rapidly in this mode;

5.15 High Speed Mode



Function introduction:

- Short press the 'Switch' button to enter the high speed mode;
- OFF mode: Max free-load speed is 150km/h;
- ON mode: Max free-load speed is 170km/h;

5.16 Angle Protection Settings



Angle protection settings:

- Short press the 'Switch' button to enter the angle protection setting;
- 35°~75° set-able;
- The higher the value set, the greater angle can be inclined;
- When the incline angle of the vehicle is greater than the set value, the vehicle will enter the Angle protection mode and be power off subsequently;

5.17 Button Volume Settings



Function introduction:

- Short press the 'Switch' button to enter the button volume settings;
- Short press 'OK' button, volume can be set between 0-100;
- The lower the value, the lower the volume of the button;


5.18 Charging Voltage Settings



Charging voltage setting:

- Short press the 'Switch' button to enter the charging voltage settings;
- Charging limit voltage can be set;
- Rated voltage of charger is 176.4V. Users can set vehicle charging voltage down to 168V;
- If limit charging voltage is set to 168V, the maximum voltage to complete charging will be 168V;

5.19 Acceleration Assist Settings

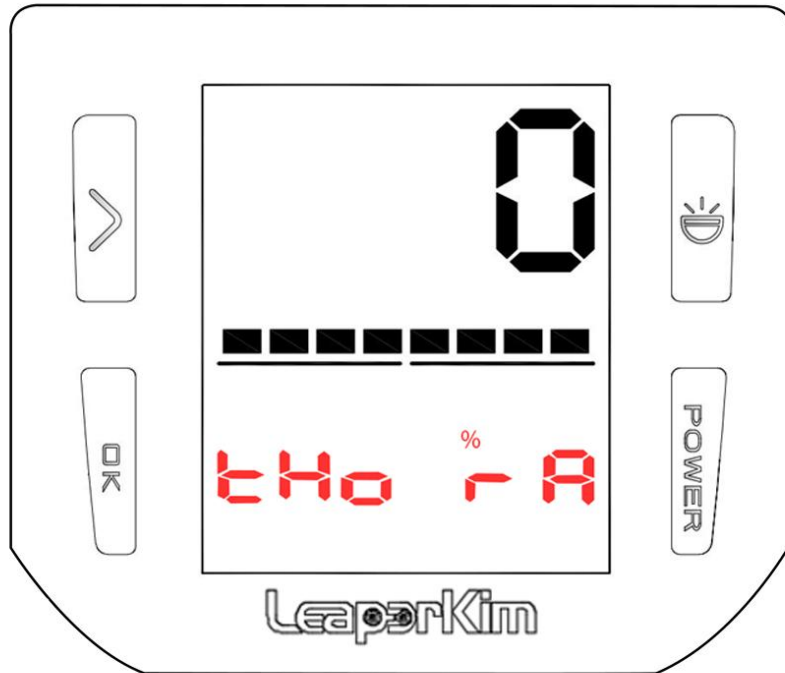

Function introduction:

- Short press the 'Switch' button to enter the acceleration assist settings;
- Acceleration assist, enable faster accelerating, more powerful braking;
- Short press 'OK' button 5 times to unlock acceleration assist settings;
- Value from 0 to 100% set-able;

6.Error Codes and Causes

NO.	Code	Cause
1	br tEā	Right battery high temperature alarm
2	bl tEā	Left battery high temperature alarm
3	bt LoY	Battery pack over-discharge alarm
4	u HIGH	Battery pack over-pressure alarm
5	E CHN-	Charging current exceeds set value alarm
6	E HALL	Motor Hall error alarm
7	t HIGH	Controller high temperature alarm
8	Er obt	Generator power failure protection
9	FULL "	Over 3s downhill on full charge

7.Closed Hydraulic Suspension



Rebound Knob ← → Compression Knob

Air Bag



Inflation Valve

1. Identify the damping knobs:

- Red knob: Rebound damping
- Blue knob: Compression damping

2. Adjustment:

- Rotate clockwise: Increase damping
- Rotate counterclockwise: Decrease damping

3. Suspension airbag:

- Airbag pressure: 2-3.5bar;

Note: Keep the red/blue knobs on left/right suspension at the same adjustment level to avoid uneven body force and maintain riding balance.

8.Maintenance, Modification and Non-Original Accessories

Warning

Modification of the product's battery, motor, controller, sensors, tires, pedals, suspension, housing, lights, buzzer, firmware, speed-limiting logic or any other safety-related components is prohibited without written permission from our company. Any modification may impair the vehicle's balance control, braking performance, structural strength, water-resistance and battery safety. This can lead to loss of control, falls, fire or serious personal injury.

- Inspect screws for loose conditions on a regular basis with frequent use.
- Check tire pressure routinely; recommended pressure: 2.5- 3.0 Bar.
- Store the vehicle in dry locations whenever possible.
- When the vehicle is idle, fully charge the battery at least once every two months.
- Avoid draining the battery completely before recharging.
- Do not expose the vehicle to environments above 50 °C or below -20 °C.
- Do not use non-included charging equipment..
- Do not submerge the unit in water or clean it with a high- pressure water gun.

The user is legally responsible for vehicle damage, personal injury or property loss caused by: modifying or taking apart the unit, using non-original parts, tampering with firmware, turning off safety protections, skipping required maintenance, or using the unit in prohibited situations. Such damage may not be covered under warranty.

9.Lending, Transfer and Local Regulations

The owner must not lend the unit to anyone who has not read these safety instructions, completed beginner training, wears no protective gear, or lacks riding competence. When lending the unit to others, provide the user manual, inform them about unit alerts, speed-limiting, pedal tilt-back, low-battery conditions and prohibited-use scenarios. Help new riders practice in a safe area.

When transferring, selling or reselling this product, hand over the user manual, charger, safety documents and service records together with the unit. Inform the buyer of the unit's condition, including any crashes, water exposure, repairs or modifications.

Users shall learn and comply with local laws for electric unicycles and personal electric mobility devices. Follow road-traffic rules, age limits, speed limits, helmet requirements and insurance requirements. Do not ride the unit in areas where local laws ban or restrict such devices.

When an owner lends out the unit, it is regarded that the owner confirms the borrower is capable of safe riding and has read these instructions. The owner and actual user shall bear corresponding legal liability for accidents caused by the borrower failing to follow these safety instructions.

10.Abnormal Conditions, Accidents and After-Sales Service

NO.	Type	Items	Warranty time
1	Controller	Controller, motor	24 months
2	Battery	Battery packs	18 months
3	Charger	Charger	12 months

The following conditions are not covered by the warranty and need to pay for maintenance:

- The validity period of three guarantees has expired.
- Damage caused by human factors.
- Damage caused by force majeure.
- All kinds of damage caused by failure to use, maintain and transform according to the requirements of the user manual.
- Failure or damage caused by forced use of this product beyond normal conditions.
- The product has been disassembled or maintained by personnel without authorized by our company.
- Malicious damage to warranty content and vehicle body information.
- Other faults or damages not caused by the design, technology, quality, manufacturing and other problems of the product itself.
- Natural wear and tear that does not affect the function.

10. Abnormal Conditions, Accidents and After-Sales Service

If you see abnormal alerts, strange noises, overheating, power cut-off, pedal or braking faults, failed power-on/off, water exposure, falls, crashes or other safety concerns, stop using it immediately and contact official after-sales support.

1. Constant alerts or App fault codes: Stop riding, remember the fault code and contact official after-sales support.
2. Abnormal power or unusual pedal behavior: Do not keep riding. Contact official after-sales support for inspection.
3. Falls, crashes or water exposure: Stop use. Do not ride or charge the vehicle until it has been fully inspected.
4. Strange odors, smoke, bulging or abnormal heating from battery: Keep away from flammable materials. Stop charging and using, then contact official after-sales support.
5. Safety notice or recall notice received: Stop use, perform firmware updates, arrange repairs or follow official recall instructions.

Final Disclaimer

When you power on, activate, ride or lend this unit, you confirm you have read, understood and accept all rules in this document. You accept all risks of riding. You confirm our company has fully informed you of all safety information. You alone are responsible for any personal injury, property damage or third-party claims caused by violating these rules. Our company accepts no liability for contract breach, tort or joint liability.

11.Packing List

Packing list				
No.	Description	Unit	Qty	Note
1	Unicycle	PCS	1	
2	Charger	PCS	1	
3	User Manual	PCS	1	
4	Vehicle Information Card	PCS	1	
5	buzzer	PCS	1	
6	Suspension Air- Valve Extension Nozzle	PCS	1	
7	Special suspension tool	PCS	1	

LeaperKim APP :



IOS



Android



Manufacturer: Guangzhou Coyote Intelligent Equipment Co., Ltd.

ADD: Part 1 of 3rd floor, No. 45-2, Northern Industrial Road, Xinlou village, Baiyun District, Guangzhou, China

Tel: +86 18078846150

Email: support@leaperkim.com

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.