
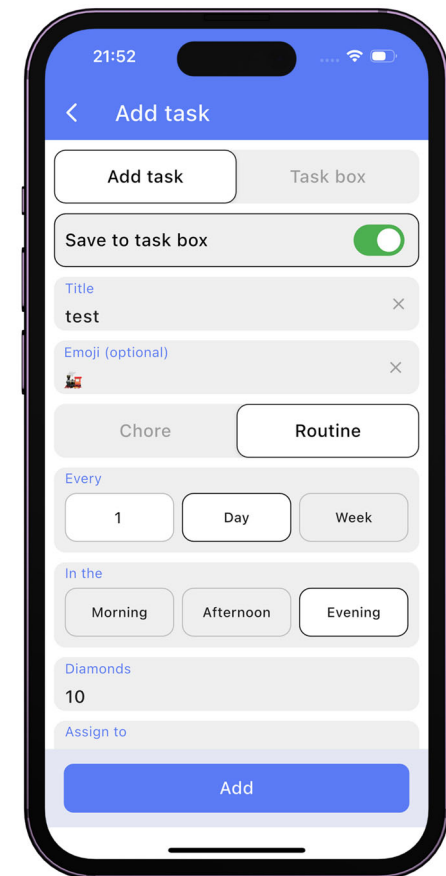
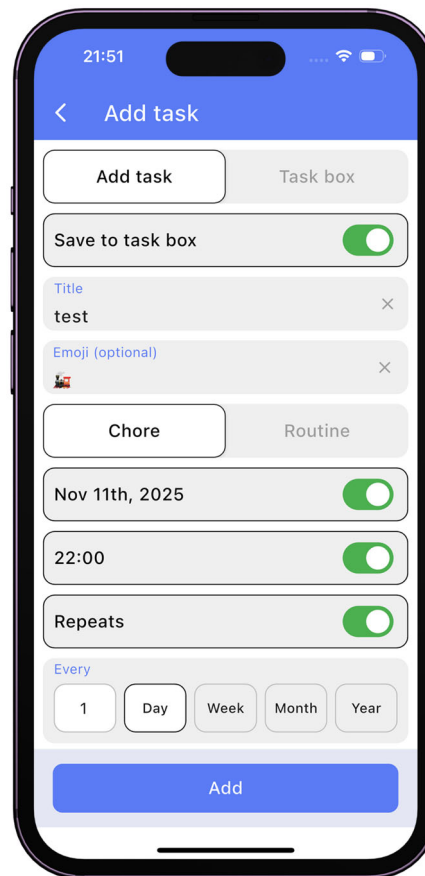





Creat Tasks in APP

- Tap **Tasks** on the home screen.
- Tap the **+** icon in the bottom-right corner to create a new task.
- Choose the roles to assign tasks.
- Select the **Chores** or **Routine**, set the reward amount, and tap **Add**.The task will then automatically appear in the list.

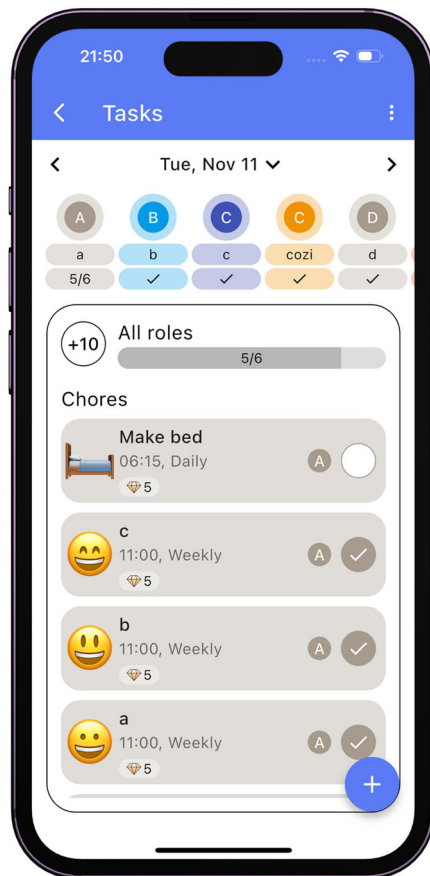

Creat Tasks in the Calendar Device




- Tap the **+** icon in the bottom-right corner to create a new task.
- Choose the roles to assign tasks.
- Select the **Chores** or **Routine**, set the reward amount, and tap **Add**.The task will then automatically appear in the list

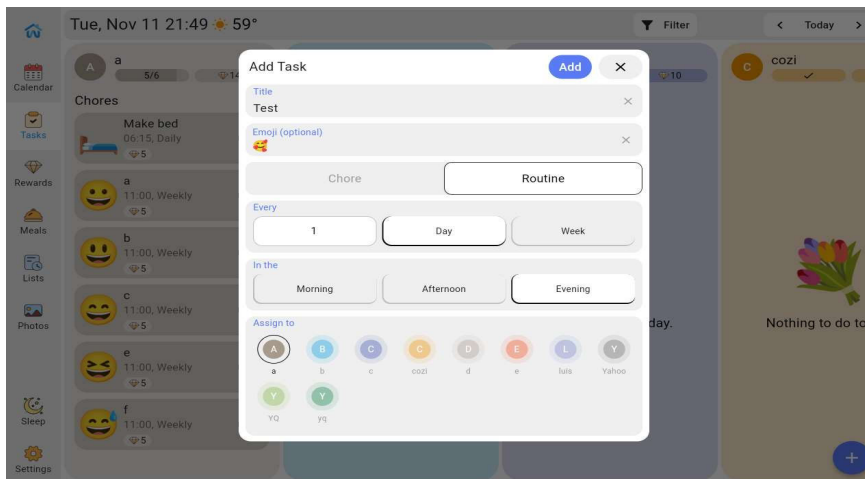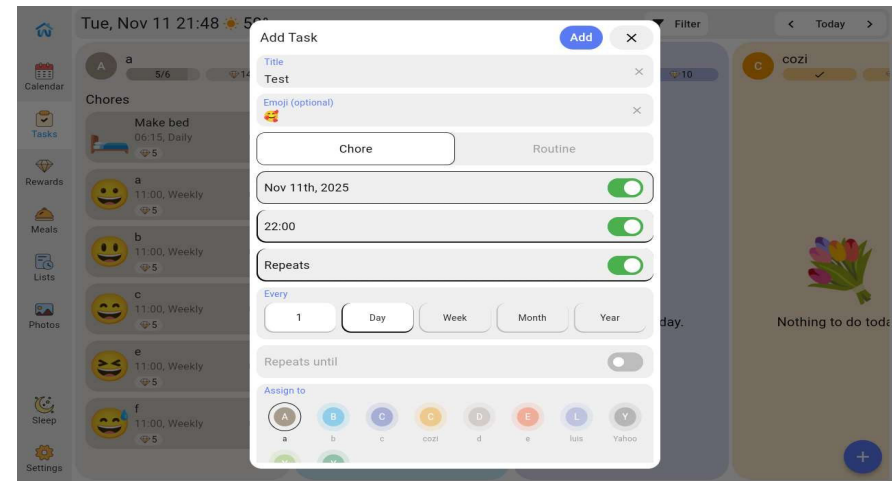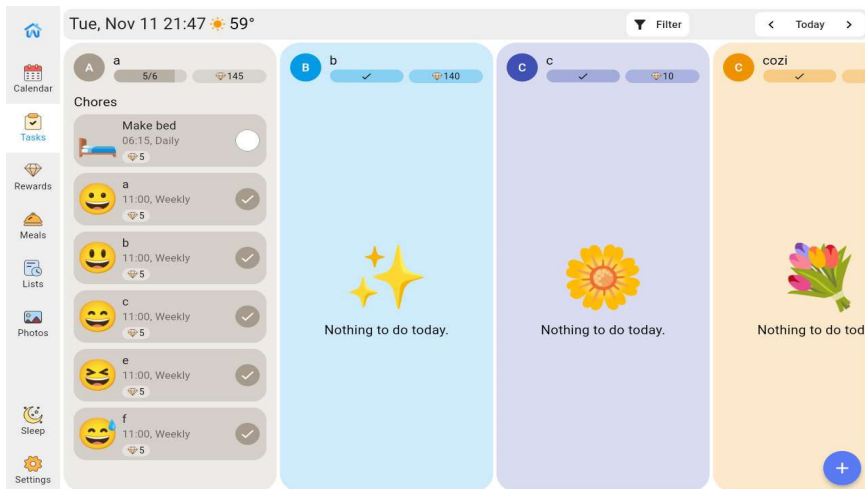

An incentive element linked to the ****Tasks**** system. When a family member completes an assigned task, they can earn a certain number of diamond points, which can be redeemed for preset rewards.

1) Creat Rewards in the APP

- Enter a title for the reward, and optionally add a description and/or emoji.
- Configure the “Repeats After Redeeming” feature (enabled by default). When enabled, the reward will automatically regenerate after being claimed.
- Enter the number of diamond points required to redeem the reward.
- Select the assigned family member for this reward.

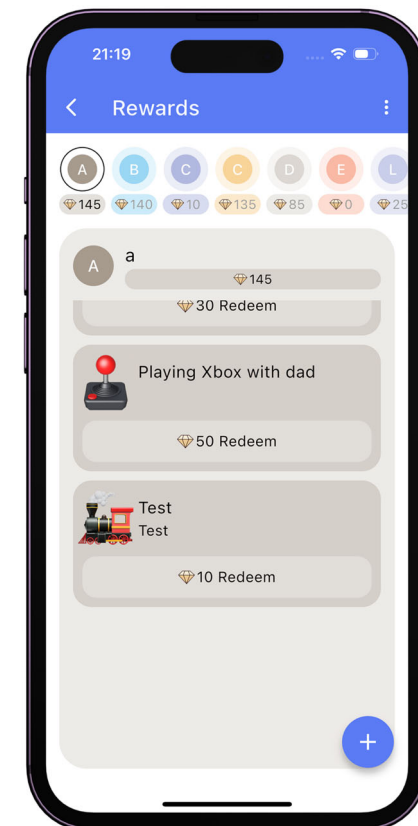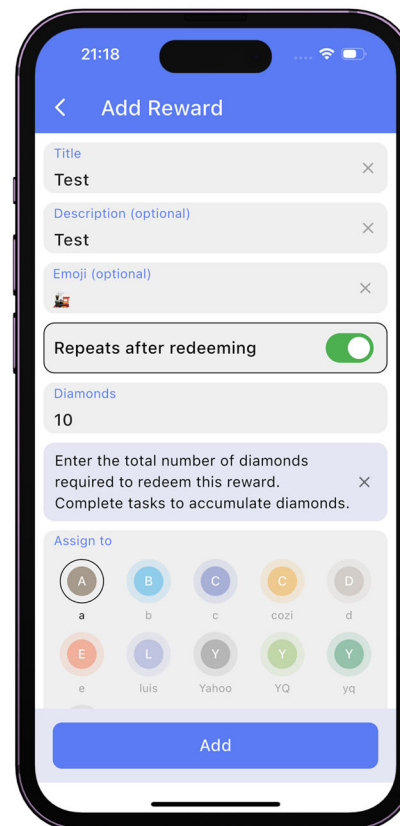
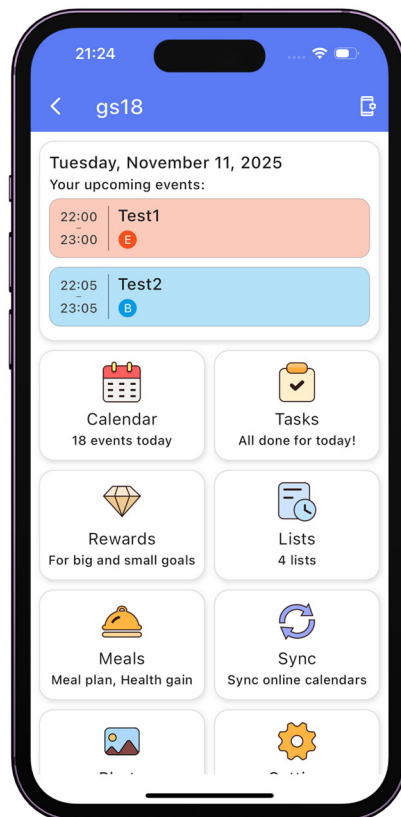


.2) Redeem Rewards

When the diamond points earned from completing tasks reach the required amount for a reward, you can redeem it through the app or on the device.

After a successful redemption, the corresponding diamond points will be automatically deducted.

If you wish to cancel the redemption, you can revert the reward to an unredeemed status, and the deducted diamond points will be refunded.


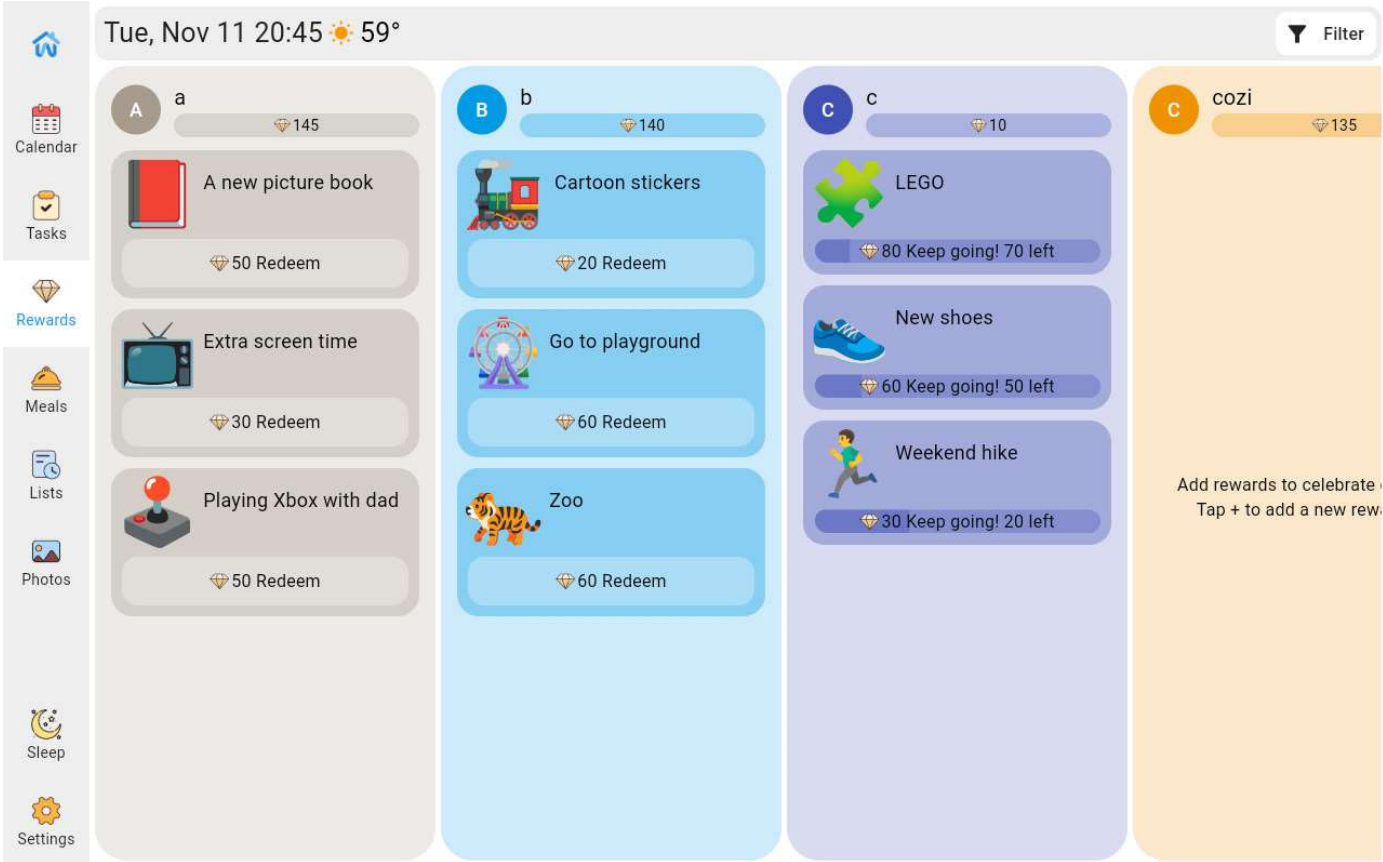
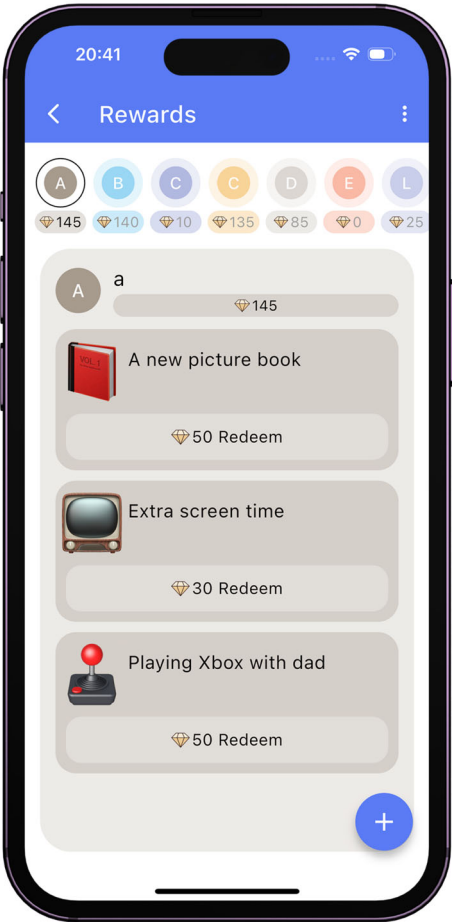


Use the "Meal Planning" feature to carefully plan family dinners for a whole week or month. This makes every family member look forward to dinners and enjoy cozy mealtimes together.

1) Add Recipes in the APP

- Tap meal on the home screen.
- Tap the + icon in the bottom-right corner to create a new recipe
- After filling in the recipe details, tap "Add", and the recipe will automatically appear in your Recipe Box.



Note: Recipes can only be added through the mobile app.

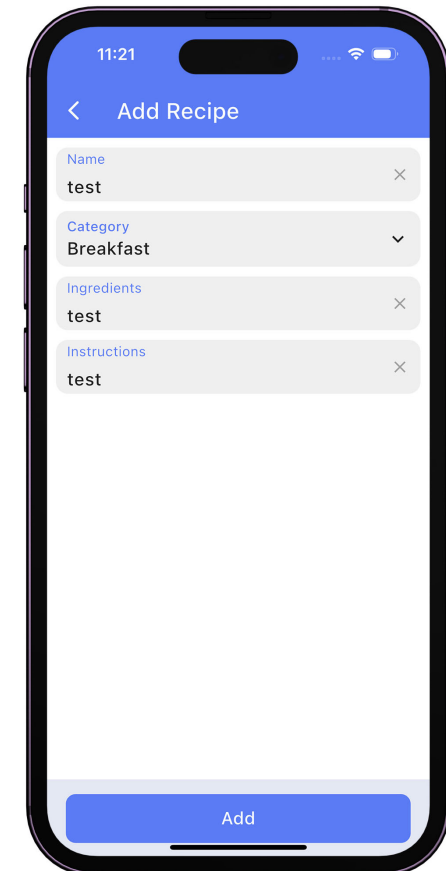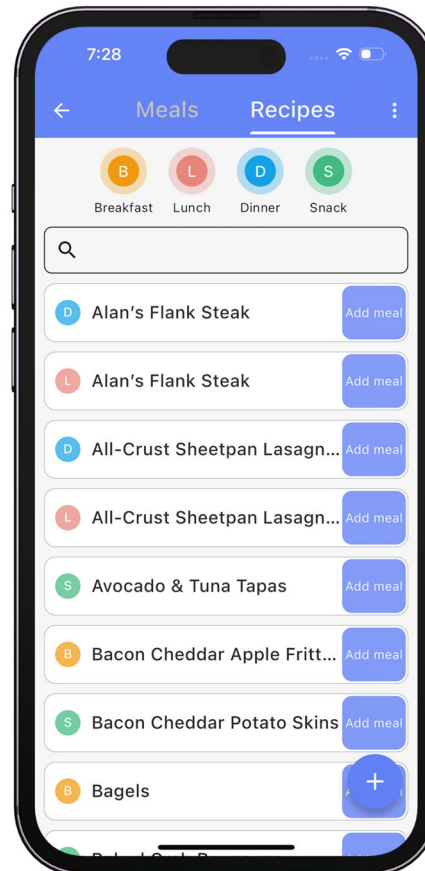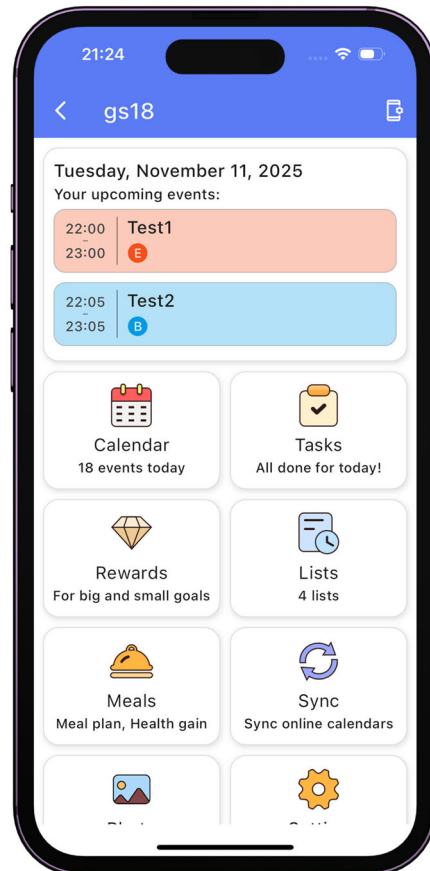

Use the "Meal Planning" feature to carefully plan family dinners for a whole week or month. This makes every family member look forward to dinners and enjoy cozy mealtimes together.




1) Add Meals in the APP

- Tap meal on the home screen.
- You can add existing recipes to your meal plan from the Recipes page.
- Create a new meal plan directly from the Meal page. Add Meal information. You can also save it in the recipe.

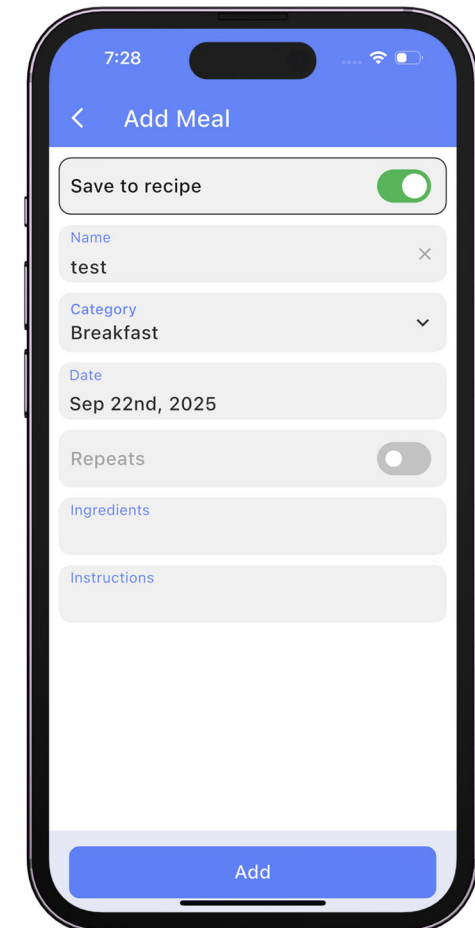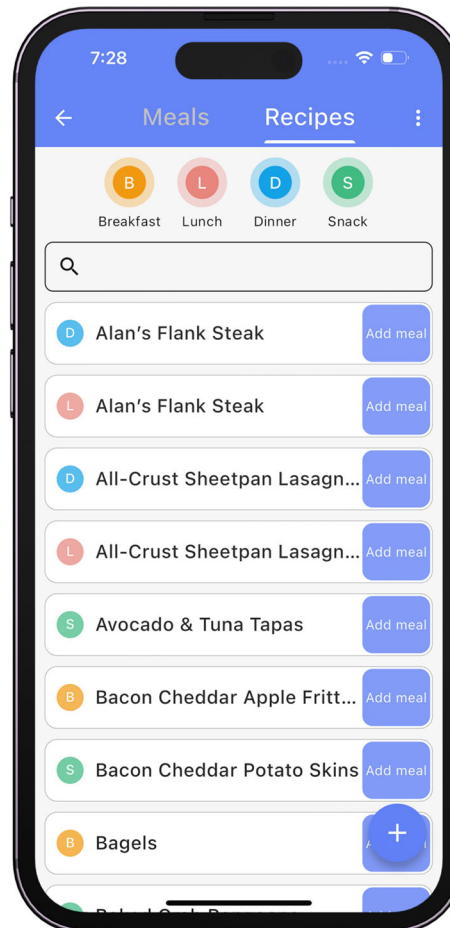

Add Meals in the Calendar Device




- Tap meal on the home screen.
- On the recipe page, click "Add Meal" to add the current recipe to "Meal", or click "+" to add a new meal plan.
- Add Meal information, including time, source, etc. You can also save it in the recipe.

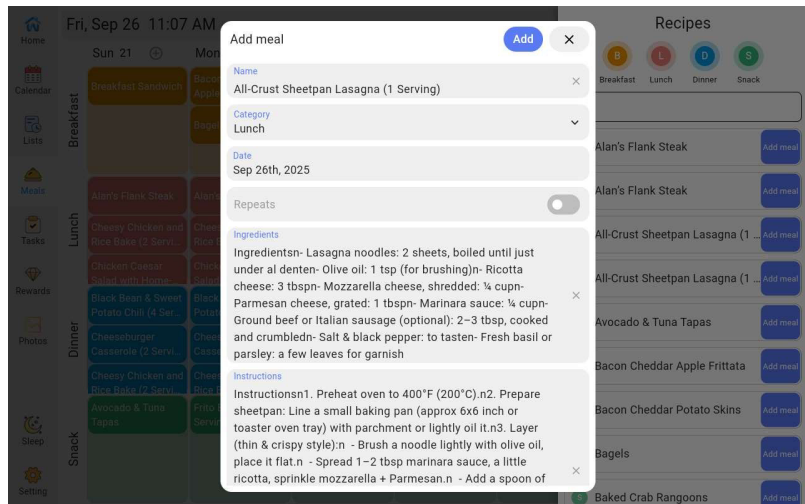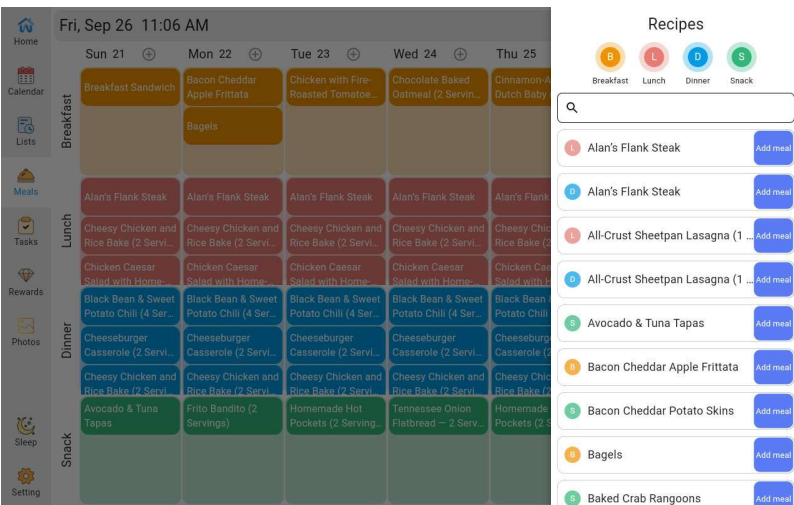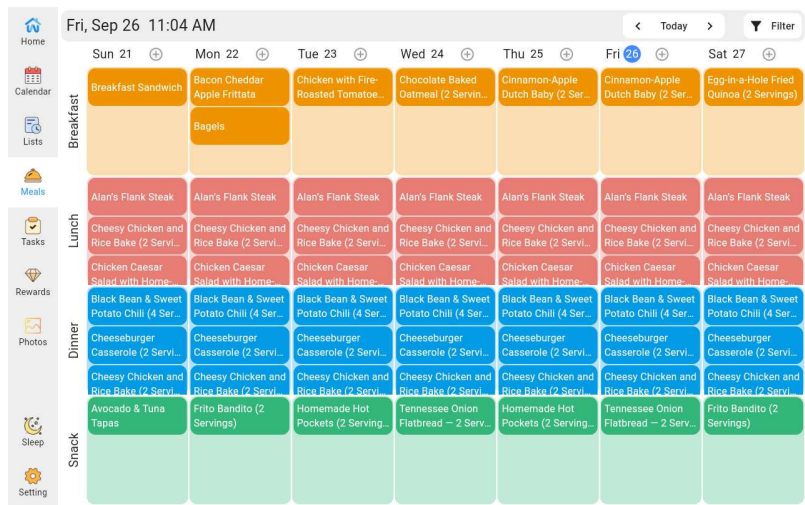

Lists will be synchronized between your "Wanmine Calendar" and the mobile app, ensuring that the information for the whole family is always consistent. You can create any number of lists according to your needs.



Creat lists in the APP

- Tap **Lists** on the home screen.
- Tap the + in the lower right corner to create a new list.
- Name the list and select a color, then press the "Done" button.

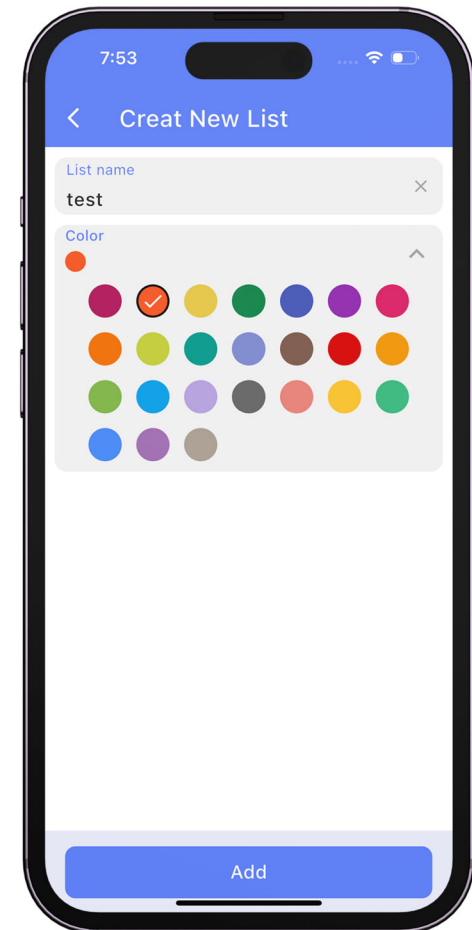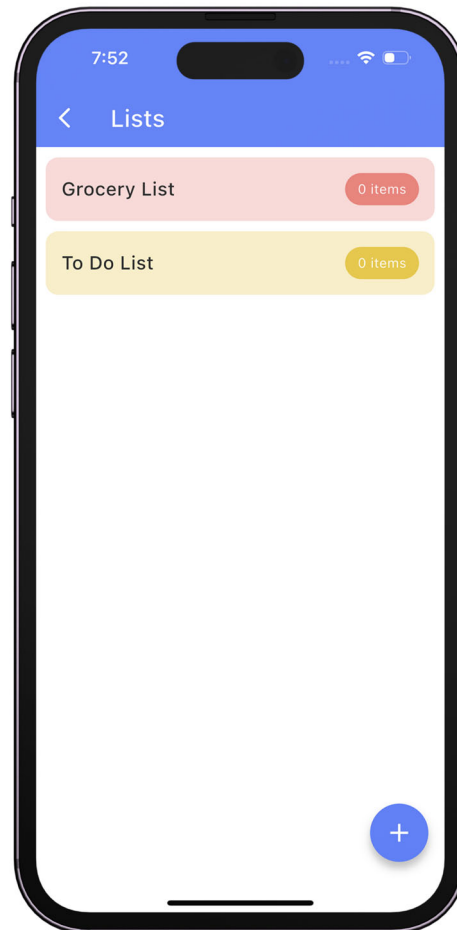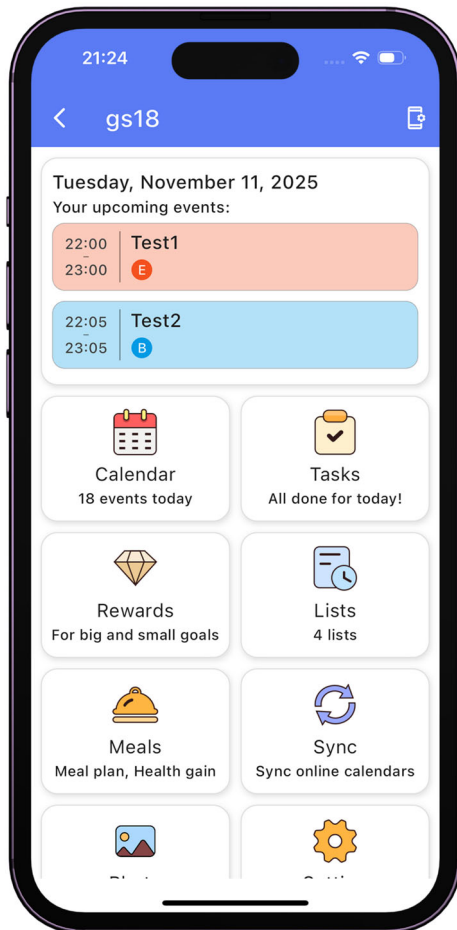



1) Creat lists in the Calendar Device

- Tap "Add List" on the list interface.
- Name the list and select a color, then press the "Done" button.

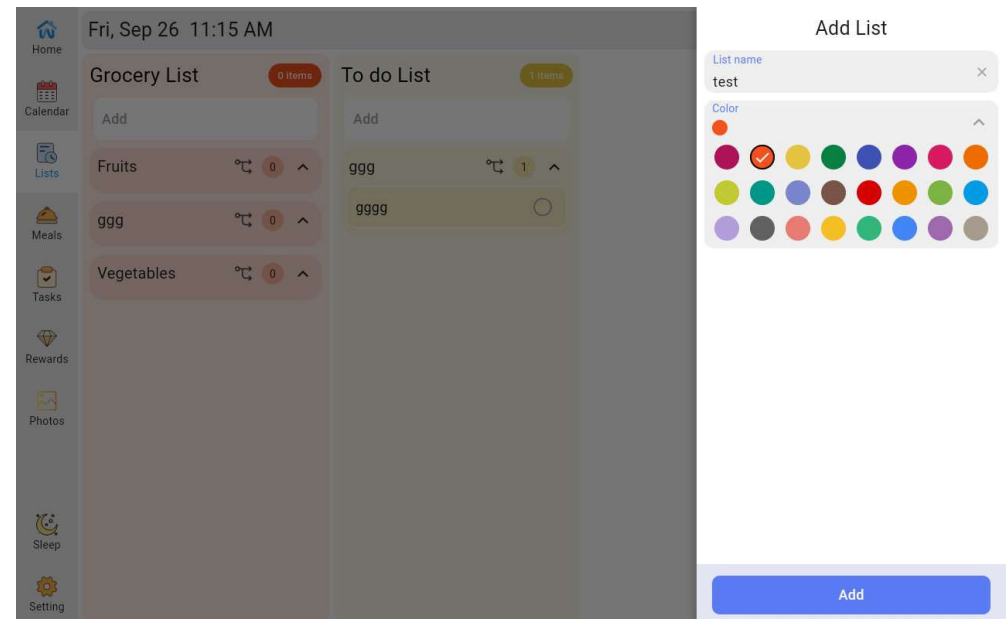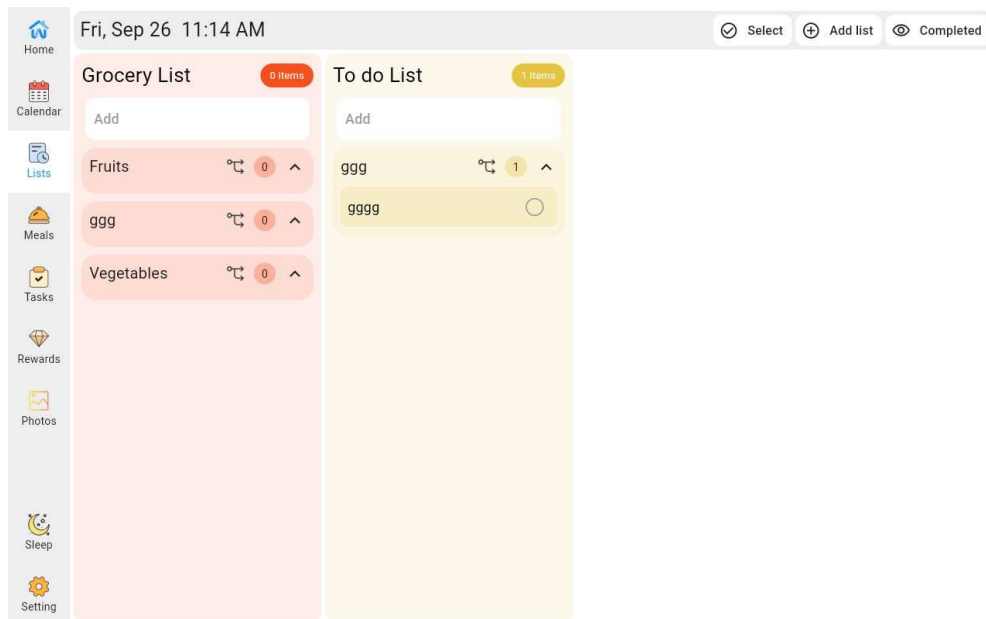


2) Add item in the APP

- Tap any list in your collection of lists.
- Enter the item name, then press the "Add" button. You can also tap the "Sub - item" button to add sub - items.

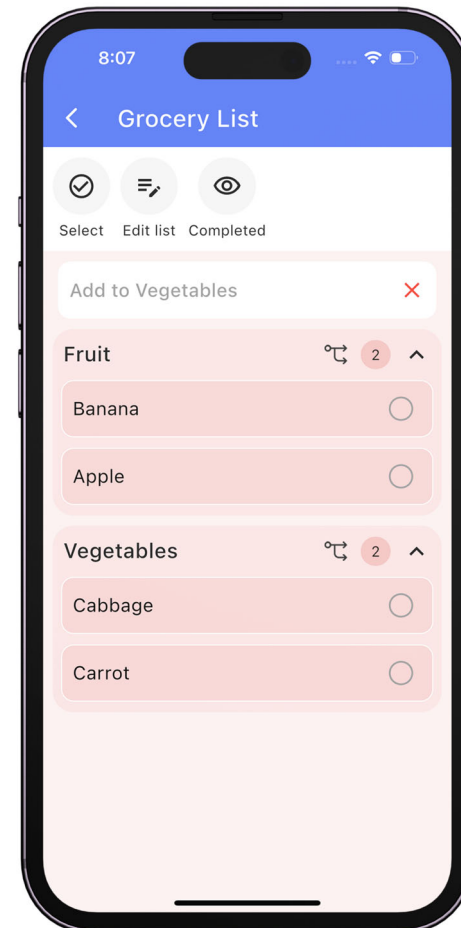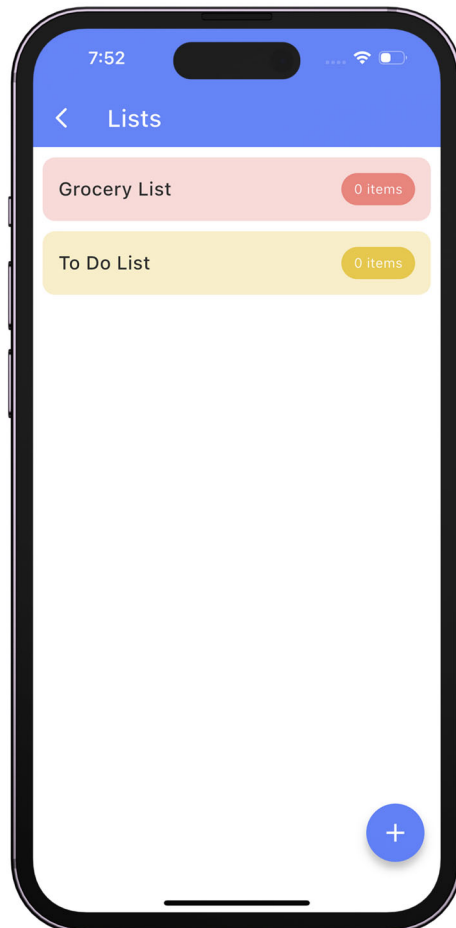


Add item in the Calendar Device

- Select any list in your collection of lists.
- Enter the item name, then press the "Add" button. You can also tap the  button to add sub - items.

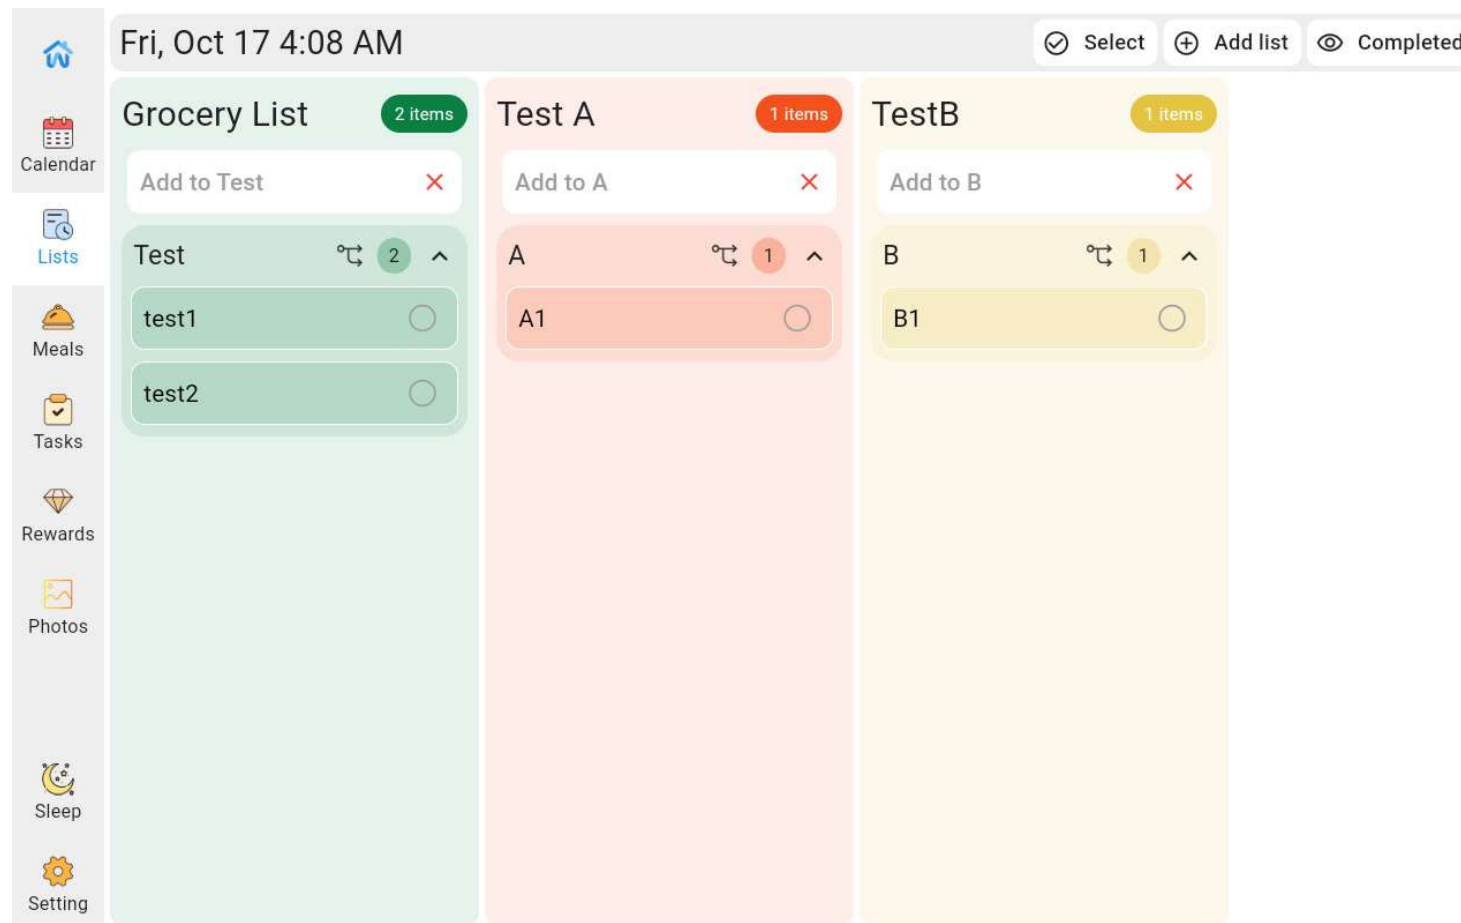

You can upload photos from your phone to the device using the mobile app.


- On the device, tap the “Photos” button to view images, which will play in a slideshow automatically.
- Tap the “Select” button to delete any photo.

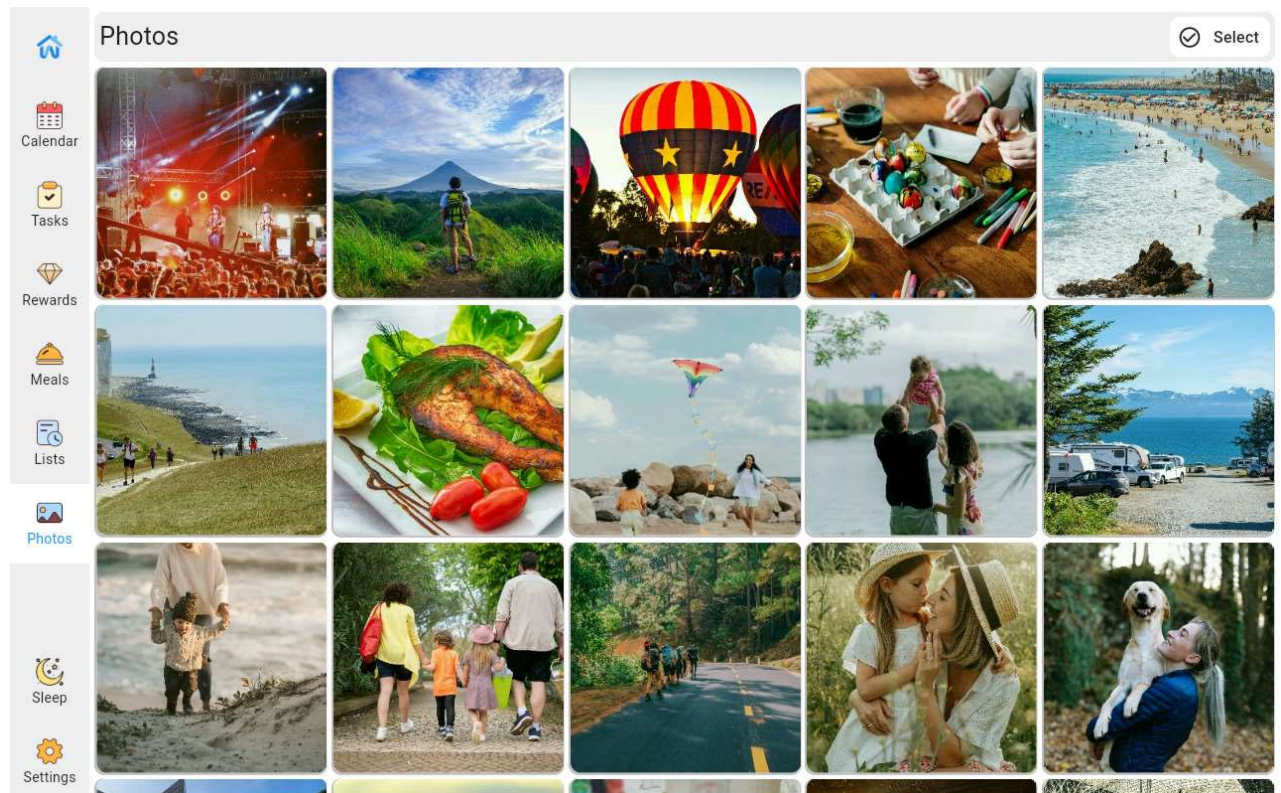

10.Sleep Mode


41

- **Manual Sleep:** Tap “Enter Sleep Mode Now” to put the device to sleep immediately. Tap the screen to wake it up.
- **Scheduled Sleep:** After turning on the “Scheduled Sleep Mode” switch, you can customize the start and end times as needed. The device will automatically enter and exit sleep mode according to your settings. You can also tap the screen to wake it up after it goes to sleep.

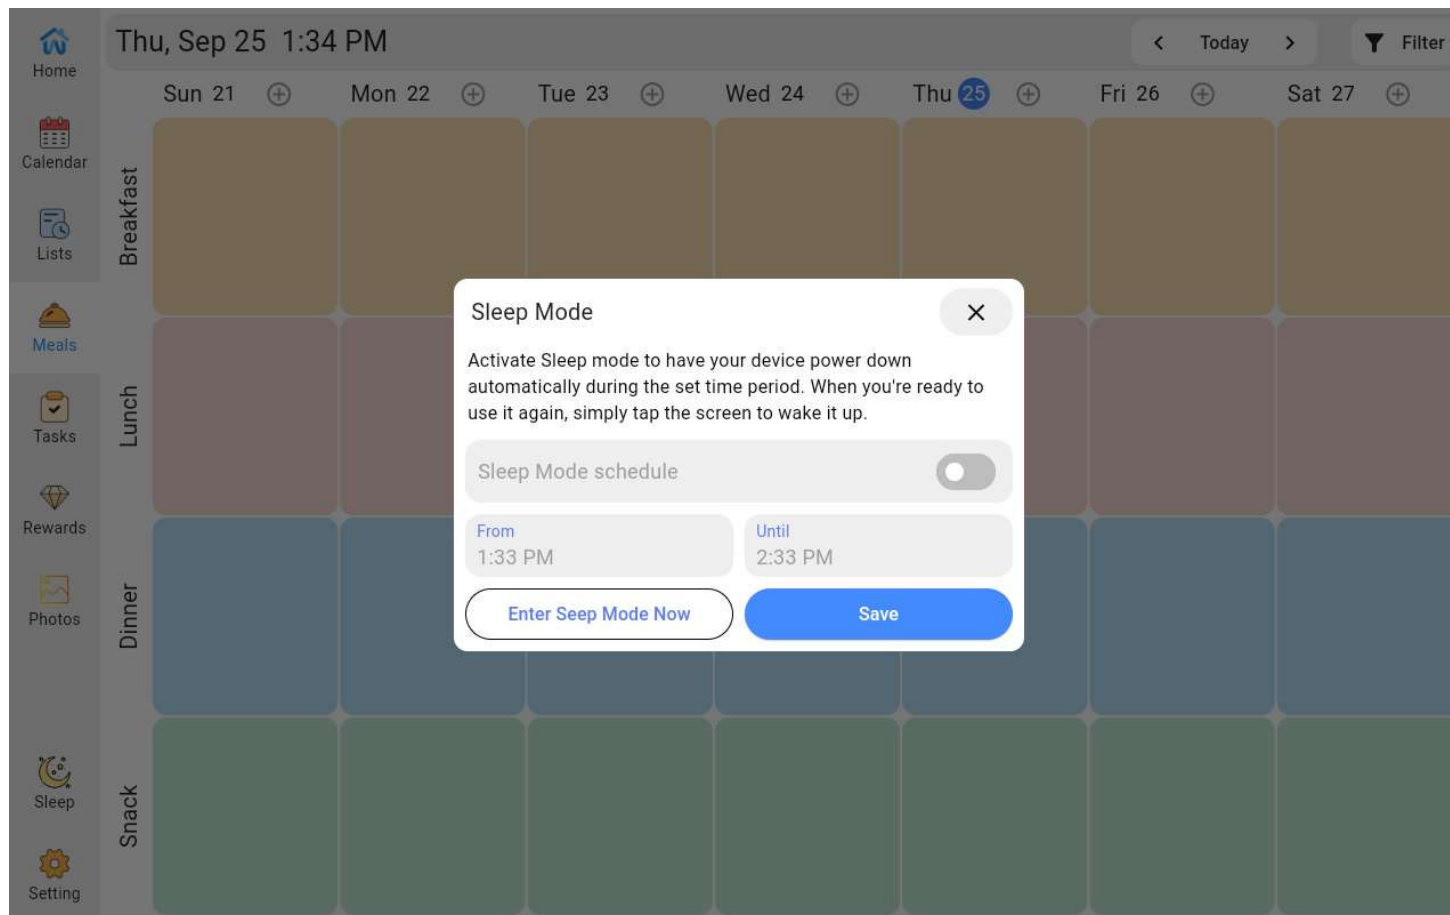


1) Device Setting in Calendar

- **Device Name & Location:** Enter a name and location during setup to easily identify and manage multiple devices.
- **Weather Location:** Set your current location for accurate, real-time weather updates.
- **Temperature Unit:** Switch between ° C and ° F anytime in settings.
- **Brightness Mode:** Choose **Auto** (adjusts with ambient light) or close **Auto** (stays at your set level).
- **Font Size:** Select **Small**, **Normal**, or **Large**.
- **Volume:** Adjust sound levels for notifications and videos.
- **Factory Reset:** Erases all data and restores default settings. Use with caution.

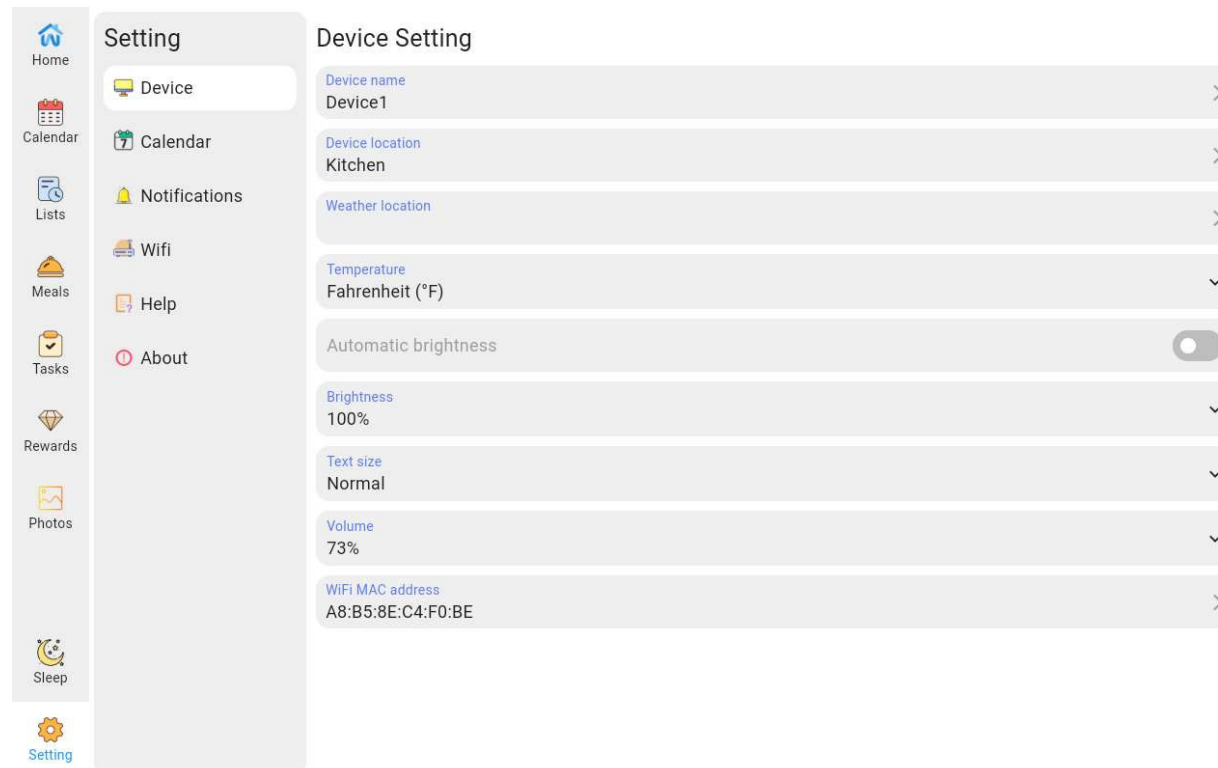


2) Calendar Setting in Calendar

- **Start Week On:** Choose when your week begins — **Sunday**, **Monday**, or **Current day**. Your calendar and meal plan will adjust automatically.
- **Time Zone:** Select your local time zone during setup.
- **Time Format:** Switch between **12-hour** or **24-hour** display.
- **Dim Past Events:** Past events appear faded, making it easy to tell what's done and what's next.
- **Highlight Weekends:** Shows **Saturday** and **Sunday** in light blue to clearly separate workdays and weekends.
- **Days Display in Day Mode:** Customize how many days appear on your day view screen.

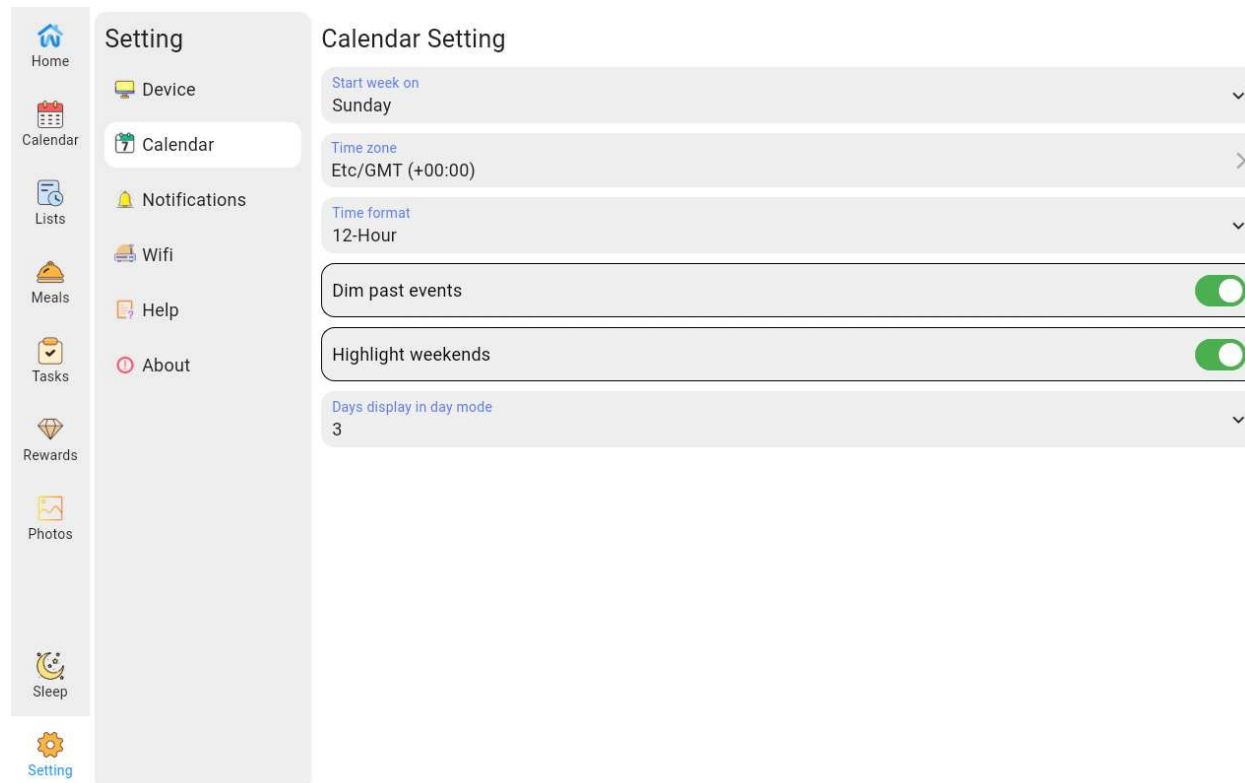

4) WiFi in the Calendar


During device setup, connect to Wi-Fi. Once connected, the device will automatically access cloud services. For hidden Wi-Fi networks, tap Other Network, enter the SSID (network name) and Password, then tap Join to connect.

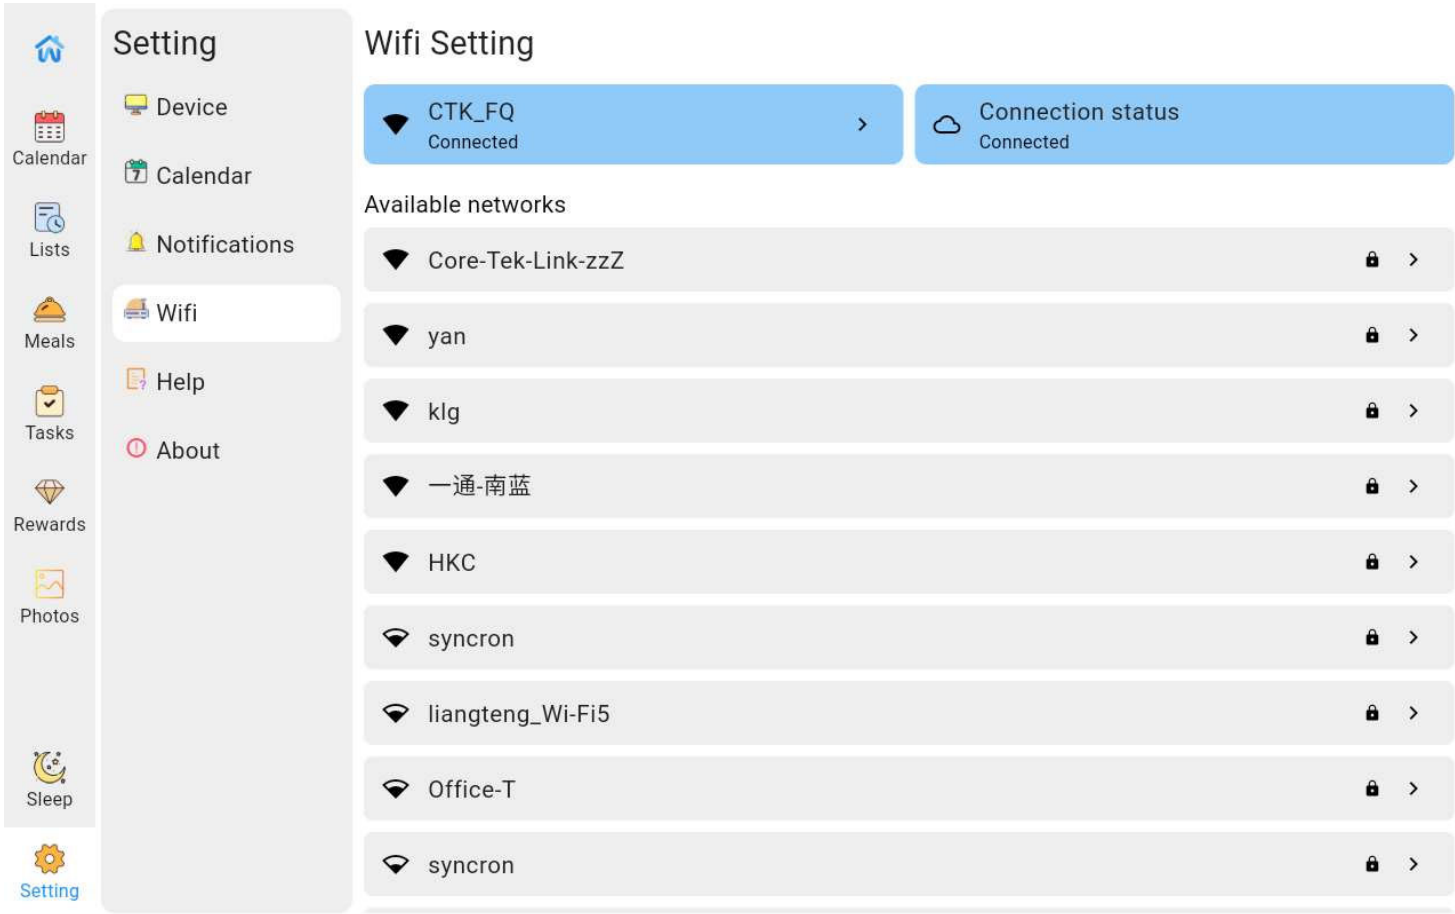

5) Help

Support: Tap Support to view your device information and get contact details for customer service.

Privacy Policy: Visit www.wanminecal.com/Support/Privacy to read the Privacy Policy and User Agreement.

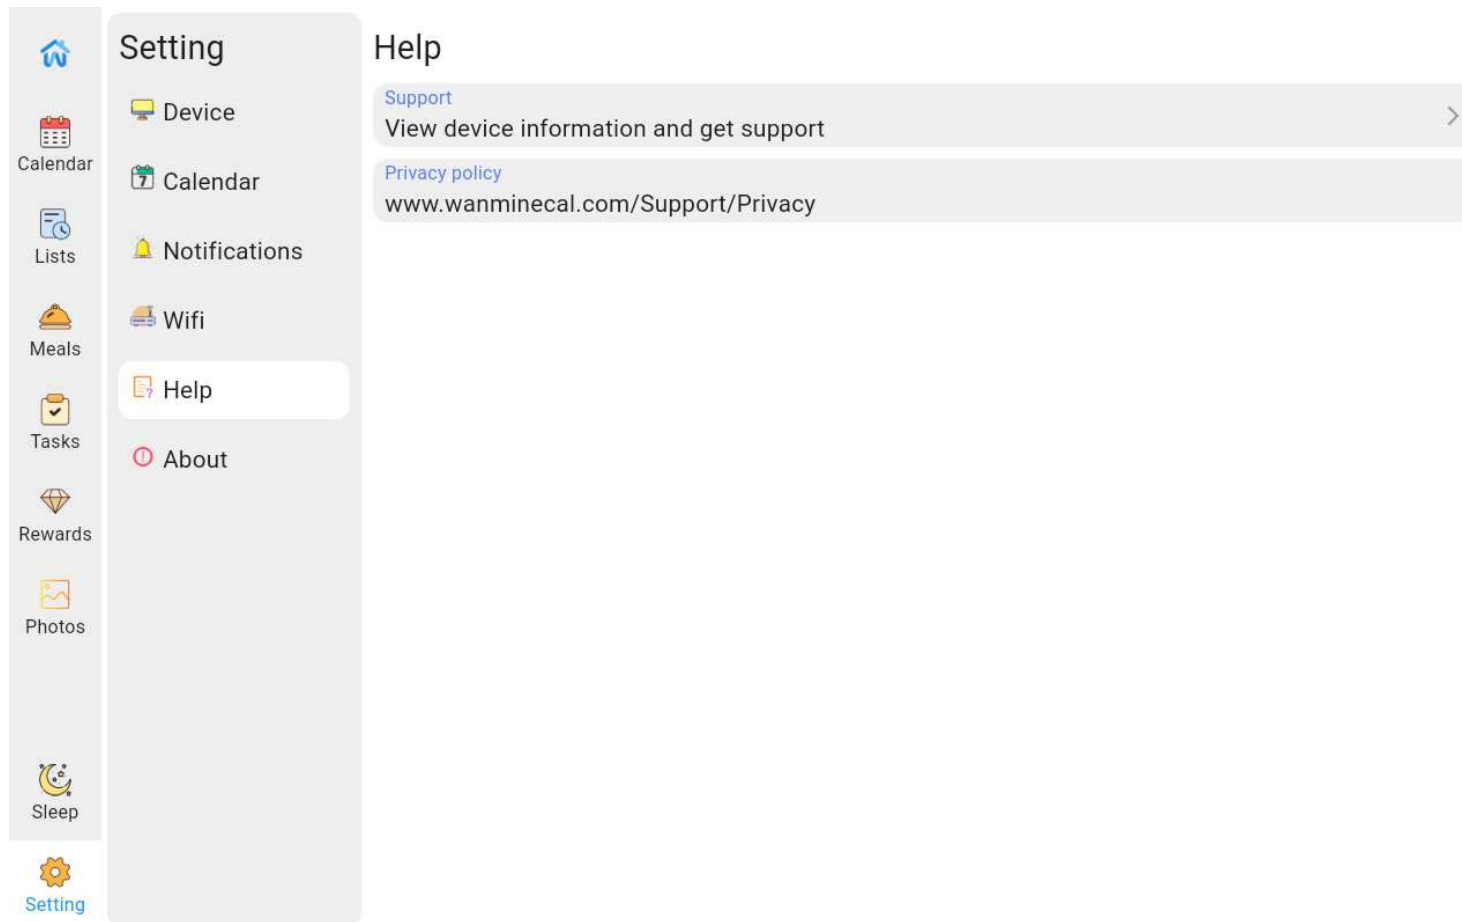


6) About

Hardware Brand and Model Number: Displays the brand name and model number of your device.

Wanmine Version: Shows the current version of the Wanmine software.

Check for Update: Shows the last update time. Tap to check if a new version is available.

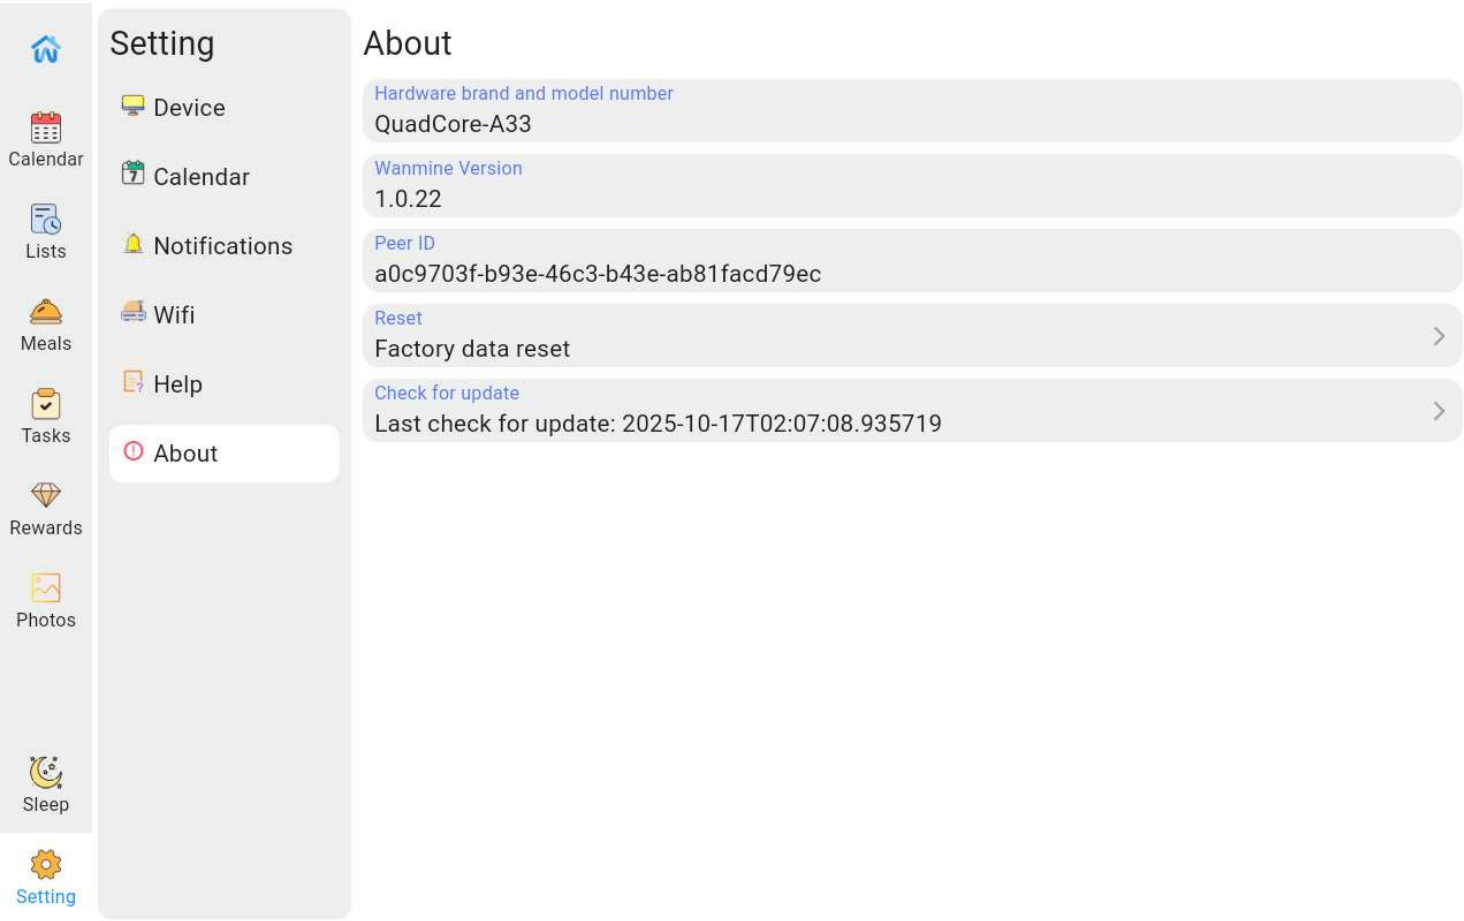

- This electronic calendar is designed for indoor use only.
- To reduce the risk of fire or electric shock, do not expose the device to moisture or condensation.
- Keep the back of the device unobstructed to ensure proper ventilation; do not block the air vents.
- Avoid placing the device in direct sunlight.
- Do not attempt to disassemble the device. There are no user-serviceable parts inside.
- Tampering with the device may result in electric shock and will void the warranty.
- To reduce the risk of electric shock, do not expose the device to rain or excessively humid environments.

13. Warranty

Our warranty is valid for 12 months from the date of purchase.

This warranty does not cover:

- Damage to the product's appearance or any damage caused by external factors.
- Damage resulting from accidents, misuse, abuse, negligence, or any modification of the product or its components.
- Damage caused by improper operation, poor maintenance, connection to incompatible devices, or unauthorized repairs.

- Handle the screen with care: The LCD screen is made of glass and is easily scratched or damaged. Avoid collisions or abrasions.
- If the screen has dust or fingerprints, use a soft, non-abrasive cloth (recommended: microfiber cloth or camera lens cloth) to wipe it.
- Before wiping, you may lightly spray a screen-safe cleaning solution onto the cloth to slightly dampen it. Do not apply liquid directly to the screen surface.

15. Troubleshooting

If you encounter any issues while using the electronic calendar, please first refer to the suggested solutions below and the relevant sections of this manual. For further assistance, contact technical support.

1) Device Won't Turn On

- Check Power Connection: Ensure the device is properly connected to the power adapter, the plug is fully inserted, and the outlet is working.
- Restart the Device: Press and hold the power button to restart the device.

2) Cannot Connect to Wi-Fi

- Check Network Status: Make sure your router is working properly and connected to the Internet.
- Verify Wi-Fi Password: Confirm that the password you entered is correct.
- Restart Device and Router: Try restarting both the electronic calendar and the router.
- Check Wi-Fi Band: The device may only support 2.4GHz or 5GHz bands. Ensure your router's band is compatible.

3) Touch Screen Not Responding

- Clean the Screen: Wipe the screen with a clean, soft cloth to remove any dirt or smudges that may affect touch sensitivity.
- Restart the Device: Press and hold the power button to turn off the device, then turn it back on.
- Check for System Updates: Make sure the system is updated to the latest version.

4) Calendar Sync Issues

- Check Network: Ensure the device is connected to the internet and the connection is stable.
- Verify Group Assignment: Make sure the device has been added to the corresponding group in the app.
- Update Software: Use the latest version of both the mobile app and the device software.
- Reauthorize: In settings, remove and re-grant permissions for third-party calendar sync.

5) Device Shuts Down or Reboots Automatically

- Check Device Temperature: The device may shut down automatically if it overheats. Avoid using it in high-temperature environments.
- Update Firmware: Ensure the device is running the latest system firmware.

6) Can the calendar device's screen brightness be adjusted?

You can choose between two adjustment modes: Auto Mode: When enabled, the screen brightness automatically adapts to the surrounding light. Manual Mode: When auto adjustment is off, users can set the brightness manually. By default, Manual Mode is enabled.

7) Can I sync one or multiple calendars?

Yes. The device supports syncing any number of calendars—there is no limit.

8) Touch Screen Not Responding

- Clean the Screen: Wipe the screen with a clean, soft cloth to remove any dirt or smudges that may affect touch sensitivity.
- Restart the Device: Press and hold the power button to turn off the device, then turn it back on.
- Check for System Updates: Make sure the system is updated to the latest version.

4) Calendar Sync Issues

- Check Network: Ensure the device is connected to the internet and the connection is stable.
- Verify Group Assignment: Make sure the device has been added to the corresponding group in the app.
- Update Software: Use the latest version of both the mobile app and the device software.
- Reauthorize: In settings, remove and re-grant permissions for third-party calendar sync.

5) Device Shuts Down or Reboots Automatically

- Check Device Temperature: The device may shut down automatically if it overheats. Avoid using it in high-temperature environments.
- Update Firmware: Ensure the device is running the latest system firmware.

6) Can the calendar device's screen brightness be adjusted?

You can choose between two adjustment modes: Auto Mode: When enabled, the screen brightness automatically adapts to the surrounding light. Manual Mode: When auto adjustment is off, users can set the brightness manually. By default, Manual Mode is enabled.

7) For more questions, please visit our FAQ page or contact customer support.

www.wanminecal.com/Support/FAQ

E-mail: support@wanminecal.com

Website: www.wanminecal.com

If you encounter any issues for our service, please contact us, and we will respond within 24 hours.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.