

① Reset

Short press: Switch the frequency.
Long press for 5 seconds: Reset the controller.
(After reset, it defaults back to RGB CCT).

② OPT

Short press: Switch the current device function.
Long press for 5 seconds: Power-on status settings.
(power-on status settings is disabled by default.)

③ Push

Short press: Power On/Off
Long press: Adjust brightness (Assuming: Long press increases brightness, release and long press again decreases brightness).

④ Indicator light

Different color indicators correspond to different functions.

SPECIFICATION


Model NO.	GL-C-201P	GL-C-202P
Input Voltage	DC12-24V	
Output Current/Channel	15A Max	
Total Output Current	20A Max	
Wireless Communication	ZigBee, 2.4G RF	
Material	Flame Retardant PC	
Operating Temperature	-20~45°C	
Protection Rate	IP20	
Size	108x45x18mm	

FUNCTIONS OF DIFFERENT INDICATOR COLORS SHOWN AS FOLLOWING TABLE:

	RGB CCT	RGBW	RGB	CCT	Dimmer
Indicator Color	 White	 Yellow	 Blue	 Green	 Red

Reset method

- Button reset:** Long press the RESET button for 5 seconds, the LED strip will flash 3 times to indicate that the reset is complete.
- Power On/Off reset:**
 - Power on the light strip controller.
 - Within 2 seconds, disconnect the power.
 - Wait for at least 5 seconds to ensure a complete power-off.
 - Repeat the above steps 5 times.
 - The light strip will flash 3 times, indicating that the reset is complete.



Connecting with the Gateway

Network Connection:

- Connect the controller to the power source correctly.
- Use the gateway's app to initiate device search and wait for a certain period of time (refer to the instructions of each gateway). If the gateway doesn't find the controller, try powering off and on the controller again, or reset the controller.
- Once the gateway finds the controller, add the controller to the specified room or group.
- After successful network connection, you can start using the controller.


The product works with many ZigBee 3.0 Gateways like Philips Hue, Amazon Echo Plus or SmartThings.



ZigBee Touch Link Pairing

- Method 1: Quickly press the device's reset button three times to enter touch link pairing mode.
Method 2: Re-power the unconnected device and it will immediately enter touch link pairing mode.
Method 3: Connected devices will enter touch link pairing mode immediately after being connected to the network.

- To ensure a successful touch link pairing, the distance between the device and the remote control or touch panel must be less than 10cm.



- Set the remote control or touch panel to enter touch link pairing mode (refer to the instructions for each Touchlink remote control or touch panel for details).
- If the connection is successful, the remote control or touch panel will indicate success. After successful TouchLink, the remote control can control the device.

*Note:

- Direct TouchLink (when two devices are not added to the same ZigBee network), each device can only be connected to one remote control.
- After the device and remote control are added to the same ZigBee network, a device can be connected to a maximum of 30 remote controls.
- For Philips Bridge and Amazon Echo Plus, the device and remote control need to be added to the same network before performing TouchLink.

Pairing with 2.4GHz RF Remote Control

- ① The pairing will be timeout after 4 seconds when the device powered on.
- ② The pairing will be done successfully by pressing any zone "On"key of the 2.4G RF Remote or touch panel.
- ③ The indications from the device will **blink 3 times**.



2.4GHz Remote Control Scene Memory Function

- ① Click on the button (S1, S2, S3, S4) of the remote control to enter the scene memory function.
- ② Long press to save the scene; Short press to activate the scene.

RESET the 2.4GHz RF Network


- ① Method 1: Short press the Master "On" Key 5 times within 4 seconds after the device powered on, the device will **blink 3 times**.
- ② Method 2: Short press continuously 5 times the Zone "On" key the device being paired within 4 seconds after the device powered on, the device will **blinks 3 times**.



Wiring diagram


RGBCCT:

Under RGBCCT function, the RGBCCT strip can be connected to the device.

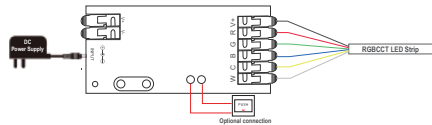


RGBW:

Under RGBW function, the RGBW strip can be connected, without any connection to "N" terminal.

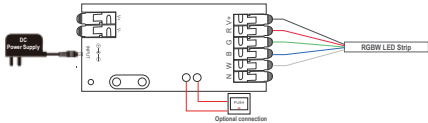


RGB:

Under RGB function, the RGB strip can be connected, without any connection to "N" terminal.

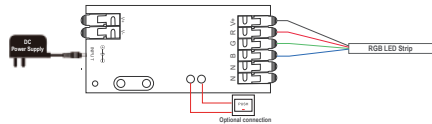


CCT:

Under CCT function, two pieces of CCT strips can be connected, without any connection to "N" terminal.

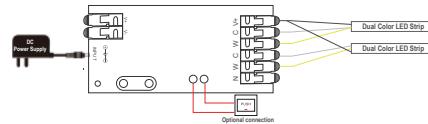

DIMMER:

Under dimmer function, five pieces of single color strips can be connected.

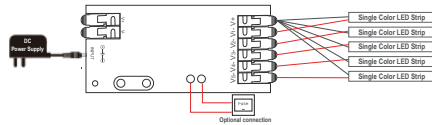

2.Frequency Settings

In order to be applicable to different power supplies, the frequency of device is selectable as 600Hz- 800Hz- 1000Hz- 2000Hz- 4000Hz- 8000Hz with default frequency 1000Hz. Once short pressing "Reset" key, the frequency will switch into the next one. The indicator will flash in Pink color and resume to previous color after "off" for 2 seconds. The rule of indicator flashing times for different frequency please refer to table.

POWER-ON STATUS & FREQUENCY SETTINGS

1.Power-on Status Settings

Long press"opt"key for more than 5 seconds, the indicator flashes light blue for 3 times, the device will remember the on-off state before the last power failure and return to the previous state when powered on. Repeat the operation again to cancel this function, the device will be on by default when powered on.

1000Hz → 2000Hz → 4000Hz → 8000Hz → 600Hz → 800Hz → 1000Hz

	600Hz	800Hz	1000Hz	2000Hz	4000Hz	8000Hz
Flashing times	1	2	3	4	5	6



- 1. Before turning on the power, please ensure that all wiring is correct and secure. Do not operate while the power is on.
- 2. Use the product under the rated voltage. Overvoltage or undervoltage may cause damage.
- 3. Do not disassemble the product, as it may cause fire and electric shock.
- 4. Do not use the product in direct sunlight, damp, high-temperature, or other harsh environments.
- 5. Do not use the product in metal shielded areas or near strong magnetic fields, as it will severely affect the wireless signal transmission of the product.

DISCLAIMERS

- ★ Our company will update the content of this manual according to product functionality improvements. The updates will be reflected in the latest version of this manual without further notice.
- ★ Due to our continuous adoption of new technologies, the product specifications may change without prior notice.
- ★ This manual is for reference and guidance purposes only. It does not guarantee complete consistency with the actual product. Please refer to the actual product for practical applications.
- ★ The components and accessories described in this manual do not represent the standard configuration of the product. The specific configuration is subject to the package contents.
- ★ All text, tables, and images in this manual are protected by relevant national laws and may not be used without our company's permission.
- ★ This product is compatible with third-party products (such as apps, hubs, etc.) as stated in the gateway compatibility chart. However, our company takes no responsibility for any issues that may arise from changes made by third-party products, resulting in incompatibility or the partial loss of functionality.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.