

Product Introduction

1.The working voltage of this product is between DC12V and the load current is 300A. The instantaneous starting current is 500A. The red wire on the small box is connected to the 12V positive pole, and the black wire is connected to the 12V negative pole. The two large terminals of the relay can control the on/off of the positive pole and the on/off of the negative pole.

Installation instructions

2.1 If it is necessary to control the negative pole, remove the original battery negative pole wire. If it is necessary to control the positive pole, remove the original battery positive pole wire.


2.2 If it is necessary to control the negative pole, relay terminal 1 should be connected to the negative pole of the battery. If it is necessary to control the positive pole, relay terminal 1 should be connected to the positive pole of the battery.

2.3 Connect the wire removed from the original battery to pin 2 of the relay. The two antenna wires on the

2.4 relay box are connected to the positive and negative poles of the battery, with the red wire connected to the positive pole of the battery and the black wire connected to the negative pole of the battery.

Description of remote control matching method:

- 1.Press the button on the circuit board continuously for 3 seconds, and the green light of the work indicator will flash three times and then stay on to indicate entering the learning code state. (Learning enabled code) After successfully matching the code by pressing the ON button on the remote control, the green light will flash three times, and then enter the next key learning code (off code). The green light will stay on, and then press the other OFF button on the remote control. After successfully matching the code, the light will also flash three times.
- 2.If no remote control signal is received for 8 seconds after entering the matching state, it will automatically exit.
- 3.After pressing the buttons on the circuit board 8 times in a row, the light flashes 8 times and all saved codes are cleared.

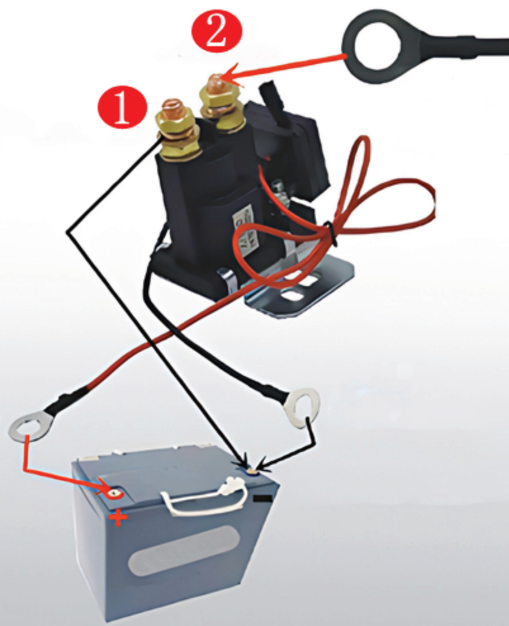

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.