


Elite 100 mini

Portable Power Station

User Manual v1.0

- For the best experience and performance, update your system to the latest firmware before first use.
- See the appendix “Update Firmware via BLUETTI App” for guidance.
- Read and understand this manual before use and keep it handy for future reference.



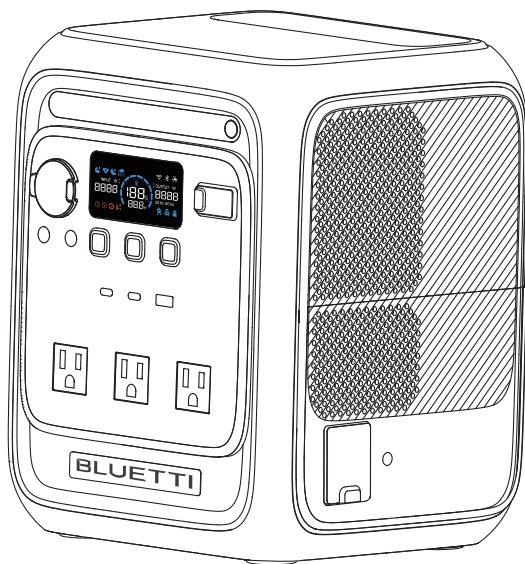

Tips

1. Fully charge the unit before first use.
2. Do not use solar panels with an open circuit voltage higher than 60 V. The solar input voltage range for the unit is 12 V–60 V.
3. If the unit's SoC falls below 5%, please recharge the unit promptly. If the SoC drops to 0%, power off the unit and charge it for at least 30 minutes before restarting.
4. Do not connect the unit's AC output to the grid.
5. If not used for more than 3 months, charge the unit to 40%–60% SoC and store it with the power off.
6. For optimum battery life, discharge and charge the unit every 3 months.

Legal Information

Notice

BLUETTI's products and services are subject to the terms and conditions agreed upon during purchase. Some aspects described in this manual may not be available under your purchase contract. Unless otherwise specified in the contract, BLUETTI makes no express or implied representations or warranties regarding the contents of this manual.

The contents of this manual are subject to change without notice. Please obtain the latest version from BLUETTI official website.

If you have any questions or concerns about this manual, please contact BLUETTI support for further assistance.

Contents

1 Safety Information 05

2 Packing List 08

3 Get to Know Your Elite 100 mini 09

 3.1 Overview..... 09

 3.2 LCD Display 10

4 Use Your Elite 100 mini 11

 4.1 Power On/Off..... 11

 4.2 Charging Options..... 11

 4.3 Power Your Devices..... 13

 4.4 LED Light..... 14

5 Configure Your Elite 100 mini 14

 5.1 Settings Mode..... 15

 5.2 Charging Mode 16

 5.3 Power Lifting Mode..... 16

 5.4 ECO Mode 16

6 View Device Information..... 17

7 UPS Feature 17

8 Grid Self-Adaption Mode 19

9 Maintenance and Care 20

10 System Switch Recovery 20

11 Sleep Mode..... 21

12 Scheduled Task 21

13 Energy Statistics..... 21

14 Specifications..... 22

15 Troubleshooting & FAQs 23

Appendix 25

1. Safety Information

INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING – When using the product, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- **WARNING – RISK OF EXPLOSIVE GASES.** Follow these instructions and those published by the manufacturer of any equipment you intend to use in the vicinity of the product to reduce the risk of battery explosion.
- **WARNING – RISK OF ELECTRIC SHOCK.** Never use the product to power tools to cut or access live parts, wiring, or materials containing them, such as building walls.
- Handle the product with care, avoiding drops, violent impacts, or tilting.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or foreign objects into the product's ports.
- Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.
- Do not move the product during operation to avoid poor connections.
- Do not expose the battery to high temperatures, as this may cause an explosion or leakage of flammable liquids or gases.
- Do not use the product in the rain or high humidity environments.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Handle the product with caution in low air pressure environments to prevent explosions or leaks.
- Charge the product in a well-ventilated area.
- Under abusive conditions, liquid may be ejected from the product's battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Battery liquid may cause irritation or burns.
- In case of fire, use a dry powder fire extinguisher appropriate for the product.
- Never dispose of the product's battery in fire, hot ovens, or by cutting it.
- Do not operate the product with a damaged cord, plug, or output cable.
- To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the product.

- Do not disassemble the product; take it to a qualified service person if service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.
- Unplug the product before any servicing to reduce the risk of electric shock.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
-   The symbols on the unit and its accessories are intended to remind you to read the instructions in the literature accompanying the product before operation and maintenance.
- The socket-outlet should be installed near the product and easily accessible for safety purposes.
- **ATTENTION** – The outputs of the USB-C, DC5521, and cigarette lighter ports are classified as PS3 under the IEC 62368-1 standard. To reduce the risk of fire, it is recommended to use protective measures, such as a fire enclosure, for any connected equipment or accessories.

Attention



Not permitted on aircraft.

When charging with lead-acid batteries, follow these safety precautions:

- a. Wear complete eye and clothing protection; do not touch eyes when working near a battery.
- b. No smoking, sparks, or flames near the battery or engine.
- c. Avoid dropping metal tools onto the battery to prevent sparks or short-circuits.

Disposal and Recycling

1. Take old electronic components and batteries to designated recycling centers. This prevents improper disposal and supports material recovery.
2. If possible, fully discharge the batteries and then place them in designated battery recycling boxes. The batteries in this product contain hazardous chemicals. Do not dispose of them with regular household waste. Please follow local laws and regulations for proper battery disposal.
3. If a battery cannot fully discharge due to a product malfunction, do not place it in the battery recycling box. Instead, contact a professional battery recycling organization for safe handling.

Handling Requirements

Recommended Number of People Based on the Weight of Product

Weight	Number of people
< 18 kg/39.7 lbs	1
18 kg–32 kg/39.7 lbs–70.5 lbs	2
32 kg–55 kg/70.5 lbs–121.3 lbs	3
> 55 kg/121.3 lbs	4 or a cart

Grounding Instructions (For AC Charging Only)

- This product must be grounded when connected to the grid. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.
- The product is equipped with an AC charging cable that has a grounding conductor and plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.
- **WARNING** – Improper connection of the grounding conductor can result in a risk of electric shock. Check with a qualified electrician if you're in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Disclaimer

Specifications and appearance are subject to change without notice.

This product is not intended for applications requiring high levels of power reliability and safety, including but not limited to aviation systems, backbone communication systems, nuclear control systems, and medical equipment. Confirm suitability before use.

BLUETTI is not liable for damage resulting from the following:


- Force majeure events, including earthquakes, fires, floods, or storms.
- Customer’s intentional misuse, negligence, or improper operation by the customer.
- Failure to follow the instructions and precautions in this manual.
- Use of non-compliant accessories, materials, or tools.

SAVE THESE INSTRUCTIONS

2. Packing List



Elite 100 mini
Portable Power Station



AC Charging Cable
(1.8 m/5.91 ft)



Grounding Screw ×2
(M5 × 10 mm)




Car Charging Cable
(Type A cig lighter plug to XT60-F,
0.72 m/2.36 ft)



Quick Start Guide &
Warranty Card


You can purchase the optional accessory below at <https://www.bluettipower.com>



Solar Charging Cable
(MC4 to XT60-F, 1.5 m/4.92 ft)

3. Get to Know Your Elite 100 mini


3.1 Overview

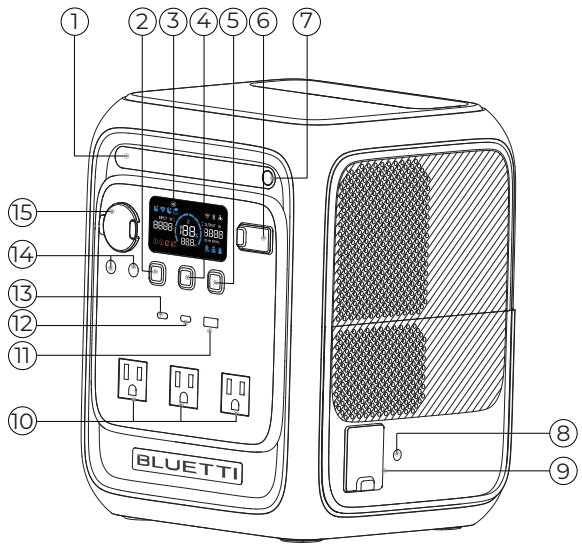

- | | |
|-----------------------|--------------------------|
| ① LED Light | ⑨ AC Input |
| ② DC Power Button | ⑩ AC Outlets |
| ③ LCD Display | ⑪ USB-A Port |
| ④ Power Button | ⑫ 65 W USB-C Port |
| ⑤ AC Power Button | ⑬ 140 W USB-C Port |
| ⑥ DC Input | ⑭ DC5521 Ports |
| ⑦ LED Button | ⑮ Cigarette Lighter Port |
| ⑧ Grounding Terminal* | |

*Used for grounding when powering certain equipment. For assistance, contact us or seek guidance from the appendix "Grounding Guidelines".

3.2 LCD Display

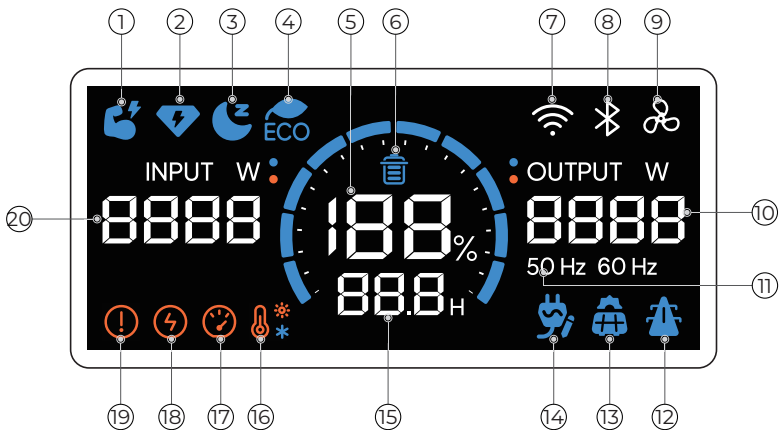

- | | | |
|--------------------------|--------------------------|-----------------------------------|
| ① Power Lifting Mode | ⑧ Bluetooth Connected | ⑮ Remaining Charge/Discharge Time |
| ② Turbo Charging | ⑨ Fan* | ⑯ Temp Alarm |
| ③ Silent Charging | ⑩ Total Output Power | ⑰ Overload |
| ④ ECO Mode | ⑪ AC Output Frequency | ⑱ Overcurrent/Short-Circuit |
| ⑤ State of Charge (SoC)* | ⑫ AC Input* | ⑲ System Fault |
| ⑥ UPS Modes* | ⑬ DC Input* | ⑳ Total Input Power |
| ⑦ Wi-Fi Connected | ⑭ System Switch Recovery | |

***State of Charge (SoC):** Flashes when the SoC drops below 5%. The progress bar fills up while charging and depletes while discharging.

UPS Modes: Not shown in Standard UPS mode.


Fan: Flashes when the fan is malfunctioning.

AC Input: Charging via a wall outlet or generator.

DC Input: Charging via solar panels or a vehicle.

4. Use Your Elite 100 mini

4.1 Power On/Off

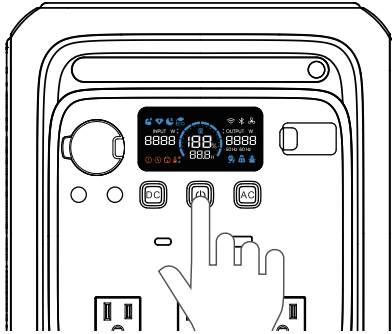

Power

- **On:** Press the power button. A lit button indicates standby.
- **Off:** Press and hold for 2 seconds.

AC/DC Output

- **On:** When the Elite 100 mini is on, press the AC or DC power button.
- **Off:** Press and hold the AC or DC power button for 2 seconds.


Note: When the Elite 100 mini is on, press any button to activate the display.

4.2 Charging Options

4.2.1 Wall Outlet

Plug the Elite 100 mini into a standard wall outlet. It stops charging when fully charged.


Note: Do not plug the unit's AC charging cable into its own AC outlets. Doing so could damage the connected device.

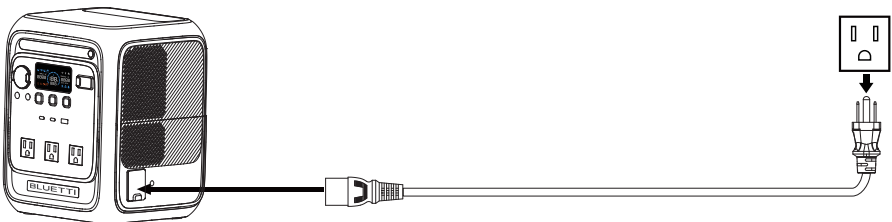

4.2.2 Solar Panel

Connect the solar panel(s) either in series or parallel, then use the solar charging cable to link them to the XT60 input port on the Elite 100 mini.

Note: Make sure the solar panel(s) meet the following requirements:
V_{OC}: 12 V–60 V Current: 10 A Max. Power: 350 W Max.

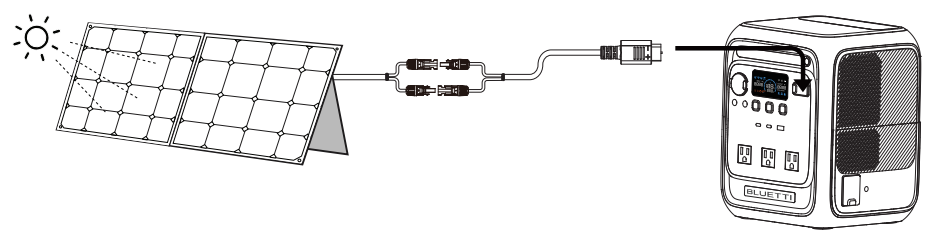


In the app, set the DC input source to **PV** or **Others** in the **Advanced Settings**. The charging strategies for these two sources are shown below:

DC Input Source	High Current On	High Current Off
PV	$12\text{ V} \leq U^* \leq 16\text{ V}, I^* \leq 8.2\text{ A}$ $16\text{ V} < U \leq 60\text{ V}, I \leq 10\text{ A}$	$12\text{ V} \leq U \leq 30\text{ V}, I \leq 8.2\text{ A}$ $30\text{ V} < U \leq 60\text{ V}, I \leq 10\text{ A}$
Others	/	

*U: Solar input voltage; I: Input current

4.2.3 Car

Connect the Elite 100 mini to your car's 12 V or 24 V cigarette lighter port using the car charging cable. It charges at up to 96 W (12 V) or 192 W (24 V).

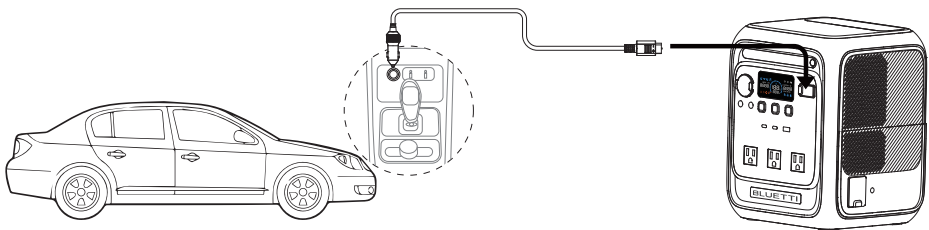


Notes:

- Make sure your car has power and the engine is running while charging.
- Charging automatically stops when the car battery voltage is too low to prevent over-discharge.

4.2.4 Generator

Connect the Elite 100 mini to a generator using the AC charging cable. The charging stops automatically when fully charged.

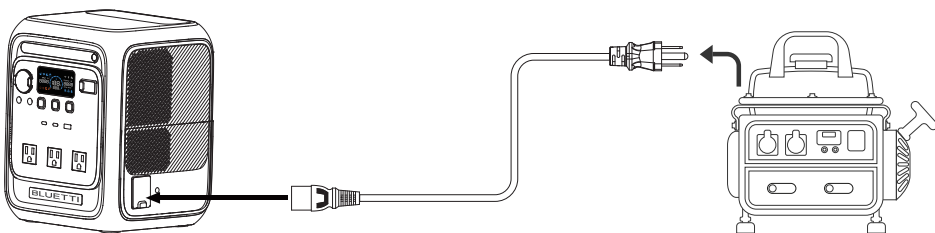


Notes:

- Use a generator with a pure sine wave output that matches the required voltage and frequency, and meets or exceeds the Elite 100 mini's input power needs.
- It's recommended to enable **Grid Self-Adaption** mode when charging from a generator.
- Lower the **Max. Grid Input Current** in the app if the generator output is lower than the Elite 100 mini's charging power.


4.3 Power Your Devices

AC Outlets

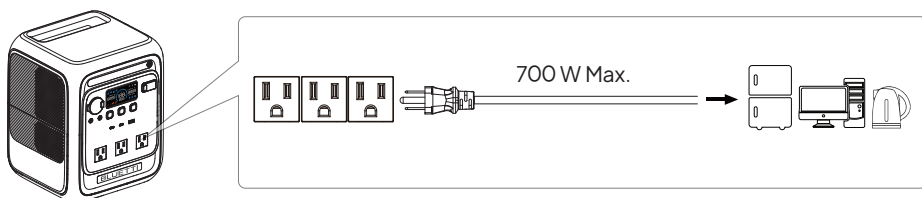

Note: When servicing devices connected to the unit, make sure to unplug them from the outlets. Even if the AC output is turned off, physically unplugging the devices is necessary for complete disconnection.

DC Outlets

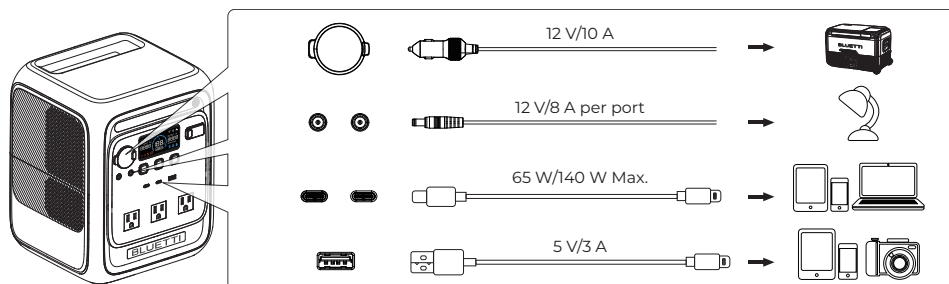

Note: To achieve 5 A output from the 140 W USB-C port, use a 5 A USB-C cable with a built-in E-Marker chip.

4.4 LED Light


When the Elite 100 mini is on, press the LED button to cycle through: Warm Light → Cold Light → SOS mode. Press and hold for 2 seconds to turn off.

5. Configure Your Elite 100 mini

The Elite 100 mini can be configured using either the unit's buttons or the BLUETTI app. For advanced settings — such as Sleep mode, scheduled power, Grid Self-Adaption mode, and detailed ECO mode settings — use the app. Refer to the app manual for details.

5.1 Settings Mode


Enter the Mode: Press and hold the AC and DC power buttons simultaneously for about 2 seconds. The frequency icon flashes.

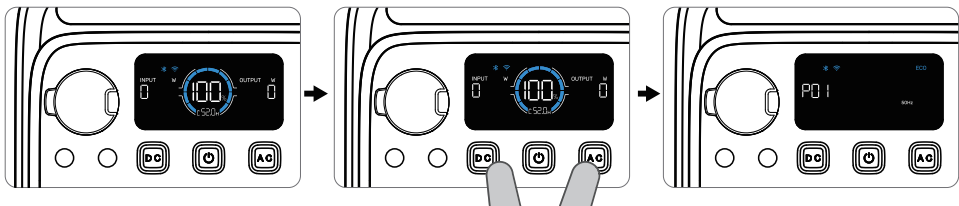

Exit the Mode: Press and hold both the AC and DC power buttons again. After 1 minute of inactivity, the Elite 100 mini automatically exits without saving any changes.

Adjust settings in Settings Mode.

- Turn off the AC power first.
- Press the DC power button to navigate through the items, and press the AC power button to adjust.

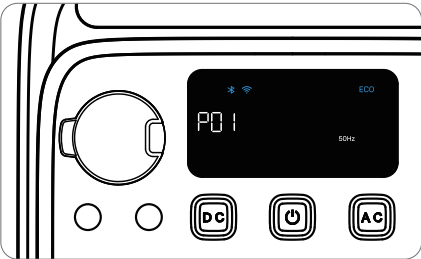

Page Code	Setting
P01	Frequency
P03	Charging Mode
P04	Power Lifting Mode
P05	ECO Mode
P06	Bluetooth
P07	Wi-Fi

5.2 Charging Mode

The Elite 100 mini offers three charging modes: Standard (default), Turbo, and Silent.

Mode	Max. AC Input	Max. Solar Input	Max. AC + Solar Input	AC Charging Time (Estimated)	Note
Standard	550 W	350 W	550 W	139 min	Battery-friendly
Turbo	700 W	350 W	700 W	80% in 82 min	Quick recharge
Silent	300 W	300 W	300 W	230 min	Quiet operation

Notes:

- Charging time may vary depending on the ambient temperature. The above data is for reference only.
- **Max. Grid Charging Current** can be set in the app's **Charging Mode > Custom**.

5.3 Power Lifting Mode

Power Lifting mode allows the Elite 100 mini to power up to 1,400 W for pure resistive loads like kettles, electric blankets, hair dryers, and similar heating devices. This mode is disabled by default and can be enabled in the BLUETTI app.

Note: This mode is only for pure resistive loads rated 700 W–1,400 W. While the Elite 100 mini can handle such loads, its actual output power is still 700 W.

5.4 ECO Mode

When ECO modes are turned on, please be cautious that the Elite 100 mini will shut off the AC or DC output after a period of low or no load.

Set the shutdown power threshold (AC-ECO: 10–40 W, DC-ECO: 5–20 W) and auto-off time (1–4 hours) through the app.

AC-ECO and DC-ECO modes are disabled by default.


Notes:

- AC-ECO and DC-ECO modes are unavailable during AC charging or when System Switch Recovery or Scheduled Task is active.
- Disable the ECO mode when connecting small devices or critical appliances such as lights.

6. View Device Information

View device information in Settings Mode, too.

- Go to the P01 frequency page and long press the DC power button to view the unit's SN. Press the DC power button again to navigate through other information.
- When on Fault History page, long press the AC power button for about 2 seconds to clear the history.

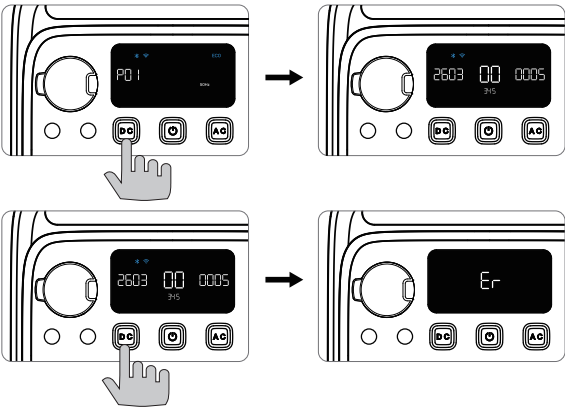


Page Code	Information
2911 91 1818 444	Serial Number (SN)
Er	Error Code
HI	Fault History
UE	Version

7. UPS Feature

Connect the Elite 100 mini to the wall, and it directly draws power from the outlet to operate connected devices. It swiftly switches to battery power within 10 ms during an outage. Set and configure the desired UPS modes through the app.


• Standard

The Elite 100 mini charges using available solar and grid power, with a priority on solar.

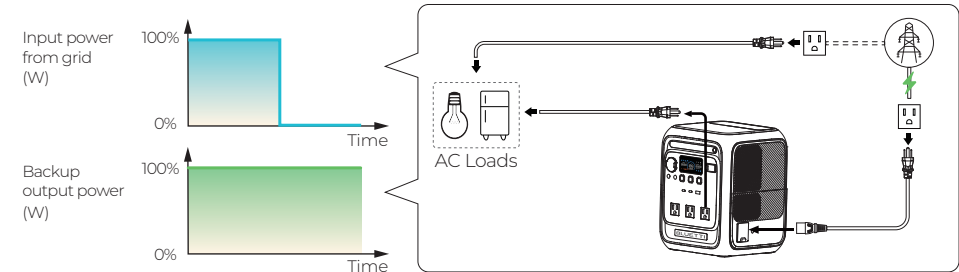


• Time Control

Save costs by scheduling the Elite 100 mini to charge during off-peak hours and power devices during peak hours.

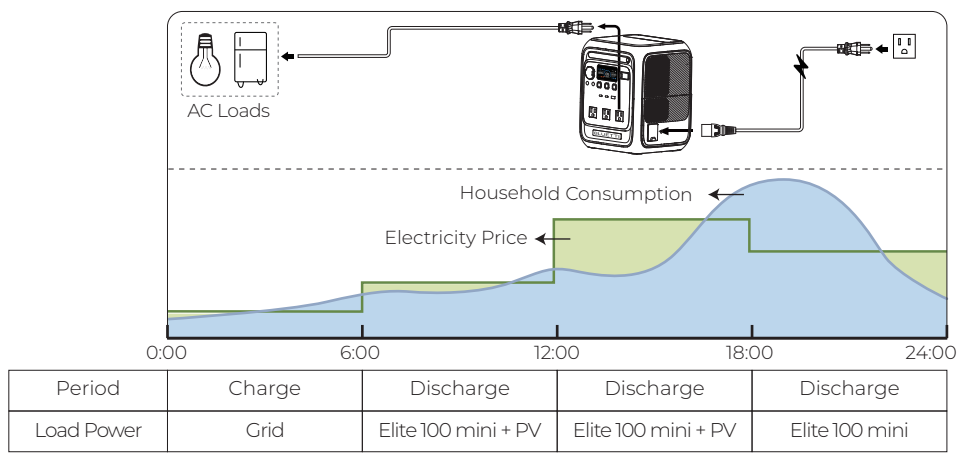


• PV Priority

Efficiently uses solar energy. The Elite 100 mini initially charges from the grid to a set SoC and then seamlessly switches to solar charging.

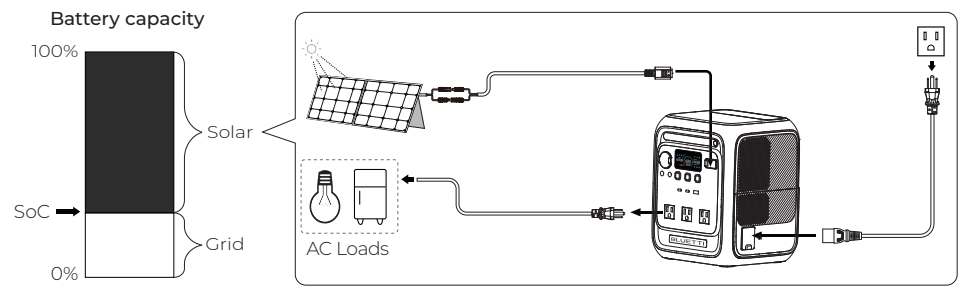

• Customized


Personalize your own UPS mode with your desired charging/discharging schedule, set battery SoC limits, and control the schedule and grid input switches.

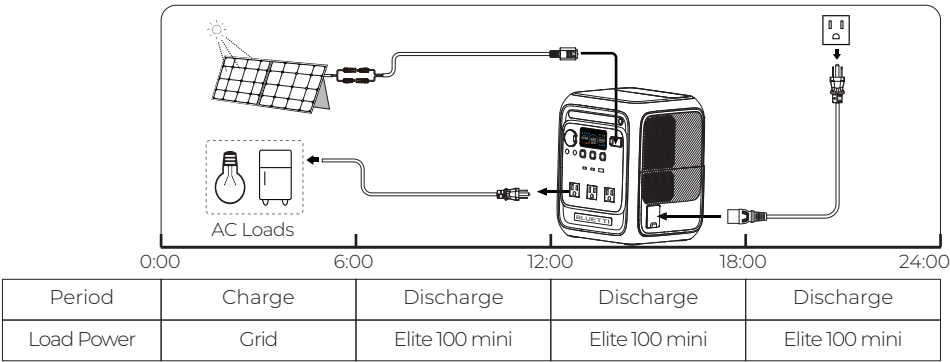

Attention: Not for devices like data servers or workstations that require high-performance UPS. BLUETTI assumes no liability for issues arising from violating this restriction.

8. Grid Self-Adaption Mode

When charging with an unstable generator or grid power, or if consumption power exceeds charging power, enable this mode in the app. The Elite 100 mini automatically adjusts to handle power fluctuations, protecting the unit and connected devices from potential issues due to variations in power quality.

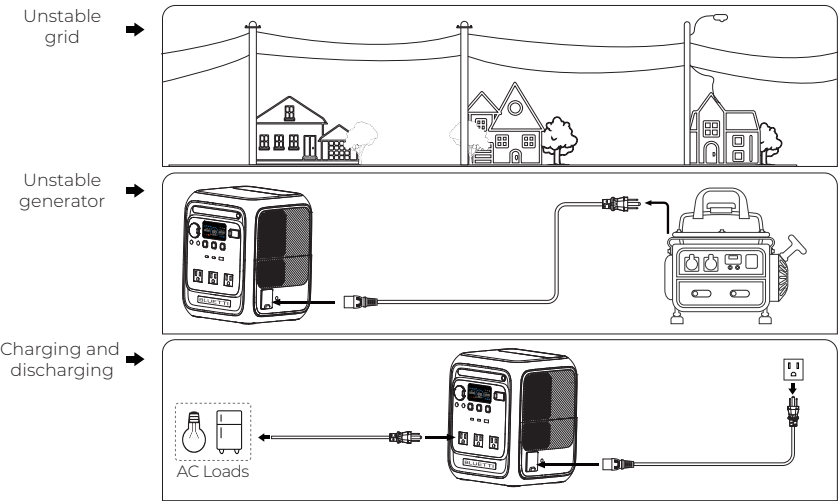

9. Maintenance and Care

- When the SoC drops to 5%, charge the unit promptly.
- Before storing, charge to 40%–60% SoC, then power off and disconnect all cables.
- Store in a cool, dry place, away from flammable materials.
- Perform a full cycle every 3 months using the app's **Battery Maintenance** or manually to maintain battery health.
- Avoid extended storage; it may impact performance and lifespan.

If SoC drops to 0% during storage or startup:

- Shut down immediately.
- Charge within 48 hours.
- Keep at 5°C to 35°C (41°F to 95°F) for 6 hours before charging.
- Recommended to charge via an AC source; if using solar energy, ensure an input of over 100 W.

10. System Switch Recovery

When the battery runs out and the unit shuts down, it saves the ON/OFF status of the AC and DC power buttons.

- If connected to grid power, the saved settings will automatically restore when the battery reaches 5%.
- If not connected to grid power, the settings will be restored only after the battery reaches 5% and at least 30 minutes have passed since the unit turned off.

For example, in standard UPS mode, if a refrigerator is plugged into the AC outlet of the Elite 100 mini and the grid power goes out, the unit will immediately provide backup power. If the battery depletes, the unit will shut down but retain the AC output status as ON. When grid power returns and the battery is above 5%, the unit will automatically turn the AC output back ON to continue powering the refrigerator.

Notes:

- During recovery, the AC and DC output settings can be adjusted via the app.
- To restore power immediately, turn off this feature.

11. Sleep Mode


When enabled in the app, the Elite 100 mini enters this mode after shutdown and can be powered on remotely. If the battery falls below the set SoC limit, the unit shuts down and can only be restarted using the power button on it.

12. Scheduled Task

AC and DC power can be controlled via the app, using weekly schedules, selected days within a month, or a single schedule.
For example, the Elite 100 mini can be set to turn on at 3 PM and off at 4 PM every Monday.

13. Energy Statistics

- a. Daily Power Profile: View 24-hour input and output power.
- b. Energy Statistics: Track cumulative input and output energy by day, month, or year.
- c. SoC Trend: View state of charge (SoC) over 24 hours.

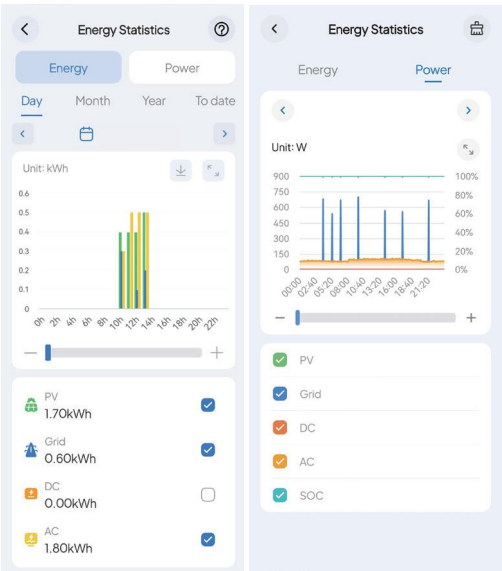

Note: Ensure a stable Wi-Fi connection for accurate data.

14. Specifications

Model	Elite 100 mini
Battery Capacity	1,004.8 Wh (314 Ah)
Battery Type	LiFePO ₄
Weight	Approx. 10.7 kg/23.59 lbs
Dimensions (L × W × H)	235 × 215.5 × 293 mm/9.25 × 8.48 × 11.54 in
Charging Temperature	0°C to 40°C/32°F to 104°F
Discharging Temperature	-20°C to 40°C/-4°F to 104°F
Storage Temperature	-20°C to 40°C/-4°F to 104°F
Operating Humidity	10% to 90%
Noise	50 dB Max.
Max. Operating Altitude	2,000 m/6,561.68 ft
AC Output	700 W Max., 120 V, 50/60 Hz
Surge Power	735–840 W (2 min); 840–1,050 W (2 s); ≥ 1,050 W (0.5 s)
DC Output	
1 × Cigarette Lighter Port	12 V/10 A
2 × DC5521 Port	12 V/8 A per port, 8 A in total
1 × USB-A	15 W Max., 5 V/3 A
1 × 65 W USB-C	65 W Max., 5 V–20 V/3.25 A
1 × 140 W USB-C	140 W Max., 5 V–15 V/3 A, 20 V/5 A, 28 V/5 A
Total Output Power	200 W Max.
AC + DC Output	700 W Max.
AC Input (Charging/Charging + Bypass)	700 W Max. (80% in 82 min @ 25°C/77°F)
DC Input	350 W Max., 12 V–60 V, 10 A Max.
AC + DC Input	700 W Max.
Uninterruptible Power Supply (UPS)	
Switchover Time	≤ 10 ms
LED Light	≤ 240 lm

Note: The cigarette lighter port and DC5521 ports are wired in parallel with a total maximum output of 10 A.

15. Troubleshooting & FAQs

On the Error Code page, the **E-** and error code appear simultaneously on the screen. See the table below for guidance.

Error Code	Description	Solutions
E001	Inverter overload	• Check device power usage. • Reduce load if too high.
E002	Inverter overtemperature protection, AC output off	• Wait 10 min for the unit to cool down. • Turn on the AC output again.
E003	Inverter short-circuit	• Check devices for short-circuits. • Disconnect and fix.
E026	Overall unit overload	• Reduce load if the power usage is too high. • Check devices for short-circuits. • Disconnect and fix.
E033	PV overvoltage	• Ensure the PV input voltage is within 12 V–60 V.
E039	PV overtemperature	• Wait 10 min for the unit to cool down. • Re-enable the PV input.
E065	DC output short-circuit	• Reduce load if the power usage is too high. • Check devices for short-circuits. • Disconnect and fix.
E067	DC output overcurrent	• Check device power usage. • Reduce load if too high.
E068	DC output overtemperature	• Wait 10 min for the unit to cool down. • Restart your devices.
E085	Charging temperature too high	• Wait for the unit to cool down before charging it again.
E086	Charging temperature too low	• Place the unit in an ambient temperature range of 0°C to 40°C (32°F to 104°F).
E087	Discharging temperature too high	• Wait for the unit to cool down before using it again.
E088	Discharging temperature too low	• Place the unit in an ambient temperature range of -20°C to 40°C (-4°F to 104°F).
E113	Grid overvoltage	• Verify home grid voltage. • Enable the Grid Self-Adaption mode in the app. • Contact the utility company if necessary.
E114	Grid undervoltage	
E115	Grid overfrequency	• Verify home grid frequency. • Enable the Grid Self-Adaption mode in the app. • Contact the utility company if necessary.
E116	Grid underfrequency	
Others	/	• Contact BLUETTI support for help.

FAQs (Frequently Asked Questions)

Q1: How do I know whether my devices will work with this product?

A: Keep the total power below 700 W. Some devices with motors or compressors may consume 2–4 times their rated power during startup, which could easily overload the Elite 100 mini.

Q2: Can I use third-party solar panels to charge this product?

A: Yes, you can use third-party solar panels with an open circuit voltage of 12 V–60 V and MC4 connectors. Avoid mixing different types of solar panels.

Q3: Can it charge and discharge at the same time?

A: Yes, the Elite 100 mini supports pass-through charging.

Q4: Why is the charging power often too low?

A: The built-in BMS adjusts the charging power based on battery temperature and SoC to protect the battery and extend its life.

Q5: How to calculate the operation time?


A: Operation time = Battery Capacity × DoD × η ÷ (Load power + Elite 100 mini's Self-consumption)

Note: DoD (Depth of Discharge) is 95%. η (inverter efficiency) is over 90%. The Elite 100 mini self-consumption is about 10 W.

Q6: Why does a warning come up when using a diesel heating pump with the cigarette lighter port?

A: The pump may require more initial power to start. Use a compatible adapter to start and run the pump with our AC outlets.

Check the BLUETTI app for detailed FAQs and troubleshooting.

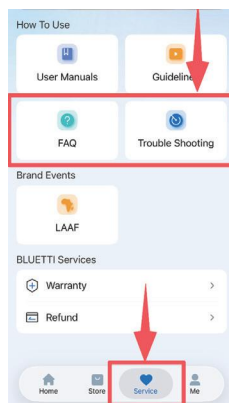

Appendix

Update Firmware via BLUETTI App

Keeping firmware updated is IMPORTANT for optimal performance. For detailed instructions, refer to the app user manual in the app. This manual uses the Elite 200 V2 upgrade as an example.


1. Download the BLUETTI app

Scan the QR code or search for “BLUETTI” in the App Store or Google Play to download the app.




2. Log in or sign up

Log in with a BLUETTI account. If there is no account, create one by following the on-screen instructions.

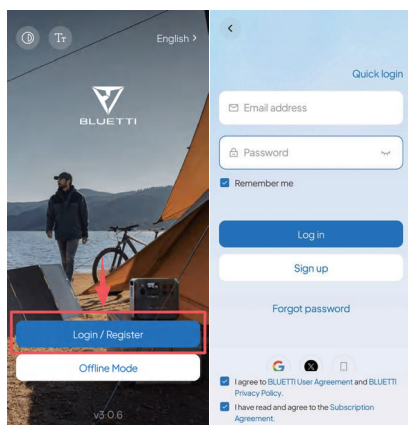


3. Bind the unit

- Tap Add Device directly or access All Devices > Add Device to start the process.
- Select the unit from the available device list, or choose Add Manually and enter the unit's serial number (SN).
- Alternatively, tap Scan on the Home page or in Add Device page to bind via QR code.

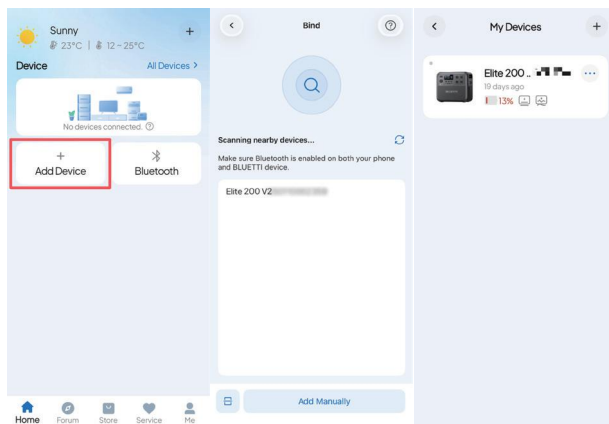

4. Connect via Bluetooth

On the My Devices page, tap the unit and select **Bluetooth** as the connection method.

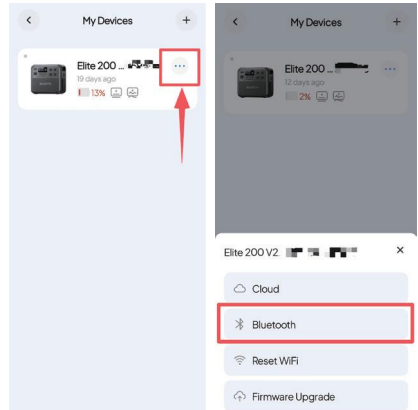


5. Check for Firmware Updates

Tap **Upgrade** to access the Upgrade page. The app will check for the latest firmware version available for the unit.

6. Download and Install the Update

If a new firmware update is available, tap **Upgrade** and follow the on-screen instructions.

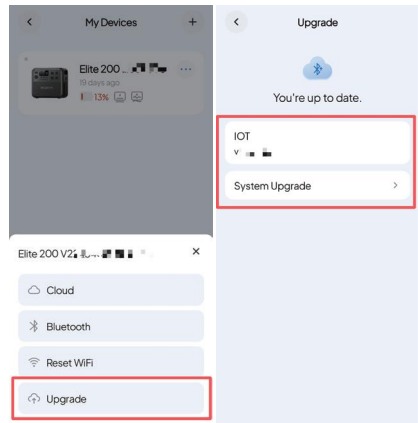


Notes:


- Ensure the unit remains powered on and connected during the update.
- Keep your phone and the unit close together (recommended range: 5 m/16.4 ft).
- Do not exit app until done.

Grounding Guidelines

Only use the grounding terminal when the product is connected to the home grid using a 2-pin cable, or if the wall outlet's grounding is ineffective, and the connected device features a metal case.

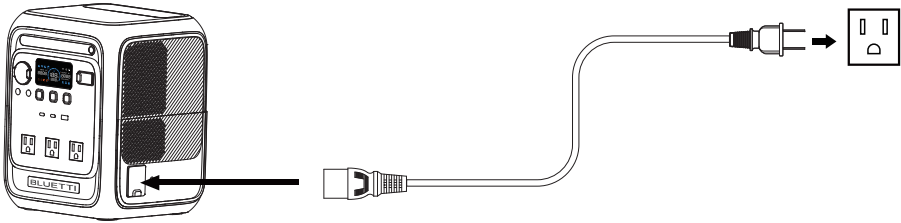

Use a cable with OT terminals for grounding. Connect one end to the grounding terminal with a grounding screw and the other end to the wall outlet or home distribution box ground.

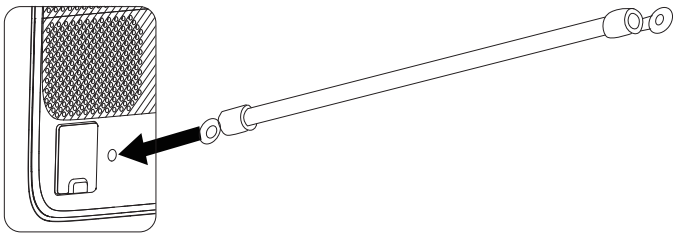

Compliance

• FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE: FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

• IC Caution

This device contains licence-exempt transmitter(s) / receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement: The equipment complies with ISED Radiation exposure limits set forth for uncontrolled environments. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Déclaration d'exposition aux RF : L'équipement est conforme aux limites d'exposition aux rayonnements ISDE définies pour les environnements non contrôlés. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

CAN ICES (B)/NMB (B)

Need help? We're here for you!

 +1 909-570-0909

Mon-Sat, 06:00-17:00 (PDT)

✉ service@bluettipower.com



Community



@ BLUETTI Official



@ bluetti_inc




@bluetti.inc



@bluetti.inc

BLUETTI Power Inc.

3037 E. Warm Springs Rd. Suite 200 - Office #9 Las Vegas, NV 89120

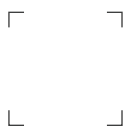

Certificate

Inspector: _____

QC: _____

ALWAYS SHARE EXCELLENCE