



SG-HR-I2-IOL Technical Manual

V1.0.1



The purpose of this practical manual is to provide the complete hardware appearance parameter, electrical parameter, necessary schematic circuit diagram of the SG-HR-I2-IOL high-frequency RFID reader. If necessary, corresponding modifications can be made to the deployment plan of the reader based on the information provided in the manual to adapt to the application situations in different industrial fields. The manual mainly includes the following contents:

- Functional description of the RFID reader
- RFID reader interface definition, mechanical and electrical parameters
- Cable cord set Pin definition, mechanical and electrical parameters

If you have any unclear information in the manual or any inconsistency with practical situations, please contact with us.

Contact Information:

- Guangdong Sygole Intelligent Technology Co., Ltd.
- Tel.: + 86-769-26627955

Specification for Marks in the Manual

Caution Sign



If there is a "Caution Mark" in the manual, it indicates that the user needs to pay attention during use. If the user fails to follow or ignores such information during use, the equipment may be directly or indirectly caused to have abnormal operation. Please be careful to read the content with such mark.

Document change resume

Version	Date	Content	Reviser
V1.0.0	2025/04/24	First release	wdx
V1.0.1	2025/5/29	Add FCC security information	HYQ

Contents


1. Introduction of the RFID reader	1
1.1 Topology diagram of wiring	1
1.2 Introduction to the functions	1
1.3 Overview of the control command	1
2. Hardware instructions.....	3
2.1 Introduction of the interface	3
2.2 Communication interface.....	3
2.3 Indicator status	3
3.Enclosure parameters.....	5
3.1 Physical parameters	5
4. Electrical parameters.....	6
4.1 Power supply.....	6
5. Performance parameters.....	7
5.1 Environment requirements.....	7
5.2 COM interface	7
5.3 Air interface	7
5.4 Service frequency	7
5.5 Wireless Read-write Distance.....	7
5.6 Certificates and other information	7
6. Installation method	8
6.1 Fixation	8
6.2 Installation spacing	8
6.3 Tag installation	9
7.Safety Information	10

Table Index

Table 1 . Overview of control commands and functions.....	2
Table 2 . Overview of the return messages and causation.....	2
Table 3 . Definition of IO-Link interface (M12 A-Code 5pin Male) pins	3
Table 4 . Description of LED indicators.....	3
Table 5 . Physical parameters of the RFID reader enclosure	5
Table 6 . Electrical parameters of the RFID reader power supply	6
Table 7 . Output power of the RFID reader	6
Table 8 . The RFID Reader working environment requirements	7
Table 9 . The RFID reader communication parameters	7
Table 10 . The air interface protocol	7
Table 11 . Radio frequency of the RFID reader	7
Table 12 . Wireless Read-write Distance	7
Table 13 . Ingress protection, certificates and test standard.....	7

1. Introduction of the RFID reader

1.1 Topology diagram of wiring

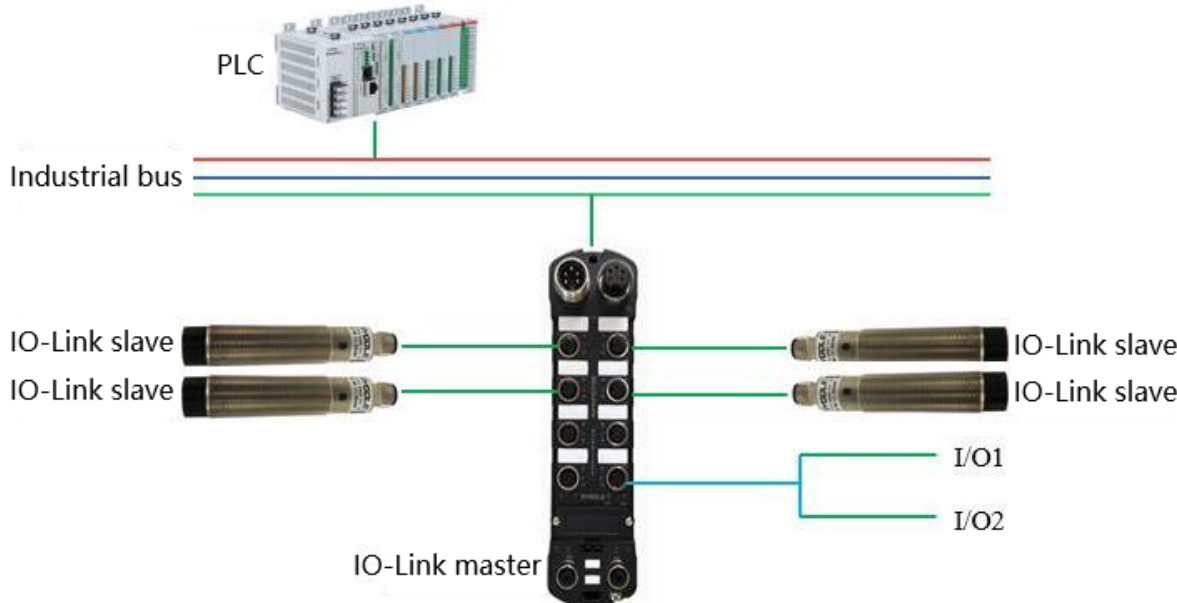

1.2 Introduction to the functions

SG-HR-I2-IOL RFID reader is an integrated high-frequency RFID read-write device. Its working frequency is 13.56 MHz, complies with ISO-15693 standard, and supports the IO-Link slave communication protocol. The enclosure is made of high-strength nickel plated brass. The RFID reader has the advantages of reliable identification and convenient installation in a narrow position.

Tag operations

SG-HR-I2-IOL supports all mandatory functions and some optional functions defined by ISO-15693 protocol, and can operate ISO-15693 protocol electronic tags.

Command system

The SG-HR-I2-IOL RFID reader can interact data with upper level equipment through the command system. Such as reading a UID, reading data by bytes, writing data by bytes, obtaining tag storage information, etc.

Performance features:

- High protection level (IP67 level).
- Electromagnetic anti-interference design.
- Efficient data collection capability, can effectively improve the accuracy of MES system data acquisition.

1.3 Overview of the control command

All control commands are executed at once. After the RFID reader receives the control command, the reader will return a message to confirm the execution status of the command, regardless of the execution result. Control commands and return messages are shown in the following table:

Table 1. Overview of control commands and functions

Command	Function
Get Inventory	Read the UID of the tag within the antenna field range
Read data by bytes	Read tag memory by byte, requiring the starting address and number of bytes as parameters
Write data by bytes	Write tag memory by byte, requiring the starting address and number of bytes as parameters
Get storage features	Read the parameters of the tags, such as the size and number of the storage blocks
Get the device serial number	Read the chip ID within the RFID reader as the unique serial number of it

Table 2. Overview of the return messages and causation

Return message	causation
Executed successfully	The command were executed successfully
Executed failed	The command were executed failed
No tag	No readable tag near the RFID reader antenna
Check error	The command data packet has a code error during the transmission process
Parameter error	The parameters bound to the command are incorrect
Received timeout	The data length received by the RFID reader is less than the value of the Data Length field in the command frame, and than RFID reader's waiting time exceeds the time out set.

For a detailed description of packet structure and function, refer to the *High Frequency Reader Development Manual*.

2. Hardware instructions

2.1 Introduction of the interface

The SG-HR-I2-IOL high-frequency RFID reader has an external interface that provides both power and communication. There is an indicator, namely the power/tag indicator. The following text provides a detailed definition and specification of them.



2.2 Communication interface

SG-HR-I2-IOL supports IO-Link slave communication protocol, and the specific definition of each interface is as follows:

Table 3. Definition of IO-Link interface (M12 A-Code 5pin Male) pins

No.	Definition	Illustration
1	24V	
2	reserve	
3	0V	
4	C/Q	
5	PE	

2.3 Indicator status

SG-HR-I2-IOL has two LED indicators, defined as:

Table 4. Description of LED indicators

Name	Description
------	-------------


Power/Tag indicator	OFF: not power on Solid Green: the power supply is normal Flashing Green: communicate with master Solid Blue: there is a tag in the read area but no read or write operation.
---------------------	--

3.Enclosure parameters

3.1 Physical parameters

Table 5. Physical parameters of the RFID reader enclosure

Name	Parameter
Dimension	$\varphi 30 \times 92.2\text{mm}$ ($\pm 0.5\text{mm}$)
Weight	100g ($\pm 10\text{g}$)
Material	Nickel plated brass + Nylon
Color	Silver and Black
Thread	M30*1.5mm

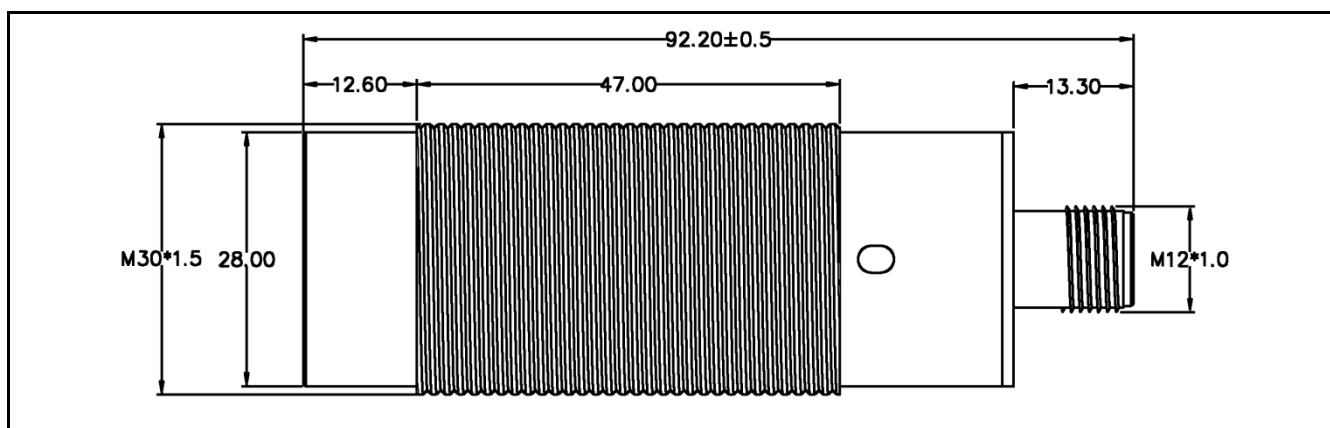

(Unit in millimeter)

4. Electrical parameters

4.1 Power supply

Table 6. Electrical parameters of the RFID reader power supply

Supply voltage	24V DC $\pm 10\%$
Average current	Less than 0.07A@24VDC

5. Performance parameters

5.1 Environment requirements

Table 8. The RFID Reader working environment requirements

Operating Temperature	-25°C~+70°C
Storage Temperature	-25°C~ +85°C
Relative Humidity	5% ~ 95% RH (no condensation)

5.2 COM interface

Table 9. The RFID reader communication parameters

COM interface	IO-Link 1.1
COM bit rate	COM3(230.4kbit/s)
Minimum communication cycle	5ms
Maximum communication distance	20 Meters

5.3 Air interface

Table 10. The air interface protocol

Air interface protocol	ISO-15693
-------------------------------	------------------

5.4 Service frequency

Table 11. Radio frequency of the RFID reader

Radio frequency	13.56MHz
------------------------	-----------------

5.5 Wireless Read-write Distance

Table 12. Wireless Read-write Distance

Wireless Read-write Distance	0~30mm(It is related to the type of carrier type)
-------------------------------------	--

5.6 Certificates and other information


Table 13. Ingress protection, certificates and test standard

Ingress protection	IP67
Certificates	CE, ROHS2.0
Drop test standard	GB/T 2423.7-2018 (In the packaged state , 3m fall)
Anti vibration test standard	GB/T 2423.10-2019/IEC 60068 -2 -6:2007
Surge protection test standard	GB/T 17626.5-2019 , 2KV

6. Installation method


6.1 Fixation

The product has M30 * 1.5 threads, please use two nuts to clamp it onto the bracket. If the grounding of the on-site environment is not standard (grounding resistance greater than 4 ohms is considered non-standard), plastic brackets should be used to ensure stable product operation.

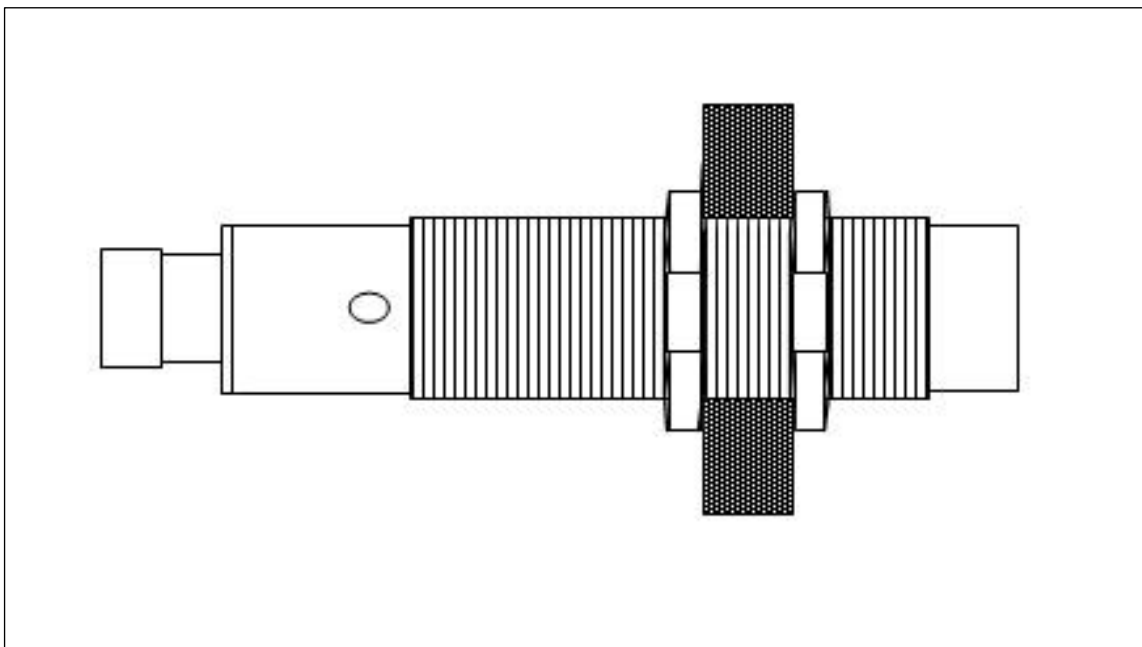


6.2 Installation spacing

When there are multiple RFID readers to be installed, the distance between the readers needs to be more than 100 mm.

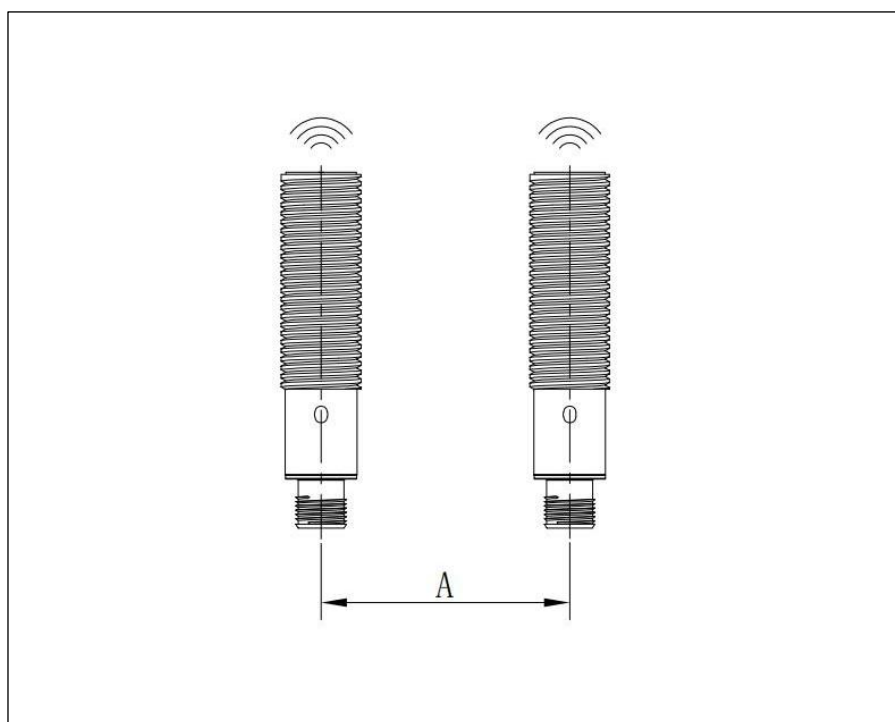

6.3 Tag installation

When installing tags, please ensure the induction plane of the RFID reader parallel to the plane on the front of the tag.

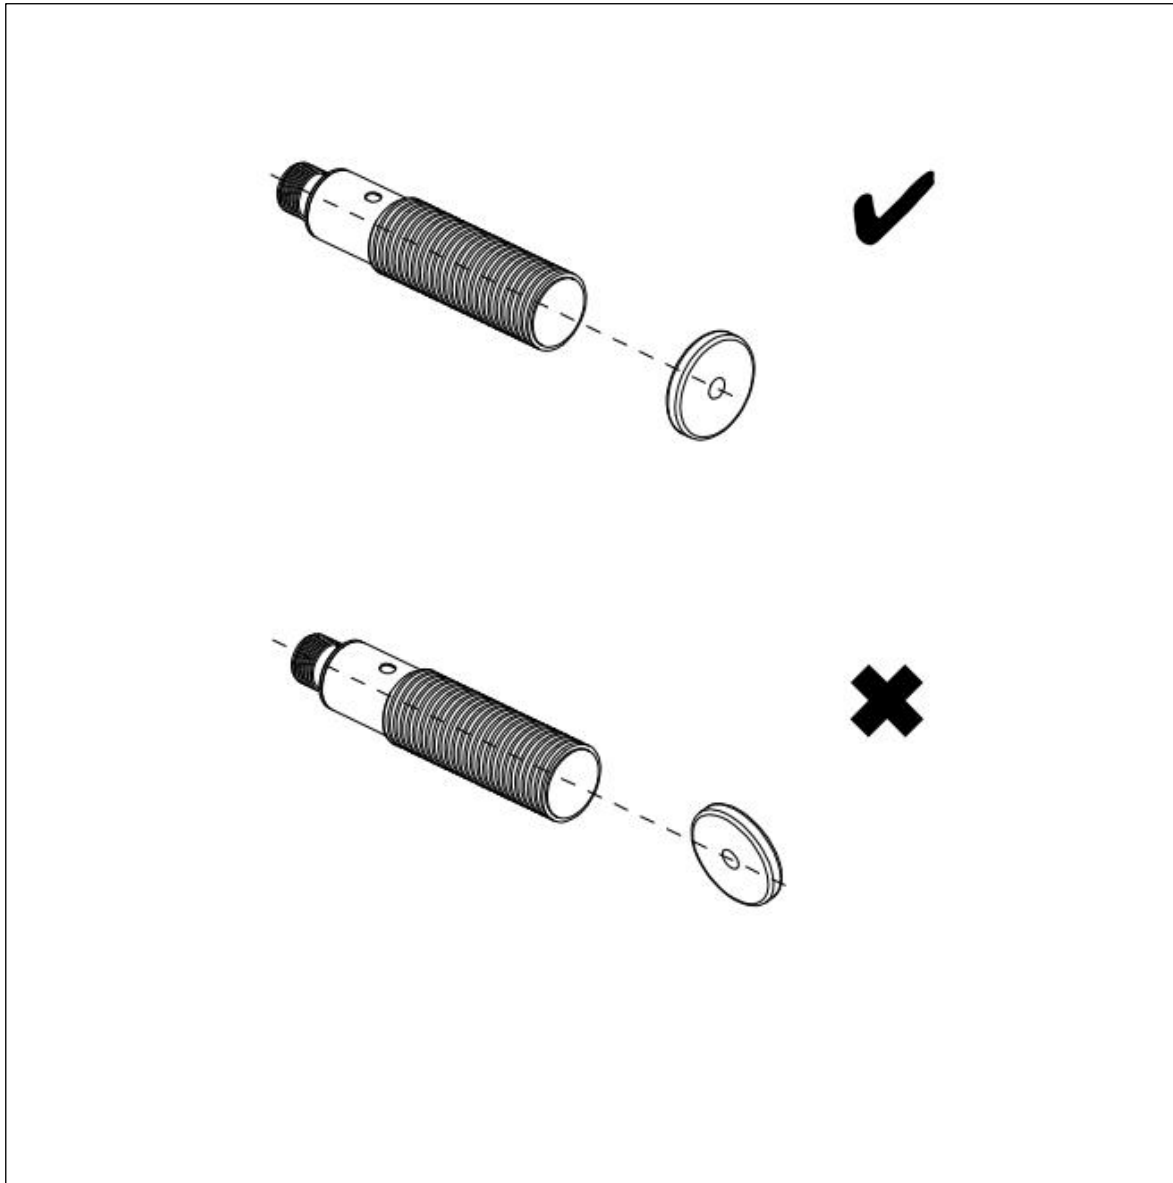

7.Safety Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.