


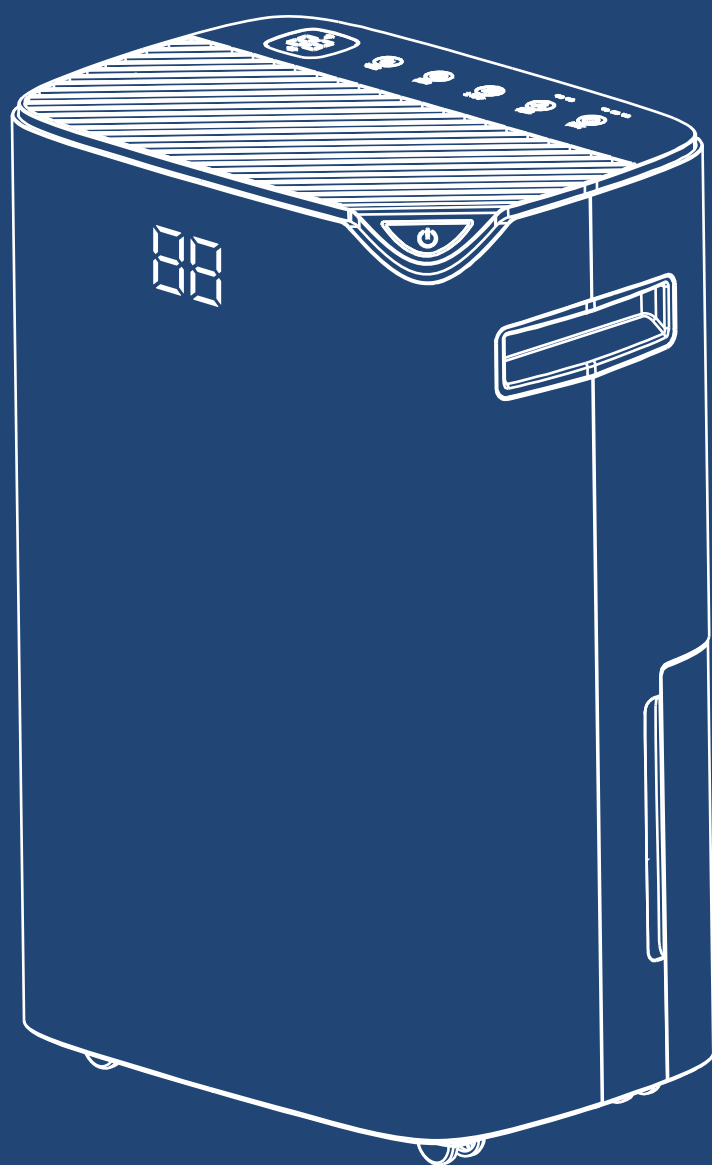

Energy Star Rated
Home Dehumidifier



USER MANUAL

Guardian
HD100-WIFI

Thank you for purchasing our appliance.
Please read the entirety of this user manual carefully prior to using this appliance.

FOR CUSTOMERS

Thank you for purchasing our dehumidifier. Sijipt wishes that our products and services can bring convenience to your work and life.



TO ACCESS CUSTOMER SUPPORT FASTER

If there is any problem of the product, please contact Sijipt Customer Service at psmy202403@outlook.com with your Purchase Order ID to help you address the problem more effectively.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	P.4
WARNING for Using R32 Refrigerant	P.6
MACHINE CONSTRUCTION	P.17
CONTROL PANEL	P.18
SET UP YOUR DEHUMIDIFIER	P.20
OPERATING INSTRUCTIONS	P.22
CARE & CLEANING	P.24
TROUBLESHOOTING	P.25
WARRANTY INFORMATION	P.26

BEFORE FIRST USE

To prevent any internal damage,
it is very important to keep
refrigeration units (like this one)
upright throughout their journey.
Please leave it standing upright and
outside the box for 24 HOURS
before plugging it in.



IMPORTANT SAFETY INSTRUCTIONS

■ Warning for Using R32 Refrigerant:

Transportation, marking and storage for units that employ flammable refrigerants

1.General

The following information is provided for units that employ flammable refrigerants.

2.Transport of equipment containing flammable refrigerants

Attention is drawn to the fact that additional transportation regulations may exist with respect to equipment containing flammable gas. The maximum number of pieces of equipment or the configuration of the equipment permitted to be transported together will be determined by the applicable transport regulations.

3.Marking of equipment using signs

Signs for similar appliances used in a work area are generally addressed by local regulations and give the minimum requirements for the provision of safety and/or health signs for a work location.

All required signs are to be maintained and employers should ensure that employees receive suitable and sufficient instruction and training on the meaning of appropriate safety signs and the actions that need to be taken in connection with these signs.

The effectiveness of signs should not be diminished by too many signs being placed together.

Any pictograms used should be as simple as possible and contain only essential details.

4.Disposal of equipment using flammable refrigerants

See national regulations.

5.Storage of equipment/appliances

The storage of the appliance should be in accordance with the applicable regulations or instructions, whichever is more stringent.

6.Storage of packed (unsold) equipment

Storage package protection should be constructed in such a way that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge .

The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

IMPORTANT SAFETY INSTRUCTIONS

VERY IMPORTANT !

Please do not install or use your equipment before you have carefully read this manual. Please keep this instruction manual for an eventual product warranty and for future reference.

Requirements for operation, service and installation manuals of appliances using flammable refrigerants

Warning

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources for example:




open flames, an operating gas appliance or an operating electric heater.

Do not pierce or burn.

Be aware that refrigerants may not contain an odour.



Refrigerant
Safety Group
A2L

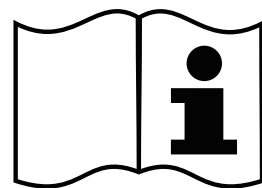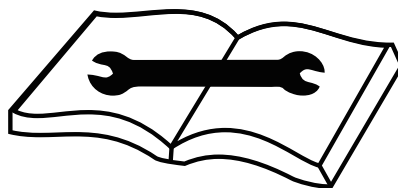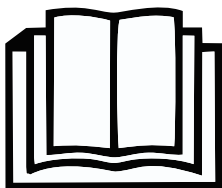

WARNING for Using R32 Refrigerant:

Qualification of workers

The manual shall contain specific information about the required qualification of the working personnel for maintenance, service and repair operations. Every working procedure that affects safety means shall only be carried out by competent persons. Examples for such working procedures are:

- breaking into the refrigerating circuit;
- opening of sealed components;
- opening of ventilated enclosures.

Competence of service personnel

1.General

Information of procedures additional to usual information for refrigerating appliance installation, repair, maintenance and decommission procedures is required when an appliance with FLAMMABLE REFRIGERANT is affected.

The training of these procedures is carried out by national training organisations or manufacturers that are accredited to teach the relevant national competency standards that may be set in legislation.

The achieved competence should be documented by a certificate.

2.Information and trainin

2.1)The training should include the substance of the following:

2.2)Information about the explosion potential of FLAMMABLE REFRIGERANTS to show that flammables may be dangerous when handled without care.

2.3)Information about POTENTIAL IGNITION SOURCES, especially those that are not obvious, such as lighters, light switches, vacuum cleaners, electric heaters.

2.4)Information about the different safety concepts:

Unventilated-Safety of the appliance does not depend on ventilation of the housing. Switching off the appliance or opening of the housing has no significant effect on the safety. Nevertheless, it is possible that leaking refrigerant may accumulate inside the enclosure and flammable atmosphere will be released when the enclosure is opened.

Ventilated enclosure-Safety of the appliance depends on ventilation of the housing. Switching off the appliance or opening of the enclosure has a significant effect on the safety. Care should be taken to ensure sufficient ventilation before.

WARNING for Using R32 Refrigerant:

Ventilated room -Safety of the appliance depends on the ventilation of the room. Switching off the appliance or opening of the housing has no significant effect on the safety. The ventilation of the room shall not be switched off during repair procedures.

2.5)Information about refrigerant detectors:

- Principle of function, including influences on the operation.
- Procedures, how to repair, check or replace a refrigerant detector or parts of it in a safe way.
- Procedures, how to disable a refrigerant detector in case of repair work on the refrigerant carrying parts.

2.6)Information about the concept of sealed components and sealed enclosures according to IEC60079-15:2010.

2.7)Information about the correct working procedures:

a)Commissioning

- Ensure that the floor area is sufficient for the REFRIGERANT CHARGE or that the ventilation duct is assembled in a correct manner.
- Connect the pipes and carry out a leak test before charging with refrigerant.
- Check safety equipment before putting into service.

b) Maintenance

- Portable equipment shall be repaired outside or in a workshop specially equipped for servicing units with FLAMMABLE REFRIGERANTS.
- Ensure sufficient ventilation at the repair place.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark. The standard procedure to short circuit the capacitor terminals usually creates sparks.
- Reassemble sealed enclosures accurately. If seals are worn, replace them.
- Check safety equipment before putting into service.

c) Repair

- Portable equipment shall be repaired outside or in a workshop specially equipped for servicing units with FLAMMABLE REFRIGERANTS.

WARNING for Using R32 Refrigerant:

- Ensure sufficient ventilation at the repair place.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark.
- When brazing is required, the following procedures shall be carried out in the following order:
 - Safely remove the refrigerant following local and national regulations. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building;
 - Purge the refrigerant circuit with oxygen free nitrogen;
 - Evacuate the refrigerant circuit;
 - Purge the refrigerant circuit with nitrogen for 5 min (not required for A2L refrigerants).
 - Evacuate again (not required for A2L refrigerants).
 - Remove parts to be replaced by cutting or brazing.
 - Purge the braze point with nitrogen during the brazing procedure required for repair.
 - Carry out a leak test before charging with refrigerant.
- Reassemble sealed enclosures accurately. If seals are worn, replace them.
- Check safety equipment before putting into service.

d) Decommissioning

- If the safety is affected when the equipment is putted out of service, the REFRIGERANT CHARGE shall be removed before decommissioning.
- Ensure sufficient ventilation at the equipment location.
- Be aware that malfunction of the equipment may be caused by refrigerant loss and a refrigerant leak is possible.
- Discharge capacitors in a way that won't cause any spark.

WARNING for Using R32 Refrigerant:

- Remove the refrigerant. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building.
- When FLAMMABLE REFRIGERANTS except A2L REFRIGERANTS are used.
 - Evacuate the refrigerant circuit.
 - Purge the refrigerant circuit with nitrogen for 5 min.
 - Evacuate again.
 - Fill with nitrogen up to atmospheric pressure.
 - Put a label on the equipment that the refrigerant is removed.

e) Disposal

- Ensure sufficient ventilation at the working place.
- Remove the refrigerant. If the recovery is not required by national regulations, drain the refrigerant to the outside. Take care that the drained refrigerant will not cause any danger. In doubt, one person should guard the outlet. Take special care that drained refrigerant will not float back into the building.
- When flammable refrigerants are used,
 - evacuate the refrigerant circuit.
 - purge the refrigerant circuit with oxygen free nitrogen.
 - evacuate again. (not required for A2L refrigerants); and
 - cut out the compressor and drain the oil.

WARNING for Using R32 Refrigerant:

Information on servicing

1.General

The manual shall contain specific information for service personnel according.

2.Checks to the area

Prior to beginning work on systems containing FLAMMABLE REFRIGERANTS, safety checks are necessary to ensure that the risk of ignition is minimised. For repair to the REFRIGERATING SYSTEM.

3.Work procedure

Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

4.General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

5.Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i. e. non-sparking, adequately sealed or intrinsically safe.

6.Presence of fire extinguisher

If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

7.No ignition sources

No person carrying out work in relation to a REFRIGERATING SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

8.Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

WARNING for Using R32 Refrigerant:

9. Checks to the refrigerating equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS:

- the actual REFRIGERANT CHARGE is in accordance with the room size within which the refrigerant containing parts are installed;
- the ventilation machinery and outlets are operating adequately and are not obstructed;
- if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

10. Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

WARNING for Using R32 Refrigerant:

11.Repairs to sealed components

Sealed electrical components shall be replaced.

12.Repair to intrinsically safe components

Intrinsically safe components must be replaced.

13.Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

14.Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas(25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

NOTE Examples of leak detection fluids are:

- bubble method.
- fluorescent method agents.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak.

WARNING for Using R32 Refrigerant:

15. Removal and evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration.

The following procedure shall be adhered to:

- safely remove refrigerant following local and national regulations;
- evacuate;
- purge the circuit with inert gas (optional for A2L);
- evacuate (optional for A2L);
- continuously flush or purge with inert gas when using flame to open circuit ;and
- open the circuit.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

16. Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.

WARNING for Using R32 Refrigerant:

- Ensure that the REFRIGERATING SYSTEM is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

17.Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with instructions.
- h) Do not overfill cylinders (no more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked.

WARNING for Using R32 Refrigerant:

18. Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing FLAMMABLE REFRIGERANTS, ensure that there are labels on the equipment stating the equipment contains FLAMMABLE REFRIGERANT.

19. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i. e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.


If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

WARNING for Using R32 Refrigerant:

- 1.This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2.Children should be supervised to ensure that they do not play with the appliance.
- 3.If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 4.That the appliance shall be installed in accordance with national wiring regulations.
- 5.The applicable operating temperature range for this unit is 41°F-95°F;
- 6.The red casing on the process pipe needs to be replaced with a new one and put back in place when service is done.


MACHINE CONSTRUCTION

Parts Description

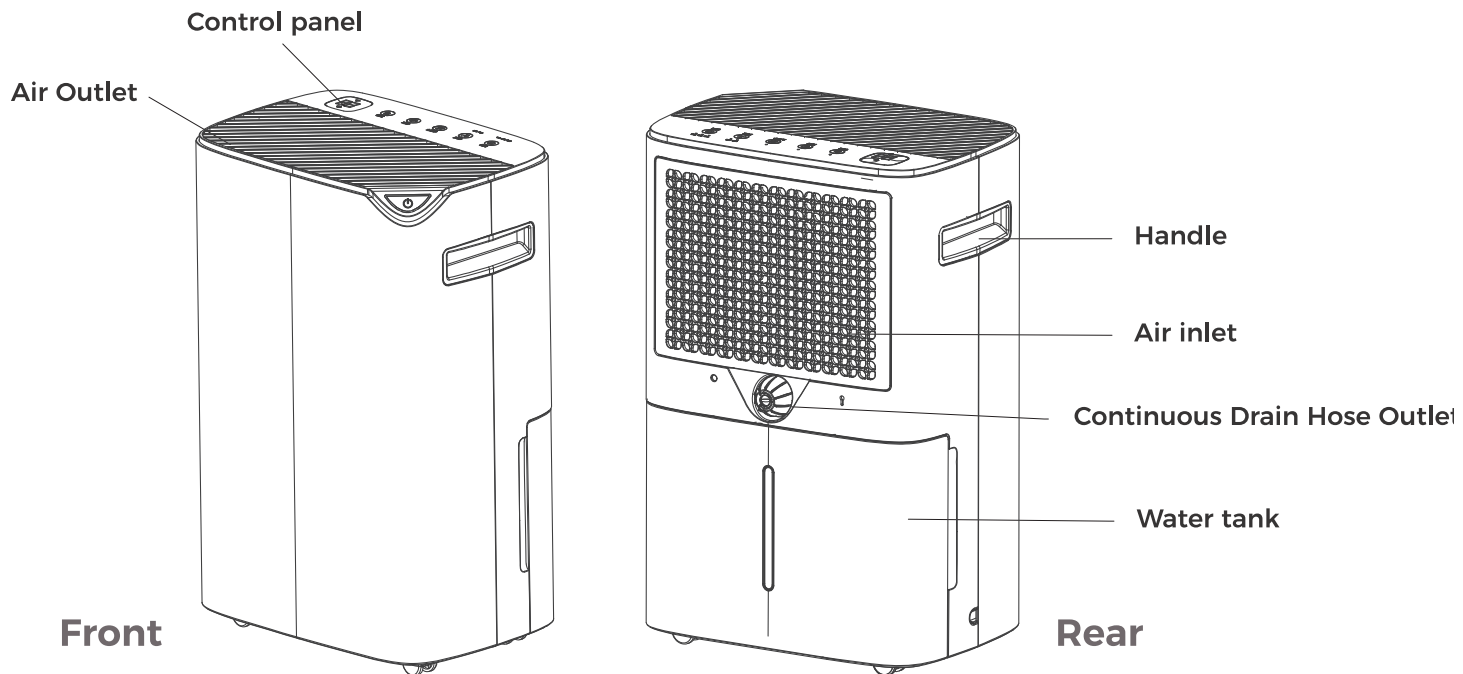

NOTE: Do not cover or block the air inlet or outlet.

Control Panel

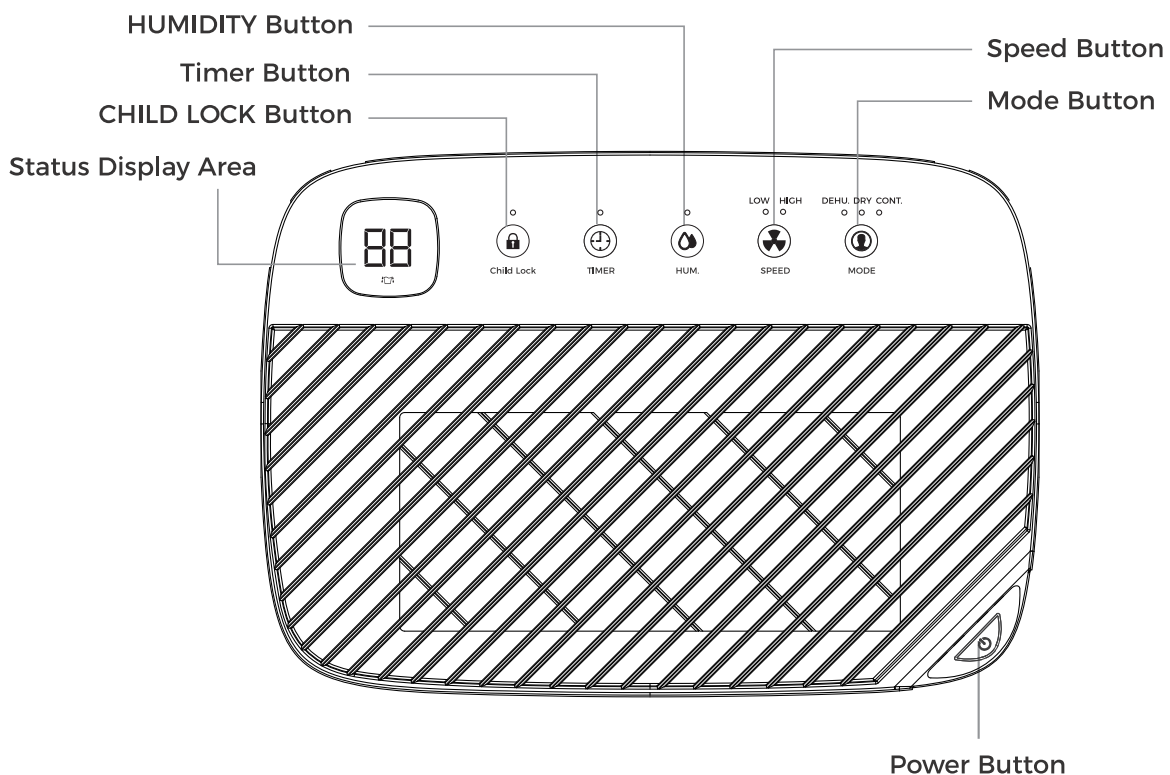

CONTROL PANEL



Child Lock



TIMER



HUM.



SPEED



MODE



LED Display

Shows the set %, humidity level from 30% to 80%, or auto start/stop time(0-24) while setting, then shows the actual (*5% accuracy) room* humidity level in a range of 30%RH (Relative Humidity) to 90%RH (Relative Humidity).



Bucket State Indicator

When the water bucket is full, the machine will automatically shut off, and the water's full light flashes. When the water full light is removed, the water light " " is put out and the machine can be restarted. Caution: The water bucket must be placed in the right position, otherwise it will cause the water full alarm.



Defrost Function

When running at a lower ambient temperature, the system will automatically determine whether there is frost, if frost will automatically defrost.

Note:

Defrosting Action: high wind fan operation, compressor stop.

Defrost Display: when defrosting, the power lights " o " flashing.



Child Lock Setting

Press and hold the CHILD LOCK button for 3-5 seconds to lock or unlock the control panel. When the CHILD LOCK function has been activated, the indicator illuminates, and other buttons will be disabled. To regain use of the buttons, unlock the control button.



Timer Setting

Press to set an Auto-on or an Auto-off timer (1- 24 hours) can be set circularly. The value increases or decreases by 1 H every time this button is pressed.

The "Timer Setting" display can show the remaining timing, and automatically display the current humidity after a few seconds.

CONTROL PANEL



Child Lock



TIMER



HUM.



LOW •
HIGH •

SPEED



DEHU. •
DRY •
CONT •

MODE

Humidity Setting



Press the "humidity button", and adjust the target Humidity Range (30%-80%), The value increments 5RH% every time this button is pressed and can be set circularly.No key operation seconds after the automatic withdrawal. When the humidity value is set to 30 RH%, a continuous dehumidification operation is carried out.

Wind Speed Setting



Here are two types of wind speed: high wind speed and low wind speed. Press the [wind speed] key in the power on state to switch one wind speed windshield, recyclable.

Note:

The wind speed cannot be set in dry clothes mode, and the wind speed is automatically selected as high wind.

Mode Setting



The device has three operating modes: dehumidification mode, drying mode and continuous dehumidification mode.

In the power on state, press the [mode] button, and the device will cycle through the dehumidification and dry clothes continuous dehumidification modes. Each time you press the mode key, the working mode will switch accordingly.

Note:

Dehumidification Mode: humidity and wind speed can be set.

Continuous Dehumidification Mode: humidity cannot be set, wind speed can be set.

Dryclothes Mode: humidity and wind speed cannot be set.

Power Off Memory Function



Press to turn the dehumidifier on and off.

Note:

If the dehumidifier shuts off unexpectedly due to power being cut, the dehumidifier will restart with the previous function setting automatically when the power resumes.

Set Up Your Dehumidifier

- Connect the device to the power supply.
- Turn on the Phone positioning and Bluetooth
- Ensure your smartphone is connected to a 2.4GHz WiFi network.

Follow the steps below to get started with your new dehumidifier.

Step1. Download "Smart Life" App

Get the "Smart Life" App from the Apple App Store or scanning the QR code below.




OR



Step2. Log In


- Open the app, and click the "Register" button. If you don't have an account, create one first.
- Click "Create Home" to add multiple homes. To edit details, go to "Home Management".

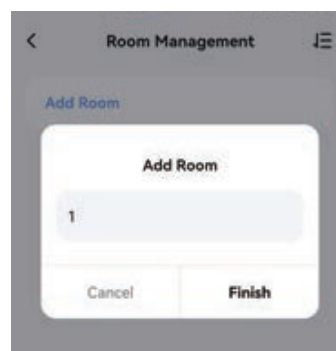

Set Up Your Dehumidifier

Step3. Add Your Dehumidifier

Tap the "+" button in the app and select "Small Home Appliances" and then choose "Dehumidifier (WIFI)". **Turn off the device (keep it plugged in)**

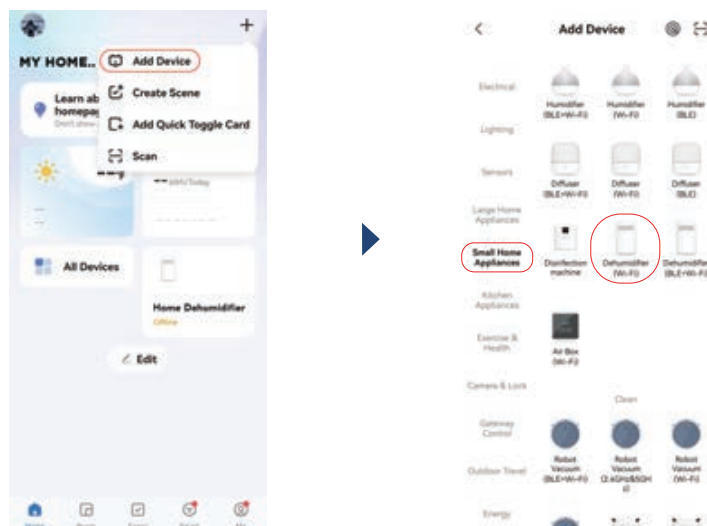


Step4. Pairing Dehumidifier



Hold the "Fan Speed" button for 5+ seconds until the device beeps and the WiFi light flashes(pairing mode).

- Tap "Confirm the indicator is blinking rapidly"; Select your WiFi network & enter password and Click "Confirm" – pairing will start
- The device will connect to WiFi in about 30 seconds, and the WiFi light will stay on.
- The Smart Life App will show a "Success" message. Tap "Finish" to complete setup—you can now control the device in the app.




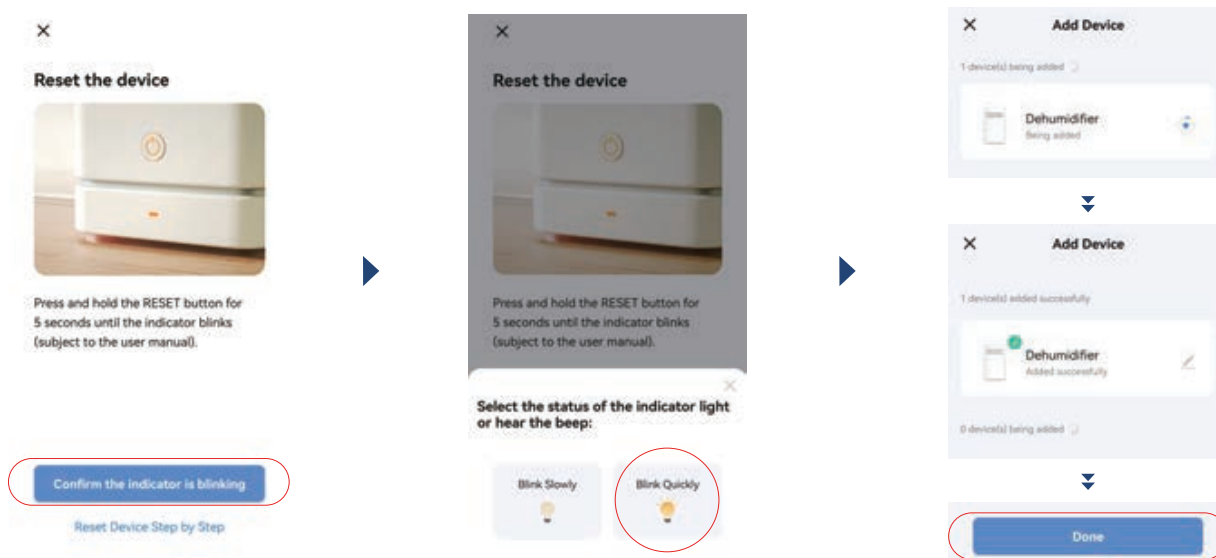


OPERATING INSTRUCTIONS

REMOVING THE COLLECTED WATER

When the water tank is full, the water is full of lights flashing, and then automatically stop, at this time must empty the water tank. And place the water tank correctly.

Empty the Water Tank

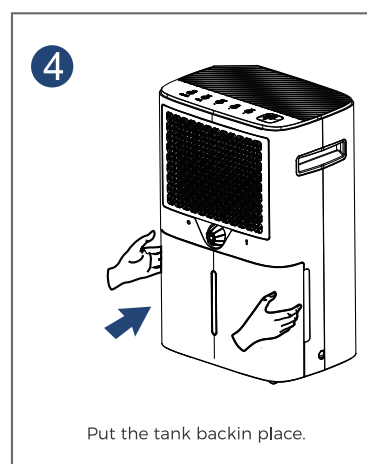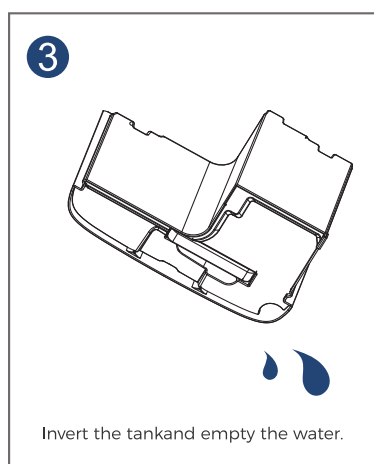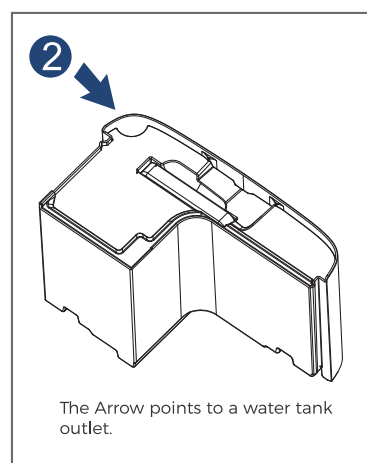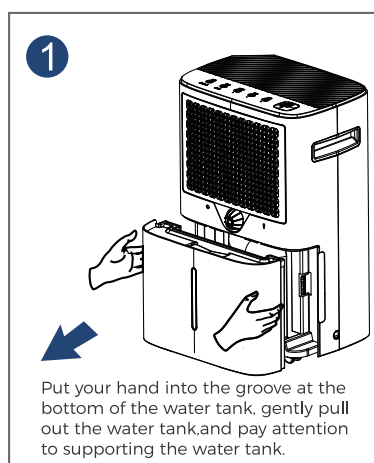



Note:

- ◆ Do not remove the floater in the water tank. If the floater of the water tank is removed, the water sensor will not be able to normally sense the water level, and the water will overflow from the water tank when the water is full.
- ◆ If the tank is dirty, only can be used in cold or warm water wash, do not use detergent, steel wool, chemical processing dust cloth, gasoline, benzene, thinner or other solvent treatment, otherwise it may cause damage to the tank Water Leakage.
- ◆ When the water tank is put in, the water tank is pressed tightly with both hands. If the water tank is not placed, the water sensor will still be started, and the dehumidifier will not be able to run.

OPERATING INSTRUCTIONS

CONTINUOUS DRAINING

Unplug the power supply, take out the bucket, remove the drain outlet cover, insert the water hose into the continuous drain outlet and then push the water tank back, connect the power to start running. The outlet of water hose should be lower than the continuous drain outlet 3.9inch or more, and the hose cannot be bent to ensure smooth drainage.

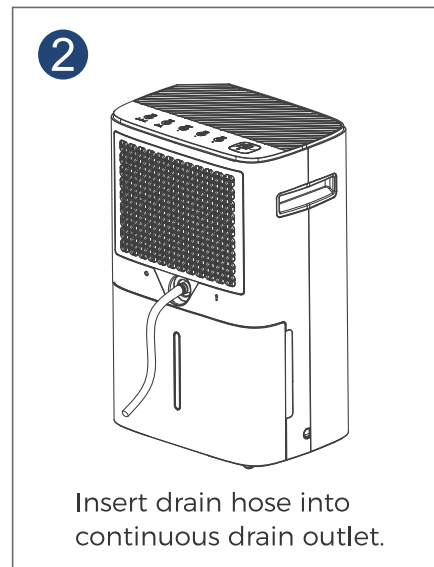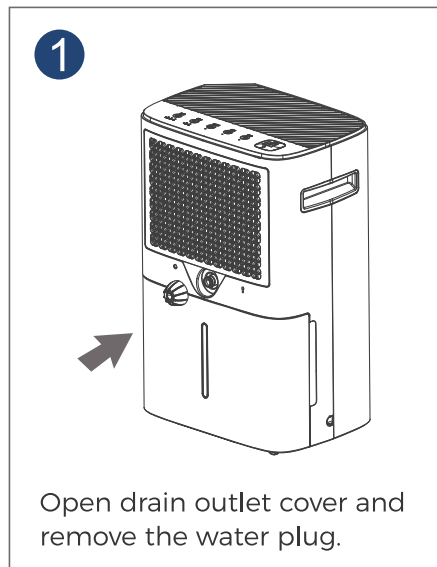

 The water plug must be removed, otherwise the water cannot be discharged through the hose.

