
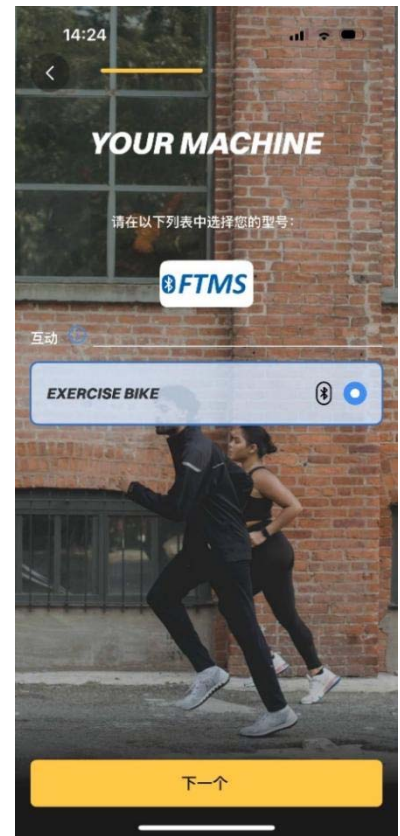


User Manual for HH2009 Bike Bluetooth Connection APP



KINOMAP Connection Steps

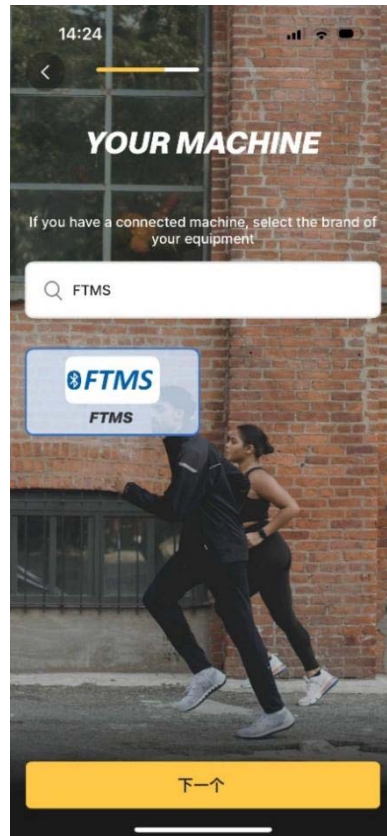

1. Open the APP, enter this interface, and select **Exercise Bike**.

2. Select the brand **FTMS**, then click **Next**

3 Select **EXERCISE BIKE**, then click **Next**

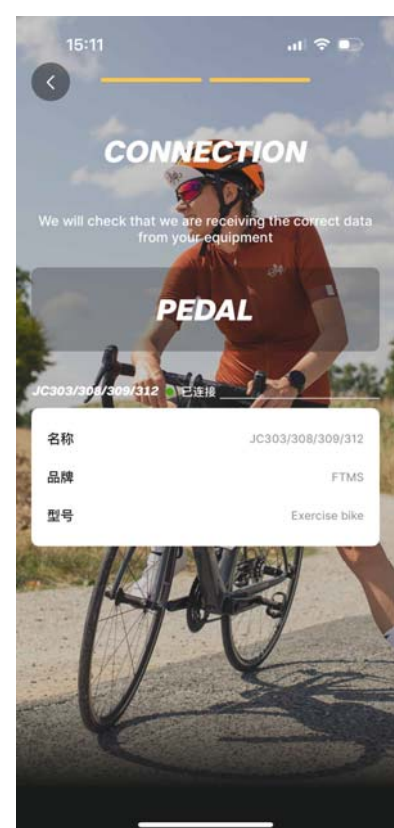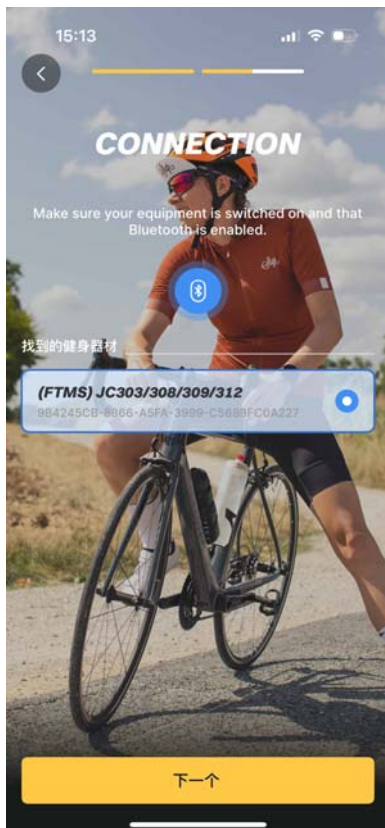

4. Scan for the Bluetooth signal of the electronic watch, and select the bike model (**JC303/308/309/312**), then click **Next**

5.Fill in the brand and model, click **OK**, then click **OK** again. The connection is successful when the electronic watch

screen turns off

6. After successful connection, enter this interface. At this point, you can connect to the speed signal



7. After connecting to the speed signal, enter this interface, and the exercise data will start to appear

ZWIFT Connection Steps



1. Log in to your account, then click the arrow on the right to proceed to the next step

2. Perform Bluetooth pairing, select **Power Source**, and start searching



3. Search for the Bluetooth signal, click **JC303/308/309/312**, and proceed to the next step

4. Click **Start Now** to proceed to the next step; meanwhile, the electronic watch screen will turn off



5. Enter this interface, click **Free Ride** to proceed to the next step

6. On this interface, click **Results** (or directly click **Start**) to proceed to the next step



7. Enter this interface, click **Start Riding** to proceed to the next step

8. On this interface, you can select any exercise scene. In this case, the first scene is selected



9. Enter the exercise scene interface. At this point, you can connect to the speed signal

10. The speed signal has been connected; start exercising, and the exercise data will be displayed



11. After completing the exercise, slide your finger upward at the bottom left corner to bring up the menu button

12. Click the menu button to enter this interface, then click **End Ride**

SPECIFICATIONS:

TIME(TMR).....00:00-99:59
SPEED(SPD).....0.0-99.9KM/H(ML/H)
DISTANCE(DIST).....0.00-99.99KM(ML)
CALORIES(CAL).....0.0-999.9KCAL
ODOMETER(ODO).....0-9999KM(ML)

KEY FUNCTIONS:

MODE: This key lets you to select and lock on to a particular function you want.

OPERATION PROCEDURES:**1. AUTO ON/OFF**

- ◆ The system turns on when any key is pressed or when it sensor an input from the speed sensor.
- ◆ The system turns off automatically when the speed has no signal input or no key are pressed for approximately 4 minutes.

2. RESET

The unit can be reset by pressing the MODE key for 3 seconds.

3. MODE

To choose the SCAN or LOCK if you do not want the scan mode, press the MODE key when the pointer on the function you want which begins blinking.

FUNCTIONS:

1. TIME: Press the MODE key until pointer lock on to TIME. The total working time will be shown when starting exercise.
2. SPEED: Press the MODE key until the pointer advance to SPEED. The current speed will be shown.
3. DISTANCE: Press the MODE key until the pointer advance to DISTANCE. The distance of each workout will be displayed.
4. CALORIE: Press the MODE key until pointer lock on to CALORIE. The calorie burned will be displayed when starting exercise.
5. ODOMETER: Press the MODE key until the pointer advance to ODOEMETER. The total accumulated distance will be shown。

SCAN: Automatically display changes every 4 seconds.

BATTERY:

If improper display on monitor, please reinstall the batteries to have a good result.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation

RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil