


Intelligent Massage Chair User Manual

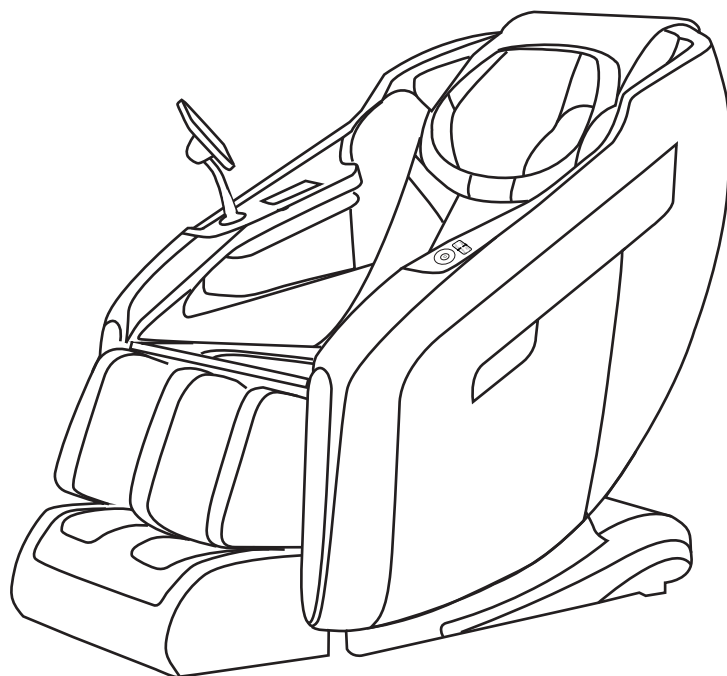

CONTENTS

SAFETY & WARNINGS	-----	1
OVERVIEW	-----	7
INSTALLATION	-----	10
INSTRUCTION	-----	13
OPERATION	-----	17
CLEANING & CARE	-----	22
FAQ	-----	24
TROUBLESHOOTING	-----	26
SPECIFICATIONS	-----	27

SAFETY & WARNINGS

Important Safety Guidelines

Please adhere strictly to the following safety precautions to prevent potential physical harm and property damage during the use of this product. Safety instructions are categorized based on the severity of harm or damage caused by misuse.

Symbols	Meaning
 Warning	Matters that may result in serious injuries or fatalities.
 Attention	Contents that may cause minor injuries or property damage.
	The sign indicates something mandatory (must be followed) but is undefined. Refer to specific content near the sign with text or pictures.
	The sign indicates forbidden actions. Specifically, prohibited content is outlined in or near the sign with words or pictures.

Warning

Must be observed. Read this manual thoroughly before using the product and retain it for future reference.

- Keep children away from movable parts of the device.
- Use this massage chair only with a properly grounded power supply. Use the power supply provided with the device .
- Unplug from the outlet after use or before cleaning to avoid equipment damage or potential danger to human life.
- Use the device only as instructed in this manual.
- Do not use with accessories or parts not supplied or recommended for use with the device .
- Avoid using the device outdoors.
- Do not use the device when the cover cloth is damaged.
- Refrain from using the device when the outer shell or outer coat is damaged.
- Avoid covering the heat sink of the device .
- Ensure that nothing falls into the device .
- Do not sleep while using this device.
- Refrain from using this device within an hour after eating.

SAFETY & WARNINGS

Avoid injury:

- Do not use this device on too high of a setting.
- Do not use if you have known injuries.
- Do not use this device when your body is wet.

Pre-use Check:

- Before using this device, open the cloak and inspect the fabric of the back cover on the motion range of the massage wheel and other parts for damage.
- If any damage is found, stop using it immediately, disconnect from the wall outlet, and contact us for repair.

After Use: After each use, press the switch to the OFF position and disconnect from the wall outlet.

Maintenance: This device can only be repaired by the service center designated by the manufacturer. Do not disassemble or repair this product yourself.

Usage Duration: Use only for short intervals. Avoid operating this device for long consecutive periods.

Avoid Sharp Objects: Do not stab this device with a sharp object.

Prohibited Environments:

- Do not use this device in a highly humid environment such as a bathroom.
- Do not use this device immediately when the environmental temperature changes sharply.
- Avoid using this device in environments with a high amount of dust or corrosive gas.
- Do not use this device in narrow spaces or places with poor ventilation.

Unsuitable for the Following:

- Osteoporosis patients.
- People with heart problems or wearing electronic medical devices such as pacemakers.
- Individuals with a high fever.
- Pregnant or menstruating individuals.
- Persons with physical or mental trauma.
- Children under the age of 14 without adult supervision.
- Those under doctor's orders for rest or feeling unwell.
- Individuals sensitive to heat, such as the elderly and children, should use it only under direct supervision.

SAFETY & WARNINGS

Before Use Guidelines:

- Verify that the voltage aligns with the device specifications.
- Refrain from using wet hands to plug or unplug the power source.
- Prevent water entry into the device to avoid electric shock or damage.
- Avoid damaging wiring or tampering with the device's circuit.
- Refrain from cleaning the power switch, plug, or electrical ports with a wet cloth.
- Cease use immediately if experiencing abnormalities.
- This device not intended for use by individuals with physical disabilities, sensory or neurological impairments, or lack of experience and common sense, unless supervised.
- Supervise children to prevent play with this device .
- Avoid standing on, jumping on, or placing objects on the device while airbags are pressurized.
- Avoid placing hands or feet between the device and calf or foot massage department.
- Prevent hands, arms, or head from entering gaps in the calf and foot massage department.
- Avoid placing pets on the device components.
- Strictly adhere to socket and wiring rules, using 110-240V ,50/60Hz.
- Ensure the power plug is fully inserted into the socket to prevent electric shock or fire.
- Stop use and unplug in case of abnormality or failure.
- Avoid damaging the power cord and plug, as it may cause electric shock, short circuits, or fire.
- Seek professional advice for repairing damaged power cords or plugs.
- Do not insert sharp objects or use knives that may damage the device .
- Do not alter the device without authorization to prevent fire, abnormal movement, or personal injury.
- Avoid using the device with a loose power socket.
- Prioritize safety and follow these guidelines diligently.
- Avoid storing the device near high temperatures or flames and prevent exposure to direct sunlight.
- Clean with a dry cloth; refrain from using thinner, benzene, or alcohol for cleaning.
- Lift the device when moving; do not roll or drag it on uneven floors.

SAFETY & WARNINGS

Attention Must Be Observed

- Recommended usage of the device is limited to 30 minutes.
- In the event of a power failure, leave the device and disconnect the power source to prevent injury upon sudden power restoration.
- If experiencing abnormalities during use, cease usage immediately and consult a health professional.
- When unplugging, hold the plug rather than pulling the power cord to avoid accidents or injuries.
- Before moving the device, adjust the lower leg and foot massage part to its original position to prevent injury.
- Clear surrounding obstacles before using the pulley for movement, lifting the leg massage parts slightly lower than the waist, and moving slowly.
- If using pulleys, place soft mats on the floor to prevent scratches.
- Ensure the device is placed on a horizontal surface during use to avoid accidents from overturning.
- After a period of non-use, re-read the product manual, confirm normal operation, and start using.
- Do not use the device with other devices.
- Avoid pressing the head, abdomen, or skin against the massage wheel and refrain from placing hands or feet between the massage wheels.
- Avoid placing the knee between the calf and foot massage department.
- Turn off the switch and unplug after each use.
- Even at relatively low temperatures (40°C-60°C), cease use if no fever, pain, or other symptoms are present in the same area to avoid low-temperature scald.
- Remember to turn off the main power switch after use.
- Store the device in a dry, dust-free environment if not used for an extended period.

SAFETY & WARNINGS

Prohibited

- Refrain from using waist massage for individuals with acute low back pain, disc herniation, or lumbar displacement, as well as those suffering from arthritis.
- Consult a doctor before usage if:
 - a. Muscle atrophy due to age or a thin body is present.
 - b. Low back pain is attributed to bone or visceral problems.
 - c. Prone to sprains, bruises, or violent reactions during transportation.
 - d. History of heart or organ surgery.
- Stop using the device if rash, redness, itch, or other symptoms occur; consult a doctor.
- Handle the power cord gently; avoid rude pulling.
- Avoid using the device while wearing head jewelry such as hair clips.
- Empty pants pockets (e.g., cell phone, keys) before using the device.
- Remove watches, nail covers, and rings when massaging hands or arms.
- Ensure the wheel is in the storage position before sitting down.
- Stop the device's operation before leaving the seat to prevent accidents.
- Avoid suddenly pulling out the power plug or turning off the power switch during the massage.
- Refrain from standing or sitting on the back cover and armrest to prevent tipping over and causing injury.
- Do not move the device while someone is seated in the device to avoid accidents or injuries.
- Avoid using the device on heating equipment like an electric blanket.
- Do not place the remote control on the seat.
- Ensure the device is connected to a socket with a matching grounding plug.

Note: Follow these guidelines meticulously for a safe and effective user experience.

SAFETY & WARNINGS


Grounding description

- Ensure the device is grounded to reduce the risk of electric shock in the event of a functional failure.
- Use the provided power cord with grounding lead and plug it into a properly installed and grounded outlet according to local codes and regulations.


Warning

- Improper connection of the equipment's grounding lead poses an electric shock hazard; consult a professional electrician for inspection if unsure.
- Do not modify the plug and socket attached to the appliance; professional electricians should handle proper socket installations.
- Ensure the device is connected to a socket with a matching grounding plug shape; using adapter sockets is not allowed.
- If the power cord is damaged, contact us for a replacement.


OVERVIEW

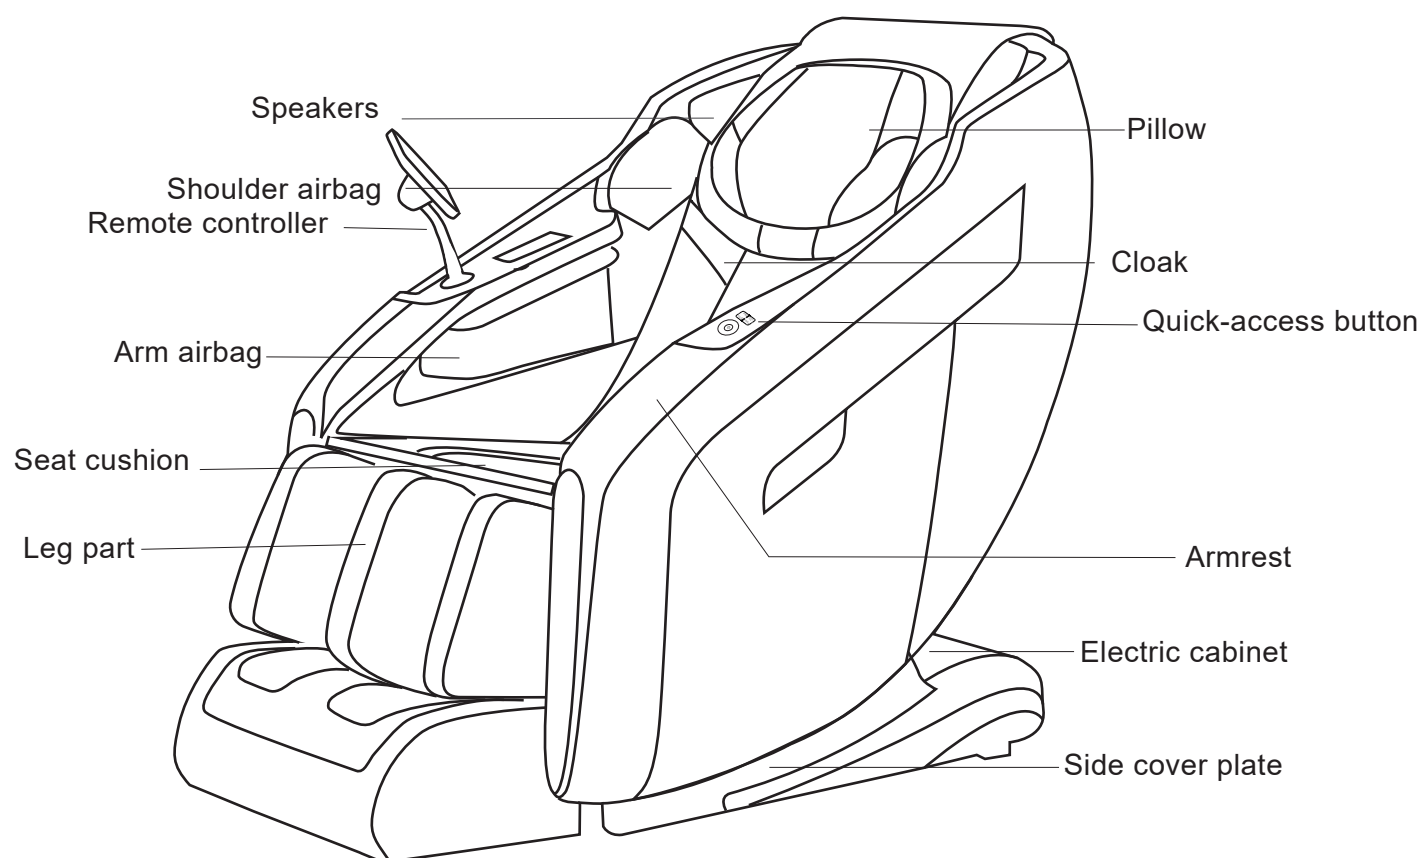

OVERVIEW

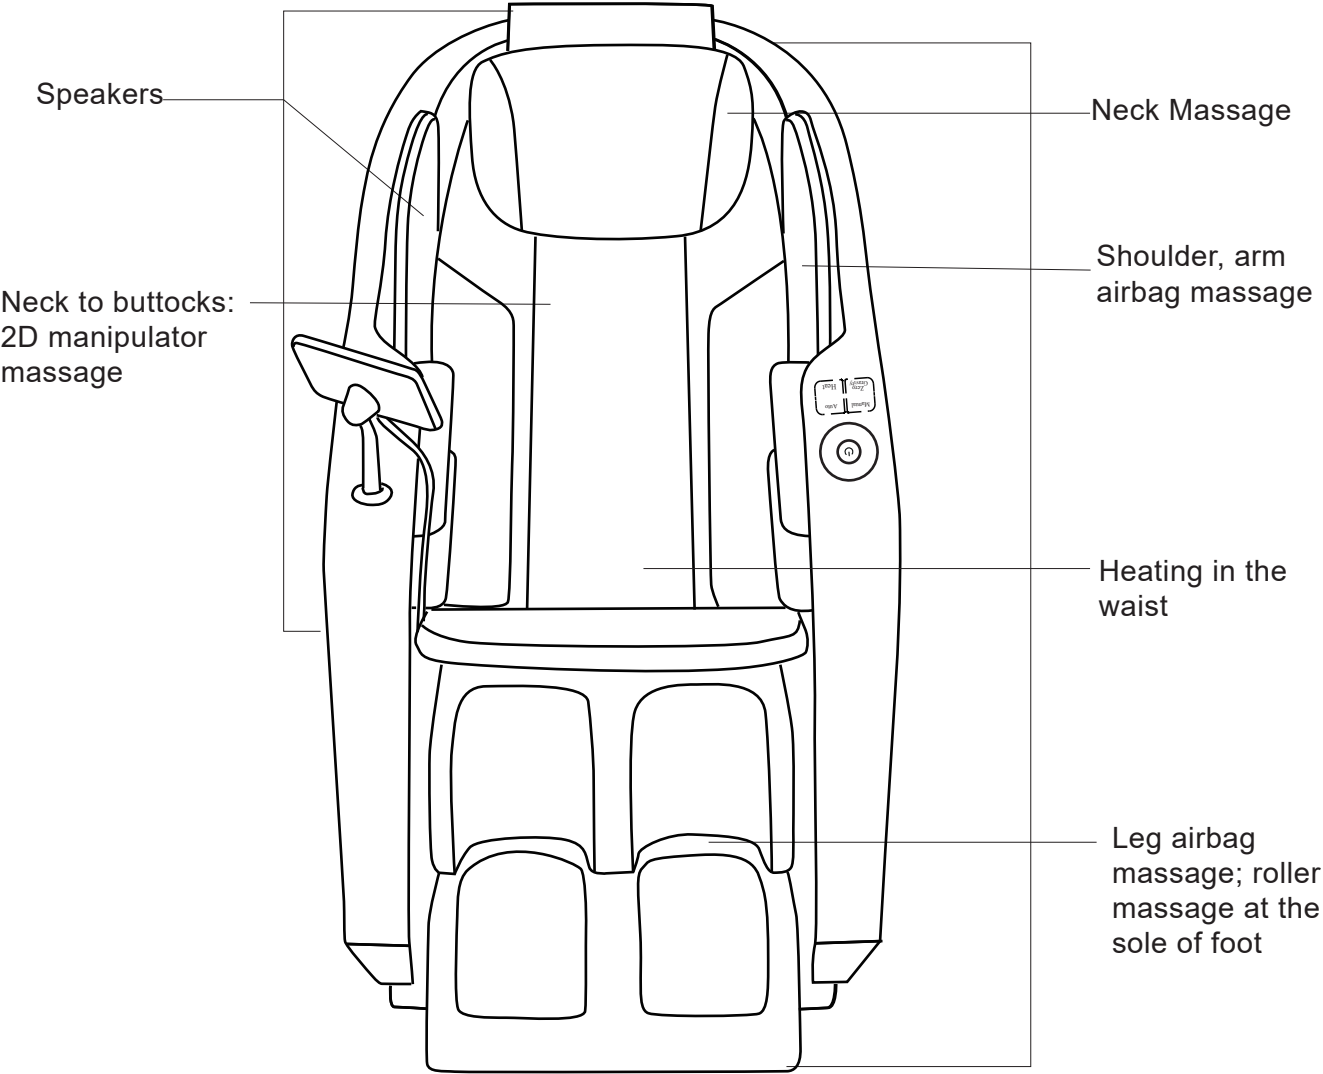

OVERVIEW

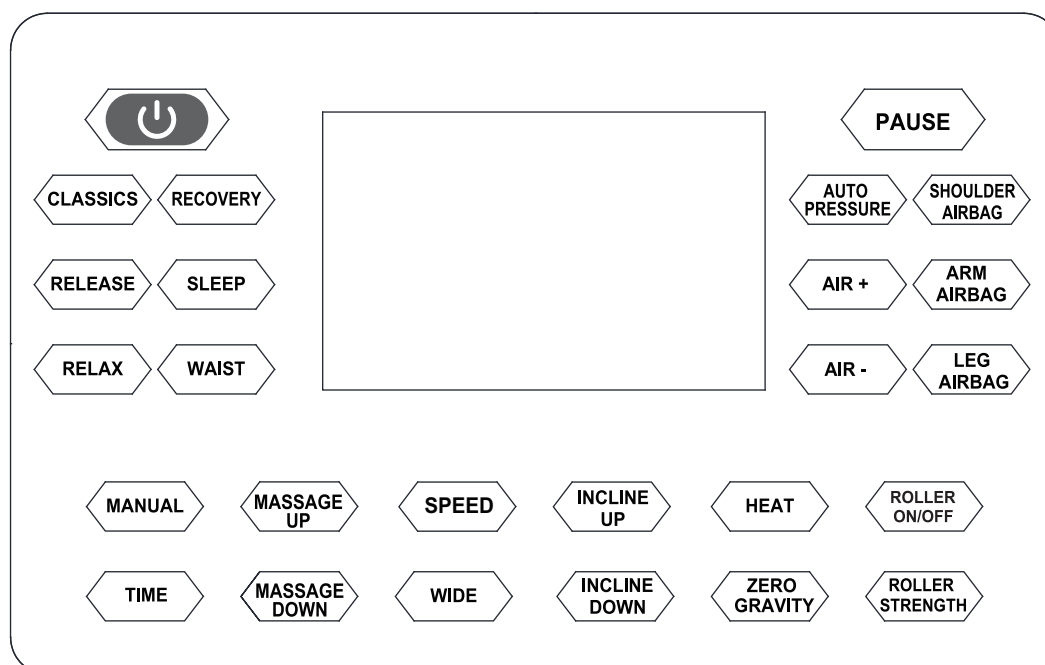

This device is equipped with an offline voice AI function. The command entries are as follows:

Function	Command	Reply
Wake up words	HI-MASSAGE-CHAIR	HI
Power on	START-MASSAGE	OK
Power off	END-MASSAGE	OK
Increase massage intensity	INCREASE-MASSAGE	OK
Reduce massage intensity	REDUCE-MASSAGE	OK
MODE - ONE	START-MODE-ONE	OK
MODE - TWO	START-MODE-TWO	OK
MODE - THREE	START-MODE-THREE	OK
MODE - FOUR	START-MODE-FOUR	OK
MODE - FIVE	START-MODE-FIVE	OK
MODE - SIX	START-MODE-SIX	OK
Turn on heating	START-HEAT	OK
Turn off heating	END-HEAT	OK
Increase airbag strength	INCREASE-AIR	OK
Reduce airbag strength	REDUCE-AIR	OK
Start foot massage	START-FOOT	OK
End foot massage	END-FOOT	OK
Back-rise massage	BACK-RISE	OK
Back-down massage	BACK-DOWN	OK
Back-stop massage	BACK-STOP	OK
Start massage	START-AIR	OK
End air massage	END-AIR	OK
Start -zero gravity	START-ZERO	OK
End zero gravity	END-ZERO	OK

When you hear the AI voice "Thank you for using", you need to say "Hi Massage Chair" to wake up the massage chair for using.

INSTALLATION

Installation and movement

Installation position

Ensure adequate space for the device to recline.

Lift wires off the ground, adjust the back to a suitable angle before manually moving, and return the device to a normal angle.



Warning

Turn off the power switch before unplugging the power cord during movement.

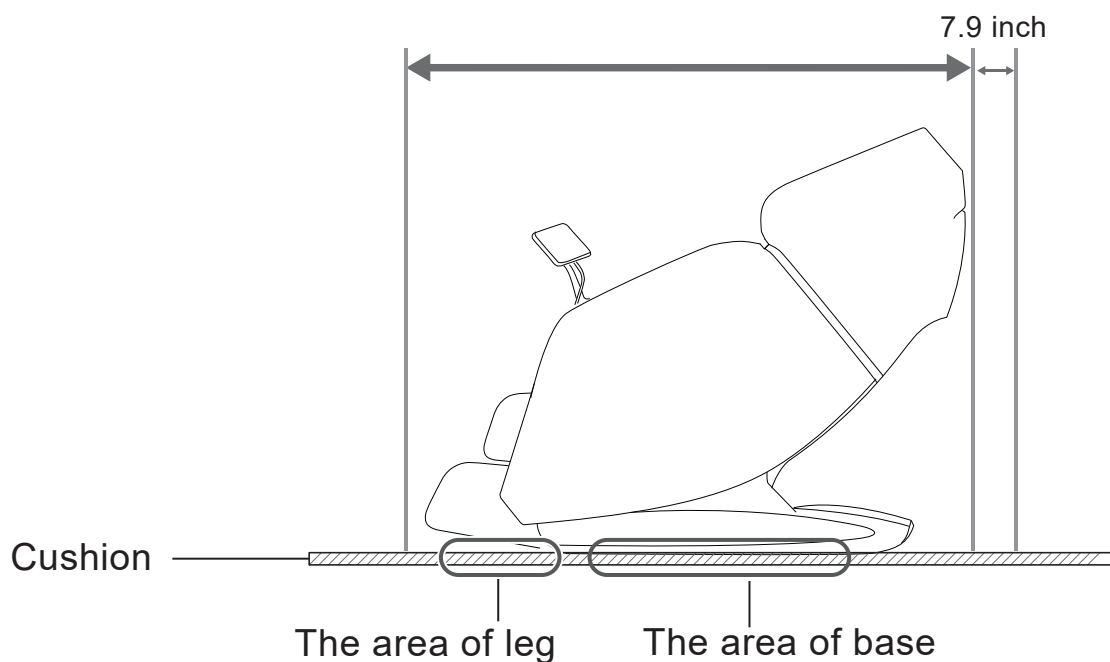


Diagram 1

Movement instructions

Moving method 1- Lift and move the base frame bottom by holding both sides, referring to diagram 2

- 1) Lift the device when moving on vulnerable surfaces like wood floors.
- 2) Support the steel frame beneath the seat by placing your hand at the bottom while lifting to protect the plastic parts outside the seat frame.
- 3) Place the device on the floor.

INSTALLATION



Attention

Gently lower the device with caution to avoid crushing your feet. Avoid opening the legs until the appliance is completely flat, as a sudden release may cause the legs to bounce back, potentially damaging the floor. For added protection, it is advisable to place cushions or other items on the floor.

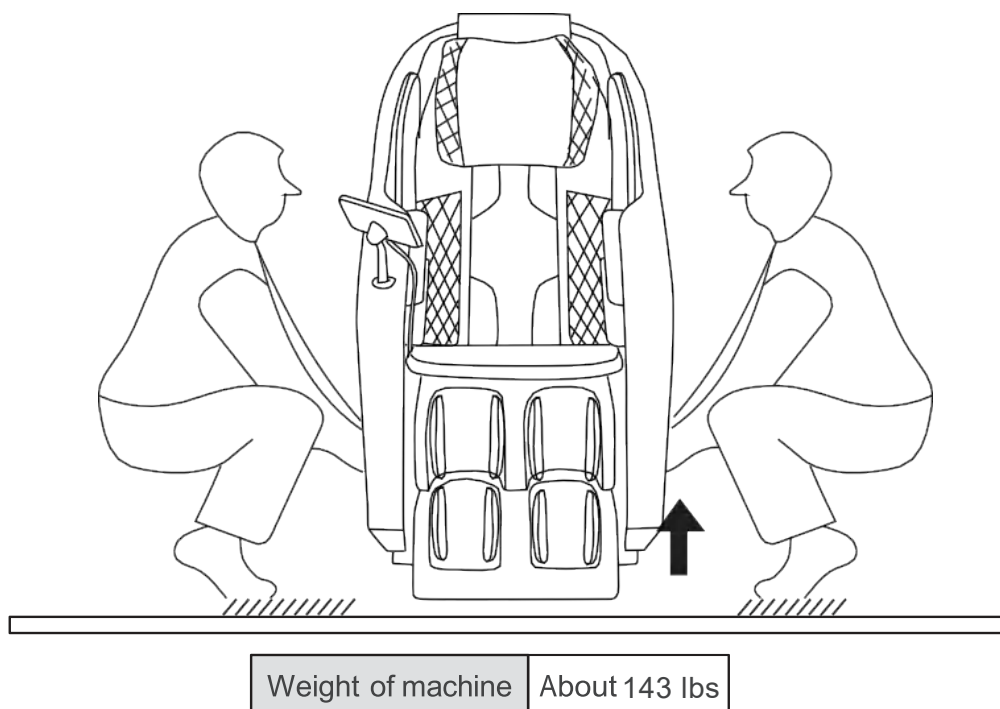


Diagram 2



Attention

- Avoid dragging or pushing the device when it's not installed.
- Do not hold the side plate or plastic parts outside the seat frame for moving to prevent failure or personal injury.
- Place a cushion under the caster if you intend to move the device to protect the floor.
- Do not move the device with people seated, as it may cause accidents.
- Before moving, turn off the power and ensure the backrest and feet are completely reset to prevent potential failures or personal injury.

INSTALLATION

Moving method 2- Move the device using the rear caster.

- 1) Turn off all functions by pressing the "  " button.
- 2) Reset the backrest and legs to the original position, turn the power switch to "0," and unplug the power plug.
- 3) To move, recline the device down about 45 degrees, referring to diagram 3.



Attention

- Avoid excessive pressure to prevent damage caused by the chair falling completely
- When using the caster for movement, place a cushion on the floor to prevent floor scratching.
- Exercise caution to maintain the device's integrity during use.


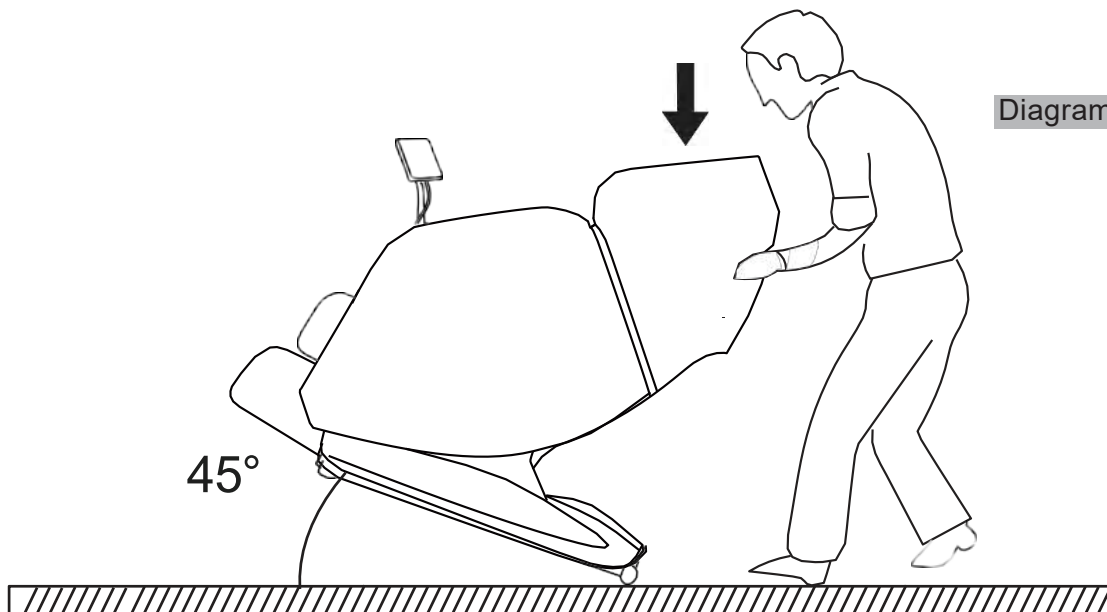


Diagram 3

INSTRUCTION


Precautions before use

- Prior to use, check the surroundings to ensure no people, pets, or objects are near the appliance.
- Ensure a clear and safe environment for operation.

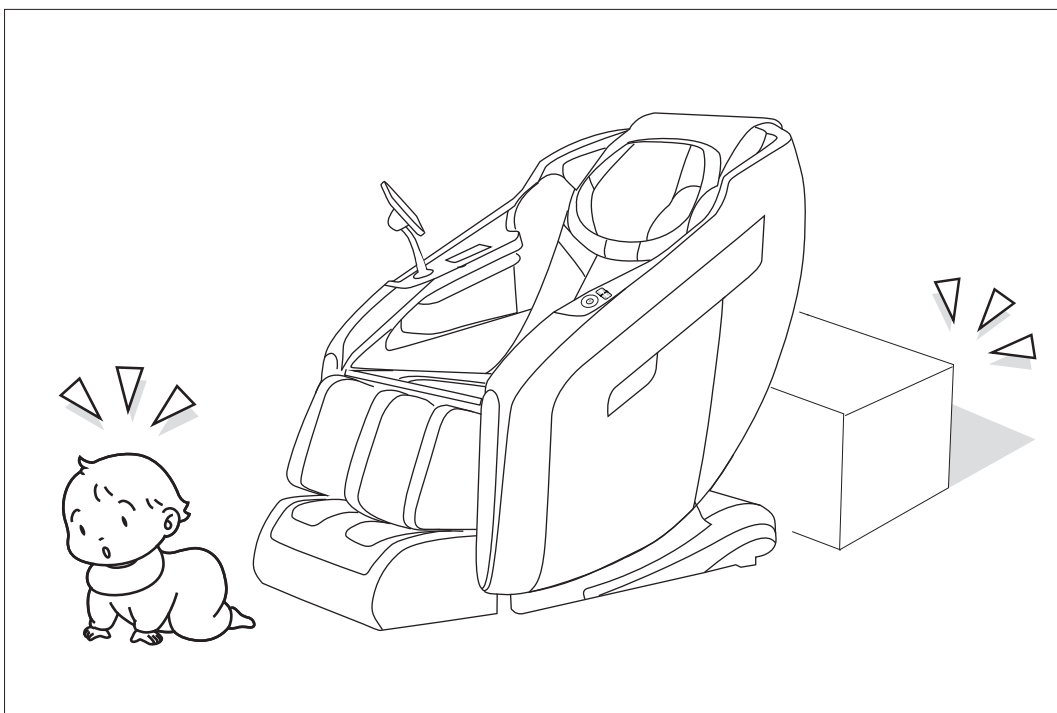

INSTRUCTION


1. Ensure there are no foreign objects between the machine gaps.
2. Check for any items in the leg, foot, and other positions before starting the massage.

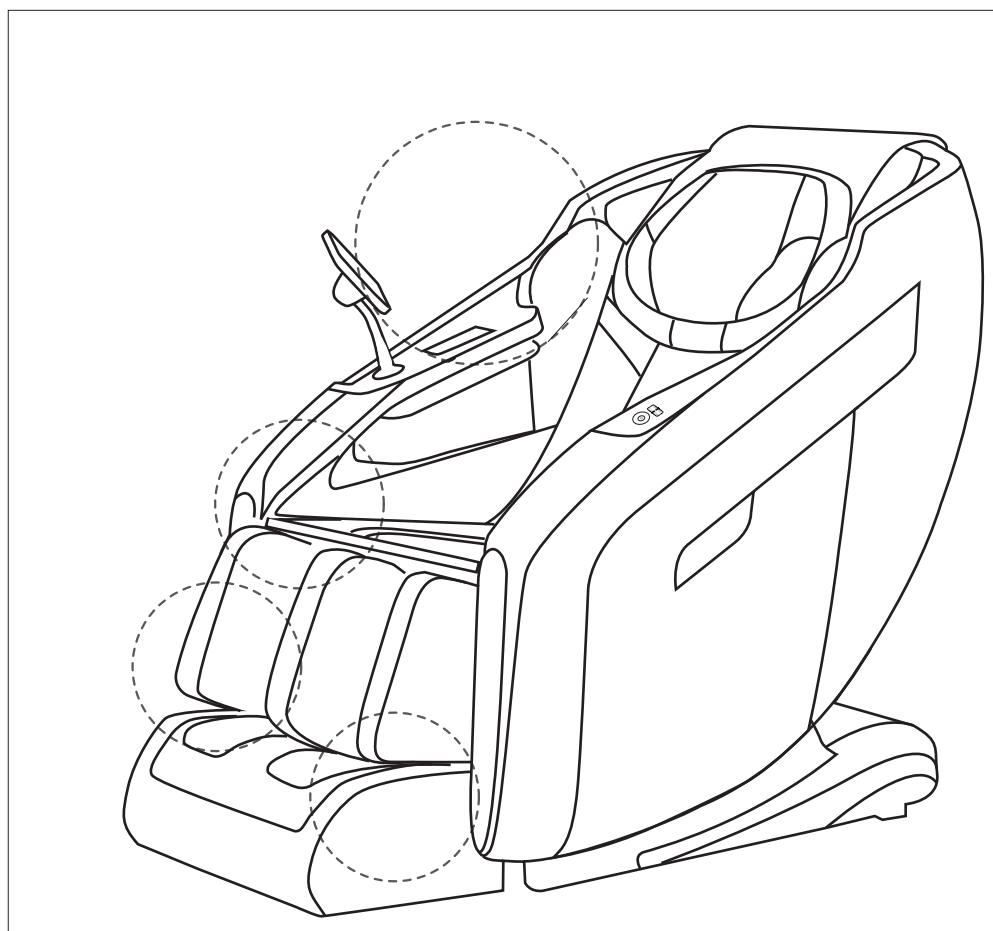

INSTRUCTION

Attention

- Avoid extending hands, fingers, feet, and head into the gap between the lower leg and the seat or armrest.
 - Ensure there are no obstructions between all parts of the appliance before seating.
 - Refrain from placing hands, arms, or head between the backrest and the back cover.
 - Do not place pets on the massage chair components, including the seat, backrest, handrail, and legs.
3. Check the fabric for damage and ensure there are no cracks. Pay special attention to the fabric covering the massage balls in the backrest area.

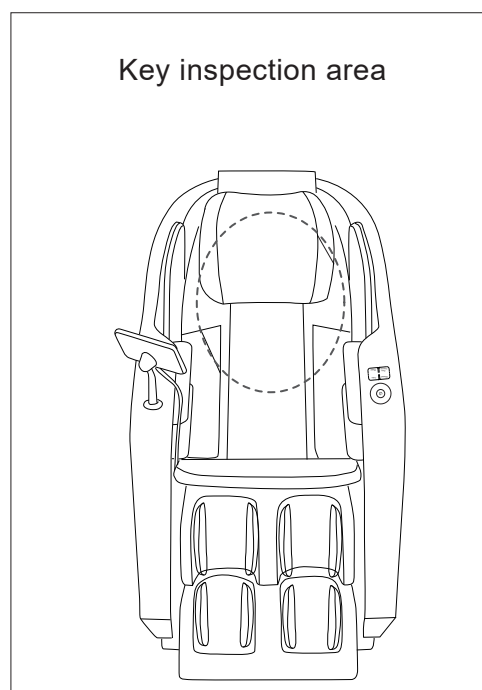


Attention

- Before using the device, open the large cape and inspect the fabric in key areas for any damage, including other ports. If any damage, no matter how small, is found, cease use immediately, unplug the power plug, and contact us via ordernumber. Using the device with damaged fabric may pose a risk of injury or electric shock.
4. Turn on the power


Please make sure that there is nothing in the leg, foot and other positions before the massage.

INSTRUCTION

- 1) Plug the power plug into the power supply socket.

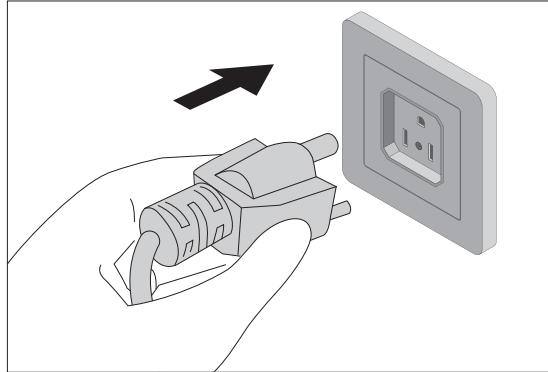

- 2) Press the power switch at the lower back of the product to the "I" (on) position.

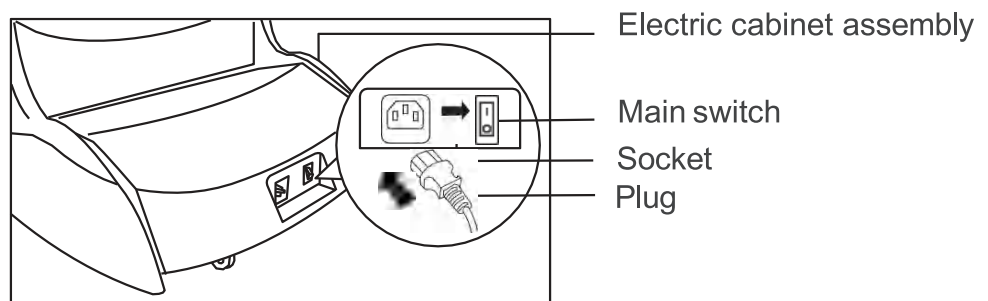

Attention

- Before use, inspect the power cord and plug for any damage.
- Ensure nothing is between all parts of the device before seating, and ensure the power is fully plugged in to prevent electric shock or overheating leading to a fire.
- Use AC 110-240V, 50/60Hz for proper operation.
- Do not connect the transformer without permission, as it may cause fire, electric shock, body failure, or overheating.
- Avoid plugging or unplugging the power plug with wet hands to prevent electrical hazards.

5. Bluetooth pairing

- Activate Bluetooth on your device and search for the device's model name ("MGC-804"). Password: 8888.
- Connect to it to enable music playback from the device through the device's built-in speaker.

OPERATION

Power on the device by switching the power switch under the seat frame to the "I" position.





- In this initial state, the device enters the standby mode.
- Note these steps for proper usage of the product.

Instructions

- Power on the device by inserting the power cord header into the electric control box and connecting the other end to a 110-240V ,50/60Hz electrical socket.
- Activate the main switch on the back of the device's electric control box, turning on the main power and backrest to reset the lower leg to its initial upright state.
- Start the massage by pressing the hand controller's power button, allowing the device to detect the shoulder position and fine-tune if necessary using the "up" or "down" buttons.
- Note: Maintain an upright sitting position during shoulder detection.
- Turn off the power by pressing the hand-controlled electricity button to immediately stop all functions, resetting the backrest and legs to their initial state.
- Turn off the main power by switching off the main switch behind the device base after use or prolonged inactivity; unplug the power plug.
- Enjoy music through the built-in speaker by connecting your music player via Bluetooth and operating the music player using the device's audio controls.
- This product with a wireless charging function, charging power of 10W. If your phone with a wireless charging function, you can put it on the wireless charging area for charging.
- Adjustable recline angle 129°~152°; Max shoe size 44.

OPERATION

Massage chair control keys


	Upon opening, the massage chair automatically reclines for shoulder position adjustment. When turned off, the display screen powers down, and the massage chair returns to the standby position. Note these operational features for convenient use.
	Press the key to pause all functions, and press it again to resume the unfinished program.
	In Automatic transmission mode A1, the massage chair provides even massage coverage to the neck, waist, and hips. This mode incorporates various techniques such as kneading, eight-character kneading, and dynamic kneading. It offers a rich combination of beating actions with different strengths tailored to different body parts. Additionally, occasional stretching functions are integrated for a comprehensive massage experience.
	In Automatic mode A2, the massage chair enhances lower body beating time, strength, and rhythm on the foundation of kneading and massage.
	Automatic mode A3 primarily focuses on neck and shoulder massage, incorporating neck kneading, massage, shoulder kneading, beating, and additional massage techniques.
	Automatic mode A4 is designed for sleep massage, encompassing neck and waist massage, overall massage, lower body pat, and cradle massage.
	Automatic mode A5 primarily features Thai stretching, incorporating kneading, massage, beating, and other functions.
	Automatic mode A6 is primarily designed for waist massage, encompassing kneading, beating, and massage functions.
	In the "On" position, activate zero gravity mode, reclining to the maximum angle while raising the legs to the highest level. In the "Off" position, the backrest returns to a specific angle from the maximum, and the calves return to a certain height from the maximum angle.
	Long press this button will elevate the position, and releasing it will stop at the current position.
	Long press this button will elevate the position, and releasing it will stop at the current position.
	Adjust the timing in 6 gears with intervals of 5, 10, 15, 20, 25, and 30 minutes, cycling in turn.
	Change the roller strength.
	Press the button to adjust massage intensity, switching one gear with each press.
	Press this key to adjust the width (wide, middle, narrow) of the massage head, switching the width with each press; note that this is effective only in manual mode for beating, massage, hammering, and finger pressing functions.

OPERATION

MANUAL	Automatic mode change to manual mode. Different modes can be selected: Imassage, knead, claps, beat, shiatsu, kneading&hammering, kneading&scraping, sequential cycle.
HEAT	Turn on/off the heating function. (Startup is turned off by default).
ROLLER ON/OFF	Turn on/off the foot roller function.
MESSAGE UP	Press and hold the movement to adjust it upward. The massage movement can move up wards and be adjusted between the buttocks and the back. This adjustment can be made in both automatic and manual modes.
MESSAGE DOWN	Press and hold the movement to adjust downward. The massage movement can move downward and be adjusted between the buttocks and the back. This adjustment can be made in both automatic and manual modes.
AUTO PRESSURE	Turn on/off the auto airbag massage.
AIR+	Increase the strength of the airbag massage.
AIR-	Decrease the strength of airbag massage.
SHOULDER AIRBAG	Turn on/off the shoulder airbag massage.
ARM AIRBAG	Turn on/off the arm airbag massage.
LEG AIRBAG	Turn on/off the leg airbag massage.



Quick access panel

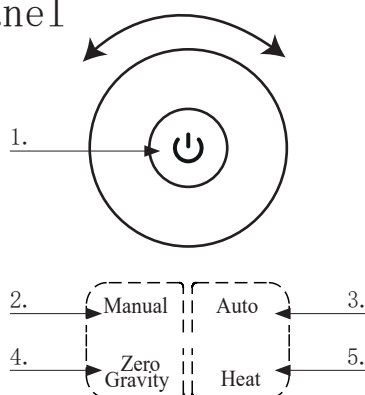

Turn the “Quick-access Button” to adjust the backrest angle

OPERATION

1.  On / Off: Press it once, the massage chair automatically reclines at an angle to start shoulder detection. Press again to turn off, the remote screen will turn off, and the massage chair will return to the standby position.
2.  Manual Mode: Select one of 6 manual massage modes (kneading/knocking/tapping/Shiatsu /kneading & knocking /kneading & tapping) to start massage.
3.  AUTO Mode: Select one of the 6 automatic massage modes. You can select your desired massage mode by pressing the button.
4.  Zero Gravity Mode: On to enter Zero Gravity Mode: the backrest is reclined to its maximum angle and the lower legs are raised to the highest level. Off, the chair returns to its standby position.
5.  Heat Mode: Turns the heating function on/off.

Precaution of after use


1. Press " "to standby, the machine returns to the initial state (upright state).

Attention

Children are prohibited from using this machine.


Do not allow children to play on the massage chair or climb on the calves, seat, foot massage, backrests or armrests. Otherwise, it may cause an accident or injury.

2. Remove the legs slowly from the leg massage part then set off the massage chair.

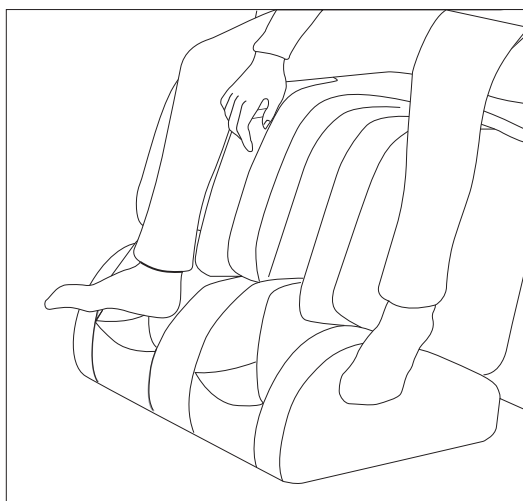


OPERATION

3. Cut off the power

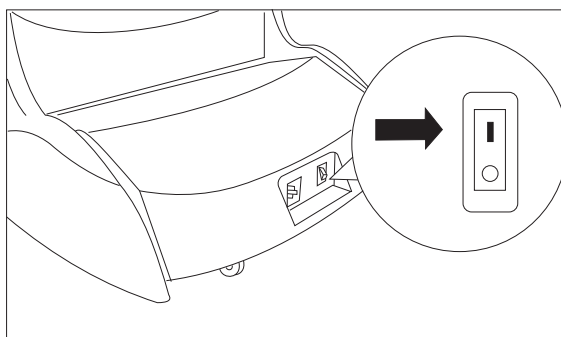


Attention

- Turn the power switch to the " ○ " (off) position and unplug the power plug after using. Otherwise, accidents or injuries may be caused due to children playing.
- 1) Turn the power switch off.
 - 2) Unplug the power plug.

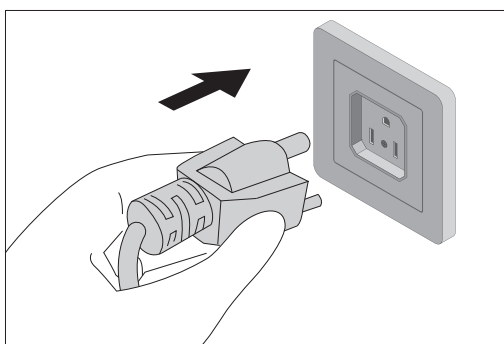

CLEANING & CARE

- To clean the leather surfaces, use a soft dry cloth, avoiding chemicals like diluents, gasoline, and alcohol.
- When using leather maintenance products, follow these steps:
 - Dip a soft cloth in water or a 3-5% neutral detergent solution, wring it out completely.
 - Wipe the leather surface.
 - Remove cleaning fluid with a cloth soaked in clean water.
 - Wipe with a soft, wrung-dry cloth.
 - Allow natural drying.
- For stubborn stains, use a trioxide foam dipped in neutral detergent.
- Avoid using a blower for drying and refrain from using denim or colored fabric to prevent color transfer.
- Cover contact parts with a towel when using hair dye to prevent color changes in synthetic leather.

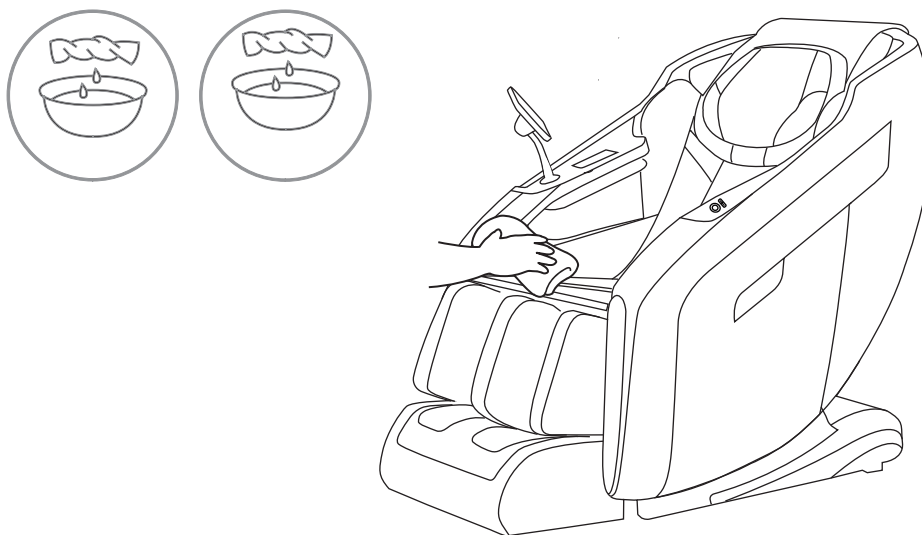


Cleaning the plastic surfaces

Wipe leather with a soft dry cloth

CLEANING & CARE

- Immerse a soft cloth in water or hot water with neutral detergent, wring it dry, and wipe the plastic parts of the appliance.
- Use a cloth soaked in water and thoroughly wrung dry for wiping the remote control, ensuring it is dry.
- Allow the surfaces to dry naturally; avoid using chemicals like diluents, gasoline, or alcohol for cleaning.

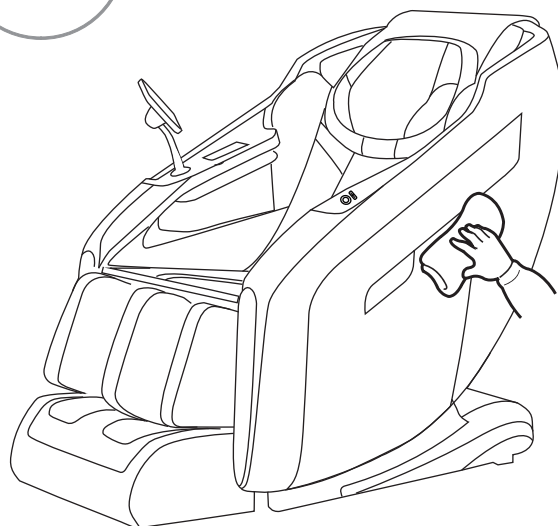

FAQ

Q: Worried about the noise during massage chair operation.

A: The operational sound of the massage chair is primarily attributed to the movement structure.

Q: What is the suitable height range for this product?

A: Users with a height less than 145cm or over 185cm may experience insufficient contact between the foot and foot massage or knee bending when using upper body massage and calf and foot massage simultaneously.

Q: Experiencing excessive pressure on the feet.


A: Adjust the airbag strength to the weakest setting using the airbag button. Additionally, reducing the intensity of the calf and foot massage can help alleviate foot pressure.

Q: What precautions should be taken when moving?

A: Please observe the following:

- Ensure the back of the massage chair is fully reclined to its lowest position for easier movement.
- Avoid sitting on the seat during the move.
- Activate the power button.
- Press "zero gravity" to fully recline the backrest.
- Turn off the power switch and unplug.
- When using original cartons, ensure the power cord is not entangled and place it on the seat surface. Be cautious to prevent the power cord from falling and rubbing against the ground.
- Without original cartons, use appropriate packaging materials to protect the product from scratches and vibrations during handling.

FAQ

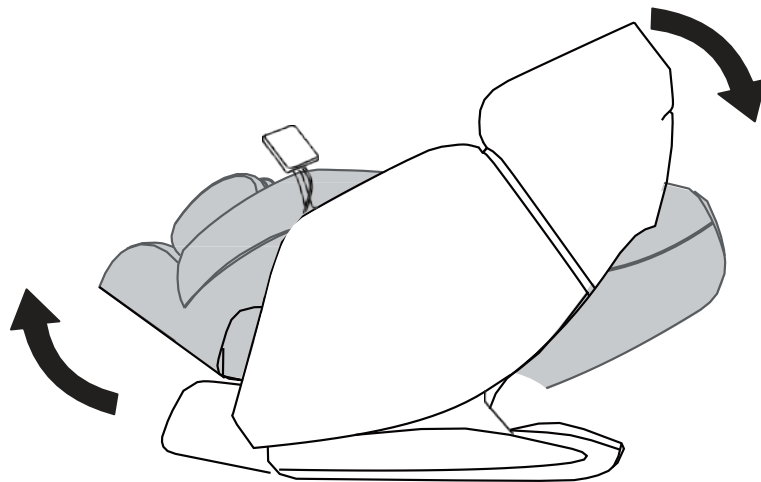

Q: Can individuals who frequently visit the hospital due to illness use this product?

A: Individuals with frequent hospital visits should consult with a doctor before using this product. Massage, involving "touch pressure stimulation" through muscle compression, alleviates muscle tension and enhances blood flow. Depending on the underlying condition, massage may impact the health negatively. It is essential to seek advice from a medical professional before using this product.

Q: How much is the monthly power consumption when using this product?

A: With an average usage of 30 minutes per day, the power consumption of this product is approximately 1.5 kWh per month.

Q: Is it normal to perceive a difference in massage strength between the left and right massage wheels?

A: Due to the movement structure, it is normal to feel variations in the strength of the left and right massage wheels during the massage process. The product employs a movement structure that allows the left and right massage wheels to alternate in beating the back, simulating a natural massage technique. The slight differences in contact positions may result in varying sensations of massage strength on the left and right sides.

Q: What age group is the massage chair suitable for?

A: This massage chair is suitable for individuals aged 18 to 75. Minors and the elderly should use this appliance under the supervision of a guardian.

TROUBLESHOOTING

Problem	Causes and treatment	
The product does not work	The product's power plug is unplugged, and the main power switch is off.	Plug in the power plug and press the main power switch.
Sudden cessation of massage operation	Product has completed the scheduled working time.	To massage again, please turn it on.
	Exceeding the rated service time may cause motor overheating.	Turn off the switch and wait for the motor to cool down.
	The product is experiencing an overload.	Lift the product slightly to alleviate the pressure .
	Power outage .	Use after the power supply is restored .
During product use, if the massage wheel stops, the massage chair emits beeping alerts	The machine faces excessive resistance.	Power off, adjust the sitting position, and then restart the machine.
Unable to recline, lift, or lower the legs	Potential obstructions.	Clear obstructions before initiating the machine.
Wheel doesn't reach shoulder or neck; check for obstructions	Shoulder detection might underestimate the actual position .	Recheck shoulder position after adjusting your sitting position.
Massage wheel height imbalance; consult technician for adjustment if needed	Massage wheel replicates natural interactive beating and clapping movements for authenticity .	Product is functioning properly.

SPECIFICATIONS

Model Name		Intelligent Massage Chair
Model No.		AW-80
Rated Voltage		AC100-240V
Rated Frequency		50/60Hz
Rated Power		100W
Timer		6 level (5-10-15-20-25-30 min),default 15 min
Dimension	Upright Condition : (L x W x H)	56.1"x29.1"x40.2"(LxWxH)
	Declined Condition : (L x W x H)	66.1"x29.1"x33.1" (LxWxH)
Weight	Gross Weight	About 178.5lbs
	Net Weight	About 147.7lbs
Safety Function		With Overheat & Over-current Protection
Maximum User Weight		220 lbs
In the Box		Massage Chair*1 Remote*1 Power Line*1 Instruction Manual*1

*Note:

If you need help regarding product issues, after-sales service, or other relevant problems.

Please contact us via email:

jzffqbnj@126.com.

Please have the following information ready when requesting service.

·OrderID

·Problem Description

Products purchased directly from us benefit from our after-sales service. If the purchases are made from other selling teams, we recommend you contact them for warranty issues.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment, This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.