
GZC-RFID-25

RFID Integrated Reader

Directory of Product Information

- Fonkan has the right to do revisions for hardware, software and manual of product without statement. And this manual is subject to change without notice.
- Specifications and power of this product is subject to standard in origin. please being sure that voltage is up to requirement, read and learn about safety precautions, especially in open-air installation of outdoor.

Content

- 1 PRODUCT SUMMARIZE 3**
 - 1.1 SHAPE AND INTERFACE 3**
 - 1.2 PERFORMANCE INDEX 4**
 - 1.3 FUNCTION 5**
- 2 DEVICE INSTALLATION 6**
 - 2.1 CONNECTION 6**
 - 2.2 CONNECTOR AND CONTROLLER 6**
 - 2.3 CONNECTION POWER SUPPLY 7**
 - 2.4 DEVICE ADJUSTMENT 8**
 - 2.5 TAG PLACE 8**
- 3 USUAL FAULTS 10**
- 4 AFTER-SALES SERVICE 11**
 - 4.1 SUPPORT AND SERVICE 11**
 - 4.2 SERVICE HOTLINE**

1 Product Summarize

FI-807 integrated reader is the latest product developed by us, which can read and write tag or card in accordance with ISO18000-6B/ISO180006C. It is widely used for vehicle access management, ETC, access management, electronic security, logistic, production automatic management and so on.

1.1 Shape And Interface

Shape of FI-807 integrated reader is as follow picture, which is with ABS shell, it can be installed inside or outside of house, is good at windproof, dustproof and rainproof.



There is an interface at the bottom of FI-807 reader, connection line shows as follows:

Red	Black	Blue	Yellow	Grey	Purple	orange	pink	dark green	white
+12V	Power GND	Wiegand Data1	Wiegand Data0	Triggering Signal Input	485+	485-	Signal GND	232Tx	232Rx

Communication interface in the table of 2-1-2 is of features as follows:

A. RS232 Communication interface:

One of RS232 interfaces (DB9jack: RxD receive, Txd send, signal) can be connected directly with PC string mouth.

B. Buzzer: inlay buzzer, it sounds whenever reader reads electronic tag.

C. Power supply interface: +12V DC outlet (the red one and black one).

D. I/O interface

◆ A RS485 interface (485+ (purple), 485-(orange) signal difference)-for distant signal transmission.

◆ A wiegand interface: often use the interface transmission signal in access control system.

Wiegand : use WDATA1-0(yellow),WDATA1-1(blue) 2 lines,

Wiegand interface:

◆ Signal ground (brown): one GND line for wiegand interface and RS232 interface.

◆ One trigger signal access,for input:FIN1(grey),low level trigger

When reader in tigger work way, if make down-lead connect with low level trigger, then reader begins to read card numbers till high level is recovered.

1.2 Performance Index

(1) Read-write tag:electronic tag in accordance with ISO18000-6B/6C

- (2) Operating frequency: 860~960MHz
- (3) Way of Working:by FHSS or fixed frequency launch
- (4) Output power:0-30dbm(could be a little difference from various countries or area)
- (5) Readdistance:read distance>1500cm,
write distance>500cm(antenna and tag dependent)
- (6) Read rate:32bits/word,6ms in time,average
- (7) Write rate:32bits/word,50ms in time ,avreage
- (8) Power supply:+12v direct current
- (9) power:<10w ,in average
- (10) Working temperature: -10℃~+55℃

1.3 Function

- (1) Read tag:electronic tag in accordance with ISO18000-6B,6C
- (2) Can read EPC tags in different length.(16,32,48,64,80 or 96bits)
- (3) Can read EPC Data.
- (4) Can read data from user area.
- (5) Can read data from TID area
- (6) Can read tag's access and kill password
- (7) Can write different length EPC code(16,32,48,64,80 and 96bits)
- (8) Can write data of user area
- (9) Can revise tag access and kill code
- (10) EPC,TID and user area can be write-protected
- (11) Password section can be write-protected
- (12) Can kill tag

2 Device Installation

2.1 Connection

In system, the connection of reader, antenna, tag and controller (or PC machine) shows as follows:

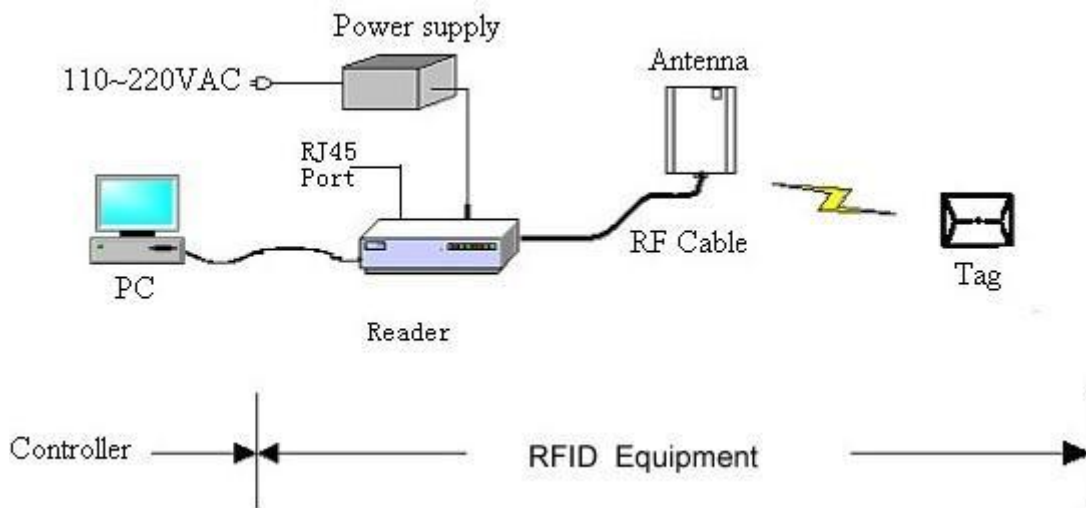


Figure 3-1-1 typical connection about the relevant equipments

2.2 Connector And Controller

FI-807 reader can connect with controller through any interface from Weigand, RS485, RS232 or RJ45

(1) Weigand Interface

Under Wiegand port communications, need to connect 3 pins (Data0 (yellow), Data1 (blue), GND (brown)) on reader's line bank, with the relevant 3 pins on application system control. Reader Wiegand port just sends data unilaterally.

(2) RS485 interface

Under RS485 port communications, need to connect 2 pins (RS485+ (purple), RS485- (orange)) on reader's line bank, with the relevant 2 pins on application system control. Through the converter can also connect with the

PC serial port.

(3) RS232 interface

RS232 interface can connect with pc directly, by matched cable, length of RS232 interface connection line should be less than 10 meters, drawing shows as 3-2-3

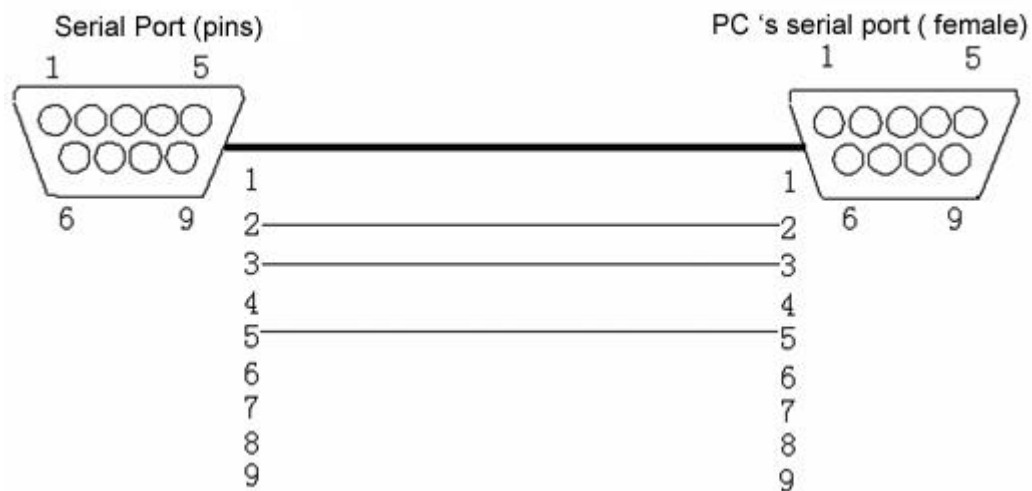


Figure 3-2-2 Reader's RS232 is connected with PC

(4) Connected by RJ45

Reader connection with PC directly or connection with PC via Hub, adopt straight cable.

2.3 Connection Power Supply

FI-807 reader adopts +12V/3A direct current power supply, we can supply you reader with required alternating and current convertor, the way to connect power is as follows:

- (1) Check if voltage of alternating power supply and operating frequency is in accordance with AC 100-240V/50Hz
- (2) Make DC output pin of power convertor insert into +12V direct current power interface of reader.

- (3) Make 220V alternating power input line of convertor insert or connect with line of alternating power supply.
- (4) If the Indicator light of power supply is turn on ,that means workable

2.4 Device Adjustment

Key of device adjustment is: adjust height, direction angle, obliquity, to make reader can read electronic tag in the expected range. Debugging method:

- (1) Turn on reader power supply, set reader to be mode of auto working, close parameter setting procedure ,and disconnect with PC.
- (2) Turn off reader power supply first, and then turn on, reader will automatically turn into state of continuous working.
- (3) As material of identified object and required tag is different, so tag should be stuck to object with same material as identified one, traverses object in the expected range of tag is to read. If reader can get tag, then inlay buzzer tweets and green LED blinks.
- (4) Adjust height and angle of antenna; make reading range at the best.

Note: reader only radiates microwave power when reading tag, then adjuster should keep a distance of 30cm from antenna, that is meet American FCC requirements.

2.5 Tag Place

In work process of RFID, tag place is a usual job, some notes are as follows:

- (1) Adopts glue water recommended by factory
- (2) If labeled in the surface of metal, professional glue is recommended.
- (3) Labeled place has to be field tested to make sure read best.

Note: Our Company offers 2 species of tags to customers, in ISO18000-6B standard

- (1) Air medium.can be held to use, also can be instead by our block set, insert card into it directly.
- (2) Glass medium,card should be stuck on glass.(non water-solubility is required)

3 Usual Faults

Table 3-1 usual faults and solutions for reader

Fault Phenomena	Possible Reason	Solution
can not read card	antenna is not connected well	Check antenna connection details
	beyond to reading area of Reader	make card close to module antenna
	antenna is broken	Change a new antenna
	Parameter of RF Power is too low	Renew parameter
	tag is broken	Test in other tag
	reader is broken	Contact technician
Cannot be connected with reader	no power	Check the power supply connector and adapter
	Com ties up or broken	Check interface through software and test if it communicates
	baud rate is not set in accordance	Set it to be in accordance by software
	reader is broken	Contact technician
Reading distance is too near	antenna is not connected well	Check details of antenna connection
	Parameter value of RF Power is too low	renew factory parameter
	tag is not in accordance with antenna polarization	revolve tag in 90 degree
	reader is broken	Contact technician
	tag is broken	change a new tag

4 After-Sales Service

4.1 Support And Service

Website please be online with internet by computer; enter <http://www.fonkan.com> to get specifications, purchasing devices and other informations about FI-807.

Customer support If you have doubts about instruction and can not get solutions from our website, please contact our customers' service centre. If your device has to be repaired, please contact us for service information, delivery instruction and maintenance cost excludes from after service before it is sent out.

Service If device needs to be diagnosed or other service, please contact our customers' service centre. please don't send it out before you contact us. If your device is under guarantee, please prepare receipt of purchasing.

Please do as follows before you contact us:

- A. read introduction
- B. prepare your machine
 - model
 - serial number
 - receipt of purchasing
- C. Prepare your machine, customer service representative maybe ask you to operate machine.

- D. Prepare your questions; detailed problem description can help customer service representative solve your problem at the earliest.

Guarantee

Important information this text is a guarantee declaration for hardware products, please read carefully.

One year guarantee for hardware

Fonkan offers this hardware product guarantee for no faults in material and manufacture from receipt date of purchasing.

If Fonkan receives fault advise as above during Guarantee date.Fonkan can decide whether to repair or replace the proved failure product.

If Fonkan can not repair or replace the product within reasonable time, customer can ask for refundment.

Scope of warranty

Guarantee above excludes from faults caused as follows:

Misapplication,modification without authorization,open the hardware,operates or stores up this product in an improper environment,damages during transportation,improper maintaince,or caused by not using software ,parts,media,article,expendable from Fonkan,or project not for this product.

This is the only guarantee declaration for products from Fonkan, noelse guarantee in writing or oral

Fonkan will not be responsible for cases as follows: direct, indirect, particular and accidental damage, including profit, whatever it is based on guarantee declaration, agreement, defect, or any other law theory.

Disclaimer clauses: Radio transmission equipment can make interference to the task of any unprotected industry, medical and scientific equipment. There is possible interference to other electronic equipment when this equipment works. If any inquiries in this aspect, please consult from Fonkan for improvement.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.