

WiFi Din Rail Switch (smart Life APP)

OperatingManual



Download App



1

Main Function

- Remote control
- Voice control
- Timing
- countdownl
- Loop timing
- Real-time monitoring of electricity consumption

2

Main Data Parameter

- Protocol : **WiFi (Default)**
- Rated operating voltage range : **90-300V**
- ControlType : **Remote control, Manual**
- Poles description : **1P+N (N Pole Pass-through)**
- Customization : **SigMesh/ZigBee**
- Model selection : **Non-metering Type**
Metering Type

3

Non-metering Type LED IndicatorDescription

- The LED indicator show a steady blue light to indicate that the switch in ON status.
- The LED indicator show a light out to indicate that the switch in OFF status.
- The LED indicator show blue flashing to indicate that switch in paring model.

4

Metering Type LED IndicatorDescription

- The LED indicator shows a steady blue light to indicate that the network connection is successful.
- The LED indicator shows blue flashing slowly, indicating that the product in pairing model.
- The LED indicator shows a light out, indicating that the device is off-grid model.
- The Button indicator shows a light up to indicate that the switch is OFF.
- The Button indicator shows a light out to indicate that the switch is ON.

5

Live View

Can monitor the current, voltage, and power of the load equ-ipment in real time, and can also record the power consumption of the year, month, day, hour, and different time neriods, helping users to check the power consumption of load equipment more clearly. Setting the switch status of the equipment in different scenarios, and remotely monitor the real-time situation of the load electrical appliances,

total electricity consumption 5.00kWh

6

Month Day Year

5.00 kWh
total electricityconsumtion



Real-time monitoring electricity consumption.

7

Configuration Steps

First Step:

To connect the wire from the up-per of the WiFi Din Rail Switch, the live wire connect to the L pole, and the neutral wire conn-ect to the N pole, please make sure that the wiring is correct and strong WiFi signal.



8

Configuration Steps

Second step:

Turn on the Bluetooth and WiFi of the mobile phone, open the App and then long press the "power" button, wait for about 5-10 seconds, the LED indicator will flash blue light slowly.



9

Configuration Steps

Third step:

Waiting for a while after graph-ics is displayed in the APP or click the "+" in the upper right corner, then choose the "Add Device" button to wait discovering devices, then click "Add" button.




10

Configuration Steps

Fourth step:

Enter the wifi account password and click next step, wait for the switch to connect the network.

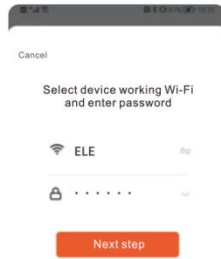


11

Configuration Steps

Fifth step:

The switch is connected to the network

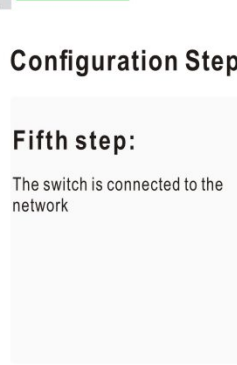

12

Configuration Steps



After the successful connection, the LED indicator will be changed from blue slow flashing to blue steady light.



13

Decide Sharing

First Step:

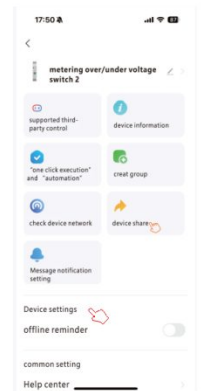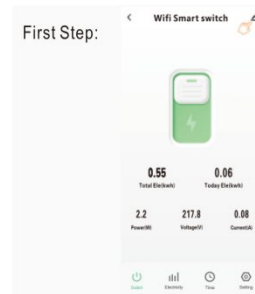

14

Decide Sharing


Second Step:

Click on "share with the Account Smart Life" to type the account you want to share.



15

Alarm Setting

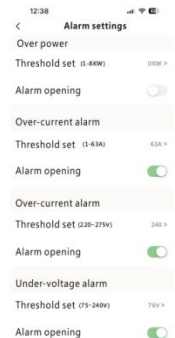

WiFi Din Rail Switch (smart Life APP)

Operating Manual



Download App



1

Main Function

- | | |
|--|---|
|  Remote control |  Voice control |
|  Timing |  countdown |
|  Loop timing |  Real-time monitoring of electricity consumption |

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC 's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.