



Model: BS101



- English -

Characteristics

- ✓ Secure easy Bluetooth pairing for iOS, Android & Windows.
- ✓ Fully compatible with the ELM327 v2.3 AT command set.
- ✓ Auto-sleep & Wireless wake-up.
- ✓ Sleep current is as low as 3mA.
- ✓ Up to 200 groups pass, block filters.
- ✓ Free firmware updates.

1.Download compatible OBD apps.




Get the supporting app from Google Play (Android).


Get the supporting app from the App Store (iOS).

Refer to Step 6 for the full compatible-app list and operation guide.

2.Start the ENGINE.

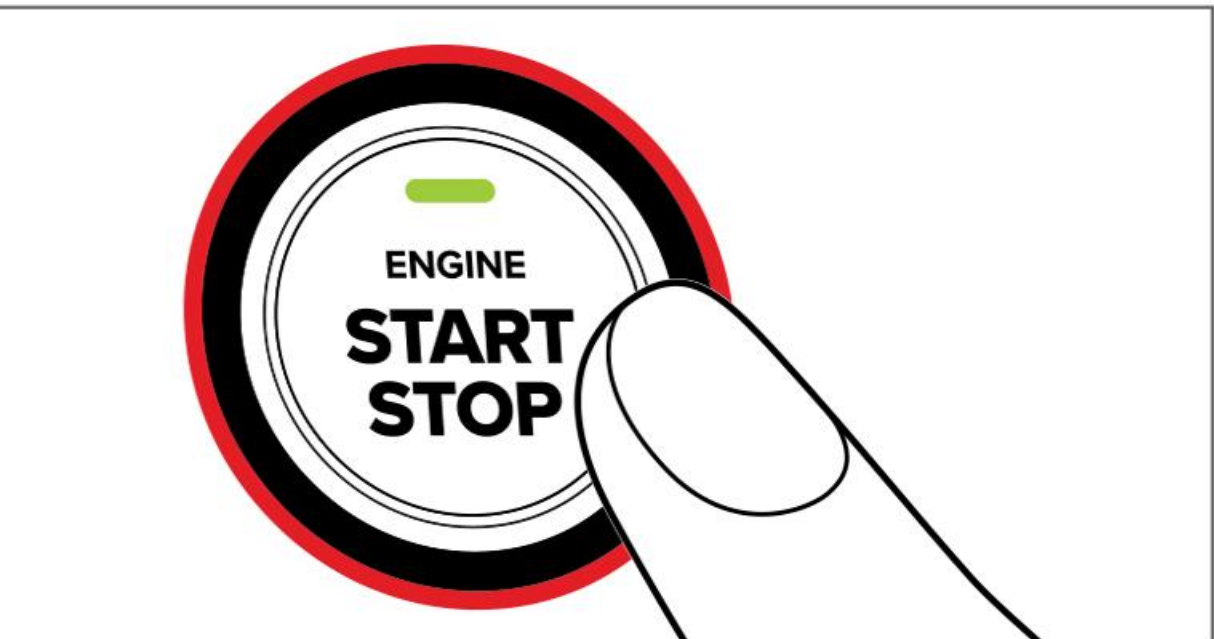


3.Plug the UD-BS adapter into the OBD port.

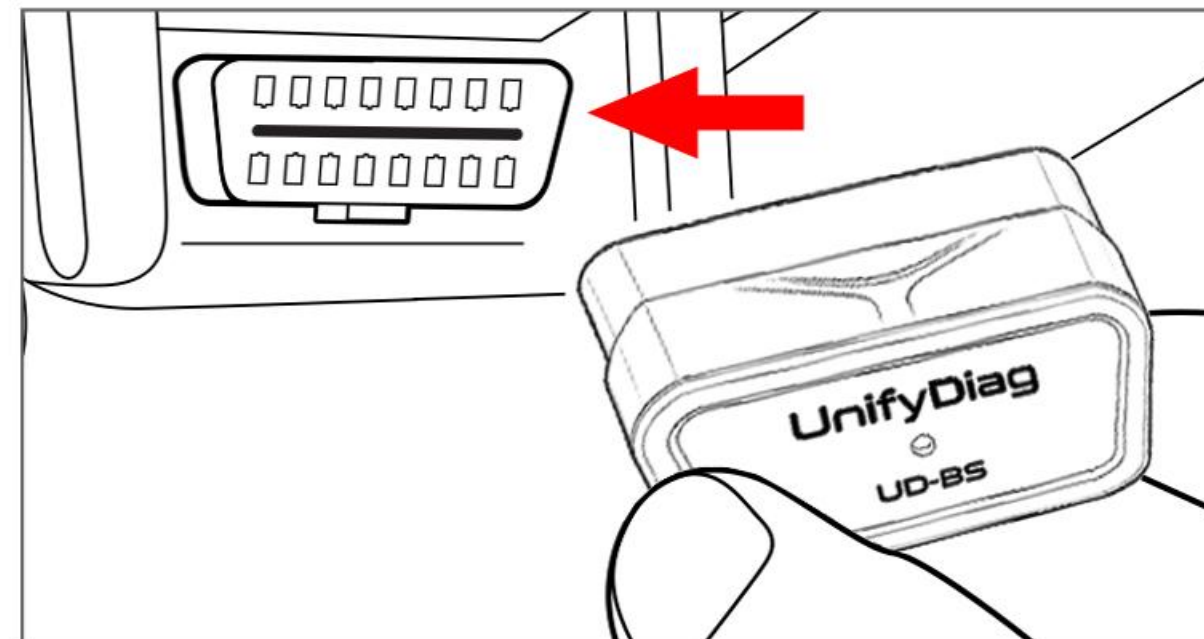


OBD port is usually in driver's footwell

4. Android: Find the Bluetooth name of "UD-BS SPP XXXXX".

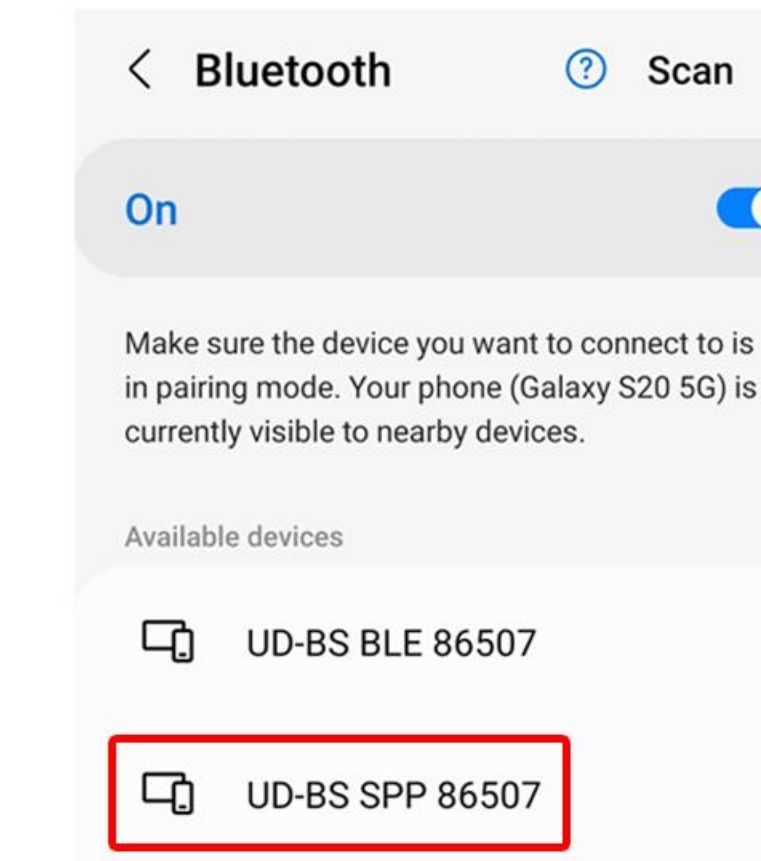

iOS: Connect in app, See Step 6.

5. Android: Tap the device name "UD-BS SPP XXXXX", then tap Pair.

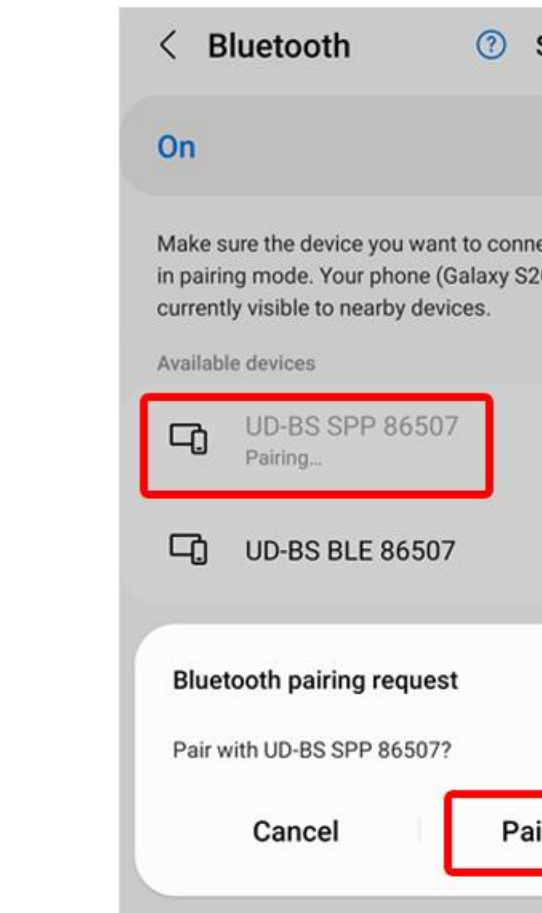

iOS: Pair in app, See Step 6.

6. Scan the QR-Code on this manual to view detailed connection instructions.



FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

IC Warning

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

*RF warning for Mobile device:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.