






Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5500	Ant2	5500.04	40000	7.27	25	Pass
NVNT	a	5580	Ant2	5580	0	0	25	Pass
NVNT	a	5700	Ant2	5700.02	20000	3.51	25	Pass
NVNT	n20	5500	Ant2	5500	0	0	25	Pass
NVNT	n20	5580	Ant2	5580	0	0	25	Pass
NVNT	n20	5700	Ant2	5700	0	0	25	Pass
NVNT	n40	5510	Ant2	5510	0	0	25	Pass
NVNT	n40	5550	Ant2	5550	0	0	25	Pass
NVNT	n40	5670	Ant2	5670	0	0	25	Pass
NVNT	ac20	5500	Ant2	5500	0	0	25	Pass
NVNT	ac20	5580	Ant2	5580	0	0	25	Pass
NVNT	ac20	5700	Ant2	5700.02	20000	3.51	25	Pass
NVNT	ac40	5510	Ant2	5510	0	0	25	Pass
NVNT	ac40	5550	Ant2	5550	0	0	25	Pass
NVNT	ac40	5670	Ant2	5670	0	0	25	Pass
NVNT	ac80	5530	Ant2	5530	0	0	25	Pass
NVNT	ac80	5610	Ant2	5610	0	0	25	Pass
NVNT	ax20	5500	Ant2	5500	0	0	25	Pass
NVNT	ax20	5580	Ant2	5580	0	0	25	Pass
NVNT	ax20	5700	Ant2	5700	0	0	25	Pass
NVNT	ax40	5510	Ant2	5510.04	40000	7.26	25	Pass
NVNT	ax40	5550	Ant2	5550.04	40000	7.21	25	Pass
NVNT	ax40	5670	Ant2	5670.04	40000	7.05	25	Pass
NVNT	ax80	5530	Ant2	5530	0	0	25	Pass
NVNT	ax80	5610	Ant2	5610	0	0	25	Pass

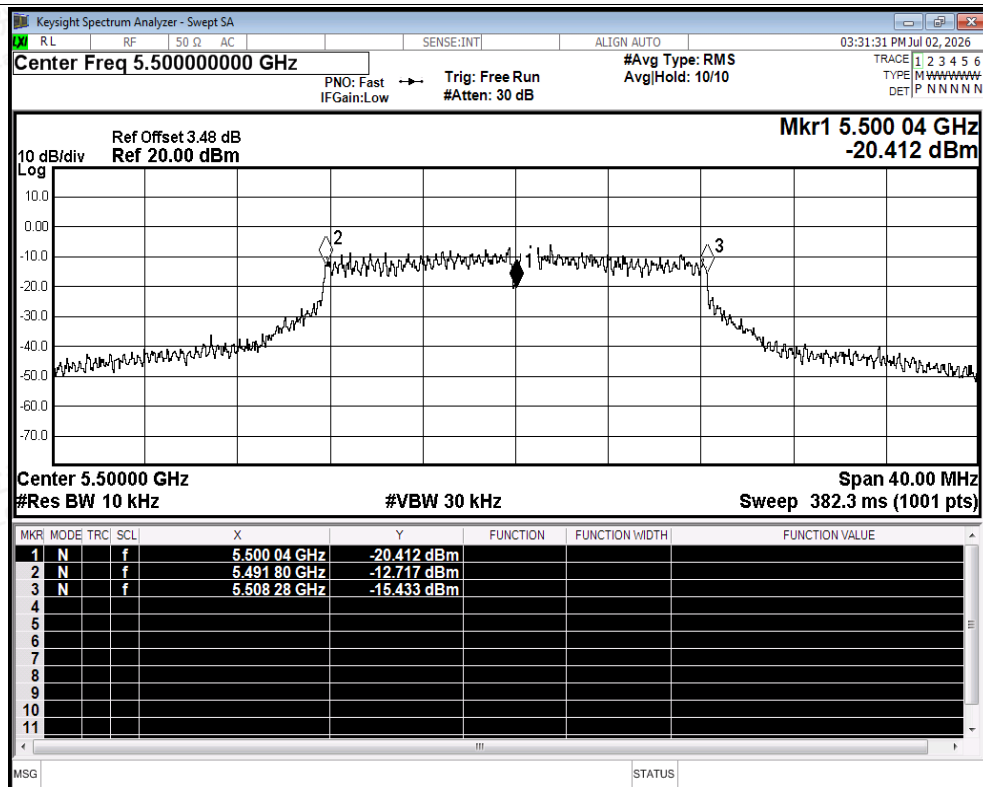


Freq. Stability NVNT a 5500MHz Ant2

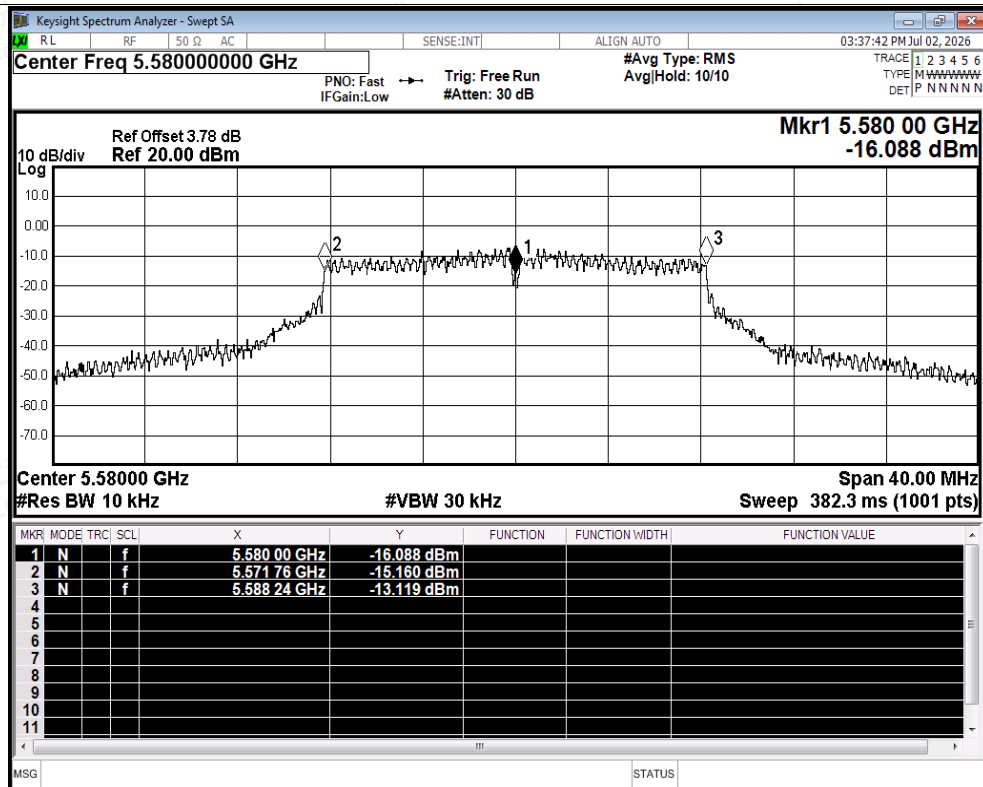


Freq. Stability NVNT a 5580MHz Ant2

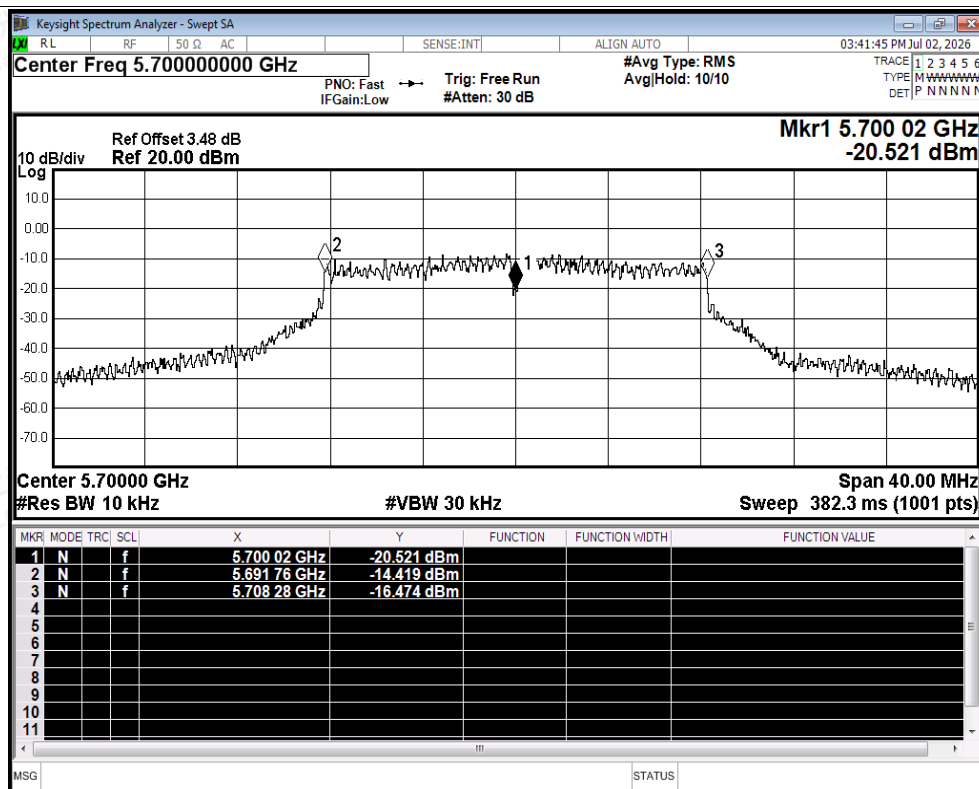


Freq. Stability NVNT a 5700MHz Ant2

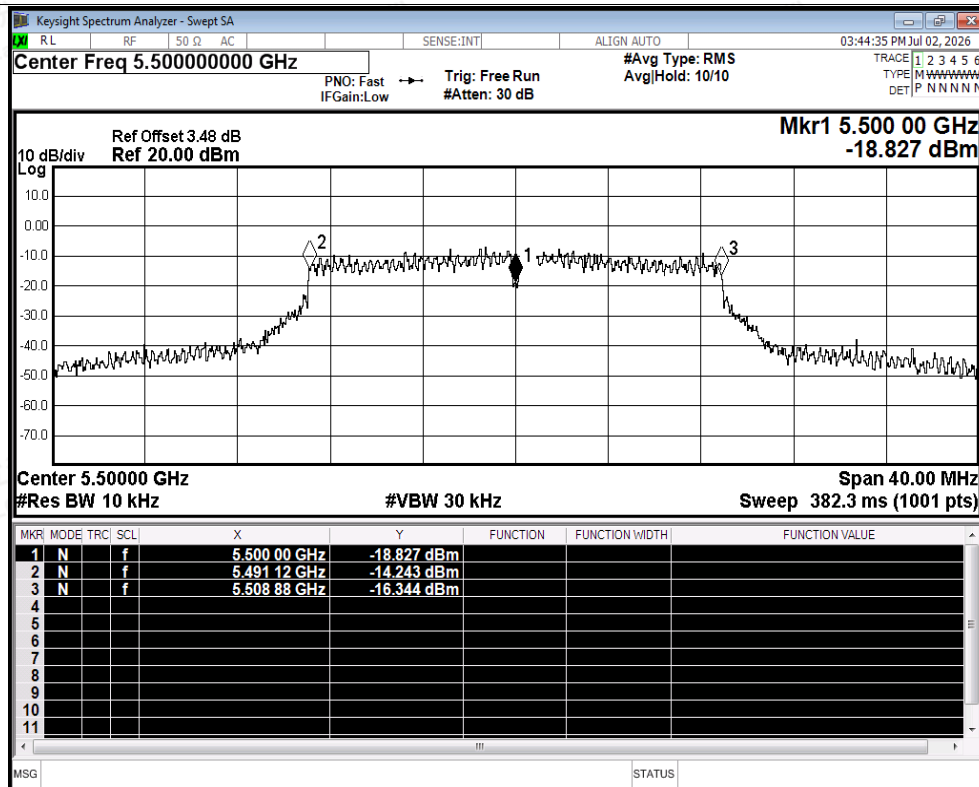


Freq. Stability NVNT n20 5500MHz Ant2

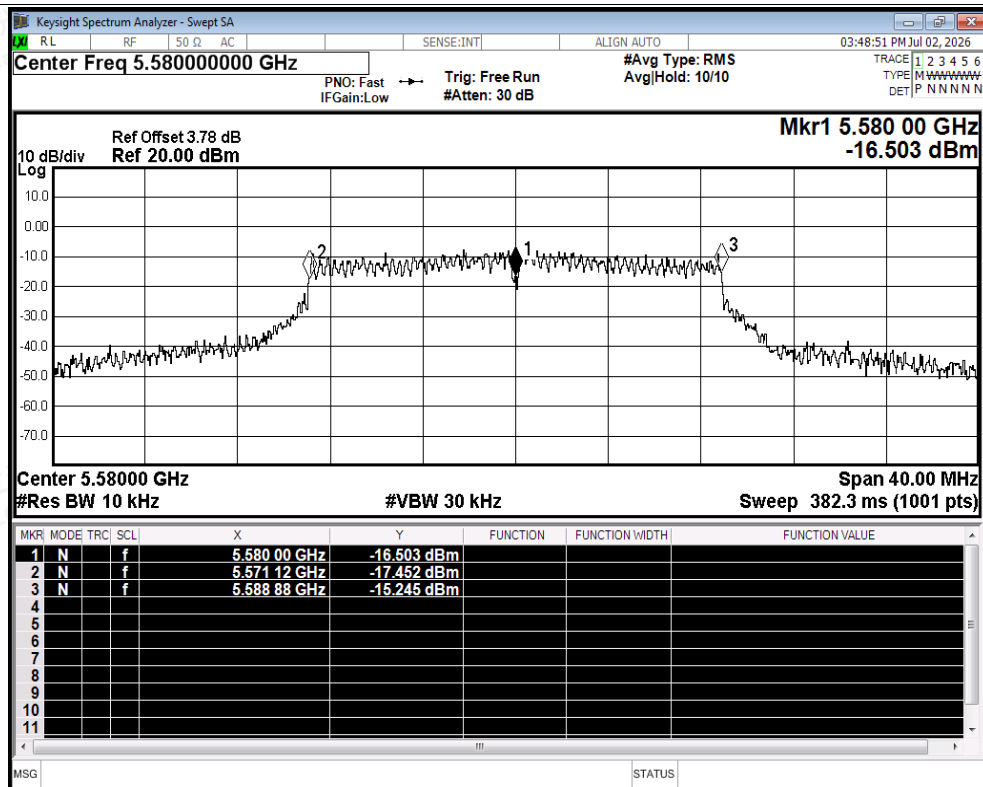


Freq. Stability NVNT n20 5580MHz Ant2

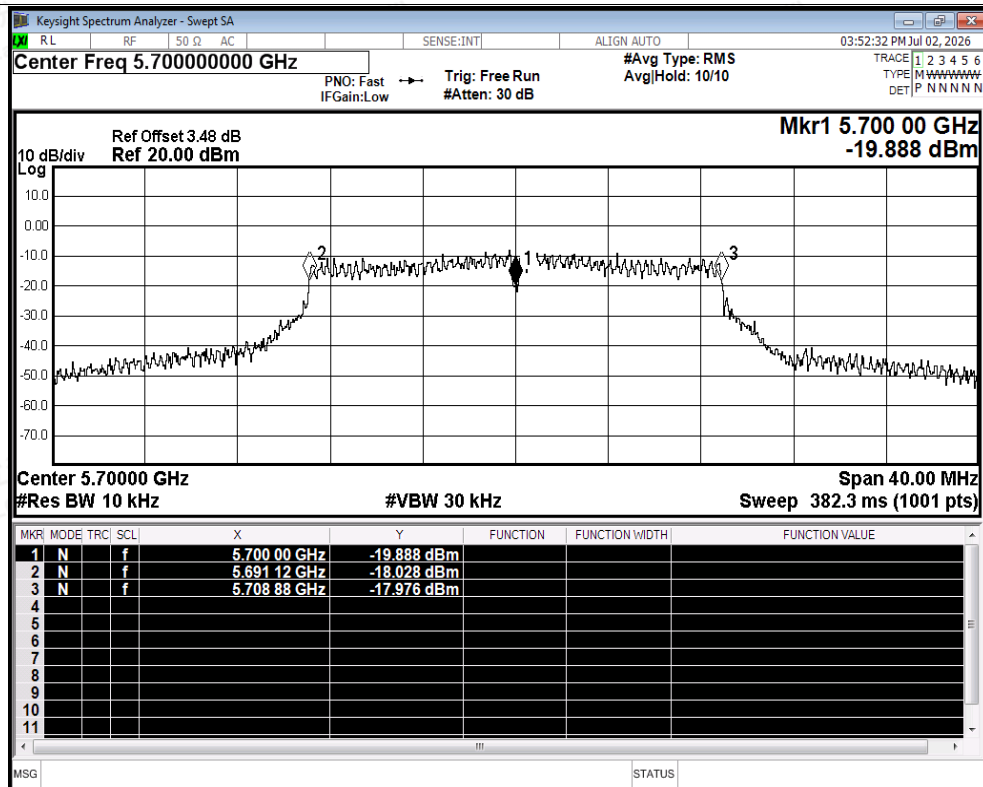


Freq. Stability NVNT n20 5700MHz Ant2

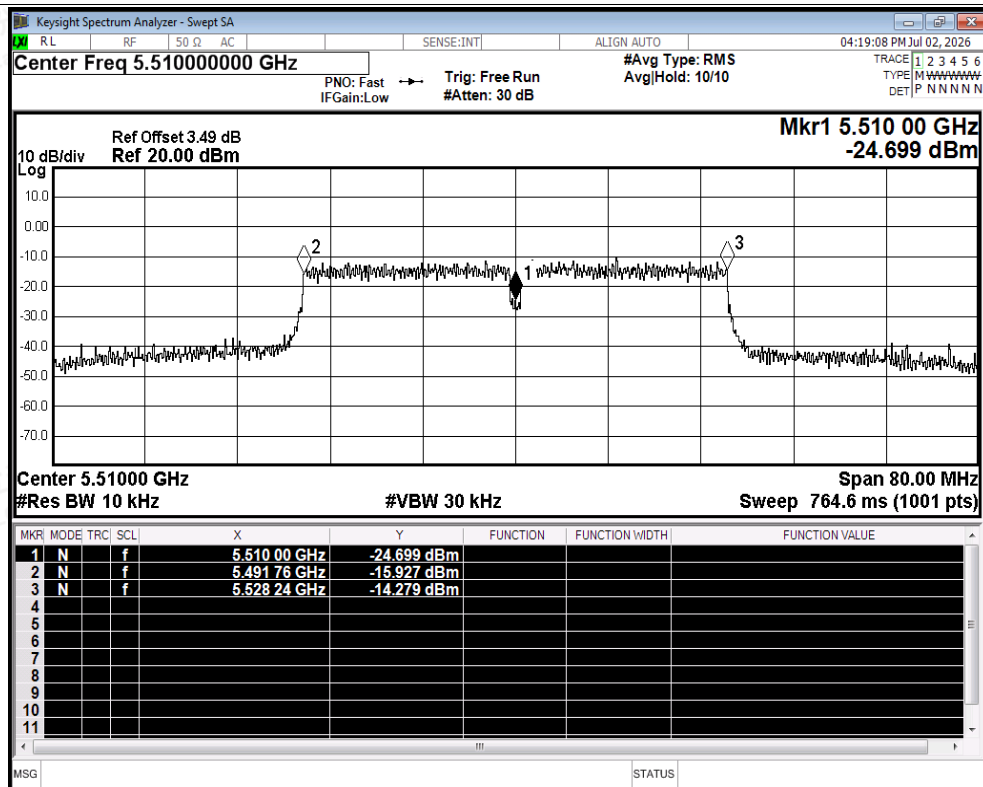


Freq. Stability NVNT n40 5510MHz Ant2

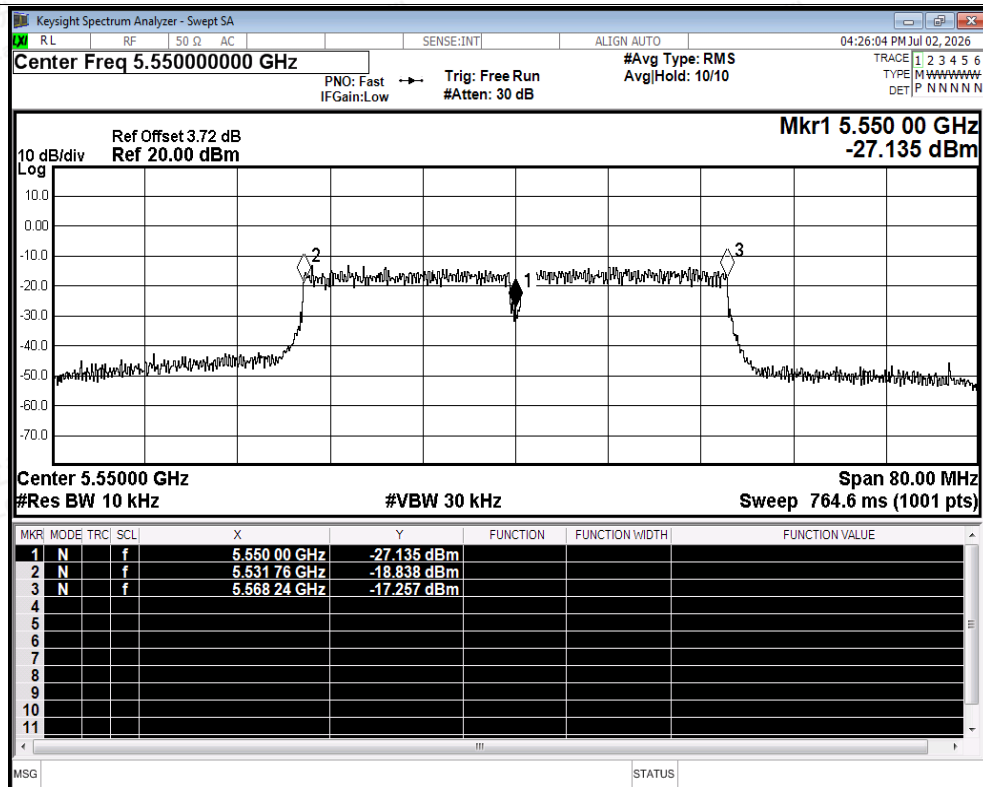


Freq. Stability NVNT n40 5550MHz Ant2

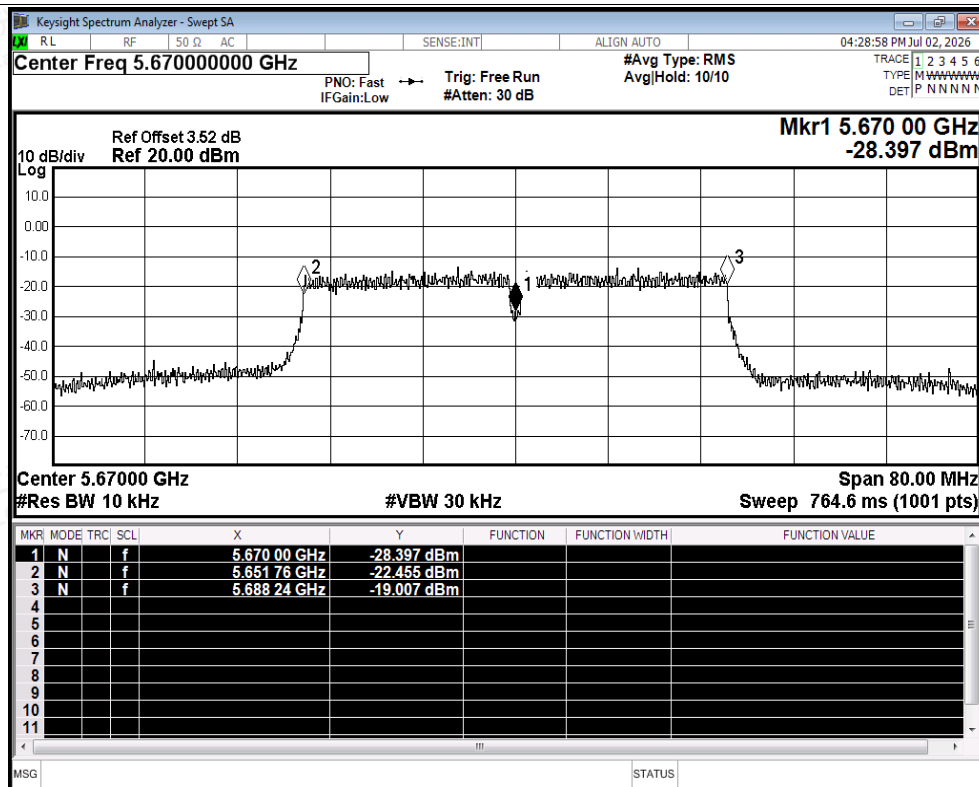


Freq. Stability NVNT n40 5670MHz Ant2

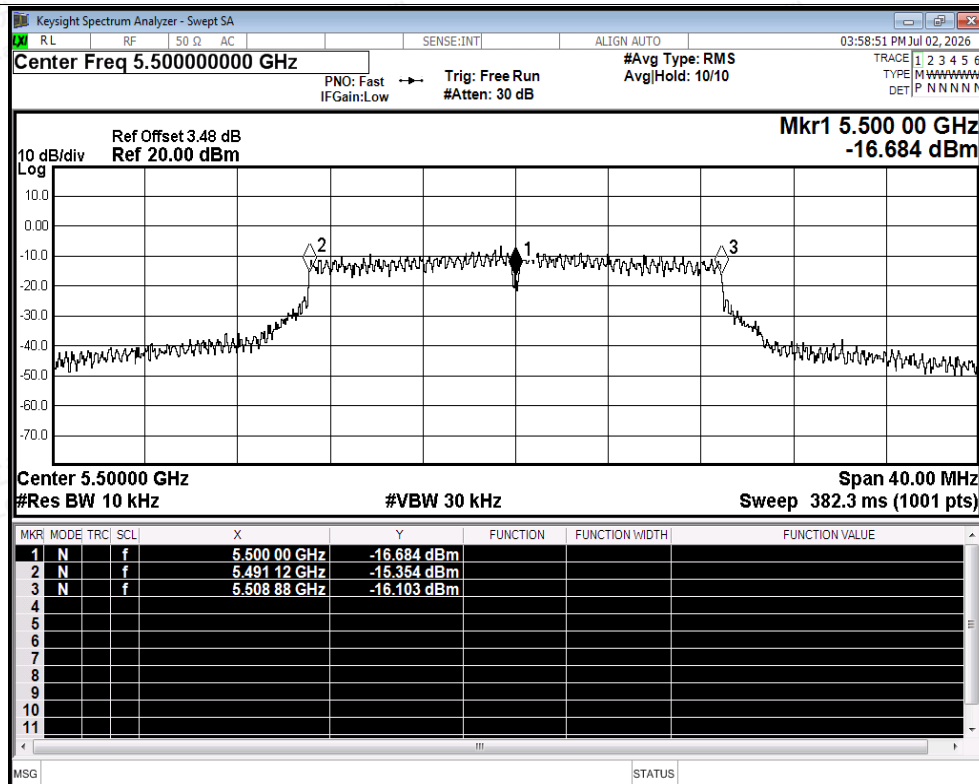


Freq. Stability NVNT ac20 5500MHz Ant2

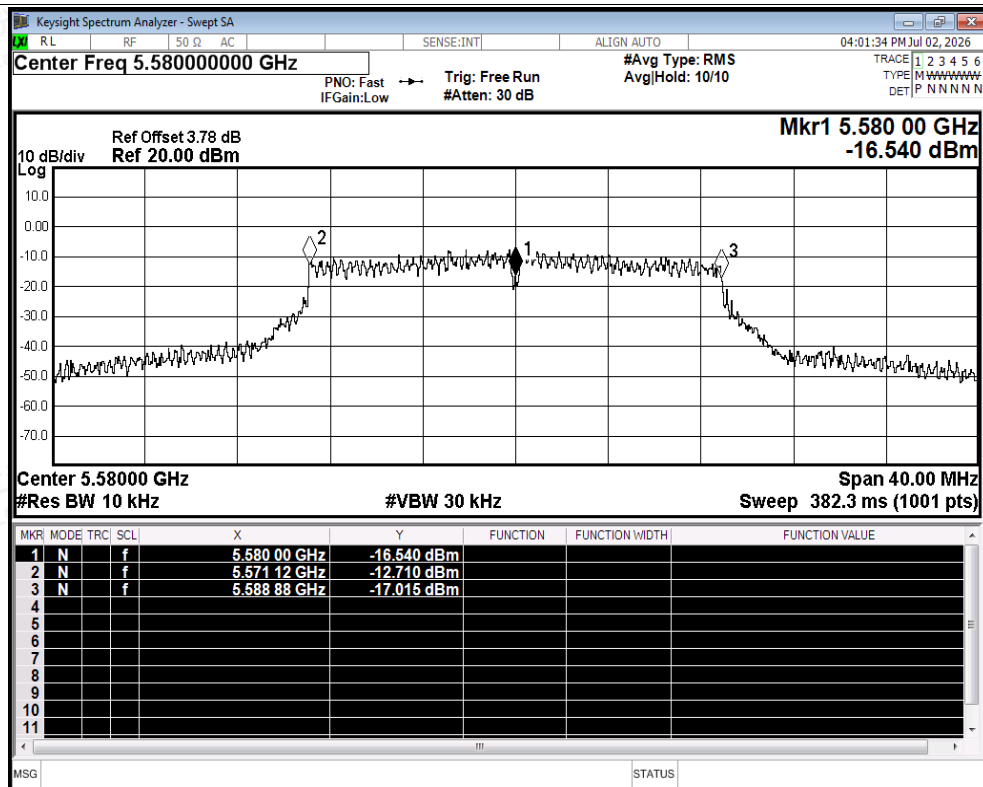


Freq. Stability NVNT ac20 5580MHz Ant2

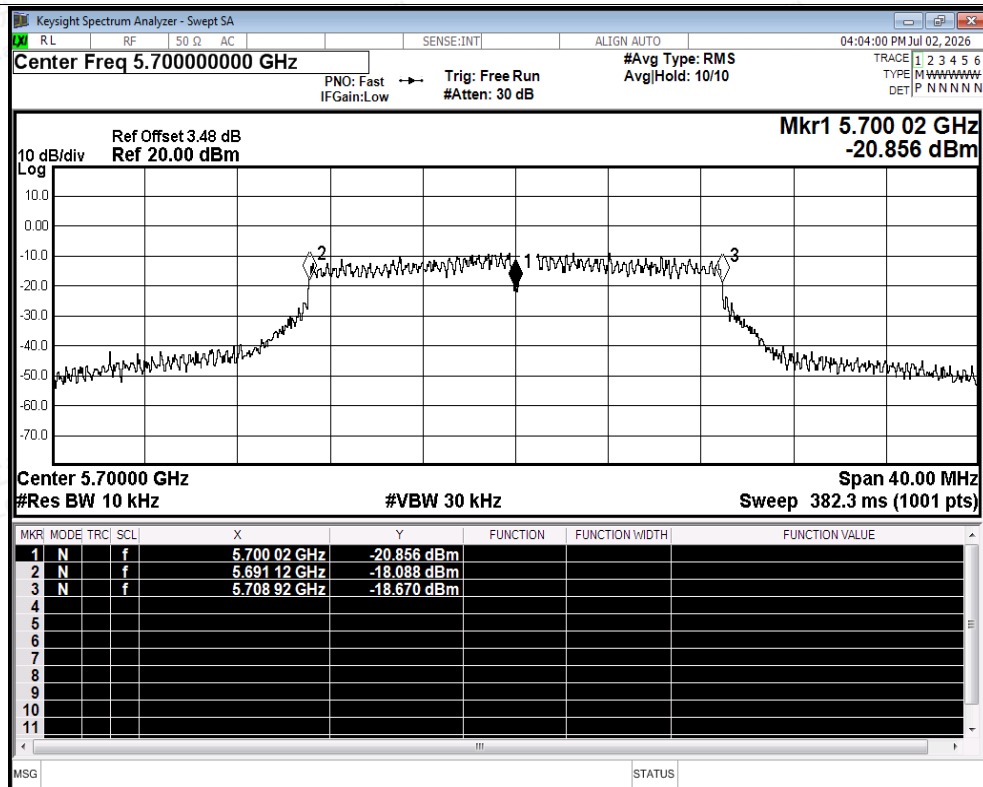


Freq. Stability NVNT ac20 5700MHz Ant2

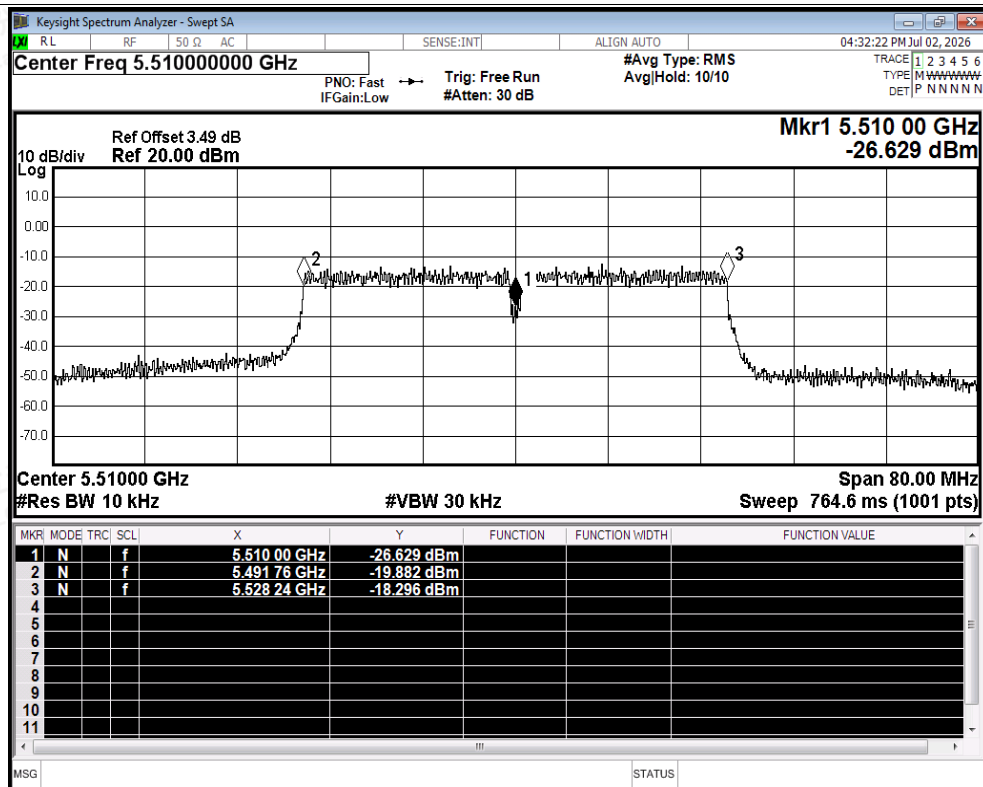


Freq. Stability NVNT ac40 5510MHz Ant2

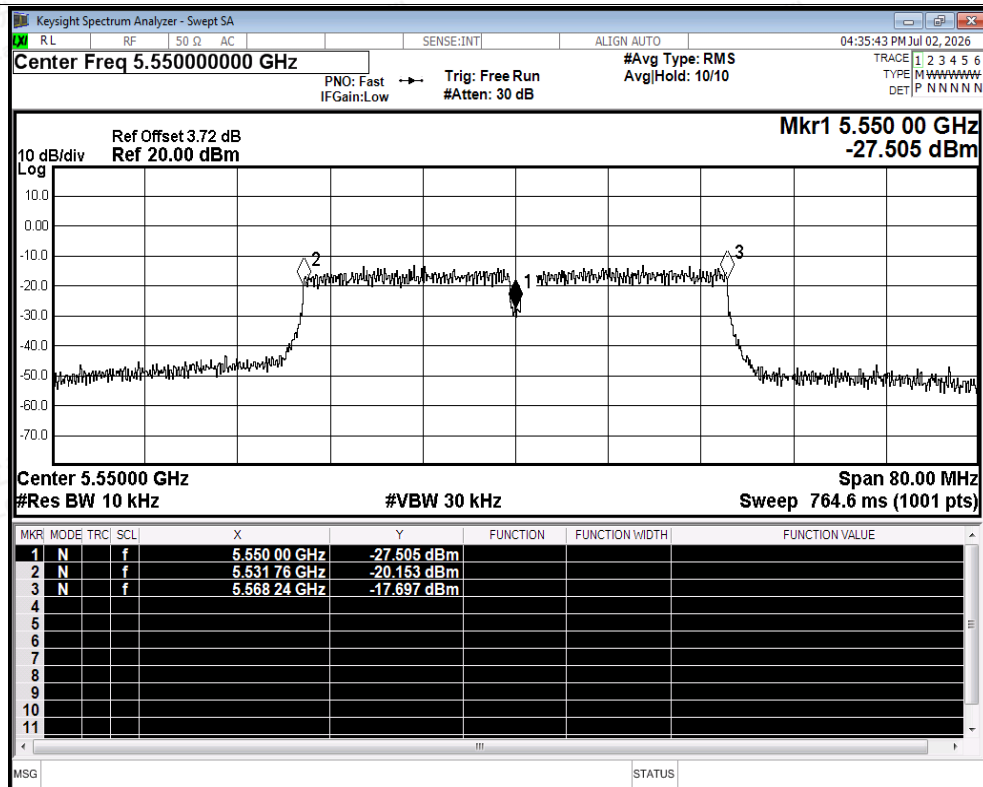


Freq. Stability NVNT ac40 5550MHz Ant2

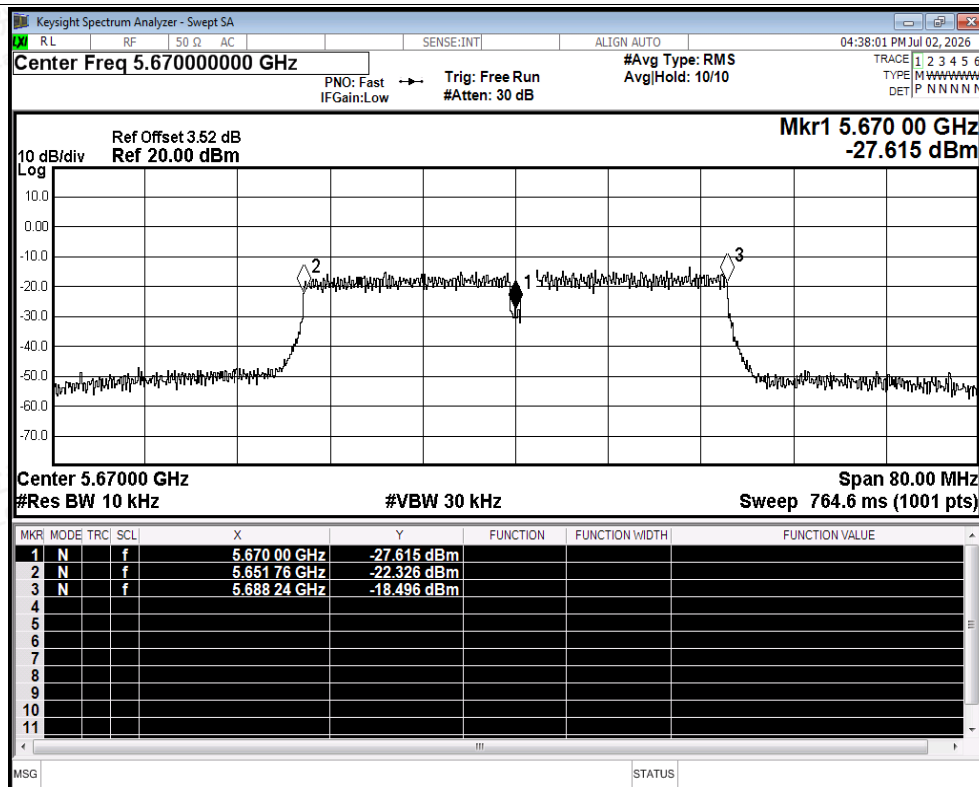


Freq. Stability NVNT ac40 5670MHz Ant2

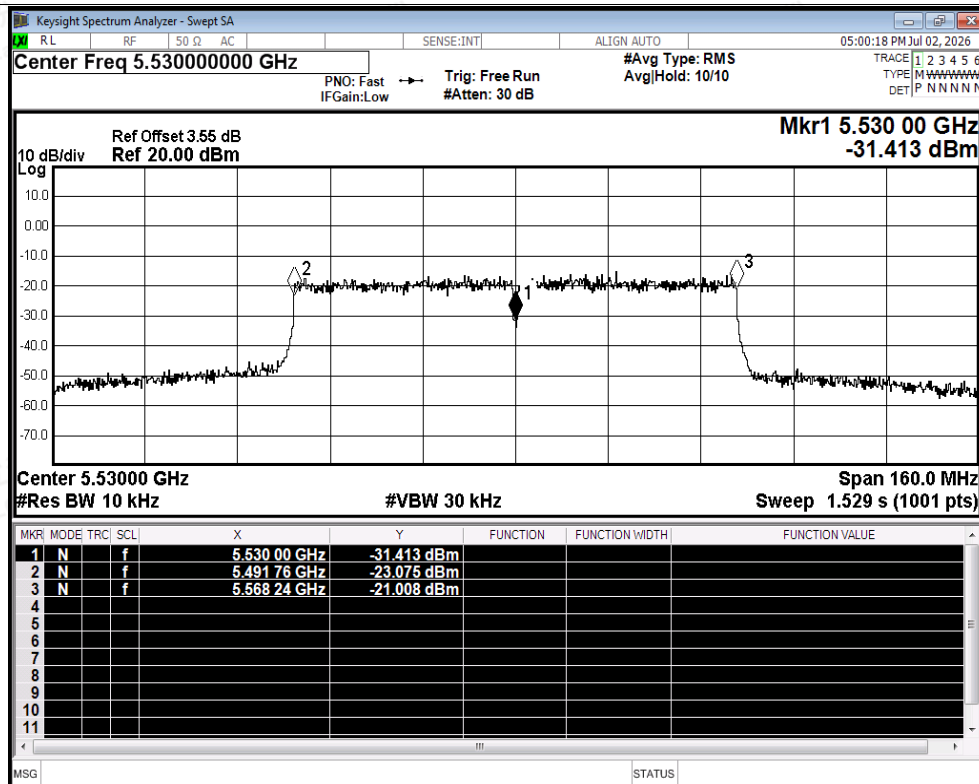


Freq. Stability NVNT ac80 5530MHz Ant2

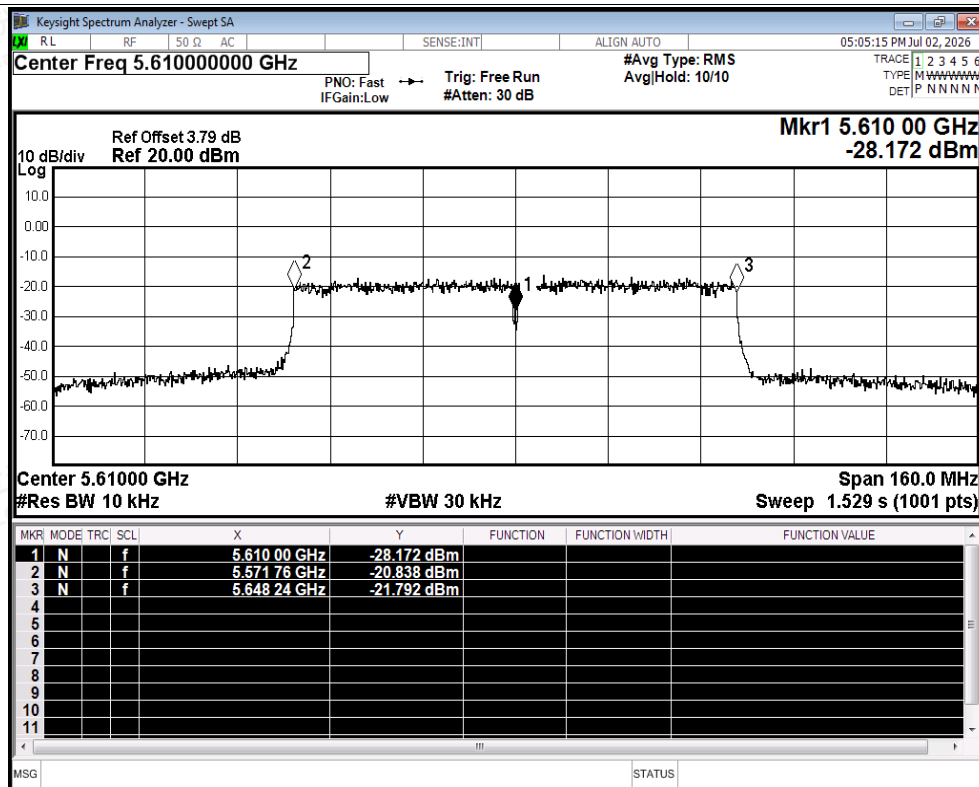


Freq. Stability NVNT ac80 5610MHz Ant2

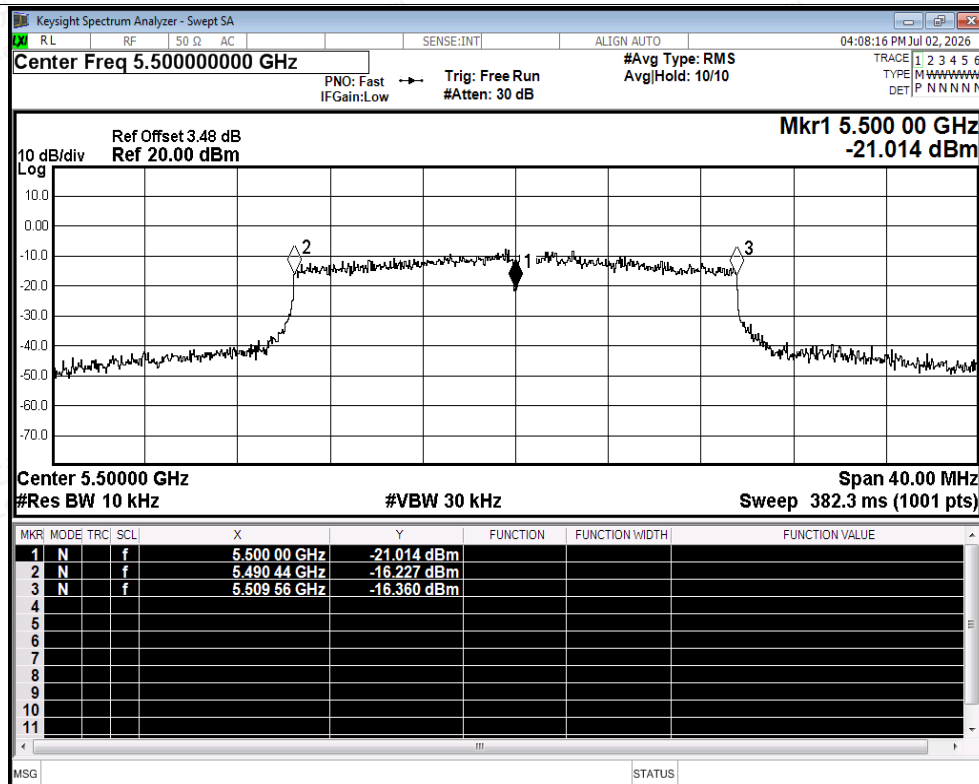


Freq. Stability NVNT ax20 5500MHz Ant2

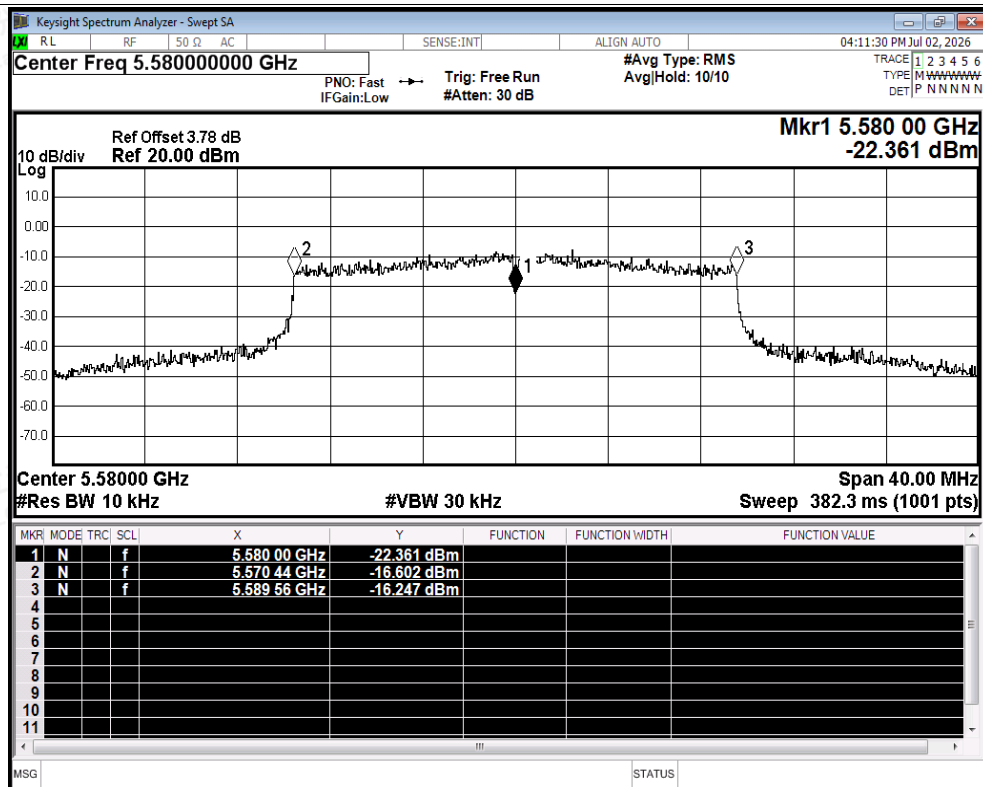


Freq. Stability NVNT ax20 5580MHz Ant2

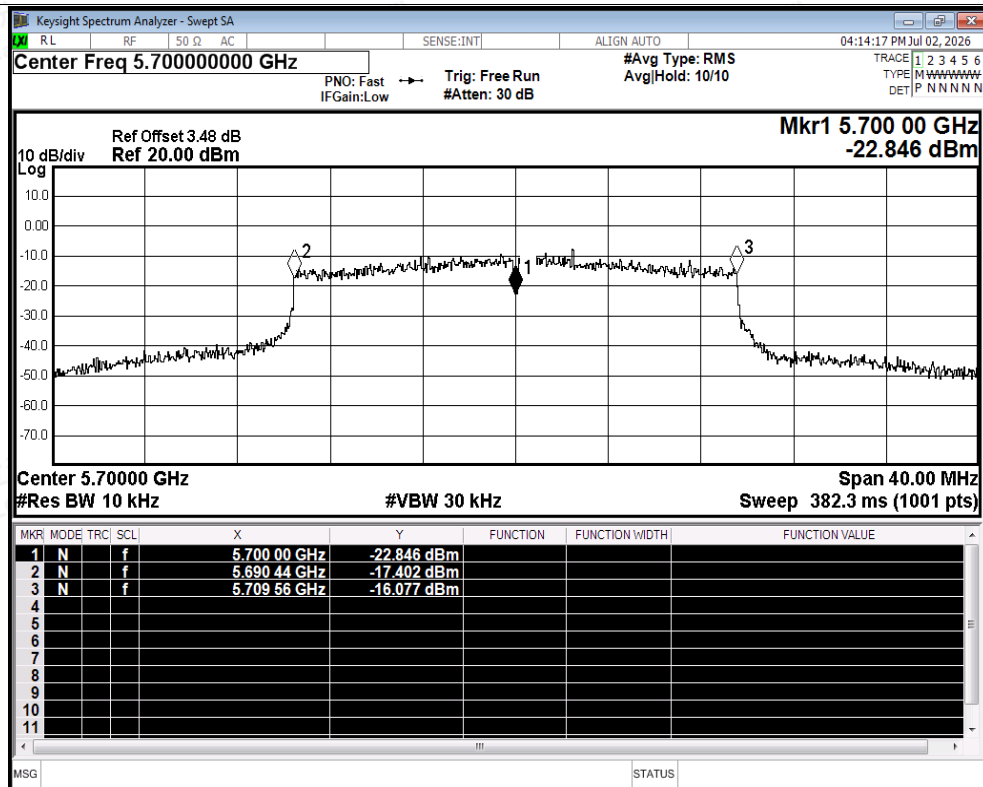


Freq. Stability NVNT ax20 5700MHz Ant2

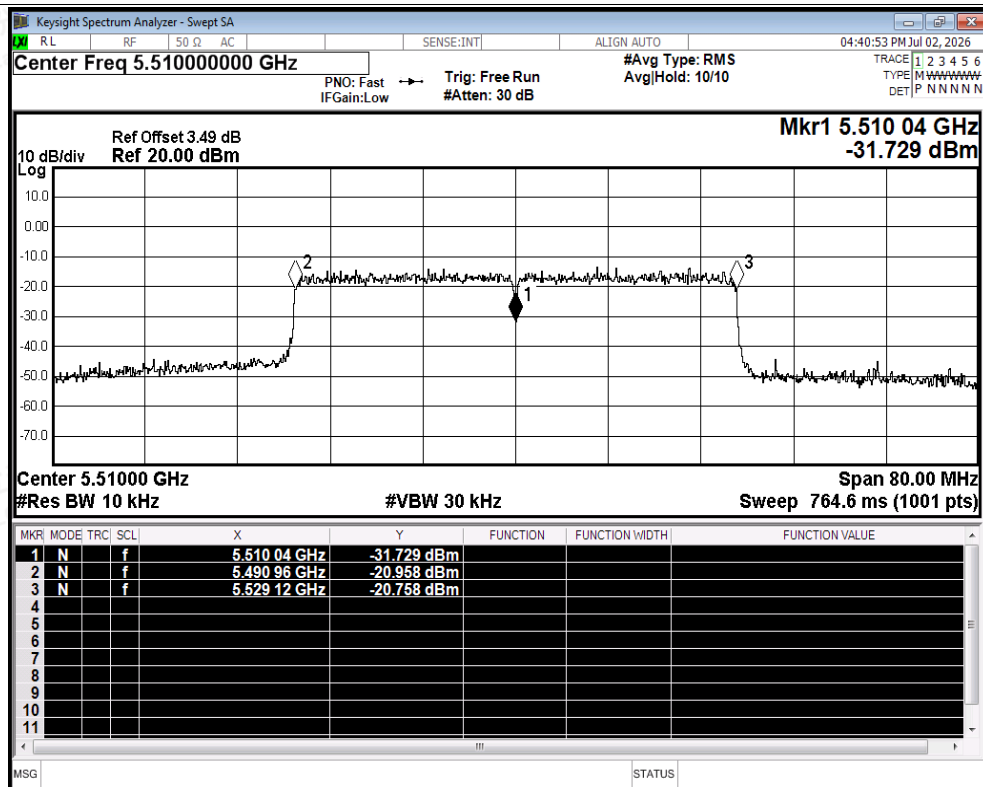


Freq. Stability NVNT ax40 5510MHz Ant2

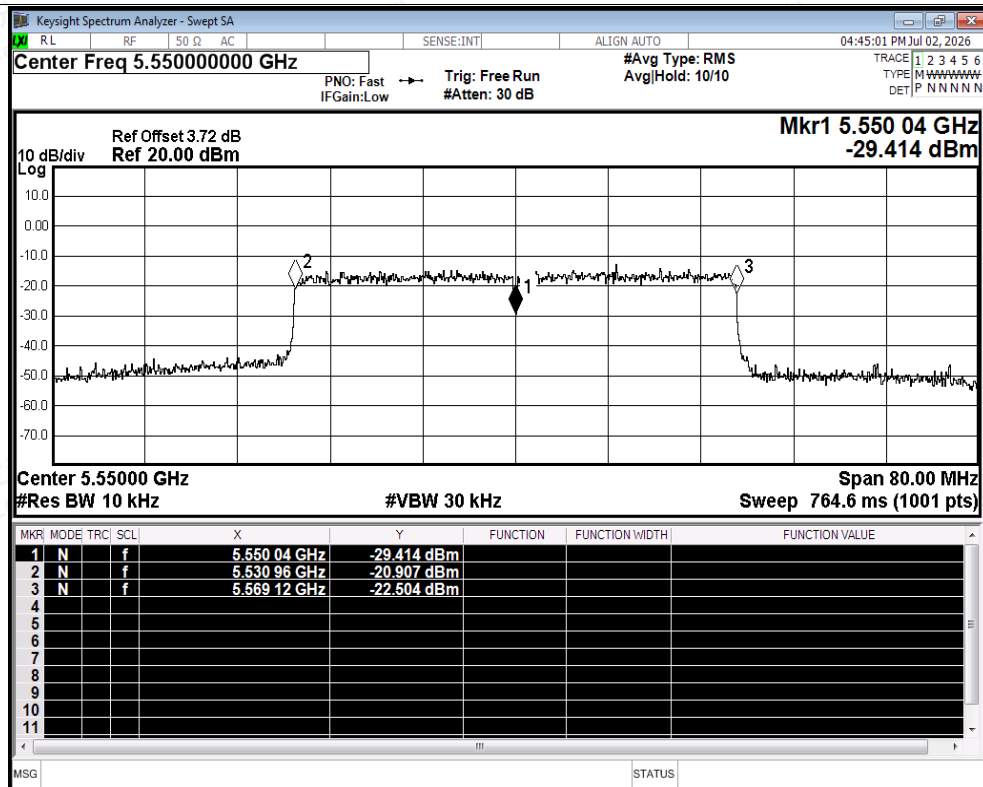


Freq. Stability NVNT ax40 5550MHz Ant2

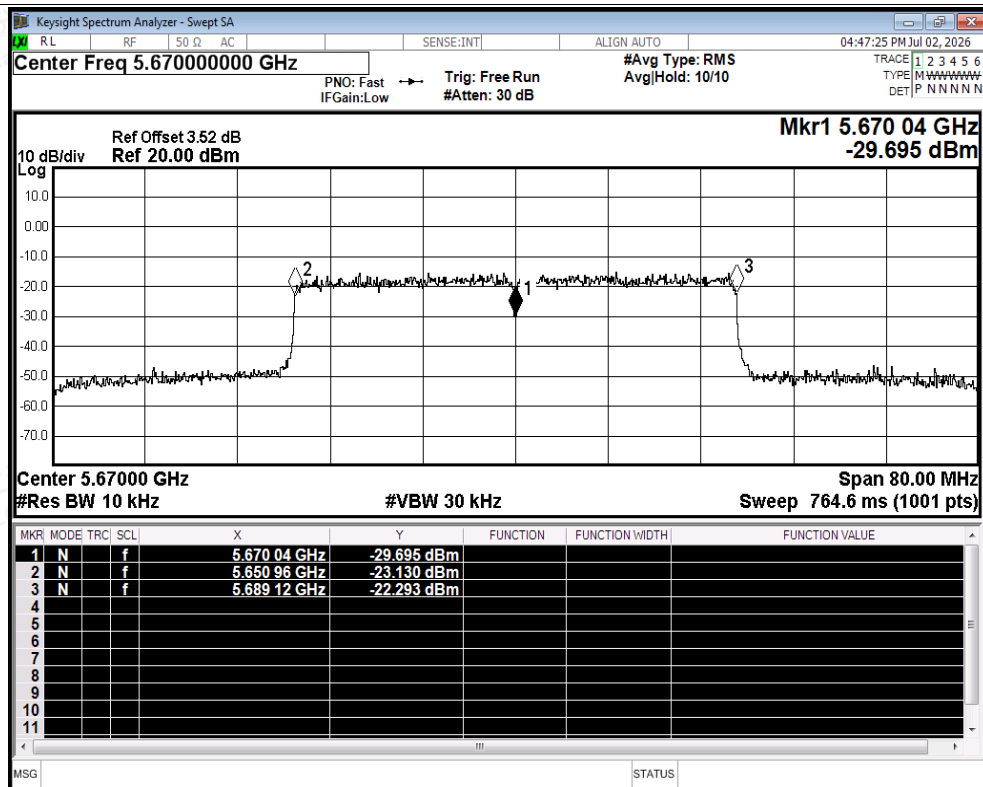

Freq. Stability NVNT ax40 5670MHz Ant2

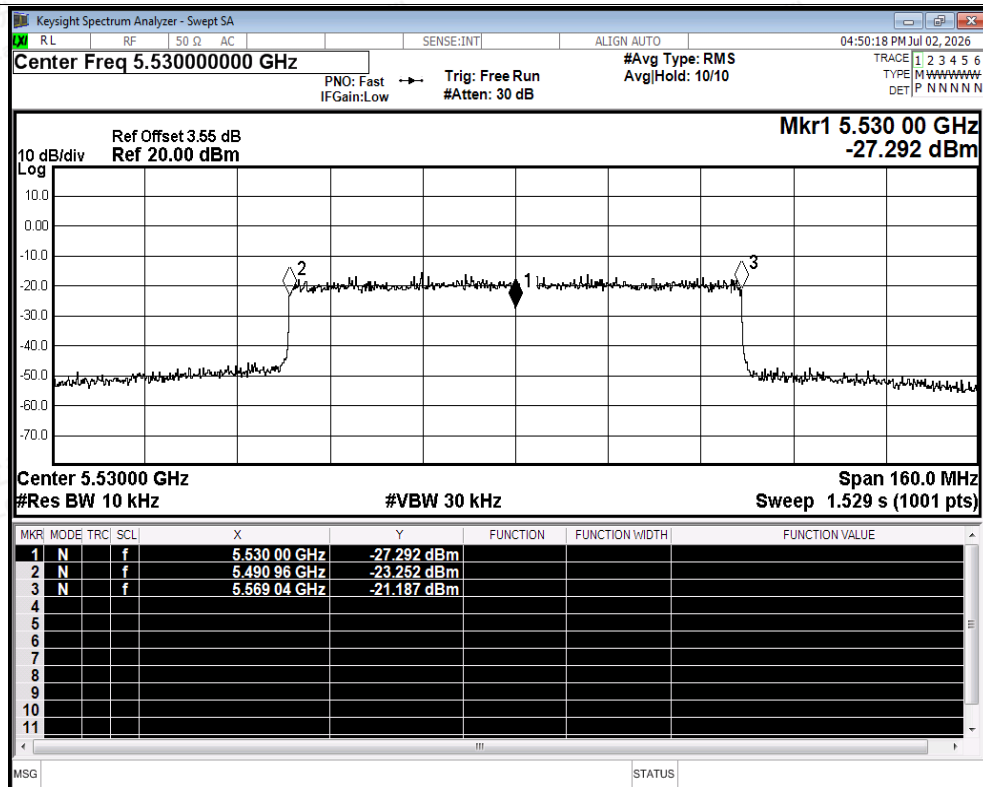


Freq. Stability NVNT ax80 5530MHz Ant2

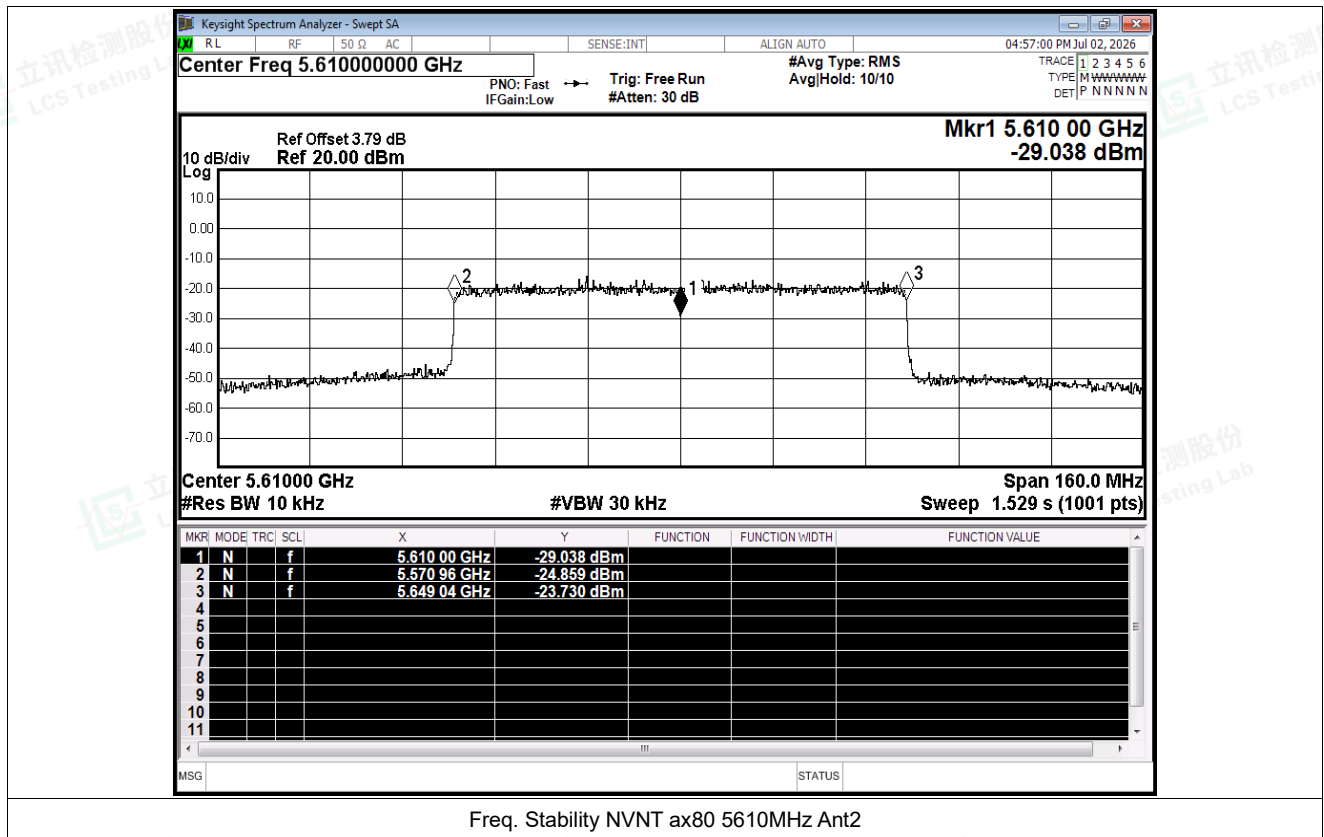




F.6 Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant1	93.33	0.3	0.71
NVNT	a	5580	Ant1	93.96	0.27	0.71
NVNT	a	5700	Ant1	93.29	0.3	0.72
NVNT	n20	5500	Ant1	88.46	0.53	4.35
NVNT	n20	5580	Ant1	98.46	0.07	0.52
NVNT	n20	5700	Ant1	88.46	0.53	4.35
NVNT	n40	5510	Ant1	96.91	0.14	1.06
NVNT	n40	5550	Ant1	96.91	0.14	1.06
NVNT	n40	5670	Ant1	96.91	0.14	1.06
NVNT	ac20	5500	Ant1	92.96	0.32	0.76
NVNT	ac20	5580	Ant1	92.91	0.32	0.76
NVNT	ac20	5700	Ant1	92.96	0.32	0.76
NVNT	ac40	5510	Ant1	86.84	0.61	1.52
NVNT	ac40	5550	Ant1	86.67	0.62	1.54
NVNT	ac40	5670	Ant1	86.84	0.61	1.52
NVNT	ac80	5530	Ant1	76.74	1.15	3.03
NVNT	ac80	5610	Ant1	76.19	1.18	3.13
NVNT	ax20	5500	Ant1	57.14	2.43	8.33
NVNT	ax20	5580	Ant1	54.55	2.63	8.33
NVNT	ax20	5700	Ant1	54.55	2.63	8.33
NVNT	ax40	5510	Ant1	84.38	0.74	1.85
NVNT	ax40	5550	Ant1	84.37	0.74	1.85
NVNT	ax40	5670	Ant1	84.37	0.74	1.85
NVNT	ax80	5530	Ant1	74.36	1.29	3.45
NVNT	ax80	5610	Ant1	74.36	1.29	3.45

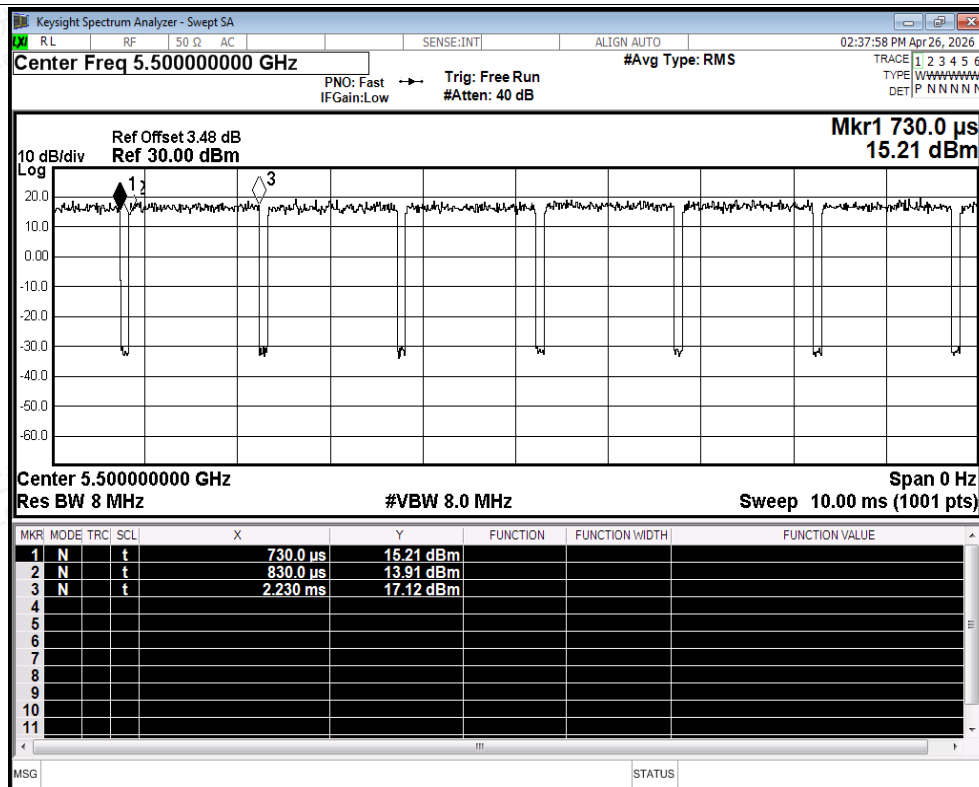


Duty Cycle NVNT a 5500MHz Ant1

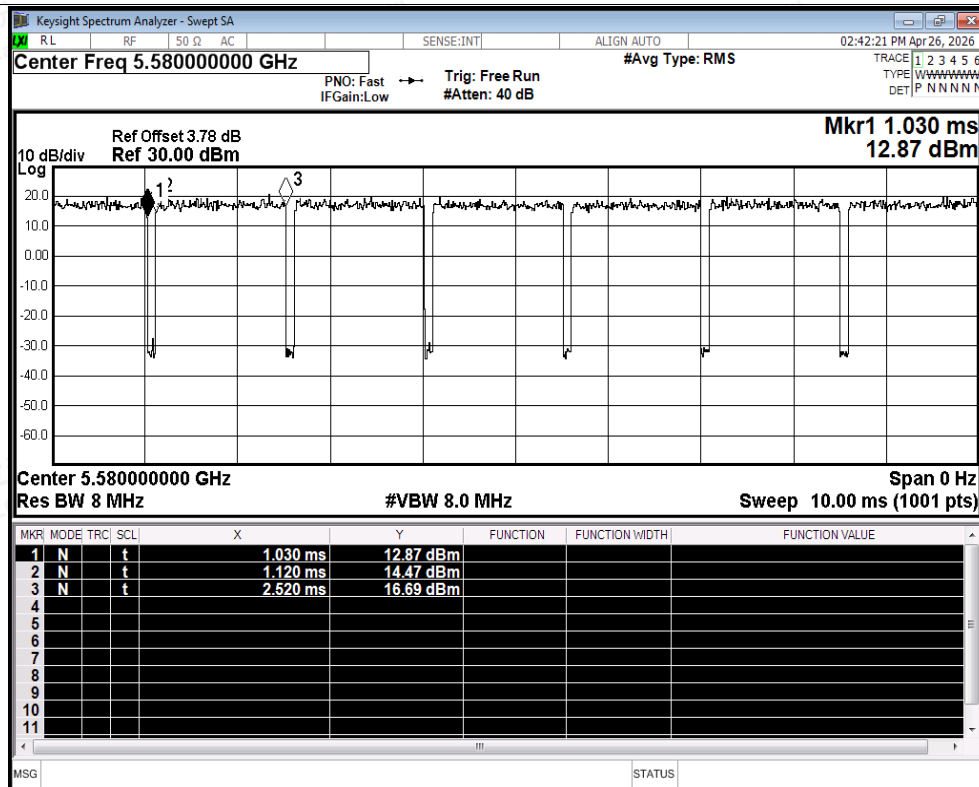


Duty Cycle NVNT a 5580MHz Ant1

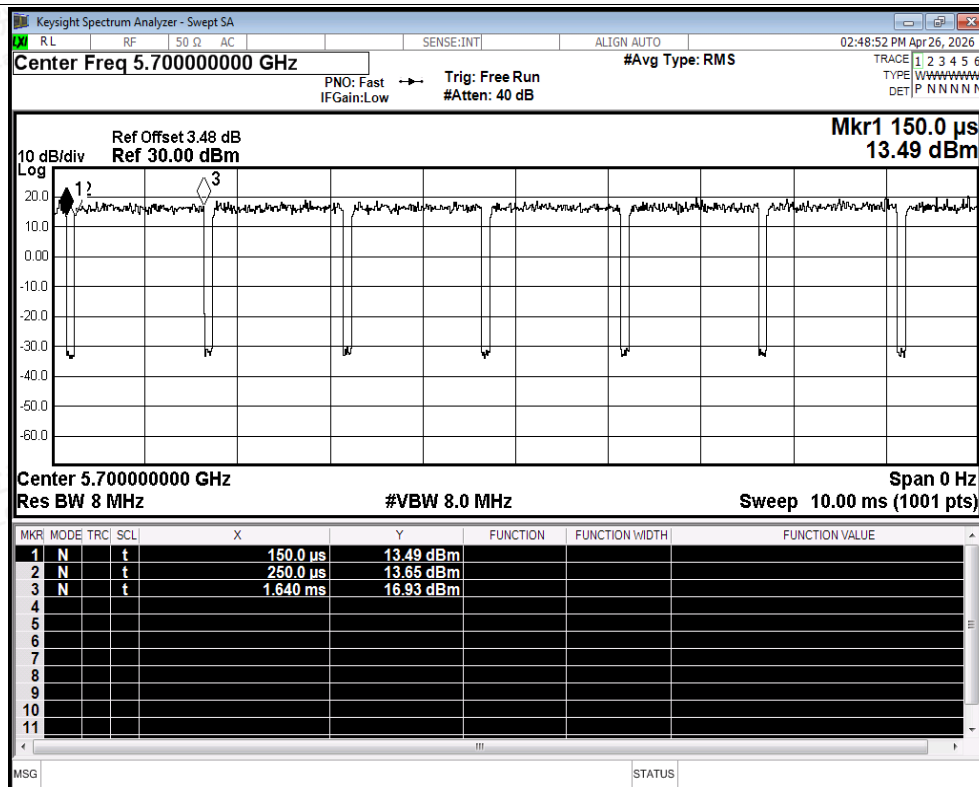


Duty Cycle NVNT a 5700MHz Ant1

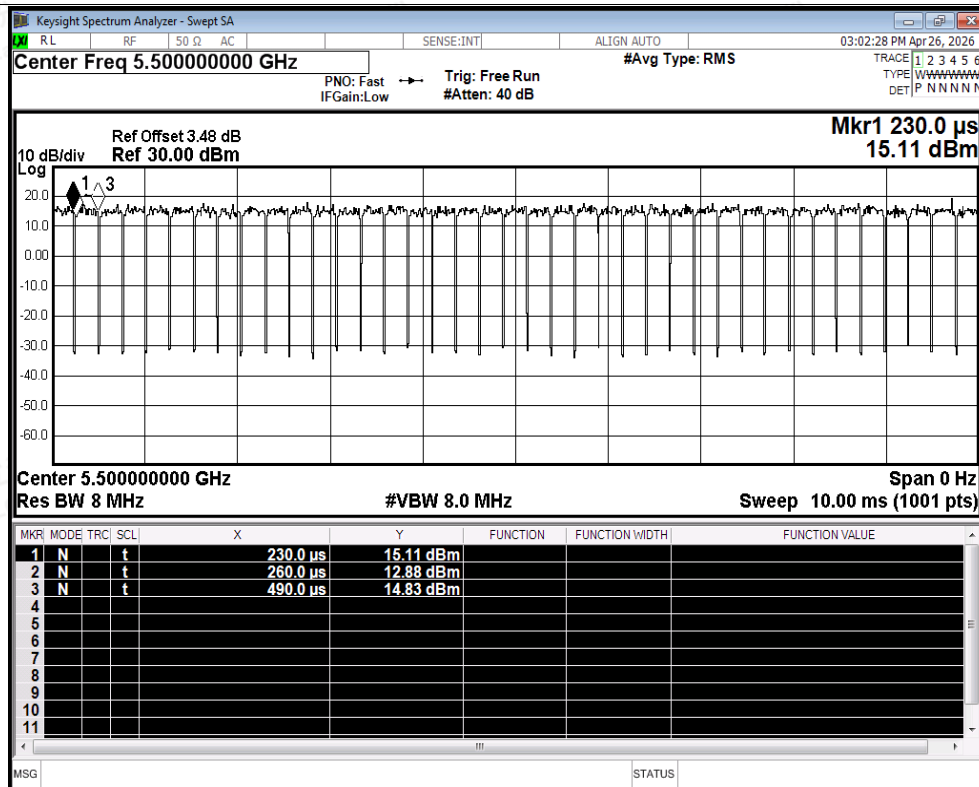


Duty Cycle NVNT n20 5500MHz Ant1

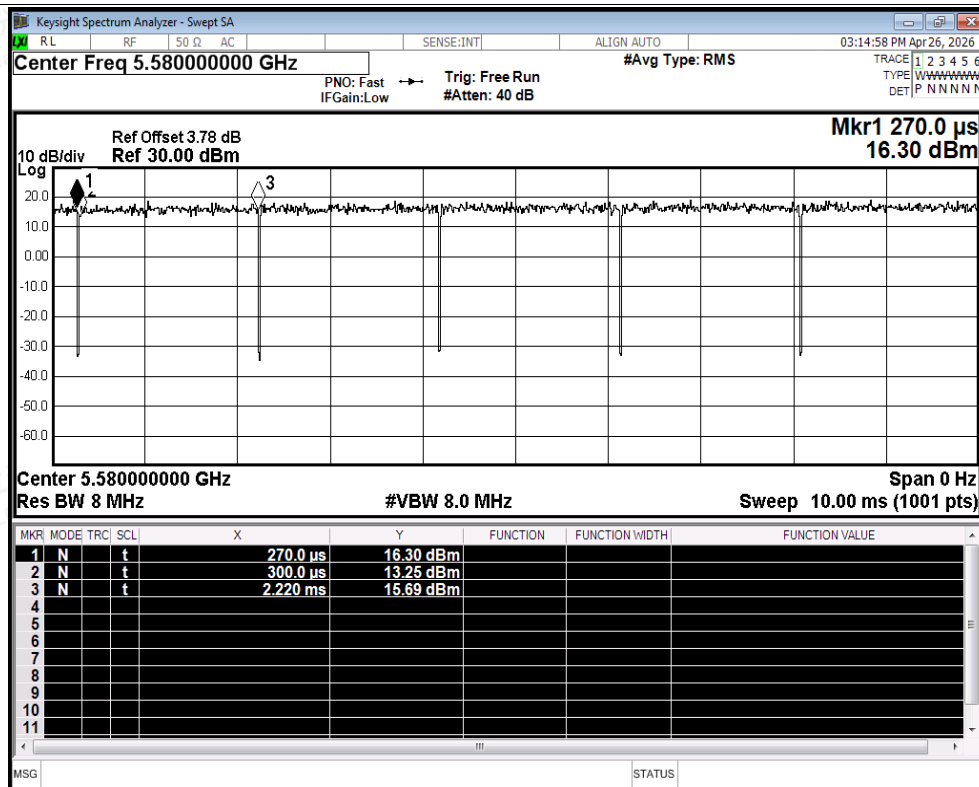


Duty Cycle NVNT n20 5580MHz Ant1

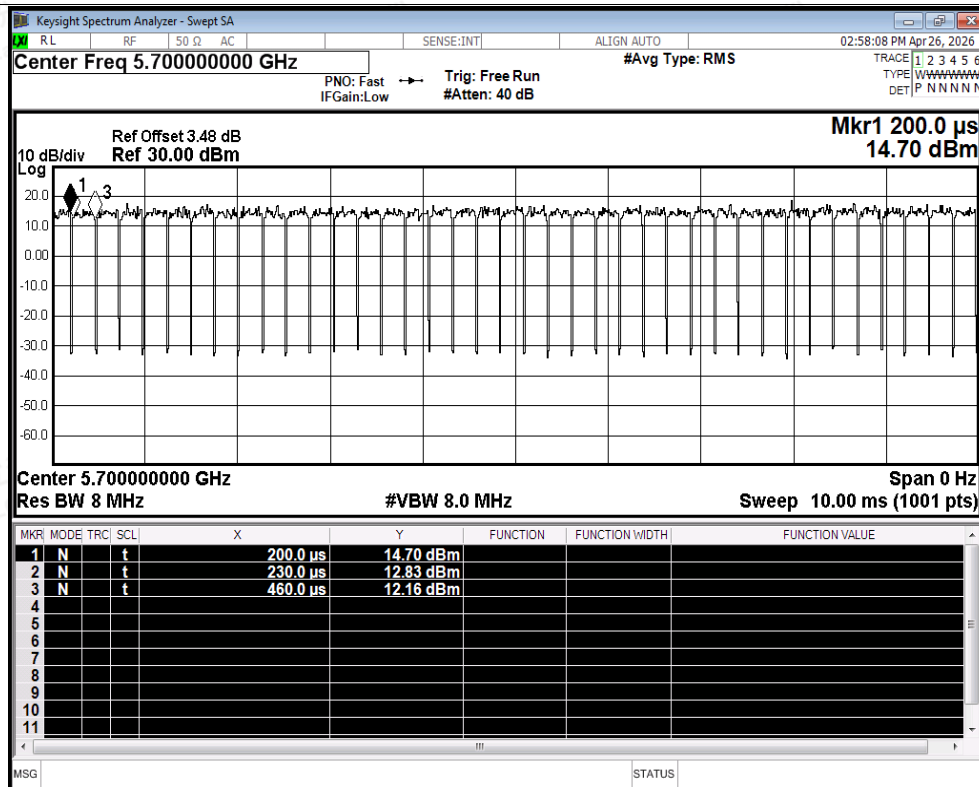


Duty Cycle NVNT n20 5700MHz Ant1

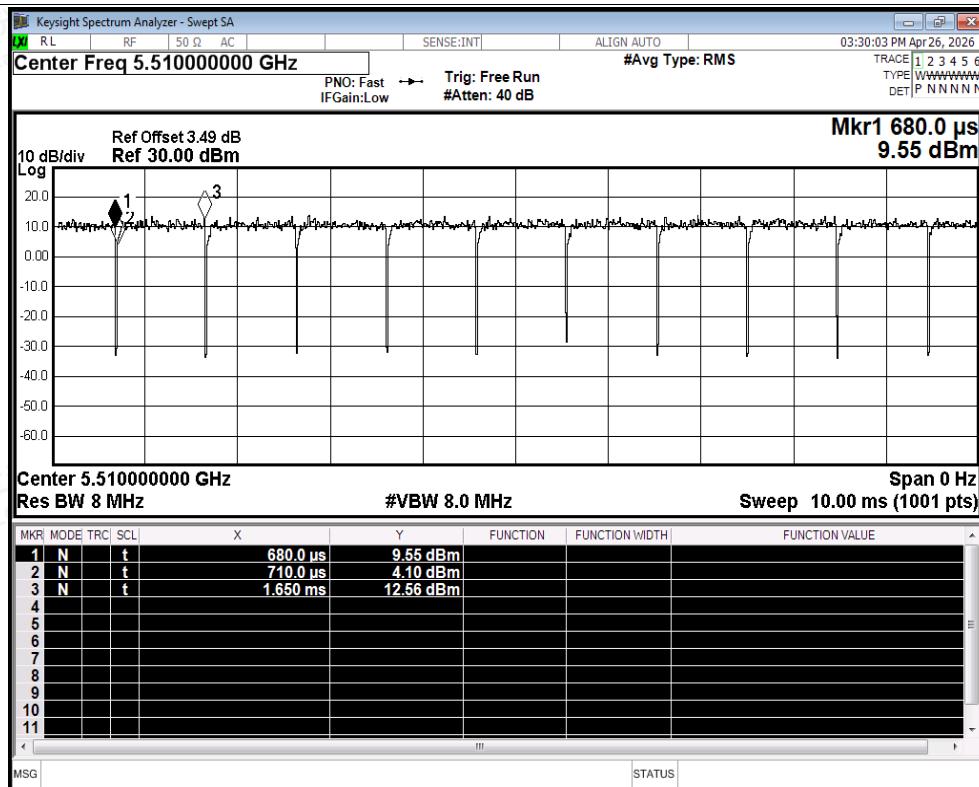


Duty Cycle NVNT n40 5510MHz Ant1

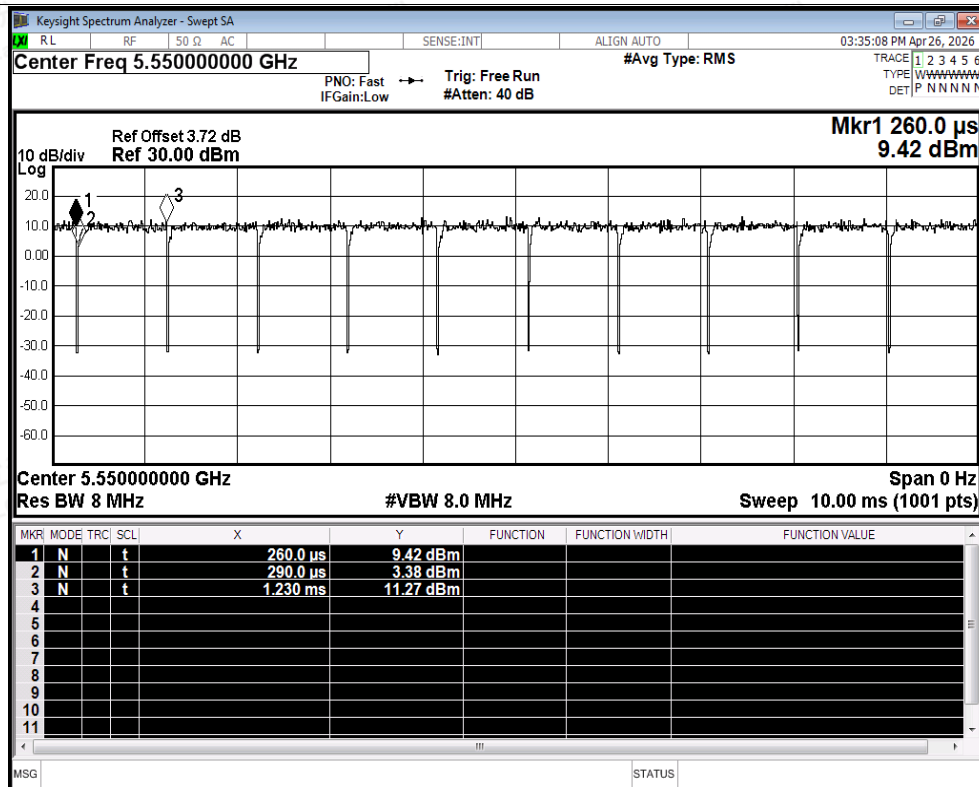


Duty Cycle NVNT n40 5550MHz Ant1

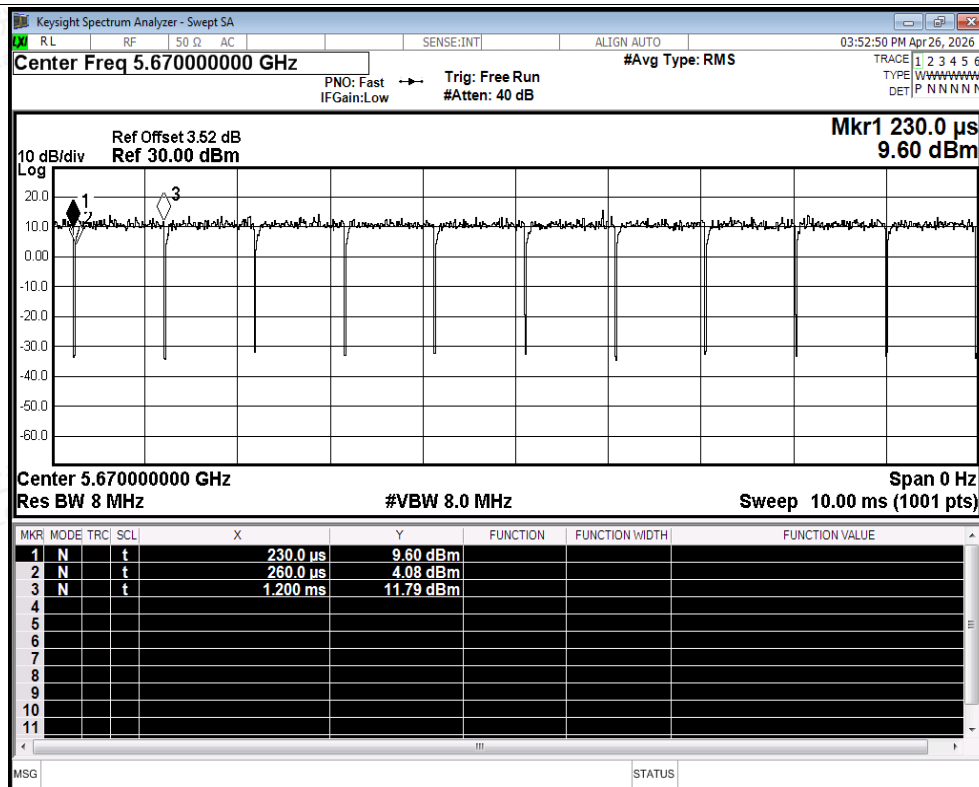


Duty Cycle NVNT n40 5670MHz Ant1

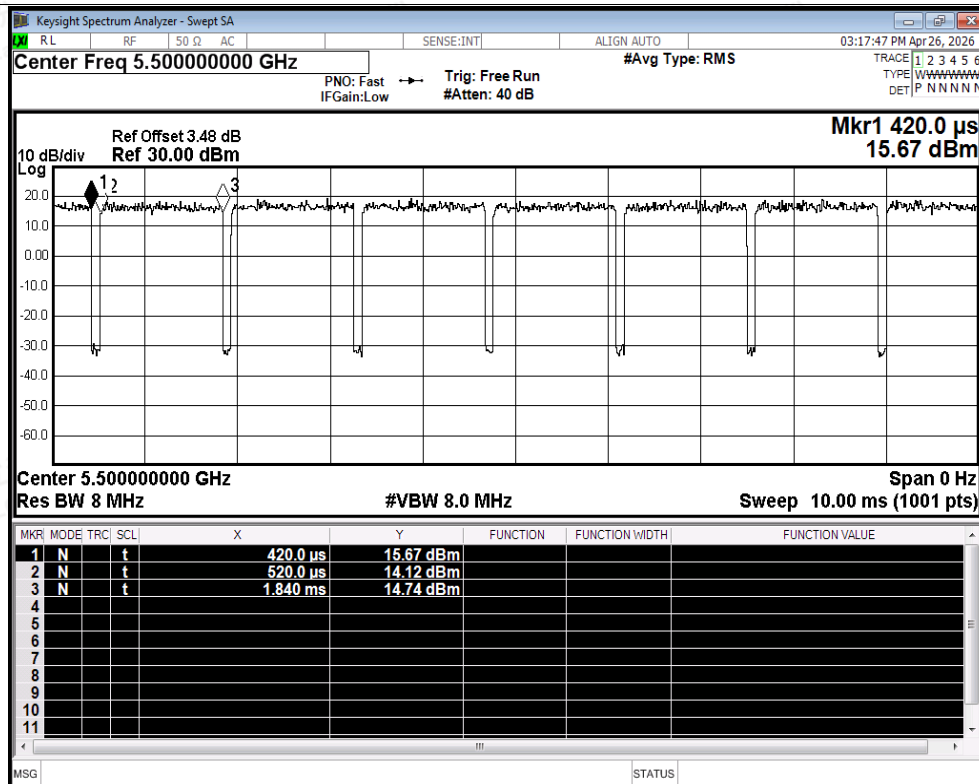


Duty Cycle NVNT ac20 5500MHz Ant1

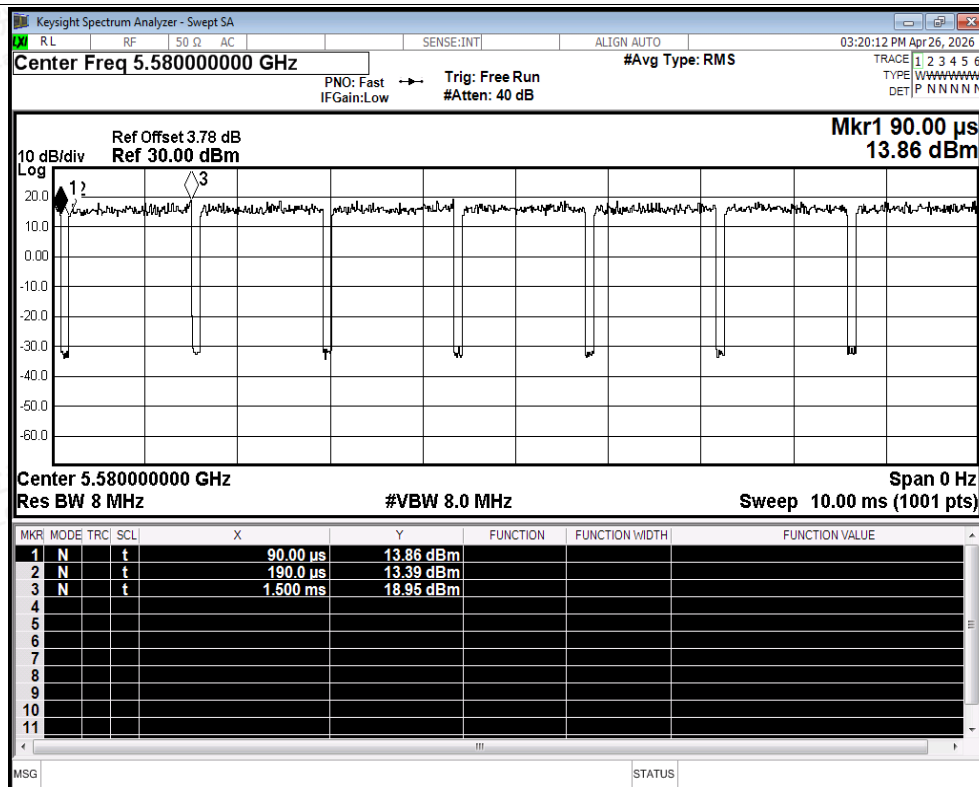


Duty Cycle NVNT ac20 5580MHz Ant1

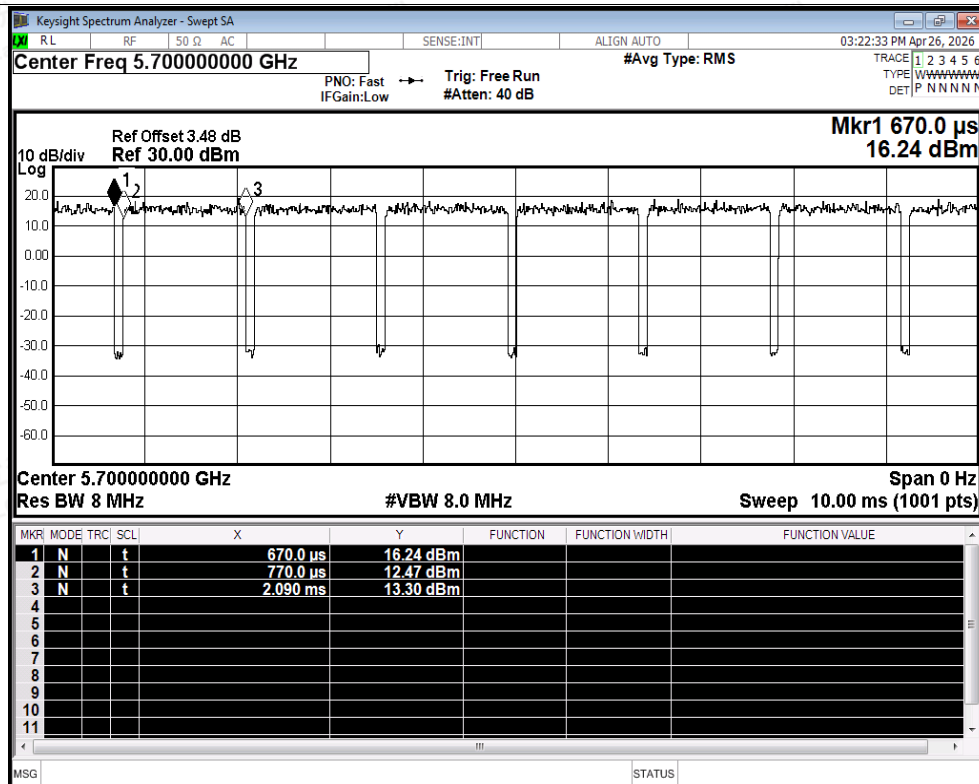


Duty Cycle NVNT ac20 5700MHz Ant1

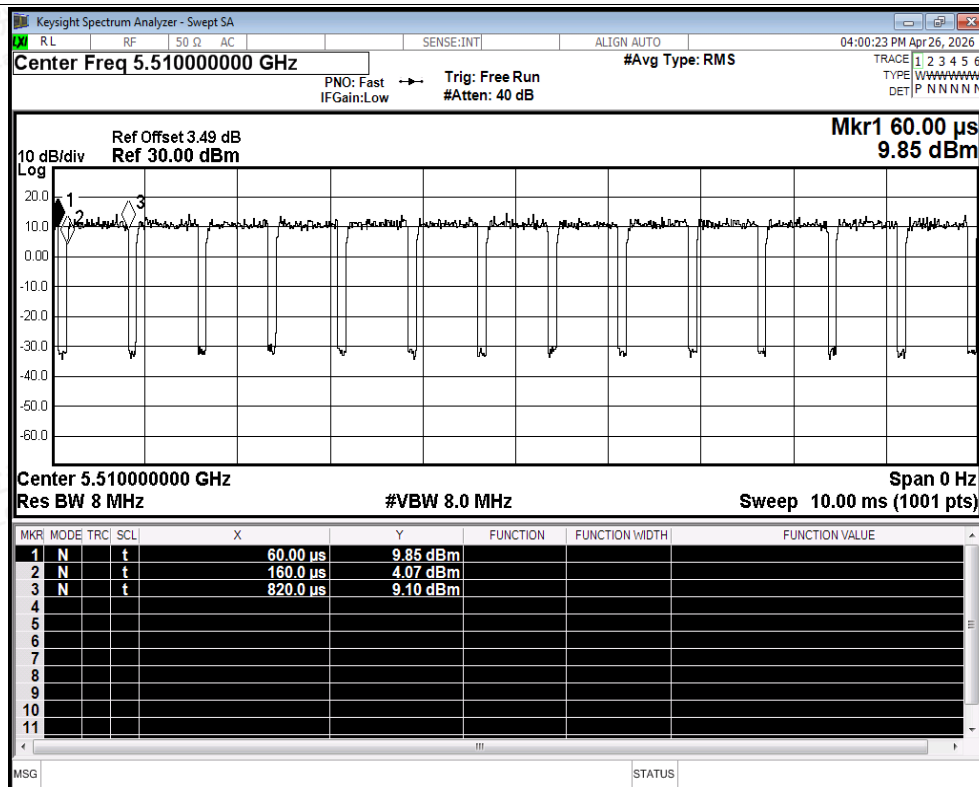


Duty Cycle NVNT ac40 5510MHz Ant1

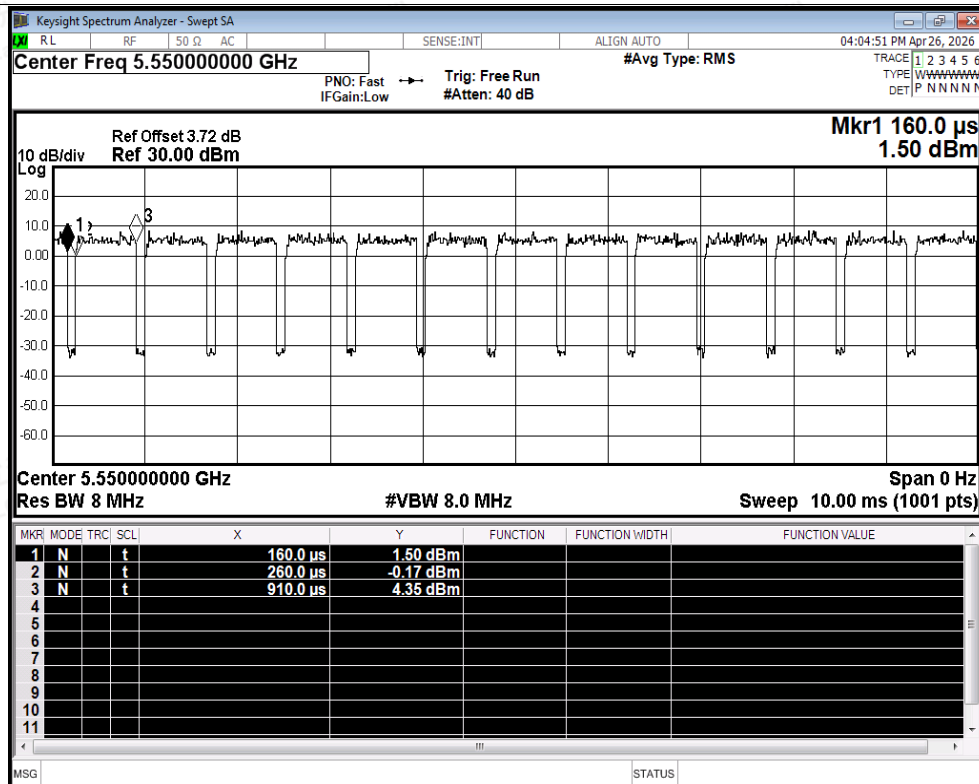


Duty Cycle NVNT ac40 5550MHz Ant1

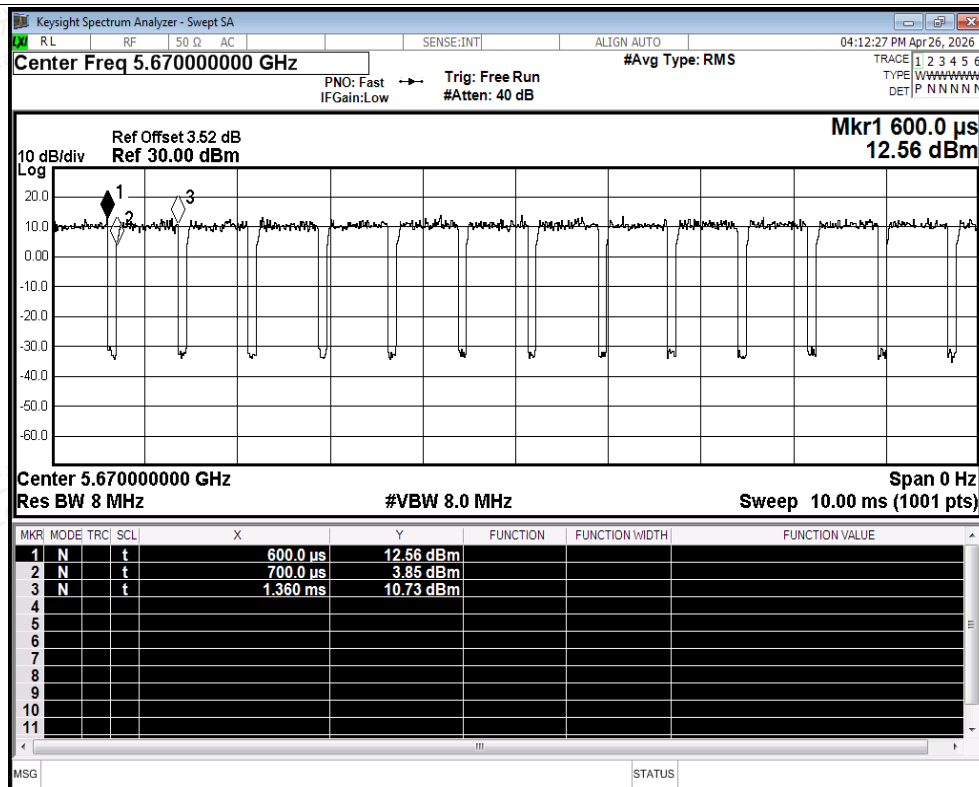


Duty Cycle NVNT ac40 5670MHz Ant1

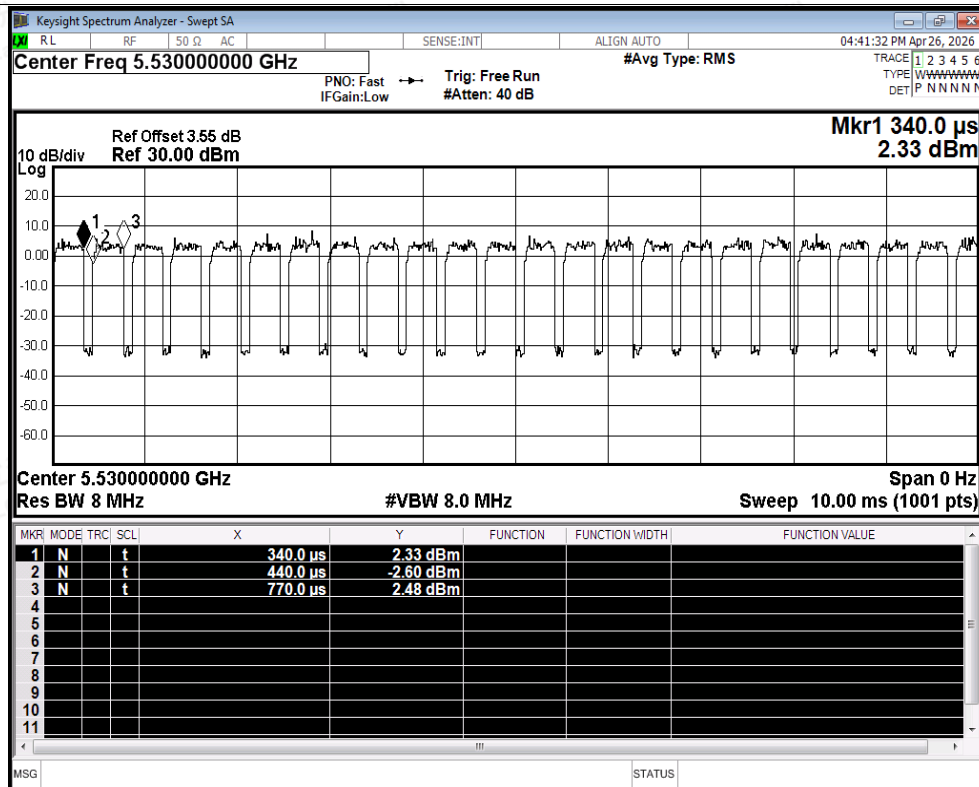


Duty Cycle NVNT ac80 5530MHz Ant1

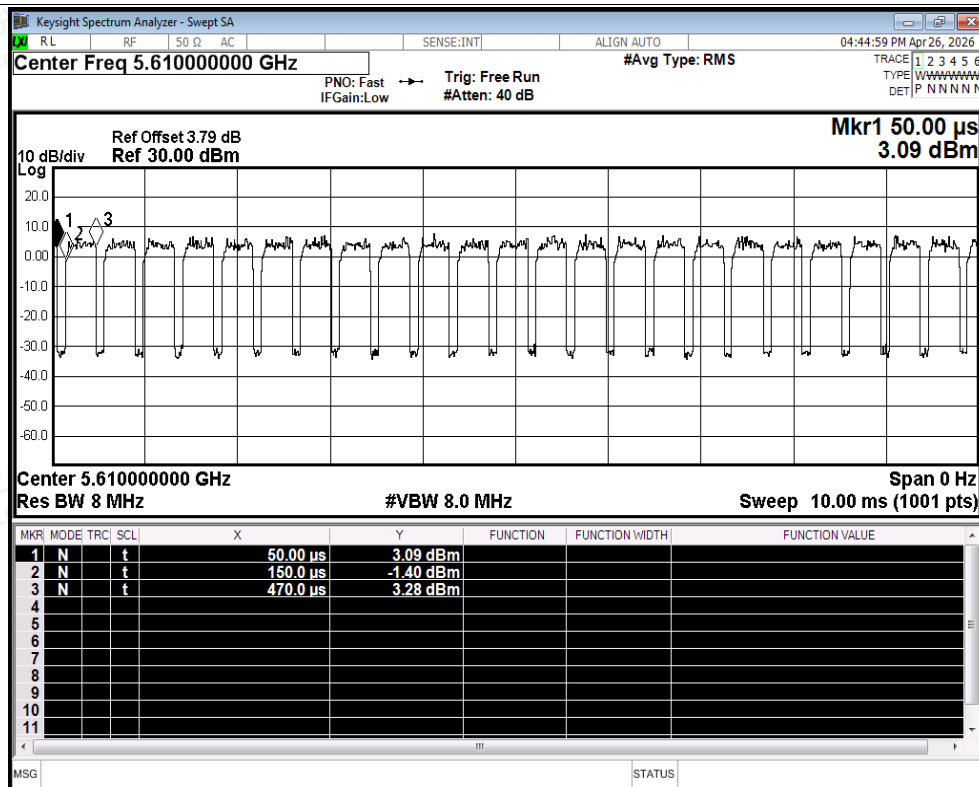


Duty Cycle NVNT ac80 5610MHz Ant1

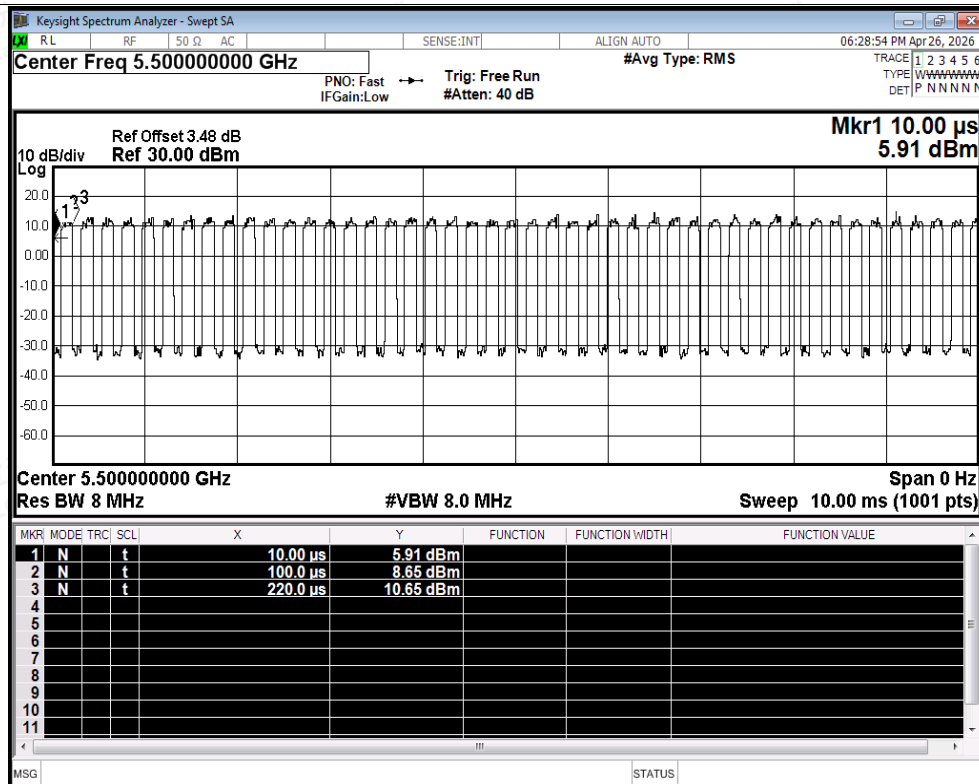


Duty Cycle NVNT ax20 5500MHz Ant1

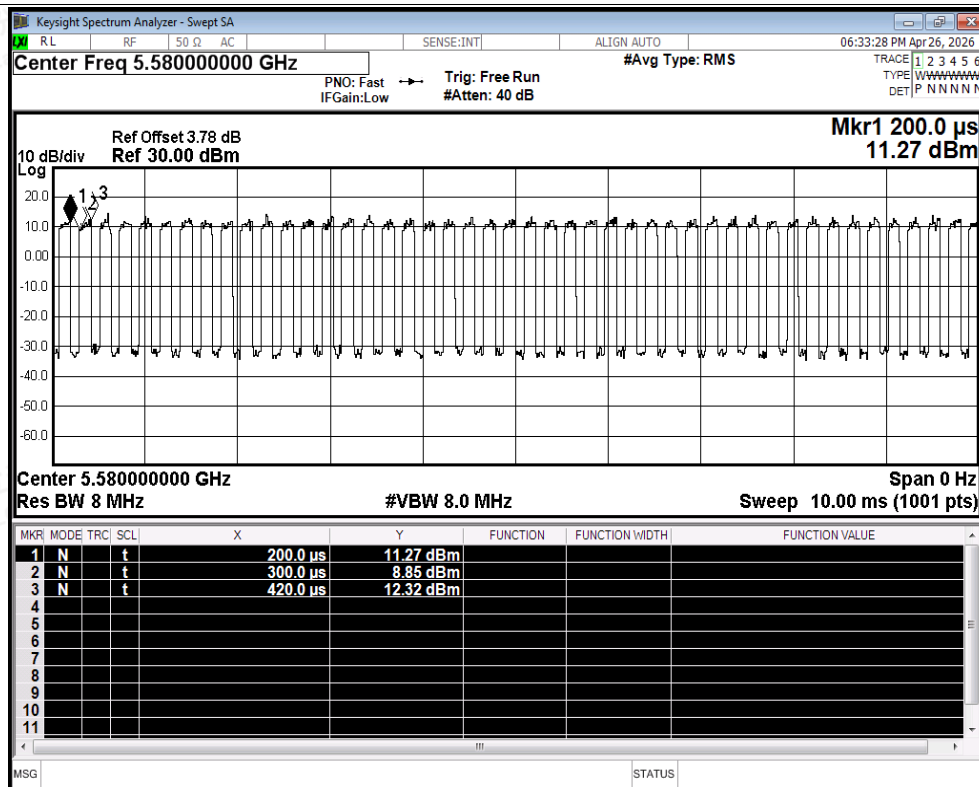


Duty Cycle NVNT ax20 5580MHz Ant1

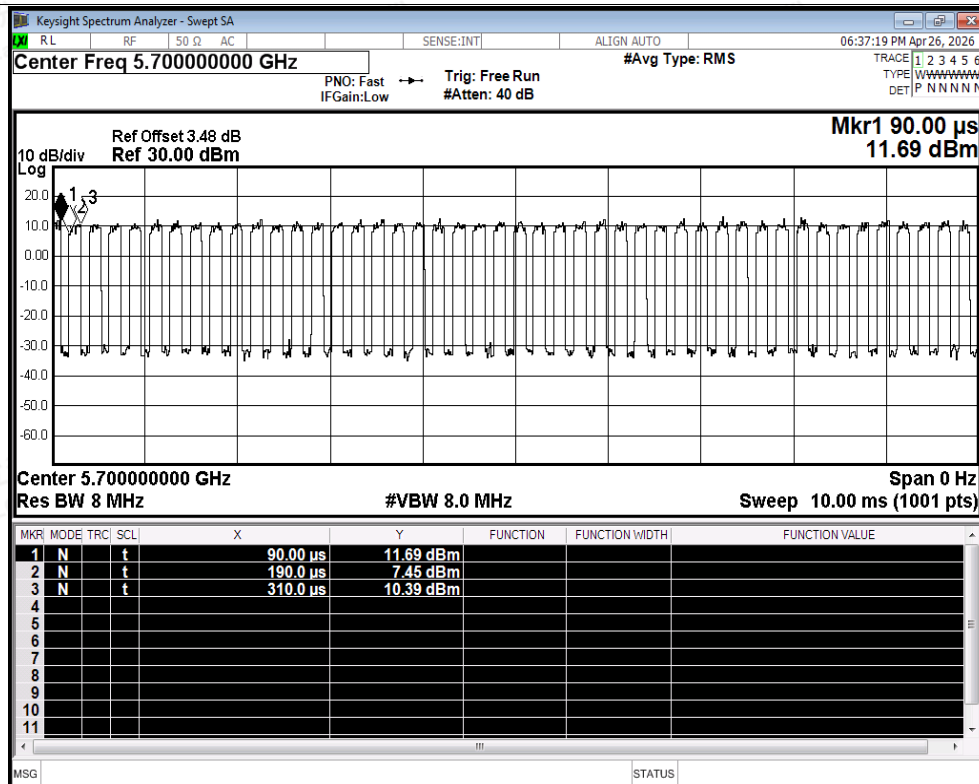


Duty Cycle NVNT ax20 5700MHz Ant1

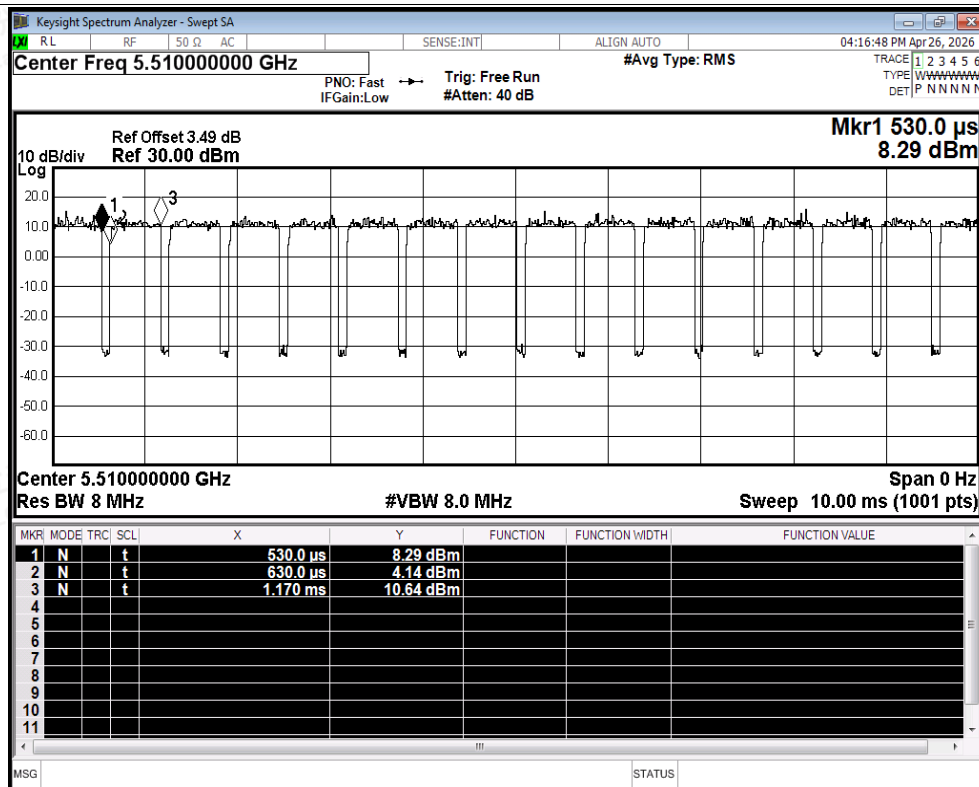


Duty Cycle NVNT ax40 5510MHz Ant1

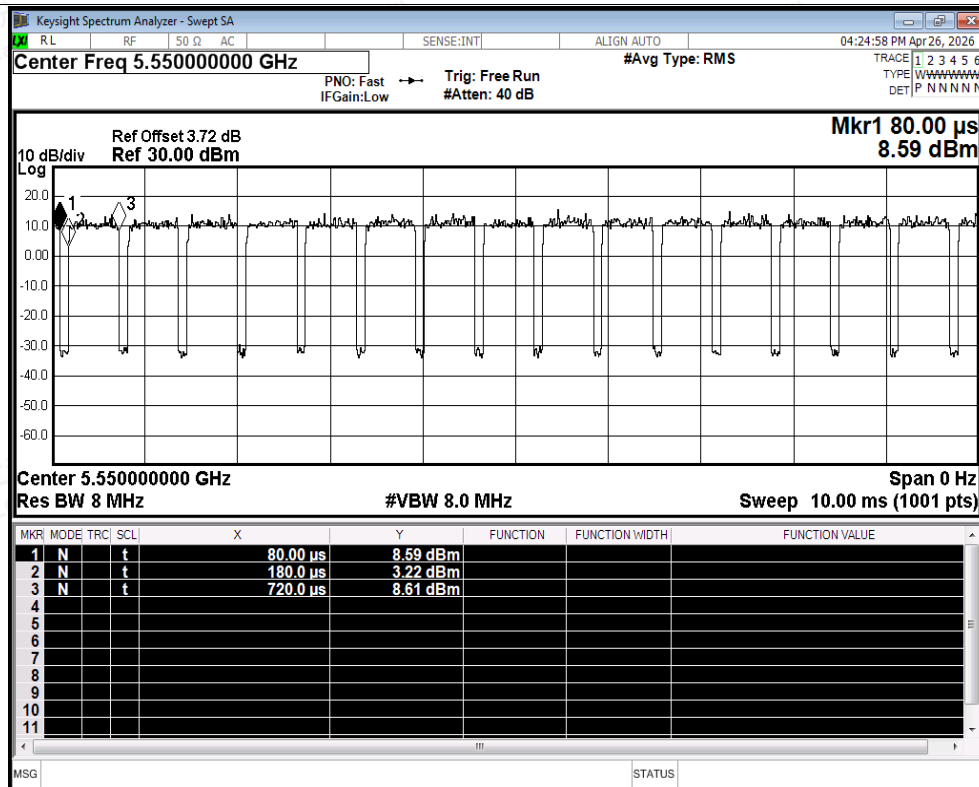


Duty Cycle NVNT ax40 5550MHz Ant1

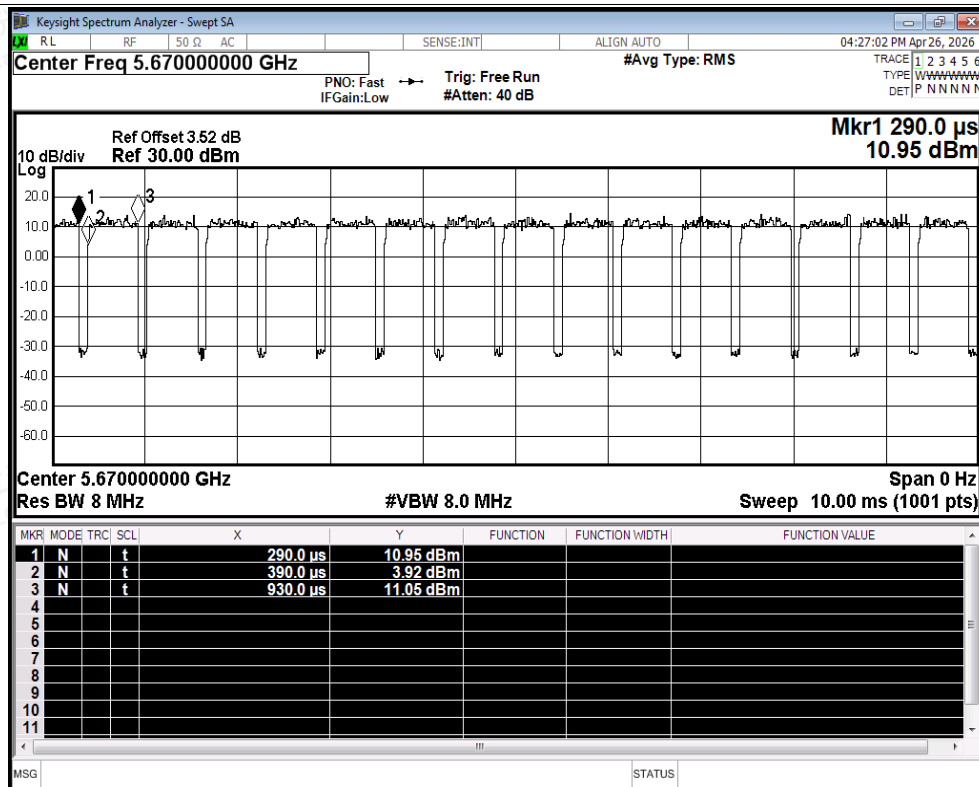

Duty Cycle NVNT ax40 5670MHz Ant1

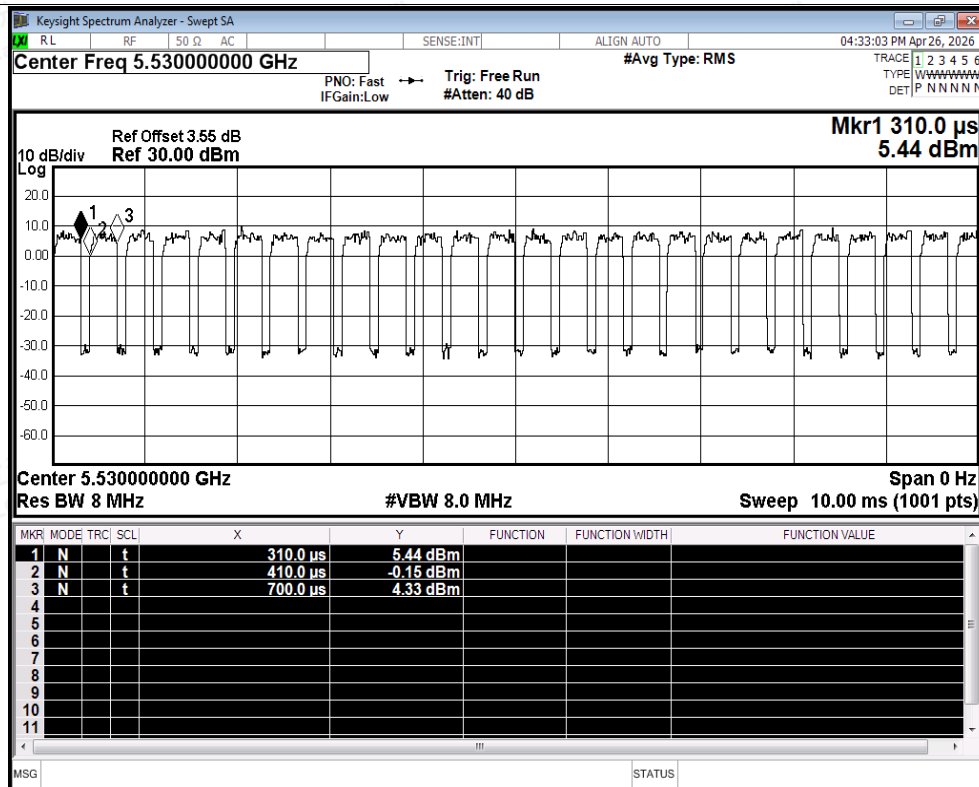


Duty Cycle NVNT ax80 5530MHz Ant1

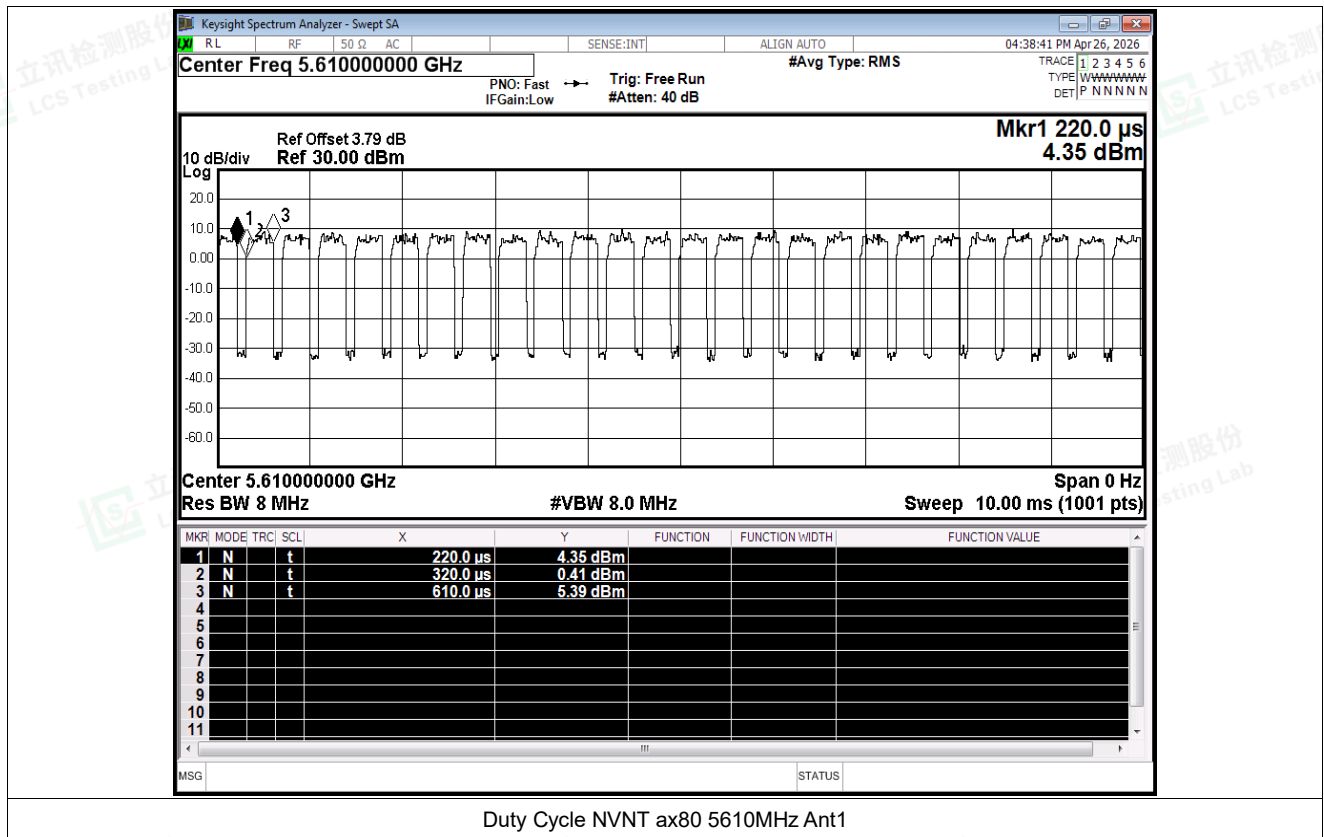





Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant2	93.33	0.3	0.71
NVNT	a	5580	Ant2	93.33	0.3	0.71
NVNT	a	5700	Ant2	93.33	0.3	0.71
NVNT	n20	5500	Ant2	98.46	0.07	0.52
NVNT	n20	5580	Ant2	98.46	0.07	0.52
NVNT	n20	5700	Ant2	98.46	0.07	0.52
NVNT	n40	5510	Ant2	96.94	0.14	1.05
NVNT	n40	5550	Ant2	96.91	0.14	1.06
NVNT	n40	5670	Ant2	96.91	0.14	1.06
NVNT	ac20	5500	Ant2	92.96	0.32	0.76
NVNT	ac20	5580	Ant2	92.91	0.32	0.76
NVNT	ac20	5700	Ant2	92.91	0.32	0.76
NVNT	ac40	5510	Ant2	86.84	0.61	1.52
NVNT	ac40	5550	Ant2	88	0.56	1.52
NVNT	ac40	5670	Ant2	86.84	0.61	1.52
NVNT	ac80	5530	Ant2	76.74	1.15	3.03
NVNT	ac80	5610	Ant2	76.19	1.18	3.13
NVNT	ax20	5500	Ant2	91.07	0.41	0.98
NVNT	ax20	5580	Ant2	91.07	0.41	0.98
NVNT	ax20	5700	Ant2	91.07	0.41	0.98
NVNT	ax40	5510	Ant2	84.37	0.74	1.85
NVNT	ax40	5550	Ant2	84.38	0.74	1.85
NVNT	ax40	5670	Ant2	84.38	0.74	1.85
NVNT	ax80	5530	Ant2	74.36	1.29	3.45
NVNT	ax80	5610	Ant2	74.36	1.29	3.45

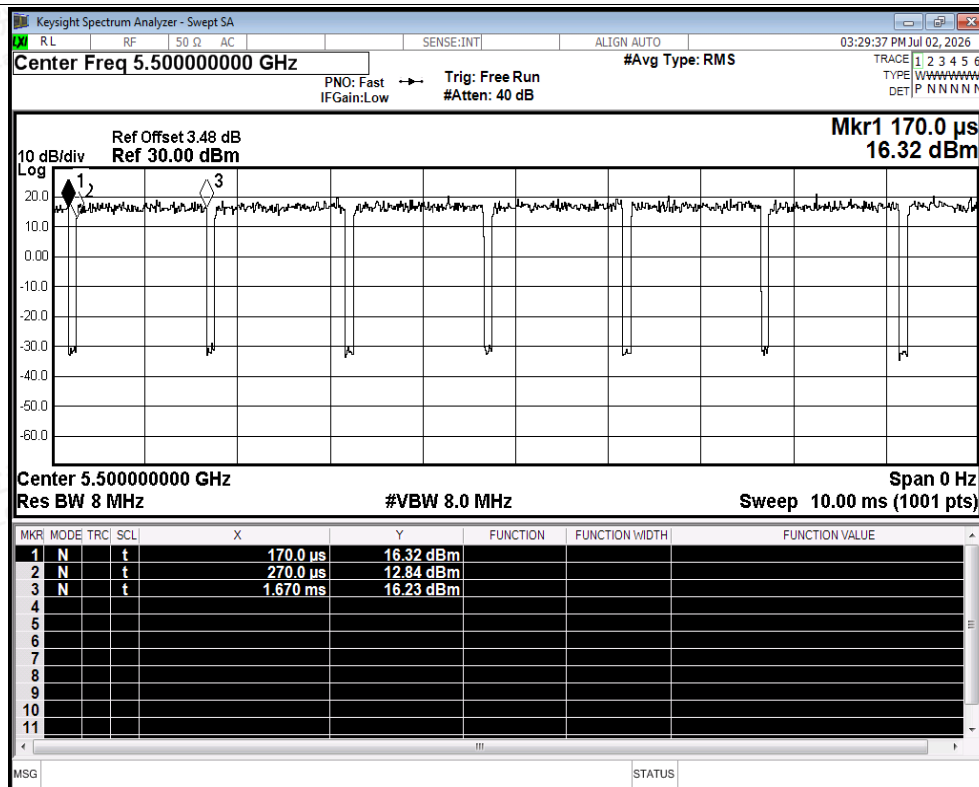


Duty Cycle NVNT a 5500MHz Ant2

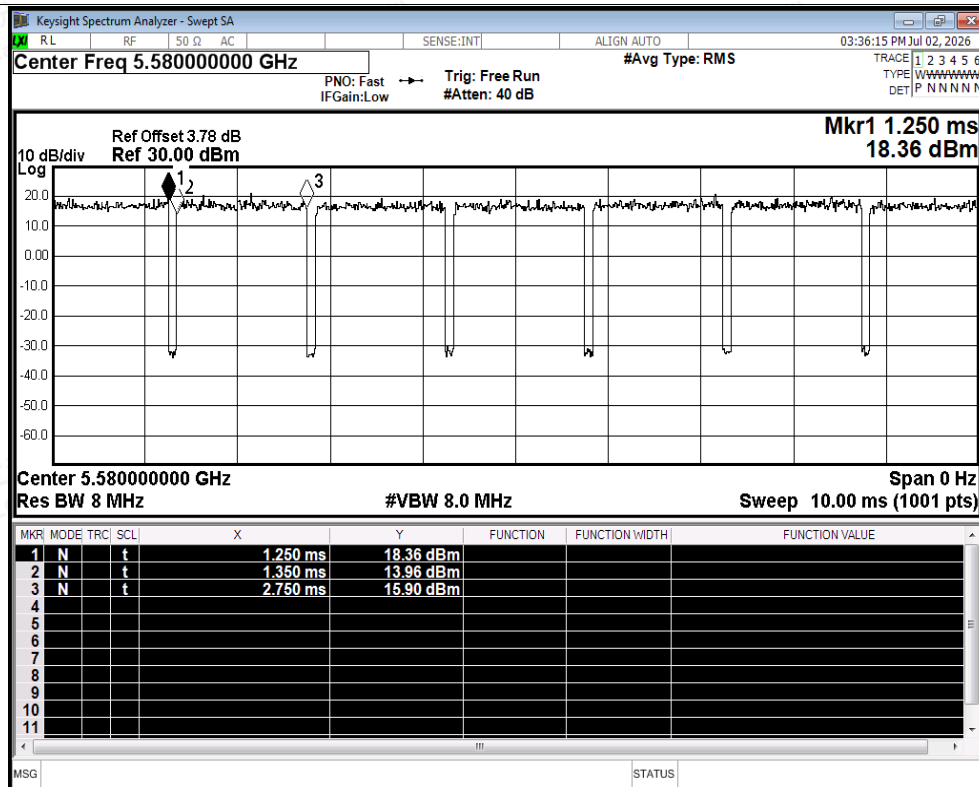


Duty Cycle NVNT a 5580MHz Ant2

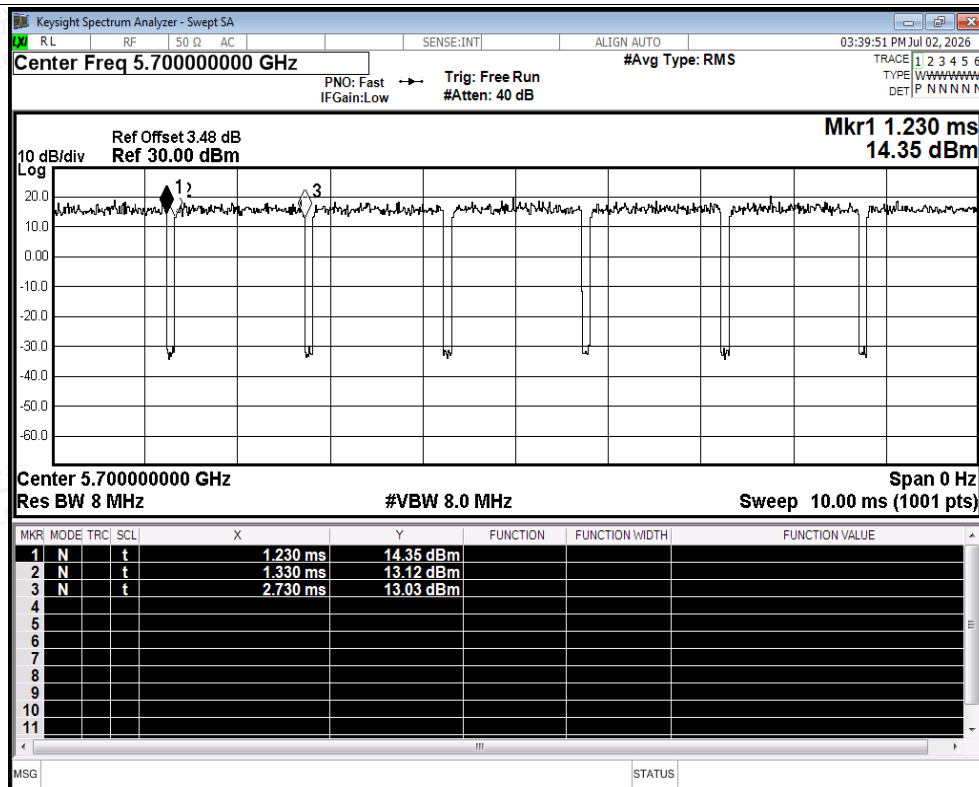


Duty Cycle NVNT a 5700MHz Ant2

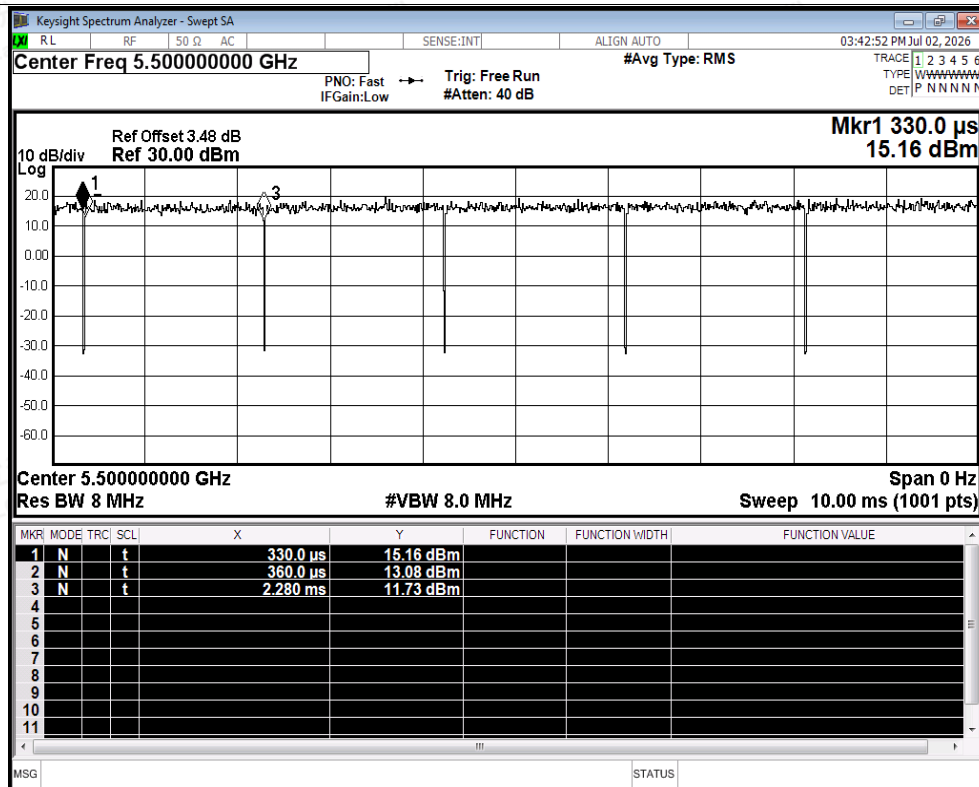


Duty Cycle NVNT n20 5500MHz Ant2

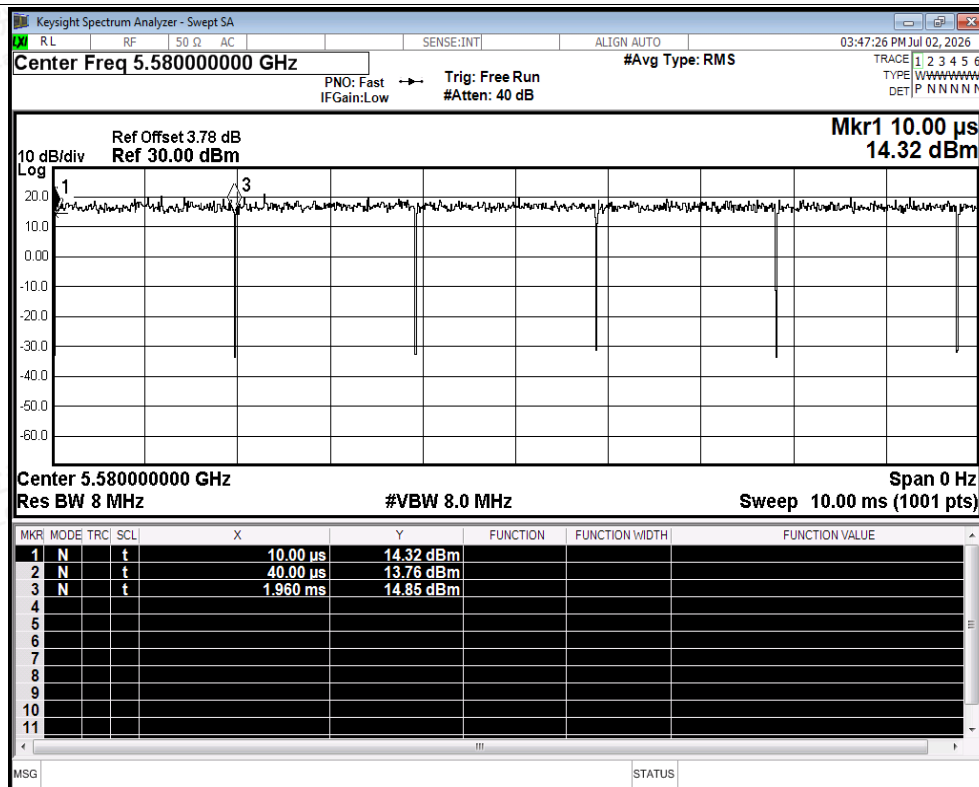


Duty Cycle NVNT n20 5580MHz Ant2

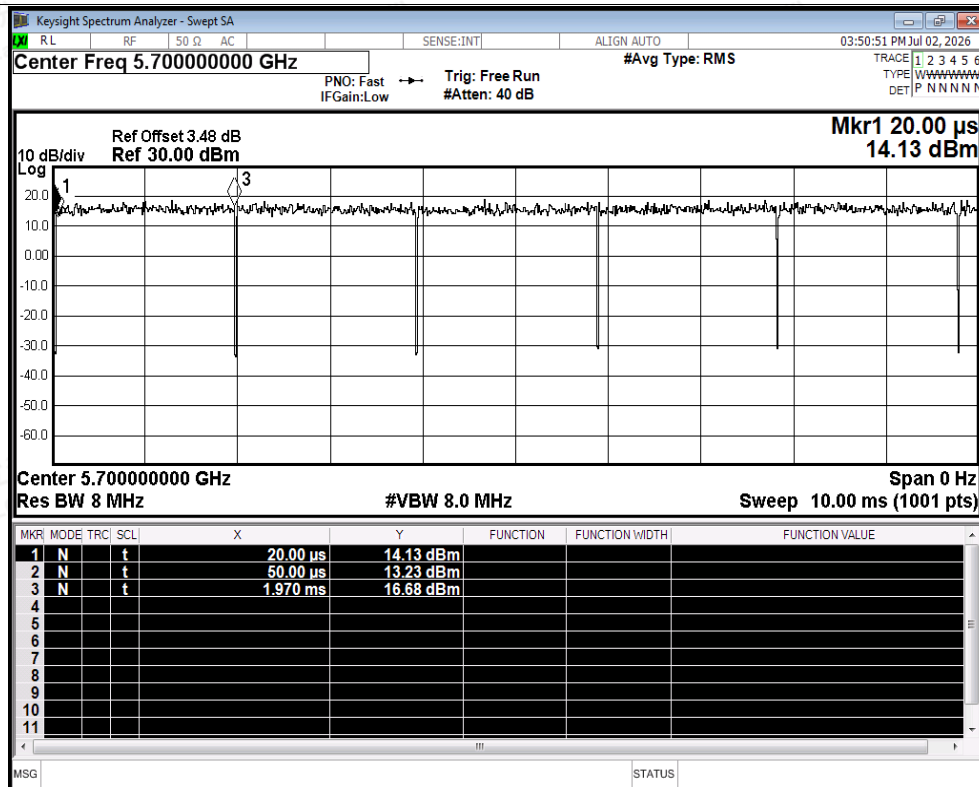


Duty Cycle NVNT n20 5700MHz Ant2

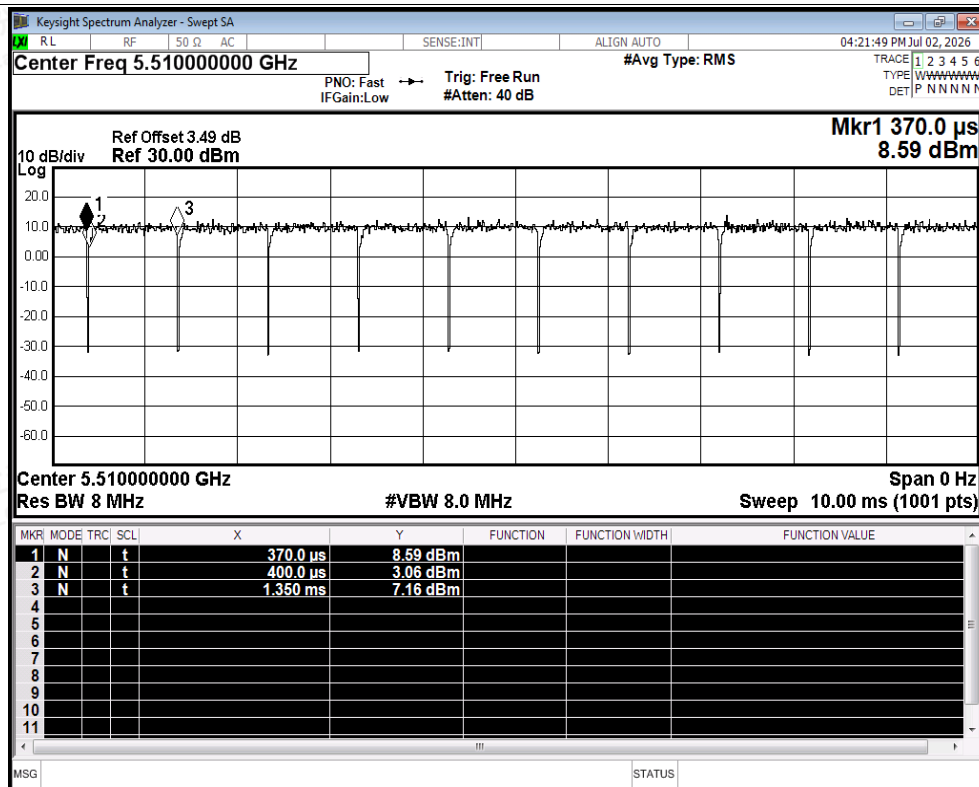


Duty Cycle NVNT n40 5510MHz Ant2

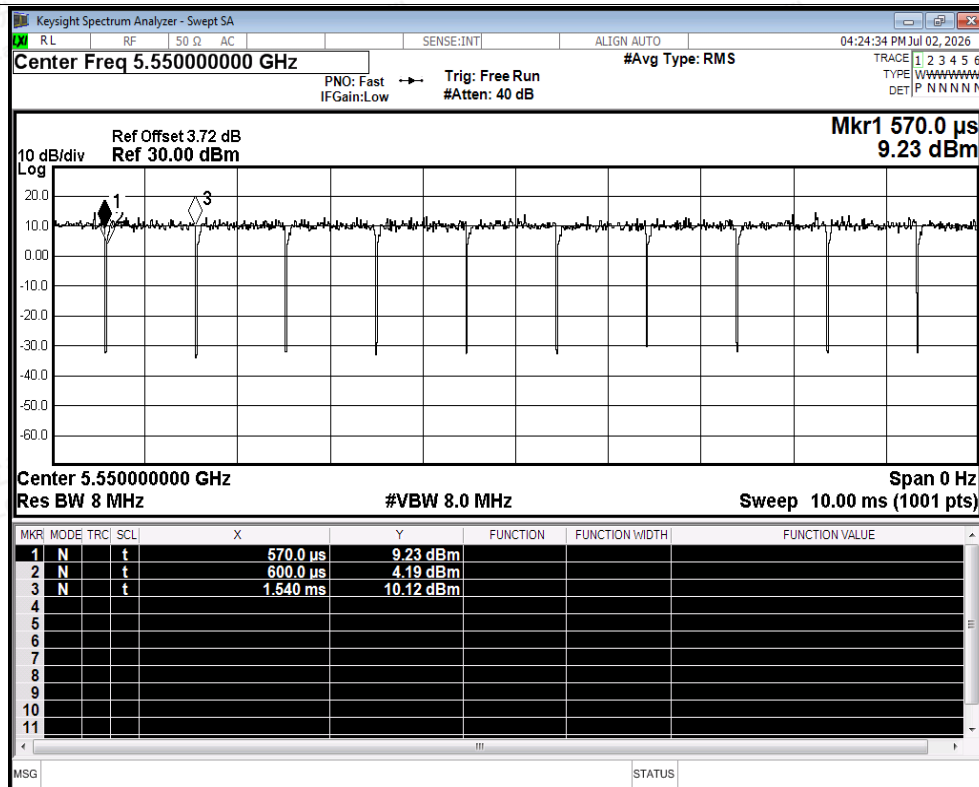


Duty Cycle NVNT n40 5550MHz Ant2

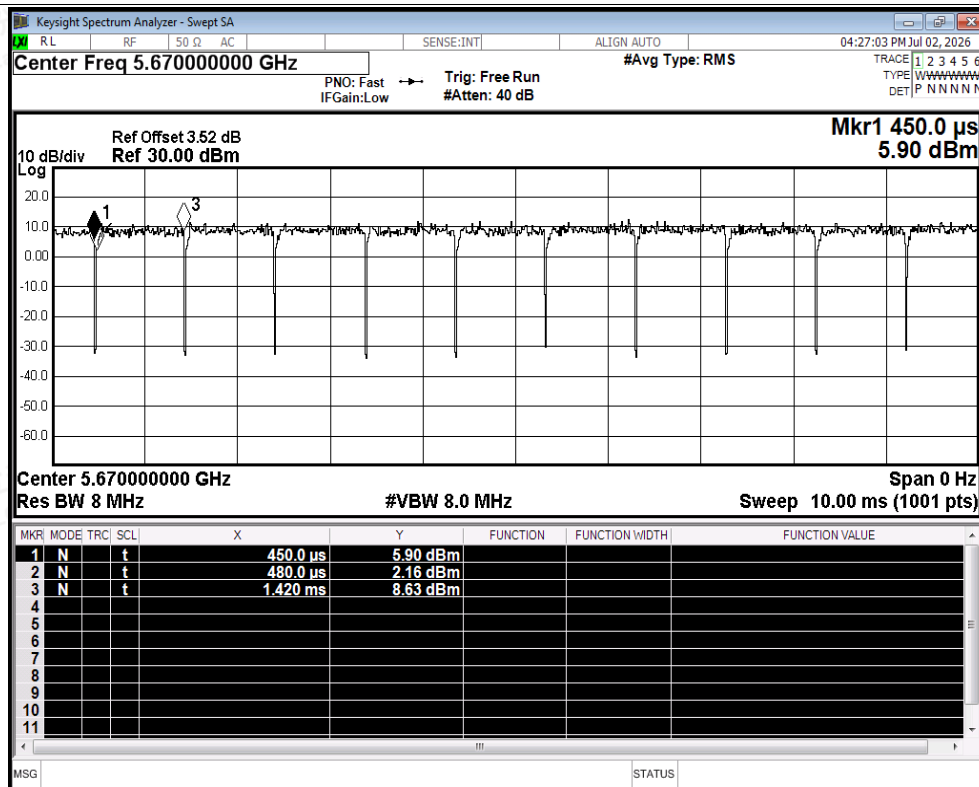


Duty Cycle NVNT n40 5670MHz Ant2

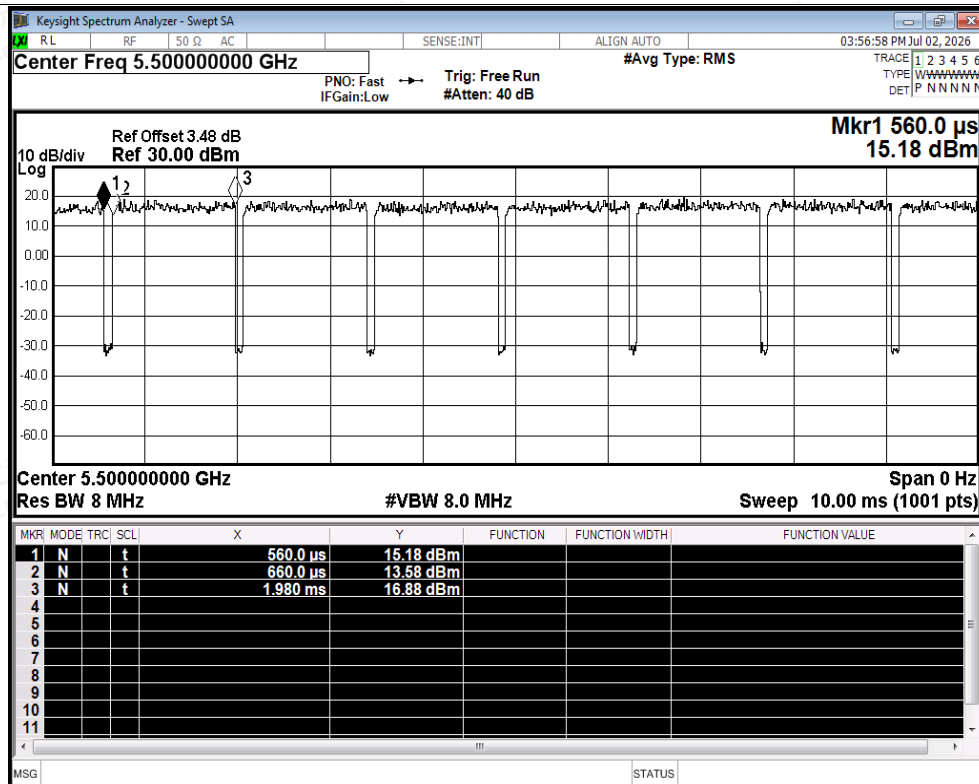


Duty Cycle NVNT ac20 5500MHz Ant2

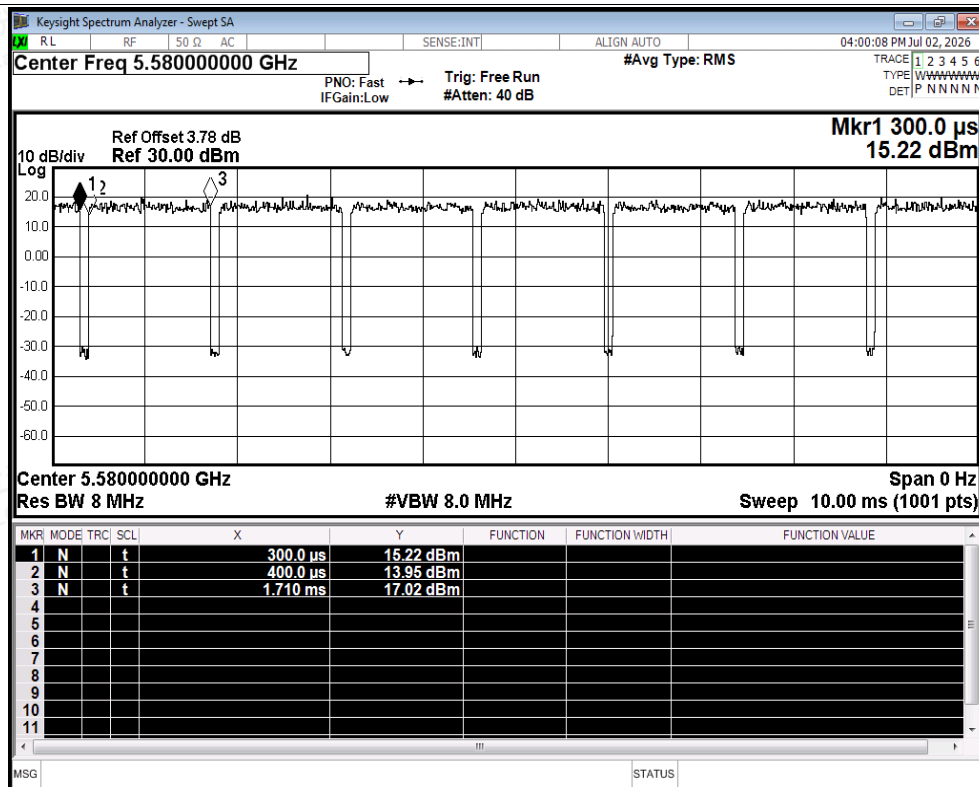


Duty Cycle NVNT ac20 5580MHz Ant2

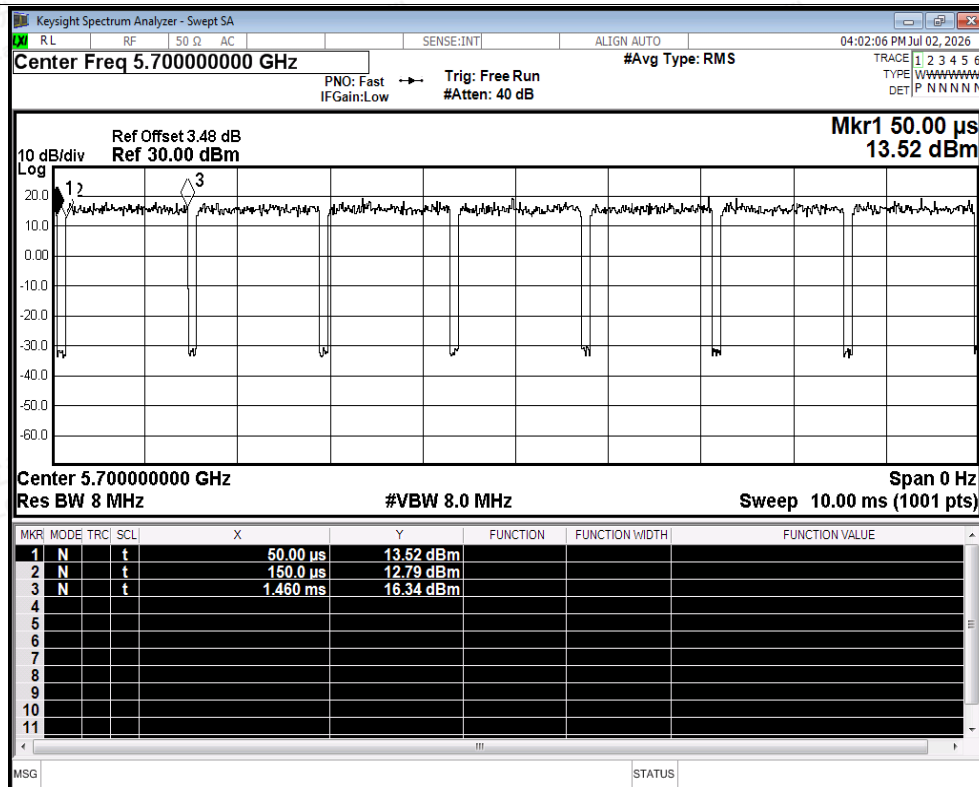


Duty Cycle NVNT ac20 5700MHz Ant2

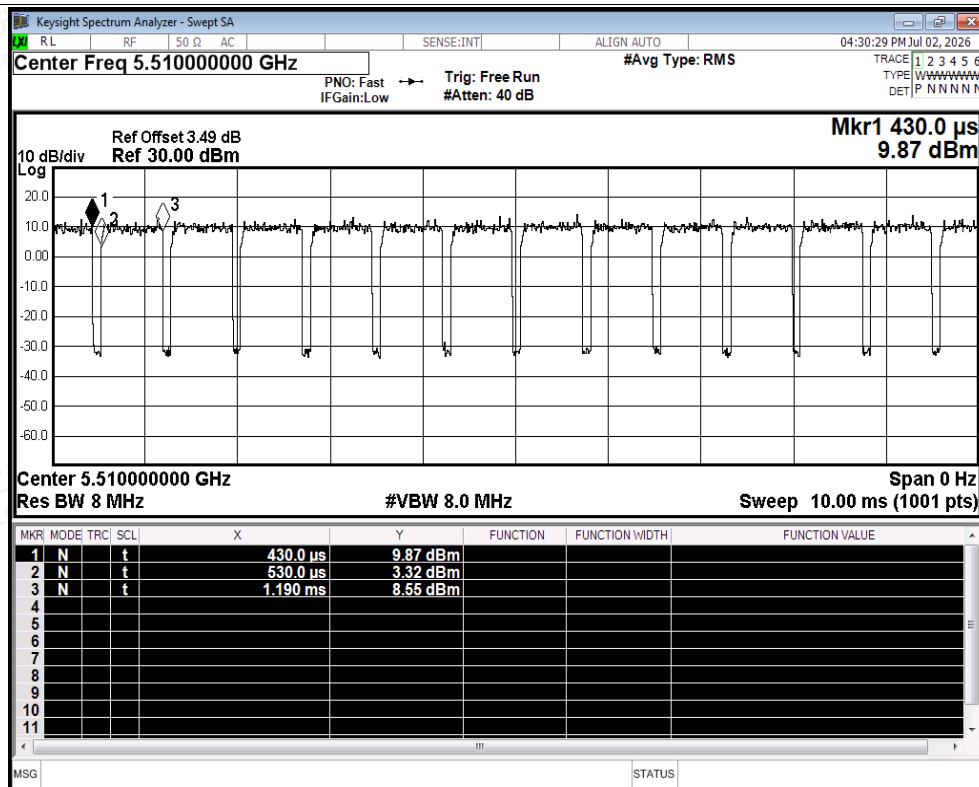


Duty Cycle NVNT ac40 5510MHz Ant2

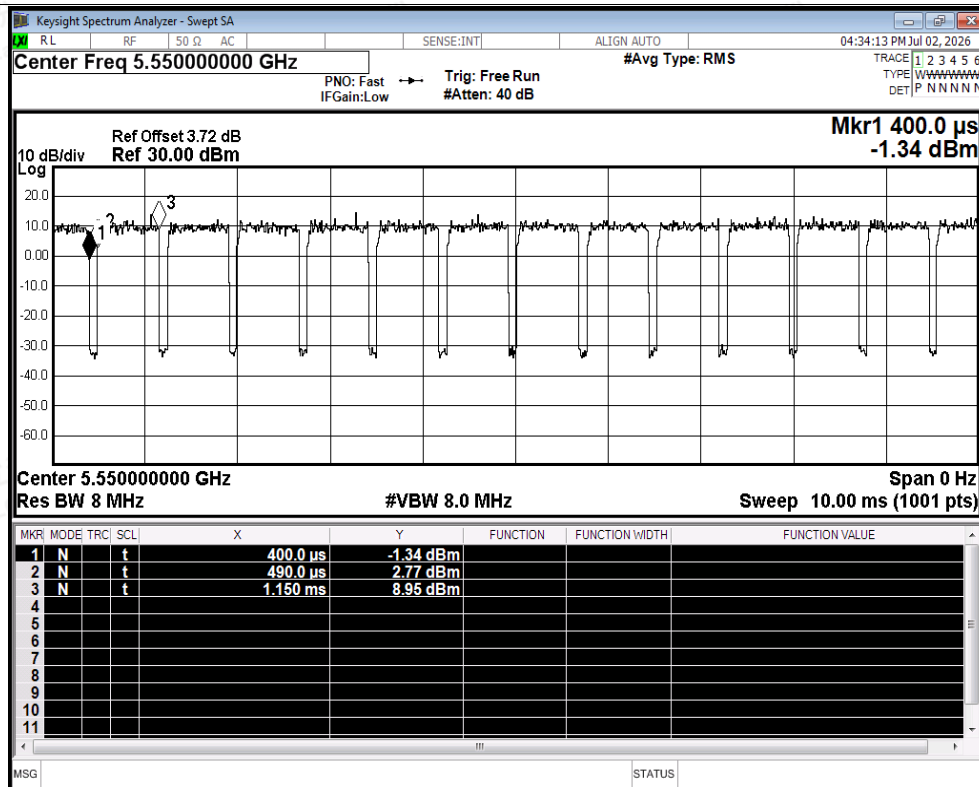


Duty Cycle NVNT ac40 5550MHz Ant2

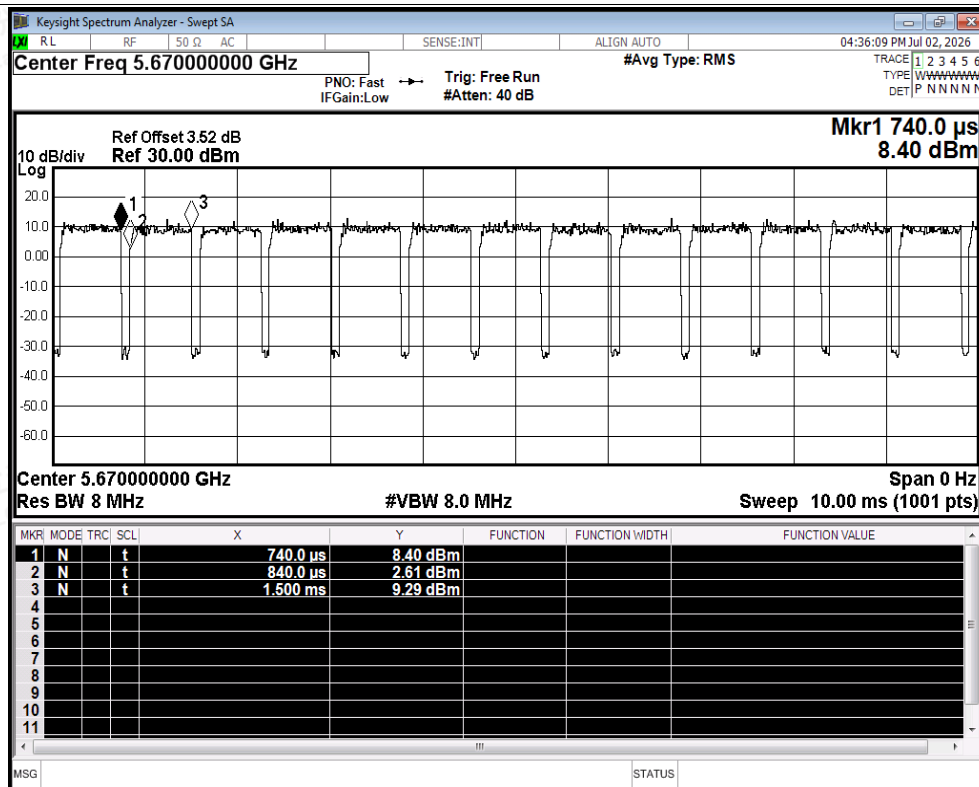


Duty Cycle NVNT ac40 5670MHz Ant2

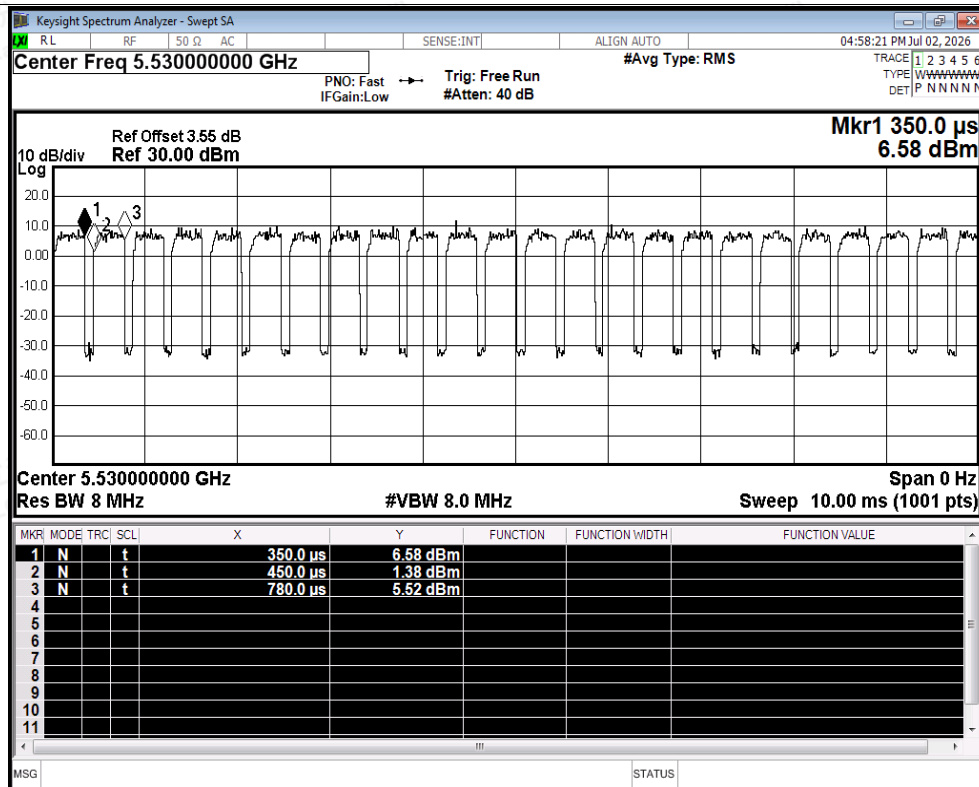


Duty Cycle NVNT ac80 5530MHz Ant2

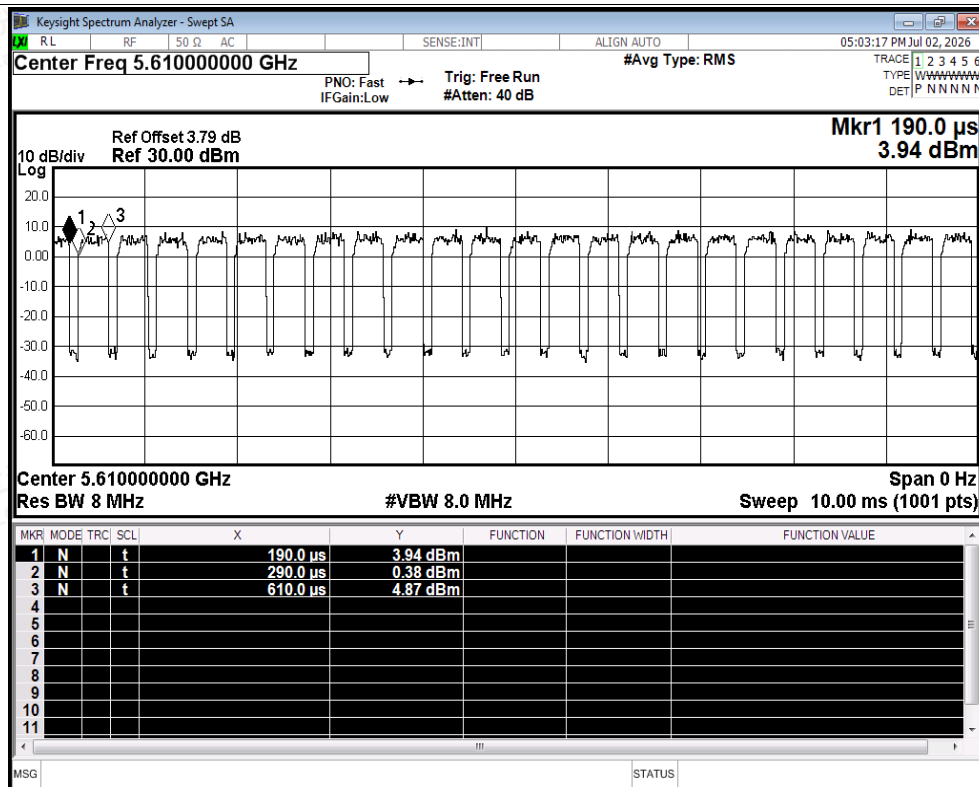


Duty Cycle NVNT ac80 5610MHz Ant2

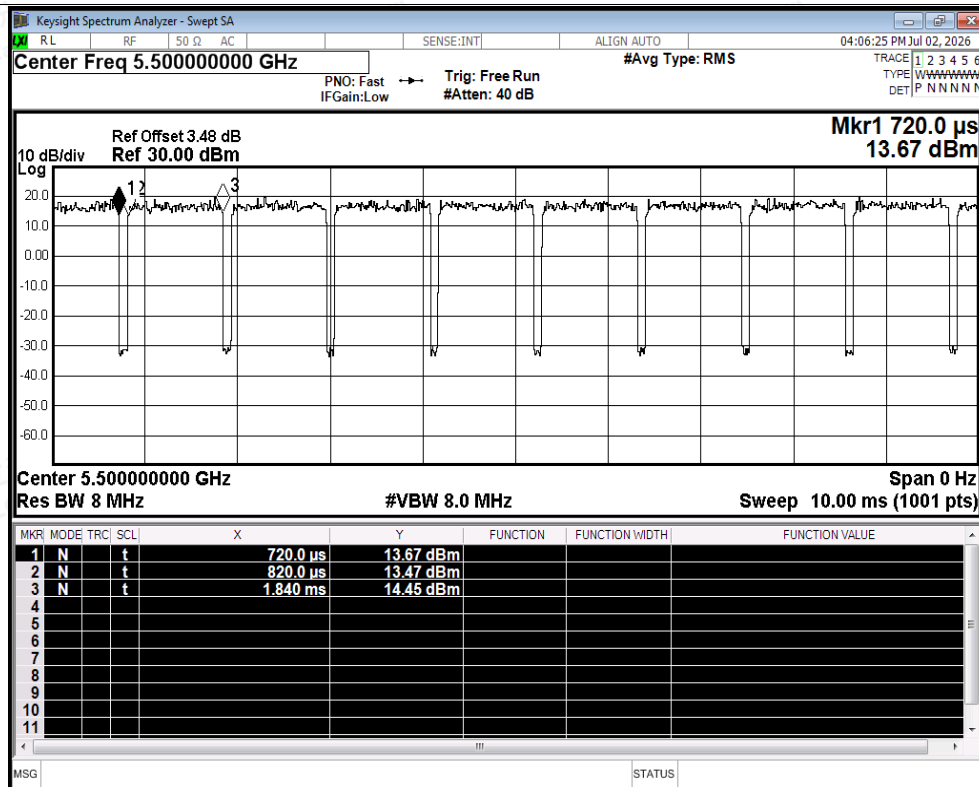


Duty Cycle NVNT ax20 5500MHz Ant2

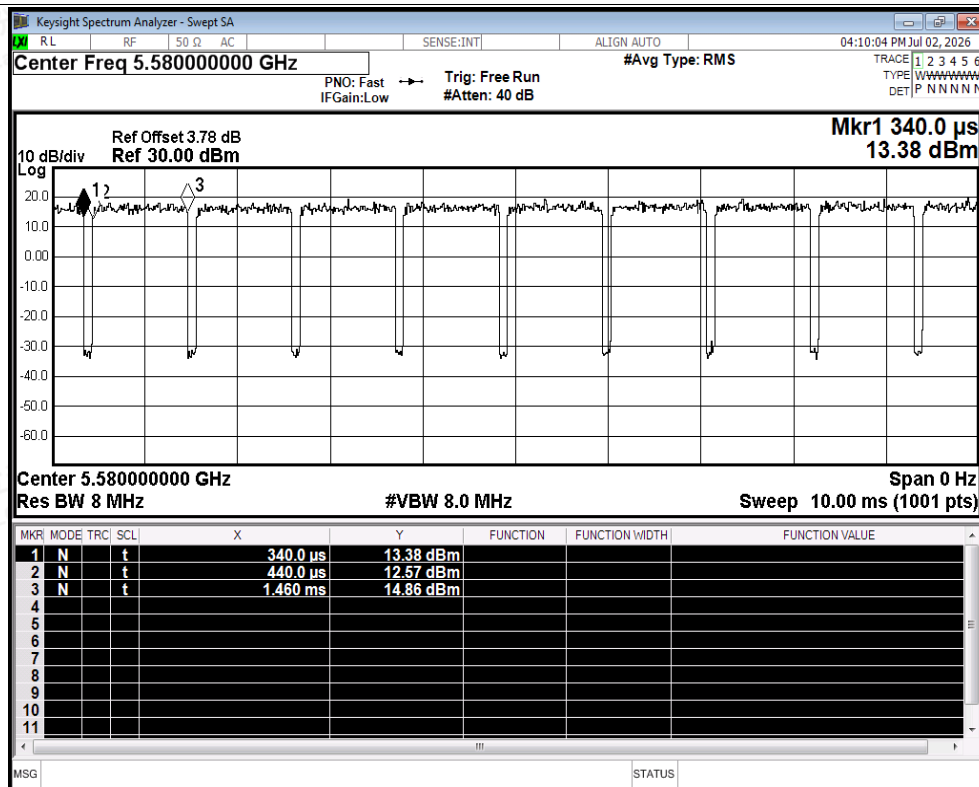


Duty Cycle NVNT ax20 5580MHz Ant2

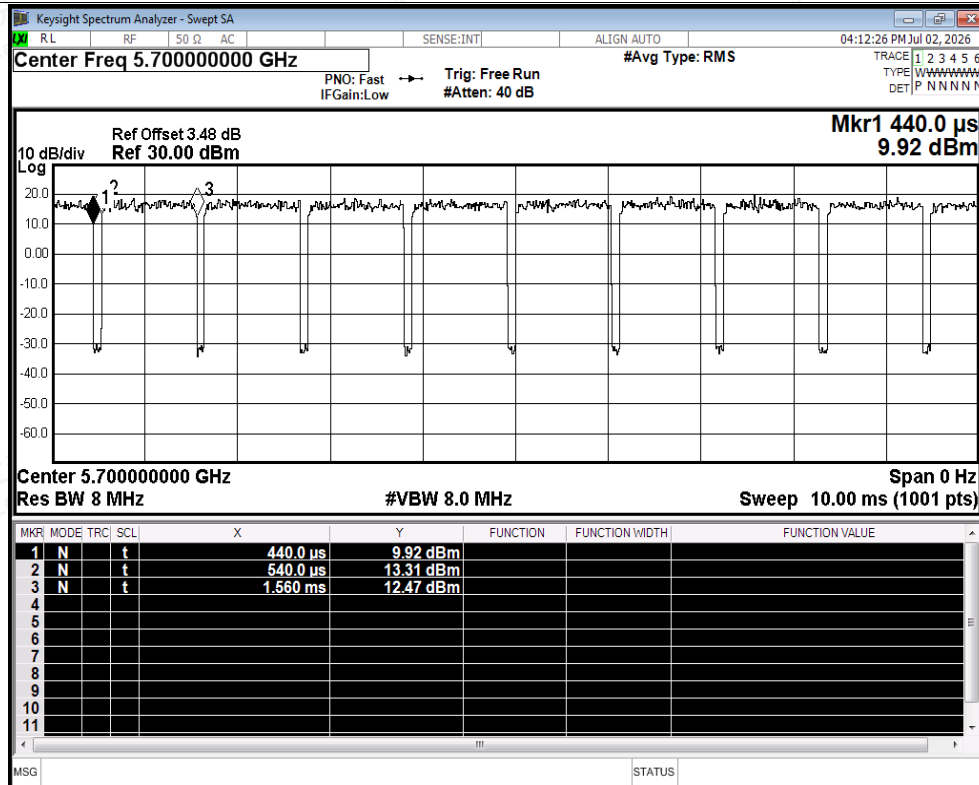


Duty Cycle NVNT ax20 5700MHz Ant2

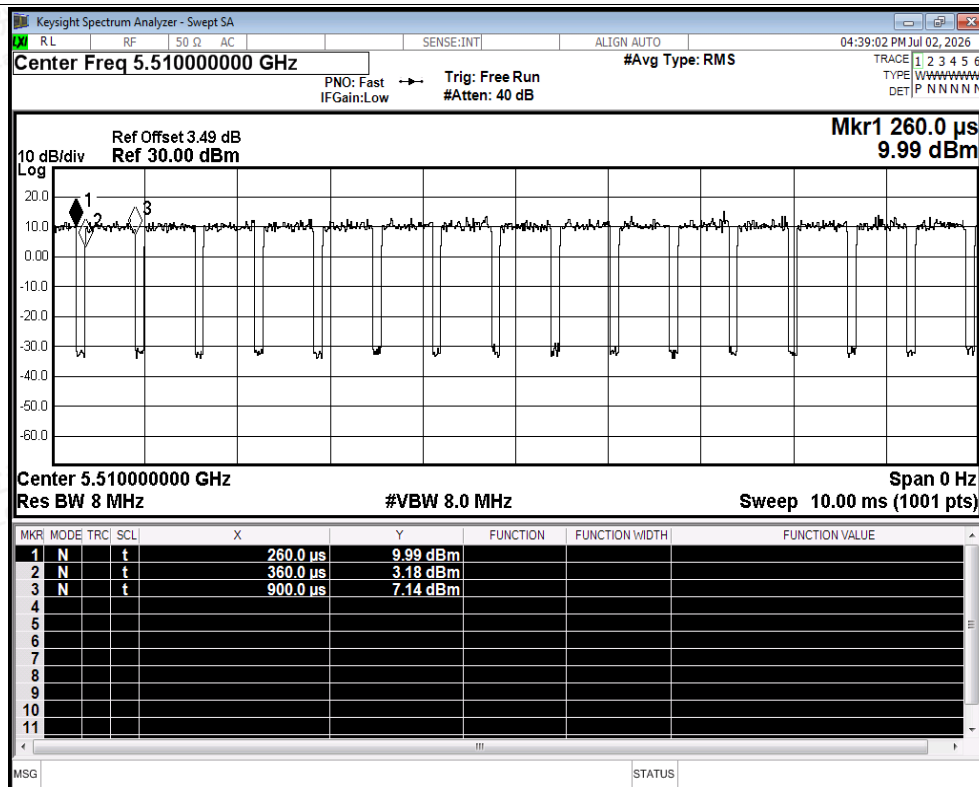


Duty Cycle NVNT ax40 5510MHz Ant2

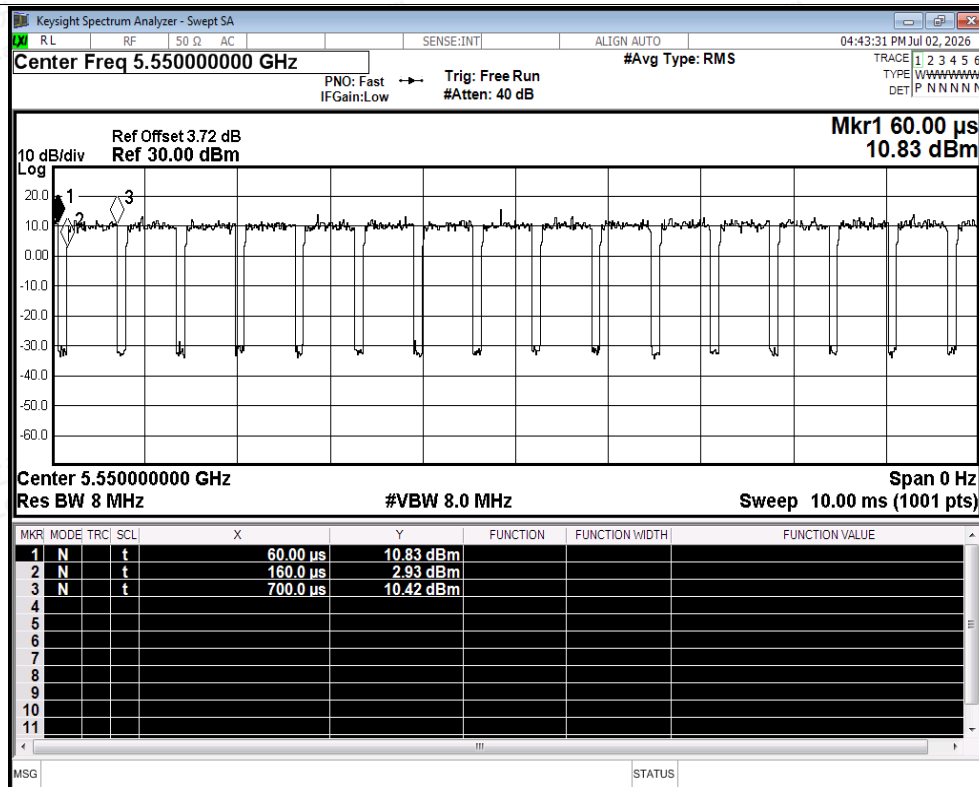

Duty Cycle NVNT ax40 5550MHz Ant2

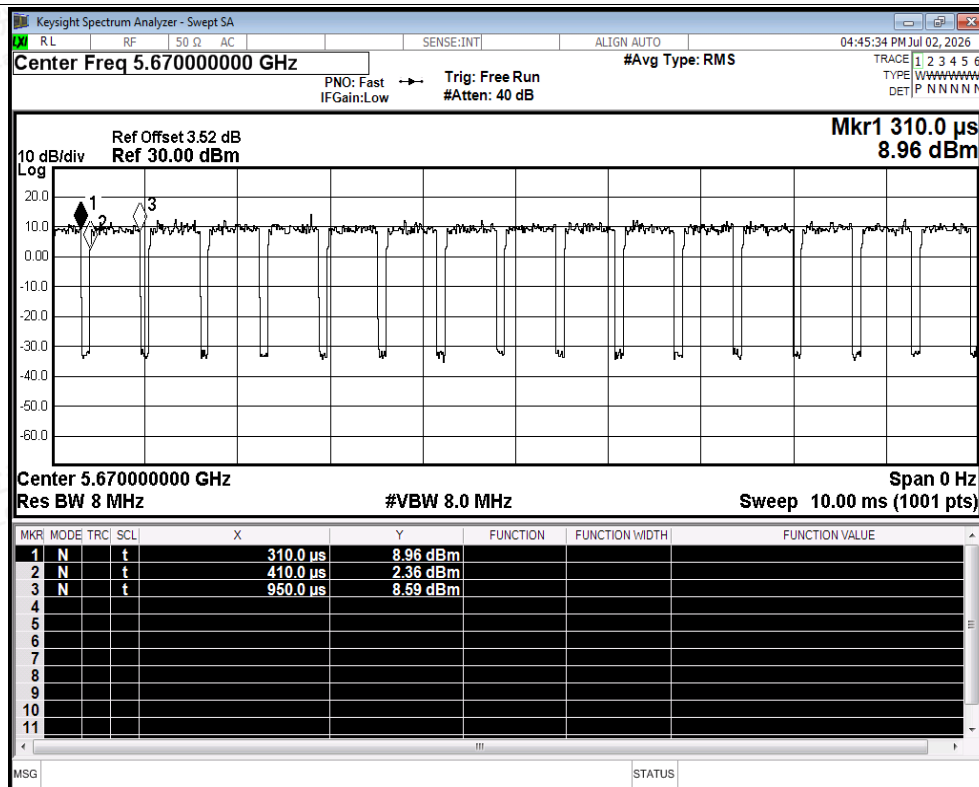

Duty Cycle NVNT ax40 5670MHz Ant2

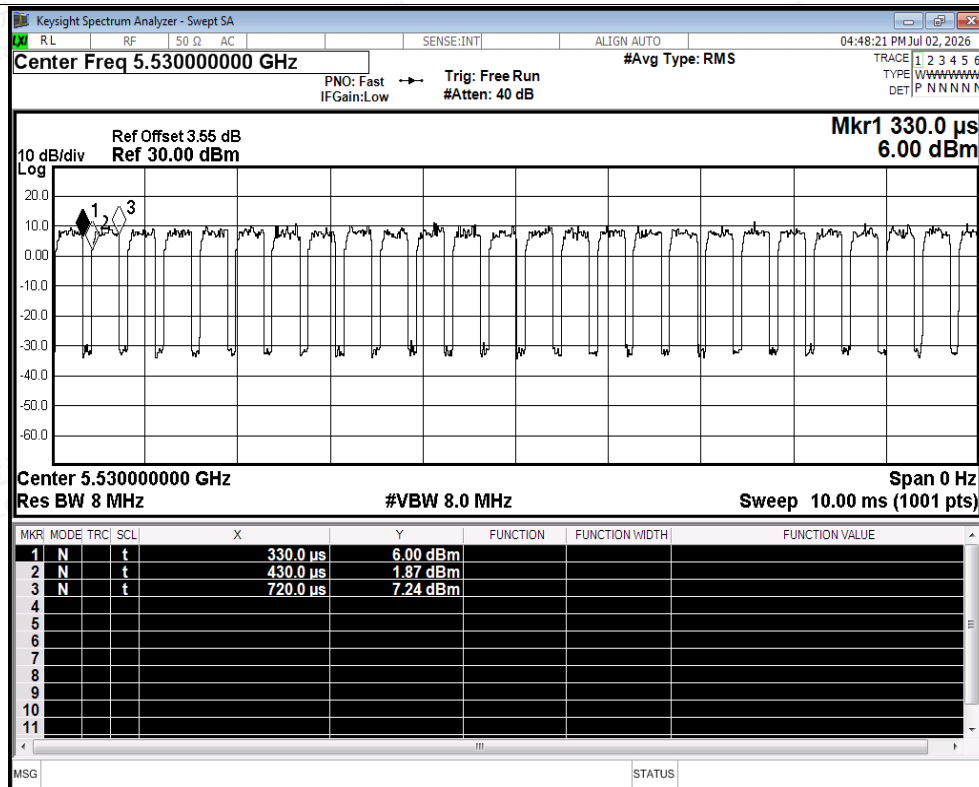

Duty Cycle NVNT ax80 5530MHz Ant2

