

Please read before using this equipment.

MultiBand AC/DC Portable Radio

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

397

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

811-296091-030
Printed in China

7A8N



RadioShack®

2/9

FEATURES

FCC ID: A244812-185

CONTENTS

Your RadioShack MultiBand AC/DC Portable Radio is designed to provide high-quality sound while you listen to up to 10 different radio bands. The portable design lets you use it almost anywhere. Its features include:

Multiple Power Options — let you power the radio with standard AC power using the supplied cord, batteries (not supplied), or your car's cigarette-lighter socket (using an optional DC adapter).

MIC Jack — lets you connect a microphone with a 1/8-inch plug (not supplied) to the radio and hear sound from the microphone through the radio's speaker (like a public address system).

AFC (Automatic Frequency Control) — provides drift-free FM reception and reduced sound distortion.

Carry Strap — easily attaches to the radio so you can carry it with you almost anywhere.

Direction Finder — directional antenna lets you fine-tune the radio to improve AM reception.

Caution: The directional antenna (**DIRECTION FINDER**) on top of the radio is not a handle. To avoid damaging the antenna, do not lift or carry the radio using the antenna. (Use the provided carry strap instead.)

We recommend you record your radio's serial number here. The number is inside the radio's battery compartment.

Serial Number _____

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.



CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

 This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.

 This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

Preparation	
Connecting Power	
Using AC Power	
Using Batteries	
Using Vehicle Battery Power	
Connecting the Wire Antenna	
Attaching the Carry Strap	

Operation	
Understanding the Bands	
AM BROADCAST	
CITIZEN BAND	
SHORT WAVE 1/2	
FM BROADCAST	
TV SOUND 1	
TV SOUND 2	
VHF MARINE	
AIR CRAFT	
WEATHER BAND	
Basic Radio Operation	
Reading the TUNING/BATTERY Meter	
Using the P.A. (Public Address) Function	
Using the Earphone	
Listening Safely	
Traffic Safety	

Care and Maintenance	
The FCC Wants You to Know	
Specifications	

PREPARATION

FCC ID: A2-H4-L912-7 RF

CONNECTING POWER

You can power the radio with standard AC power using the supplied power cord, with batteries (not supplied), or from your vehicle's cigarette-lighter socket (using an optional DC adapter).


Caution: Connecting the radio to AC or vehicle battery power disconnects any internal batteries. However, batteries can leak chemicals that can corrode and damage the radio. Always remove the batteries if you:

- will not be using the radio for a week or more
- plan to use only AC or vehicle battery power for a week or more


Using AC Power

You can power the radio from a standard AC outlet using the power cord stored inside the radio's battery compartment. Follow these steps to connect the radio to AC power.


1. Be sure **POWER** is set to **OFF**, then set **AC/DC** on the back of the radio to **AC**.

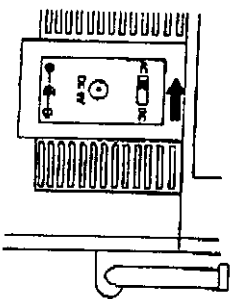

2. Open the battery compartment cover, pull out the power cord, then replace the cover while routing the cord through the slot on the side of the cover.

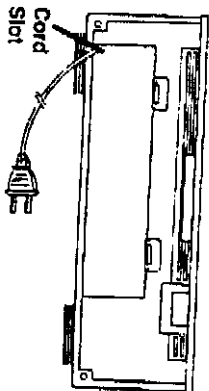

3. Plug the cord into a standard AC outlet.

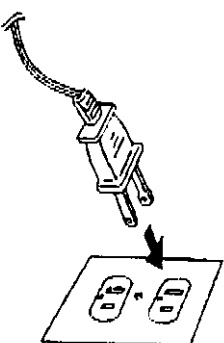

Caution: Your radio's power cord has a polarized plug (one blade is wider than the other). If you have difficulty inserting the plug into the outlet, do not force it! Turn the plug over and try again.

Using Batteries


You can power the radio with four D batteries (not supplied). For the best performance and longest life, we recommend alkaline batteries, such as RadioShack Cat. No. 23-550.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.


Follow these steps to install batteries.

1. Be sure **POWER** is set to **OFF**, then set **AC/DC** on the back of the radio to **DC**.

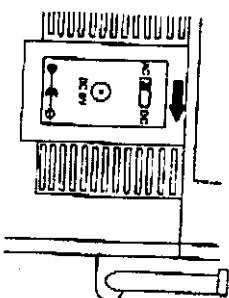

2. Press down the tabs on the battery compartment cover and pull them out to remove the cover.

3. Place four D batteries into the compartment on top of the attached ribbon and according to the polarity symbols (+ and -) marked inside.

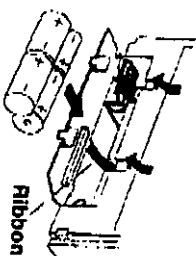

4. Replace the cover.

Replace the radio's batteries when:

- The needle on the **TUNING** meter points toward the green shaded (lower) portion of the meter, when **POWER** is set to **ON** and **RADIO/PA** is set to **BATTERY** Meter" on Page 11)
- Reception weakens or the sound distorts
- The radio does not operate properly

Cautions:

- Always remove old or weak batteries. Batteries can leak chemicals that can destroy electronic parts.
- Dispose of old batteries properly and properly. Do not burn or throw them away.

Note: To easily remove the batteries, pull up on the attached ribbon.

7-CC


10: A2H44912-7P5

Using Vehicle Battery Power

You can power the radio from your vehicle's cigarette-lighter socket with a 9-volt DC adapter (not supplied), such as Cat. No. 273-1802.


Cautions:

- You must use a DC adapter that supplies at least 9 volts and delivers at least 500 mA. Its center tip must be set to negative and its plug must fit the radio's DC 9V jack. The recommended adapter meets these specifications. Using an adapter that does not meet these specifications could damage the radio and the adapter.
- Always plug the DC adapter into the radio before you plug it into the cigarette-lighter socket. Always unplug the DC adapter from the cigarette-lighter before you unplug it from the radio.
- Be sure **POWER** is set to **OFF**, and set **AC/DC** on the back of the radio to **DC**.

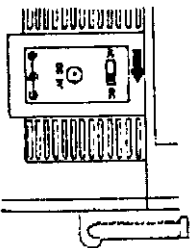


- Set the adapter's voltage switch to 9V.
- Insert the adapter's 5.5 mm outer diameter/2.1 mm inner diameter

barrel plug into the DC 9V jack on the back of the radio.

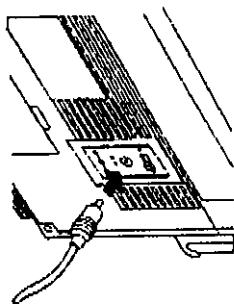


- Plug the other end of the adapter into the vehicle's cigarette-lighter socket.

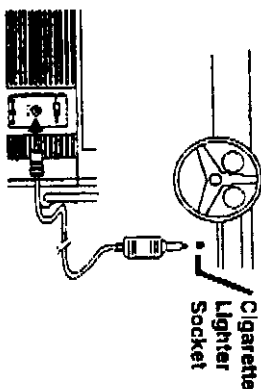

Note: If the radio does not operate when you connect a DC adapter, unplug the adapter from the cigarette-lighter socket and clean any ashes or debris from the socket.

CONNECTING THE WIRE ANTENNA

Besides the **DIRECTION FINDER** antenna and the built-in telescoping antenna, the radio comes with a separate wire antenna (about 10 feet long) for reception when you listen to the shortwave bands (SW or SW2). To connect the antenna, simply insert the antenna's plug into **ANT** on the front of the radio.

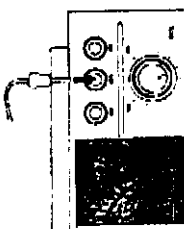


For the best reception when using the wire antenna, fully extend the antenna and run it outside through a window (if possible).

Note: If you lose or damage the supplied wire antenna, you can replace it with a shortwave antenna kit (such as Cat. No. 278-758).

ATTACHING THE CARRY STRAP

The radio comes with a carry strap that you can easily attach and use to carry the radio with you almost anywhere you go. Follow these steps to attach each end of the supplied strap to the hanger bars on the radio.

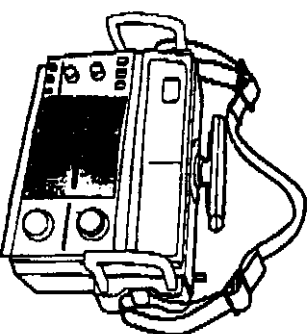

- Insert one end of the strap into the hanger bar on one side of the radio.
- Loop the strap end around the hanger bar and pull up on the strap.
- Insert the strap end into the lower part of the buckle.
- Pull the strap end through the top of the buckle far enough to stop the strap from slipping. To shorten the strap for hand carrying, slide the buckles together. To lengthen the strap for shoulder carrying, slide the two buckles apart.

OPERATION

REC 10:24 42912-795

UNDERSTANDING THE BANDS

A.M. Broadcast	530	600	700	800	1000	1200	1400	1700	MHz
CITIZEN BAND	1	4.6	5	6	7	8	10	11	12
SHORT WAVE	1	4.6	5	6	7	8	10	11	12
SHORT WAVE	1	4.6	5	6	7	8	10	11	12
F.M. Broadcast	88	90	92	94	96	98	100	102	104
T.V.	1	2	3	4	5	6	7	8	9
Sound	1	2	3	4	5	6	7	8	9
V.H.F. Sound	145	155	165	170	175	180	185	190	195
A.I.R. CRAFT	108	115	125	135					
WEATHER BAND	162	167	173	178	183	188	193	198	203

This radio lets you select from 10 different radio frequency bands. A scale showing the frequency range and tuning position for each band appears to the right of that band's name on the radio's multiband display.

- CB reception is limited by range. Some conditions, such as electrical interference, natural obstructions (such as hills), humidity, or atmospheric conditions, could further limit reception.

This section briefly describes the frequency range of each band and the types of communication you can hear when you listen to that band.

- For the best CB reception, be sure to fully extend the radio's telescoping antenna.

AM BROADCAST

Frequency Range: 530-1710 KHz

Communications: AM radio stations

SHORT WAVE 1/2

Frequency Range:

- SHORT WAVE 1: 4-6 MHz
- SHORT WAVE 2: 7-12 MHz

CITIZEN BAND

Frequency Range: 26.965-27.405 MHz

Communications: Traffic and road condition announcements, and Channel 19 — the HELP channel, home-to-home, truck-to-truck, dispatchers.

Communications: Broadcasts from around the world.

Notes:

Notes:

- Reception varies according to the seasons of the year, the current weather conditions, change in atmosphere and the frequency you selected.
- The best time for listening to short-wave broadcasts is in the evening.

FM BROADCAST

Frequency Range: 88-108 MHz

Communications: FM radio stations.

TV SOUND 1

Frequency Range: Channels 2-6

Communications: Audio portion of television broadcasts.

TV SOUND 2

Frequency Range: Channels 7-13

Communications: Audio portion of television broadcasts.

VHF MARINE

Frequency Range: 145-175 MHz

Communications: Public service marine band frequencies (such as police, fire department, taxi, truck and private mobile transmissions).

AIR CRAFT

Frequency Range: 108-135 MHz

Communications: Aircraft communications such as aircraft-to-aircraft and air traffic control and aircraft-to-ground.

WEATHER BAND

Frequencies:


162.400 162.425 162.450
162.475 162.500 162.525
162.550

Communications: Weather information broadcasts.

Note: You can generally expect to receive at least one of these channels in your area.

FCC ID: A2444912-795

BASIC RADIO OPERATION

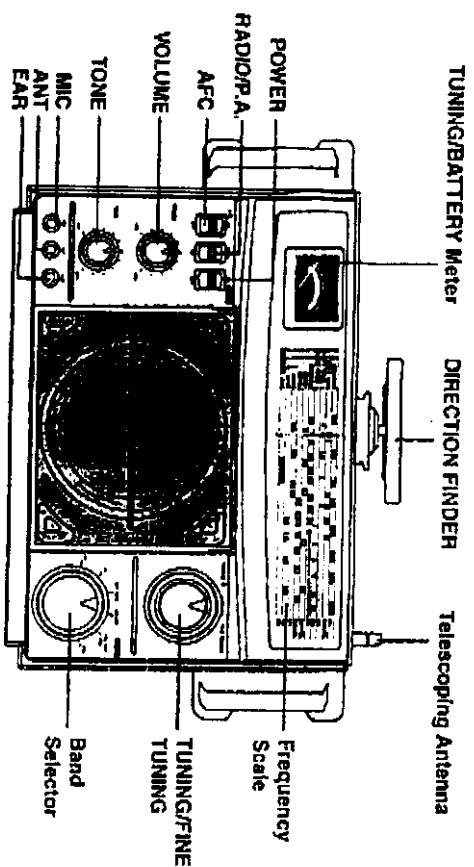

Follow these steps to turn the radio on/off, select a radio band and station/frequency, and adjust the sound.

1. Turn **VOLUME** toward **MIN** until it stops.
2. Set **RADIO/P.A.** to **RADIO**. (To use the P.A. setting, see "Using the P.A. (Public Address) Function" on Page 11.)
3. Turn the band selector to the band(s) you want to listen to.
4. If you selected any band other than **AM**, **SW1** or **SW2**, fully extend the telescoping antenna on top of the radio.

If you selected **SW1** or **SW2**, connect the supplied wire antenna to **ANT** on the front of the radio. (See "Connecting the Wire Antenna" on Page 7.)

Note: The radio uses the attached directional antenna (**DIRECTION FINDER**) for **AM** band reception. The position of the radio's telescoping antenna does not affect **AM** band reception.

5. For reduced sound distortion and drift-free **FM** reception, set **AFC** (Automatic Frequency Control) to **ON**.
6. Set **POWER** to **ON** to turn on the radio.
7. Adjust **VOLUME** toward **MAX** to increase the volume, or toward **MIN** to decrease it.
8. Adjust **TONE** to get the sound you like.

9. To select a different station/frequency, rotate **TUNING** (the outside knob) on the front of the radio. The yellow bar on the multiband scale moves to indicate the current tuning position. The needle on the **TUNING/BATTERY** meter moves toward 10 as the signal strength increases or toward 0 as it decreases (see "Reading the **TUNING/BATTERY** Meter").


Notes:

- If you selected the **AM** band, turn **DIRECTION FINDER** (the directional **AM** antenna) on top of the radio to fine tune the selected **AM** station.
- If you selected the **SW1** or **SW2** band, rotate **FINE TUNING** (the knob inside **TUNING**) to fine tune the selected **SW** frequency.

10. To turn off the radio when you finish, set **POWER** to **OFF**.

READING THE TUNING/BATTERY METER

The radio's **TUNING/BATTERY** meter indicates the current signal strength and the current battery strength (if you installed batteries).

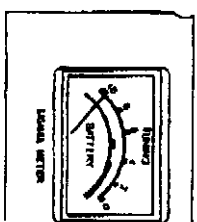


With **POWER** set to **ON** and **RADIO** set to **RADIO**, the position of the needle on the top portion of the meter shows the current signal strength on a scale 0 (weakest signal) to 10 (strongest signal).

With **POWER** set to **ON** and **RADIO** set to **P.A.**, the position of the needle on the lower (green-shaded) portion of the meter shows the current battery strength. The needle points toward right when the battery strength is strong and moves to the left as the battery strength weakens.

USING THE P.A. (PUBLIC ADDRESS) FUNCTION

Follow these steps to connect a telephone with 1/8-inch (3.5-mm) plug supplied to the radio and set the so you can hear sound from the telephone through the radio's speaker.

Note: Your local RadioShack store carries a wide selection of microphones.

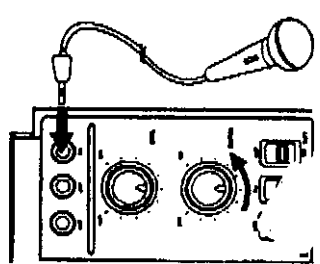

1. Turn **VOLUME** toward **MIN** until it stops.

FCC ID: A2H42912-795

2. Set **RADIO/P.A.** to **P.A.**
3. Plug the microphone into **MIC** on the front of the radio.
3. Put the earphone in your ear and adjust **VOLUME** to a comfortable listening level.


4. Be sure **POWER** is set to **ON**, then speak into the microphone in a normal voice.

5. As you begin speaking, adjust **VOLUME** to a comfortable listening level.

Note: To prevent feedback or high-pitched sounds, keep the microphone pointed away from the radio and stand at least 3 feet away from (behind or beside) the radio.

USING THE EARPHONE

Follow these steps to attach the supplied earphone so you can listen to the radio without disturbing others. Connecting the earphone disconnects the speaker.

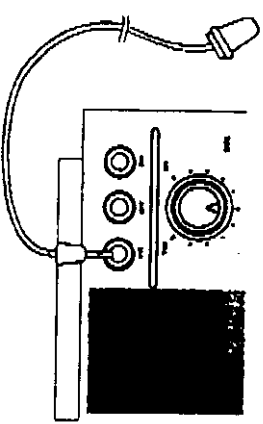

1. Turn **VOLUME** toward **MIN** until it stops.
2. Insert the earphone's 1/8-inch (3.5-mm) plug into the **EAR** jack on the front of the radio.

Listening Safely

To protect your hearing, follow these guidelines when you use an earphone.

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

Traffic Safety

Do not wear an earphone while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas.

Even though some earphones let you hear some outside sounds when listening at normal volume levels, they still can present a traffic hazard.

CARE AND MAINTENANCE

Your MultiBand AC/DC Portable Radio is an example of superior design and craftsmanship. The following suggestions will help you care for your radio so you can use it for years.



Keep the radio dry. If it gets wet, wipe it dry immediately. Liquids may contain minerals that can corrode the electronic circuits.



Use and store the radio only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the radio away from dust and dirt, which can cause premature wear of parts.



Handle the radio gently and carefully. Dropping it can damage circuit boards and cases and can cause the radio to work improperly.



Use only fresh batteries of the required size and recommended by the manufacturer. Batteries can leak chemicals that damage your radio's electronic parts.



Wipe the radio with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the radio.

Modifying or tampering with the radio's internal components can cause a malfunction and might invalidate your radio's warranty and void your FCC authorization to operate it. If your radio is not performing as it should, take it to your local RadioShack store for assistance.

6/98

FCC 15742 H46912-795

THE FCC WANTS YOU TO KNOW

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn off your radio. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- moving your radio away from the receiver
- connecting your radio to an outlet that is on a different electrical circuit from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your radio.

SPECIFICATIONS

Bands

AM	530-1710
CB (Channels 1-40)	26.965-27.405
SW1	4.0-6.0
SW2	7.0-12.0
FM	88-108
AIR	108-135
TV2 (Channels 7-13)	176-218
VHF	145-175
WX	162.4-162.55
TV1 (Channels 2-6)	59.75-87.75

General

Power Output	900
Power Requirements	AC 120V, 60 Hz, 5
Dimensions (HWD)	6.0 Volts (Four D Batteries); 9V DC Center Nega
Weight	10 1/4 x 14 3/8 x 5 3/8 inch (260 x 372 x 136 mm)
Antenna	5.53 (2.51)
Included Accessories	FM Telescoping, Direction Fin
	Wire Antenna (about 10 feet long)
	Earphone, Carry Str

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

9/9