


BST-25 OPERATOR'S MANUAL

(216 MHz)

# *Synthesized Base Station Transmitter*

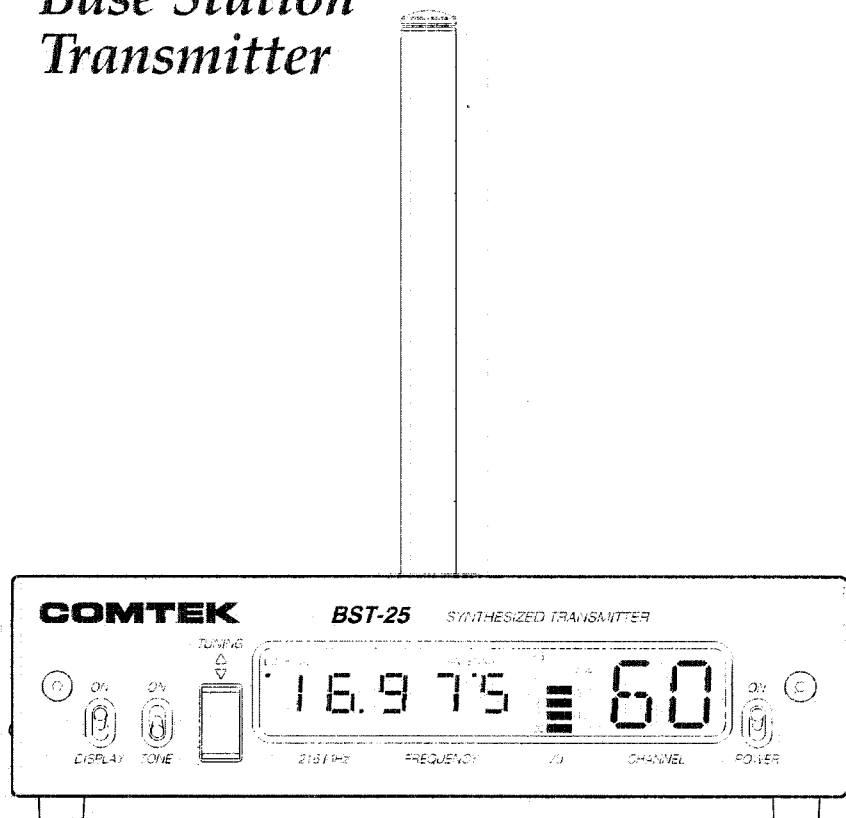

# COMTEK®

337 West 2700 South • Salt Lake City, Utah 84115 • Phone: (800) 496-2463 • Fax: (801) 484-6906 • <http://www.comtek.com>

## INTRODUCTION

BST-25 (216 MHz)

### *Synthesized Base Station Transmitter*



The **BST-25** 216 MHz is a professional quality, low power, auxiliary base station transmitter designed to operate in the newly assigned 216-217 MHz band under part 95 of the FCC regulations. This transmitter operates with the COMTEK PR-216 for higher fidelity when used in wide-band operation. A transmitter and receiver system may be used for personal cuing, for tour guide applications, language interpretation, and for assistive listening applications.

The **BST-25** 216 MHz also operates with the Phonak microEar VHF in-ear receiver in the narrow band mode. This receiver is used for totally discrete cuing and prompting, IFB for broadcast and film production, and for other discrete applications.

## OPERATING INSTRUCTIONS

---



### Equipment Placement

If the BST-25 base station is to be rack mounted, a remote antenna must be used. The base station should be mounted away from equipment that uses large power transformers to reduce 60 Hz hum possibilities.

If the base station is to be used outside of a traditional rack mounted environment, the screw-in whip antenna should be free of any metallic objects when fully extended (12 1/2 inches).

**Special Note:** When using the base station in close proximity to other audio equipment, insure that the audio equipment is not susceptible to RF interference. This can be accomplished by temporarily installing the base station as per above, and then while the base station is operating, checking all audio outputs for uncharacteristic noise. If a problem is found, move the base station or the remote antenna as far as possible from the affected equipment. Should you continue to have problems, contact COMTEK's application engineering department for assistance.



### Remote Antenna

When the base station is rack mounted or when greater system range is required, a remote antenna should be used. For vehicle installation, a 1/4 wave roof-mount (MO-1/4 wave) or (MAG-1/4 wave) should be used. For field or studio applications, the COMTEK "Phase Right Antenna" (PRA-H 216 MHz) is an easy-to-use high performance omni antenna. For high gain directional yagi type antennas and custom antennas, contact COMTEK's application engineering department for assistance.

*Please note: Do not install screw-in whip antenna if remote antenna is used.*

## Power Requirements

The BST-25 base station is designed to be powered by 12 volts DC. A power adaptor is furnished for use with standard 110V AC. The on/off switch on the front panel of the base station turns on the transmitter.

## Audio Input Connections

The base station transmitter has facilities for audio input from a mic, line, or speaker level source. The mic/line level audio input is a transformer balanced input and requires a standard XLR-3 male connector. Unbalanced input is accomplished by shorting pin-2 to pin-1 (audio ground), leaving pin-3 as the audio source. *Please note: when unbalanced input is used, it is recommended that all audio input cables be kept as short as possible.*

## Set-up

- a. Select an appropriate location for the base station in accordance with "Equipment Placement" instructions.
- b. Set the "MIC/LINE" switch, located on the back of the base station transmitter, to the appropriate position: "MIC" position for low impedance microphones or "LINE" position for line level feed.
- c. Connect the audio source or microphone to the base station using the appropriate input. Be sure to set the audio input level adjustment on the base station to its full counterclockwise position.

## OPERATING INSTRUCTIONS (continued)

d. Plug the adaptor into a standard AC outlet and plug the power connector into the DC input jack of the transmitter. Turn the display switch on the front of the transmitter "ON" to allow monitoring of the transmitter frequency. Turn the main power switch on the front of the base station to the "ON" position. The front display should now be illuminated.

e. Mount the telescoping whip antenna in the hole on top of the base station, rotating it clockwise until it is firmly seated. Extend the antenna completely (12 1/2 inches). During normal operation the antenna indicator should not flash. Turn on the transmitter and verify that the antenna indicator is not flashing. If the antenna indicator is flashing, it is an indication that the antenna is not fully efficient. The antenna should be checked for appropriate length, antenna elements in too close proximity to metallic objects, or for a damaged coaxial cable to remote antenna. Also, **DO NOT** install screw-in whip antenna if remote antenna is used.

### Audio Adjustments

In order to insure the highest possible transmission fidelity, the transmitter must be modulating at least 50% with normal speech (-3 dB on the VU meter). This adjustment is made in the following manner:

a. Insure that the audio source has been optimized for best signal-to-noise ratio.

b. The "MIC/LINE" switch located at the back of the transmitter should be switched to the appropriate setting: "MIC" for mic level or weak line level input; "LINE" level for line level input.

c. The "LEVEL" control on the back of the base station should be set fully counterclockwise and then, while normal program information is present, slowly rotate the "LEVEL" control clockwise until the VU meter on the front panel begins to deflect. Adjustment should be made so that normal speech or music deflects the meter mid-scale. Only very loud speech or music should deflect the VU meter full-scale.

## Frequency Selection

**IMPORTANT**

The BST-25 216 MHz base station transmitter can operate on 60 channels between 216 MHz and 217 MHz. Channels 1-40 are narrow band channels for use with the Phonak microEar receiver with 5 KHz deviation. Channels 41-60 are wide band channels for use with COMTEK PR-216 with 10 KHz deviation. The PR-216 will tune the Phonak microEar channels 1-40 but with lesser fidelity. Refer to page 10 for Channel/Frequency Chart.

## Multiple Channel Operation

Simultaneous operation of more than two channels requires coordination of the frequencies that are used to avoid intermodulation interference.

To avoid this type of interference, select frequencies from one of the standard groups (see frequency group charts on page 11), or use COMTEK's frequency selection guide software to determine appropriate frequencies. (Contact COMTEK to obtain a free copy of the frequency selection software.)

### Test Tone

The BST-25 base station transmitter has an internal 400 Hz source which is transmitted when the "TONE" switch is enabled. This source is intended to be used to make technical adjustments and to verify the operation of the system. Under normal operation the "TONE" switch should be disabled.

### Speech EQ

On the back of the transmitter there is a switch labeled "EQ". With this function enabled (switch up), the audio dynamics and frequency response are processed to improve intelligibility of speech. If the primary audio source is going to be speech, you should enable this processing! If the main audio source is going to include music information, you should disable it. You may want to experiment to determine which position sounds most pleasing with the program source you intend to use.


## Display On and Off

The digital display can be turned on or off using the "DISPLAY" switch. Disabling the display reduces the current consumption of the transmitter for battery operation. In environments where the display could be distracting, disabling the display may also be appropriate. When the display is disabled, the tuning controls are also disabled, insuring the transmitter frequency is not changed inadvertently. With the display disabled, one segment is turned on as a power indicator. Additionally, the "LOCK OUT" indicator is illuminated indicating the tuning is disabled. The VU meter and the "ANTENNA" indicator are unaffected.

## Lock Out

After the transmitting frequency has been determined, the transmitter tuning function can be disabled with the "LOCK OUT" switch on the back of the transmitter. This insures that the transmitter operating frequency is not inadvertently changed. The "LOCK OUT" indicator (above the first numeric digit on the display) will illuminate indicating that the tuning has been disabled. When rack mounting the transmitter this switch must be accessed from behind the rack. This provides added protection from tampering.


## BST-25 FRONT PANEL

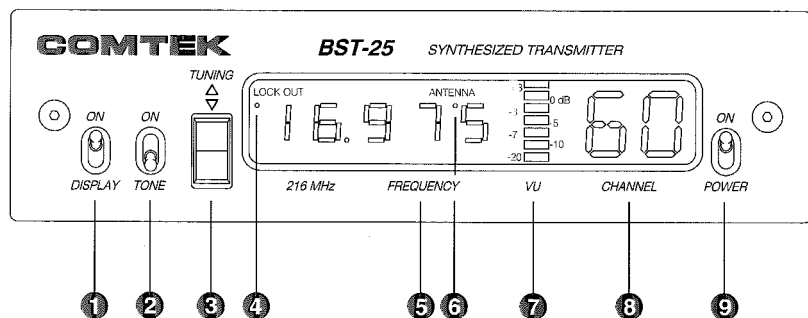

- ➊ **DISPLAY SWITCH:** This switch disables the digital display to conserve current when used with a battery.
- ➋ **TONE SWITCH:** Enables/disables the internal 400 Hz test tone.
- ➌ **TUNING SWITCH:** Selects the frequency on which the transmitter will operate.
- ➍ **LOCK OUT INDICATOR:** Illuminates when the "TUNING" switch is disabled by setting the "LOCK OUT" switch (rear panel) to "ON".
- ➎ **DIGITAL FREQUENCY DISPLAY:** Displays the frequency on which the transmitter is operating.
- ➏ **ANTENNA INDICATOR:** Flashes when the transmitter senses a deficient antenna condition.
- ➐ **VU METER:** Displays the level of audio being transmitted. Used to adjust the "LEVEL" (rear panel) control.
- ➑ **DIGITAL CHANNEL DISPLAY:** Displays the channel on which the transmitter is operating.
- ➒ **POWER SWITCH:** Turns the transmitter on or off.

## BST-25 REAR PANEL

(216 MHz)

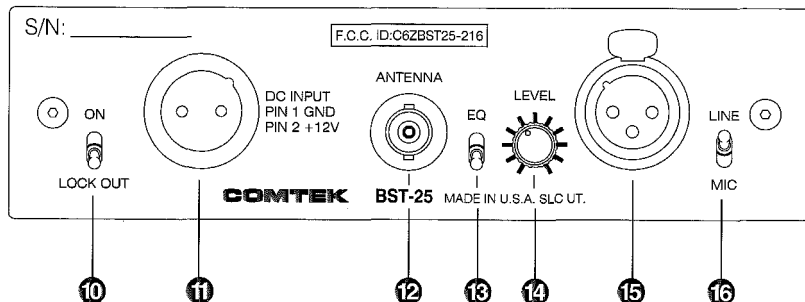

- 10 LOCK OUT SWITCH:** Disables the (front panel) "TUNING" switch, locking the transmitter on one frequency.
- 11 DC INPUT JACK:** Requires 12 VDC at 500 mA (Pin-1 ground, pin-2 +12 volts).
- 12 EXTERNAL ANTENNA JACK:** BNC connector provides a standard 50 ohm RF output for use with an external antenna.
- 13 SPEECH ENHANCEMENT SWITCH:** Enables and disables speech enhance feature. Enable this function (switch up) for speech and disable it (switch down) for music.
- 14 LEVEL CONTROL:** This control should be adjusted to so that normal audio deflects the VU meter to midscale.
- 15 BALANCED AUDIO INPUT:** Accepts audio from a line level or dynamic microphone (Pin-1: ground).
- 16 MIC/LINE SWITCH:** Selects the desired audio input sensitivity.

# BST-25

## FREQUENCY CHART

| CHANNEL                                                       | FREQUENCY    |
|---------------------------------------------------------------|--------------|
| <b>NARROW BAND CHANNELS</b><br>(For use with Phonak microEar) |              |
| 1                                                             | 216.0125 MHz |
| 2                                                             | 216.0375 MHz |
| 3                                                             | 216.0625 MHz |
| 4                                                             | 216.0875 MHz |
| 5                                                             | 216.1125 MHz |
| 6                                                             | 216.1375 MHz |
| 7                                                             | 216.1625 MHz |
| 8                                                             | 216.1875 MHz |
| 9                                                             | 216.2125 MHz |
| 10                                                            | 216.2375 MHz |
| 11                                                            | 216.2625 MHz |
| 12                                                            | 216.2875 MHz |
| 13                                                            | 216.3125 MHz |
| 14                                                            | 216.3375 MHz |
| 15                                                            | 216.3625 MHz |
| 16                                                            | 216.3875 MHz |
| 17                                                            | 216.4125 MHz |
| 18                                                            | 216.4375 MHz |
| 21                                                            | 216.5125 MHz |
| 22                                                            | 216.5375 MHz |
| 23                                                            | 216.5625 MHz |
| 24                                                            | 216.5875 MHz |
| 25                                                            | 216.6125 MHz |
| 26                                                            | 216.6375 MHz |
| 27                                                            | 216.6625 MHz |
| 28                                                            | 216.6875 MHz |
| 29                                                            | 216.7125 MHz |
| 30                                                            | 216.7375 MHz |
| 31                                                            | 216.7625 MHz |

| CHANNEL                                                            | FREQUENCY    |
|--------------------------------------------------------------------|--------------|
| 32                                                                 | 216.7875 MHz |
| 33                                                                 | 216.8125 MHz |
| 34                                                                 | 216.8375 MHz |
| 35                                                                 | 216.8625 MHz |
| 36                                                                 | 216.8875 MHz |
| 37                                                                 | 216.9125 MHz |
| 38                                                                 | 216.9375 MHz |
| 39                                                                 | 216.9625 MHz |
| 40                                                                 | 216.9875 MHz |
| <b>WIDEBAND CHANNELS</b><br>(For use with COMTEK PR-216 receivers) |              |
| 41                                                                 | 216.0250 MHz |
| 42                                                                 | 216.0750 MHz |
| 43                                                                 | 216.1250 MHz |
| 44                                                                 | 216.1750 MHz |
| 45                                                                 | 216.2250 MHz |
| 46                                                                 | 216.2750 MHz |
| 47                                                                 | 216.3250 MHz |
| 48                                                                 | 216.3750 MHz |
| 49                                                                 | 216.4250 MHz |
| 51                                                                 | 216.5250 MHz |
| 52                                                                 | 216.5750 MHz |
| 53                                                                 | 216.6250 MHz |
| 54                                                                 | 216.6750 MHz |
| 55                                                                 | 216.7250 MHz |
| 56                                                                 | 216.7750 MHz |
| 57                                                                 | 216.8250 MHz |
| 58                                                                 | 216.8750 MHz |
| 59                                                                 | 216.9250 MHz |
| 60                                                                 | 216.9750 MHz |

## BST-25

### 216 MHz NARROW BAND FREQUENCY GROUPS

For Phonak microEar  
5 KHz deviation

#### GROUP A

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 1       | 216.0125 MHz |
| 8       | 216.1875 MHz |
| 12      | 216.2875 MHz |
| 26      | 216.6375 MHz |
| 34      | 216.8375 MHz |

#### GROUP B

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 4       | 216.0875 MHz |
| 10      | 216.2375 MHz |
| 14      | 216.3375 MHz |
| 28      | 216.6875 MHz |
| 36      | 216.8875 MHz |

#### GROUP C

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 6       | 216.1375 MHz |
| 12      | 216.2875 MHz |
| 16      | 216.3875 MHz |
| 30      | 216.7375 MHz |
| 38      | 216.9375 MHz |

#### GROUP D

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 8       | 216.1875 MHz |
| 14      | 216.3375 MHz |
| 18      | 216.4375 MHz |
| 32      | 216.7875 MHz |
| 40      | 216.9875 MHz |

## BST-25

### 216 MHz WIDE BAND FREQUENCY GROUPS

For COMTEK PR-216  
10 KHz deviation

#### GROUP 1

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 41      | 216.0250 MHz |
| 44      | 216.1750 MHz |
| 46      | 216.2750 MHz |
| 53      | 216.6250 MHz |
| 57      | 216.8250 MHz |

#### GROUP 2

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 42      | 216.0750 MHz |
| 45      | 216.2250 MHz |
| 47      | 216.3250 MHz |
| 54      | 216.6750 MHz |
| 58      | 216.8750 MHz |

#### GROUP 3

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 43      | 216.1250 MHz |
| 46      | 216.2750 MHz |
| 48      | 216.3750 MHz |
| 55      | 216.7250 MHz |
| 59      | 216.9250 MHz |

#### GROUP 4

| CHANNEL | FREQUENCY    |
|---------|--------------|
| 44      | 216.1750 MHz |
| 47      | 216.3250 MHz |
| 49      | 216.4250 MHz |
| 56      | 216.7750 MHz |
| 60      | 216.9750 MHz |

## BST-25 (216 MHz) SPECIFICATIONS

### Audio Inputs:

Mic XLR, 600 ohm Balanced -40 dBV (nominal)  
Line XLR, >10 k ohm Balanced 0 dBV (nominal)

### Connectors:

XLR-3 Female audio input connector for mic and line input  
XLR-2 Male power input 12 volts  
BNC type RF output connector

### Operation Indicators:

LED Bargraph VU Meter displays audio input (modulation)  
Two Digit Alpha Numeric Display shows operating channel  
Five Digit Numeric Display shows operating frequency  
Antenna Indicator displays deficient antenna condition  
Lock Out Indicator shows tuning has been disabled

### Antenna:

Telescopic antenna mounts directly into top of transmitter  
BNC RF output connector for optional external antenna

### FCC Compliance:

Type Accepted under Part 95

### Power Requirements:

12 Volts DC, 300 mA max

### Frequency Response:

80 Hz to 8 kHz

### Audio Distortion:

Less than 1% at 80% modulation

### Modulation Limiter:

Soft compressor type with high (25 dB) linear overload protection, attack time less than 1 ms, recovery time 10 ms

### Audio Gain Control:

Greater than 40 dB

### Test Tone Generator:

400 Hz 0.05% distortion

### Frequency Modulation:

5 and 10 kHz deviation

### RF Output Power:

Set for 100 mW for FCC Part 95

### Frequency Stability:

Better than 20 ppm. digitally synthesized, crystal controlled

### Operating Frequency:

216 to 217 MHz

### Harmonic and Spurious

#### Emissions:

Better than 55 dB below carrier

### Dimensions:

6 1/2" wide x 1 3/4" high x 5 5/8" deep

### Weight:

44 oz.

NOTE: Specifications subject to change without notice

## WARRANTY

COMTEK warrants this product to be free from defects in workmanship and material under normal use and conditions for a period of one year from date of original purchase. Items such as batteries, neckloops, and cords are not covered by the warranty. Damage due to misuse, ill treatment and unauthorized modification and repairs are not covered by this warranty. COMTEK is not liable for consequential damages arising out of any failure of the equipment to perform as intended. COMTEK shall bear no responsibility or obligation with respect to the manner of use of any equipment sold by it. COMTEK SPECIFICALLY DISCLAIMS AND NEGATES ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF SUCH EQUIPMENT INCLUDING, WITHOUT LIMITATION, ANY WARRANTY THAT THE USE OF SUCH EQUIPMENT FOR ANY PURPOSE WILL COMPLY WITH APPLICABLE LAWS AND REGULATIONS.

### Service Policies

Warranty repairs must be done by COMTEK. Only factory technicians are authorized to perform warranty service on the BST-25 transmitter. Before returning the BST-25 for service, a Return Authorization Number should be obtained from the service department by calling 1-800-496-3463 or 1-801-466-3463. Return the unit to the factory with the original or comparable packing. COMTEK will pay for insurance and ground return shipping costs in the United States for all warranty service.

# COMTEK®

*First Quality in Wireless Sound*

357 West 2700 South • Salt Lake City, Utah 84115  
Phone: (800) 496-3463 • Fax: (801) 484-6906  
Web Page: <http://www.comtek.com>

---

---

# COMTEK®

357 West 2700 South • Salt Lake City, Utah 84115 • Phone: (800) 496-3463 • Fax: (801) 484-6906 • <http://www.comtek.com>