

T02-P Tait Open2 Portable Radio

User Manual

Note: Initial draft, treat content as placeholder information until final menu structure and all possible features are verified.

XXX-xxxxx-xx - Issue 01 - DRAFT

Contents

Contents	2
Contact Information	6
Preface	7
Scope of Manual	7
Alerts	7
Associated Documentation	7
Publication Record	8
1 For Your Safety	9
1.1 Radio Frequency Exposure Information	9
1.1.1 Using this radio	9
1.1.2 Controlling your exposure to RF energy	9
1.1.3 Compliance with RF energy exposure standards	10
Conformité aux normes d'exposition à l'énergie RF	10
1.2 Radio Frequency Emissions Limits in the USA	11
1.3 Radio Frequency Emissions Limits in Canada	11
1.4 USA Public Safety Bands (764–776 MHz and 794–806 MHz)	11
1.5 EMC Regulatory Compliance in Australia	12
1.6 Frequency Band Reserved for Distress Beacons	12
1.7 Health, Safety and Electromagnetic Compatibility in Europe	12
1.7.1 Intended purpose of product	12
1.7.2 Restrictions	12
1.7.3 Declaration of conformity	12
1.8 Interference with Electronic Devices	13
1.9 Potentially Explosive Atmospheres and Blasting Areas	13
1.10 Radio Installation and Operation in Vehicles	14
1.11 Vehicle Charger Installation and Operation	14
1.12 Multicharger Safety Information	14
1.13 Electromagnetic Compatibility in European Vehicles	14
1.14 Unapproved Modifications or Changes to Radio	15

1.14.1 Attaching of labels	15
1.15 Use of Lithium-ion Batteries	15
1.16 Short-circuiting Battery Contacts	15
2 Before Using Your Radio	16
2.1 For Your Safety - Battery Warning	16
2.2 Attaching Labels to the Radio or Battery	16
2.2.1 Attaching a label to the radio	16
2.3 Charging the Battery Before First Use	17
2.4 Attaching or Removing the Battery	17
2.5 Attaching or Removing the Antenna	18
2.6 Attaching or Removing the Belt Clip	18
2.7 Installing an Audio Accessory	18
3 Radio Controls and Indicators	19
3.1 Radio Display Icons	20
3.2 Status Indicators	21
3.3 Low Battery Warning	21
4 Radio Operation	22
4.1 Powering On and Off	22
4.2 Navigating the Menus	22
4.3 Adjusting the Volume	22
4.4 Selecting Channels, Zones and Talkgroups	23
4.4.1 Selecting a Channel	23
4.4.2 Selecting a Zone	23
4.4.3 Selecting a Talkgroup	23
4.5 Selecting a Scan or Voting Group	24
4.5.1 Suspending a channel from a voting group	24
4.6 Using the PTT Key	25
4.7 Making a Call	25
4.7.1 Making a call using preset channels and talkgroups	25
4.7.2 Making an individual call	26
4.7.3 Limiting call time	26
4.8 Making an Emergency Call	26

4.9 Receiving a Call	27
4.10 Call Alert	27
4.11 Radio Monitor	28
4.12 Sending and Receiving Status Messages	28
4.13 Checking the Queue	29
4.14 Radio Inhibit	30
4.15 Location Services	30
5 Using a Bluetooth Device	31
5.1 Bluetooth Device Compatibility with Tait Radios	31
5.2 Wearing the Bluetooth Device	31
5.3 Pairing and Disconnecting a Device	31
5.4 Managing Your Devices	32
5.5 Disconnecting a Device	32
5.6 Reconnecting a Device	32
5.7 Changing the way your Device Reconnects	33
6 Analog Channel Operating Features	34
6.1 Setting the Radio's Status	34
6.2 Monitor and Squelch Override	34
6.3 Repeater Talkaround	35
7 DMR Channel Operating Features	36
7.1 Making a Preset Call	36
7.2 Text Messaging	36
7.2.1 Sending a text message	36
7.2.2 Receiving a text message	36
8 Encryption	37
8.1 Encrypting Outgoing Calls	37
8.1.1 Turning outgoing call encryption on or off	37
8.2 Making an Encrypted Call	37
8.3 Receiving Encrypted Calls	38
8.4 Removing Encryption Keys from the Radio	38

9 Customization Settings	39
9.1 Audible Alert Options	39
9.1.1 Changing to Silent Operation	39
9.1.2 Changing the Volume of all Audible Indicators	39
9.1.3 Changing the Volume of Keypress Tones	39
9.2 Display Settings	39
10 Charging and Caring for Batteries	40
10.1 Before Using the Charger	40
10.2 Charger Status Indicators	41
10.3 Charging Temperatures	41
10.4 Leaving the Battery on Charge	41
10.5 Charging the Battery	42
10.6 Storing Batteries	42
10.7 Disposing of Batteries	42
11 Troubleshooting	43
12 General Care	44
12.1 Cleaning the Radio	44
12.1.1 Cleaning the battery contacts	44
Simplified Declaration of Conformity	45

Contact Information

Tait Communications Corporate Head Office

Tait International Limited
P.O. Box 1645
Christchurch
New Zealand

Imported into the EU by:
Tait Communications
GmbH
Strozzigasse 10/14
Vienna 1080
Austria

Imported into the UK by:
Tait Europe Limited
Unit A, Buckingham Business
Park
Anderson Road
Swavesey
Cambridge, CB24 4UQ
United Kingdom

For the address and telephone number of regional offices,
refer to our website: www.taitcommunications.com

Copyright and Trademarks

All information contained in this document is the property
of Tait International Limited. All rights reserved.
This document may not, in whole or in part, be copied,
photocopied, reproduced, translated, stored, or reduced to
any electronic medium or machine-readable form, without
prior written permission from Tait International Limited.

The word TAIT, TAITNET and the TAIT logo are
trademarks of Tait International Limited.

All trade names referenced are the service mark,
trademark or registered trademark of the respective
manufacturers.

By using a Tait product you are agreeing to be bound by
the terms of the Tait Software Licence Agreement. Please
read the Tait Software Licence Agreement carefully before
using this Tait product. If you do not agree to the terms of
the Tait Software Licence Agreement, do not use the Tait
Product. The full agreement is available at
www.taitcommunications.com/our-resources/legal#Tait_Software_Licence_Agreement

Disclaimer

There are no warranties extended or granted by this
document. Tait International Limited accepts no
responsibility for damage arising from use of the
information contained in the document or of the
equipment and software it describes. It is the responsibility
of the user to ensure that use of such information,
equipment and software complies with the laws, rules and
regulations of the applicable jurisdictions.

Enquiries and Comments

If you have any enquiries regarding this document, or any
comments, suggestions and notifications of errors, please
contact your regional Tait office.

Updates of Manual and Equipment

In the interests of improving the performance, reliability or
servicing of the equipment, Tait International Limited
reserves the right to update the equipment or this
document or both without prior notice.

Intellectual Property Rights

This product may be protected by one or more patents or
designs of Tait International Limited together with their
international equivalents, pending patent or design
applications, and registered trade marks, for a complete list
please check www.taitcommunications.com/our-resources/legal#Intellectual_Property

The AMBE+2™ voice coding Technology embodied in this
product is protected by intellectual property rights
including patent rights, copyrights and trade secrets of
Digital Voice Systems, Inc. This voice coding Technology is
licensed solely for use within this Communications
Equipment. The user of this Technology is explicitly
prohibited from attempting to decompile, reverse engineer,
or disassemble the Object Code, or in any other way
convert the Object Code into a human-readable form.

Environmental Responsibilities



Tait International Limited is an environmentally
responsible company which supports waste
minimization, material recovery and restrictions
in the use of hazardous materials. The European
Union's Waste Electrical and Electronic
Equipment (WEEE) Directive and UK WEEE Regulation
2013 requires that this product be disposed of separately
from the general waste stream when its service life is
over. For more information about how to dispose of your
unwanted Tait product, visit the Tait WEEE website at
www.taitcommunications.com/our-resources/compliance#WEEE. Please be environmentally
responsible and dispose through the original supplier, or
contact Tait International Limited.

Tait will comply with environmental requirements in
other markets as they are introduced.

Preface

Scope of Manual

This manual provides information on the use of the T02-P radio. It is intended for the end user of the product.



Before using the T02-P ensure you are familiar with **XXX-xxxxxx** Safety and Compliance Information, available from the [Tait Partner Portal](#).

Alerts

Please follow exactly any instruction that appears in the text as an 'alert'. An alert provides necessary safety information as well as instructions about the proper use of the product. This manual uses the following types of alert:



Warning This alert is used to warn about the risk of damage. / This alert is used when there is a hazardous situation which, if not avoided, could result in serious injury or death.



This alert is used when there is a hazardous situation which, if not avoided, could result in minor or moderate injury.



This alert is used to highlight significant information that may be required to ensure that you perform procedures correctly, or to draw your attention to ways of doing things that can improve your efficiency or effectiveness.

Associated Documentation

The following associated documentation for this product is available on the [Tait Partner Portal](#) website, <https://partnerinfo.taitradio.com/>.

XXX-xxxxx-xx Safety and Compliance Information

XXX-xxxxx-xx T02-P Battery Charger User Guide

The characters **xx** represent the issue number of the documentation.

Technical notes are published from time to time to describe applications for Tait products, to provide technical details not included in manuals, and to offer solutions to any problems that arise. Look for new or updated technical notes on the [Tait Partner Portal](#) website.

Publication Record

Issue	Publication Date	Description
1	July 2025	DRAFT

1 For Your Safety

Before using your radio, please read the following important safety and compliance information.

1.1 Radio Frequency Exposure Information



For your own safety and to ensure you comply with the radio frequency (RF) exposure guidelines of the United States Federal Communication Commission's (FCC), Industry Canada, and those from other administrations, please read the following information before using this radio.

1.1.1 Using this radio

You should use this radio only for work-related purposes (it is not authorized for any other use) and if you are fully aware of, and can exercise control over, your exposure to RF energy. To prevent exceeding FCC RF exposure limits, you must control the amount and duration of RF that you and other people are exposed to.

It is also important that you:

- do not remove the RF Exposure label from the radio
- ensure this RF exposure information accompanies the radio when it is transferred to other users
- do not use the radio if you do not adhere to the guidelines on controlling your exposure to RF.

1.1.2 Controlling your exposure to RF energy



Warning RF exposure hazard!

This radio emits radio frequency (RF) energy or radio waves primarily when calls are made. RF is a form of electromagnetic energy (like sunlight), and there are recommended levels of maximum RF exposure.

To control exposure to RF and comply with the maximum exposure limits for occupational and controlled environments:

- do not talk (transmit) on the radio more than the rated transmit duty cycle. This is important because the radio radiates more energy when it is transmitting than when it is receiving
- hold the radio upright in front of your face so that it is at least one inch (2.5 cm) away from you. Keeping the radio at the recommended distance is important because exposure to RF decreases rapidly the further away the antenna is from your body
- keep the antenna at least one inch (2.5 cm) from your face at all times

- if you wear your radio, you must always put it in a carrying accessory that has been specifically approved by Tait for this radio. Using non-approved body-worn accessories may mean you expose yourself to higher levels of RF than recommended by the FCC's occupational/controlled environment RF exposure limits
- ensure you only use Tait-approved antennas, batteries, and accessories

For more information on what RF energy is and how to control your exposure to it, visit the FCC website at www.fcc.gov/oet/rfsafety/rf-faqs.html.

1.1.3 Compliance with RF energy exposure standards

This two-way radio complies with these RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47 CFR §§ 1.1307, 1.1310, and 2.1093.
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95.1-1992.
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition.
- European Directive 2004/40/EC on minimum health and safety requirements regarding the exposure of workers to the risks arising from physical agents (electromagnetic fields).

This radio complies with the IEEE and ICNIRP exposure limits for occupational/controlled RF exposure environments at operating duty factors of up to 50% talk to 50% listen.

Conformité aux normes d'exposition à l'énergie RF

Cette radio émetteur-récepteur se conforme aux normes et aux règlements d'exposition à l'énergie RF :

- La Commission fédérale de la communication des Etats-Unis, Code de règlements fédéraux (CFR) Titre 47 Sections 1.1307, 1.1310 et 2.1091 (radios mobiles) ou 2.1093 (radios portatives).
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992.
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition.
- La directive européenne 2004/40/EC concernant les prescriptions minimales de sécurité et de santé relatives à l'exposition des travailleurs aux risques dus aux agents physiques (champs électromagnétiques).

Cette radio se conforme aux limites d'exposition de l'IEEE (FCC) et ICNIRP pour les environnements d'exposition au rayonnement RF professionnel et contrôlé aux cycles de marche de 50% en mode transmission et 50% en mode réception.

1.2 Radio Frequency Emissions Limits in the USA

CFR Title 47 Part 15.19 (a) (1) - Receivers

Part 15 of the FCC Rules imposes RF emission limits on receivers. This radio complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

CFR Title 47 Part 15.19 (a) (3) - All other devices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

1.3 Radio Frequency Emissions Limits in Canada

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

1.4 USA Public Safety Bands (764–776 MHz and 794–806 MHz)

The Code of Federal Regulations (CFR) Title 47 Subpart R deals with the use of frequencies in the 764 to 776 MHz and 794 to 806 MHz bands.

Low-power channels

This radio complies with §90.531 (b) (3) and §90.531 (b) (4) of 47 CFR. These sections state that only low-power transmission is permitted on the following channels:

- Regional Planning channels, as defined in §90.531 (b) (3).
- Itinerant channels, as defined in §90.531 (b) (4).

Use of encryption

This radio complies with §90.553 (a) of 47 CFR. This states that:

- encryption is not permitted on the nationwide Interoperability calling channels. These channels are defined in §90.531 (b) (1) (ii)
- radios using encryption must have a readily accessible switch or control to allow the radio user to disable encryption.

1.5 EMC Regulatory Compliance in Australia



This product meets all ACMA regulatory requirements for electromagnetic compatibility (EMC). For more information about EMC compliance, visit the ACMA website at <https://www.acma.gov.au/technical-standards#emc-standards>.

1.6 Frequency Band Reserved for Distress Beacons

Frequency band 406 to 406.1 MHz is reserved for use by distress beacons. Transmissions should not be made within this frequency band.

1.7 Health, Safety and Electromagnetic Compatibility in Europe

In the European Community, radio and telecommunications equipment is regulated by Directive 2014/3/EU. The requirements of this directive include protection of health and safety of users, as well as electromagnetic compatibility.

1.7.1 Intended purpose of product

This product is an FM radio transceiver. It is intended for radiocommunication in the Private Mobile Radio (PMR) or Public Access Mobile Radio (PAMR) services, to be used in all member states of the European Union (EU) and states within the European Economic Area (EEA).

1.7.2 Restrictions

This product can be programmed to transmit on frequencies that are not harmonized throughout the EU/EEA, and will require a license to operate in each member state.

This product can be programmed for frequencies or emissions that may make its use illegal. Where applicable, a license must be obtained before this product is used. All license requirements must be observed. Limitations may apply to transmitter power, operating frequency, channel spacing, and emission.

1.7.3 Declaration of conformity

Brief Declarations of Conformity appear in [Simplified Declaration of Conformity on page 45](#) of this manual. To download the formal declaration of conformity, go to <https://www.taitradio.com/our-resources/compliance>.

1.8 Interference with Electronic Devices



Warning Some electronic devices may be prone to malfunction due to the lack of protection from RF energy that is present when your radio is transmitting.

Examples of electronic devices that may be affected by RF energy are:

- aircraft electronic systems
- vehicular electronic systems such as fuel injection, anti-skid brakes, and cruise control
- medical devices such as pacemakers and hearing aids
- medical equipment in hospitals or health care facilities.



Switch off the radio before boarding an aircraft. Using your radio while in the air is not permitted.

Consult the manufacturer (or its representative) of any such electronic devices to determine whether electronic circuits in those devices will perform normally when the radio is transmitting.



Warning If you have a pacemaker:

- immediately turn off the radio if you suspect it is interfering with the pacemaker
- keep the radio at least 6 inches (15cm) from the pacemaker while the radio is on
- use the radio on the side opposite to the pacemaker to minimize interference
- never carry the radio in a breast pocket.

If there is interference between your hearing aid and the radio, please discuss an alternative solution with the hearing aid manufacturer.

1.9 Potentially Explosive Atmospheres and Blasting Areas



Warning Unless the radio is specifically certified for use in a potentially explosive atmosphere, turn off the radio before entering such an atmosphere. An explosion could cause serious injury or death. Examples of potentially explosive atmospheres include filling stations, and any environment where there are flammable liquids, gases, or dusts.



Warning Turn off the radio before approaching blasting caps, a blasting area, or any area where you are instructed to turn off a two-way radio. Obey all signs and instructions. Interference with blasting operations could cause serious injury or death.

1.10 Radio Installation and Operation in Vehicles



Warning Keep the radio away from airbags and airbag deployment areas. Do not install, charge, or place a radio near such areas. An activated airbag can propel a portable radio with sufficient force to cause serious injury to vehicle occupants. An airbag may not perform to specification if obstructed by a radio.



Warning To avoid damage to existing wiring, airbags, fuel tanks, fuel and brake lines, or battery cables, refer to the installation guide for the radio, and to the vehicle manufacturer's manual, before installing electronic equipment in the vehicle.

Using a handheld microphone or a radio while driving a vehicle may violate the laws and legislation that apply in your country or state. Please check the vehicle regulations in your area.

1.11 Vehicle Charger Installation and Operation

For detailed instructions necessary to the safe installation and operation of the vehicle charger, please refer to the documentation supplied with the vehicle charger.

1.12 Multicharger Safety Information



Warning This device must be connected to an earthed mains socket-outlet.

Norsk (no): Apparatet må tilkoples jordet stikkontakt.

Suomi (fi): Laite on liitettävä suojamaadoituskoskettimilla varustettuun pistorasiaan.

Svenska (sv): Apparaten skall anslutas till jordat uttag.

1.13 Electromagnetic Compatibility in European Vehicles

In the European Community, radio equipment fitted to automotive vehicles is regulated by Directive 72/245/EEC and its amendments. The requirements of this directive cover the electromagnetic compatibility of electrical or electronic equipment fitted to automotive vehicles.

1.14 Unapproved Modifications or Changes to Radio

The radio is designed to satisfy the applicable compliance regulations. Do not make modifications or changes to the radio that are not expressly approved by Tait. Failure to do so could invalidate compliance requirements and void the user's authority to operate the radio.

1.14.1 Attaching of labels



Warning Do not obstruct the vent hole on the battery or the vent hole on the radio chassis label. If the vent on the battery is obstructed, the battery may explode, causing personal injury and/or damage to property. If the vent on the radio is obstructed, audio quality and/or key function may deteriorate and radio seals may be damaged.



Tait recommends that you do not affix additional labels to the surfaces between the radio chassis and the battery. The fit between these surfaces is intentionally firm and any added thickness will damage the points of attachment between radio and battery. If you must attach a customized label, use only a thin gummed paper label applied to the bottom 25% of the radio chassis label and/or to the top 25% of the battery label. Do not obstruct the vent holes (see Warning above). Do not allow the paper label to extend beyond the recessed label area or to conceal relevant product information.

For additional details, see [Attaching a label to the radio on page 16](#).

1.15 Use of Lithium-ion Batteries



Warning A damaged battery can cause an explosion or fire, and can result in personal injury and/or property damage. To prevent personal injury and/or damage to property, read the important safety information supplied with the battery.

1.16 Short-circuiting Battery Contacts



Warning Do not short-circuit the battery contacts, neither intentionally nor accidentally, e.g. by placing the battery with conductive materials such as keys or jewelry inside a pocket or container. Short-circuiting the battery contacts can heat up the conductive material and cause personal injury and/or damage to property.

2 Before Using Your Radio

Before using your radio follow the instructions in this section to fit any additional labels, attach the antenna and belt clip, and charge the battery for the first time.

2.1 For Your Safety - Battery Warning



Warning This radio uses a Lithium-ion battery. If the battery is damaged or handled in an unsafe manner, it can cause personal injury and/or damage to property. Read the important safety information included with your battery.

2.2 Attaching Labels to the Radio or Battery



Warning Do not cover the battery vent hole or the vent hole on the radio chassis. If the vent on the battery is obstructed, the battery may explode, causing personal injury and/or damage to property. If the vent on the radio is obstructed, audio quality and/or key function may deteriorate and radio seals may be damaged.



Tait recommends that you do not affix additional labels to the surfaces between the radio chassis and the battery. The fit between these surfaces is intentionally firm and any added thickness will damage the points of attachment between radio and battery.

2.2.1 Attaching a label to the radio

If required, attach any label in the label recess on the bottom of the front face of the radio ①.

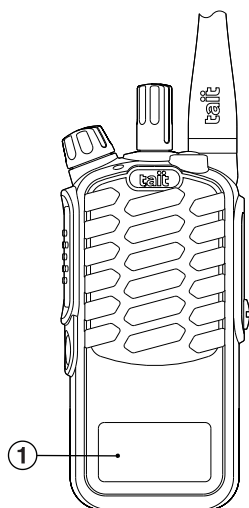


Figure 2.1 Label recess (0-Key radio)

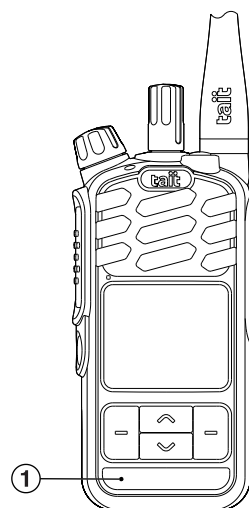


Figure 2.2 Label recess (4-Key radio)

2.3 Charging the Battery Before First Use

Before using your battery for the first time it must be charged. Follow the instructions included with your Tait charger, or see [Charging and Caring for Batteries on page 40](#).



For best charging performance, switch off the radio before placing it in the charger.

2.4 Attaching or Removing the Battery



If the battery has been attached or removed while the radio is turned on, turn the radio off and then on again before use.

To attach the battery:

1. Rotate the power/volume control switch counterclockwise to turn off the radio.
2. Holding the radio firmly, align the back of the battery with the back of the chassis.
3. Place the two lugs at the bottom edge of the battery into the two slots in the bottom of the front panel.



Fit the bottom edge of the battery to the radio, then the top edge. Attempting to fit the top edge first may damage the contacts.

4. Lightly press the top of the battery towards the radio until the battery catch clicks.
5. Make sure that the battery is firmly in position.

To remove the battery:



The battery is secured to the radio by a battery catch on the radio's rear panel.

1. Rotate the power/volume control switch counterclockwise to turn off the radio.
2. Slide the battery catch up.
3. From the sides, pull the battery away from the radio.

2.5 Attaching or Removing the Antenna



Warning Do not change the antenna in a hazardous location. This could cause an explosion, which could cause serious injury or death.

Attaching the Antenna

Before using the radio, screw the antenna clockwise into the antenna connector. The antenna should be screwed sufficiently tight so that it doesn't unscrew easily. This is important as it creates a seal.

Removing the Antenna

Use a firm grip and turn the antenna counterclockwise half a turn. Use a lighter grip to fully unscrew the antenna, and carefully remove it.

2.6 Attaching or Removing the Belt Clip

To attach the belt clip to the radio:

1. Slide the belt clip into the two grooves at the top of the battery.
2. Press down on the belt clip until it snaps into place.

To remove the belt clip from the radio:

1. Insert a flat screwdriver blade or similar flat object under the lip of the release lock (that is, between it and the metal slider).
2. Lift the release lock up (away from the metal slider) and hold it in position.
3. Slide the belt clip out.

2.7 Installing an Audio Accessory

Audio accessories plug in to the radio's accessory connector. The accessory connector is protected by a cover, which needs to be removed before an accessory can be installed. For location of the connector see [Radio Controls and Indicators on page 19](#).



The accessory cover protects the accessory connector from electrostatic discharge. Keep the cover in place unless the connector is in use.

To install an audio accessory:

1. Use a coin or other blunt object to loosen the accessory cover screw.
2. Remove the accessory cover and store it in a safe place.
3. Plug the accessory into the accessory connector.
4. Tighten the screw on the accessory connector.

3 Radio Controls and Indicators

The locations and functions of the radio controls and indicators are detailed below.

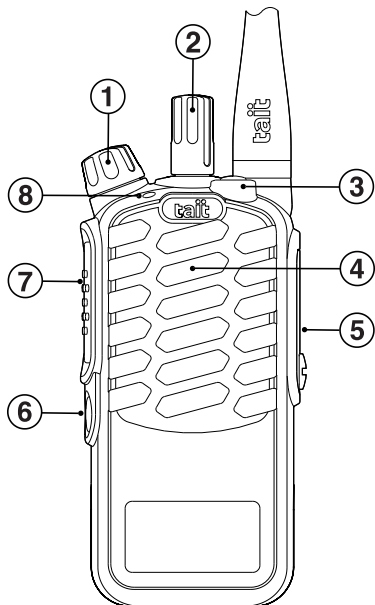


Figure 3.1 O-Key radio

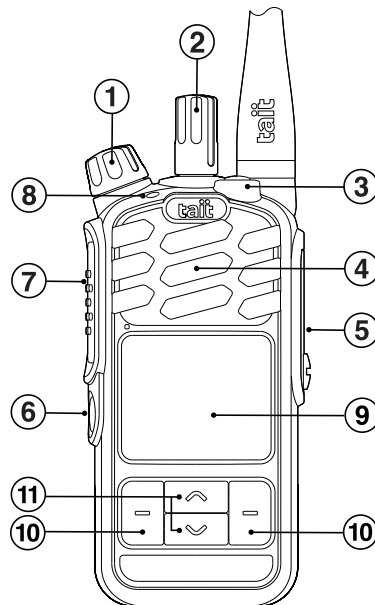


Figure 3.2 4-Key radio

Table 3.1 Radio controls and functions

	Name	Function
1	Power on/off and volume control knob	Rotate to: • turn the radio on or off • change the output volume
2	Channel knob	Channel selection
3	Emergency mode button	Press to begin an emergency call
4	Microphone/Speaker	Audio input/output
5	Accessory connector	Remove cover to connect an accessory
6	Function key	May be programmed for frequently used options
7	Push to Talk (PTT) key	Press and hold to transmit, release to listen
8	Status indicator LED	Color indicates device status
9	User display	View device operation and configuration information
10	Menu selection keys	Press to select menu options
11	Menu up and down scroll keys	Press to scroll up and down through the menu options

3.1 Radio Display Icons

The icons seen on the radio display, **if the radio has a display fitted**, depend on the mode in which the radio is operating and the way it is programmed. [Table 3.2 below](#) details the icons that may be seen on the display.

Table 3.2 Radio display icons

Icon	Description
	Indicates the charge status of the battery
	Indicates the battery is charging
	Scanning: your radio is monitoring a group of channels or talkgroups for activity
	Scanning: your radio is monitoring a group of channels for activity, and the currently selected channel is a member of the scan group
	Silent operation: your radio's audible tones have been turned off
	Transmit: your radio is transmitting
	Automatic selection of channels or zones is active
	Manual selection of channels or zones is active
	The voice-inversion scrambler is turned on for analog channels, or the encryption key is in use for DMR channels. The radio's transmissions are encrypted
	Signal strength indicator: the more bars, the stronger the signal received by the radio
	Use the scroll keys to move through a list or access a pre-programmed menu
	Queueing: there are calls or messages in the queue
	Monitor or squelch override: monitor or squelch override is turned on
	Repeater talkaround: your radio is operating in repeater talkaround mode, or you are on a simplex channel
	Zone: this letter represents the zone in which your radio is operating, where A is zone 1, Z is zone 26 (for example, K represents zone 11)
	Bluetooth Add more detail

3.2 Status Indicators

The radio has one multicolor LED, located on the top edge of the radio body by the volume knob, to indicate the current state of the radio.

LED color and state	Radio state
Red, On	In call, Transmitting
Green, On	In call, Receiving
Green, Flashing (approximately once every 3 seconds)	In call, Idle
Orange, On	In service
Orange, Flashing (approximately once every 3 seconds)	No service

3.3 Low Battery Warning

When the battery is low, your radio warns you in the following ways:

- the battery symbol on the radio display looks empty
- the status LED on the radio slowly flashes red
- a high-pitched beep sounds

Recharge or replace the battery as soon as possible.

When the battery is completely empty, the message "Battery is flat" appears on the display (if fitted). The radio emits a long, low-pitched beep and then stops working. Turn off the radio.



Do not allow the radio battery to fully discharge every time it is used, this will shorten the service life of the battery.

4 Radio Operation



Radio features are dependent on radio model, configuration, and operating mode in use, Analog or Digital Mobile Radio (DMR).



0-Key radio models are unable to access menu options. Operation of these radios is limited to the preset functionality of the radio controls only.

4.1 Powering On and Off

Rotate the volume control knob to turn the radio either on or off.

When the radio is first turned on:

- the radio gives two short beeps
- a brief message appears on the display.

The radio is ready for use once the status LED glows orange. If the status LED is flashing orange, the radio is out of service and calls cannot be made.

4.2 Navigating the Menus

To access the menu:

1. Press the **right selection key** whenever the word Menu appears above it.
2. Use the **scroll keys** to move through menu items.
3. When the desired menu item is highlighted, press **Select** to open it.

To exit a menu:

Press the **left selection key** when the word Cancel or Back appears above it.

4.3 Adjusting the Volume

Use the volume knob to control the volume level of speech, keypress and audible tones.

For customizing volume settings see [Customization Settings on page 39](#).

4.4 Selecting Channels, Zones and Talkgroups

Before making a call to other users you may be required select the correct Channel, Zone or Talkgroup.

4.4.1 Selecting a Channel

A channel is a specific frequency that is available for users to communicate on.

To select a channel using the channel selection knob:

- rotate the channel selection knob until the desired channel is selected.

To select a channel using the main menu:

1. Press **Menu** and select **Channels**.
2. Use the scroll keys to highlight the desired channel and then press **Select**.

Automatic channel selection

If the radio is configured to change channels automatically the automatic mode icon  is shown on the display .

Selecting a channel manually will end automatic channel selection mode. The manual mode icon  will then be shown on the display.

4.4.2 Selecting a Zone

A zone is a collection of channels. Zones are a way of grouping channels, for example, by public safety agency type, or by geographical region.

To select a zone:

1. Press **Menu** and select **Zones**.
2. Use the scroll keys to highlight the desired zone, then press **Select**.

The name of the zone appears below the channel name in the radio display or the zone icon appears as one or two letters in the top right corner of the display

4.4.3 Selecting a Talkgroup

A talkgroup is a collection of radio users with whom you want to have private conversations.

To select a talkgroup:

- Press **Menu** and select **Talkgroups**.
- Use the scroll keys to highlight the desired talkgroup, then press **Select**.

During radio configuration a talkgroup can be assigned to a channel, that channel may be named to reflect its talkgroup association. When making a call, the talkgroup name will appear.

4.5 Selecting a Scan or Voting Group

Scan Groups

The scan function monitors a programmed group of channels, looking for activity. While the radio is scanning for activity, the scanning icon  appears on the display. When activity is detected on a channel in the scan group, the radio stops on that channel. The radio temporarily disables mute, and you can hear the call. Scanning resumes once the channel is no longer busy.

Voting Groups

The channels in a voting group all carry the same traffic, but from different repeaters. As the radio moves in and out of different repeater coverage areas, the best communication channel is automatically selected for use.

This channel is known as the 'home' channel, and will be the channel used to make and receive calls. While voting is active, the scanning icon  appears on the display.

To select a scan or voting group:

1. Press **Menu** and select **Channels**
2. Scroll to the required scan or voting group.

The scan or voting group is shown as being a single channel item; for example, "Scan1".

3. Press **Select**

The scanning icon  will appear on the display.

4.5.1 Suspending a channel from a voting group

Does this work as follows?

Users may be able to use the function key programmed for nuisance delete to temporarily delete one of the channels from the voting group.

When that voting group is next selected, or after the radio has been turned off and then on, the deleted channel is again part of the voting group.

Alternatively, the function key programmed for voting may be programmed so that a short key press turns on voting, and a long key press activates nuisance delete.

Press and hold the function key programmed for voting to remove the current channel from the voting group.

If the operation has been successful, the message "Channel nuisance deleted" appears on the display.

4.6 Using the PTT Key

When using the T02-P to make or answer calls:

1. Hold the T02-P about 2 inches (5 cm) from your mouth.
2. Press and hold the PTT key throughout transmission and:
 - avoid speaking before pressing the PTT key to prevent cutting off the start of your sentence
 - refrain from shouting.
3. Release the PTT key when you have finished talking.

4.7 Making a Call



DMR calls have an inactivity timeout. If a pause in the conversation exceeds the timeout, the next press of the PTT key will establish a new call.

4.7.1 Making a call using preset channels and talkgroups

To make a call:

1. Select a **Zone** if required. See [Selecting a Zone on page 23](#).
2. Select a **Channel** or **Talkgroup**. See [Selecting a Channel on page 23](#) or [Selecting a Talkgroup on page 23](#).
3. Check that the channel is clear. If the status LED is glowing green, the channel is busy and you may not be able to transmit. Wait until the status LED has stopped glowing green.
4. Press the PTT key and speak into the microphone.

On a Digital Mobile Radio (DMR) channel wait for the go-ahead double-beep (if programmed) before speaking.

While you are transmitting, the status LED glows red and the transmit  icon appears on the display.
5. When you have finished speaking, release the PTT key.



You cannot change channels while transmitting.

4.7.2 Making an individual call



This feature is available for DMR channels only.

To make a call to one person:

1. Press **Menu** and select **Individual call**.

If no address book is configured, a preconfigured list appears. The person to whom you last made an individual call is highlighted.

2. Scroll to the person you want to call and press the PTT key to make the call immediately.

Alternatively, you can press **Call** and then the PTT key.

4.7.3 Limiting call time

Your radio may limit the amount of time you can talk (transmit) continuously. This is known as the 'transmit timer' or 'time-out timer' and allows other radio users to make calls on that channel.

The radio warns you before the transmit timer expires by beeping three times. The message "Transmit timeout imminent" appears in the display.

If the transmit timer has timed out, you must release the PTT key before you can transmit again.



Your radio may be unable to transmit for a short time after the transmit timer has expired.

4.8 Making an Emergency Call

If activated, emergency mode can be accessed by using a programmed function key.

An emergency call is sent to the dispatcher or some other predetermined location as defined during T02-P configuration.

To activate emergency mode:

1. Press the orange emergency mode button.
2. Reset the T02-P to normal operation at any time by giving a long press to the emergency mode button.

While emergency mode is active, your T02-P may automatically cycle between receive and transmit so that the person or group receiving the emergency call can hear any nearby activity.



A request to make an emergency call to a group, with an existing call in progress, will end the normal group call and start the emergency call instead.

4.9 Receiving a Call

An incoming call is indicated by:

- an audible tone
- a green illuminated status LED
- notification on the display.

To answer the call press the PTT key and speak into the microphone.

While you are transmitting, the status LED glows red and the transmit icon  appears on the display.

4.10 Call Alert

Users can let other radio users know they wish to communicate by sending them a call alert page. When the other radio user receives the call alert page, they can call back when it is convenient.

If on a DMR conventional channel, users can send a call alert to any other radio on the same channel.

To send a call alert page:

1. Press **Menu** and select **Services > Call alert**.

If an address book is configured, it's possible to select to either dial a number or show the address book. Otherwise a preset list of radios will appear.

2. Select the desired radio to page.
3. Press **Send to**.



A message showing the radio destination appears on the display. The LED glows red, and a notification indicates whether the message was sent successfully.

If an acknowledgment is not received from the recipient's radio, users will have the option of either canceling or resending the request.

If a call alert page is received from another radio user, Call alert and the caller name appears onscreen.

To answer a call alert page:

- select **Call** to return the page, or
- select **Clear** to delete the page.

If the call alert page is missed, a call alert entry is added to the queue, see [Checking the Queue on page 29](#).

4.11 Radio Monitor

The radio unit monitor feature can be used when concerned about the safety of a radio user on the same DMR conventional channel. When sending a radio-unit monitor request to a radio, it calls the user back without giving any indication that it is making a call. Users can hear any activity near the radio for up to 120 seconds.

To send a radio unit monitor request:

1. Press **Menu** and select **Services > Radio monitor**.

If an address book is configured, it is possible to select to either dial a number or show the address book. Otherwise a preset list of radios will appear.

2. Scroll to the radio to be monitored.
3. Press **Send to**.

A message showing the radio destination appears on the display and a notification indicates whether the message was sent successfully.

If the other radio has received the user's request, it will now call them so they can monitor activity near the radio.

If an acknowledgment is not received from the recipient's radio, the user will have the option of either canceling or resending the request.

4.12 Sending and Receiving Status Messages

A status message is sent to another party to indicate current activity or location, such as "enroute" or "at lunch". If the radio receiving the message has been programmed with the same status messages, it will decode and display the message. If a status message is received, the message is automatically queued, since a response is not expected. Status messages can also be used to control external devices.

To send a status message:

1. Press **Menu** and select **Services > Status update**.
2. In the Status update menu, scroll through the list of status messages until the desired message appears.
3. When a message has been chosen, press **Select**.

The call details appear on the display.



Depending on how radio is programmed, the message may be sent directly to a pre-configured radio or group, or the user will be presented with options to select a destination.

4.13 Checking the Queue

If you have missed an incoming call or call alert, or if you received a status message or text message, it may be stored in the queue. The queue icon appears  and information about the missed call or message may be shown on the display.

The queue can be programmed to store multiple calls or messages or just the last call or message.



Your radio may be also programmed to automatically view the full status update or text message on receipt.

If there are calls or messages in the queue, the radio may emit a warble tone for a period of time. The notification starts again when the radio is restarted or another call is received.

To access the queue:

1. If the call or message information is not shown already, press **Menu** and select **Call queue**.
2. Use the scroll keys to move through the calls or messages in the queue until the item you want appears.
3. Select **Options**.

The options available depend on the type of call:

- for a voice call, select **Call** to return the call
- for a status message or a text message, select **View** to read the message, **Reply** to reply, or **Call** to return the call.

Your radio may be also programmed to automatically view the full status update or text message on receipt.

You can also delete the selected call or messages, or delete all queued calls and messages.

4.14 Radio Inhibit

Use the radio inhibit (stun) feature to make another radio on the system inoperable.

To the user of the inhibited radio, it appears as though the radio is idle, but it will be inoperable. The radio remains inoperable even if it is turned off and then on again.

The radio cannot return to operation until it receives an uninhibit (revive) request.

In order to use this feature, the radio must be configured to receive inhibit commands on a channel or talkgroup.



When a radio is inhibited, the encryption keys may be automatically deleted.

To send a radio inhibit request:

1. Press **Menu** and select **Services > Radio inhibit**.
2. Scroll to the radio to be made inoperable.
3. Select **Send to**.

On the inhibited radio, "Radio stunned" appears on the display, indicating the radio has been immobilized.

To send a radio uninhibit request:

1. Press **Menu** and select **Services > Radio uninhibit**.
2. Scroll to the radio to be made operable.
3. Select **Send to**.

The uninhibited radio will briefly display the message "Radio revived". The radio returns to normal operation.

4.15 Location Services

Expand this section once more is known.

If your radio is connected to the receiver of a satellite navigation system, you can view location information such as latitude and longitude, true course, speed, and coordinated universal time.

Your radio can also display Universal Transverse Mercator (UTM) information such as the UTM zone, and northing and easting coordinates.

To access location services:

1. Press **Menu** and select **Location svcs > Own location**.
2. Use the scroll keys to scroll through the Own location displays.
3. Press **Exit** to exit the location display.

5 Using a Bluetooth Device

If the Bluetooth feature is available, you can connect a Bluetooth device to your radio using the device menu or a function key (if programmed).



When you have selected a menu option in the Bluetooth device menu, you can still receive and reply to calls without interrupting the selected operation.

5.1 Bluetooth Device Compatibility with Tait Radios

Bluetooth wireless devices operate with Tait radios, provided the accessory:

- is compatible with the Bluetooth Specification Version 2.0 or higher. Tait recommends Bluetooth Specification Version 2.1 or higher
- includes Bluetooth device Profile (HSP) adopted version 1.1 or 1.2, or Bluetooth Handsfree Profile (HFP) version 1.5 or 1.6.

5.2 Wearing the Bluetooth Device

Bluetooth devices come as an over-the-head accessory, or as a remote speaker microphone.

To get the best performance from your Bluetooth device:

1. Do not block the device's internal antenna (see the Bluetooth device's user documentation). The human body can interfere with a Bluetooth signal.
2. If you usually use your radio with your right hand, wear your over-the-head Bluetooth device on your right ear.
3. Avoid coming in contact with the internal antenna of a Bluetooth device or radio.

5.3 Pairing and Disconnecting a Device



Before attempting to connect a Bluetooth device, Tait recommends that the device is fully charged. Refer to the Bluetooth device installation instructions for charging instructions.

Pairing creates a unique and encrypted wireless link between the Bluetooth-capable radio, and the Bluetooth device. To use a device with your radio, the devices must first be paired.

When you connect to a for the first time, you need to instruct the radio to search for compatible devices using Bluetooth wireless technology. The search should take less than one minute.

To pair a device with the radio:

1. Turn on the radio.
2. Put the radio into pairing mode. Refer to the Bluetooth device installation instructions for steps on how to do this.
3. Press **Menu** and select **> Find new devices**.
The **New devices** menu opens, and while the radio searches for the new Bluetooth device, the message **Searching ...** appears.
4. Select **Connect** when the required accessory appears in the list of new Bluetooth devices, then **Yes** to add the device to **My devices**.
The message **Connecting** appears, while the radio attempts to pair with the Bluetooth device.
5. When the message **Calling. Answer on device** appears, press the **Answer** button on the Bluetooth device to confirm the connection.
6. Repeat the previous steps to add other Bluetooth devices.
While the device is connected the icon  appears on the display.

5.4 Managing Your Devices

Add detail here once more is known

5.5 Disconnecting a Device

To disconnect the Bluetooth device from your radio:

1. Press **Menu** and select **> Disconnect**.
2. Alternatively, in the **My devices** menu select **Options > Disconnect**.

5.6 Reconnecting a Device

Your radio may be programmed so that each time the Bluetooth device is turned on, it will automatically reconnect to the radio.

To set automatic device reconnection:

1. On the radio, press **Menu** and select **> Reconnect last**.
The radio then prompts you to connect to the Bluetooth devices in My devices, in priority order.
2. Select **Yes** to connect, or **No** to choose another Bluetooth device.

5.7 Changing the way your Device Reconnects

You can use the Power-on option menu to change the way your radio reconnects with a Bluetooth device when the radio is first turned on. The choices are:

- None: The radio does not connect to any Bluetooth devices, and you will need to manually connect or reconnect to your device
- Reconnect last: The radio connects to the previously connected Bluetooth device
- Connect: The radio will attempt to connect to the Bluetooth devices in My devices, in priority order

To change the power-on option:

1. Press **Menu** and select > **Options** > **Power-on option**, and change to the required option.

6 Analog Channel Operating Features

The following sections detail features that are only available when operating on a conventional analog channel. Does automatically resending calls feature exist?

6.1 Setting the Radio's Status

The radio may be (can it do this?) able to maintain a record of its current status. This status may be sent with outgoing calls programmed to contain status information. If the radio receiving the call has been programmed with the same status messages, it will decode and display its status. The status indicates the current activity or location, such as "en route" or "at lunch".

To set the radio's status:

1. Press **Menu** and select **Services > Status update**.
2. In the Status update menu, scroll through the list of status messages until the desired message appears.
3. Press **Select**. The message "Status updated" appears on the display.

6.2 Monitor and Squelch Override

The monitor function overrides some or all of the radios' mutes to hear if there is any traffic on a channel before making a call.

The squelch override function overrides the squelch (carrier) mute to hear all noise on a channel, including weak signals that are below the programmed squelch threshold.

To turn monitor override on and off:

1. Press **Menu** and select **Radio settings > Functions > Monitor**.
2. Scroll to **On** or **Off** and press **Select**.

While monitor is on, the LED slowly flashes green and the monitor icon  appears on the display.

The radio may be programmed so that monitor turns off automatically after a short time.

To turn squelch override on and off:

1. Press **Menu** and select **Radio settings > Functions > Squelch o'ride**.
2. Scroll to **On** or **Off** and press **Select**.

While squelch override is on, the LED flashes green, and the squelch override icon  appears on the display. Squelch cannot be overridden if the radio is scanning.

6.3 Repeater Talkaround

Repeater talkaround allows users to bypass the radio repeater and communicate directly with another radio on an analog channel. This can be done, for example, when the radio is out of range of the repeater, if the repeater is busy, or it stops working.

While repeater talkaround is active, all transmissions are made on the receive frequency of the channel currently in use.

To turn on repeater talkaround:

1. Select the required channel.
2. Press **Menu** and select **Radio settings > Functions > Talkaround**.
3. In the Talkaround menu, choose **On**.
4. Press **Select**. The message "Talkaround activated" appears briefly.
The repeater talkaround icon  appears on the display.
5. Proceed with the call.

To turn talkaround off, select **Off** from the Talkaround menu, or change channels.

7 DMR Channel Operating Features

This section details features that are only available when operating on a DMR channel.

7.1 Making a Preset Call

The radio may be programmed to use a function key to initiate a call to an individual or group that may or may not be part of the current talkgroup, e.g. the dispatcher.

7.2 Text Messaging

7.2.1 Sending a text message

The radio may be programmed to send preset text messages.

To send a preset text message:

1. Press Menu and select **Services > Text message > Preset message**.
In the Preset message menu, a short label representing each message is displayed.
2. Scroll through the list of preset message labels until the desired one appears.
3. Press **Select**, the chosen text message is displayed.
4. Press **Send** to send the message.

7.2.2 Receiving a text message

If the radio has call queuing enabled, received text messages are stored and added to the queue. The radio may also be programmed to automatically display text messages when they are received.

For instructions on how to check the queue, and respond to messages, see [Checking the Queue on page 29](#).

8 Encryption

To make communication with other users on your system completely private, the radio can encrypt outgoing calls using a confidential encryption key. The receiving radio must have the same encryption key installed to hear the encrypted call.

The encryption key feature is available only for DMR networks. On analog networks, a voice-inversion scrambler is used for encryption.



Encryption options are enabled during radio configuration, not all options may be present on your radio.

What will happen with encryption if there is a mixed fleet of O-Key and 4-Key radios? Do all features work as follows?

8.1 Encrypting Outgoing Calls

When encryption is turned on, outgoing calls are encrypted on networks programmed for encryption, and the encryption icon  is shown on the display.

Incoming calls will still be decoded, if the correct encryption key required to decode the call is stored in the radio, independently of this setting.



When transmitting or receiving an unencrypted call on an encrypted network, the  disappears. The radio may also be programmed to issue an audible alert.

8.1.1 Turning outgoing call encryption on or off

To turn encryption on or off:

1. Press **Menu** and select **Security > Encryption**.
2. Select **On** or **Off** and press select.

The message "Encryption activated" (or deactivated) appears on the display.

8.2 Making an Encrypted Call

To make an encrypted call:

1. Select the desired network, channel, or workgroup to operate on.
2. Check that encryption is on ( is showing on the display).
3. Press and hold the PTT key to transmit.

8.3 Receiving Encrypted Calls

When receiving an encrypted call, and the encryption key required to decode the call is stored in the radio, call mute is temporarily disabled and speech can be heard.

During the call the encryption icon  will be shown on the display.

If the key required to decode the call is not stored in the radio, the radio remains muted and the message "Key fail" is displayed.

8.4 Removing Encryption Keys from the Radio

Removing encryption keys from the radio will prevent any outgoing or incoming encrypted calls from being heard.



If you attempt to transmit with encryption turned on but don't have any keys loaded, the message "Key fail" appears.



Warning When emergency mode is activated, or when your radio is immobilized ('inhibited'), your encryption keys may be automatically deleted from your radio.

To delete a single encryption key:

1. Press **Menu** and select **Security > Zeroize key**.
2. Scroll to the key to be deleted and press **Select**.

The message "Single key zeroized" briefly appears in the display.

To delete all encryption keys:

1. Press **Menu** and select **Security > Zeroize all**.

The message "Zeroize all keys?" appears in the display.

2. Press **OK**.

The message "All keys zeroized" briefly appears in the display and  no longer appears.

9 Customization Settings

9.1 Audible Alert Options

9.1.1 Changing to Silent Operation

When silent operation is on, **S** appears on the display. All the radio's audible tones are turned off and only channel traffic can be heard.

To change to silent operation:

1. Press **Menu** and select **Radio settings > Alert settings > Silent operation**.
2. Use the scroll keys to either On or Off and press **Select**.

9.1.2 Changing the Volume of all Audible Indicators

Audible indicators include incoming call tones, warning tones, and confirmation tones.

To change the volume of all audible indicators:

1. Press **Menu** and select **Radio settings > Alert settings > Indicator level**.
2. Scroll to High or Low and press **Select**.

9.1.3 Changing the Volume of Keypress Tones

Keypress tones are the audible tones that are output when a key is pressed.

To change to volume of keypress tones:

1. Press **Menu** and select **Radio settings > Alert settings > Keypress tones**.
2. Scroll to either Off, Low, or High and press **Select**.

9.2 Display Settings

To adjust the display brightness:

1. Press **Menu** and select **Display settings > Backlight level**.
2. Scroll to High, Medium or Low and press **Select**.

To turn the backlight on or off:

1. Press **Menu** and select **Radio settings > Display settings > Backlighting**.
2. Scroll to On or Off and press **Select**.

10 Charging and Caring for Batteries

This section describes how to charge and care for your Tait radio battery to ensure safe operation, maximum performance, and prolonged battery life.

The battery, or a radio fitted with a battery, is charged in the desktop charger. It can be removed from the charger at any time without harming the battery, the radio, or the charger.



Do not expose a battery to very high or very low temperatures for extended periods of time. Doing so will shorten the usable life ('service life') of the battery.

- Very high temperature: above 140° F (60° C)
- Very low temperature: less than -4° F (-20° C)

10.1 Before Using the Charger



Warning Observe the following handling recommendations to prevent personal injury and/or equipment damage:

- read the Li-ion Battery Safety Information included with your battery, and follow the instructions it provides. Incorrect use of a Li-ion battery can cause explosion or fire
- do not short-circuit the battery contacts intentionally or accidentally, for example, by placing the battery with conductive materials such as keys or jewelry inside a pocket or container. Short-circuiting the battery contacts can cause the conductive material to heat up
- do not obstruct the vent hole(s) on the battery. If the vent on the battery is obstructed the battery may explode



Check the battery label and charger label to see if the charger is compatible with the battery.



Turn the radio off before removing the battery, and turn it on again after attaching the battery. This ensures that the radio powers down and up correctly. Failing to follow this procedure may require the radio to be turned off then on again to operate correctly

10.2 Charger Status Indicators

There are three colored charge status indicators on the front of the desktop charger. [Table 10.1 below](#) details the status indication shown during operation.

Table 10.1 Charge status

Indicator	Color	Description
	Green, red and orange	Momentary illumination. The charger has been connected to a power supply
	Red	The battery is charging
	Green	Charging complete. Remove the battery or leave it in the charger
	Orange	The battery temperature is outside the normal charging range. Charging will start or resume once the temperature is within normal limits There is a fault. Contact your dealer
	Red and/or orange flashing	If the LEDs for all charger slots continuously flash orange, or red then orange, the charger itself may be faulty. Contact your dealer
None	All off	There is a fault. Contact your dealer

10.3 Charging Temperatures

Charging only starts when the battery temperature is between **41° F to 104° F (5° C to 40° C)**.



The charging rate is reduced at temperatures between **41° F to 50° F (5° C to 10° C)**. The battery will still charge at these temperatures, but charging will take longer.

To achieve the best results when charging the battery:

- before beginning, make sure that the battery temperature is close to the room temperature in which the battery is to be charged
- charge within the optimal temperature range, between 50° F and 77° F (10° C and 25° C), if possible.

10.4 Leaving the Battery on Charge

The battery, or a radio with a battery attached, can be left in the charger once charging is complete. Leaving a battery in the charger will not overcharge or damage it.

10.5 Charging the Battery



Fully charge the battery before using it for the first time.

To charge the battery:

1. Connect the charger to the correct Tait power adapter and power it on.
2. Wipe excess moisture and dirt from the radio, radio contacts and battery contacts. See [General Care on page 44](#).
3. Place the battery, or a radio with a battery attached, into the charger. There is no need to remove a belt clip, antenna, or any accessory that is attached to the accessory connector.
 - a. The red charge indicator  turns on while the battery charges.
 - b. The green charged indicator  turns on when charging is complete.

If the battery is not charging see [Troubleshooting on page 43](#).

10.6 Storing Batteries

When not in use for a month or more, batteries should be stored correctly to prolong their life.

To correctly store the battery:

1. Remove the battery from the radio.
2. If storing for:
 - less than one month, fully charge the battery
 - longer than one month, charge the battery to about 30%.
3. Store in a cool dry place.



Batteries that have been stored for any length of time must be charged before being used.

10.7 Disposing of Batteries

When disposing of the battery:



- run the battery flat
- do so in an environmentally sensitive manner.

Please contact your radio provider for information on recycling programs in your area.

11 Troubleshooting

For troubleshooting basic issues with the T02-P, see [Table 11.1 below](#).

Table 11.1 Troubleshooting

Issue	Check the following
The radio does not power on	• Is the battery is firmly attached to the radio? • Is the battery is charged?
The battery is not charging	• Is the radio or battery seated properly in the charger? • Is the charger plugged properly into the originally supplied power supply? • Are the battery and charger contacts are clean? To clean, wipe the contacts with a dry lint-free cloth to remove any dirt, oil or grease.

12 General Care

The only radio maintenance required is ensuring the battery has sufficient charge and that the antenna and battery are not damaged.

To prevent permanent damage to the T02-P case, do not allow the T02-P to come into contact with detergents, alcohol, aerosol sprays, or petroleum based products.

12.1 Cleaning the Radio



Risk of permanent damage to the radio housing! Do not clean the radio with solvents or alcohol based products. This includes (but is not limited to) ethylene glycol (antifreeze), propanone (acetone), ethanol (methylated spirits), isopropyl alcohol, and pool chlorine (calcium hypochlorite).



Risk of internal damage! To avoid damaging the inside of the radio, do not allow excess liquid to enter the radio body (speaker grille, buttons, and connectors).



Health risk! Always use protective equipment (gloves, face mask) when handling bleach.

If you need to clean the T02-P:

1. Use a lint-free, dry cloth to remove surface dirt, oil, or grease.
2. Use an alcohol-free, antibacterial wipe to disinfect the radio.
3. Use a water-dampened, lint-free, microfibre cloth to remove any remaining dirt.
 - a. If the damp cloth is ineffective, dilute a (5 to 10%) solution of alcohol-free dishwashing liquid in clean water, on a cloth, to remove remaining dirt.
 - b. If the dishwashing liquid solution is ineffective, use a solution of one part household bleach to two parts clean water, on a cloth, to wipe away remaining dirt.



Do not immerse the T02-P in fluids.

12.1.1 Cleaning the battery contacts

If necessary, wipe the contacts of the battery with a dry, lint-free cloth to remove any dirt, oil or grease.



Do not scratch or scrape the contacts of the battery

Simplified Declaration of Conformity

EN Hereby, Tait International Limited declares that the radio equipment type TPXXXX is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

BG С настоящото Tait International Limited декларира, че този тип радиосъоръжение TPXXXX е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

ES Por la presente, Tait International Limited declara que el tipo de equipo radioeléctrico TPXXXX es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

CS Tímto Tait International Limited prohlašuje, že typ rádiového zařízení TPXXXX je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

DA Hermed erklærer Tait International Limited, at radioudstyrstypen TPXXXX er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelses-erklæringens fulde tekst kan findes på følgende internetadresse: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

DE Hiermit erklärt Tait International Limited, dass der Funkanlagentyp TPXXXX der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

ET Käesolevaga deklareerib Tait TPXXXX vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

EL Με την παρούσα ο/η Tait International Limited, δηλώνει ότι ο ραδιοεξοπλισμός TPXXXX πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

FR Le soussigné Tait International Limited, déclare que l'équipement radioélectrique du type TPXXXX est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

HR Tait International Limited ovime izjavljuje da je radijska oprema tipa TPXXXX u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

IT Il fabbricante, Tait International Limited, dichiara che il tipo di apparecchiatura radio TPXXXX è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

LV Ar šo Tait International Limited deklarē, ka radioiekārta TPXXXX atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

LT Aš, Tait International Limited, patvirtinu, kad radijo įrenginių tipas TPXXXX atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

HU Tait International Limited igazolja, hogy a TPXXXX típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

MT B'dan, Tait International Limited, niddikjara li dan it-tip ta' tagħmir tar-radju TPXXXX huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

NL Hierbij verklaar ik, Tait International Limited, dat het type radioapparaat TPXXXX conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

PL Tait International Limited niniejszym oświadczam, że typ urządzenia radiowego TPXXXX jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

PT O(a) abaixo assinado(a) Tait International Limited declara que o presente tipo de equipamento de rádio TPXXXX está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

RO Prin prezenta, Tait International Limited declară că tipul de echipamente radio TPXXXX este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

SK Tait International Limited týmto vyhlasuje, že rádiové zariadenie typu TPXXXX je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

SL Tait International Limited potrjuje, da je tip radijske opreme TPXXXX skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

FI Tait International Limited vakuuttaa, että radiolaitetyypin TPXXXX on direktiivin 2014/53/EU mukainen. EU-vaatimusten mukaisuus-vakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>

SV Härmed försäkrar Tait International Limited att denna typ av radioutrustning TPXXXX överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <https://www.taitcommunications.com/our-resources/compliance/declarations-of-conformity>