

XT2619-1 XT2619-2

XT2619-3 XT2619V

User Guide

To best view this guide, download a PDF reader app, then open the guide in the app.



Contents

01 Get started

- [First look](#)
- [Stylus](#)
- [Flex view](#)
- [Insert the SIM and microSD cards](#)
- [Power on and off](#)
- [Sign in](#)
- [Connect to Wi-Fi](#)
- [Choose one or more profiles](#)
- [Check your battery charge level](#)
- [Copy data from your old phone](#)
- [Navigate your phone](#)
- [Improve battery life](#)
- [Care for your phone](#)
- [Take care of your phone](#)

02 Learn the basics

- [What's new in Android 16?](#)
- [External display basics](#)
- [Home screen on the main display](#)
- [Help & more](#)
- [Search](#)
- [Notifications](#)
- [Volume](#)
- [Modes](#)
- [Lock screen](#)
- [Quick Settings](#)
- [Speak](#)
- [Gestures](#)
- [Stylus shortcuts](#)
- [Handwrite with a stylus](#)
- [Picture-in-Picture](#)

03 Personalize your phone

- [Redecorate your home screen](#)
- [Redecorate your external display](#)
- [Customize your control center](#)
- [Set lock screen preferences](#)
- [Add accounts to your personal or work profile](#)
- [Add another user](#)
- [Discover Moto](#)
- [Digital wellbeing & parental controls](#)
- [Safety & emergency](#)

04 Apps

- [Add, update & personalize apps](#)
- [Phone](#)
- [Messages](#)
- [Google Gemini](#)
- [Chrome™](#)
- [Camera](#)
- [Photos](#)
- [Moto](#)
- [Moto AI](#)
- [Notes](#)
- [Family Space](#)
- [Moto Unplugged](#)
- [More apps](#)

■ **05 Connect, share, pay & sync**

[Connect with Wi-Fi](#)

[Mobile network](#)

[Connect through Bluetooth](#)

[Connect with Smart
Connect](#)

[Connect to your car](#)

[Pay with your phone](#)

[Share files with your
computer](#)

[Virtual Private Network
\(VPN\)](#)

[Share your data connection
by USB cable](#)

[Share files with Quick Share](#)

[Power sharing](#)

[Print](#)

[Sync to the cloud](#)

[Cast to a TV](#)

[Use a microSD card](#)

[Airplane mode](#)

■ **06 Protect your phone**

[Security & privacy](#)

[Google privacy & security](#)

[App pinning](#)

[Backup & restore](#)

[App safety](#)

[Data usage](#)

■ **07 Troubleshoot your phone**

[Restart or remove an app](#)

[Restart your phone](#)

[Phone feels warm or hot](#)

[Check for software update](#)

[Reset](#)

[Free up storage](#)

[Stolen phone](#)

[Unknown tracker alerts](#)

[Find the IMEI number](#)

■ **08 Accessibility**

[Create a shortcut](#)

[Make your phone speak](#)

[Speak to your phone](#)

[Change your phone's
display](#)

[Change your phone's
sounds](#)

[Hearing devices](#)

[Hearing aids \(U.S. only\)](#)

■ **09 Get more help**

[Where is my legal, safety &
regulatory information?](#)

[Service & repair](#)

[Copyright & trademarks](#)

Hot topics

Take a tour of your phone's great features. Swipe up from the home screen and tap the **Moto** folder >  **Moto** >  > **Tips** > **Getting started**. Or tap the floating icon  if it appears on your screen.

Tip: To view some of these topics on your phone, swipe up from the home screen and tap  **Settings** > **Help**. For FAQs and other phone support, visit www.motorola.com/support.

- » [What's new in Android 16?](#)
- » [Personalize your phone](#)
- » [Quick Settings](#)
- » [Add, update & personalize apps](#)
- » [Camera](#)
- » [Moto](#)
- » [Moto AI](#)
- » [Notes](#)
- » [Protect your phone](#)
- » [Speak](#)
- » [Connect to Wi-Fi](#)
- » [Connect through Bluetooth](#)
- » [Connect with Smart Connect](#)
- » [Sync to the cloud](#)

Stylus features

- » [Stylus](#)
- » [Stylus shortcuts](#)
- » [Handwrite with a stylus](#)

To view the SAR and/or PD values for your phone, visit www.motorola.com/sar.

SAR

This product meets the applicable national or international RF exposure guidance (SAR guideline) when used normally against your head or, when worn or carried, at a distance of 5mm from the body. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body. The SAR guideline includes a considerable safety margin designed to assure the safety of all persons, regardless of age and health.

To view additional information, visit www.motorola.com/rfhealth.

Before using your phone, please read the legal information. Swipe up from the home screen and tap  **Settings** > **About phone** > **Legal information**.

LabEntry_03Nov2025

Get started

- » [First look](#)
- » [Stylus](#)
- » [Flex view](#)
- » [Insert the SIM and microSD cards](#)
- » [Power on and off](#)
- » [Sign in](#)
- » [Connect to Wi-Fi](#)
- » [Choose one or more profiles](#)
- » [Check your battery charge level](#)
- » [Copy data from your old phone](#)
- » [Navigate your phone](#)
- » [Improve battery life](#)
- » [Care for your phone](#)
- » [Take care of your phone](#)

LabEntry_03Nov2025

01

First look

Let's get started. We'll guide you through startup and tell you a bit about your phone's features.

Phone front

Use a digital headset: To use a digital headset, you'll need one with a USB-C connector. If using a 3.5mm headset, you'll need a 3.5mm to USB-C digital headset adapter to connect it. Headset and adapter may be sold separately.

Air vent: Make sure any accessory, such as a protective film or cover (or adhesive), does not obstruct the air vent hole to avoid noise during calls or media playback.

Caution: Screen protectors may reduce your phone's touchscreen sensitivity. Do not use screen protectors thicker than 0.5mm.

Caution: Your phone comes with a screen protector attached. A screen protector thicker than 0.5mm may reduce your phone's touchscreen sensitivity.

AI Key: To customize your AI Key, from the home screen swipe up and tap **Settings > Gestures > AI Key**.

Phone back

Wireless charging: Charge your phone using a Qi-certified wireless charger (may be sold separately). To achieve the best charging performance, align the wireless charging area of your phone with the wireless charger, or place your phone in the location recommended by the charger manufacturer. See [Connect to Wi-Fi](#).

Durability. The U.S. Department of Defense's MIL-SPEC standards establish methodologies for testing products against environmental stresses under controlled laboratory conditions. Motorola tests devices against hazardous physical and environmental conditions under select categories and procedures of the MIL-STD-810H standard to determine durability. Such testing is not a guarantee of future performance under these test conditions.

Power button

Choose from these options:

- » **Power on/off:** Press the Power and Volume Up buttons at the same time, then tap **Power off**. When your phone is off, press and hold the Power button to turn it on.
- » **Sleep/Wake up:** To conserve battery power and prevent accidental touches, turn off the screen by pressing the Power button. Press it again to wake it up.
- » **Restart:** To restart your phone, press the Power and Volume Up buttons

at the same time, then tap **Restart**.

Tip: If your phone becomes unresponsive, press and hold the Power button until the screen goes dark and your phone restarts.

- » **Google Gemini:** Press and hold the Power button to launch the Google Gemini, then speak a command or ask a question. For more about this feature, see [Google Gemini](#).

Note: To add security to your phone, see [Protect your phone](#).

Volume buttons

To turn volume up or down:

- » **Media volume:** Press the volume buttons when your phone is not ringing, or during a song or video, to adjust media volume.
- » **Call volume:** Press the volume buttons during a call.
- » **Ring volume:** Press a volume button, then tap Menu **•••** and slide the Ring volume bar. Press a volume button when your phone is ringing to silence a call.
- » **Notification volume:** Press a volume button, then tap Menu **•••** and slide the Notification volume bar.
- » **Alarm volume:** Press a volume button, then tap Menu **•••** and slide the Alarm volume bar.
- » **App volume:** To set the volume for an app, see [Set app volume](#).

Tip: Tap Menu **•••** > Settings  Settings to see all Sound & vibration controls. Or tap **Done**. For more on volume control, see [Volume](#).

Stylus

Navigate apps, take notes, handwritten text, edit screenshots, perform calculations, and more.

- » To remove the stylus, push the stylus inward to release it, then pull it out.
- » To store the stylus, insert it into the slot. Then, push it until it locks in place.

Set up the stylus

See and change stylus default settings.

Find it: Swipe up from the home screen and tap  **Settings > Stylus**

- » **Handwrite with a stylus:** You can handwritten text on the screen. To turn this feature off, swipe up from the home screen and tap  **Settings > Stylus**, and tap the switch next to **Stylus Writing**. Tap **Stylus Writing** and swipe left on the animation to view the tutorial. For more, see [Handwrite with a stylus](#).
- » **Open Moto Note from locked screen:** To launch [Notes](#) with your screen locked, remove the stylus from the slot. To turn this feature off, swipe up from the home screen and tap  **Settings > Stylus**, and tap the switch next to **When device is locked**.
- » **Customize stylus shortcuts:** The stylus shortcuts show by default when

the stylus is removed from an unlocked phone. To add, delete, or change the order of the shortcuts, swipe up from the home screen and tap  **Settings** > **Stylus** > **When device is unlocked**. To turn this feature off, tap the switch next to **When device is unlocked**.

Tip: For more, see [Stylus shortcuts](#).

- » **Set a removal reminder:** Set a reminder when the stylus is out for a period of time without use. Swipe up from the home screen and tap  **Settings** > **Stylus**, then tap the switch next to **Stylus out of case** to turn it on. To change when your phone sends the notification, tap **Stylus out of case** and then select **5 minutes**, **10 minutes**, **1 hour**, or **1 day**.
- » **Record time and location of the last time stylus was active:** To record when and where you last used the stylus, swipe up from the home screen and tap  **Settings** > **Stylus**, then tap the switch next to **Last known location** to turn it on.

Tip: Permission required. Tap the recorded coordinates to view the location in [Maps](#).

- » **Play a sound while drawing:** You can play a sound when drawing on the screen with your stylus in [Notes](#). To turn this feature on, swipe up from the home screen and tap  **Settings** > **Stylus**, then tap the switch next to **Sound**.

Note: This feature is only available in drawing mode.

Tip: If your ring volume is muted, you can't hear the sound while drawing. To adjust the ring volume, see [Volume buttons](#).

- » **Vibrate when inserted:** To feel a quick vibration when the stylus is in place, swipe up from the home screen and tap  **Settings** > **Stylus**, then tap the switch next to **Vibrate when the stylus is inserted** to turn it on.

Insert the SIM and microSD cards

To activate phone service, you might need to insert a SIM card, or this may have been done for you. You can also add a microSD card, which is optional and sold separately.

Note: Make sure you use the correct size SIM card and don't cut the SIM card.

- 1 Insert the SIM tool into the SIM tray hole to pop out the tray.

Tip: Refer to the diagram below for tray and hole location.

- 2 Insert the SIM card with the gold contacts **down**, then gently push the tray into the slot.

- 3 Add a microSD card for additional storage.

Note: microSD card is optional, sold separately.

eSIM

If your phone supports an eSIM (embedded SIM card) in addition to the physical SIM card, you can find **EID • eSIM** by swiping up and tapping  **Settings** > **About phone** > **Device details**. Contact your service provider for details and eligibility if you want to activate and use it.

Note: Not all carriers support eSIM.

Power on and off

Press and hold the Power button to turn it on, then follow the prompts to get started.

Press the Power and Volume Up buttons at the same time, to turn it off.

Tip: You can set your phone to turn off by pressing and holding only the Power button, instead of the Power and Volume Up buttons. See [Gestures](#).

Sign in

If you use Gmail™, you already have a Google™ account—if not, you can create an account during set up. Signing into your Google account lets you access, sync, and backup your stuff. You can see your Google apps, contacts, calendar, photos, and more.

To make sure your apps are up-to-date, see [Add, update & personalize apps](#).

Tips

- » To add, edit, or delete accounts, swipe up from the home screen and tap  **Settings > Passwords, passkeys & accounts**
- » To set up email accounts, see [Gmail](#).
- » For help with your Google account, visit www.google.com/accounts.

Connect to Wi-Fi

For faster Internet access and to conserve mobile data usage, open Quick Settings, press and hold  **Wi-Fi**, then choose a Wi-Fi network. For full instructions, see [Connect with Wi-Fi](#).

Tip: To open Quick Settings in classic or modern style, see [Customize your control center](#).

Note: This phone supports apps and services that may use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.

Choose one or more profiles

You can set up more than one profile on your phone, such as Work and Personal profiles, and add apps and features to each profile. For example, you can add business related apps to your Work profile, and keep social media and gaming apps in your Personal profile.

Note: Some apps may have slightly different features depending on which profile it's connected to.

For details on how to add accounts to different profiles, see [Add accounts to your personal or work profile](#).

Check your battery charge level

Now is a good time to check if your phone needs to be charged. Swipe down on the home screen to show battery charge level.

The phone is PD (Power Delivery) capable. For the fastest charging speeds, choose a Motorola 68W USB-C PD charger and compatible PD cable. Both may be sold separately. Use of other chargers is not recommended and may impair the charging performance. The power delivered by the charger must be between min 5 Watts required by the radio equipment, and max 68 Watts to achieve the fastest charging speed.

Insert the charging cable into the charging port (see [First look](#) for port location). Plug the other end into a power receptacle.

Charge your phone (see [First look](#) for wireless charging area) using a Qi-certified wireless charger (may be sold separately). To achieve the best charging performance, align the wireless charging area of your phone with the wireless charger, or place your phone in the location recommended by the charger manufacturer.

Caution: Chargers that do not comply with applicable national standards may be unsafe, with risk of death or injury, and may cause slow charging, product damage, or reduced device performance. To view applicable standards and to learn more, visit www.motorola.com/device-legal.

Copy data from your old phone

During phone setup, you were asked if you wanted to copy data from your old phone to your new phone. If you skipped this you can do it now:

- 1 Make sure both phones are fully charged and turned on.
- 2 On your new phone, swipe down from the home screen. In the notification panel, tap **Android Setup > Continue Setup Wizard**, or tap  **Settings > Back up or copy data > Copy data using Android Switch**, then follow the steps to finish data transfer.

Note: Both phones should be connected to the same Wi-Fi network.

Navigate your phone

Explore by touch

Use the stylus or your fingers to find your way around:

- » **Tap:** Choose an icon or option.

- » **Touch and hold:** See more options.
 - » **Drag:** Move items on the home screen.
 - » **Swipe:** Scroll through lists or between screens.
 - » **Pinch or double tap:** Zoom in and out on websites, photos, and maps.
 - » **Twist:** Twist a map with two fingers to rotate it, and slide two fingers up to tilt it.
 - » **Split screen:** Tap  then tap the icon at the top of the screen and tap  **Split top**. To close the split screen, drag the dividing line to the top or bottom of the screen.
- Note:** Not all apps work in split screen.
- » **Menus:** When you see  or , you can tap it to open options for the current screen.
 - » **Close Keyboard:** To close a keyboard, tap .

Tip: To quickly open **Settings**, swipe down twice on the status bar and tap .

System navigation

Navigate using either gestures or buttons on the screen.

Navigation buttons

Find it: Swipe up from the home screen and tap  **Settings** > **Gestures** > **System navigation** > **3-button navigation**

- » **Back:** Tap Back  to go to the previous screen.
- » **Home:** Tap Home  to return to the home screen.
- » **Recents:** Tap Recents  to see your recent apps, and tap an app to reopen it. Double tap to quickly switch between the recently used two apps. To remove an app from the recent list, swipe it up. To scroll the list, swipe right or left. To remove all apps, tap **Clear all**. To prevent the current app from being removed when tapping **Clear all**, tap , but you can still remove it by swiping it up. To take a screenshot of the current app, tap .
- » **Circle to search:** Touch and hold Home , and then circle or tap anything on the screen to search on Google. To turn this feature off, tap  **Settings** > **Gestures** > **System navigation**, and then tap the switch next to **Circle to Search**.

Tip: You can swap the positions of Back  and Recents  buttons. Tap Settings  next to **3-button navigation**, and then tap the switch next to **Change button order** to turn it on.

Navigation bar

Find it: Swipe up from the home screen and tap  **Settings** > **Gestures** > **System navigation** > **Gesture navigation**

- » **Go to the home screen:** Swipe up from the bottom of the screen.
- » **See recent apps:** Swipe up from the bottom of the screen and hold. Tap an app to reopen it. Tap the app icon to see app info or split the screen.
- » **Go back a screen:** Swipe toward the middle of the screen from the left or

right edge.

- » **Switch between apps:** Swipe left or right on the navigation bar.
- » **Circle to search:** Touch and hold the navigation bar, then circle or tap anything on your screen to search in Google. To turn this feature off, tap  **Settings** > **Gestures** > **System navigation**, and then tap the switch next to **Circle to Search**.

Improve battery life

Your phone processes tons of information. Depending on what apps are in use, your phone may use a lot of power.

When your phone is not in use for a period of time, unnecessary background processes are shut down to optimize battery life.

- » To see what's using up battery power, swipe up from the home screen and tap  **Settings** > **Battery** > **Battery usage**.
- » To help improve battery life, swipe up from the home screen and tap  **Settings** > **Battery** > **Battery Saver**, then tap the switch next to **Use Battery Saver** to turn it on. When turned on, your phone's display changes to Dark theme. Tap **Standard battery saver** to optimize system to save battery. Tap **Maximum battery saver** to restrict system functions to save the most battery. Tap **Schedule and reminders**, then tap **Set default battery level** to automatically turn on **Battery Saver** when the battery reaches the percentage you set. Tap **Set a schedule** > **Based on percentage** to automatically turn on Battery Saver when the battery reaches a specified percentage. Turn on the switch next to **Turn off at 90%** to automatically turn off **Battery Saver** when the battery reaches 90%. To limit background activities of apps when your phone is inactive, tap **Schedule and reminders**, and then tap the switch next to **Reduce battery drain when inactive** to turn it on.
- » To limit battery use for apps that you don't use often, swipe up from the home screen and tap  **Settings** > **Battery** > **Adaptive Battery**, then tap the switch next to **Use Adaptive Battery** to turn it on.
- » To extend battery life by managing apps running in the background, swipe up from the home screen and tap  **Settings** > **Battery** > **Manage background apps**, then tap the switch next to **Manage background apps** to turn it on and sort your apps into **Always allow**, **Don't allow** and **Smart use**.
- » To save battery life, your phone learns your behavior using AI, to limit the use of background apps when your phone is inactive. Swipe up from the home screen and tap  **Settings** > **Battery** > **Battery saver** > **Schedule and reminders**, then tap the switch next to **Reduce battery drain when inactive** to turn it on.
- » To charge more efficiently and keep your battery healthy, swipe up from the home screen and tap  **Settings** > **Battery** > **Optimized charging**, then tap the switch next to **Use optimized charging** to turn it on.
- » To safely boost charging speed, swipe up from the home screen and tap  **Settings** > **Battery** > **Charge boost**, and turn it on.

Note: This process may cause your phone to heat up.

- » To protect your battery from being overcharged, swipe up from the home screen and tap  **Settings** > **Battery** > **Overcharge protection**, then

tap the switch next to **Use Overcharge protection** to turn it on.

- » To receive a notification when your phone isn't charging optimally on your wireless charging stand, swipe up from the home screen and tap  **Settings > Battery > Slow charging notification**, then tap the switch next to **Slow Charging notification** to turn it on.
- » To show battery percentage in status bar, swipe up from the home screen and tap  **Settings > Battery**, then tap the switch next to **Battery Percentage** to turn it on.

Battery Tips

To save even more battery life between charges, you could reduce:

- » Widgets that stream information to your home screen, like news or weather.
- » Unused accounts: Swipe up from the home screen and tap  **Settings > Passwords, passkeys & accounts**.
- » Recording or streaming videos or music.

Care for your phone

Tips

- » Restart your phone each morning to keep it running optimally.
- » When you're near water, consider using a Bluetooth speaker to listen to music from your phone while keeping it safe. For more, see [Connect through Bluetooth](#).
- » Hold your phone firmly when using gestures to open the camera or to turn the flashlight on/off. For more, see [Gestures](#).
- » Don't leave your phone in a hot car on a sunny day. If you do accidentally do this, let your phone cool off before powering up.

Dust and water resistance

Tested under controlled laboratory conditions, the phone is water, splash, and dust resistant to ratings of IP68 and IP69 (IEC 60529). The phone can be submerged up to 1.5 meters in still, fresh water for up to 30 minutes, and is protected against powerful, high-temperature water jets for up to 30 seconds. Exposure to conditions beyond these ratings is not covered by warranty. Resistance will decrease as a result of normal wear. Not designed to work while submerged underwater. Do not expose to liquids other than fresh water. Do not attempt to charge a wet phone. Designed to provide protection against the ingress of solid foreign objects of any size. Not waterproof.

To prevent water damage to your phone:

- » Do not expose your phone to salt water or liquids other than fresh water.
- » Avoid prolonged exposure to water, and do not intentionally submerge in water.

- » Dry your phone and ports thoroughly with a soft, clean cloth.
- » Don't try to charge your phone when it's wet.
- » Don't drop, puncture, or scratch your phone, as this could damage the water-resistant features.

»

»

Clean your phone

To disinfect your phone:

- » Use wipes or cloths moistened with isopropyl alcohol with a concentration of 70% (specific for electro-electronic products).
- » It is recommended that you turn your phone off to clean it.
- » Avoid moisture in the phone's openings, including the charging port, headset jack, microphones, and speakers.
- » Do not immerse the phone in cleaning agents, and do not use cleaning materials that contain bleach or abrasive agents.
- » Do not use sprays directly on the screen.

LabEntry_03Nov2025



Learn the basics

- » [What's new in Android 16?](#)
- » [External display basics](#)
- » [Home screen on the main display](#)
- » [Help & more](#)
- » [Search](#)
- » [Notifications](#)
- » [Volume](#)
- » [Modes](#)
- » [Lock screen](#)
- » [Quick Settings](#)
- » [Speak](#)
- » [Gestures](#)
- » [Stylus shortcuts](#)
- » [Handwrite with a stylus](#)
- » [Picture-in-Picture](#)

LabEntry_03Nov2025

02

What's new in Android 16?


Your phone has some new features and a few enhancements.

- » **Auto group notification:** Minimize clutter and keep things organized. Stop apps from overwhelming you with multiple individual notifications.
- » **Seamlessly connect your hotspot across devices:** Allow devices signed into the same Google account to join your phone's hotspot without entering a password. Enjoy seamless internet access when your primary device is nearby. See [Wi-Fi hotspot](#).
- » **Customize device behavior with Modes:** Choose or create a mode like Sleeping, Driving, or Working to control notifications, app behavior, display settings, and more. See [Modes](#).
- » **Secure power-off:** Prevent your phone from being turned off if it's lost or stolen. See [Moto Secure](#).

Home screen

The home screen on the main display is what you see when you turn on your phone. From here you can explore apps and more.

Note: Software updates may change the look of your home screen. Certain apps and features may vary by model, carrier, and/or region.

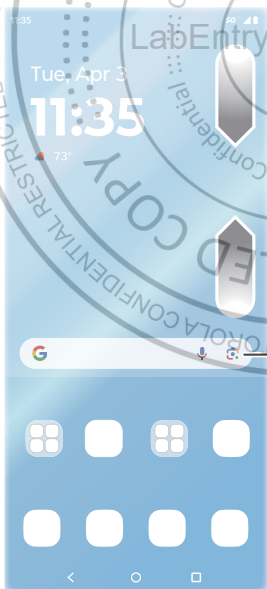

For classic style, swipe down to see notifications and Quick Settings. For modern style, swipe down from the top left side to see notifications, and swipe down from the top right side to see Quick Settings.

Swipe up to see all your apps.

Search by typing or tap the microphone and say a command. Tap the camera to search with an image.

Tips

- » **Open app list:** Swipe up from the home screen to see all your apps.
- » **Return home:** To return to the home screen from any location, tap .
- » **Pages:** To add a page, drag an app to the right side of the screen until you see a new page. You can add multiple pages. To see other pages of shortcuts and widgets (if available), swipe the home screen left.
- » **Settings:** To quickly open common settings, swipe the status bar down. To open more settings, swipe the status bar down again and tap .
- » **Customization:** To personalize your home screen and other features, see [Personalize your phone](#).

Help & more

Learn even more about your phone and get support.

Find it: Swipe up from the home screen and tap  **Settings > Help**

Tip: Some apps have their own help that's specific to their features. Just tap the menu inside the app or tap  for details.

Search

Search the web

On the home screen, tap  or  to search by voice or image.

Or tap the Google Search box for a text search. When you type, suggestions appear below the search field:

- » To search for a suggestion, tap it.
- » To search for text in the search field, tap  on the keyboard.

Tip: To close the keyboard, tap .

Note: For voice search, see [Speak](#).

Circle to search

Touch and hold Home  or the navigation bar, then circle or tap anything on the screen to search on Google.

Tip: To turn it off, swipe up from the home screen and tap  **Settings > Gestures > System navigation**, then tap the switch next to **Circle to Search**.

Search apps

Swipe up from the home screen and tap the Moto AI search box, then type the name of the app you want to find. When you type, suggestions appear below the search field. Then tap the app icon to open it.

Notifications

At the top of the screen, icons on the left notify you about new messages or events. If you don't know what an icon means, swipe the status bar down for details. The default classic style will be shown. You can change to modern style, see [Customize your control center](#). To see notifications in modern style, swipe the status bar down from the left-hand side of the screen.

When you install and open an app (see [Add, update & personalize apps](#)) you'll be asked if you want to allow the app to send notifications.

Tip: Getting too many notifications? Swipe up from the home screen and tap  **Settings** > **Notifications** > **App notifications**. Tap a switch to turn notifications on/off.

Note: Your screen may look different.



Tip: To quickly change common settings, swipe the status bar down. For more, see [Quick Settings](#).

Easily see and participate in conversations using notification bubbles that float on top of the display.

Find it: Swipe up from the home screen and tap  **Settings** > **Notifications** > **Bubbles**, then tap the switch next to **Allow apps to show bubbles** to turn it on.

Then set up bubbles in an app, like  **Messages**. From the home screen tap  **Messages** > your profile picture > **Messages settings** > **Bubbles** > **All conversations can bubble**, **Selected conversations can bubble**, or **Nothing can bubble**.

To use this feature, tap a bubble to open it and reply to a conversation. Drag the bubble around the screen to move it.

Note: Not all apps support this feature.

Smart reply

See suggestions based on notification content. For example, a text with an address may show Google Maps as an option.

To turn off Smart reply, swipe up from the home screen and tap

 **Messages** > your profile picture > **Messages settings** > **Suggestions** > **Smart Reply**.

App notifications

You may see a notification number or dot on an app. This app notification, or badge, tells you the app has an update or an announcement, such as a new email or a missed call. Touch and hold the app for more information, options, or app shortcuts.



Tip: If you do not want the notification numbers or dots on apps, swipe up from the home screen and tap  **Settings** > **Notifications** > **App icon badges** > **No badge** to turn it off.

When you install and open an app (see [Add, update & personalize apps](#)) you'll be asked if you want to allow the app to send notifications, tap **Allow** or **Don't allow**.

Privacy notifications

You may see a privacy notification green dot in the top right of the screen. This privacy notification tells you the camera or microphone has been accessed.

To control access to your camera or microphone:

- 1 When you see the privacy notification green dot, swipe down the status bar and tap  or  to see which app is using the camera or microphone.
- 2 To block the app from using the camera or microphone, tap  next to **Camera** > **Manage access** > **Camera** > **Don't allow**, or tap  next to **Microphone** > **Manage access** > **Microphone** > **Don't allow**.

Wireless Emergency Alerts (U.S.)

Wireless Emergency Alerts, also known as CMAS or PLAN, is a U.S. national emergency alert system.

Emergency alerts can pop up to tell you about a national or local crisis. After you close an alert, you can reopen it. Swipe up from the home screen and tap  **Settings** > **Notifications** > **Wireless emergency alerts**.



Tip: Emergency alerts have a special sound and vibration that is two seconds long, followed by one second, then another one second.

To choose which types of alerts you receive, swipe up from the home screen and tap  **Settings** > **Notifications** > **Wireless emergency alerts**. The U.S. and local governments send these alerts through your service provider. So you will always receive alerts for the area where you are, and you won't receive alerts if you're outside of the U.S.

For more, visit www.ctia.org and search "wireless emergency alerts."


Status icons

Icons at the top right of the screen tell you about phone status:

Status Icons	
 Mobile network strength	 Alarm set
 Wi-Fi in range/connected	 Data Saver on
 Airplane mode	 Battery Saver on
 Modes	 Wi-Fi hotspot on
 Battery charging	 Battery fully charged

Volume

Press the side volume buttons up or down to select a ringer volume and see other controls.

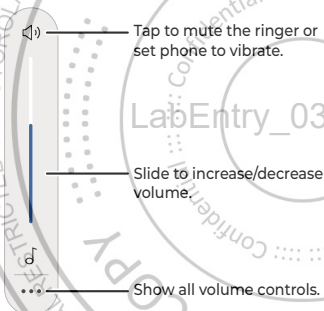

Live Caption  detects speech on your phone and shows you captions. Tap to turn it on. When a caption shows, touch and hold the caption to move it. Double tap the caption to expand it. For more, see [Live caption](#).

Modes

Stay focused and in control with Modes for sleeping, working, driving, and more. Each mode adjusts your notifications, app behavior, display, and sound settings to fit your activity. You can also create custom modes with extra protection.

- » **Do Not Disturb:** Minimize interruptions by only allowing important people and apps to reach you. To turn on the mode, swipe up from the home screen and tap  **Settings** > **Modes** > **Do Not Disturb** > **Turn on now**, or swipe down the notification panel, tap **Modes** > **Do Not Disturb**,


and tap **Done**.

- » **Bedtime:** Design a calming sleep routine. Set alarms, dim the screen, and block notifications. To turn on the mode, swipe up from the home screen and tap **Settings > Modes > Bedtime > Turn on now**, or swipe down the notification panel, tap **Modes > Bedtime** and tap **Done**. To enable the Bedtime routine, tap the switch next to Bedtime routine. To set a Bedtime routine, you can tap **Bedtime routine** and choose from **Use a schedule**, **Turn on while charging**, or **None**.
- » **Create your own mode:** Swipe up from the home screen and tap **Settings > Modes > + > Custom** to create a custom mode, and then define the mode's name and icon. To enable the mode you have created, you can tap the name of the mode in **Settings** and tap **Turn on now**, or swipe down the notification panel, tap **Mode** and then tap the mode you have created and tap **Done**. You can also tap **Set a schedule** to turn it on automatically.

Lock screen

Your touchscreen is on when you need it and off when you don't.

Note: Software updates may change the look of your home screen. Certain apps and features may vary by model, carrier, and/or region.

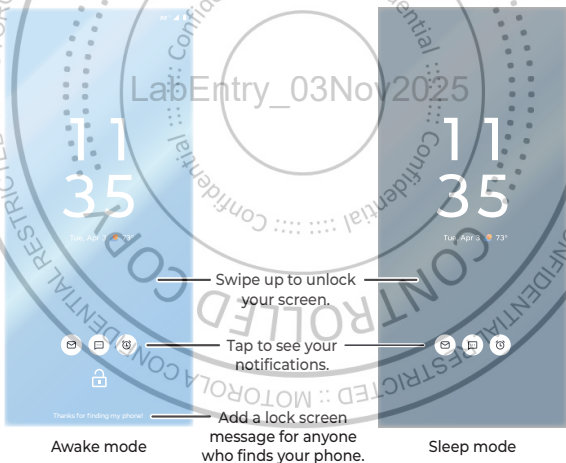

Screen off and on

See your lock screen in different modes or turn it off (black).

- » **Sleep mode:** When your screen is off, it will go into sleep mode when you tap the screen, pick up or move your phone, or receive a notification. In this mode, you can still see some essential information without fully waking the screen, such as time, date, weather, notification bubbles or

bar and battery level. You can also control the media player you're using (see [Set lock screen preferences](#) to enable the **Media preview** feature).

Note: To go into the sleep mode by tapping the screen, picking up or moving your phone, make sure **Tap to show**, **Lift to show** or **Move to show** feature is enabled. See [Set lock screen preferences](#).

- » **Awake mode:** Your screen is fully illuminated in awake mode. When the screen is off or in sleep mode, press the Power button or tap a notification to go into awake mode. In this mode, you can make an emergency call (see [Emergency calls](#)), view notifications, open [Quick Settings](#), control the media player you're using (see [Set lock screen preferences](#) to enable the **Media preview** feature), and more.

Tip: To add a message to your lock screen, such as your name in case your phone gets lost, swipe up from the home screen and tap

 **Settings** > **Home & lock screen** > **Lock screen** > **Text on lock screen**.

- » **Off:** When your screen is in awake mode, it will be turned off after screen timeout. To change your screen lock timeout, swipe up from the home screen and tap  **Settings** > **Display** > **Screen timeout**. You can also press the Power button to turn it off.

Tip: To turn on or off the screen by just double tapping it, see [Set lock screen preferences](#) to turn on the **Jump to lock screen** feature.

- » **Screen lock:** To unlock the screen ; swipe up from the bottom of the screen .To apply security to the lock screen (recommended), see [Screen lock](#).

Customize lock screen

Customize the clock face, notification style, and shortcuts on your lock screen.

Find it: Touch and hold an empty spot on the lock screen, and tap **Personalize** > **Lock screen**

Or swipe up from the home screen and tap the **Moto** folder >  **Moto** >  **Menu** > **Display** > **Lock screen** > **Customize lock screen**. You can also find it from  **Settings** > **Home & lock screen** > **Lock screen** > **Customize lock screen**.



Tap to exit customization. Changes will be applied automatically.

Tap to change clock face. Double tap to change clock style and color.

Tap to change notification style.

Tap to add shortcuts.

» **Clock faces:** Tap the clock face widget to customize the clock face on your lock screen.

Note: This feature is available only when **Show clock face** is enabled in lock screen settings. For more information, see [Set lock screen preferences](#).

» **Notification style:** Choose how notifications are displayed on the lock screen. To show notification bubbles by app at the bottom of the screen, select **Bubble**, and then you can tap a bubble to preview an app's notifications. To show only a notification bar at the bottom of the screen, select **Chip**, and then you can tap the bar to see all notifications. To show notifications in a list, select **List**.

Tip: To prevent notifications from appearing in the lock screen, swipe up from the home screen and tap  **Settings** > **Notifications** > **Notifications on lock screen** > **Don't show any notifications**.

» **Shortcuts:** Tap the widgets on both sides of the bottom corner to add or remove shortcuts to your lock screen.

Note: For more information about lock screen customization, see [Set lock screen preferences](#).

Quick Settings

For quick access to handy settings, swipe the status bar or lock screen down. Swipe down again for more settings.

The default classic style will be shown. You can change to modern style, see [Customize your control center](#). To see Quick Settings in modern style, swipe the status bar down from the right-hand side of the screen.

Tap an icon to turn features on or off. Touch and hold an icon to see more options. For even more settings, tap .

Tip: Tap  to rearrange, add, or remove settings.



Speak

Google Voice™

Use Google voice commands to tell your phone what you want.

» **Use voice to make a call:** Tap  on the home screen. Then say "Call" and then a contact name or number. Or say "Send text."

Tip: If a contact has more than one number, you can say which number to call (for example, "Call Joe Black Mobile").

» **Search by voice:** Tap  on the home screen to search by voice.

Note: To wake up your phone by saying "Hey Google," see [Google Gemini](#).

Voice to text

On a keyboard, tap  then speak your message or search text. You can also speak punctuation.

Chat with Google Gemini

Note: This feature may not be available in all languages.

Start a voice chat with Google Gemini. For details, see [Google Gemini](#).

You can say "Hey Google" or "Ok Google" to start Google Gemini. To turn this feature on, swipe up from the home screen and tap  **Settings** > **Google** > **All services** > **Search, Assistant & Voice** > **Google Assistant** > **Voice Match**

> Hey Google.

Tip: Start your day with a **Google Assistant Routine**. Hear a morning report, including weather and calendar events. Turn this on in the [Clock](#) app. For more tips, visit <https://support.google.com/assistant>.

Gestures

Explore special gestures designed to save you time and make your day easier.

Find it: Swipe up from the home screen and tap  **Settings** > **Gestures**

Note: Your phone may not have all features.

- » **System navigation:** Navigate using either gestures or buttons at the bottom of the screen. For more, see [System navigation](#).
- » **Sidebar:** Launch apps in freeform or full-screen windows to enhance multitasking, see [Gestures](#).
- » **One-handed mode:** Swipe down from the bottom edge of the screen to use one-handed shortcuts. Available with gesture navigation only. See [System navigation](#) to change navigation options.
- » **Swipe to split:** See apps in split screen by swiping back and forth.
- » **Three finger screenshot:** Touch and hold the screen with three fingers to take a screenshot.
- » **Power key:** Double press the Power button to launch the main camera. Press and hold to launch the digital assistant, Moto AI, or open the power menu.
 - **Double press the Power button:** Tap **Double press** to choose the way your phone reacts when pressing the Power button twice. You can choose **Camera** or **No action**.
 - **Press & hold the Power button:** Tap **Press & hold** to choose the way your phone reacts when pressing and holding the Power button. You can choose **Digital Assistant, Moto AI, Power menu** or **No action**. Tap and drag the slider under **Press & hold duration** to adjust the sensitivity.
- » **AI Key:** Press and hold the AI Key to launch Moto AI. You can also set the action for double pressing AI Key.
- » **Double press power key:** Tap **Double press power key** to choose the way your phone reacts when pressing the Power button twice. You can choose **Camera** or **none**.
- » **Slide on power key:** Tap the switch next to **Use slide on power key** to turn it on. Select **Show quick settings & notifications** or **Zooming** to choose the way your phone reacts when sliding down or sliding up on the Power button.
- » **Press & hold power button:** When **Digital assistant** is selected, press and hold the Power button to launch the Google Gemini. When **Power menu** is selected, press and hold the Power button to display the power and emergency menu.
- » **Media controls:** Tap the switch next to **Use Media controls** to turn it on,

then use the volume buttons to change music tracks when the screen is off.

- » **Quick launch:** Double tap the back of your phone to play/pause music, take a screenshot, return to home screen, switch to the last app, or open your favorite app or shortcut, and more. Tap  **Settings** to choose how hard to tap or which app to launch.
- » **Quick capture:** Twist your wrist twice to open the camera.
- » **Fast flashlight:** Turn the flashlight on/off with two chopping motions.
- » **Lift to unlock:** Lift your phone and look at the screen to unlock it. You'll need to set up face unlock, see [Unlock with your face](#).
- » **Pick up to silence:** Silence the ringer during an incoming call by lifting up the phone.
- » **Flip for DND:** Place the phone face down to silence notifications and calls.
- » **Power menu:** Press and hold the Power button to turn off or restart your phone, make an emergency call, select a payment method, and see connected devices quickly.

Note: See more details and gestures in [Moto](#).

Stylus shortcuts

When you remove the stylus, the stylus shortcuts appear. If you don't select a shortcut, the stylus shortcuts minimize. Tap  to expand again. To hide stylus shortcuts, touch and hold , and then drag it to . To show stylus shortcuts again, replace the stylus and then remove it again.



- » **Take a note:** Tap  to start writing or drawing in [Notes](#). Or swipe up from the home screen and tap the **Moto** folder >  **Moto Note** to create, edit, and share notes.
- » **Edit a screenshot:** Tap  to take a screenshot. Then you can edit, share, or delete it. To capture a screenshot, see [Capture your screen](#).

» **Use Free-form crop:** Tap  to take a screenshot and edit it with free-form crop. Draw any shape with your stylus to crop the screenshot. Then you can edit, share, or delete it. To view the screenshot, swipe up from the home screen and tap the **Google** folder >  **Photos** > **Collections** > **Screenshots**.

» **Record your screen and save as GIF:** Tap  to make an animated GIF from screen recording. Drag the corners of the recording frame to customize the recording window. Tap  to start recording. Then tap  to stop recording. To view the GIF, swipe up from the home screen and tap the **Google** folder >  **Photos** > **Collections** > **Screenshots**.

Note: While capturing GIFs, the system can capture any sensitive information that's visible on your screen or played on your device. This includes passwords, payment info, photos, messages, and audio.

» **Use Handwriting Calculator:** Tap  to perform handwritten calculations and get quick results after entering your mathematical expressions or equations. To switch between different calculation formats, tap **DEG**, **DECIMAL**, **RAD**, **FRACTION**, or **MIXED**. You can also edit and delete your formula. For more, see [Handwriting calculator](#).

» **Customize stylus shortcuts:** Tap  to customize your stylus shortcuts. Or you can also swipe up from the home screen and tap  **Settings** > **Stylus** > **When device is unlocked**. To change the order of the shortcuts, touch and hold a shortcut and drag it to a different place. To add a shortcut, tap a feature or an app. To delete a shortcut, tap  at the shortcut icon. To change the style of the stylus shortcuts panel, tap  in the top right corner of the screen and tap **Without label** or **With label**.

Note: You can add up to 6 shortcuts.

Tip: See also [Stylus](#) and [Explore by touch](#).

Handwriting calculator

Use the stylus or your finger to write mathematical expressions or equations and get immediate results.

Find it: Remove the stylus, and tap  from the Stylus shortcut list

Tip: When the stylus shortcuts are minimized or dimmed, tap  > .



Change settings, get the on-screen guide, and more.

Copy a result or whole entry.

$$\frac{1}{\sqrt[2]{3}} \approx 0.577$$

Write mathematical expressions or equations and get immediate results.

$$4 + 3 = 7$$

Switch between fractions, mixed numbers, and decimals.

Undo or redo.

Clear the whole writing canvas.

Switch between degrees and radians.

» **Get the guide:** The first time you open the **Handwriting Calculator**, the on-screen guide appears automatically. To see the guide again, tap Menu > **Guide**.

» **See supported operators:** Tap Menu > **Operator references**.

» **Write expressions:** Write a mathematical expression and the result will be calculated automatically in real time. You can add additional elements to an existing expression or equation.

Tip: An expression should be written on a single line. To have more space for writing an expression, turn your phone sideways for a landscape view (See [Redecorate your home screen](#)).

» **Solve equations:** Use "?" as an unknown to solve equations. For example, write "4 + ? = 7", and the unknown value will be calculated automatically.

» **Undo, redo or clear:** To undo the last action, tap . To redo the last action you undid, tap . To clear the whole writing canvas, tap .

» **Scratch out:** Scratch out a number, operator, or equation to delete it.

» **Change result formats:** Choose the way results are displayed.

- To switch the calculation results between fractions, mixed numbers, or decimals, tap **FRACTION**, **MIXED**, or **DECIMAL** at the bottom.
- To switch angular units between degrees and radians, tap **DEG** or **RAD** at the bottom.

» **Adjust settings:** Tap Menu > **Settings** to change the number of decimal places, disable or enable using the multiplication dot ".", and more.

- **Number of Decimal places:** The default number of decimal places for results is 3. To change this number, tap **Decimal places** and select a