

GARMIN.

AA4967



..... 2


Quick Start Manual	8
Manuel de démarrage rapide	10
Manuale di avvio rapido	13
Schnellstartanleitung	16
Guía de inicio rápido	19
Manual de início rápido	21

Device Overview · Présentation de l'appareil · Panoramica del dispositivo · Übersicht über das Gerät · Descripción general del dispositivo · Visão geral do dispositivo




**Device Pairing · Couplage de l'appareil · Associazione del dispositivo
· Gerätekopplung · Vinculación del dispositivo · Emparelhamento de
dispositivo**


garmin.com/connectapp

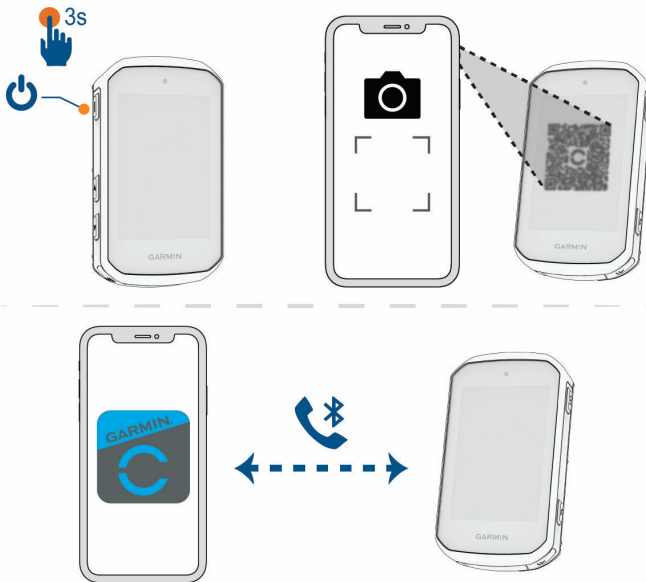


Device Charging · Appareil en cours de chargement · Ricarica del dispositivo · Aufladen des Geräts · Carga del dispositivo · O dispositivo está carregando

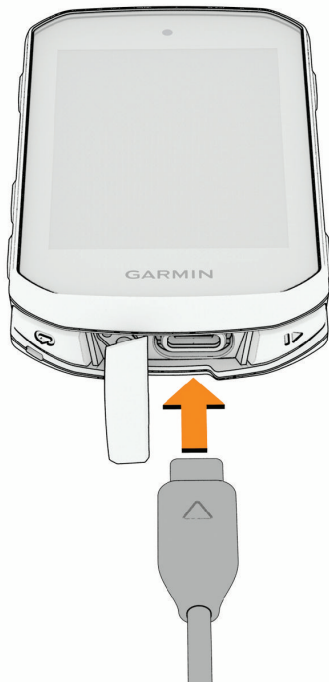


**Standard Mount Installation · Installation du support standard
· Installazione della staffa standard · Installation der
Standardhalterung · Instalación de montaje estándar · Instalação
do suporte padrão**

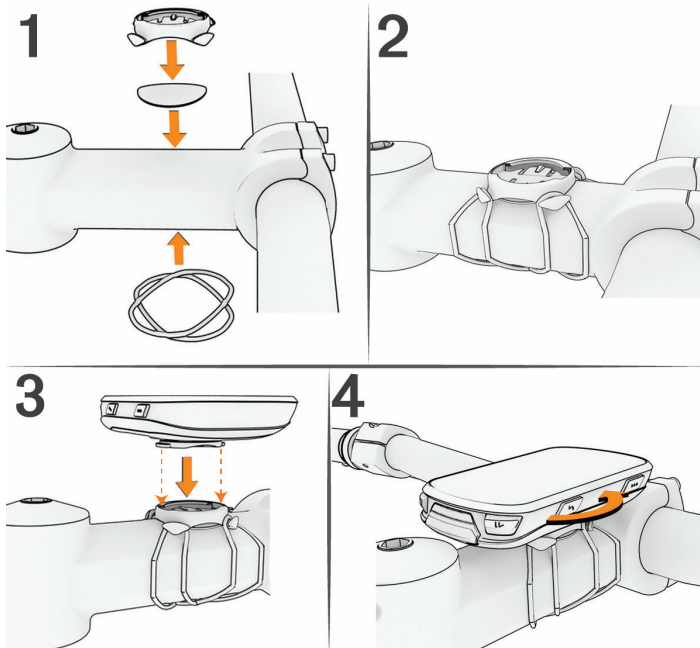

**Out-Front Mount Installation · Installation du support frontal ·
 Installazione della staffa frontale per manubrio · Installation der
 Aero-Halterung · Instalación del soporte frontal · Instalação do
 suporte externo frontal**

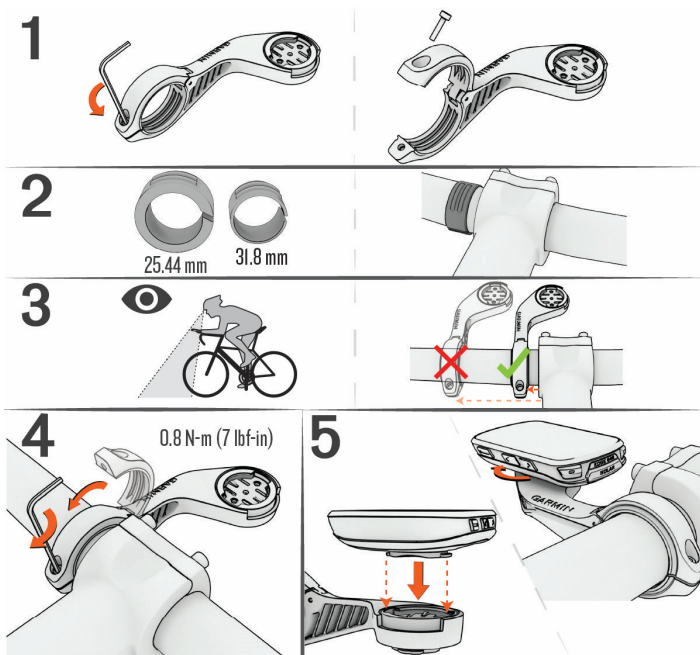

**Optional Accessories · Accessoires en option · Accessori opzionali ·
Optionales Zubehör · Accesorios opcionales · Acessórios opcionais**

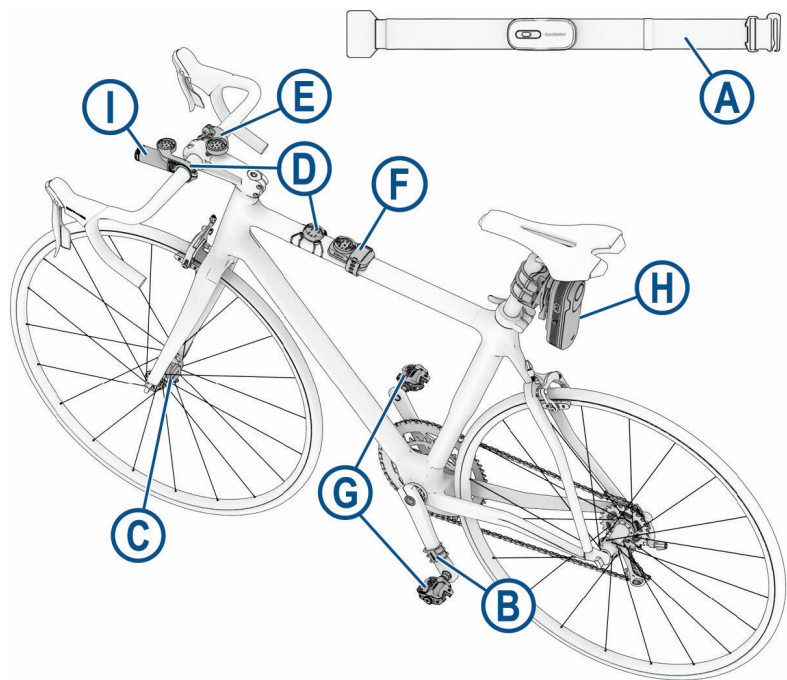

AA4967

Quick Start Manual

WARNING

- See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.
- Always consult your physician before you begin or modify any exercise program.

NOTICE

Do not charge or connect the device to a computer if the power cable, USB port, weather cap, or surrounding area are wet. Doing so can cause corrosion or property damage.

Optional Accessories

Go to www.buy.garmin.com to purchase optional accessories.

A	HRM 200 or HRM 600 heart rate monitor
B	Cadence sensor
C	Speed sensor

D	Standard and out-front mounts
E	Mountain bike mount
F	Top tube mount and strap
G	Rally™ power meter system
H	Varia™ rearview radar, tail light, or camera
I	Varia headlight or camera

Device Buttons

	Press to enter sleep mode and wake the device. Hold to turn the device on and off.
	Press to scroll through the data screens, options, and settings.
	Press to scroll through the data screens, options, and settings.
	Press to mark a new lap or complete specific functions, such as creating timing gates.
	Press to start and stop the activity timer.

	Press to return to the previous screen. Hold to return to the home screen.
	Press to choose an option or to acknowledge a message. During a ride, press to view menu options such as alerts and data fields.
Touchscreen	From the home screen, swipe down to view the status page. During a ride, swipe left or right to view additional data screens.

Device Information

Specifications

Edge® operating temperature range:

From -20° to 60°C (from -4° to 140°F)

Edge charging temperature range: From

0° to 45°C (from 32° to 113°F)

Wireless frequencies: 2.4 GHz @ 18.5

dBm maximum; 13.56 MHz @ 60

dBuA/m maximum

EU SAR: 0,36 w/kg torso; 0,36 w/kg limb

Charging Requirements

The power delivered by the charger must be between min 2,5 Watts required by the radio equipment, and max 15 Watts in order to achieve the maximum charging speed.



EN

Product Updates

Your device automatically checks for updates when paired with a phone using Bluetooth® technology or when connected to Wi-Fi®. You can manually check for updates from the system settings. On your phone, install the Garmin Connect® app.

This provides easy access to these services for Garmin® devices:

- Software updates
- Map updates
- NOTE:** Map updates are available through Garmin Express®.
- Course updates
- Data uploads to Garmin Connect
- Product registration

Getting More Information

- Go to **support.garmin.com** for additional manuals, articles, and software updates.
- Go to **buy.garmin.com**, or contact your Garmin dealer for information about optional accessories and replacement parts.

Getting Support

- Manuals
 - Videos
 - Support topics
 - Regulatory information
- Go to **www.garmin.com/manuals/**.

AA4967

Manuel de démarrage rapide

AVERTISSEMENT

- Consultez le guide *Informations importantes sur le produit et la sécurité* inclus dans l'emballage du produit pour prendre connaissance des avertissements et autres informations importantes sur le produit.
- Consultez toujours votre médecin avant de commencer ou de modifier tout programme d'exercice physique.

AVIS

Ne chargez pas l'appareil et ne le connectez pas à un ordinateur si le câble d'alimentation, le port USB, le cache étanche ou la zone environnante sont mouillés. Cela pourrait entraîner de la corrosion ou des dommages matériels.

Accessoires en option

Pour acheter des accessoires en option, rendez-vous sur le site **www.buy.garmin.com**.

support.garmin.com

© 2025 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin Logo, ANT+®, and AA4967 are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin. Garmin Connect™, Garmin Express™, Rally™, and Varia™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The BLUETOOTH® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. Wi-Fi® is a registered mark of Wi-Fi Alliance Corporation. Other trademarks and trade names are those of their respective owners.

M/N: AA4967



Printed in Taiwan
June 2025
I90-03247-00_0A

