

## INFORMATION TO USER :

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient/Relocate the receiving antenna.
  2. Increase the separation between the equipment and receiver.
  3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  4. Consult the dealer or an experienced radio/TV technician for help.
- Shielded interface cable has to be used to ensure product compliance.


**CAUTION :** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment

## Table of Contents

|                                  |    |
|----------------------------------|----|
| Parts .....                      | 3  |
| Connection to Computer .....     | 4  |
| The range of control Angle ..... | 5  |
| Installing Monitor Driver .....  | 6  |
| Name and Function of Front ..... | 8  |
| Power Management Feature .....   | 10 |
| Adjusting OSD .....              | 11 |
| Standard Signal Table .....      | 17 |
| Specification .....              | 18 |
| Troubleshooting .....            | 19 |
| Warning .....                    | 21 |


# Good Posture Guide

- ◆ Place the monitor to face the user and then adjust the monitor angle.
- ◆ Take a break (for about 10 minutes) at every hour during the work with monitor.
- ◆ Refer to the following figure to take the correct posture.

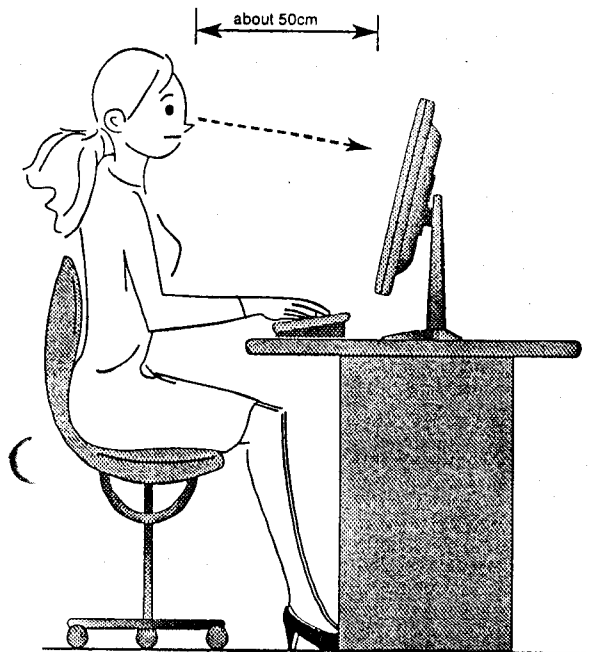


- Look down the monitor below the horizon.
- Adjust the monitor to prevent reflection.
- Relax shoulders and arms, and sit back on the chair.
- Adjust the monitor stand to acquire required angle.
- Maintain the arms horizontally and place hands softly on the keyboard.
- Keep feet flat on the ground.


# Parts

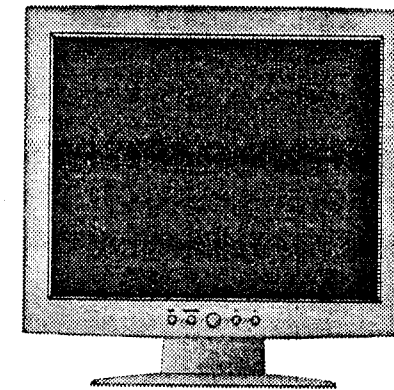

LCD Monitor




Signal Cable

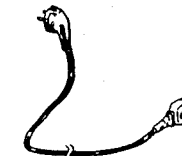

AC Power Cable




12V-DC Adapter

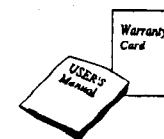

User's Manual /  
Warranty Card




Installation Diskette

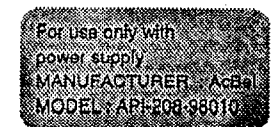

# Connection to Computer


## Basic Connection

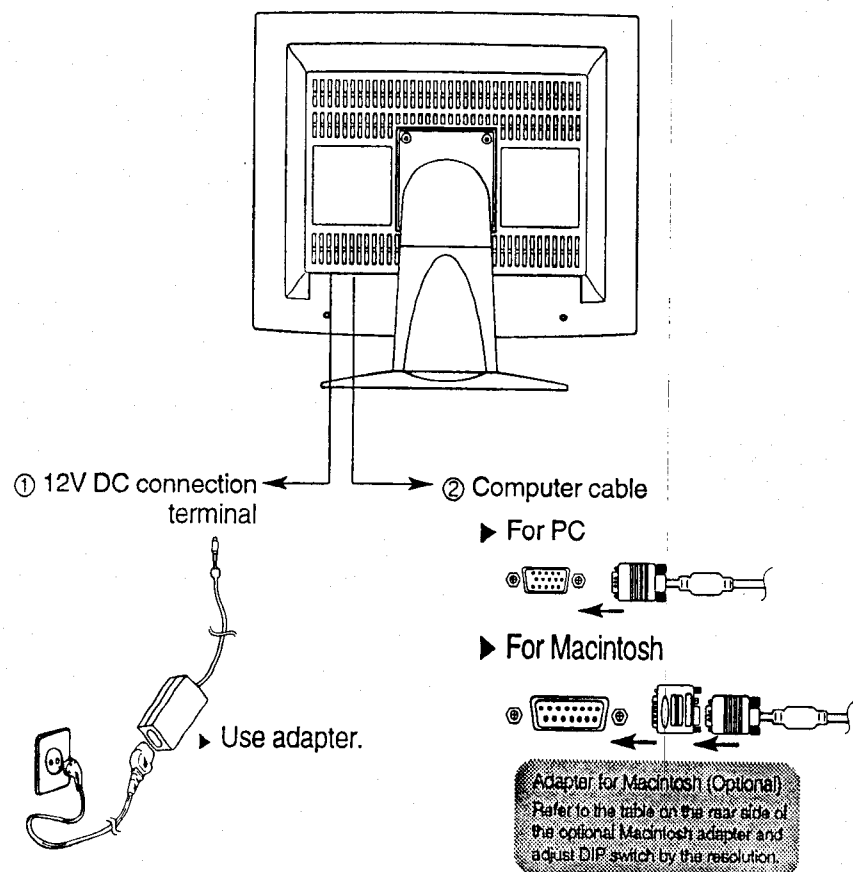

1. Use 220 V or 110 V. (Free Voltage)
2. Connect monitor and computer via computer cable (See figure ②)
3. Power on the monitor and computer.
4. Connection is finished.

# The range

## ▼ How to Adjust the St

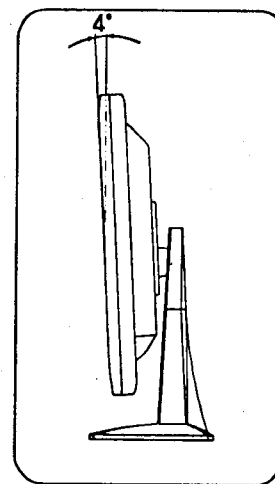

▲ Forward 4°

# Installing Monitor Driver

Run (Click) "Install" at Floppy driver and select the model name to set the optimum display in Window 95, 98 or 2000.






► Use the Driver provided.

## Automatic Installation

1. Insert the Diskette to the Floppy Diskette driver.
2. Double-click "Install.exe".
3. Select the model(H530) and click "OK" button.
4. Select inf file, and then click "OK" button.
5. Click "Exit" button to close the installation.

## Manual Installation


1. Insert the Diskette to the Floppy Diskette driver.
2. Click 'My Computer' and follow the procedure below.

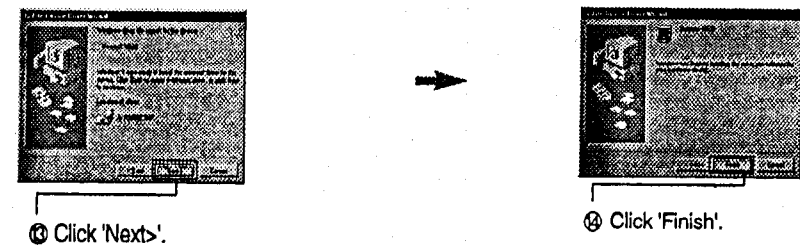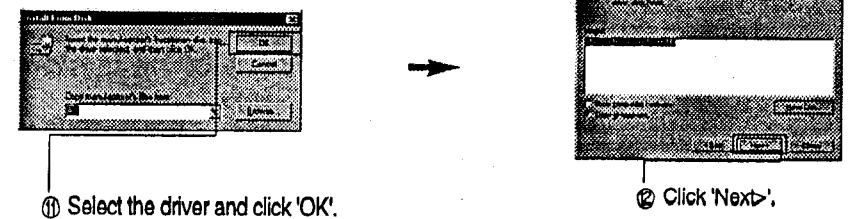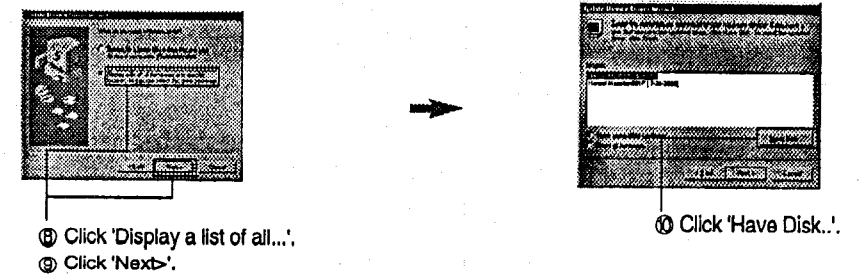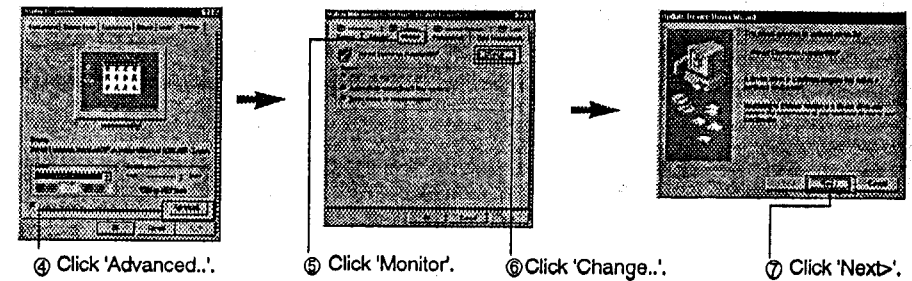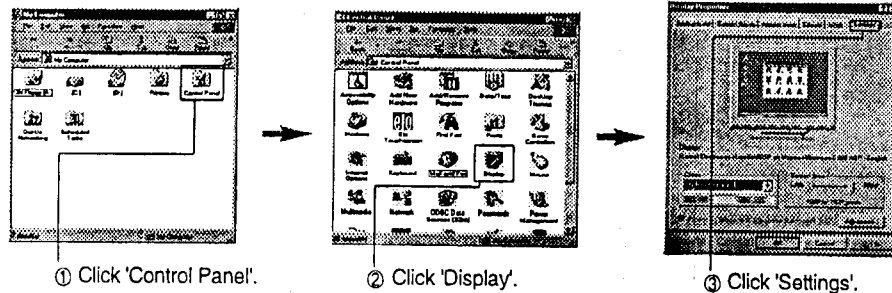

3. Select "Exit" if the monitor model is changed, and then reboot the Windows.

# Name and Function of Front

## Front panel

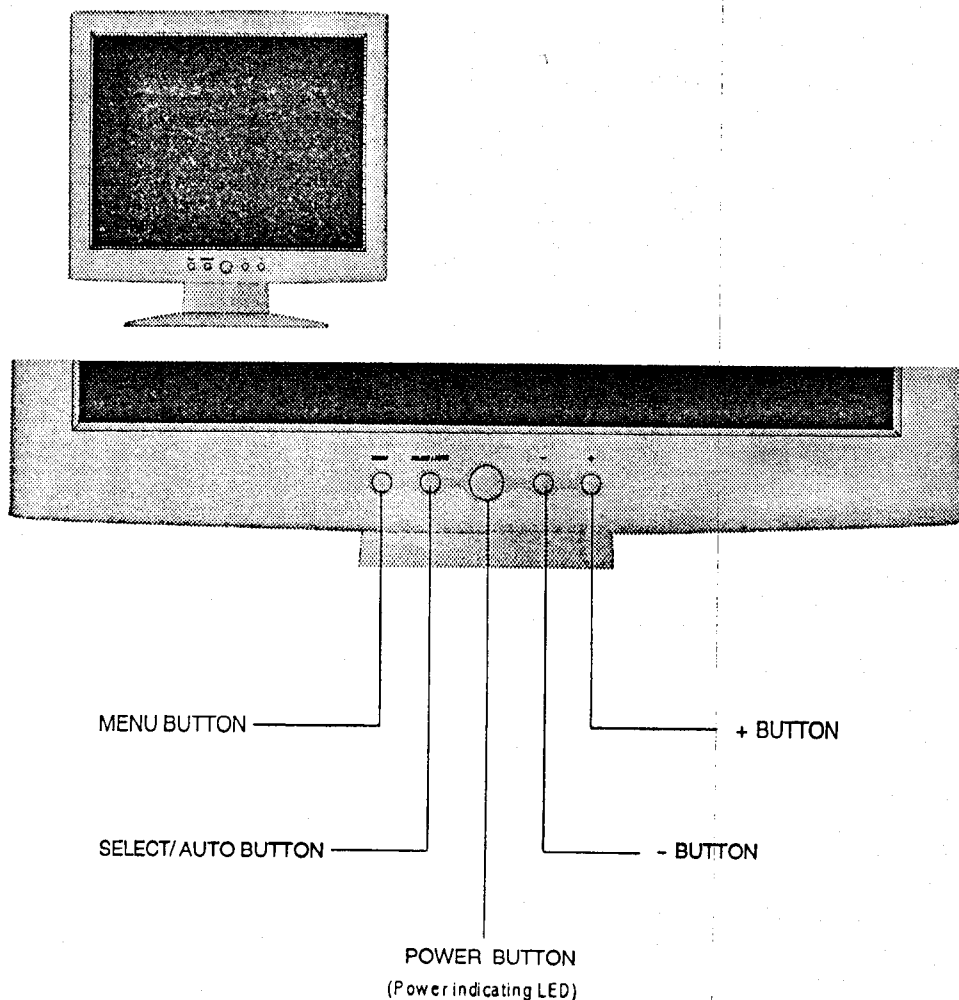

## Functions

- ◆ **Power button**  
Power button is located in the lower center of the Front Bezel.  
You can push the button to turn on/off the power.
- ◆ **Power Indicating LED**  
If the green LED around the power switch turns into blinking amber, it indicates the monitor is in power saving mode.
- ◆ **On Screen Display (OSD) Function Button**  
OSD buttons on the front of bezel perform the following functions.
  - **MENU** : Press this button to display menus.
  - **SELECT/ AUTO** : Press this button, when OSD is not displayed, to perform automatic setting.  
When OSD is displayed, You can select icons.
  - **POWER** : Power button.
  - **-/+** : By pressing these button when OSD is displayed, You can move cursor into the menus which you want.  
After press the SELECT button, you can change gauge level or select sub menus.

# Power Management Feature

When not in use for a long time, the monitor automatically reduces its power consumption, meeting power saving standards of EPA and NUTEK.

The monitor is equipped with a power saving circuit that confirms to the world-standard Display Power Manager Signalling (DPMS) mode of Video Electronics Standard Association (VESA). The power management feature requires that the video card of the computer should support DPMS function.

| Status    | Color of LED                            | Power Consumption |
|-----------|-----------------------------------------|-------------------|
| Normal    | Green                                   | Normal Power      |
| DPMS mode | Amber Blinking<br>( 2 second interval ) | 5 W or Below      |

No image is displayed with Amber blinking.

Monitor is in power saving mode.

Use mouse or keyboard to release power saving mode.

No image is displayed without LED on.

Power cable plug must be pulled out.


Check the power plug on monitor and on the wall.

"Out of range" displayed on the screen.

This message is displayed when the signal from video card exceeds the maximum frequency of the monitor. Readjust resolution and frequency in accordance with the monitor capacity. (Refer to Standard Signal Table)

# Adjusting OSD


## Brightness

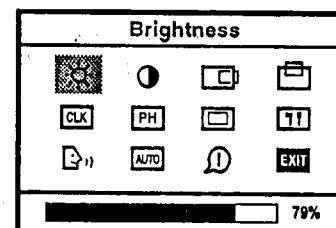

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use - , + to move Brightness ICON.
3. Use SELECT button to select it.
4. Use - , + to adjust the brightness.


## Contrast

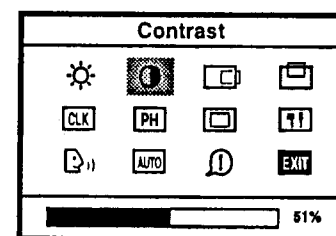

MENU → - + → SELECT → - +


1. Press the Menu button.
2. Use - , + to move Contrast ICON.
3. Use SELECT button to select it.
4. Use - , + to adjust the contrast.

## Horizontal Position

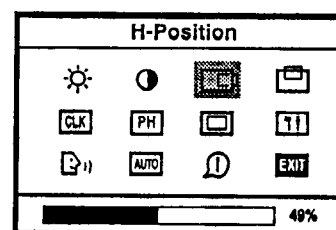

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use - , + to move H-Position ICON.
3. Use SELECT button to select it.
4. Use - , + to adjust display left or right.

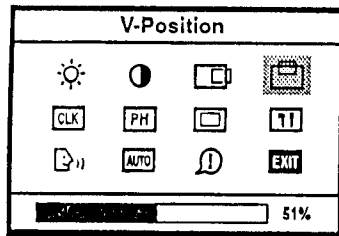


## Vertical Position

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use -, + to move V-Position ICON.
3. Use SELECT button to select it.
4. Use -, + to adjust display upward or downward.


## Clock

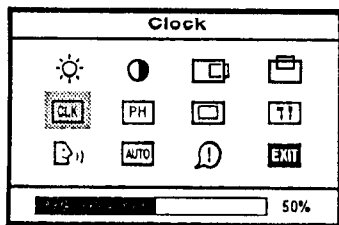

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use -, + to move Clock ICON.
3. Use SELECT button to select it.
4. If Auto-cnfig function fails to remove Video noise,  
Use - or + to remove vertical noise.  
(Adjusting clock phase is required after the  
adjustment of clock.)


## Clock Phase

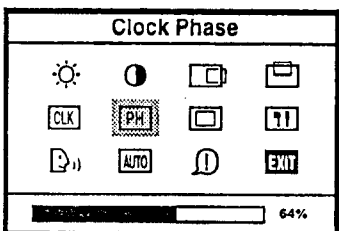

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use -, + to move Clock Phase ICON.
3. Use SELECT button to select it.
4. Use -, + to correct fine trembling or Video noise.

## Color

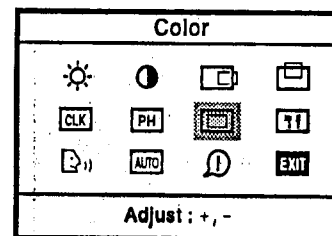

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use -, + to move Color ICON.
3. Use SELECT button to select it.
4. Use -, + into the submenu.


## Preset Color

- + → MENU

1. Use -, + to select the I or II.
2. Press the Menu button to exit.




## User Color

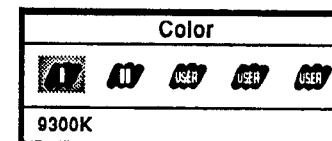


- + → SELECT → - + → MENU

1. Use -, + to move Red, Green, Blue ICON.
2. Use SELECT button to select color what  
you want.
3. Use -, + to increase or decrease each color.
4. Press the Menu button to exit.

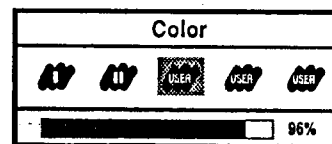


## Special

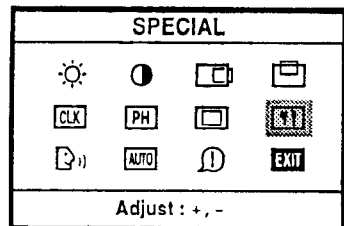

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use -, + to move SPECIAL ICON.
3. Use SELECT button to select it.
4. Use -, + into the submenu.


## Vidio Level

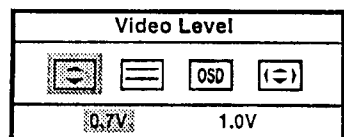

- + → SELECT → - + → MENU

1. Use -, + to move SPECIAL ICON.
2. Use SELECT button to select it.
3. Use -, + to adjust level.
4. Press the Menu button to exit.


## DOS Mode

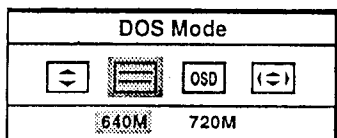

- + → SELECT → - + → MENU

1. Use -, + to move DOS Mode ICON.
2. Use SELECT button to select it.
3. Use -, + to select DOS Mode what you want.
4. Press Menu button to exit.


## OSD Overlay

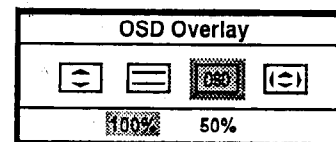

- + → SELECT → - + → MENU

1. Use -, + to move OSD Overlay ICON.
2. Use SELECT button to select it.
3. Use -, + to adjust OSD Overlay.
4. Press Menu button to exit.


## Sharpness

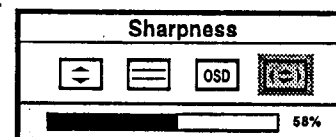

- + → SELECT → - + → MENU

1. Use -, + to move Sharpness ICON.
2. Use SELECT button to select it.
3. Use -, + to adjust Sharpness.
4. Press Menu button to exit.


## Language

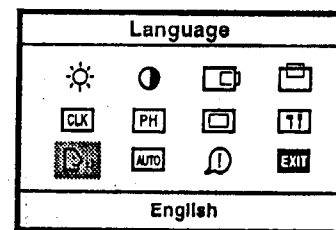

MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use -, + to move Language ICON.
3. Use SELECT button to select it.
4. Use -, + to select language in order.

## Auto-Config

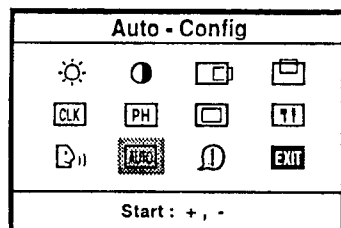


MENU → - + → SELECT → - +

1. Press the Menu button.
2. Use - , + to move the Auto-config ICON.
3. Use SELECT button to select it.
4. Use - or + to readjust the display condition.

In most case, Auto-Config adjusts display appropriately. Use PH or adjust CLK in accordance with graphic card to fine tune the display.

## Information

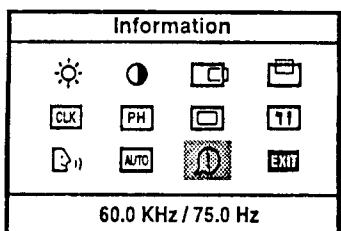


MENU → - + →

1. Press the Menu button.
2. Use - , + to move the Auto-config ICON.

You can know a display information (Horizontal, Vertical Frequency)

## Menu Exit

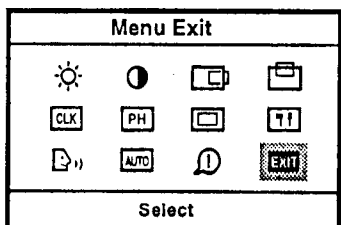

MENU → - + → SELECT


1. Press the Menu button.
2. Use - , + to move the Exit ICON.
3. Press SELECT button to exit.

## Standard Signal Table

| Resolution       | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Clock Frequency (MHz) |
|------------------|----------------------------|-------------------------|-----------------------|
| VGA (720 X 400)  | 31.469                     | 70.087                  | 23.622                |
| VGA (640 X 480)  | 31.469                     | 59.940                  | 25.175                |
| VGA (640 X 480)  | 37.500                     | 75.000                  | 31.500                |
| SVGA (800 X 600) | 46.875                     | 75.000                  | 49.500                |
| XGA (1024 X 768) | 48.363                     | 60.004                  | 65.000                |
| XGA (1024 X 768) | 60.023                     | 75.029                  | 78.750                |
| MAC (640 X 480)  | 35.000                     | 60.667                  | 30.240                |
| MAC (832 X 624)  | 49.726                     | 74.551                  | 57.284                |

## Pin assignment table D-Sub Mini 15pin connector

| Pin No. | Assignment         | Pin No. | Assignment |
|---------|--------------------|---------|------------|
| 1       | Red Video          | 9       | N.C        |
| 2       | Green Video        | 10      | Ground     |
| 3       | Blue Video         | 11      | Ground     |
| 4       | N.C                | 12      | SDA        |
| 5       | Ground             | 13      | H.Sync     |
| 6       | Red Video Ground   | 14      | V.Sync     |
| 7       | Green Video Ground | 15      | SC         |
| 8       | Blue Video Ground  |         |            |

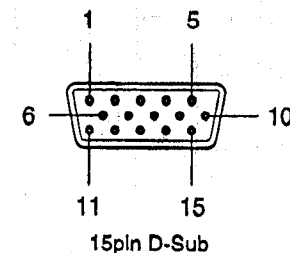

# Specification

|                       |                         |                                                    |
|-----------------------|-------------------------|----------------------------------------------------|
| Model                 |                         | B15DF                                              |
| LCD Panel             | Type                    | Amorphous active matrix super TFT LCD              |
|                       | Screen Size             | 38.1cm (Diagonal)                                  |
|                       | Maximum Resolution      | 1024 X 768 @ 75 Hz                                 |
|                       | Pixel Range             | 0.297 mm X 0.297 mm                                |
|                       | Display Colors          | Native 256K Colors                                 |
|                       | Contrast Rate           | 300 : 1                                            |
|                       | Visual Angle            | 60° / 60° / 40° / 60° (Left / Right / Up / Down)   |
|                       | Response Speed          | 35 ms                                              |
|                       | Brightness              | 200 cd/m <sup>2</sup>                              |
| Synchroni-<br>zation  | Horizontal Frequency    | 60kHz (Max.)                                       |
|                       | Vertical Frequency      | 75 Hz (Max.)                                       |
| Video Input           | Video Signal            | Analog RGB (0.714 Vpp) 75 ohm                      |
|                       | Synchronous Signal Mode | H, V Separate TTL Sync,                            |
| Power Consumption     | Maximum                 | 35W                                                |
|                       | Power Saving Mode       | Under 5 W                                          |
| Control key           | Front Part              | MENU, SELECT/AUTO, POWER, -, +                     |
| Power Adapter         |                         | Input: 90/264V (50-60 Hz),<br>Output: 12V, 3A, 36W |
| Wall Mount            |                         | VESA Standard                                      |
| Safety Standard & EMI | Safety Standard         | UL, CE, TUV, CB                                    |
|                       | EMI                     | FCC                                                |
|                       | Low Radiation           | MPR-II                                             |
| Dimension             | Size and Weight         | 358 X 50.0 X 346 / 3.8 Kg                          |

# Troubleshooting

Power LED is off,  
No picture.



- Check the power connection.  
(Refer to page 4)

Message, "No signal,"  
is displayed on the  
screen.



- Check the computer connection cable.  
(Refer to page 4)
- Check the computer power is on.

Screen looks to be run  
down.



- Check the signal cable between monitor  
and computer. (Refer to page 4)
- Perform Auto\_config.

Screen is not clear.



- Remove attaches to the signal line  
(Video extension cable and others)  
and switch on.
- Perform Clock and Adjust PHASE.
- Switch off/on the monitor.

Display is unstable and  
trembling.



- Check the resolution and frequency of  
computer and video card, and set up  
again refer to the current monitor  
mode and standard signal mode table.

Color is irregular.



- Adjust COLOR at User Mode in OSD Color Menu.

Double images or 'ghosts'.



- Check the resolution and frequency of computer and video card, and set up again in reference to the current monitor mode and standard signal mode table.

Picture is dark.



- Adjust COLOR at User Mode in OSD Color Menu.

Picture is biased or cut or too wide.



- Perform Auto-Config.

Power LED turns into amber or amber blinking.



- Monitor is in power saving mode.

## Warning


To prevent damage or loss, please read this warning carefully.




- When connecting/disconnecting the plug, pull out the plug itself, and never pull the cord to prevent fire caused by short.




- To prevent electric shock, do not connect/disconnect the plug with wet hand.

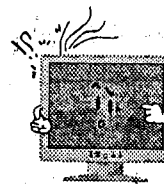


- If you see smoke or smell something burning, stop using the unit, switch off the power, pull out the plug, and then contact your local service station.

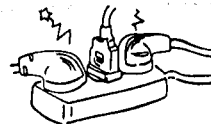

- To prevent fire, do not connect a large number of equipments in a single line.

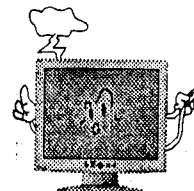

- To prevent fire and electric shock, pull out the plug in case of thunder and lightening.

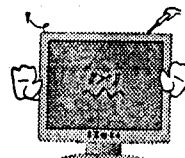

- To prevent fire and electric shock, do not try to take the monitor apart or repair it yourself. Contact your local service station or customer service center for inspection, modification or repair.