



Yale Pro[®] 2 Mortise Lock

YMM614/YMM624/YMM634/YMM644



Download Yale Access App

Create an account if you don't already have one, and tap "Set Up a Device".



Note: If you have an account with the August App, use the same username and password for the Yale Access App.

Install Your Lock

Follow the step-by-step Installation Guide in this manual (page 6 to page 19), or refer to the app for installation instructions with helpful videos.

Note: If you use the app, please use the separate Door Template page when prompted.

Set Up, Program, and Use Your Lock

Follow the instructions in this manual (page 22 to page 24) or in the Quick Start Guide to set up and program your lock. Create permanent entry codes, issue entry codes for guests, and more (page 20 to page 34).



This page was intentionally left blank.

Contents

In the Box.....	4
------------------------	----------

Installation and Setup Guide.....	6
--	----------

1a	Check Door Measurements.....	7
----	------------------------------	---

1b	Make or Adjust Holes.....	8
----	---------------------------	---

2	Install Strike.....	10
---	---------------------	----

3	Determine Handing.....	11
---	------------------------	----

4	Install Lock Case.....	12
---	------------------------	----

5	Install Key Cylinder.....	13
---	---------------------------	----

6	Install Exterior Lever Trim.....	14
---	----------------------------------	----

7	Install Thumb Turn and Interior Handle.....	15
---	---	----

8	Install Exterior Keypad and Interior Lock.....	16
---	--	----

9	(Optional) Install Yale Smart Module and Batteries.....	18
---	---	----

10	Install Batteries and Set up with App.....	19
----	--	----

Using Your Lock.....	20
-----------------------------	-----------

Connect to Your Lock.....	21
---------------------------	----

1	Create Programming PIN Code.....	22
---	----------------------------------	----

2	Create User PIN Codes.....	23
---	----------------------------	----

3	Reset to Factory Default.....	24
---	-------------------------------	----

Configure Your Lock.....	25
--------------------------	----

LED Alerts.....	27
-----------------	----


Features.....	28
---------------	----

App Settings.....	30
-------------------	----


Troubleshooting.....	32
----------------------	----

In the Box

Lock

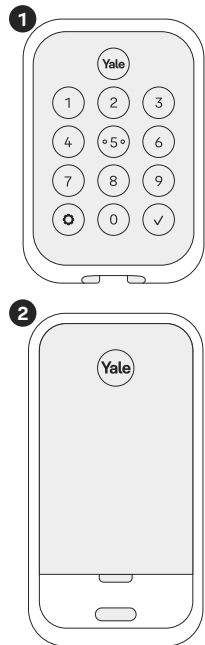

Hardware








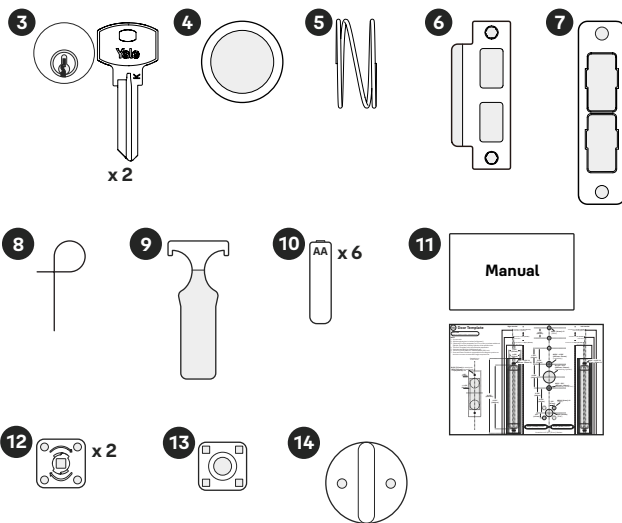


1. Push Button Keypad / Touch Screen Keypad
(Exterior, varying by SKU)
2. Interior Lock
3. *Key Cylinder & Key
(Varying by SKU)
4. Cylinder Collar
(Varying by SKU)
5. Spring Washer
6. Strike Plate
7. Dust Box
8. Electronic Reset Tool
9. Lever Assembly Tool
10. AA Batteries
11. Manual and Door Template
12. Spring Cartridge
13. Lever Mounting Plate
14. Deadbolt Thumb Turn
(Varying by SKU)



*For door preparation on 57 mm door, purchase additional Key Cylinder, Screw Post, and Spindle of specified size.

Hardware



- 15. *Spindle**
- a. Exterior Spindle
 - b. Interior Spindle

16. *Screw Post

17. Fire Plate

18. Escutcheon Mounting Plate

19. Armor Front

20. Lock Case

21. Handle

- a. Exterior Handle
- b. Interior Handle

22. Spring



23. Rose Trim (Interior)

24. Screws



- a. Escutcheon Mounting Plate Screws
- b. Lock Case / Strike Screws
- c. Armor Front Screws
- d. Lever Mounting Plate Screws
- e. Thumb Turn Screws

Installation and Setup Guide

Required Tools

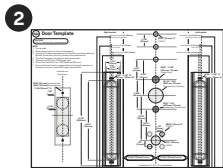

You Might Also Need

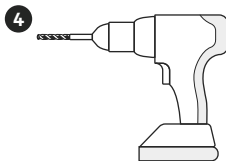

1. **Phillips Head Screwdriver**
2. **Door Template**
(A seperated page)
3. **Tape Measure**
4. **Drill**
5. **Pencil**
6. **Wood Mortise Chisel**
7. **Utility Knife**
8. **Level**




Failure to follow the Installation Guide precisely could result in damage to the product, voiding the factory warranty, and could lead to failure of the product to provide access.

1a Check Door Measurements

*If there are no holes in your door, proceed to step 1b. →

*If you have confirmed that the existing holes are compatible with the new lock, skip step 1a and step 1b, proceed to step 2.

Use the **Door Template** and follow the guidelines on **both sides** to measure each aspect of your door and frame. There are some cases when existing holes cannot be adjusted to be compatible.

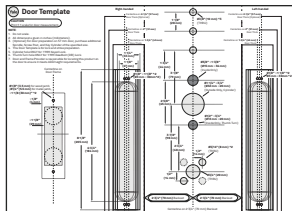


Please do not drill any holes until you confirm that your door is compatible.

1b Make or Adjust Holes

***Skip this step if you have confirmed that the existing holes are compatible.**

1. Prepare your door frame:

Swing the door close up to the door jamb and draw a latch center line for matching. Place the frame part of the **Door Template** on the jamb, mark and drill two holes of 1" in diameter and 1-1/8" in depth on the jamb. Chisel out a rectangular groove 1" in width, 3-5/6" in height, and 1-1/8" in depth based on the positions of the 2 holes. Then cut a groove 1-5/16" in width, 4-7/8" in height, and 5/32" in depth above the former rectangular one to provide a level surface on the door jamb. Finally, follow the markings to drill 2 holes, 9/64" in diameter and 1-3/16" in depth for wood jamb, or 7/32" in diameter and 1-3/16" in depth for metal jamb, to fasten the strike with Strike Screws.

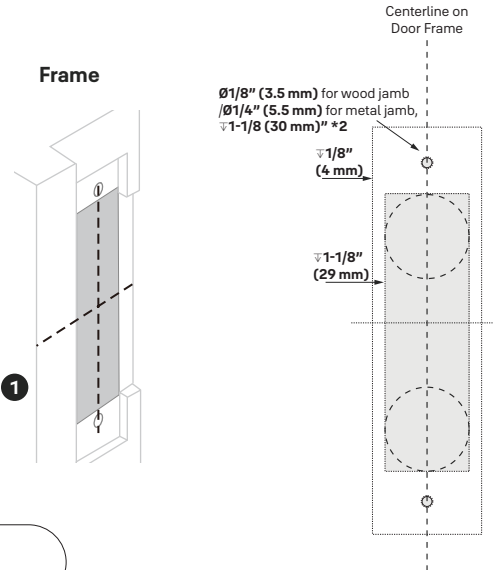

2. Prepare your door:


According to different door thick, mark and drill the required holes on your door with the help of the **Door Template** and drill them.



Ensure that all drilling depths are accurate to prevent splitting.

1b Make or Adjust Holes

3. Check all the holes are well prepared.

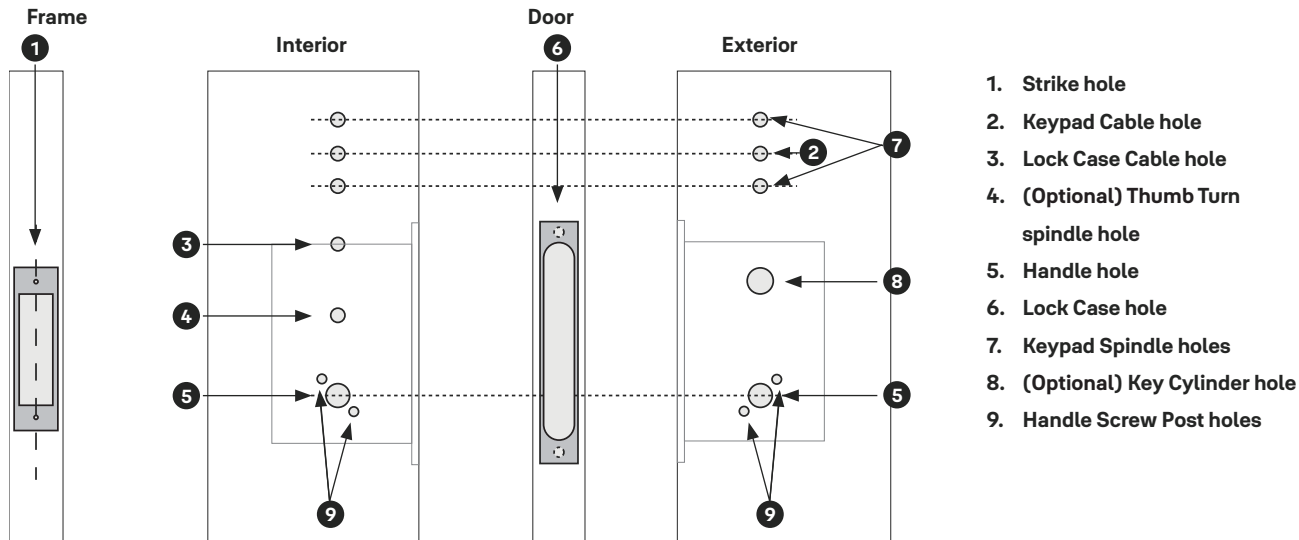


2 Install Strike

1. (Optional) Put the Dust Box into the adjusted frame holes.

2. Screw to install the Strike Plate on the door frame with a #3 Philips head screwdriver.


Note: Ensure that the latch bolt could successfully extend into the strike holes after installation.

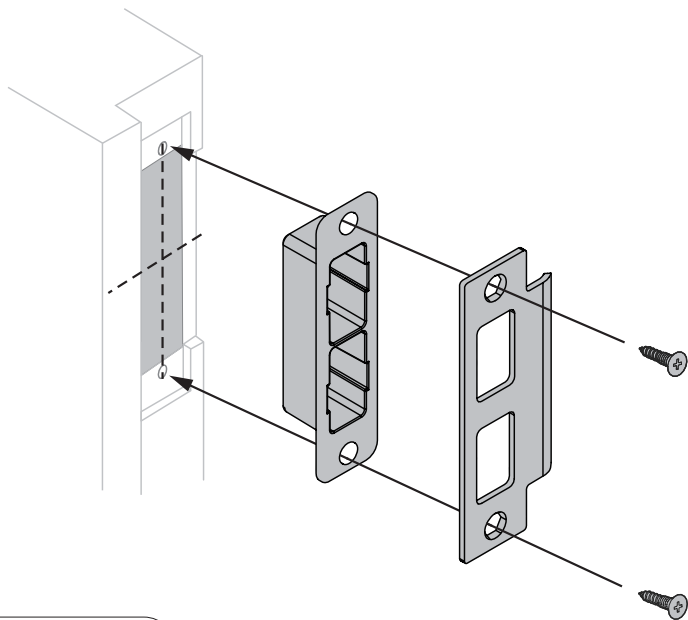


Do not install the Dust Box on fire rated openings.

3 Determine Handing


1. Remove the Armor Front.

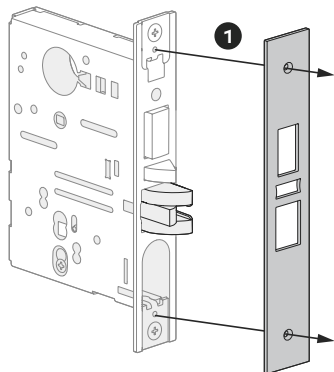

2. Pull out the latch bolt and rotate it 180° clockwise or counterclockwise.

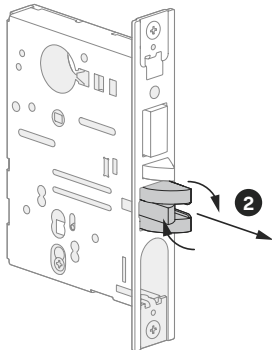


3. After ensuring that the latch bolt is in position, push the latch bolt back into the latch.

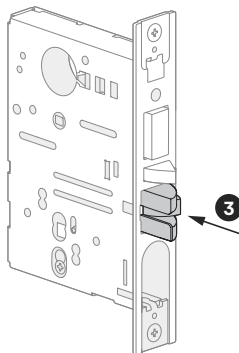

 **How to determine the right position:**
The Latchbolt Beveled Edge must face strike.

Note: Regardless whether the door opens inswing or outswing, **The exterior side of door** is taken as reference, and the position of the door hinge is based upon it.

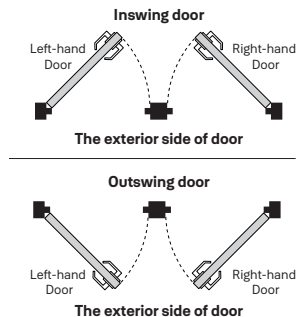

Incorrectly handing the lock could lead to lockout or lock in condition.


4 Install Lock Case

1. Put the Lock Case into the rectangular hole and position the reinforcement plate as illustrated.

Note: Do not forget to pull the cable out of the lock cable hole.

2. Fasten the Lock Case Screws loosely for levers and cylinder installation.

Note: Fully tighten the Lock Case Screws after the levers and the cylinder are installed.

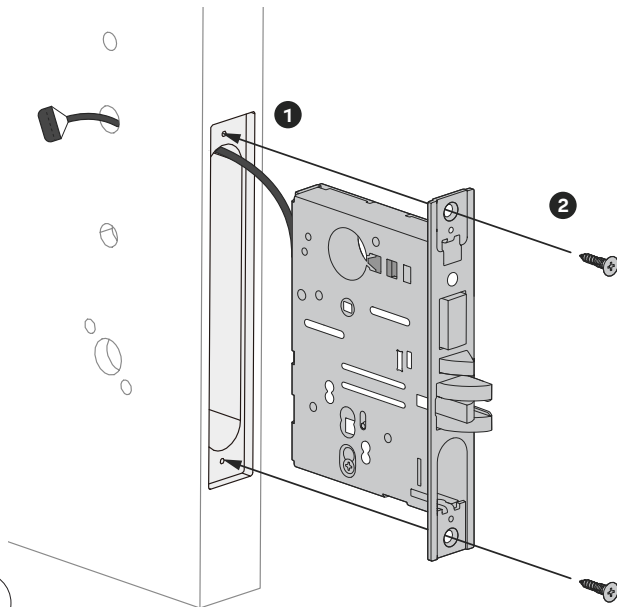


Ensure that the Lock Case is not upside down.


5 Install Key Cylinder

***Skip below step 1 to step 3 for key-free installation.**

1. (Optional) Put the Spring Washer and the Blocking Ring on the Key Cylinder sequentially, and screw them into the cylinder hole clockwise.
2. (Optional) Tighten the cylinder retaining screw.

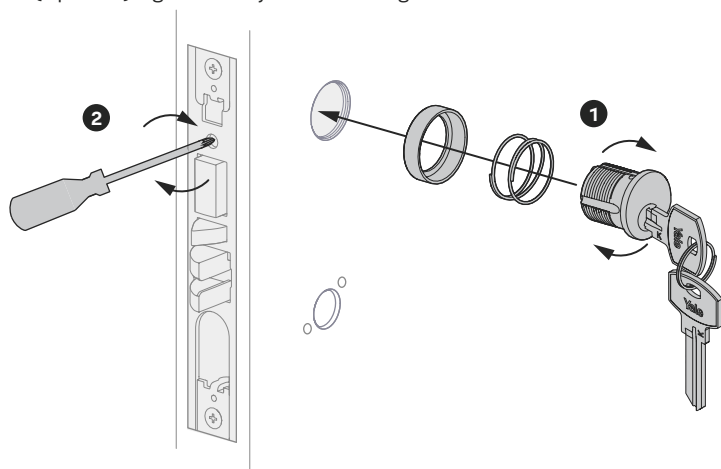

3. (Optional) Ensure that the key functions normally.
4. Install the Armor Front with Armor Front Screws.

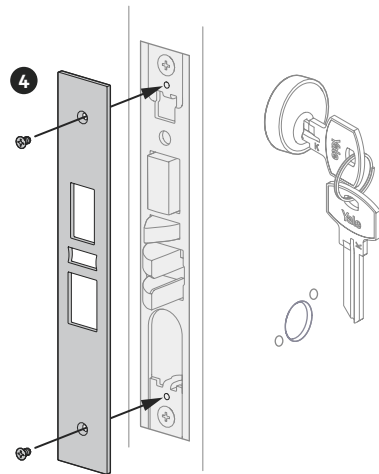


6 Install Exterior Lever Trim

1. Screw 2 Screw Posts into the diagonal screws on the exterior rose trim.
2. Place the Spring Cartridge through the Screw Post on the exterior rose trim.




Ensure proper placement of the Spring Cartridge according to the handle rotation.

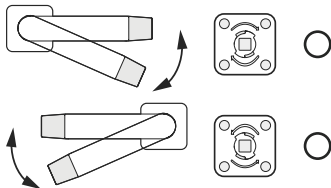

Note: Lever lifting Spring Cartridge will lead to incorrect installation.

3. Put the Spring into the square hole of the Spring Cartridge, and insert the Exterior Spindle into the Spring Cartridge and the Exterior Handle.

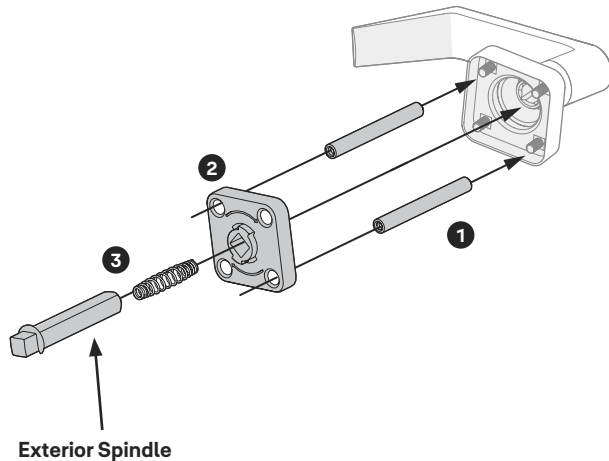

7 Install Thumb Turn and Interior Handle

***Skip below step 1 if your lock is not equipped with deadbolt**

1. (Optional) Insert the Thumb Turn spindle into the upper square hole, and tighten with Thumb Turn Screws.

Note: Ensure that the Thumb Turn is vertical and the deadbolt is not extended.


2. Insert the Interior Spindle into the lower square hole.

3. Place the Spring Cartridge and the Lever Mounting Plate through the Interior Spindle in order, then tighten them with Lever Mounting Plate Screws.

Note: The arrow direction of the Spring Cartridge should correspond to the lever being rotated down to open the door.

4. Place the Spring into the Interior Handle hole, cover the Rose Trim above the Fixing Plate, and connect the Interior Handle with the Lever Mounting Plate.

5. Tighten the Handle with Level Assembly Tool.

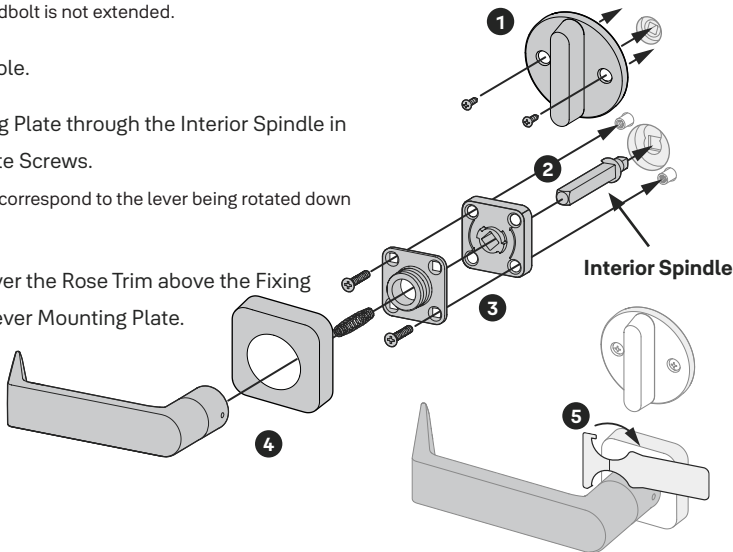


8 Install Exterior Keypad and Interior Lock

1. On the outside of the door, thread the two separate cables from the Exterior Keypad individually through the Keypad Cable hole. Then, carefully align and press the Keypad into its mounting position through the remaining installation holes.

2. On the inside of door, carefully install Escutcheon Mounting Plate and Fire Plate sequentially through cables. Secure all components firmly in place with the Escutcheon Mounting Plate Screws.

Note: Install carefully and do not to pinch any wires.

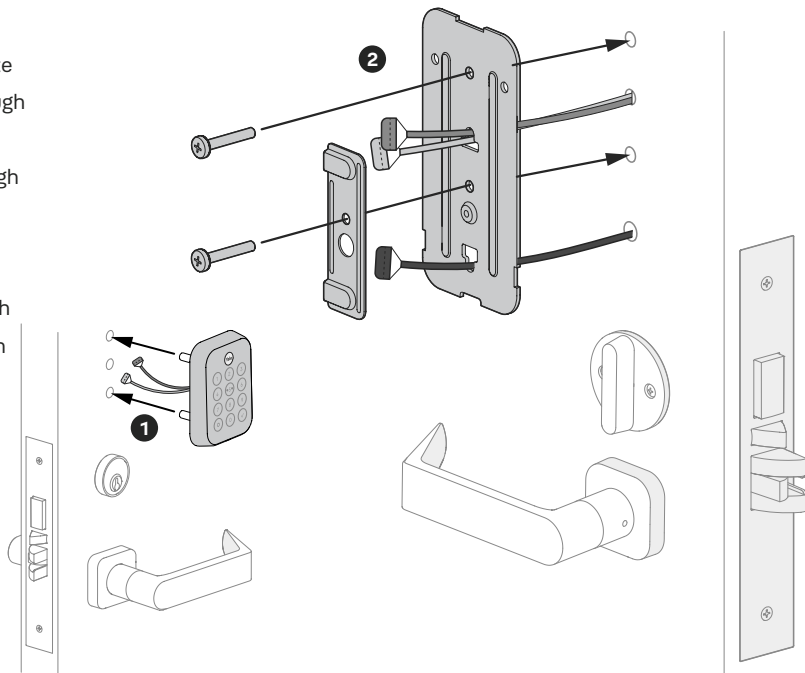


8 Install Exterior Keypad and Interior Lock



3. Push the cables into the designated slots until you hear a click.

Note: Ensure that the side of the cable end with the ridges and the marked line faces outward.

4. Open the battery cover with Reset Pin.
Pin.
5. Secure screws of battery box.

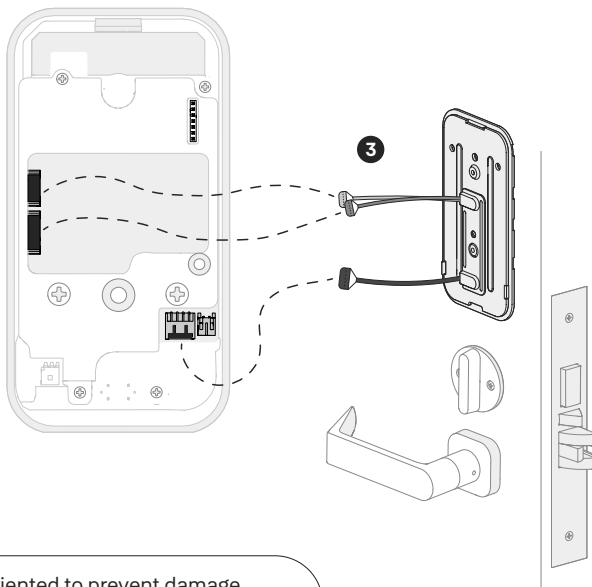

Ensure that wires are correctly oriented to prevent damage when tightening the battery box.

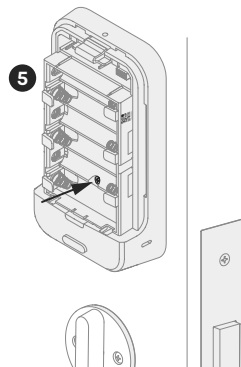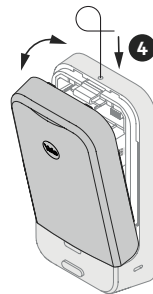

9 (Optional) Install Yale Smart Module and Batteries

*Proceed to step 10 if your lock is not equipped with the Smart Module.





1. Insert Yale Smart Module into the designated slot at the top of the lock body.

2. Install 6 batteries.

Note: Before installing batteries, ensure that the deadbolt latch is unlocked (if any).

3. Install the cover.

4. Follow steps on page 22 to create the programming code.

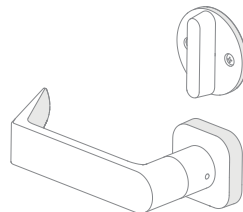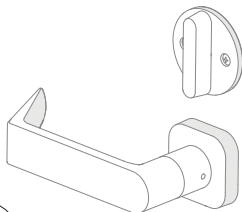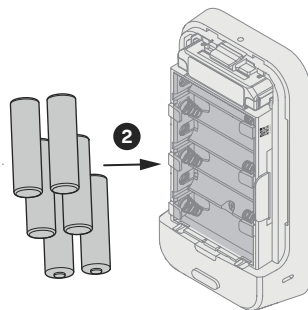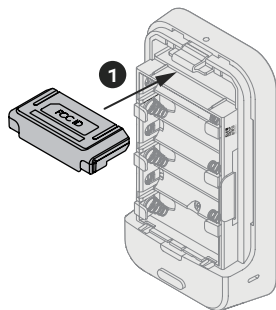

Do not install the batteries when inserting or removing the Smart Module.

10 Install Batteries and Set up with App




Ensure that you have Yale Access App downloaded and an account created.

Once batteries are inserted, lock is ready to be set up with the app.




1. Install 6 batteries.
2. Once batteries are inserted, the keypad will light up in a clockwise pattern. Once this happens, the lock is in BLE pairing mode. Open Yale Access App, tap on **Set Up a Device**, and follow the in-app setup instructions.
Note: If the lock exits pairing mode, press the Yale logo to restart.
3. Locate the QR code on the side of the battery housing. Scan it when prompted by the app.
4. Install the cover.

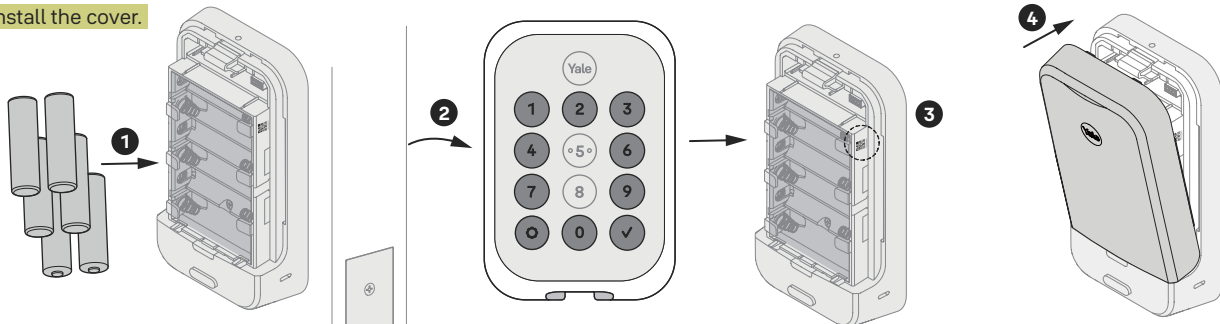

Using Your Lock

Exterior Keypad

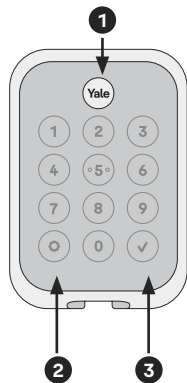

To **wake** the lock according to your lock type.

- For Push Button keypad: Press any button.
- For Touch Screen Keypad: Touch  or , or apply Palm Touch.

To **lock** your door: Press 


To **unlock** your door:

With entry code

Press  → Enter entry code →

Press 

Interior Lock

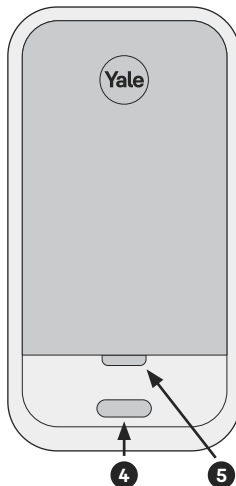


1. **Wake / One-Touch Locking**
2. **Warnings / Menu**
3. **Submit Entry Code**
4. **Inside Button**
5. **Interior LED Indicator**

Connect to Your Lock


21

There are two possible ways to connect to your lock with your Yale Access app. When you're near your lock you can connect through Bluetooth, and if you have an optional module you can connect remotely through Wi-Fi.

With **Bluetooth** connection, you can use your app to lock, unlock, create or manage entry codes, change settings, see who used the lock, etc. **while you're within Bluetooth range of the lock.** Every Pro 2 Lock has Bluetooth built in.

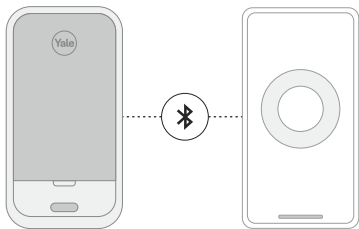

With **Wi-Fi** connection, **you can be away from home** and use your app to operate your lock, monitor who's coming and going, and create or manage entry codes. To connect your lock to your Wi-Fi network, you will need a module (available with select models and sold separately).

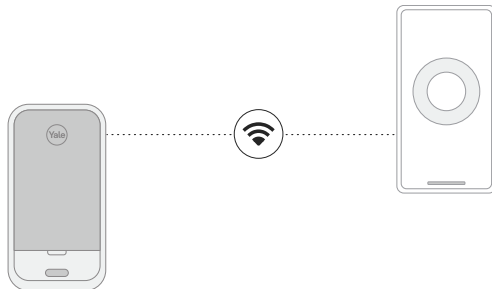

***You cannot configure and use the lock before completing programming code creation.**

1. (Optional) Press and hold the Inside Button on the Interior Lock until **1** and  illuminate on the keypad.



Note: Skip this step when your lock is equipped with the Smart Module.

2. Press **1** → .

3. Enter a 4 to 8 digit PIN code, and press  to continue.

4. Press the illuminated **1** (deadbolt installed) or **3** (without deadbolt), and press .

5. Press  to complete the creation process.

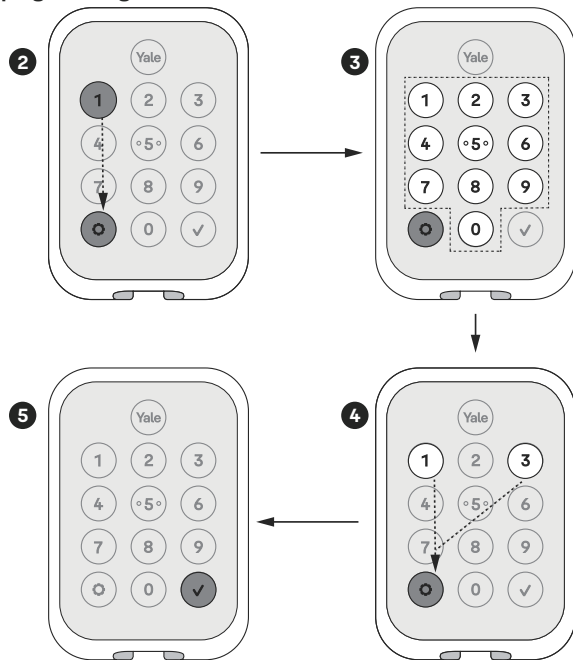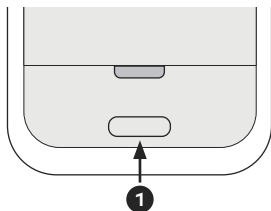

2 Create User PIN Codes


1. Enter programming code and press .

2. Press 2 →  → 1 → .

3. Enter a 4 to 8 digit PIN code, and press .

4. (Optional) Press , enter a new 4 to 8 digit PIN code, and press  to create an extra user code.

5. Press  to complete the creation process.

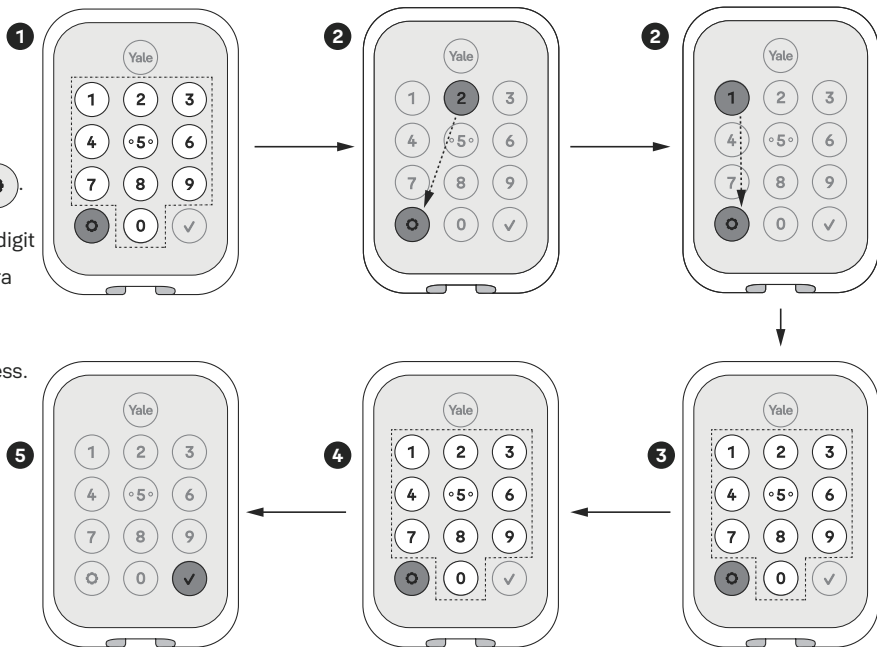

3 Reset to Factory Default

***All programming features and codes are deleted after the lock being reset to factory default.**




If you have set up your lock with Yale Access App, please reset your lock with app.

Go to your lock's settings and select **Factory Reset**.



1. Open the battery cover and remove one battery.
2. Uninstall the battery box.
3. Press and hold the reset pin.
4. While holding the reset pin, re-insert the removed battery.
5. Keep holding the reset pin for 5 more seconds until the keypad digits illuminate.
6. Re-install the battery box.

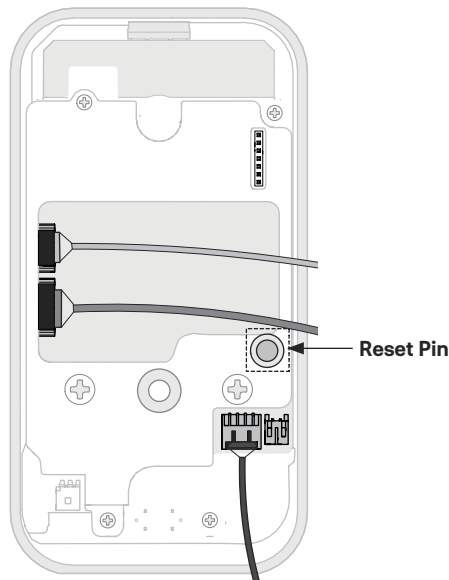

Configure Your Lock

1. Enter the programming code, and press  to enter the setting menu.

2. Press an illuminated digit to configure the corresponding settings.

Digits and their corresponding functions to be performed:

Digit	Functions	Configuration Process				
1	Programming code setting	1→ 	Enter a 4 to 8 digit PIN code		1 (deadbolt installed) 3 (without deadbolt)	 → 
2	User codes settings	2→ 	1 (Create user codes) 3 (Remove user codes)		Enter a 4 to 8 digit PIN code	 → 
3	Advanced settings	3→ 	1 (Auto relock) 2 (Interior LED indicator) 3 (One touch locking) 4 (Privacy mode) 5 (Configure deadbolt)		1 Enter a number between 1 to 180 seconds 3 (Disable) 1 (Enable) 3 (Disable) 1 (Enable) 3 (Disable) 1 (Privacy button to enable) 2 (Privacy mode with deadbolt to enable) 3 (Privacy button to disable) 1 (Configure deadbolt included) 3 (Configure deadbolt not included)	

Digit	Functions	Configuration Process				
3	Advanced settings	3→ 	6 (Escape return)		1 (Enable)	
					3 (Disable)	
4	Volume settings	4→ 	1 (High)			
			2 (Low)			
			3 (Silent)			
6	All code lockout	6→ 	1 (Enable)			
			3 (Disable)			
7	Wireless module setting	7→ 	1 (Join)			
			3 (Unjoin)			
8	BLE advertising start	8→ 				

LED Alerts


Exterior Keypad Alerts

Gear flashes amber	Low battery level 1
Gear flashes red	Low battery level 2
Gear flashes red, then stays red	Low battery level 3
A digit key blinks twice	Jammed lock
Checkmark flashes	Successfully paired
Gear flashes white	Pairing
Gear flashes red during pairing	Pairing failure



Interior Lock Alerts

LED indicator flashes blue	Low battery levels 1, 2, and 3
LED indicator flashes red	Locked state
LED indicator flashes green	Unlocked state
LED indicator turns green for 3 seconds	Pairing success
LED indicator turns red for 3 seconds	Pairing failure
LED indicator intermittently flashes pink	Passage Mode is on

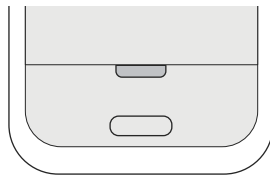

Feature	Definition
Auto Relock	- Auto Relock automatically locks the door for you. - It can be set to lock on a timer for as short as 30 seconds, or as long as 30 minutes. - Auto Relock can be set up in the lock settings menu of the keypad and the app.
Auto-Unlock	- Auto-Unlock knows when you arrive and unlocks the door as you approach. - Auto-Unlock can be set up in the lock settings of the app.
All Code Lockout Mode	Restrict all user (except Master) PIN code access. When attempting to enter a code while unit is in Lockout, there will be an audible lock response.
Auto Relock Time	After a successful unlock, the unit will re-lock automatically after 5 seconds or for a duration selected in the Advanced Lock Settings.
Escape Return	- Allow the door to remain unlocked in the case of an emergency. - Cause the door to automatically unlock upon opening and remain unlocked even if the door swings closed. The locking action requires at least one intentional user interaction to return to the locked state. - Auto Relock cannot be enabled when Escape Return is enabled.
Interior LED Indicator	The Interior LED Indicator will flash red when the door is in the locked position.
Low Battery	- When the battery power is low,  flashes amber and red with sound. - For emergency/backup power, attach a 9V battery to the keypad's terminals (polarity can be reversed). Once connected, activate the keypad, enter your PIN code, and the door will unlock automatically.

Feature	Definition
One Touch Lock	- When the unit is unlocked, activating the keypad will lock the unit (during Automatic Relock duration or when Automatic Relock is disabled). - When One-Touch Re-lock is not in use (disabled), any valid PIN code will re-lock the lock. One-Touch Lock can be set up in the lock settings of the app.
Shut Down Time	- Shut down for 60 (by default) seconds and not allow operation after the wrong code entry limit (3 attempts by default) has been met. - When the unit is in Shut Down mode, the keypad will be flashing.
Tamper Alert	Audible alarm sounds if attempting to forcibly remove outside lock from door.
Programming PIN Code	- For programming and for feature settings. - It must be created prior to programming the lock.
User PIN Codes	- User Codes operate the lock. - Maximum number of user codes is 500. Create codes from the Guest List tab in the Yale Access App.
Volume Setting Mode	- The volume setting for PIN code verification is set to HIGH (1) by default. - It can be set to Low (2) or Silent (3) for quiet areas.
Wrong Code Entry Limit	- After three unsuccessful attempts at entering a valid PIN code, the lock will not accept a PIN code for the duration of the shut down time. The keypad will flash, a red  will be at the bottom of the keypad. - The keypad will be available after the shut down time is complete.
Integrations	Yale Access products work in harmony with some of your favorite smart home brands. Integrations can be set up in the Yale Access App from the "Works With" menu option.

App Settings

You can find these and other settings in the Yale Access App.

Security

Hide Entry Codes

If turned on, all entry codes within the app will be hidden from view.

Verified Access

If turned on, passcode authentication is required to operate the lock using the app.

Notifications

Smart Alerts

Create alerts you wish to receive from the app.

Automation

Auto-Lock

Door will automatically lock, or on a timer.

Auto-Unlock

Door will automatically unlock when you arrive home.

Information

Programming Code

This code is used to access programming features: handing, Smart Module integration, and diagnostics. This code cannot be used to unlock the door.

Advanced Device Settings

Device Settings	Volume	You can turn the lock volume on or off, and set it to high or low.	
	Interior LED Indicator	When turned on, it will show the active status (e.g. locked) of the lock. This light will also inform you when the batteries are low, passage mode is enabled, and pairing is successful.	
	One-Touch Locking	Lock the keypad by touching the Yale logo. This feature is on by default and can be turned off in settings.	
Keypad Settings	Keypad Security	Shutdown Timing (Default: 60 seconds)	The lock will shut down for the set period of time and not allow operation after the wrong code entry limit has been reached.
		Wrong Code Limit (Default: 3 times)	After the set number of unsuccessful attempts at entering a valid entry code, the lock will shut down and not allow operation for 60 seconds.
	Operating Mode	Normal (Default)	All entry codes will work and the lock can be unlocked and locked using the app.
		Vacation	When enabled, all entry code access will be restricted. Users can still lock and unlock the door with the app.

Symptom	Suggested Action
Lock does not respond. There are no lights or chimes and there is no mechanical sound indicating latchbolt movement.	• Check batteries are installed and oriented correctly (polarity). • Replace batteries*. • Check that cables are fully connected on inside lock and not crimped. • Apply 9V battery to terminals on the keypad for emergency power jump option.
Lock wakes but does not respond. Lights dim.	• Batteries do not have enough power. Replace batteries*.
Lock chimes to indicate code acceptance, but door will not open.	• Check for another locking device on the door (i.e. deadbolt). • Check the door gaps for any foreign objects between door and frame. • Check that the motor cable is firmly connected into the PC board on inside lock. • Check that the locking slide moves freely and there is no foreign material in mortise pocket.
Lock operates but makes no sound.	• Check if volume is set to Silent by Master user.
Lock operates to allow access, but will not automatically relock.	• Ensure Auto Relock Mode is enabled by Master user. • Replace batteries*. • Ensure Escape Return Mode and Passage Mode are disabled.
User PIN codes will not register.	• Master user creates/manages User PIN codes. • PIN codes must consist of 4 to 8 digits to register. • PIN code may already be registered. • PIN codes must be entered within 20 seconds (while keypad is active) or process will have to be restarted. •  or  cannot be used as part of the PIN code.

Symptom	Suggested Action
Upon entering a User PIN code and pressing the key, the lock chimes an error or lock times out without responding.	• Ensure all Code Lockout Mode is disabled by Master user. • The digits entered were incorrect or incomplete. Re-enter 4-8 digits followed by . • Master user may have deleted PIN code. • PIN code may have expired. • PIN codes must be entered within 20 seconds (while keypad is active) or process will have to be restarted.
Gear button flashes on keypad.	• This is the alert to replace the batteries. Replace all six (6) batteries with new AA Alkaline batteries.
The lock operates, but it does not chime.	• Ensure Volume is set to Low or High by Master user.
Deadbolt grinds and will not extend to lock when using an entry code but thumbturn locks and unlocks smoothly.	• Lock was not handed properly. Find the setting called "Lock Handing" to fix this issue.
Deadbolt is hitting the strike plate.	• Reposition the strike plate to align with deadbolt.
Deadbolt is not fully extending.	• Increase depth of the deadbolt strike pocket in the frame.

Symptom	Suggested Action
Resistance when locking deadbolt that requires pushing or pulling on the door to align deadbolt and latch.	Adjust your existing knob, lever, or handleset strike plate. Latch engagement into the strike is the main component used for door alignment. To adjust knob / lever / handleset strike plate: 1. Remove plate from door frame with a hand screwdriver. Note: Using an electric driver may strip screw heads or enlarge screw holes. 2. Locate tab on strike plate. Bend the tab towards surface of strike. Note: A small change may be all that is required. 3. Reinstall strike plate using a screwdriver and test again. 4. If door cannot be adjusted sufficiently with strike tab, both knob/lever/handleset latch and deadbolt could require adjustment – we suggest you contact a local locksmith for assistance. For help with misalignments, watch our door alignment video: US.YaleHome.com/Support
Bolt will not extend and motor is grinding	• Enter your Master PIN code. • With the bolt retracted, press 3 for Advanced Lock Settings. • Test the operation; locking the door via the keypad.

* After replacing your batteries, it's highly recommended to use your app to lock or unlock your device. This will allow the app to connect to the lock to ensure that the internal time of the device is correct.

Use:

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Apple®, Apple Home™, Apple Watch®, HomeKit®, and iPhone® are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Google, Google Play and Google Home are trademarks of Google LLC.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Wi-Fi is a registered trademark of Wi-Fi Alliance®.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Yale is under license. Other trademarks and trade names are those of their respective owners.

FCC and IC RF Radiation Exposure Statement: This equipment complies with FCC and IC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

RF du FCC et IC d'exposition aux radiations: Cet équipement est conforme à l'exposition de FCC et IC rayonnements RF limites établies pour un environnement non contrôlé. L'antenne pour ce transmetteur ne doit pas être même endroit avec d'autres émetteur sauf conformément à FCC et IC procédures de produits Multi-émetteur.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

FCC:

FCC ID: MZR - YMM624

FCC Part 15.19 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two condition: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

FCC Part 15.21 Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment

Class B Equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Distance between EUT and users is 20 cm.

Warning:

Changes or modifications to this device, not expressly approved by **Yale Home** could void the user's authority to operate the equipment.

Industry Canada:

IC ID: 2676A - YMM624

This Class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

CAN ICES-3 (B) / NMB-3 (B)**Yale Home**

24/7 Support: 1-855-213-5841 • support.shopyalehome.com

Yale® and Yale Pro® are registered trademarks of Master Lock Company LLC and its affiliates. Other products' brand names may be trademarks or registered trademarks of their respective owners and are mentioned for reference purposes only. ©Copyright 2025. All rights reserved. Reproduction in whole or in part without the express written permission of Master Lock Company LLC or its affiliates is prohibited.

Trusted Every Day

P/N YMM614/YMM624/YMM634/YMM644