


TX_be80_5775MHz_H_QP

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5775MHz
Test by :Bob Chiu

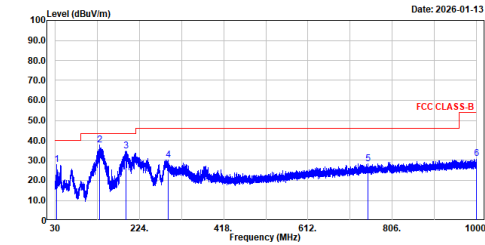


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	33.100	27.89	40.00	-12.11	38.87	-10.98	QP
2	131.755	37.90	43.50	-5.60	49.95	-12.05	QP
3	193.158	34.56	43.50	-8.94	48.34	-13.78	QP
4	289.463	30.33	46.00	-15.67	40.87	-10.54	QP
5	750.087	28.32	46.00	-17.68	29.53	-1.21	QP
6	1000.000	31.08	54.00	-22.92	29.71	1.37	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_be80_5775MHz_V_QP

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5775MHz
Test by :Bob Chiu

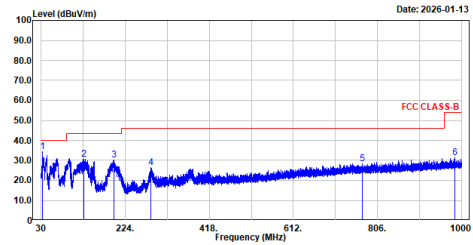


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	33.300	34.45	40.00	-5.55	45.38	-10.93	QP
2	128.205	30.49	43.50	-13.01	43.05	-12.56	QP
3	197.759	30.36	43.50	-13.14	44.23	-13.87	QP
4	282.963	26.42	46.00	-19.58	37.15	-10.73	QP
5	770.538	28.48	46.00	-17.52	29.56	-1.08	QP
6	985.049	31.49	54.00	-22.51	30.16	1.33	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_ac80_5210MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Nova

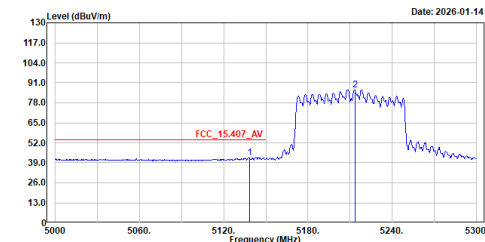


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5138.300	42.31	54.00	-11.69	27.88	14.43	Average
2	5213.600	86.55	-----	-----	72.20	14.35	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Nova

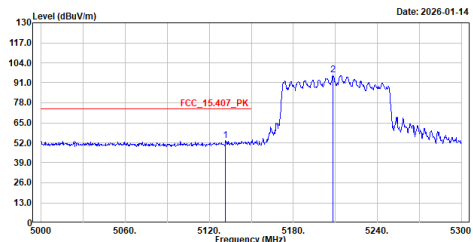


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5131.700	53.34	74.00	-20.66	38.91	14.43	Peak
2	5208.500	96.28	-----	-----	81.92	14.36	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Average

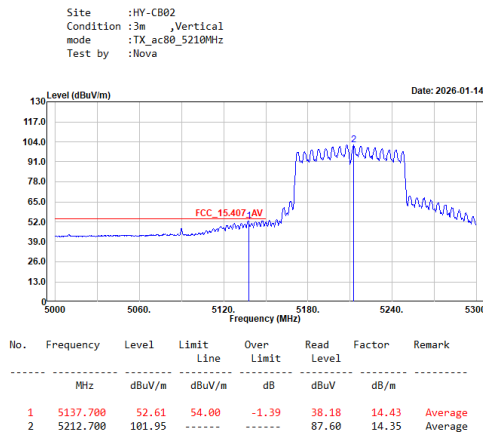


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Peak

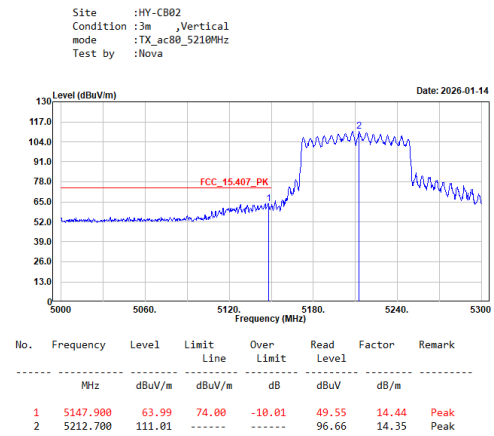


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H_Average

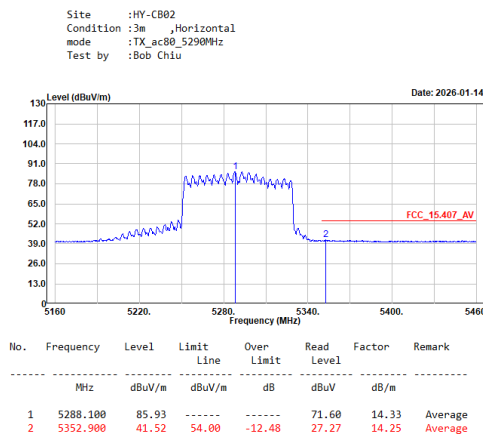

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5290MHz_H_Peak

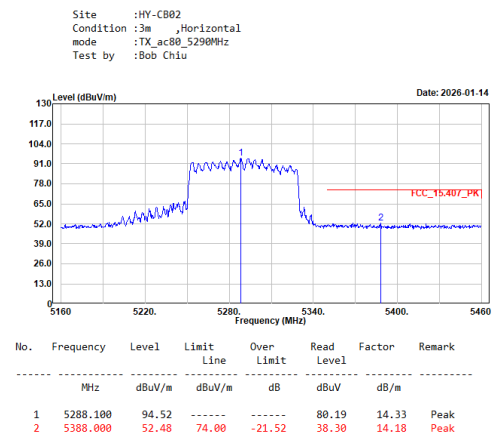

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Bob Chiu

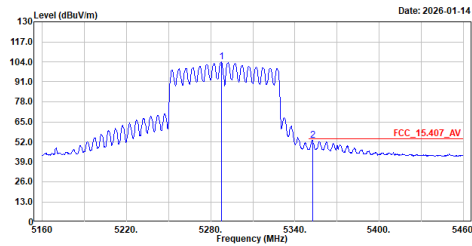


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5287.500	103.80	-----	-----	89.47	14.33	Average
2	5352.600	53.11	54.00	-0.89	38.86	14.25	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Bob Chiu

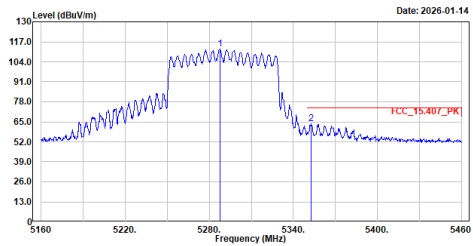


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5287.500	112.52	-----	-----	98.19	14.33	Peak
2	5352.600	63.97	74.00	-10.03	49.72	14.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Bob Chiu

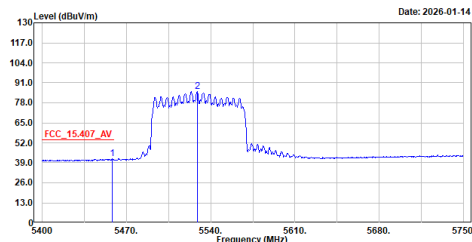


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.100	41.49	54.00	-12.51	27.05	14.44	Average
2	5528.800	85.22	-----	-----	70.40	14.82	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Bob Chiu

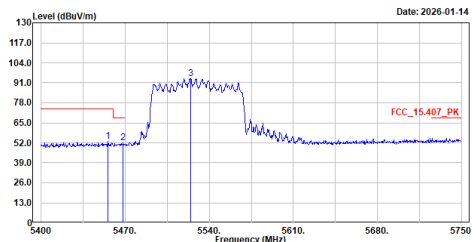


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5455.650	53.12	74.00	-20.88	38.69	14.43	Peak
2	5468.250	51.90	68.22	-16.32	37.41	14.49	Peak
3	5524.600	93.77	-----	-----	78.97	14.80	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V_Average

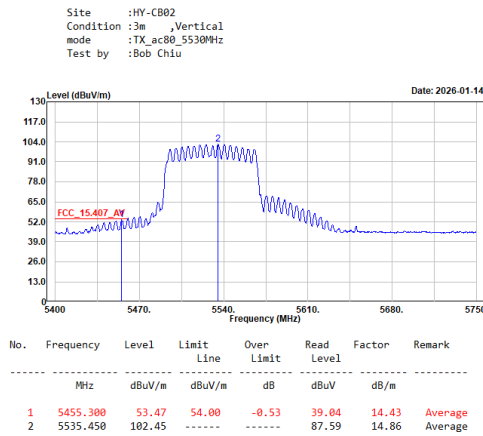


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V_Peak

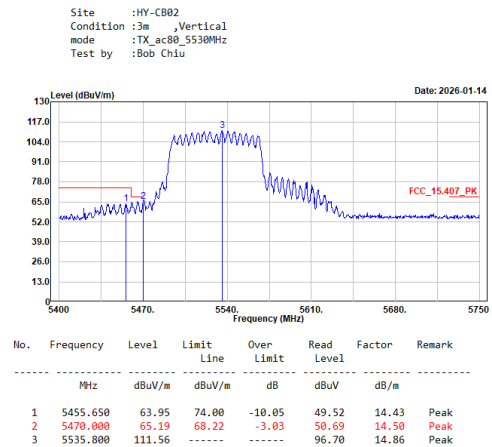


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Average

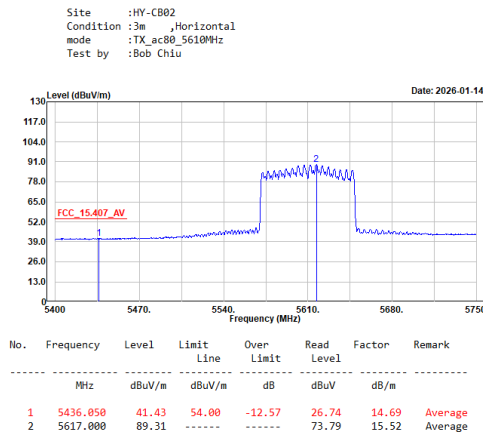


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Peak

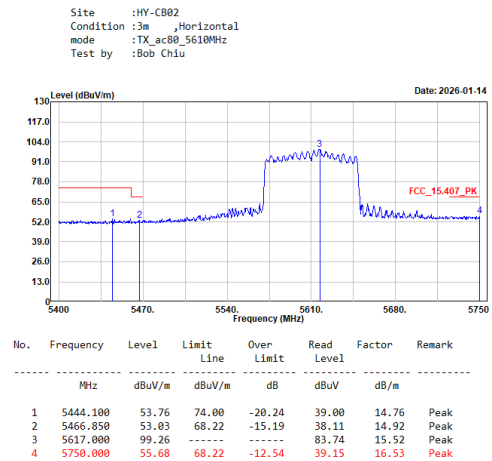

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5610MHz_V_Average

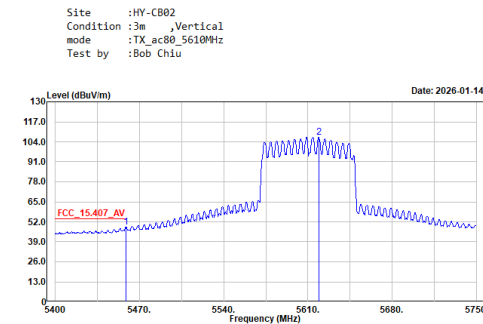

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	48.47	54.00	-5.53	33.61	14.86	Average
2	5619.100	106.83	-----	-----	91.30	15.53	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5610MHz_V_Peak

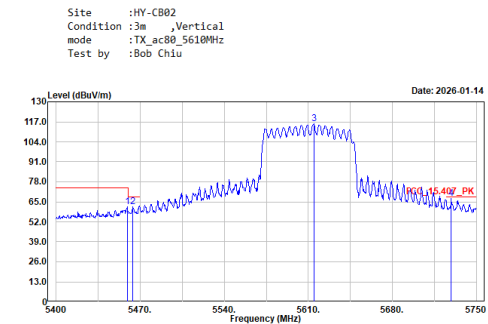

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	61.89	74.00	-12.11	47.03	14.86	Peak
2	5463.700	61.95	68.22	-6.27	47.06	14.89	Peak
3	5614.900	115.65	-----	-----	100.14	15.51	Peak
4	5729.000	67.32	68.22	-0.90	50.90	16.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5775MHz_H_Peak

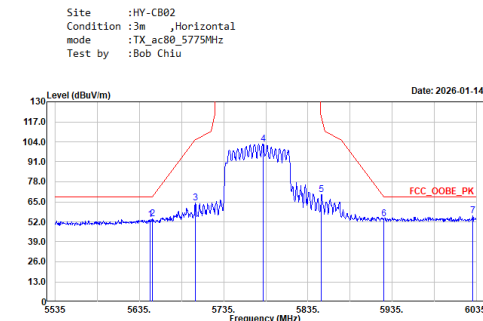

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5647.500	53.52	68.20	-14.68	38.07	15.45	Peak
2	5650.000	53.80	68.21	-14.41	38.33	15.47	Peak
3	5701.500	64.32	105.62	-41.30	48.40	15.92	Peak
4	5781.500	102.70	-----	-----	86.54	16.16	Peak
5	5851.000	69.65	119.92	-50.27	53.49	16.16	Peak
6	5925.000	53.93	68.21	-14.28	37.60	16.33	Peak
7	6030.500	55.69	68.20	-12.51	39.30	16.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5775MHz_V_Peak

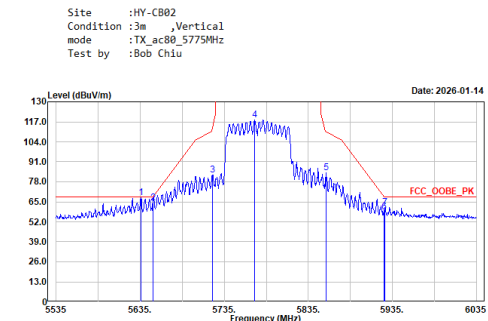

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5636.000	67.65	68.20	-0.55	52.28	15.37	Peak
2	5650.000	64.26	68.21	-3.95	48.79	15.47	Peak
3	5721.000	82.61	113.08	-30.47	66.62	15.99	Peak
4	5771.500	118.47	-----	-----	102.33	16.14	Peak
5	5856.000	83.77	110.52	-26.75	67.60	16.17	Peak
6	5925.000	58.34	68.21	-9.87	42.01	16.33	Peak
7	5926.000	61.43	68.20	-6.77	45.09	16.34	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H_Average

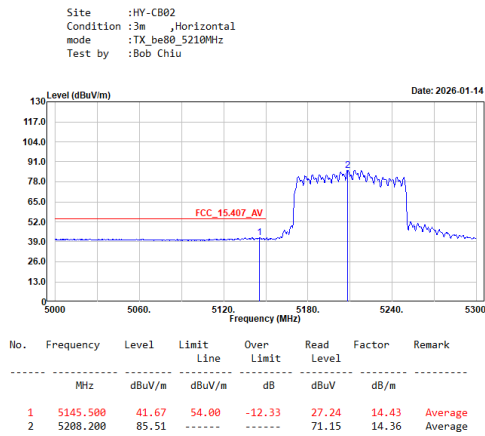


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H_Peak

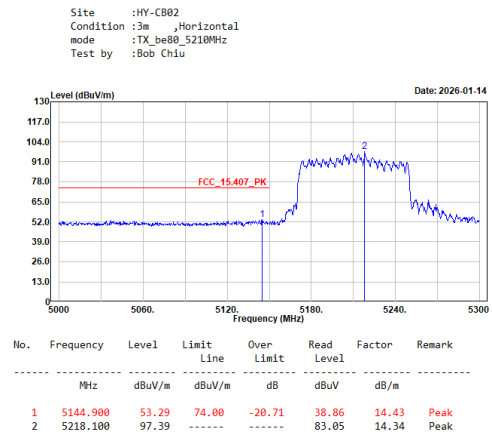


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Average

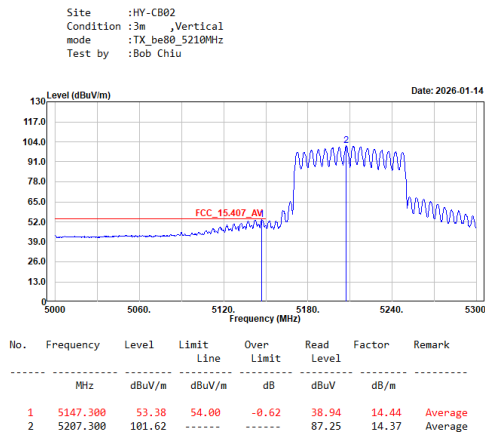


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Peak

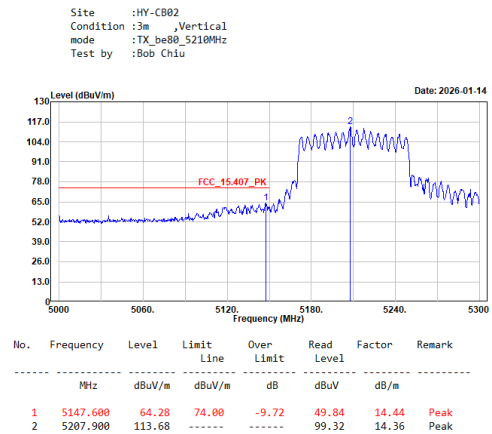


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be80_5290MHz_H_Average

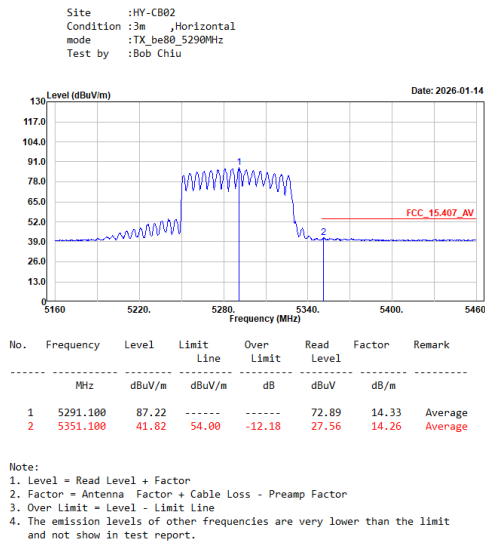


TX_be80_5290MHz_H_Peak

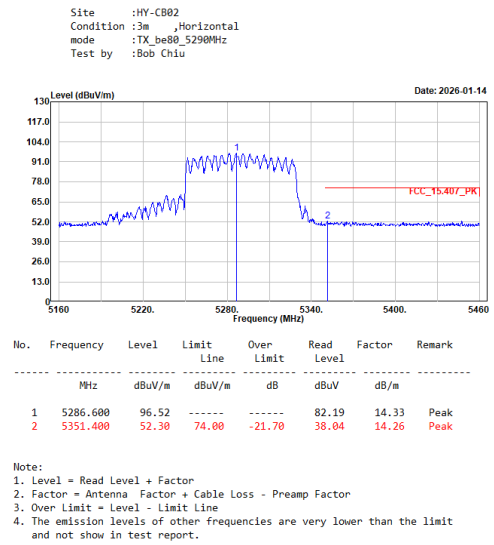


TX_be80_5290MHz_V_Average

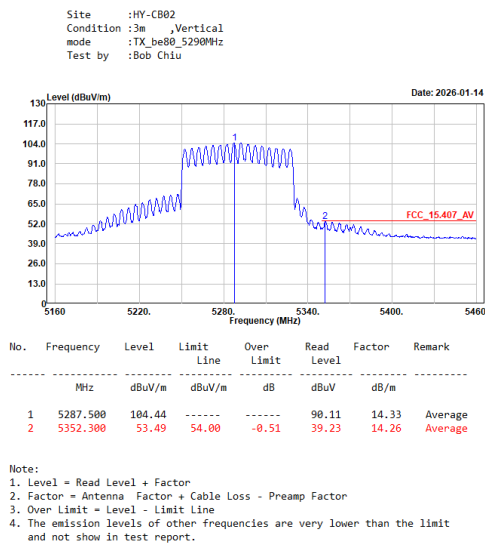

TX_be80_5290MHz_V_Peak

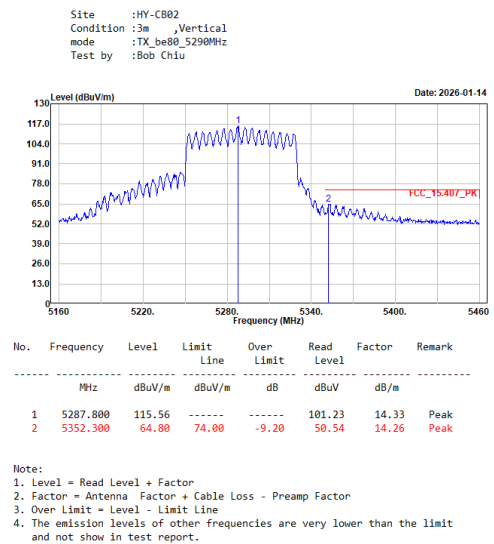


TX_be80_5530MHz_H_Average

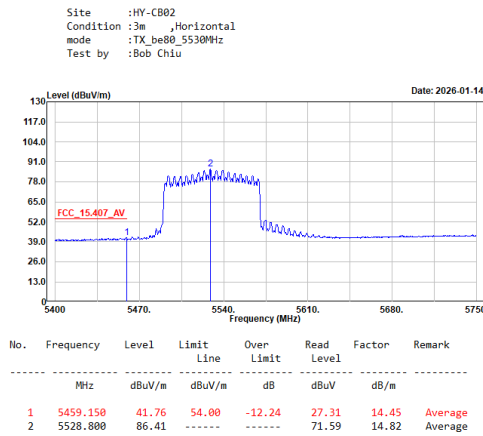


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_H_Peak

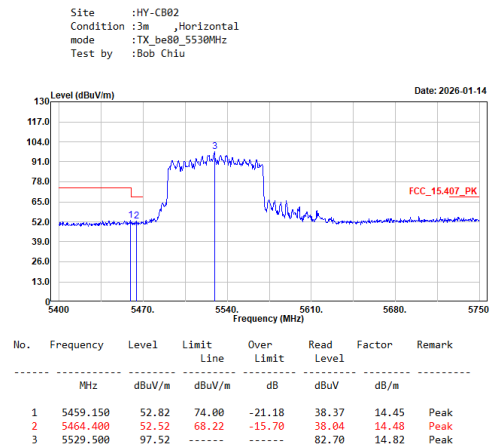


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V_Average

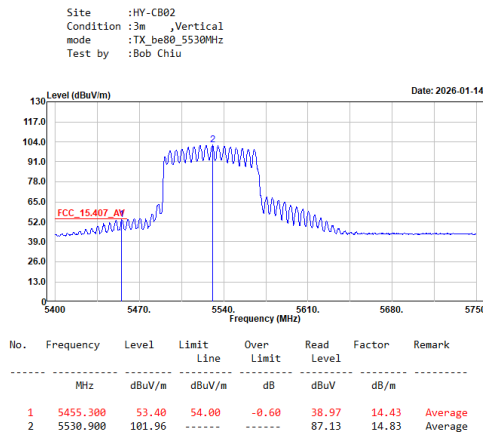


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V_Peak

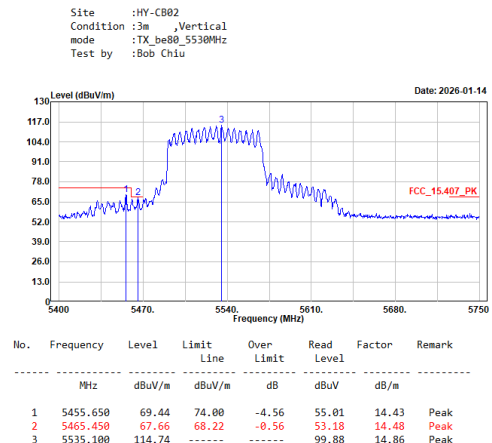


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_H_Average

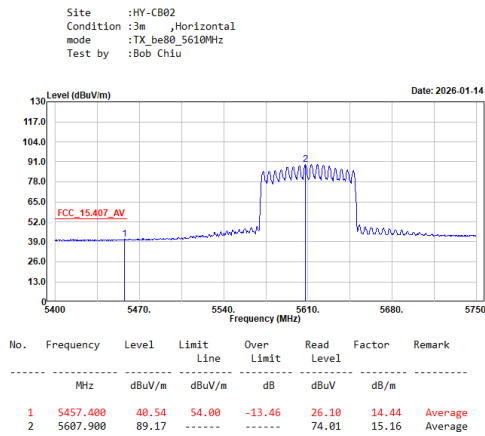


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_H_Peak

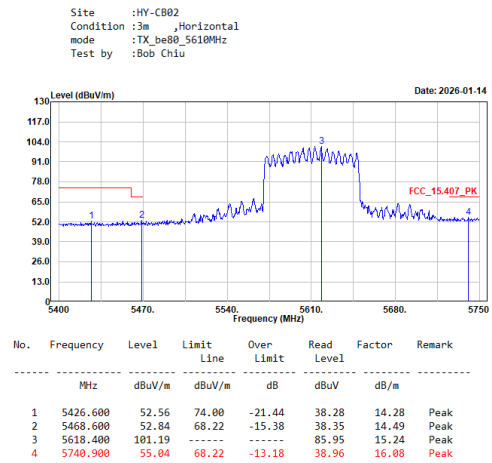


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_V_Average

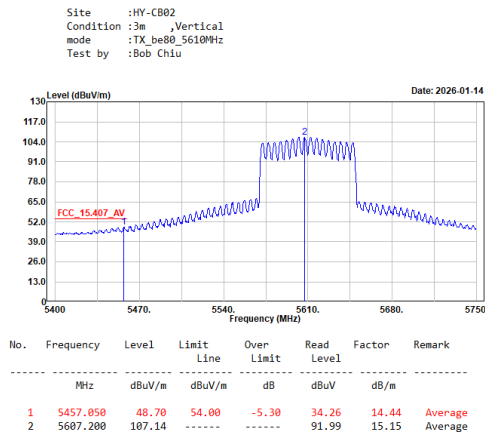


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_V_Peak

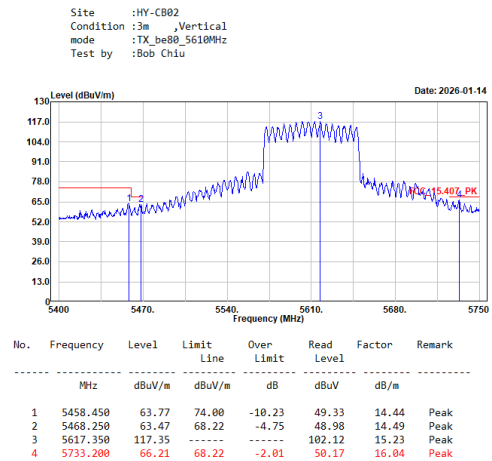

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H_Peak

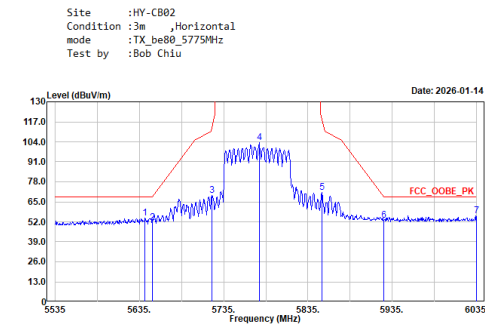


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5641.500	54.48	68.20	-13.72	39.88	15.40	Peak
2	5650.000	51.51	68.21	-16.70	36.04	15.47	Peak
3	5721.000	69.24	113.08	-43.84	53.25	15.99	Peak
4	5777.000	103.45	-----	-----	87.31	16.14	Peak
5	5851.500	71.03	118.78	-47.75	54.87	16.16	Peak
6	5925.000	53.07	68.21	-15.14	36.74	16.33	Peak
7	6035.000	55.96	68.20	-12.24	39.56	16.40	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_V_Peak

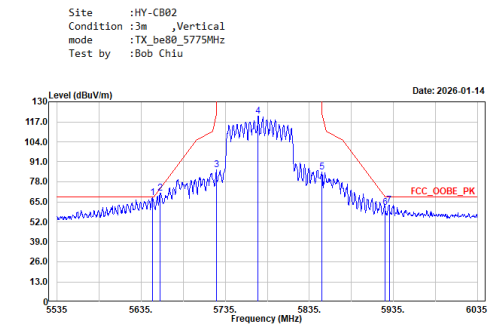


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5640.500	67.59	68.20	-0.61	52.14	15.45	Peak
2	5657.500	70.51	73.76	-3.25	54.97	15.54	Peak
3	5724.500	85.87	121.06	-35.19	69.85	16.02	Peak
4	5774.000	120.55	-----	-----	104.41	16.14	Peak
5	5850.000	84.58	122.20	-37.62	68.42	16.16	Peak
6	5925.000	61.42	68.21	-6.79	45.09	16.33	Peak
7	5930.000	62.97	68.20	-5.23	46.62	16.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H

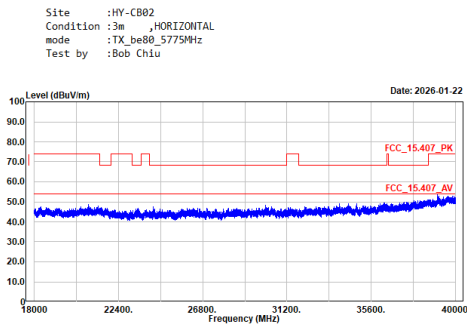

TX_be80_5775MHz_V

