



TX a 5500MHz H

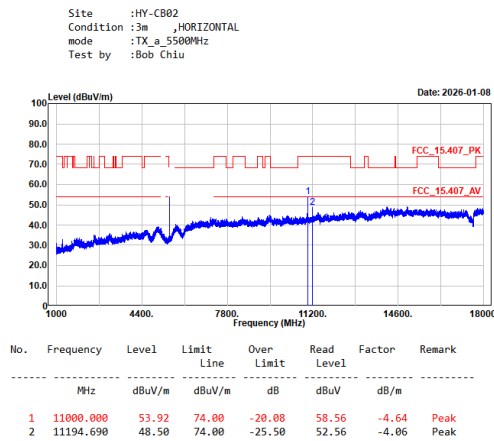


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz V

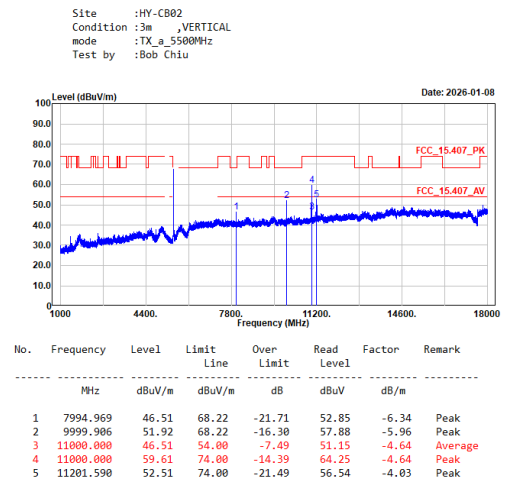


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5580MHz H

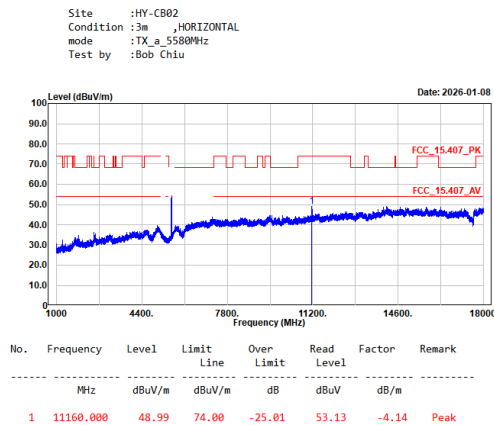


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5580MHz V

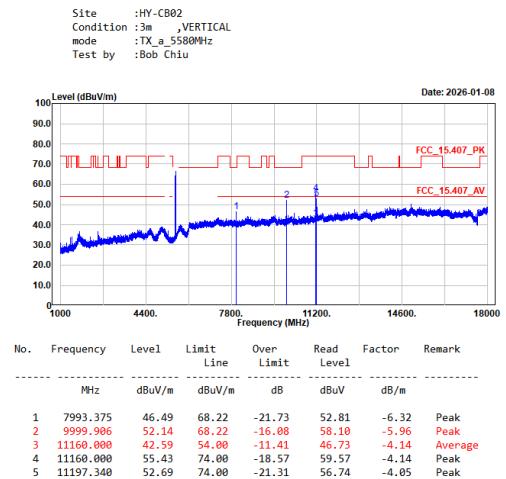


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5700MHz H

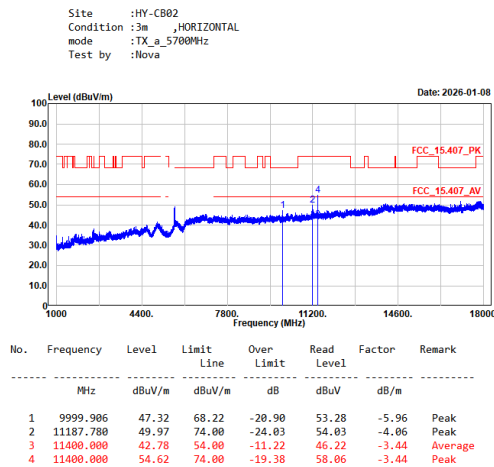


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5700MHz V

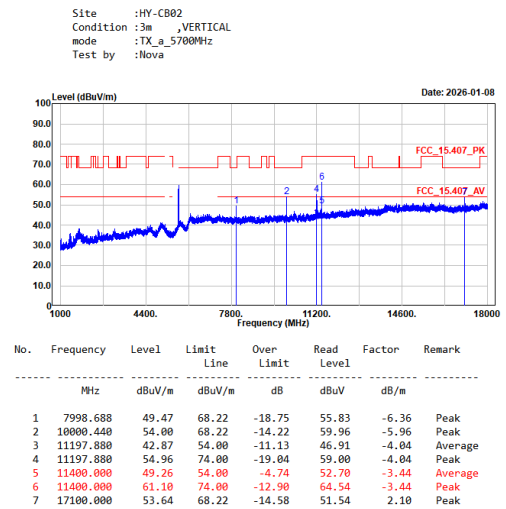


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5720MHz H

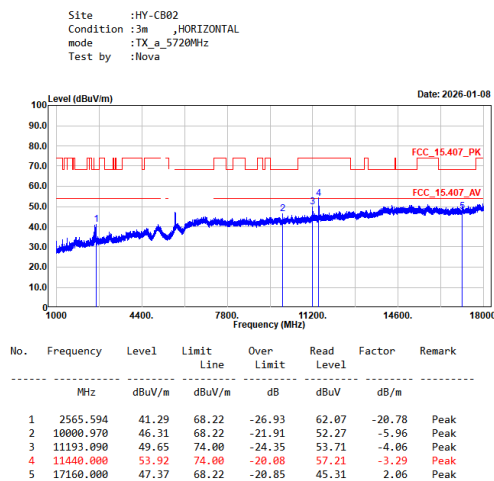


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5720MHz V

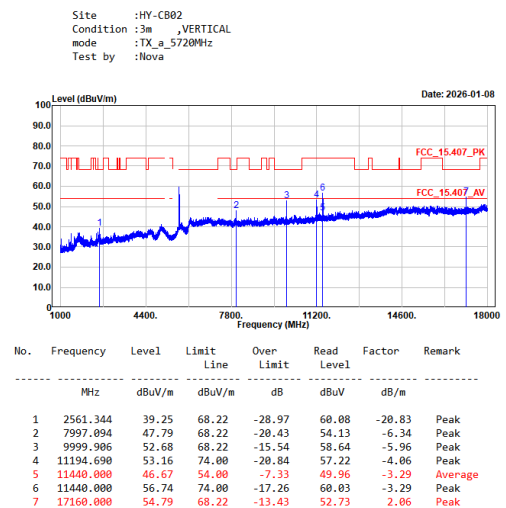


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5745MHz H

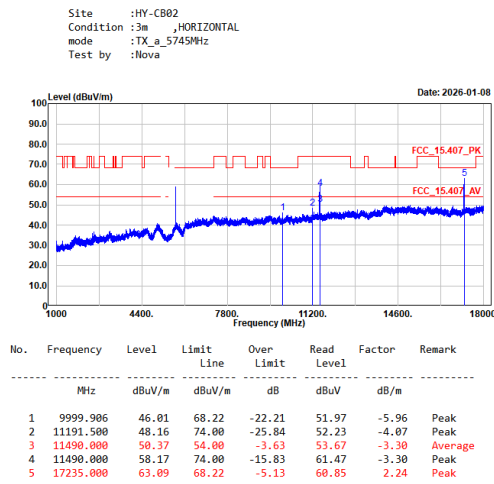


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5745MHz V

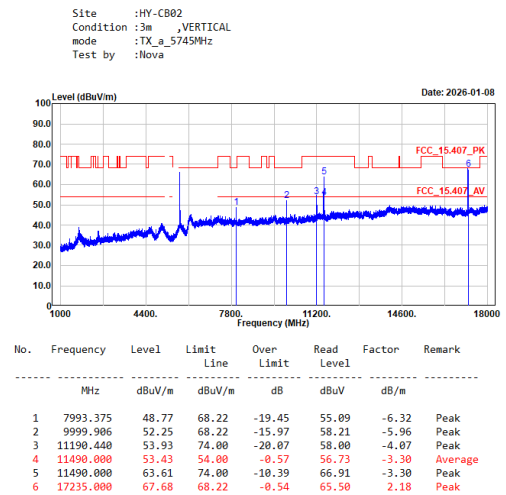


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5785MHz H

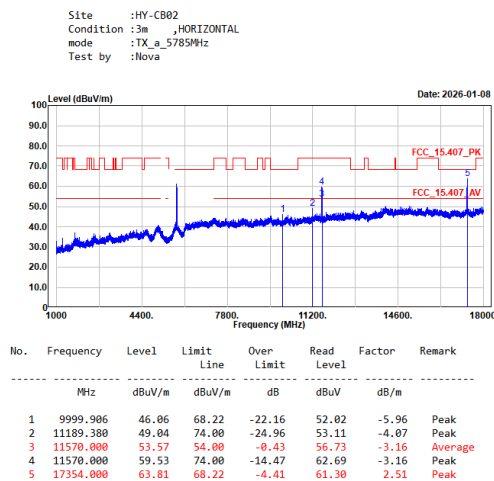


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5785MHz V

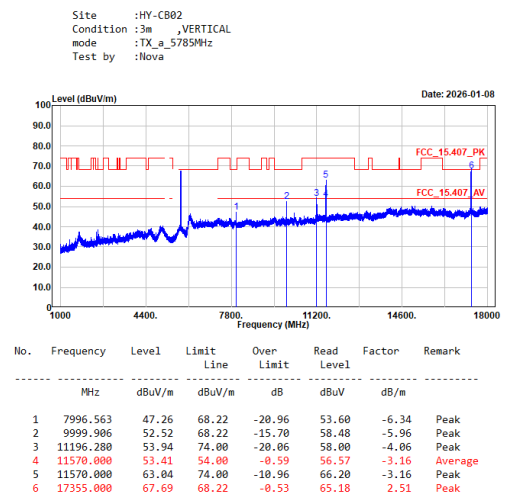


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz H

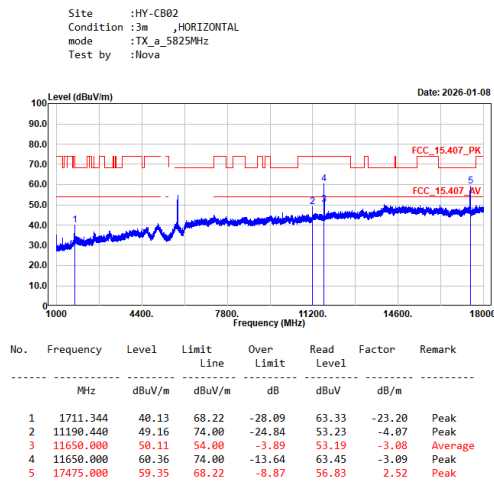


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz V

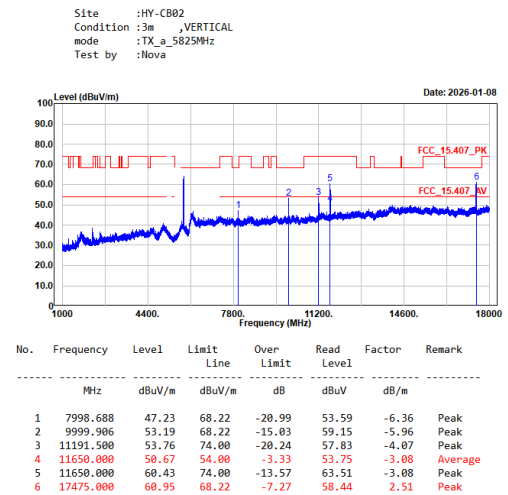


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX ac20 5180MHz H

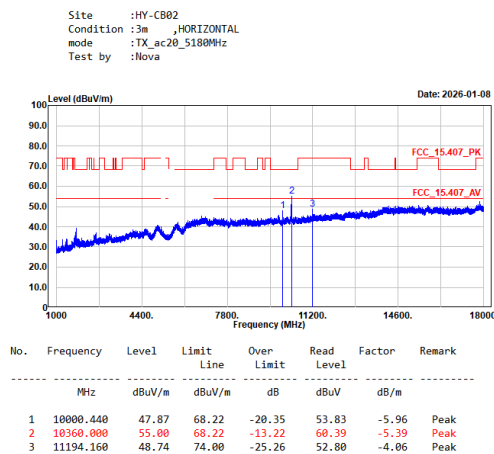


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX ac20 5180MHz V

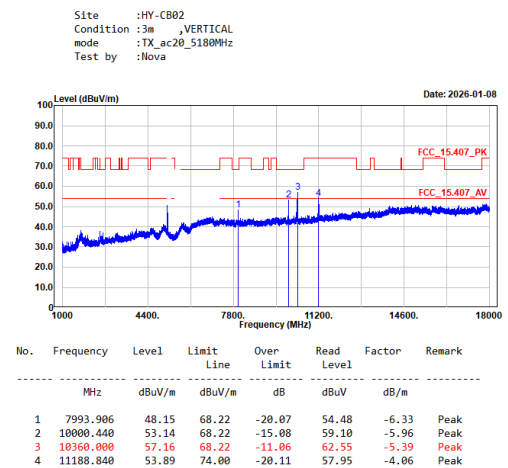


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_H

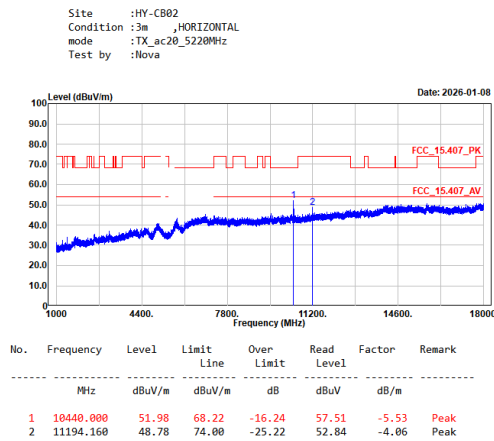


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_V

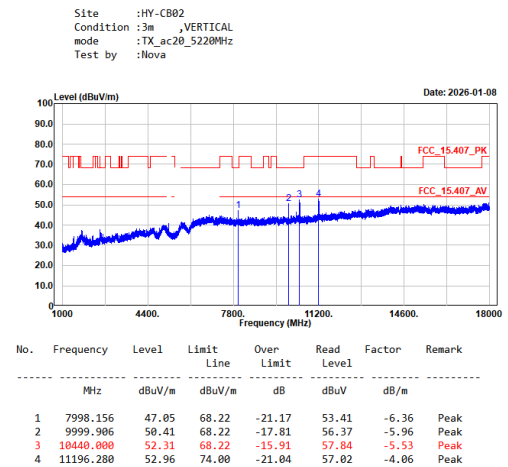


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_H

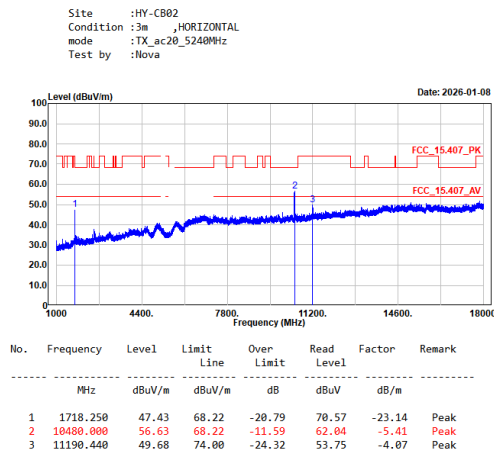


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_V

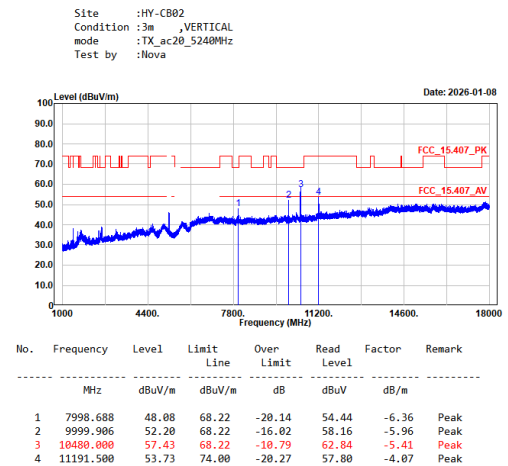


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5260MHz_H

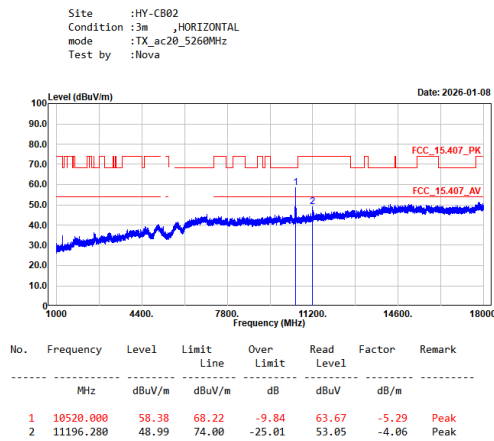


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5260MHz_V

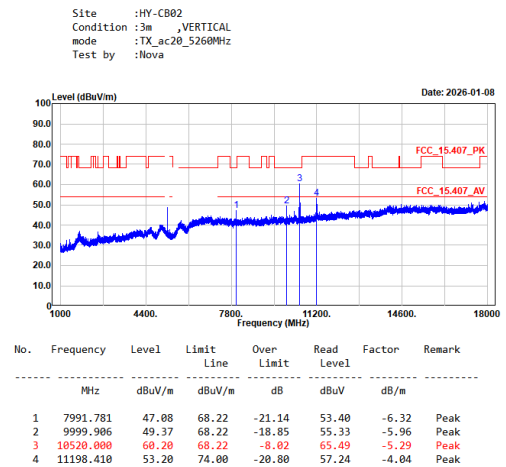


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5300MHz_H

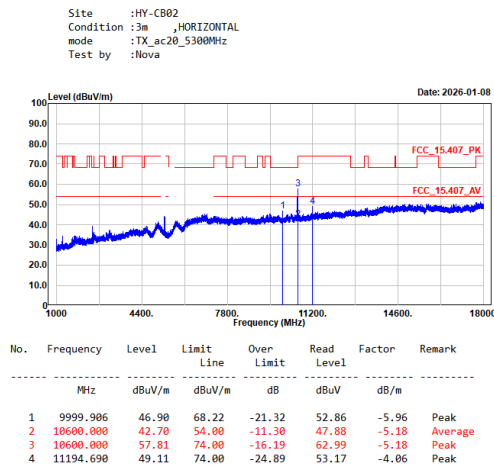


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5300MHz_V

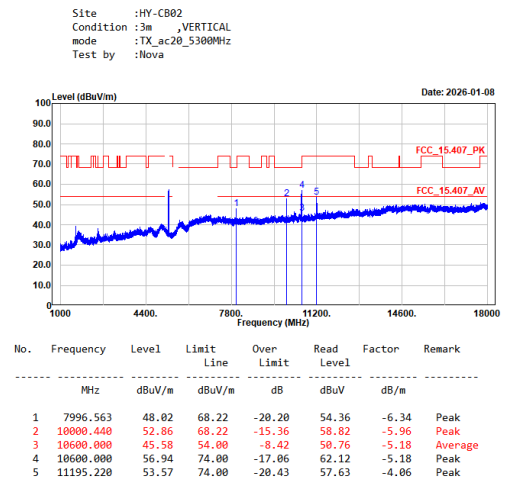


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_H

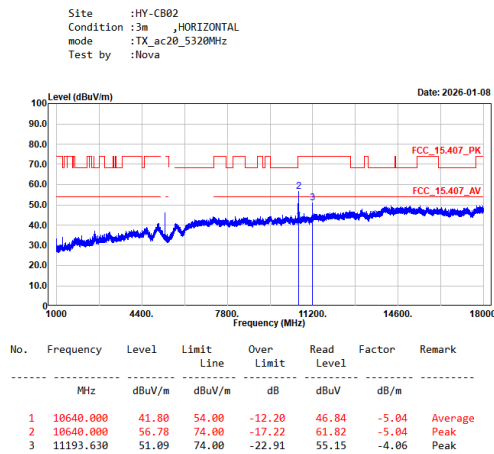


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_V

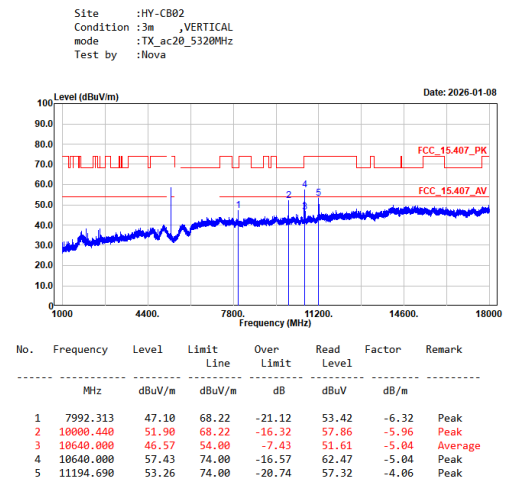


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_H

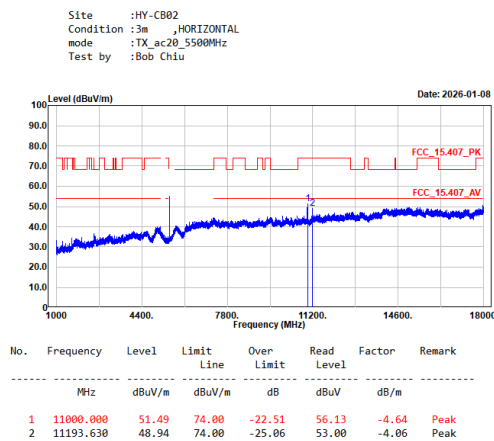


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_V

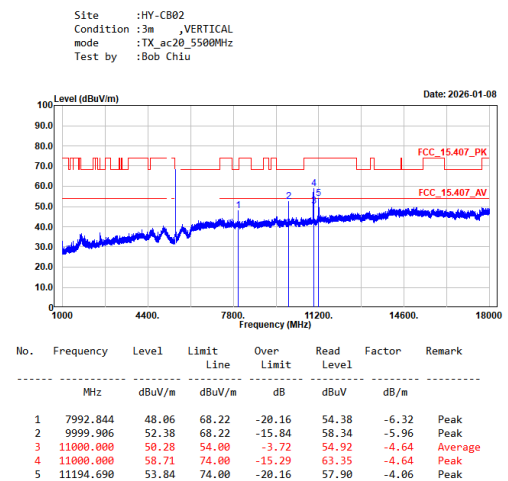


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac20_5580MHz_H

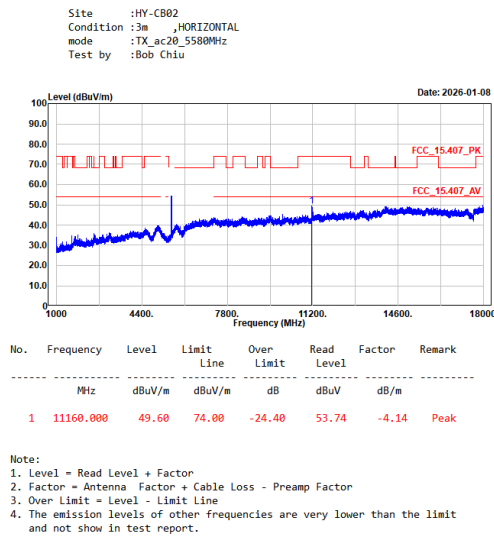


TX_ac20_5580MHz_V

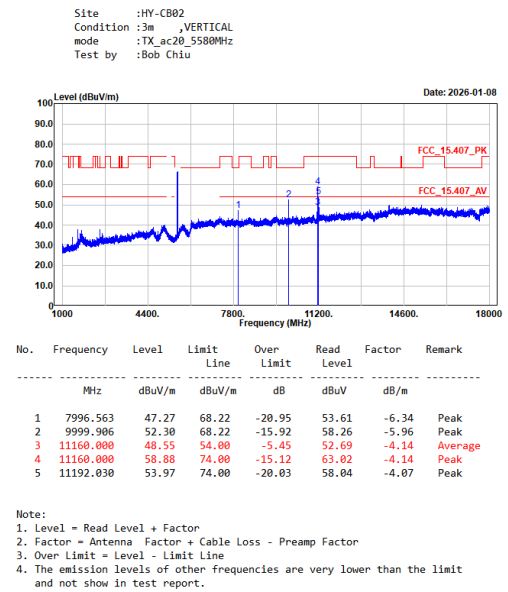


TX_ac20_5700MHz_H

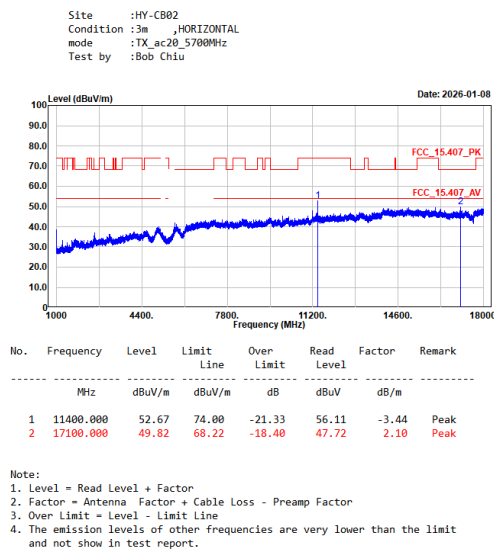

TX_ac20_5700MHz_V

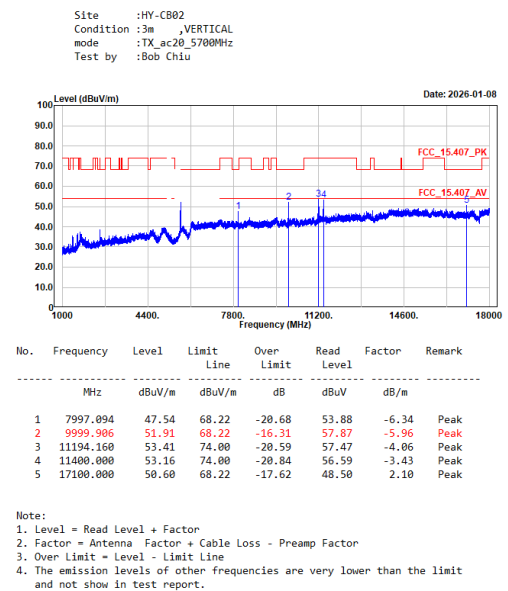


TX_ac20_5720MHz_H

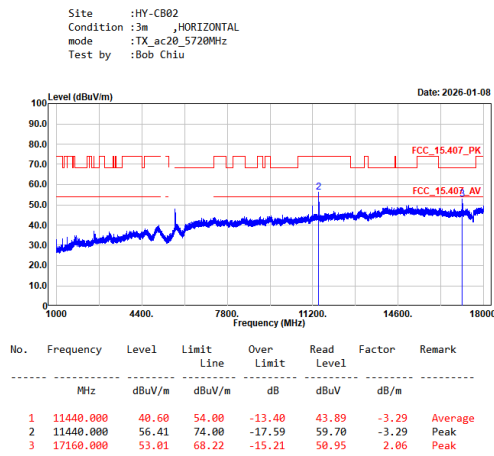


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5720MHz_V

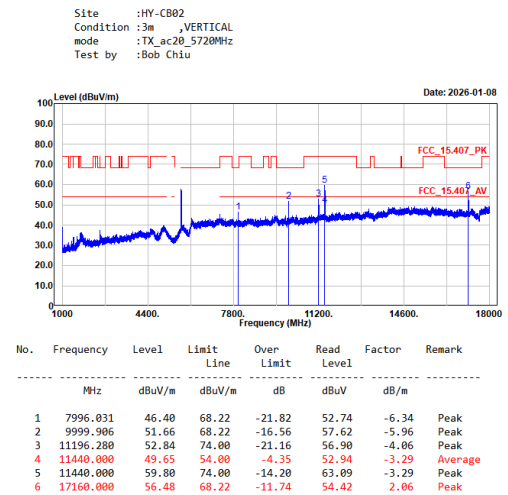


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_H

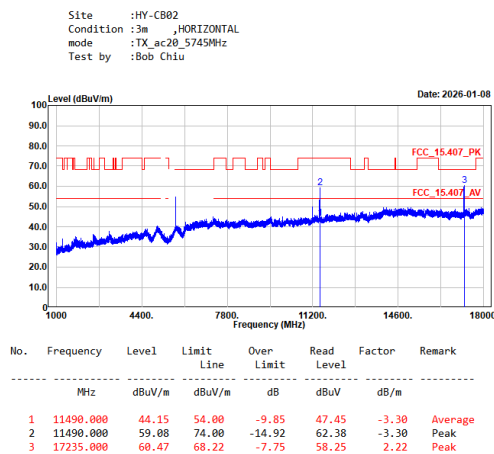


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_V

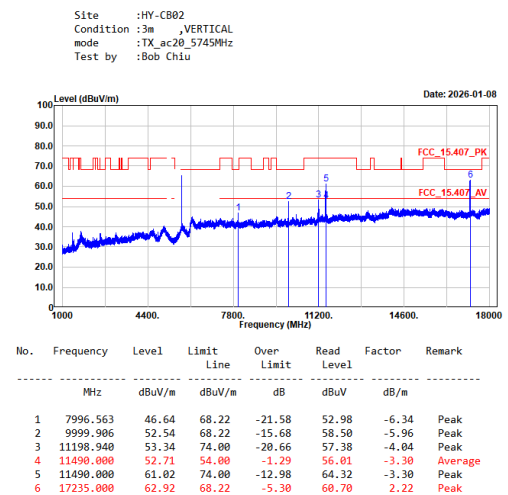


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5785MHz_H

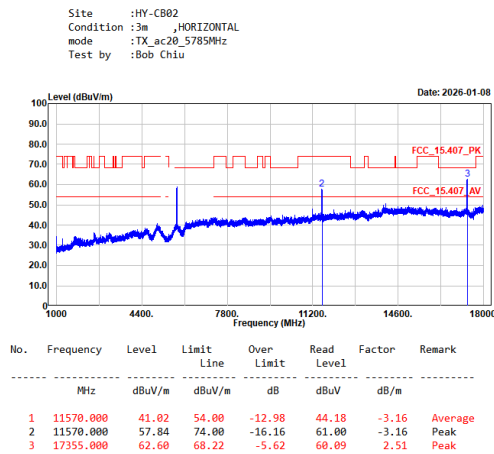


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5785MHz_V

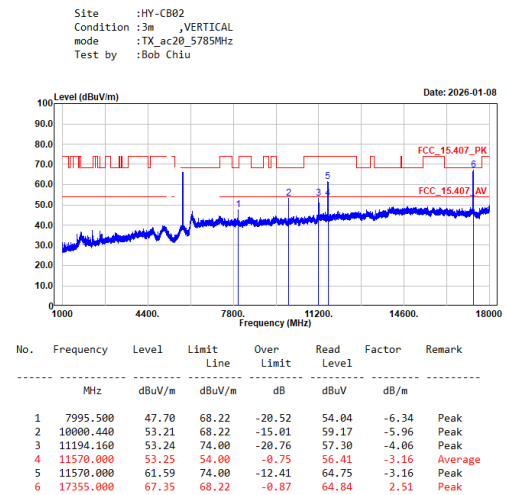


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_H

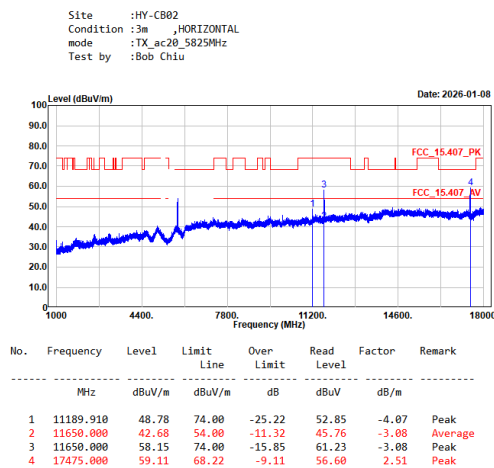


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_V

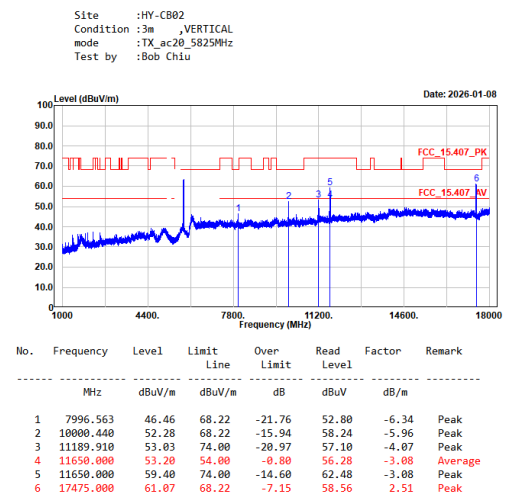


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H

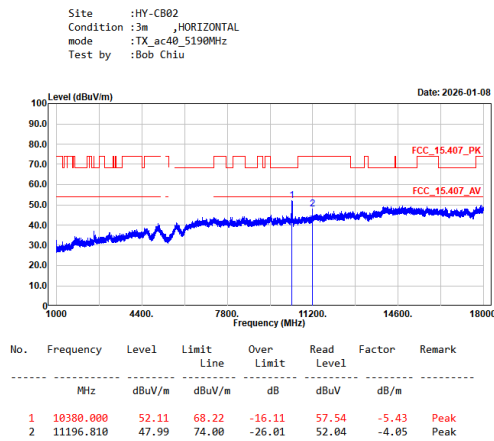


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V

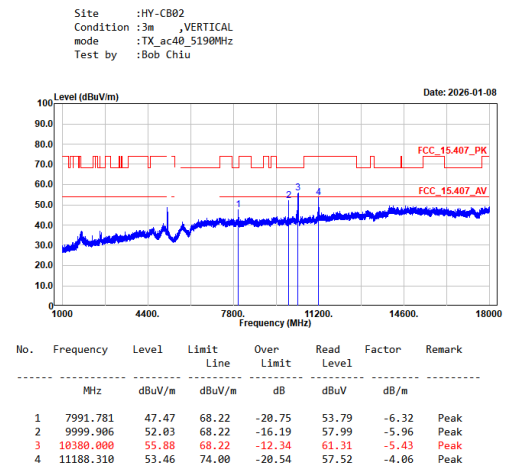


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_H

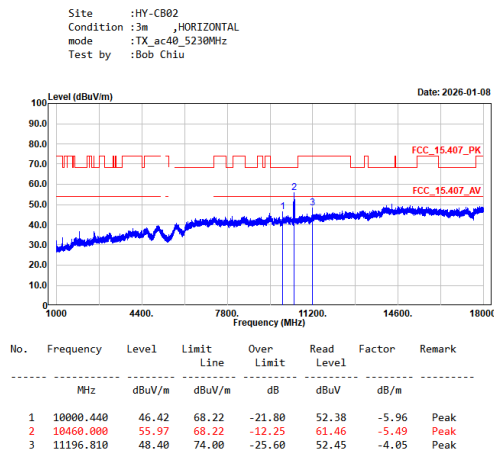


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_V

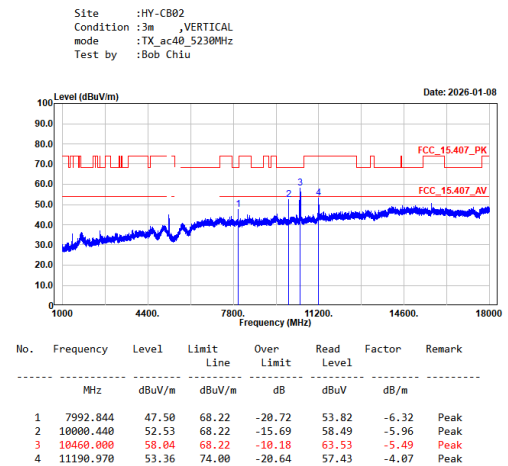


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5270MHz_H

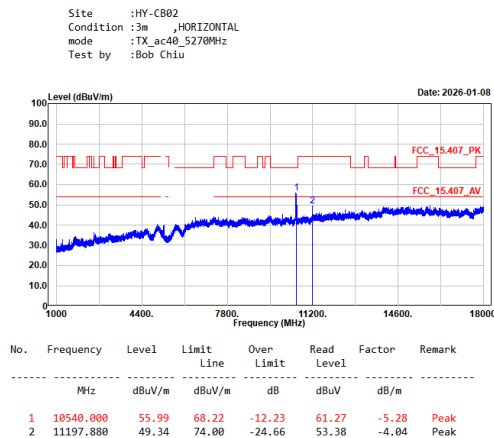


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5270MHz_V

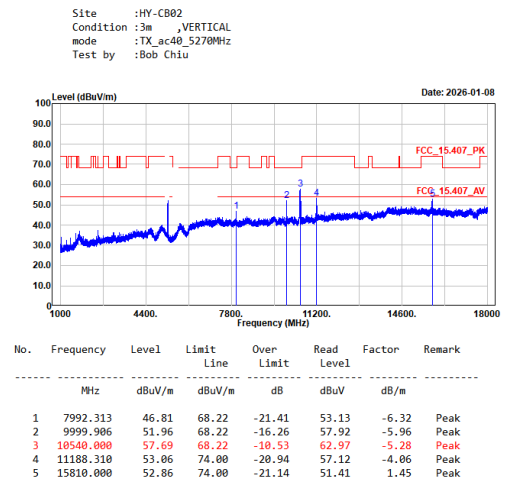


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_H

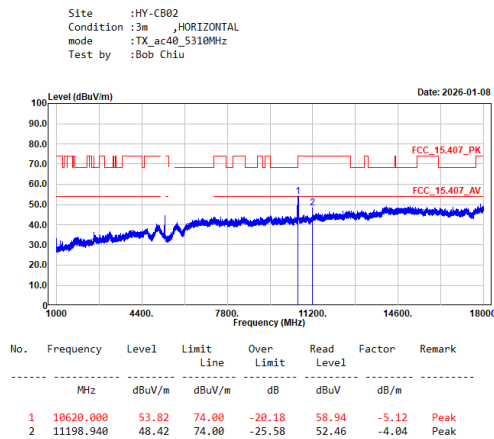


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_V

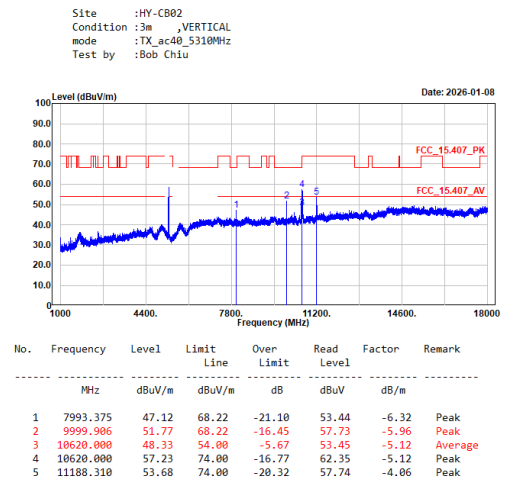


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5510MHz_H

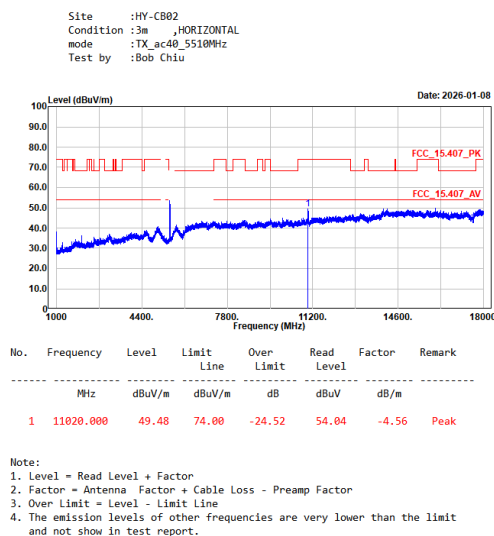


TX_ac40_5510MHz_V

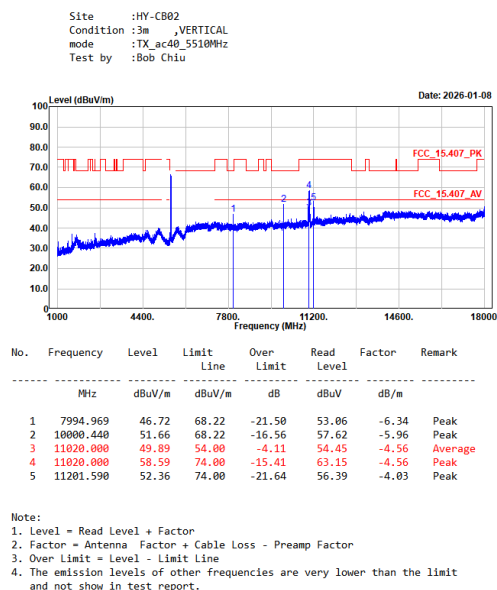


TX_ac40_5550MHz_H

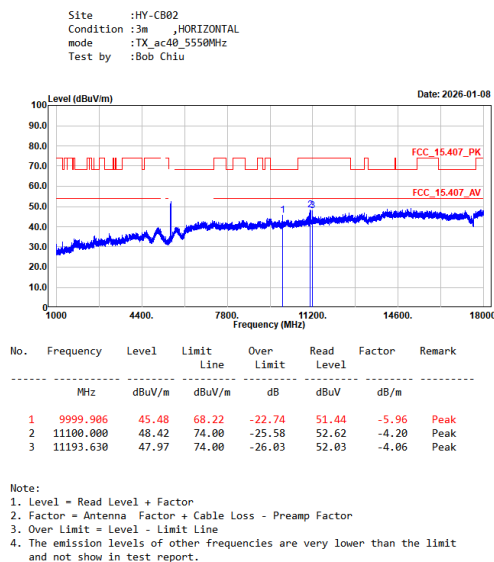

TX_ac40_5550MHz_V

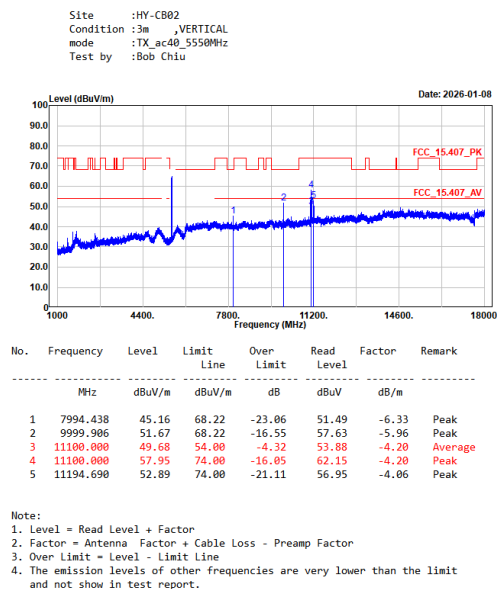


TX_ac40_5670MHz_H

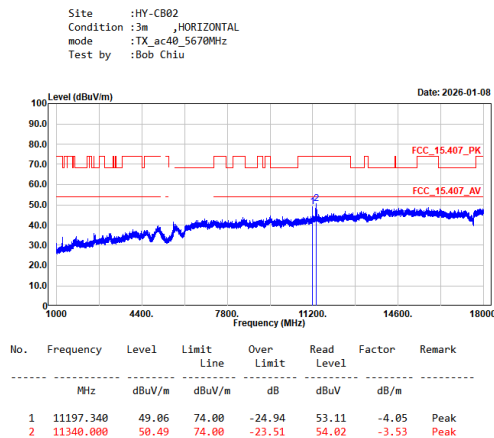


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5670MHz_V

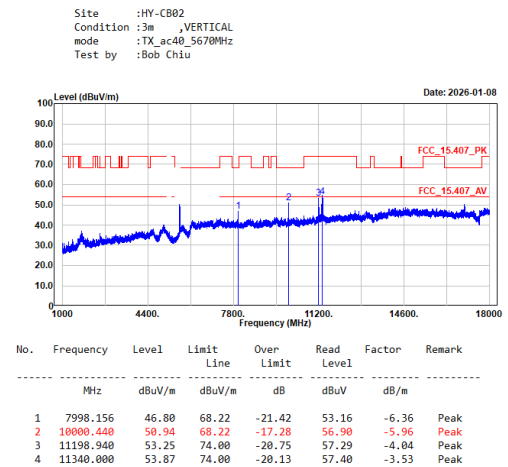


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5710MHz_H

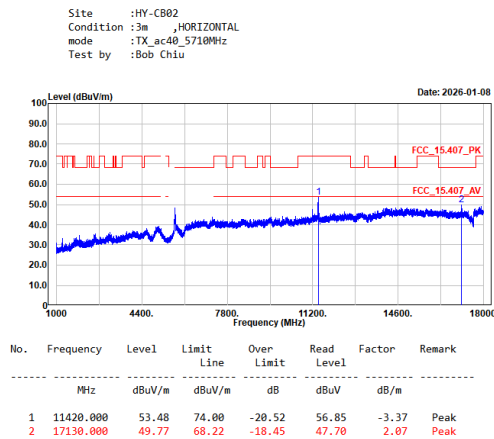

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5710MHz_V

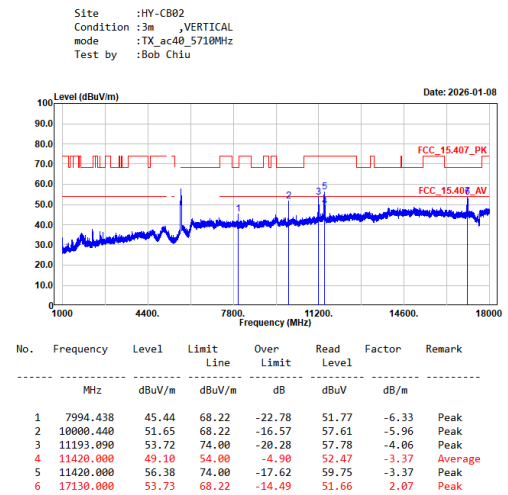

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5755MHz
Test by :Bob Chiu

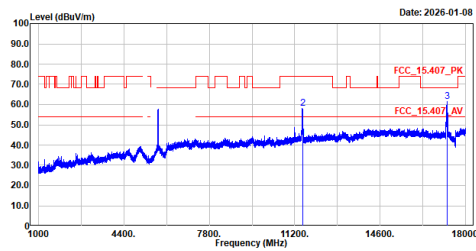


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	43.53	54.00	-10.47	46.81	-3.28	Average
2	11510.000	58.23	74.00	-15.77	61.51	-3.28	Peak
3	17265.000	61.36	68.22	-6.86	59.10	2.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5755MHz
Test by :Bob Chiu

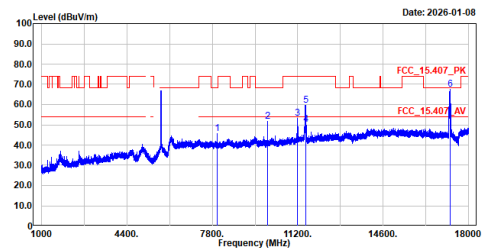


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.906	45.59	68.22	-22.63	51.92	-6.33	Peak
2	10000.440	51.70	68.22	-16.52	57.66	-5.96	Peak
3	11189.910	53.16	74.00	-20.84	57.23	-4.07	Peak
4	11510.000	50.23	54.00	-3.77	53.51	-3.28	Average
5	11510.000	59.65	74.00	-14.35	62.93	-3.28	Peak
6	17265.000	67.53	68.22	-0.69	65.27	2.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5795MHz
Test by :Bob Chiu

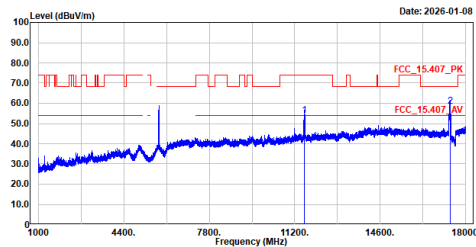


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	53.85	74.00	-20.15	57.00	-3.15	Peak
2	17385.000	58.45	68.22	-9.77	55.79	2.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5795MHz
Test by :Bob Chiu

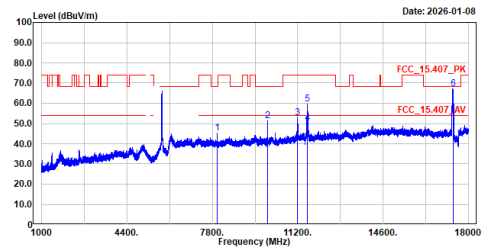


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.438	45.47	68.22	-22.75	51.80	-6.33	Peak
2	9999.906	51.30	68.22	-16.92	57.26	-5.96	Peak
3	11196.280	52.88	74.00	-21.12	56.94	-4.06	Peak
4	11590.000	50.25	54.00	-3.75	53.40	-3.15	Average
5	11590.000	59.50	74.00	-14.50	62.65	-3.15	Peak
6	17385.000	67.00	68.22	-1.22	64.34	2.66	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H

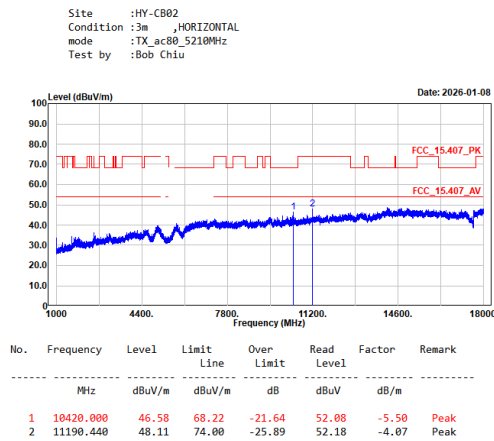


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V

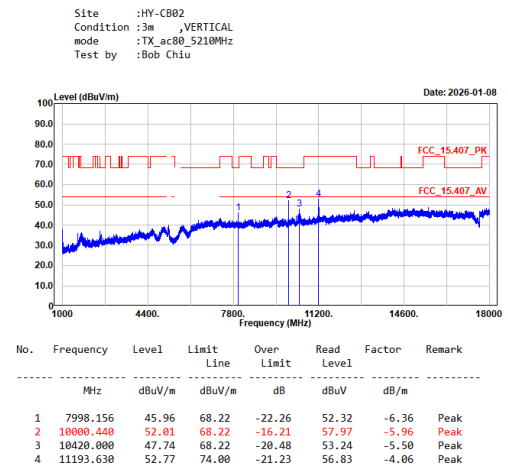


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H

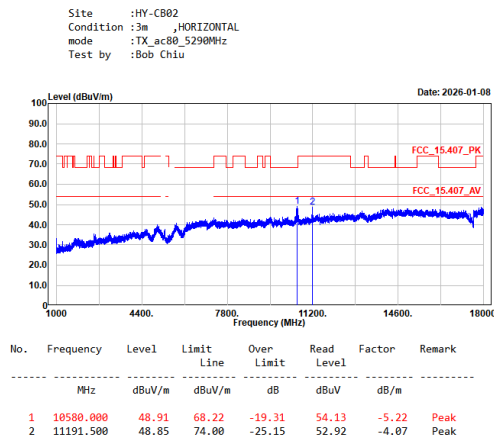


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V

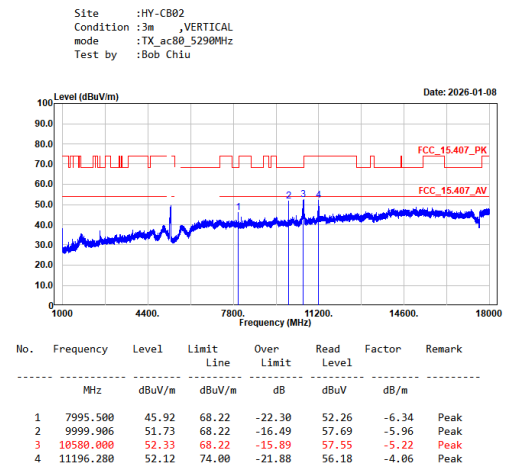


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H

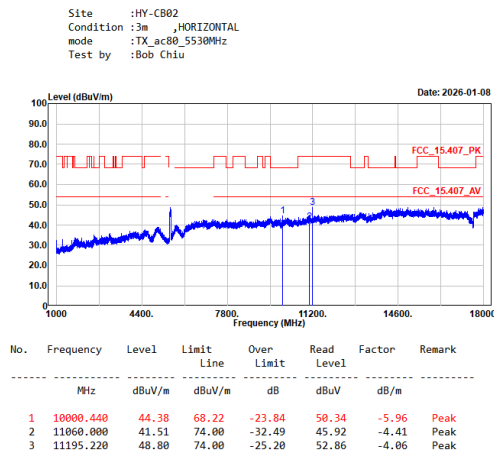


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V

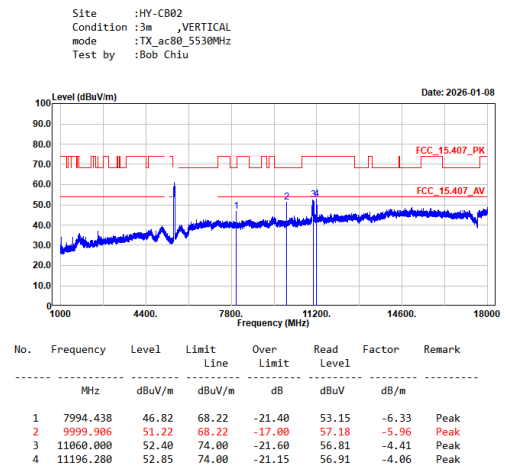


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H

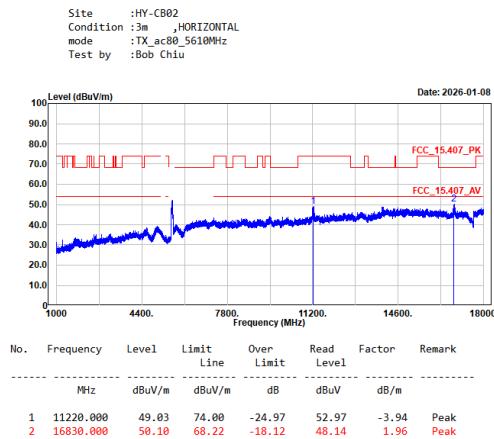


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V

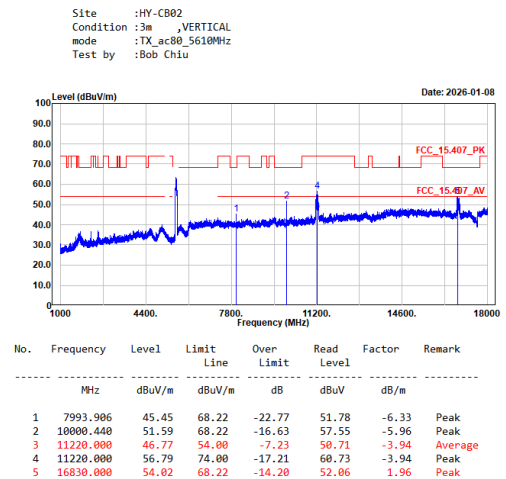


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_H

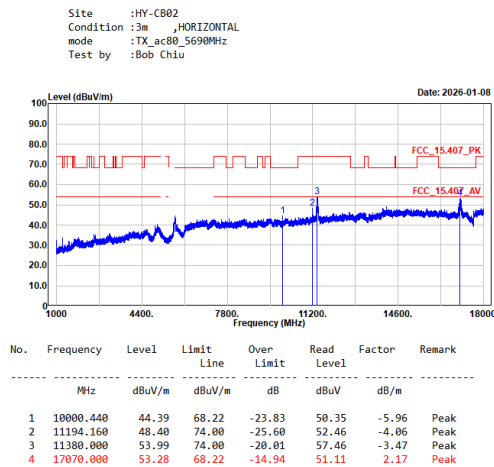


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_V

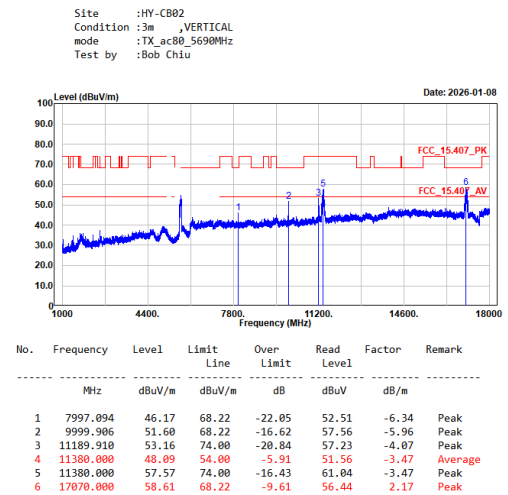


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H

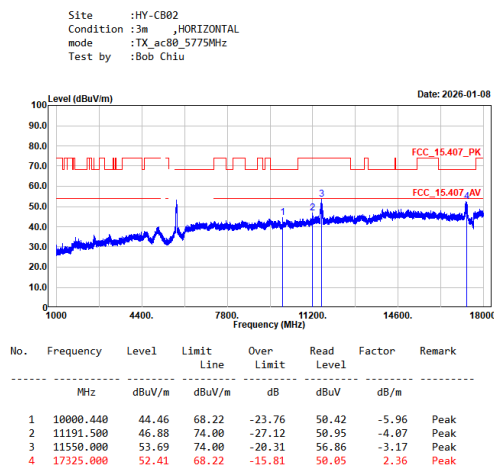


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V

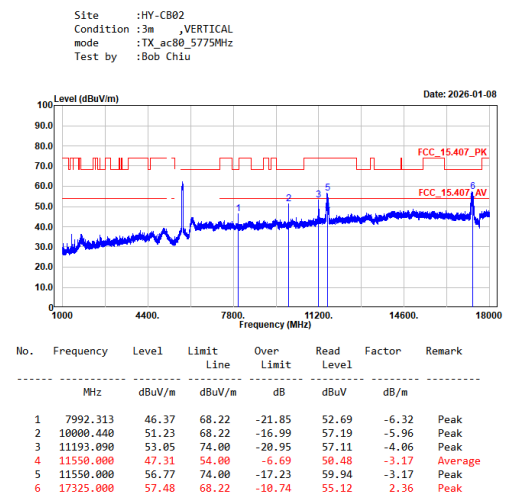


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_H

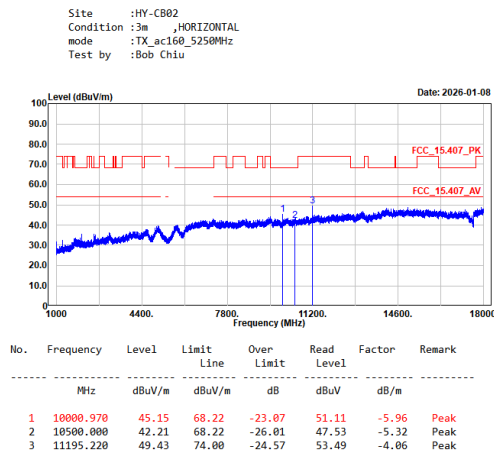


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_V

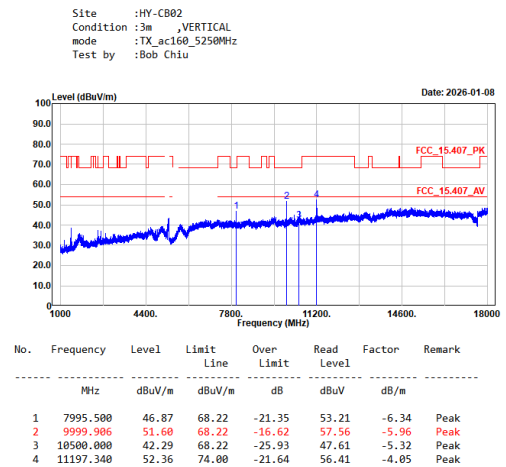


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_H

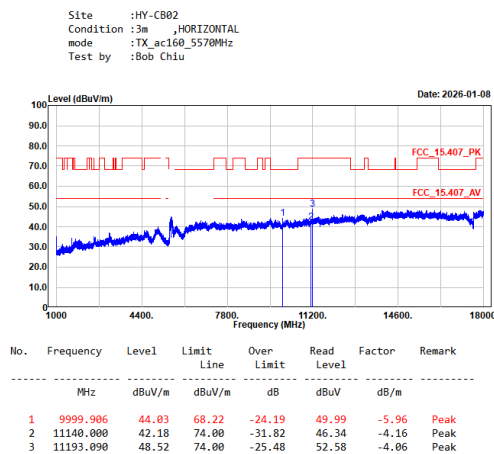


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_V

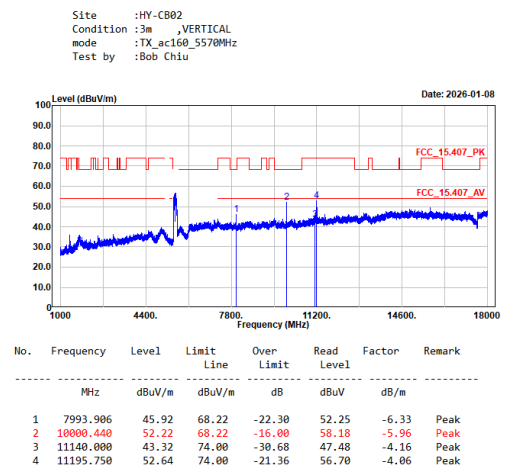


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be20_5180MHz_H

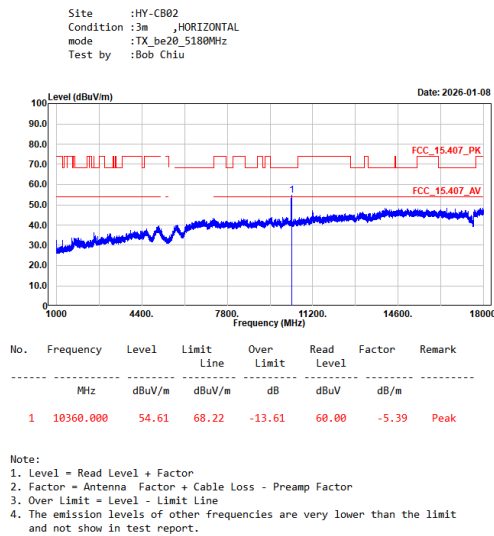


TX_be20_5180MHz_V

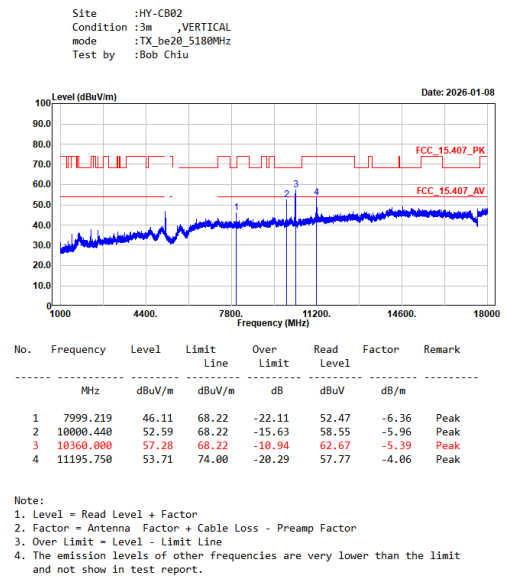


TX_be20_5220MHz_H

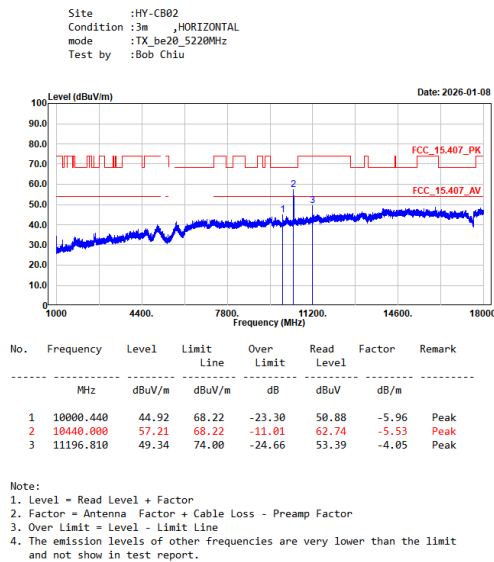

TX_be20_5220MHz_V

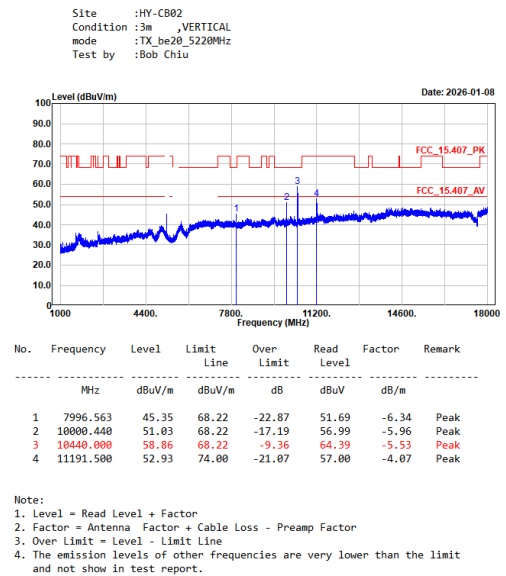


TX_be20_5240MHz_H

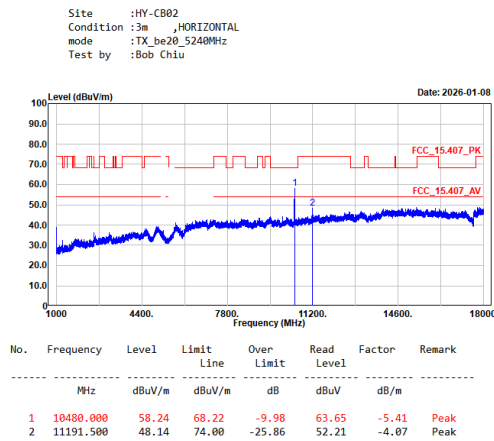


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_V

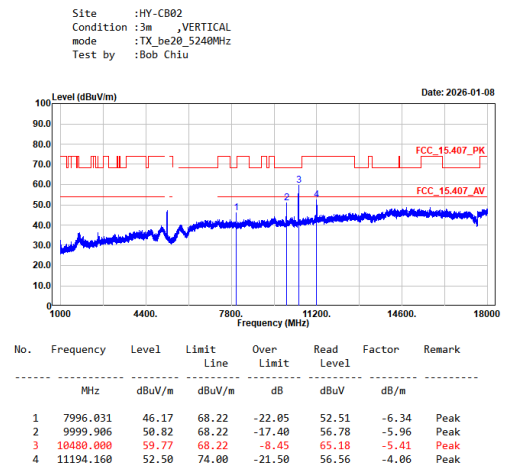


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5260MHz_H

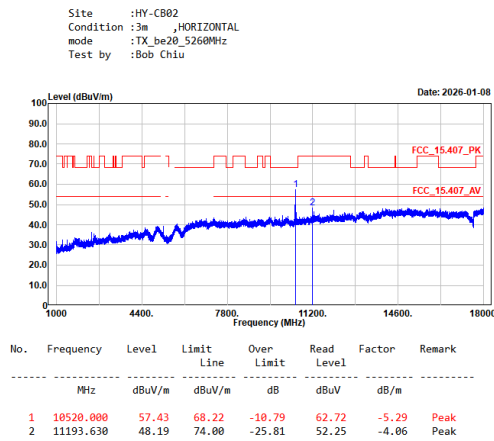


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5260MHz_V

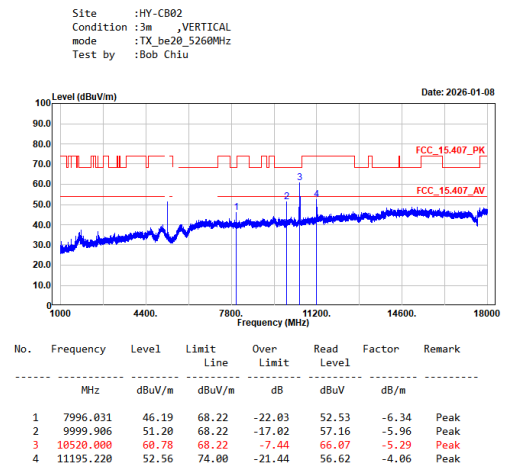


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5300MHz H

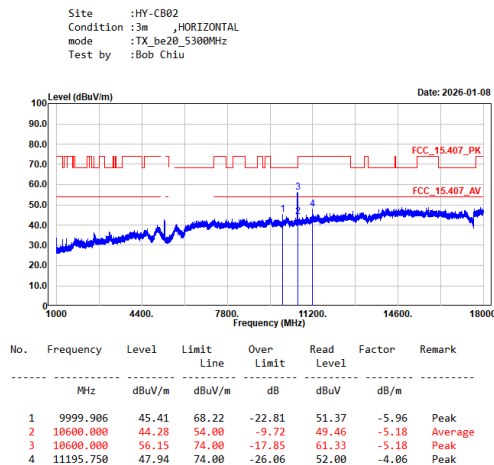


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5300MHz V

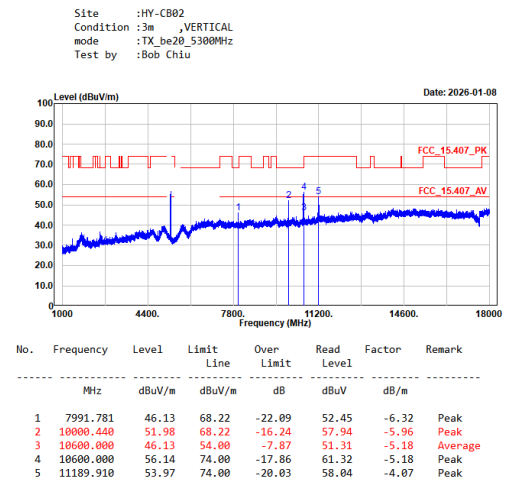


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5320MHz H

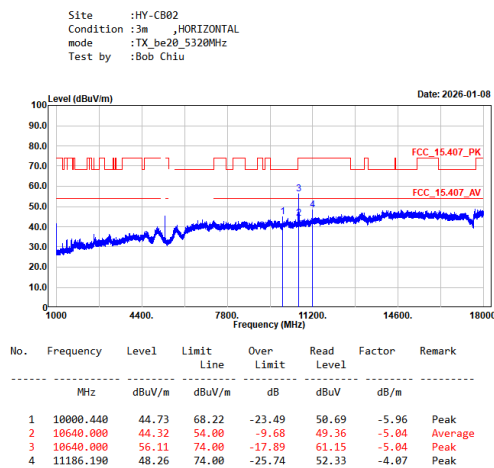


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5320MHz V

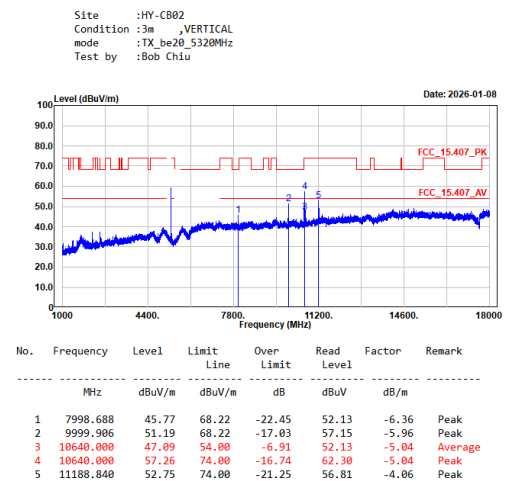


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5500MHz H

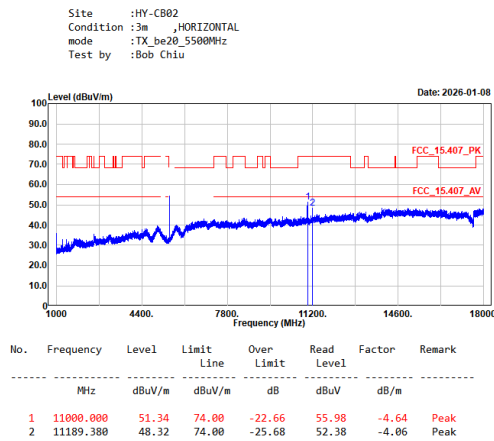


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5500MHz V

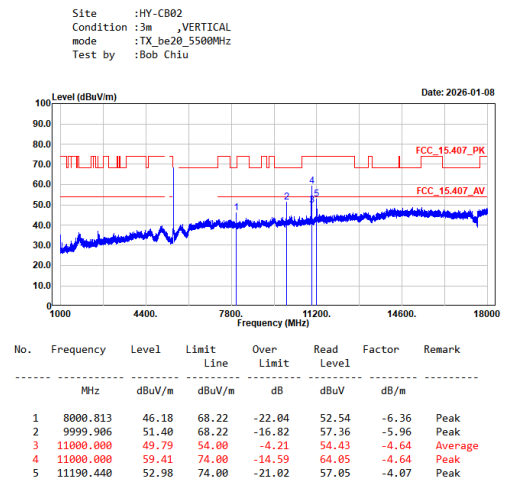


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5580MHz H

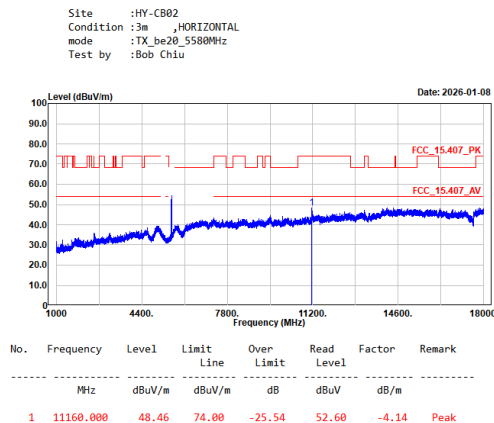


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5580MHz V

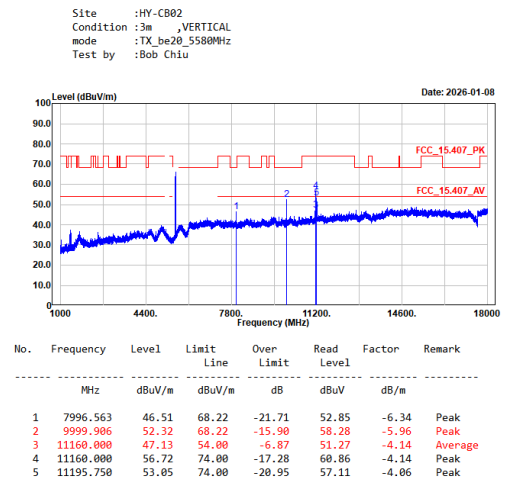


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be20_5700MHz_H

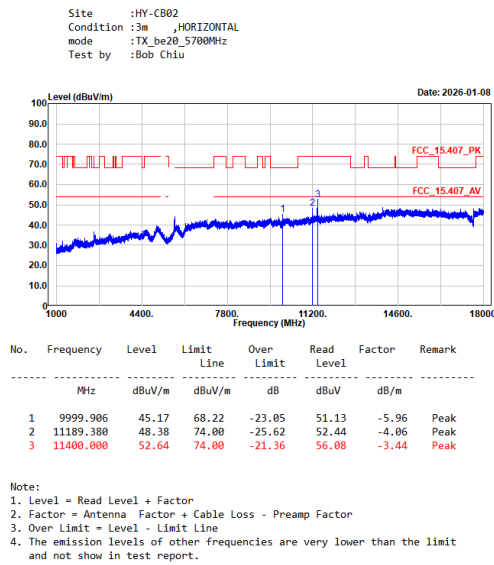


TX_be20_5700MHz_V

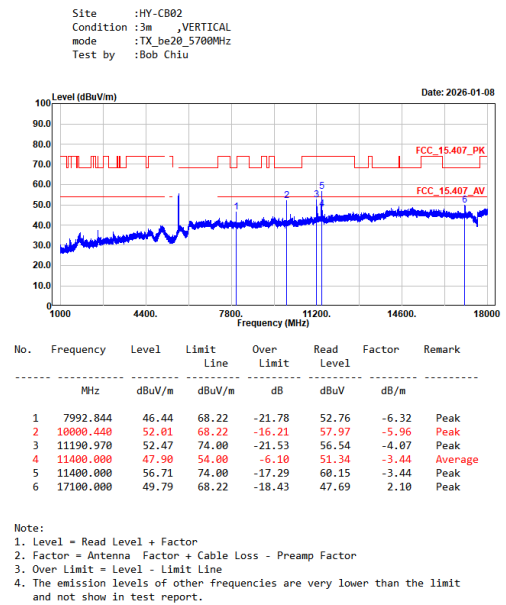

TX_be20_5720MHz_H

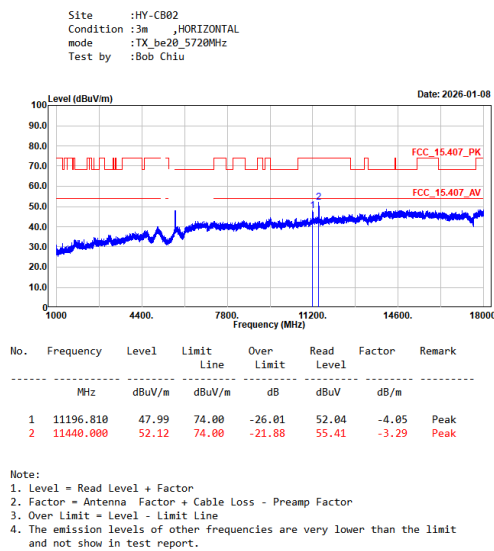


TX_be20_5720MHz_V

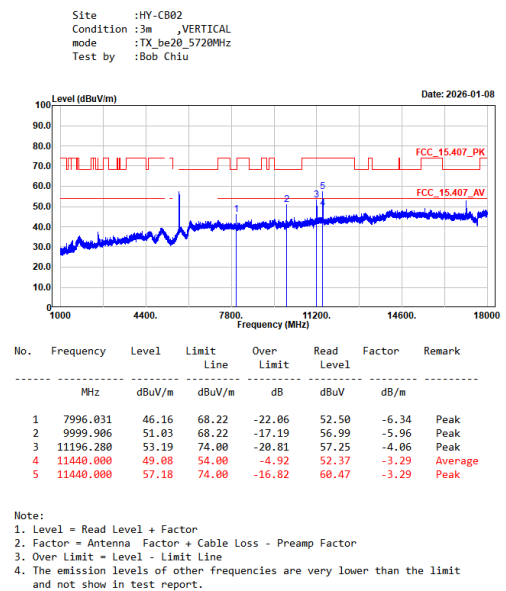

TX be20 5745MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5745MHz
Test by :Bob Chiu

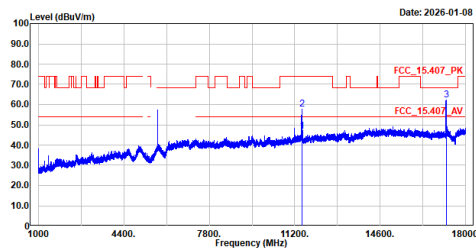


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	46.88	54.00	-7.12	50.18	-3.30	Average
2	11490.000	57.82	74.00	-16.18	61.12	-3.30	Peak
3	17235.000	62.39	68.22	-5.83	68.17	2.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5745MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5745MHz
Test by :Bob Chiu

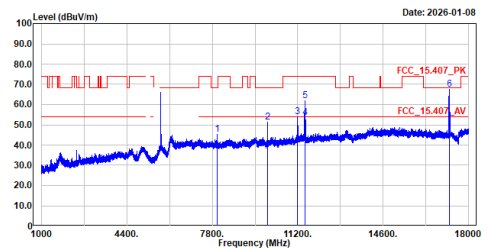


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	8000.281	45.45	68.22	-22.77	51.81	-6.36	Peak
2	9999.906	51.34	68.22	-16.88	57.30	-5.96	Peak
3	11186.190	53.91	74.00	-20.09	57.98	-4.07	Peak
4	11490.000	53.44	54.00	-0.56	56.74	-3.30	Average
5	11490.000	62.04	74.00	-11.96	65.34	-3.30	Peak
6	17235.000	67.41	68.22	-0.81	65.20	2.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5785MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5785MHz
Test by :Bob Chiu

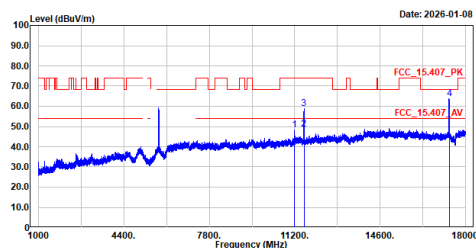


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11195.750	48.49	74.00	-25.51	52.55	-4.06	Peak
2	11570.000	48.62	54.00	-5.38	51.78	-3.16	Average
3	11570.000	58.86	74.00	-15.14	62.02	-3.16	Peak
4	17355.000	63.73	68.22	-4.49	61.22	2.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5785MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5785MHz
Test by :Bob Chiu

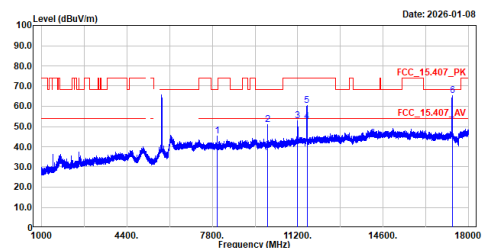


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.375	45.41	68.22	-22.81	51.73	-6.32	Peak
2	9999.906	50.96	68.22	-17.26	56.92	-5.96	Peak
3	11188.310	52.83	74.00	-21.17	56.89	-4.06	Peak
4	11570.000	52.44	54.00	-1.56	55.60	-3.16	Average
5	11570.000	60.40	74.00	-13.60	63.56	-3.16	Peak
6	17355.000	65.22	68.22	-3.00	62.71	2.51	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5825MHz H

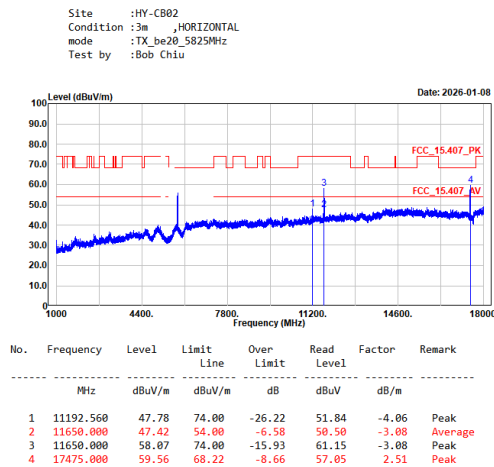


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5825MHz V

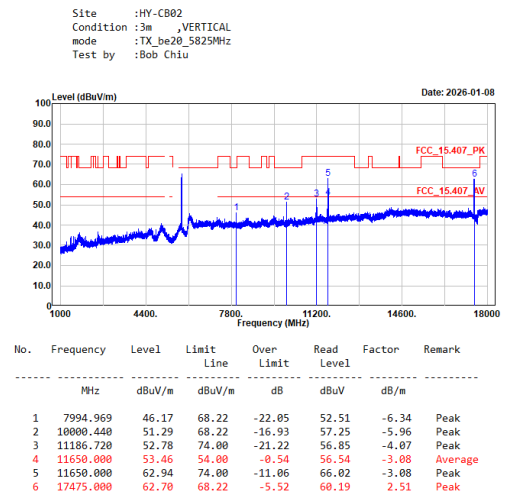


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5190MHz H

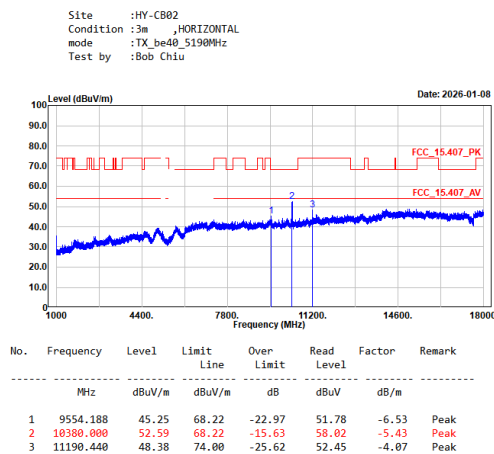


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5190MHz V

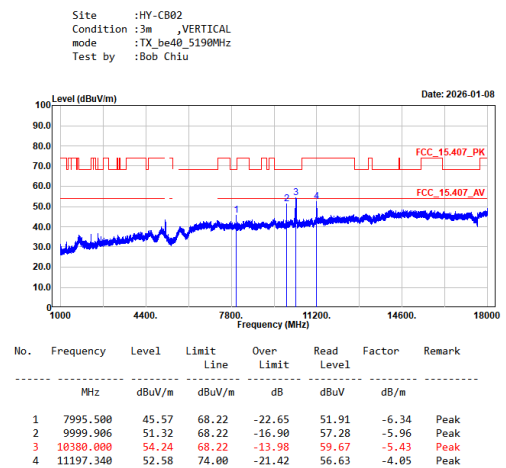


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5230MHz H

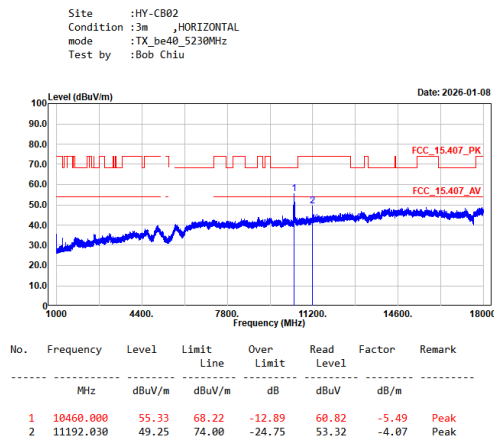


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5230MHz V

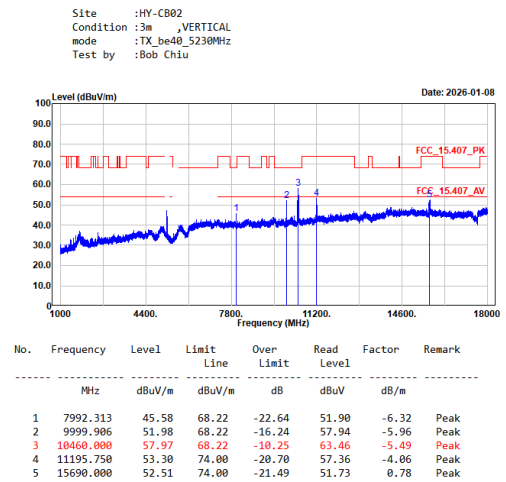


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5270MHz H

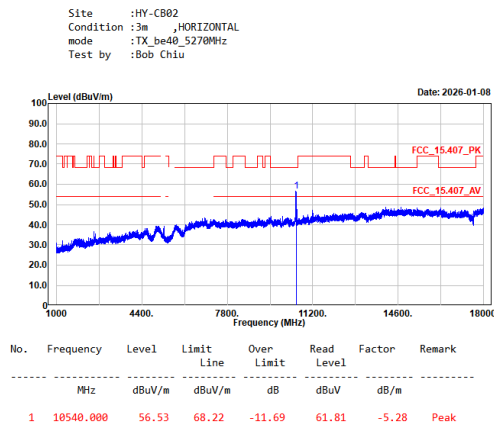


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5270MHz V

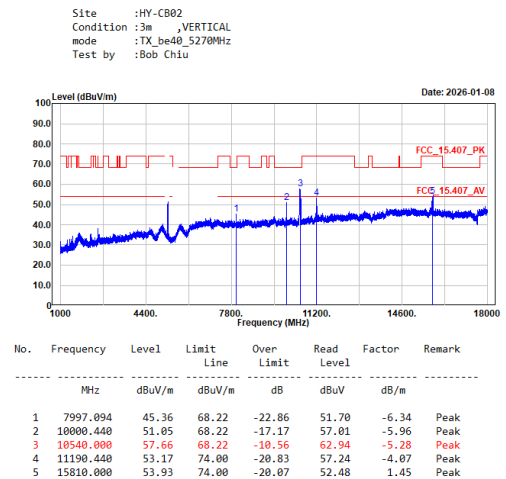


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz H

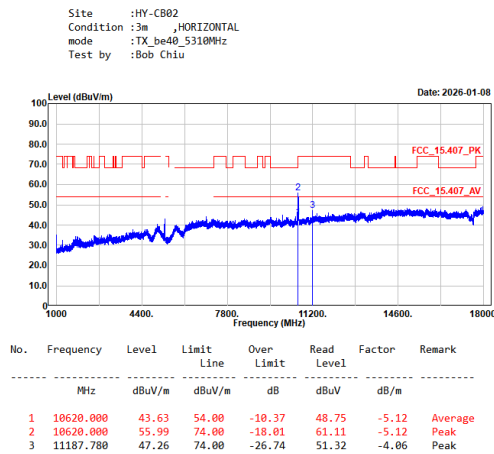


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz V

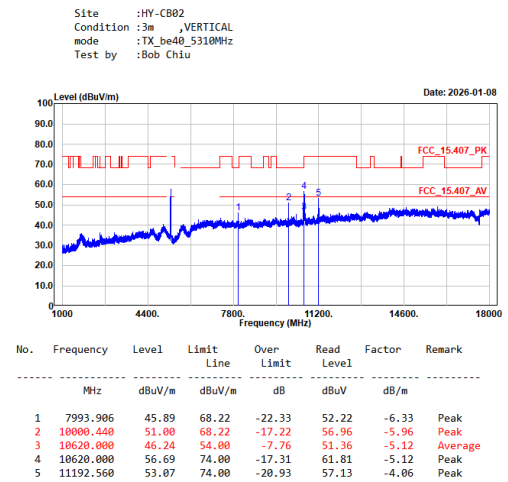


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5510MHz H

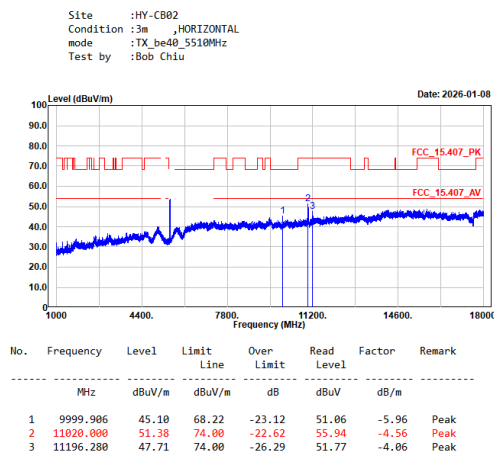


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5510MHz V

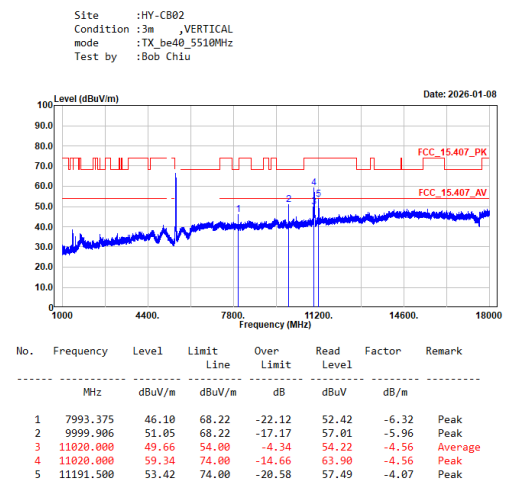


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5550MHz H

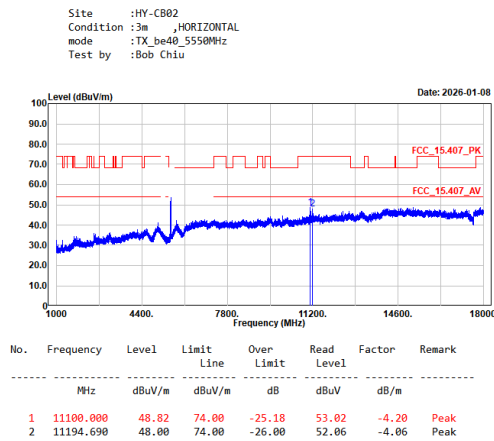


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5550MHz V

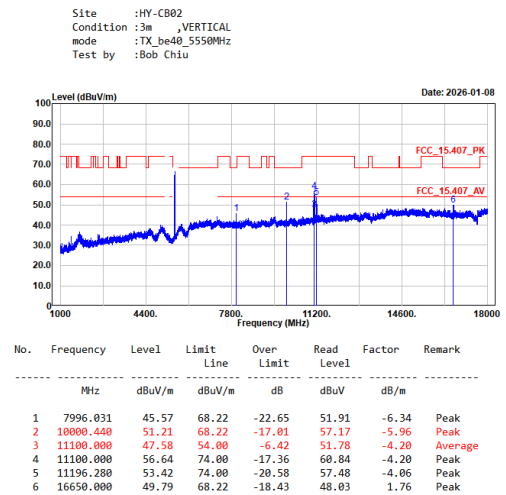


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5670MHz H

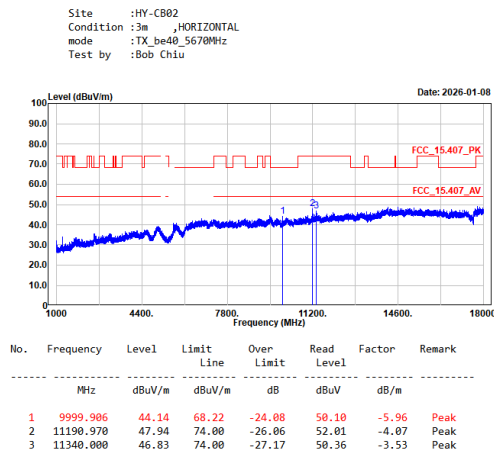


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5670MHz V

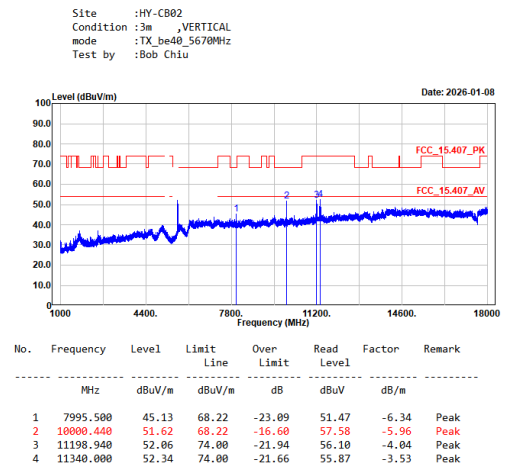


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5710MHz H

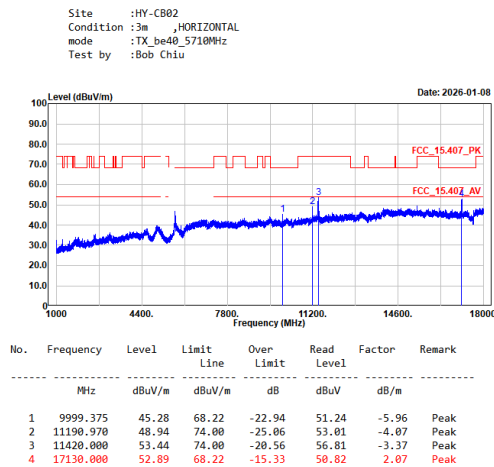


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5710MHz V

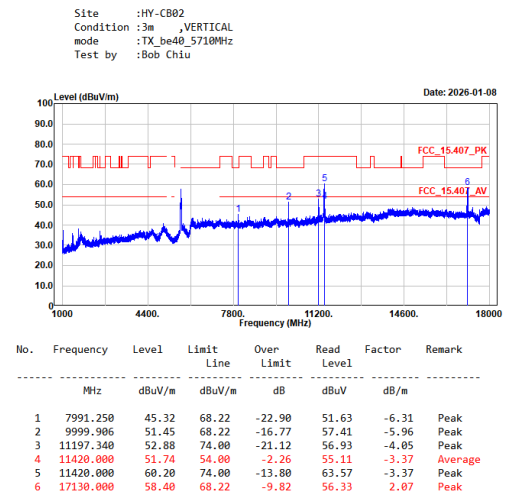


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5755MHz H

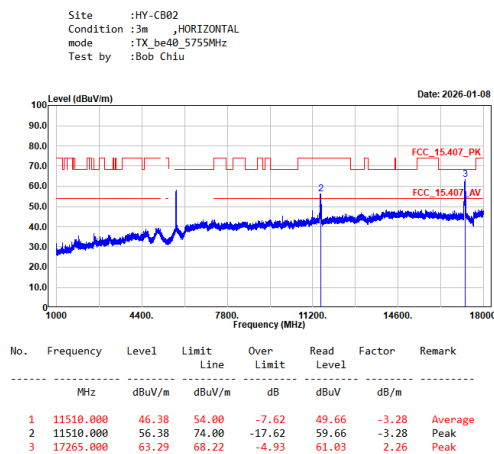

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be40 5755MHz V

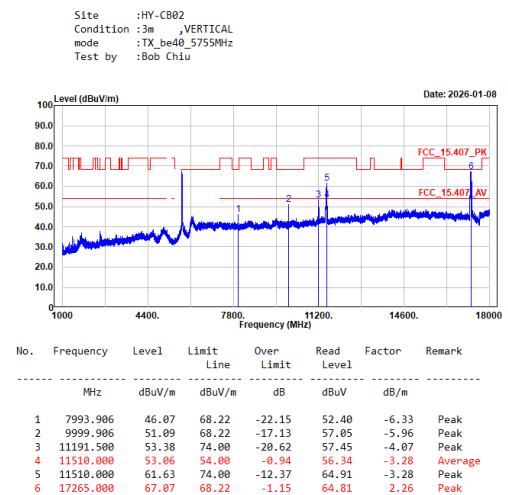

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5795MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be40_5795MHz
Test by :Bob Chiu

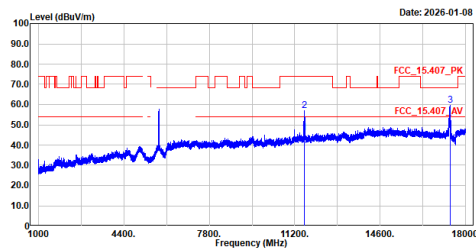


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	46.05	54.00	-7.95	49.20	-3.15	Average
2	11590.000	56.90	74.00	-17.10	60.05	-3.15	Peak
3	17385.000	59.60	68.22	-8.62	56.94	2.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5795MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be40_5795MHz
Test by :Bob Chiu

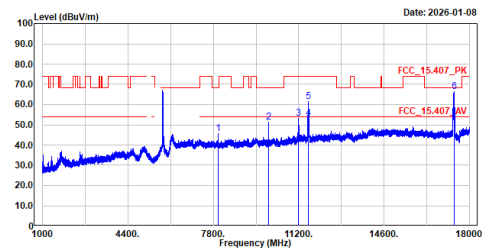


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	8000.813	45.77	68.22	-22.45	52.13	-6.36	Peak
2	9999.906	51.43	68.22	-16.79	57.39	-5.96	Peak
3	11185.130	53.13	74.00	-20.87	57.20	-4.07	Peak
4	11590.000	53.06	54.00	-0.94	56.21	-3.15	Average
5	11590.000	61.42	74.00	-12.58	64.57	-3.15	Peak
6	17385.000	66.42	68.22	-1.80	63.76	2.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5210MHz
Test by :Nova

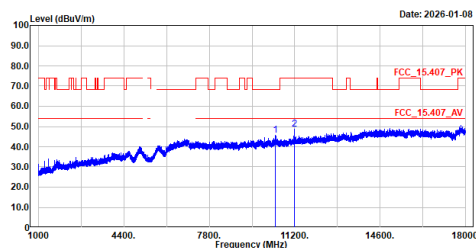


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	45.76	68.22	-22.46	51.29	-5.53	Peak
2	11190.440	48.56	74.00	-25.44	52.63	-4.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5210MHz
Test by :Nova

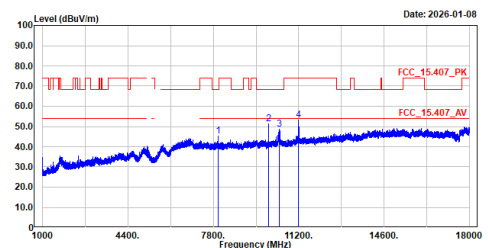


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7991.250	45.40	68.22	-22.82	51.71	-6.31	Peak
2	9999.906	51.28	68.22	-16.94	57.24	-5.96	Peak
3	10420.000	48.65	68.22	-19.57	54.19	-5.54	Peak
4	11197.880	53.16	74.00	-20.84	57.20	-4.04	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H

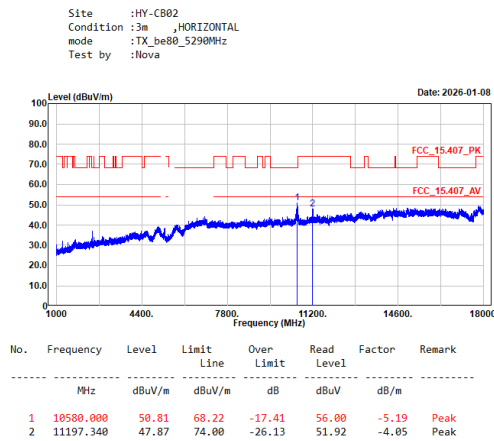


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_V

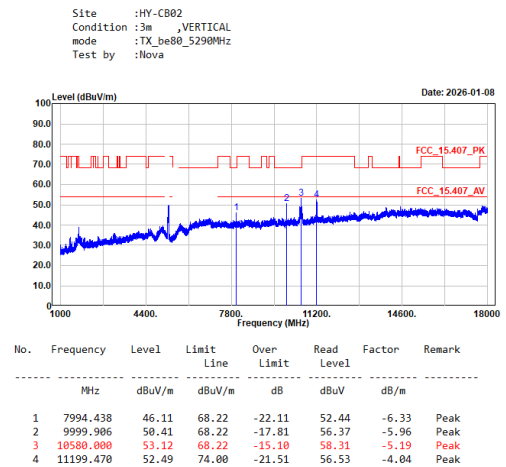


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_H

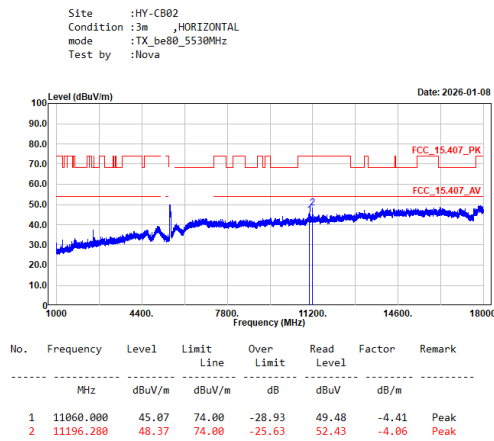


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V

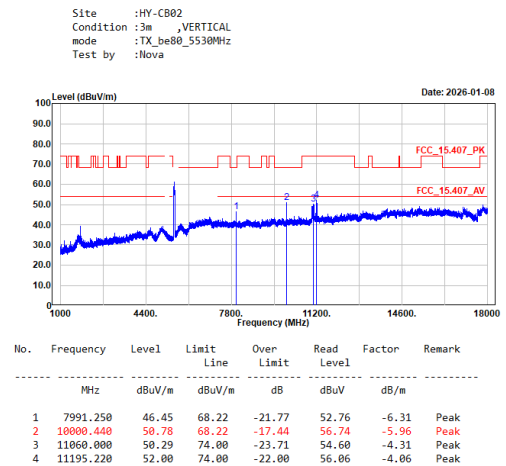


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5610MHz_H

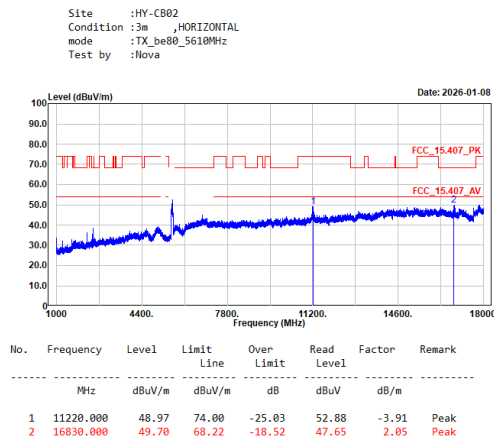


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5610MHz_V

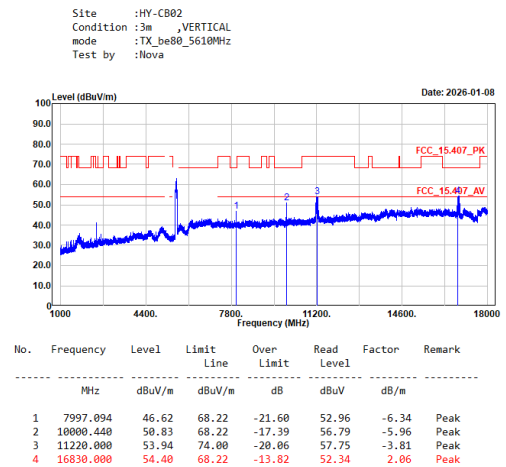


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5690MHz_H

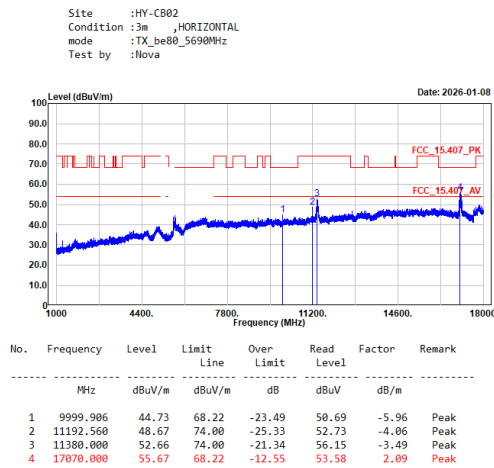

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be80_5690MHz_V

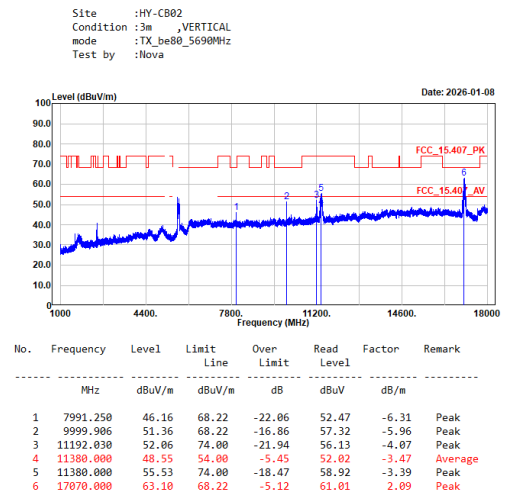

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5775MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5775MHz
Test by :Nova

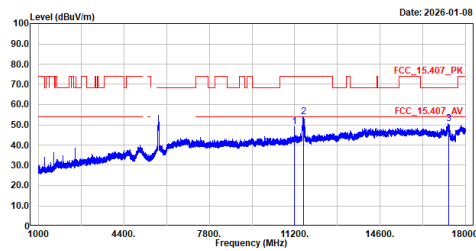


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11192.030	48.89	74.00	-25.11	52.96	-4.07	Peak
2	11550.000	53.92	74.00	-20.08	57.19	-3.27	Peak
3	17325.000	50.38	68.22	-17.84	48.10	2.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5775MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5775MHz
Test by :Nova

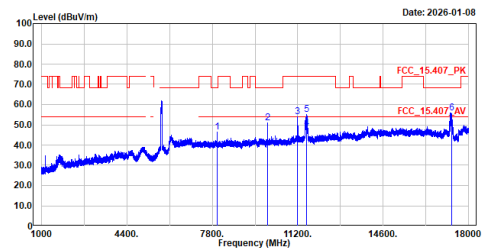


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.031	46.33	68.22	-21.89	52.67	-6.34	Peak
2	9999.906	51.02	68.22	-17.20	56.98	-5.96	Peak
3	11194.160	53.82	74.00	-20.18	57.88	-4.06	Peak
4	11550.000	48.25	54.00	-5.75	51.42	-3.17	Average
5	11550.000	55.27	74.00	-18.73	58.44	-3.17	Peak
6	17325.000	56.00	68.22	-12.22	53.68	2.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be160 5250MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be160_5250MHz
Test by :Nova

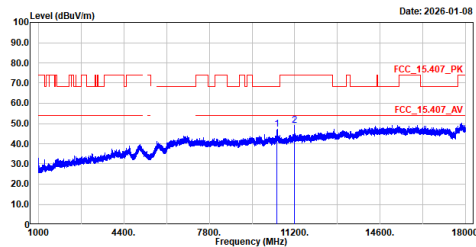


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	47.32	68.22	-20.90	52.61	-5.29	Peak
2	11192.560	49.08	74.00	-24.92	53.14	-4.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be160 5250MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be160_5250MHz
Test by :Nova

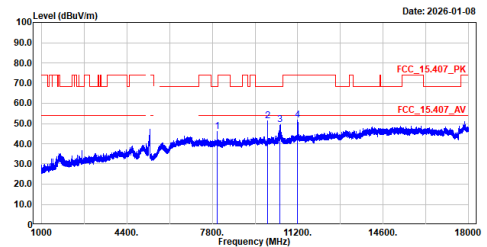


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.031	46.20	68.22	-22.02	52.54	-6.34	Peak
2	9999.906	51.18	68.22	-17.04	57.14	-5.96	Peak
3	10500.000	49.51	68.22	-18.71	54.80	-5.29	Peak
4	11195.750	51.56	74.00	-22.44	55.62	-4.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be160_5570MHz_H

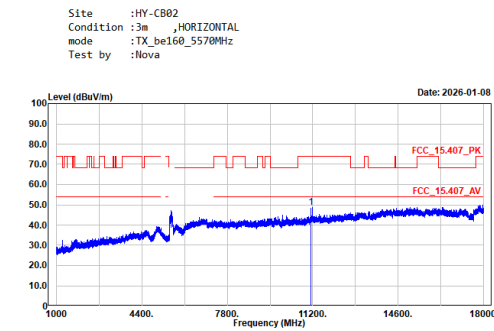

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11140.000	48.81	74.00	-25.19	52.88	-4.07	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be160_5570MHz_V

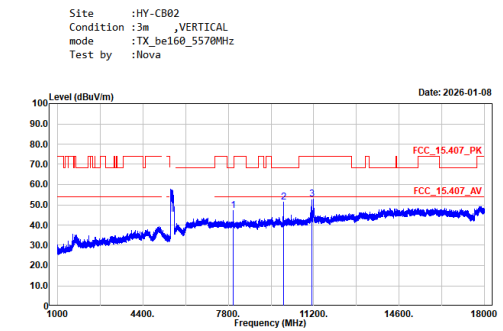

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.969	47.13	68.22	-21.09	53.47	-6.34	Peak
2	10000.440	51.37	68.22	-16.85	57.33	-5.96	Peak
3	11140.000	52.92	74.00	-21.08	56.99	-4.07	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be160_5570MHz_H_QP

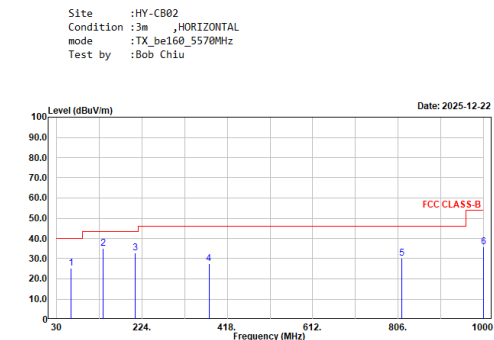

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	62.452	25.46	40.00	-14.54	36.84	-11.38	QP
2	134.905	35.24	43.50	-8.26	46.77	-11.53	QP
3	208.559	32.71	43.50	-10.79	46.22	-13.51	QP
4	376.118	27.42	46.00	-18.58	35.54	-8.12	QP
5	814.841	30.16	46.00	-15.84	30.63	-0.47	QP
6	1000.000	35.67	54.00	-18.33	34.07	1.60	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


TX_be160_5570MHz_V_QP

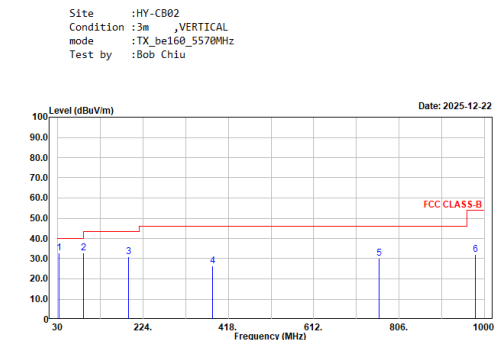

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	33.350	32.70	40.00	-7.30	43.50	-10.80	QP
2	89.403	32.72	43.50	-10.78	49.28	-16.56	QP
3	190.808	31.04	43.50	-12.46	44.51	-13.47	QP
4	381.618	26.38	46.00	-19.62	34.38	-8.00	QP
5	761.088	30.05	46.00	-15.95	30.85	-0.80	QP
6	980.249	31.97	54.00	-22.03	30.51	1.46	QP


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX a 5180MHz H Average

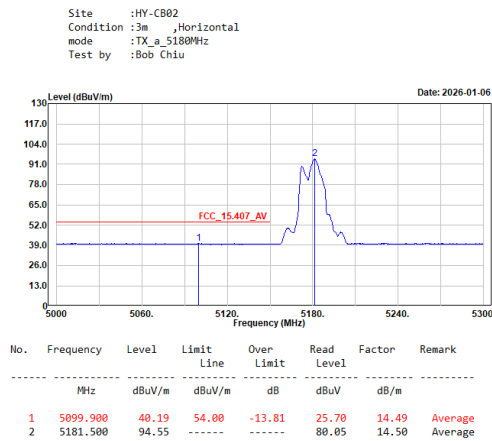


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5180MHz H Peak

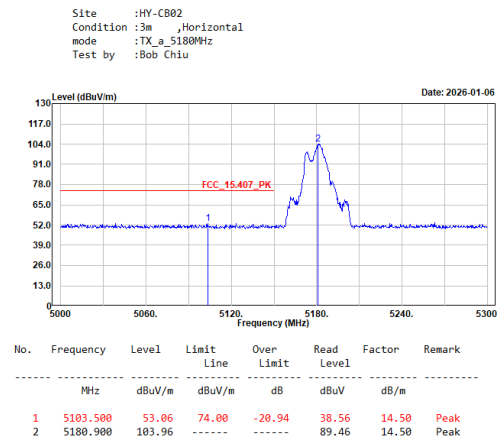


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5180MHz V Average

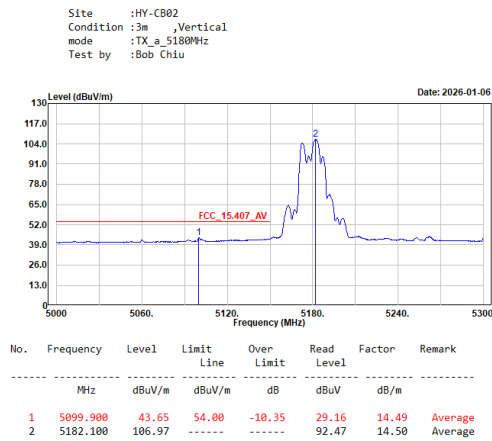


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5180MHz V Peak

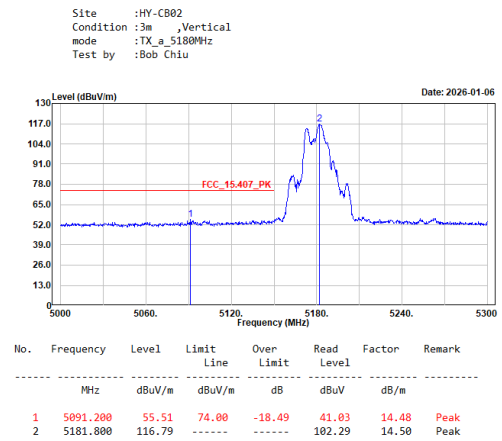


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz H Average

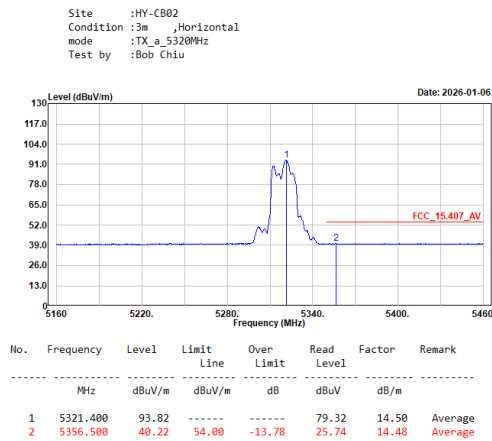


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz H Peak

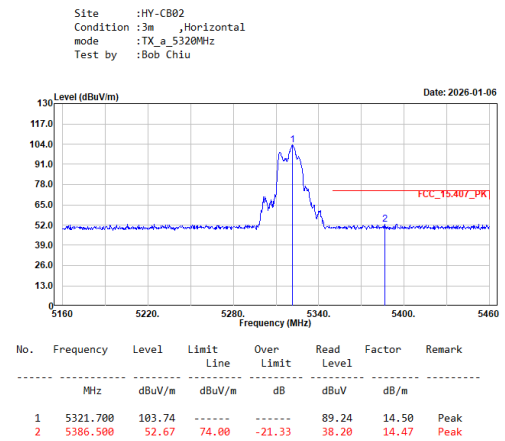


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz V Average

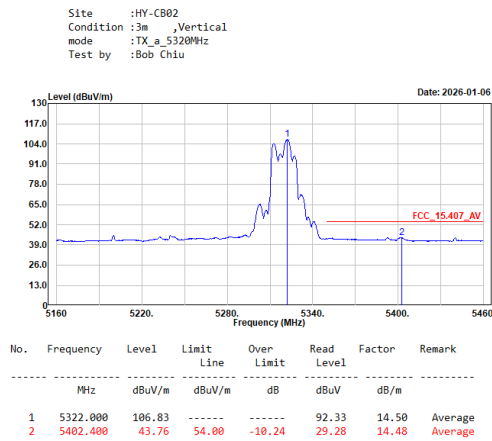


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz V Peak

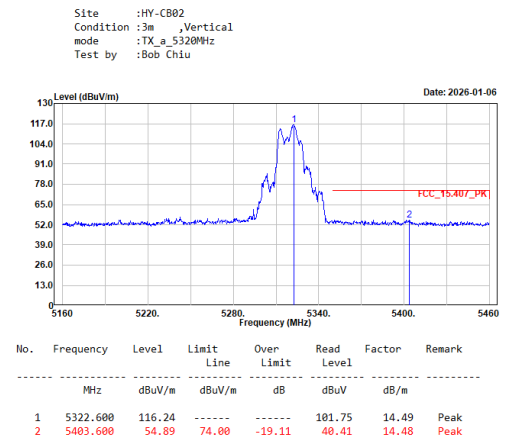


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz H Average

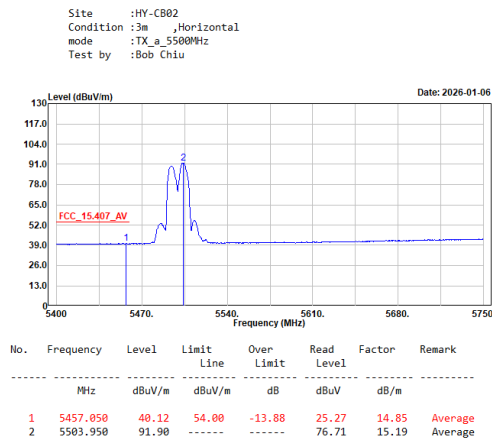


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz H Peak

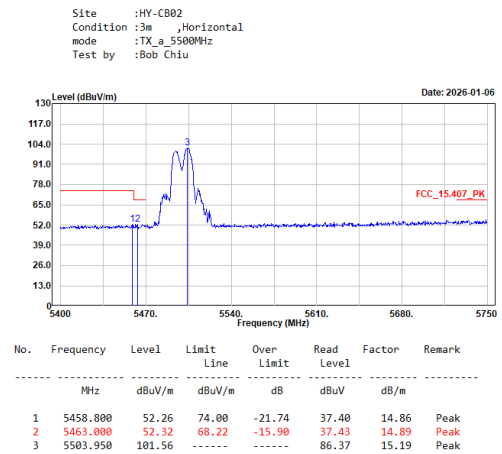


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz V Average

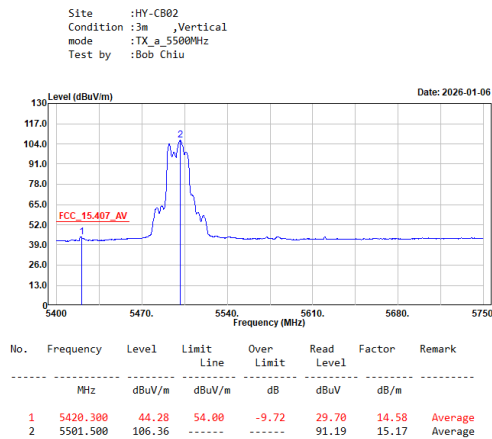


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz V Peak

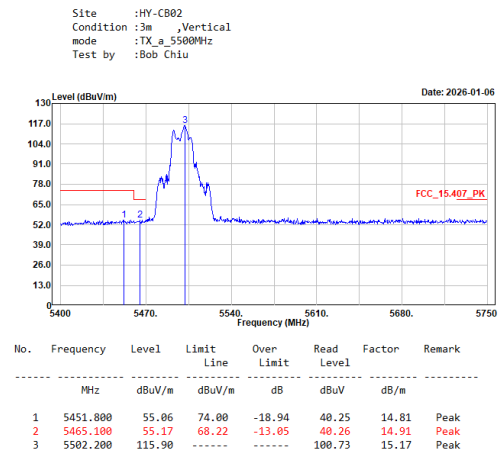

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX a 5700MHz H Peak

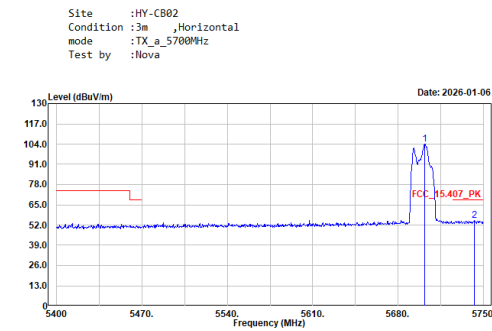

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5702.050	104.12	68.22	-13.11	87.85	16.27	Peak
2	5742.650	55.11	68.22	-13.11	38.63	16.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX a 5700MHz V Peak

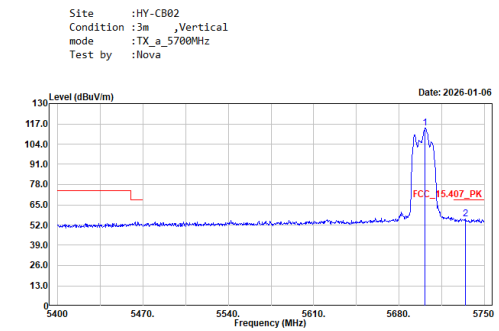

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5701.350	114.26	68.22	-12.08	98.00	16.26	Peak
2	5734.250	56.14	68.22	-12.08	39.69	16.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX a 5745MHz H Peak

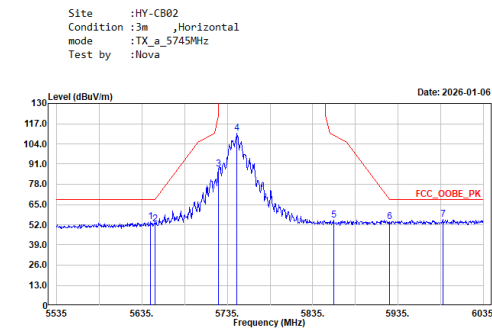

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5645.000	53.77	68.20	-14.43	38.03	15.74	Peak
2	5650.000	52.61	68.21	-15.60	36.84	15.77	Peak
3	5725.000	87.93	122.20	-34.27	71.54	16.39	Peak
4	5746.500	110.82	68.20	-14.43	94.31	16.51	Peak
5	5859.500	55.14	109.54	-54.40	38.69	16.45	Peak
6	5925.000	53.75	68.21	-14.46	37.02	16.73	Peak
7	5987.500	55.35	68.20	-12.85	38.65	16.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5745MHz V Peak

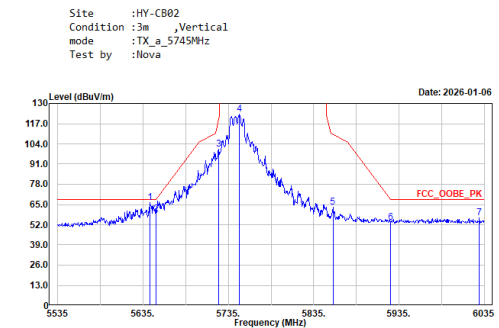


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5643.000	66.15	68.20	-2.05	50.43	15.72	Peak
2	5650.000	58.62	68.21	-9.59	42.85	15.77	Peak
3	5724.000	100.46	119.92	-19.46	84.07	16.39	Peak
4	5747.500	123.10	68.20	-14.43	106.59	16.51	Peak
5	5857.500	63.14	110.10	-46.96	46.69	16.45	Peak
6	5925.000	53.52	68.21	-14.69	36.79	16.73	Peak
7	6029.000	56.30	68.20	-11.90	39.54	16.76	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5825MHz
Test by :Nova

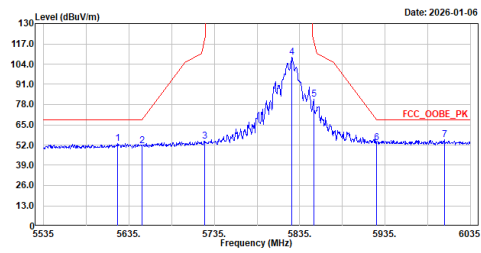


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5621.500	53.19	68.20	-15.01	37.64	15.55	Peak
2	5650.000	51.54	68.21	-16.67	35.77	15.77	Peak
3	5723.500	54.51	118.78	-64.27	38.13	16.38	Peak
4	5826.000	100.23	-----	-----	91.77	16.46	Peak
5	5851.500	81.43	118.78	-37.35	65.01	16.42	Peak
6	5925.000	53.59	68.21	-14.62	36.86	16.73	Peak
7	6004.500	55.67	68.20	-12.53	38.97	16.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5825MHz
Test by :Nova

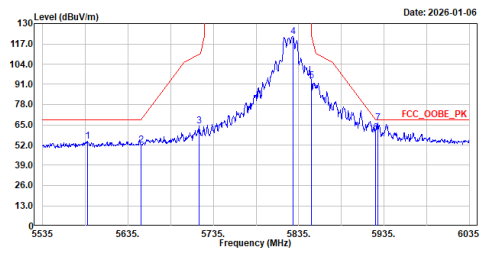


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5587.500	54.32	68.20	-13.88	38.98	15.34	Peak
2	5650.000	51.81	68.21	-16.40	36.04	15.77	Peak
3	5718.500	64.30	118.38	-46.08	47.95	16.35	Peak
4	5826.000	121.70	-----	-----	105.25	16.45	Peak
5	5850.000	93.16	122.20	-29.04	76.74	16.42	Peak
6	5925.000	59.88	68.21	-8.33	43.15	16.73	Peak
7	5927.500	65.99	68.20	-2.21	49.25	16.74	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_H Average

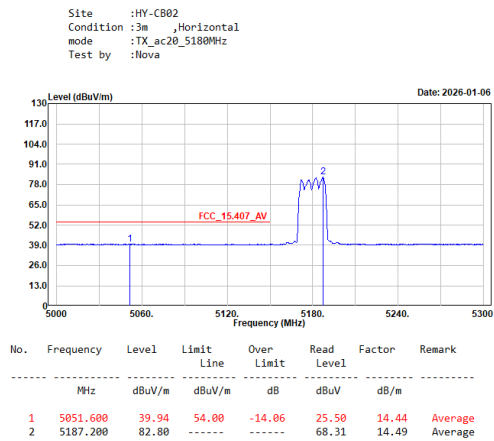


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_H Peak

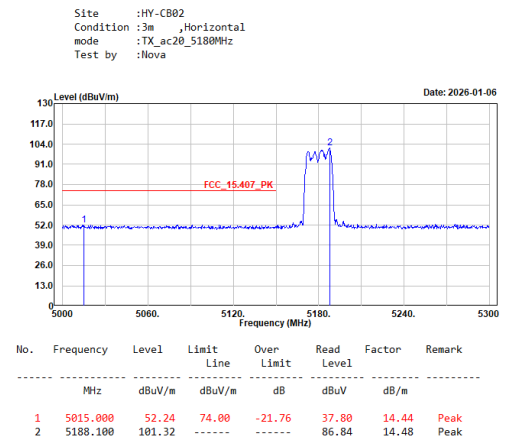


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_V Average

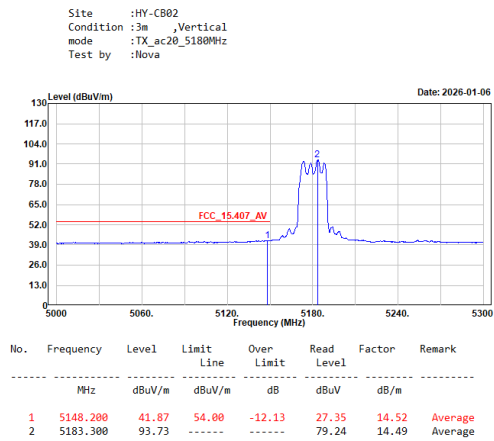


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_V Peak

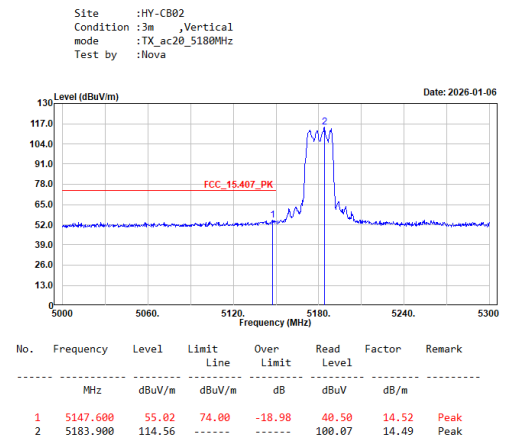


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_H_Average

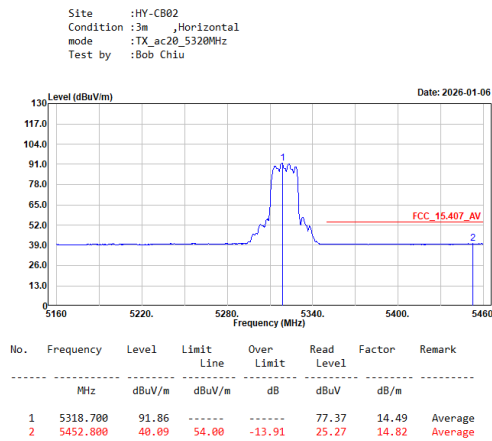


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_H_Peak

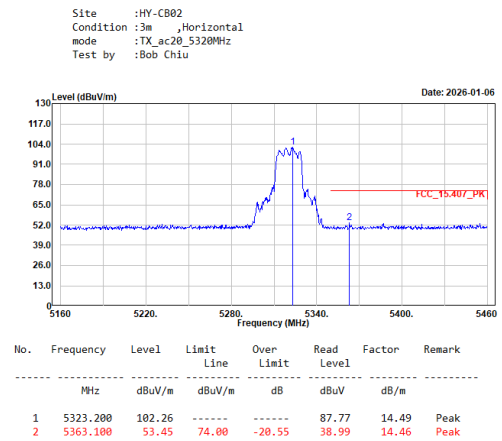


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_V_Average

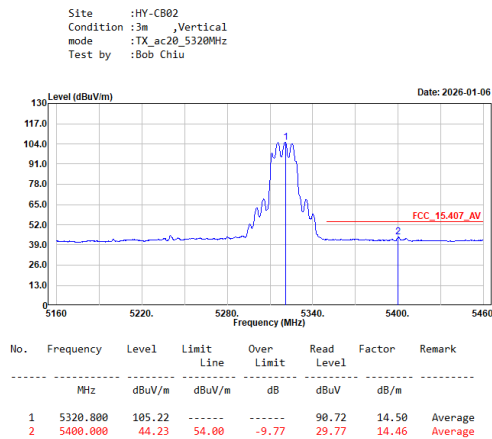


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_V_Peak

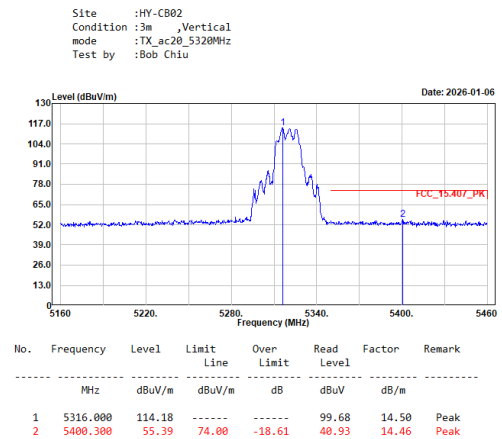


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_H_Average

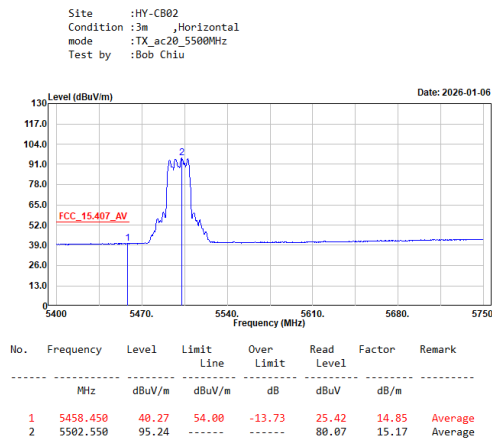


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_H_Peak

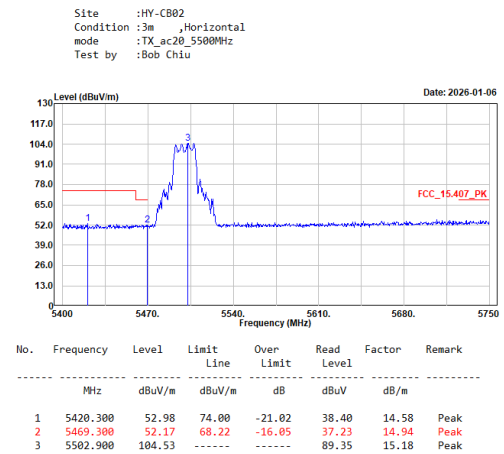


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_V_Average

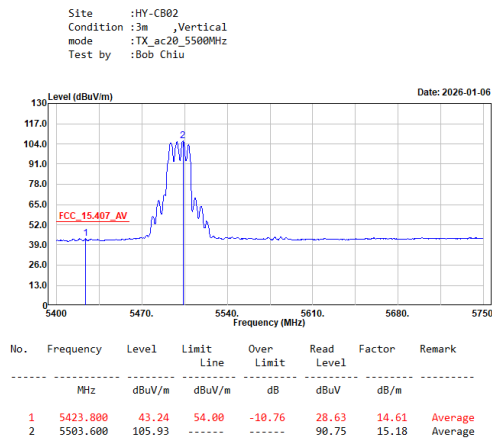


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_V_Peak

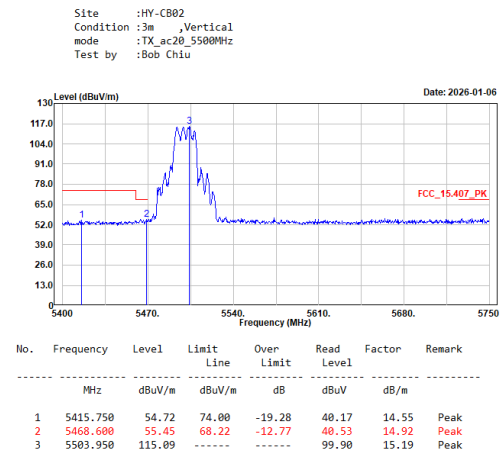


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5700MHz_H_Peak

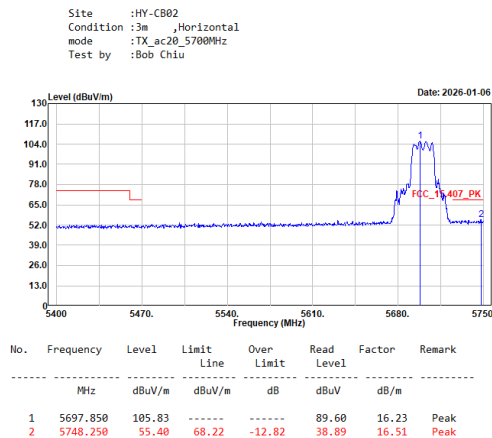


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5700MHz_V_Peak

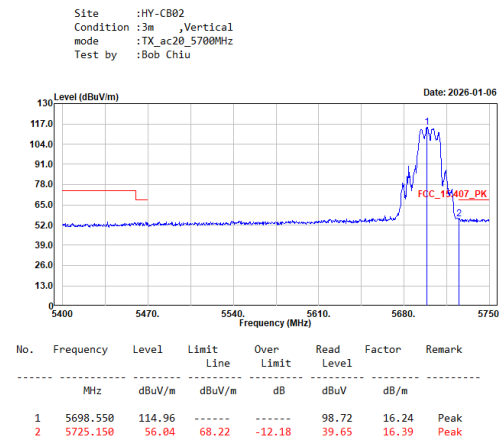


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_H_Peak

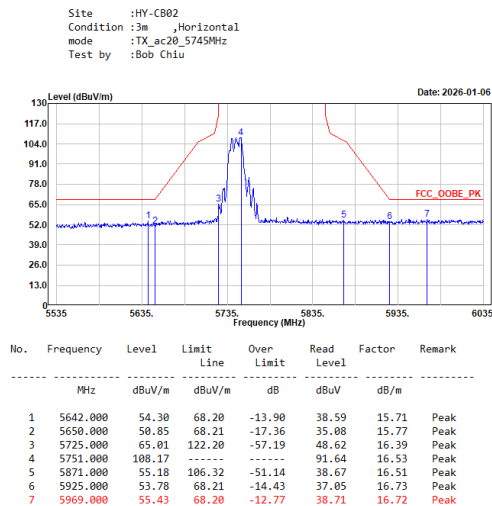

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_V_Peak

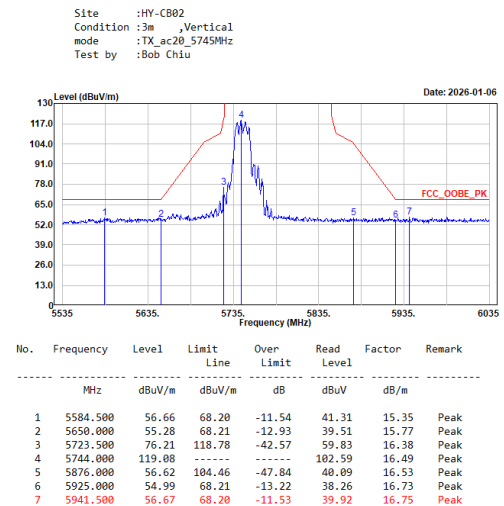


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac20_5825MHz
Test by :Bob Chiu

Level (dBuV/m)

Date: 2026-01-06

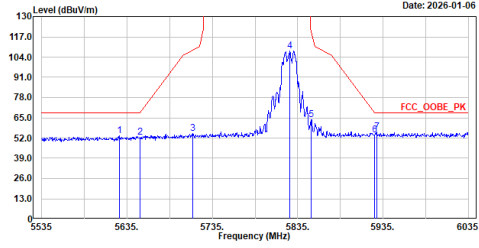

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5626.000	53.24	68.20	-14.96	37.65	15.59	Peak
2	5650.000	52.45	68.21	-15.76	36.68	15.77	Peak
3	5712.000	54.70	108.56	-53.86	38.38	16.32	Peak
4	5826.000	107.97	-----	-----	91.51	16.46	Peak
5	5851.000	63.90	119.92	-56.02	47.48	16.42	Peak
6	5925.000	54.19	68.21	-14.02	37.46	16.73	Peak
7	5927.500	56.03	68.20	-12.17	39.29	16.74	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac20_5825MHz
Test by :Bob Chiu

Level (dBuV/m)

Date: 2026-01-06

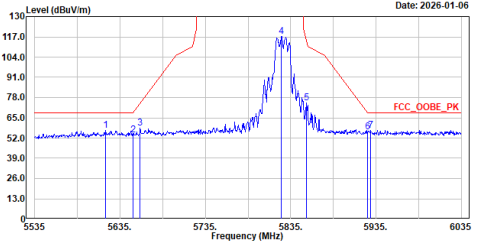


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5618.500	56.82	68.20	-11.38	41.29	15.53	Peak
2	5650.000	54.04	68.21	-14.17	38.27	15.77	Peak
3	5658.500	58.18	74.50	-16.32	42.31	15.87	Peak
4	5824.000	117.37	-----	-----	100.91	16.46	Peak
5	5853.500	74.70	114.22	-39.52	58.27	16.43	Peak
6	5925.000	56.14	68.21	-12.07	39.41	16.73	Peak
7	5929.000	57.10	68.20	-11.10	40.35	16.75	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H Average

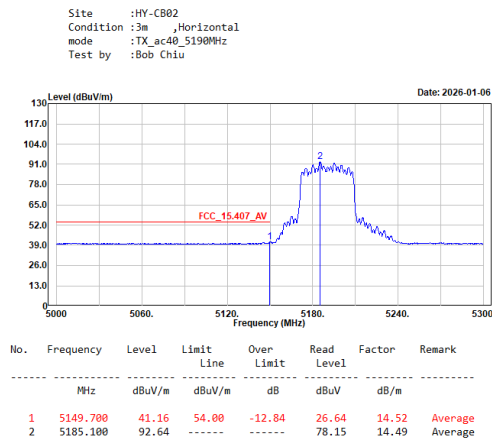


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H Peak

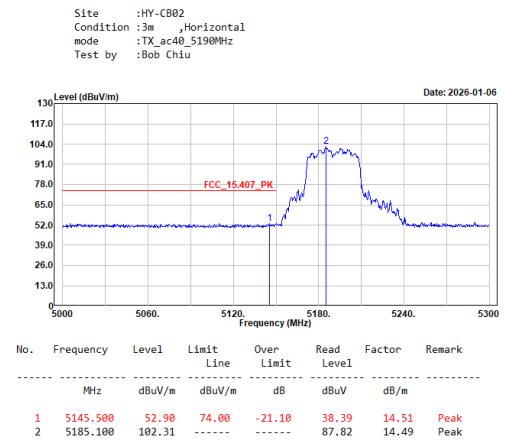


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V Average

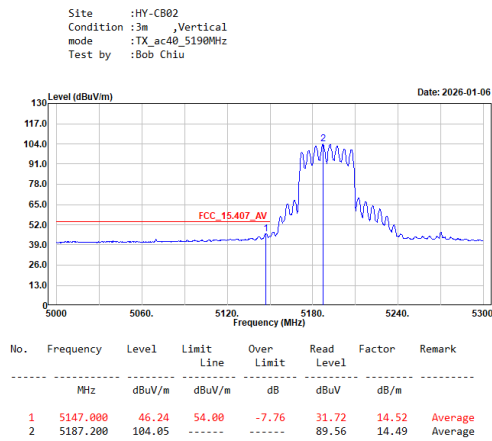


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V Peak

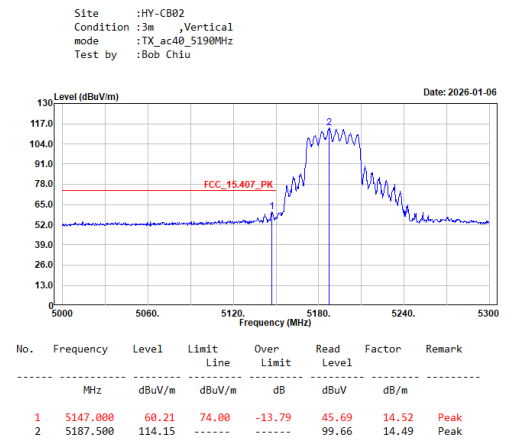


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_H_Average

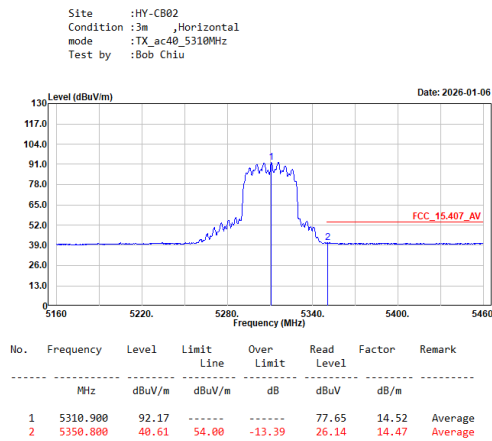


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_H_Peak

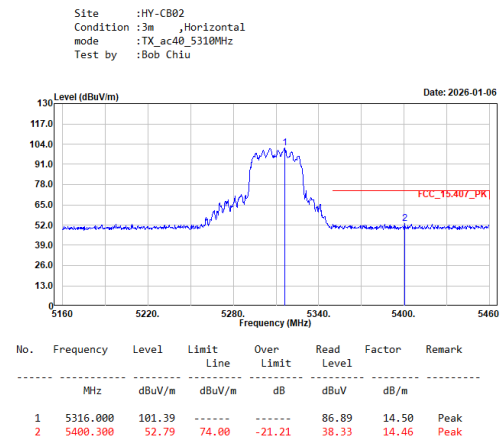


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_V_Average

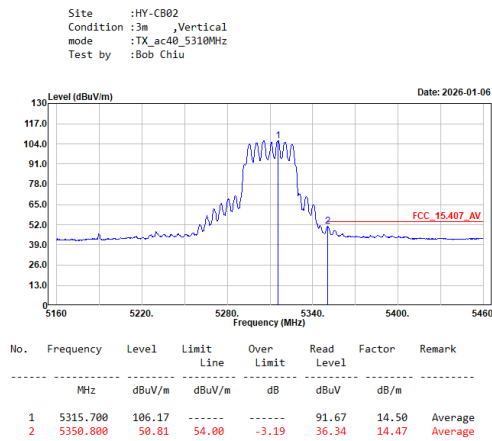


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_V_Peak

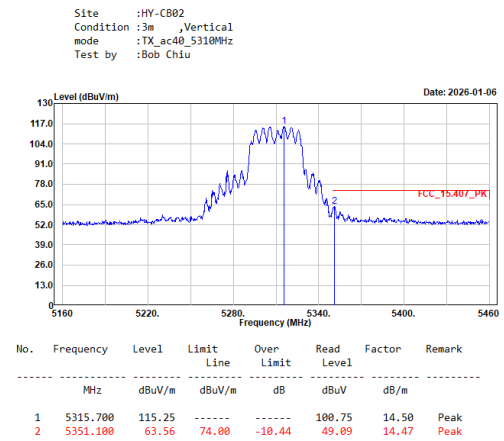


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_H_Average

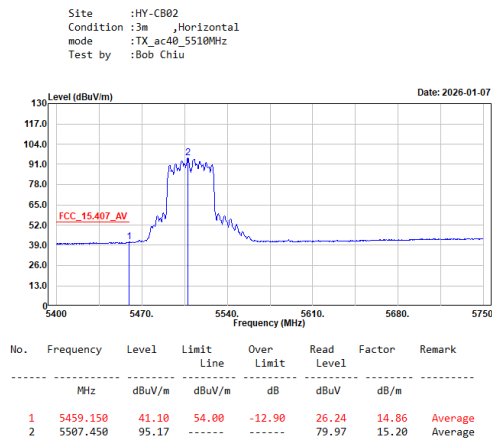


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_H_Peak

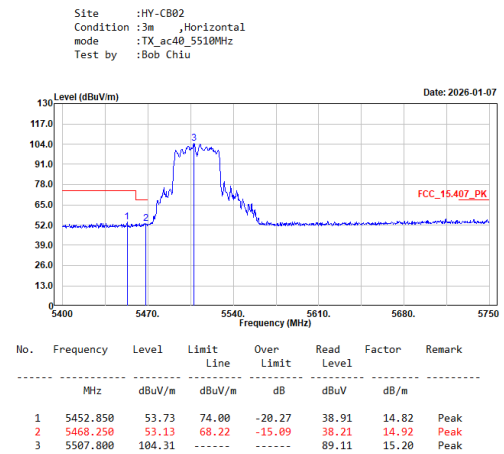


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_V_Average

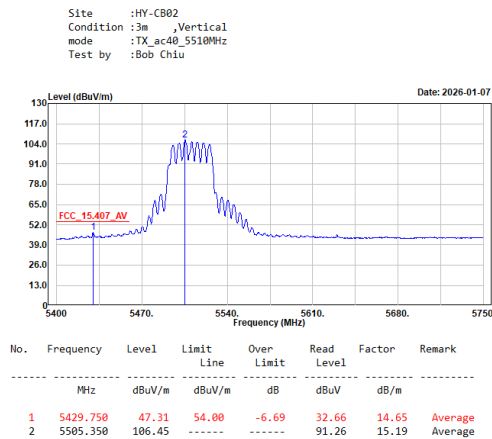


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_V_Peak

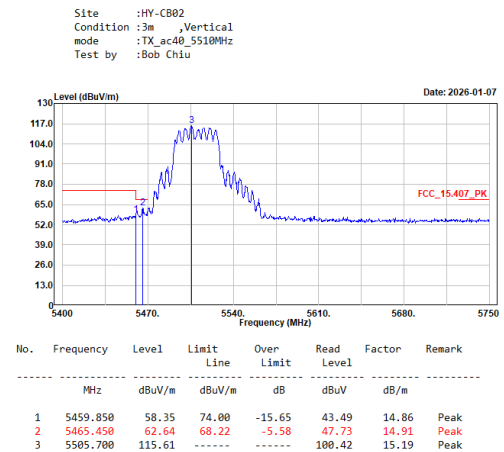


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5670MHz_H_Peak

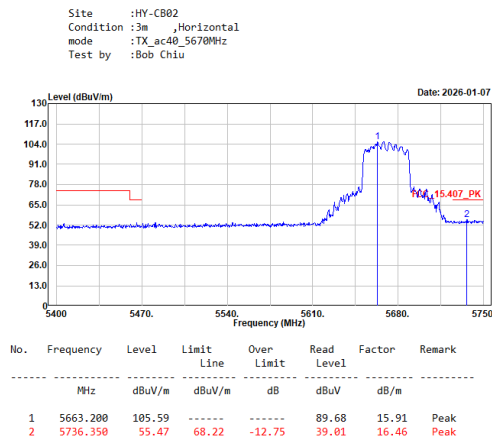


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5670MHz_V_Peak

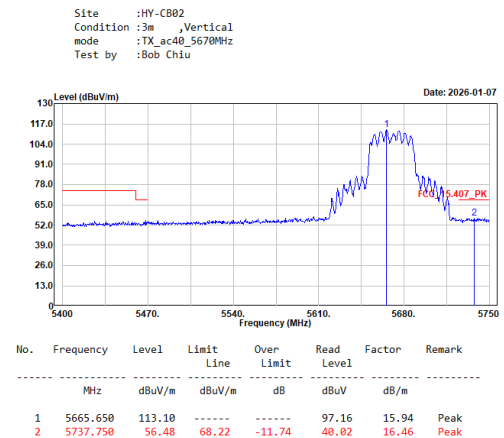


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_H_Peak

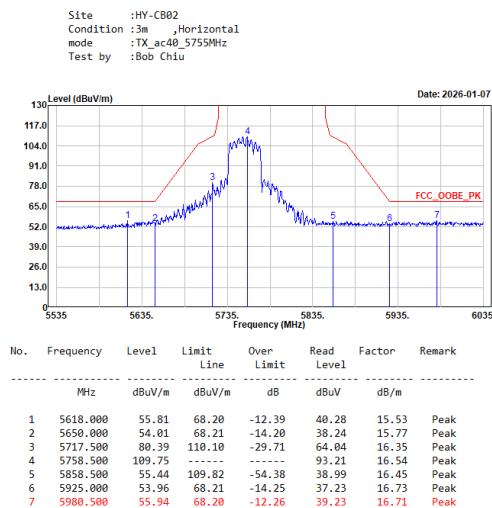

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5755MHz_V_Peak

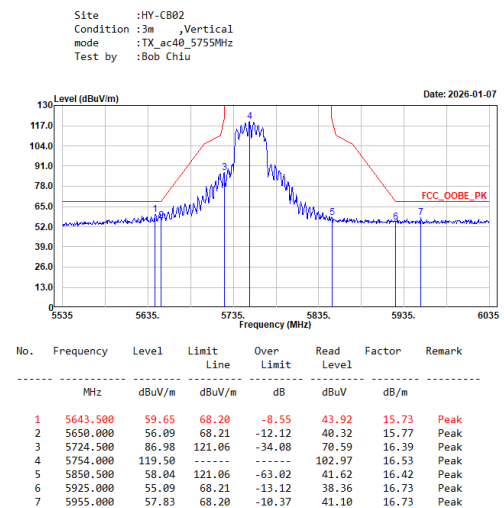

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac40_5795MHz
Test by :Bob Chiu

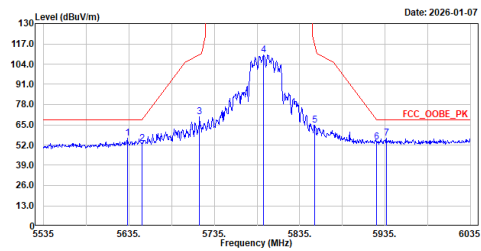


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5633.000	56.64	68.20	-11.56	48.99	15.65	Peak
2	5650.000	52.81	68.21	-15.40	37.04	15.77	Peak
3	5717.500	69.93	110.10	-40.17	53.58	16.35	Peak
4	5792.500	109.70	-----	-----	93.18	16.52	Peak
5	5852.500	64.95	116.50	-51.55	48.52	16.43	Peak
6	5925.000	53.76	68.21	-14.45	37.03	16.73	Peak
7	5937.000	56.46	68.20	-11.74	39.72	16.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac40_5795MHz
Test by :Bob Chiu

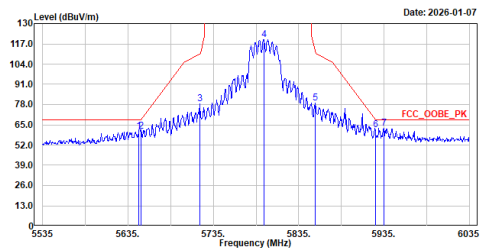


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5648.000	60.75	68.20	-7.45	44.99	15.76	Peak
2	5650.000	60.71	68.21	-7.50	44.94	15.77	Peak
3	5719.000	78.72	110.52	-31.80	62.36	16.36	Peak
4	5794.000	119.69	-----	-----	103.17	16.52	Peak
5	5854.000	79.18	113.08	-33.90	62.75	16.43	Peak
6	5925.000	62.01	68.21	-6.20	45.28	16.73	Peak
7	5935.000	63.03	68.20	-5.17	46.29	16.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Bob Chiu

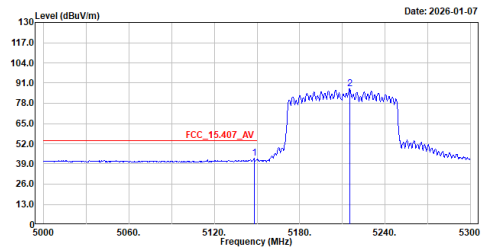


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.900	42.44	54.00	-11.56	27.92	14.52	Average
2	5215.400	87.29	-----	-----	72.80	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Bob Chiu

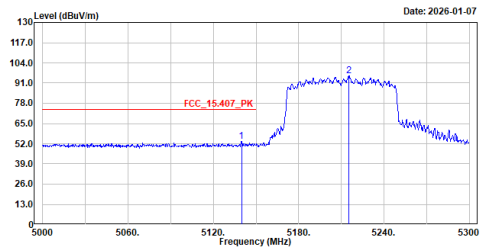


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5139.800	53.26	74.00	-20.74	38.75	14.51	Peak
2	5215.400	95.53	-----	-----	81.04	14.49	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V Average

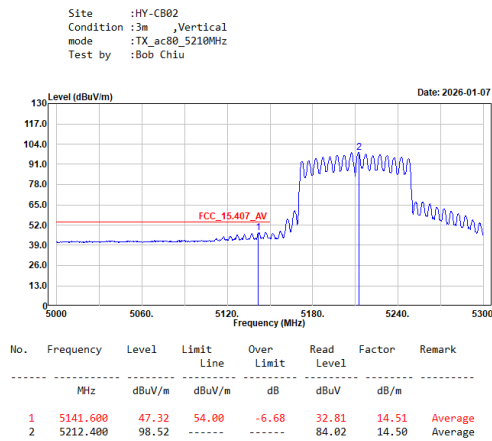


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V Peak

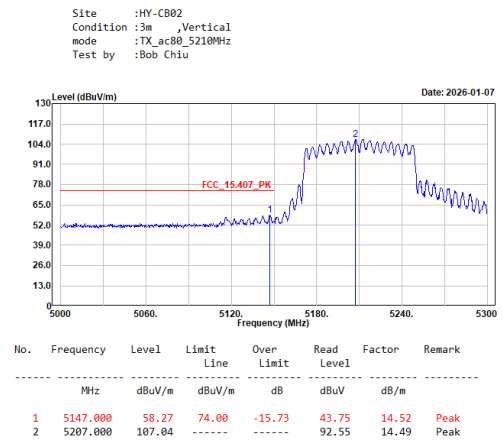


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H Average

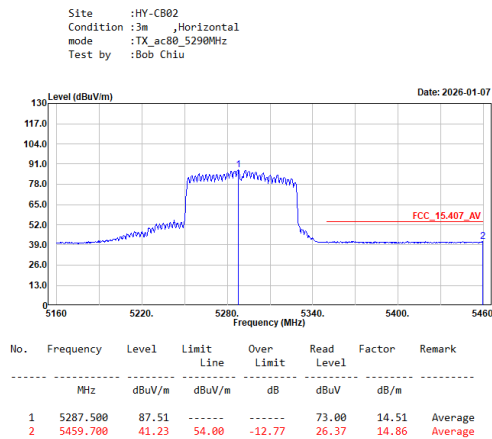


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H Peak

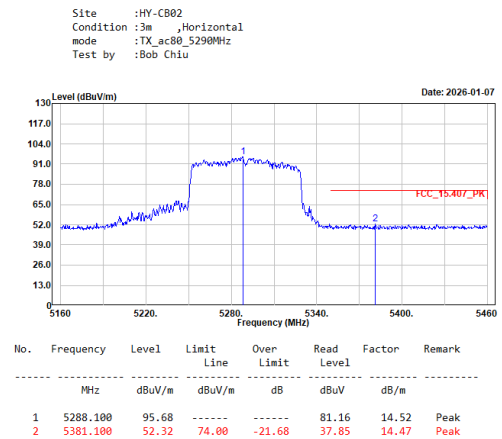


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V_Average

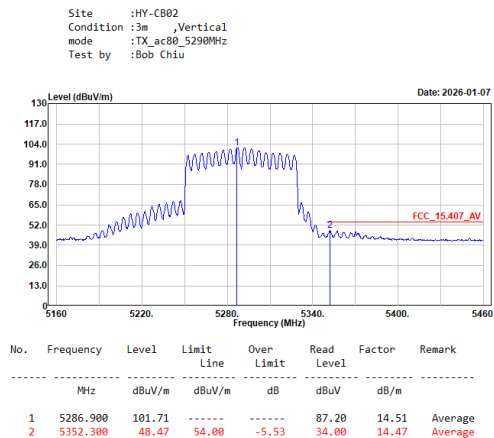


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V_Peak

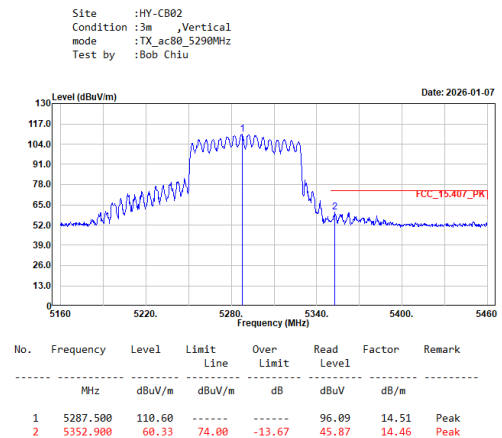


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H_Average

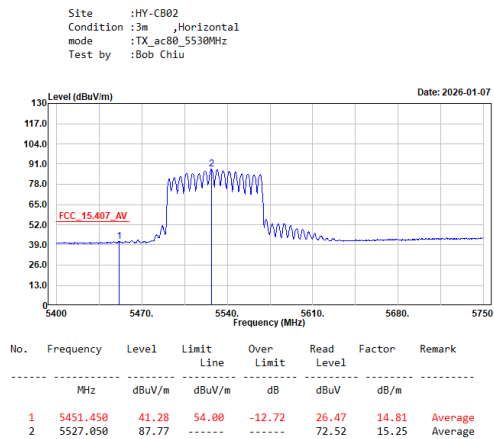


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H_Peak

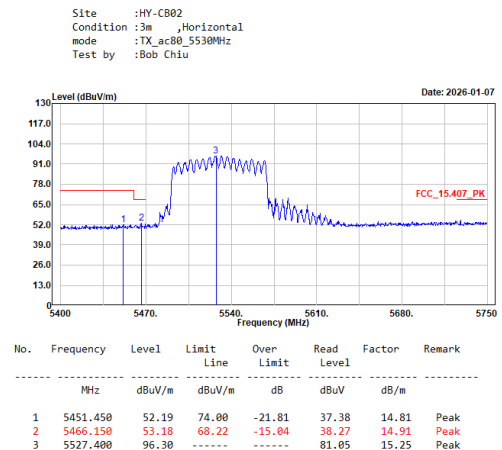


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V_Average

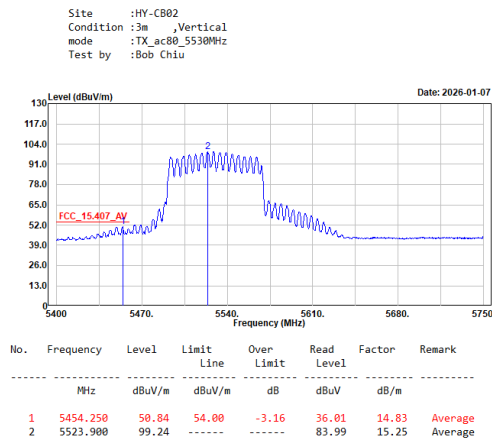


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V_Peak

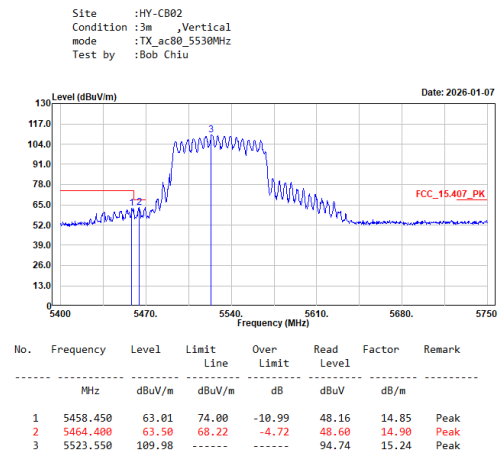


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Average

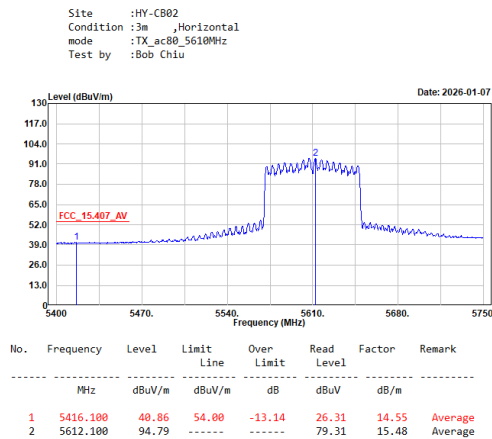


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Peak

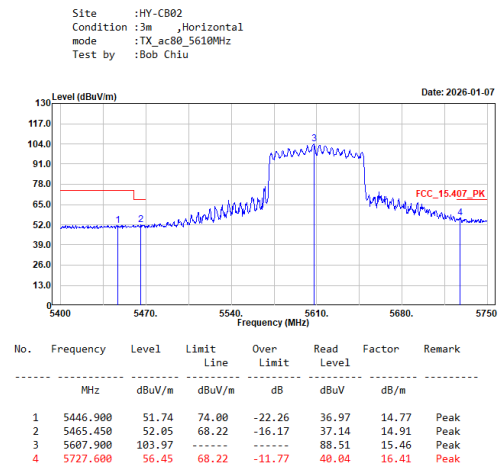


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V_Average

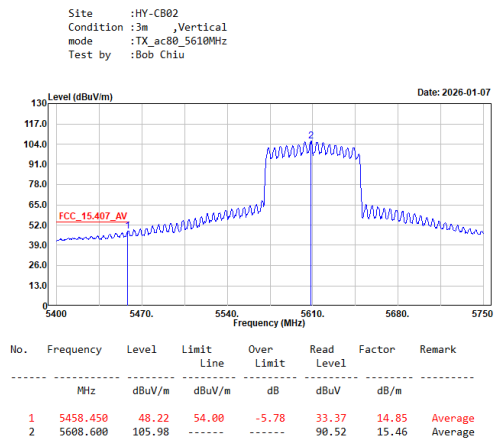


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V_Peak

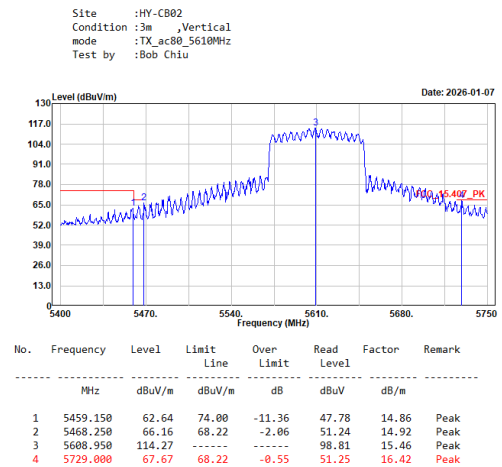


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H_Peak

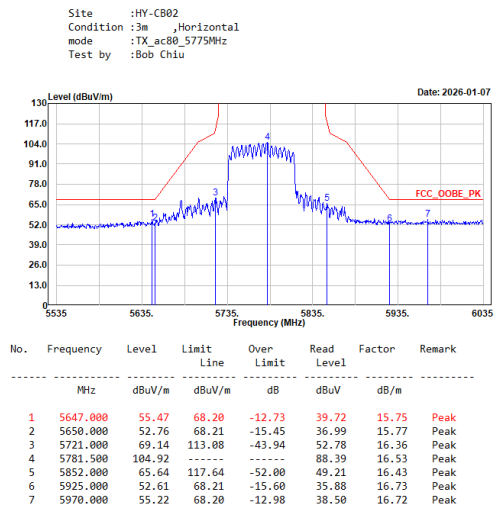


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V_Peak

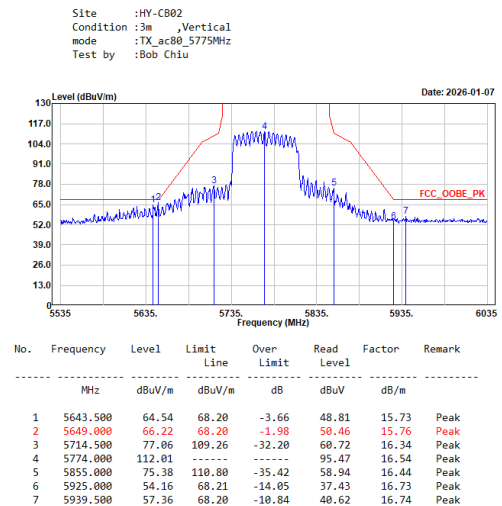


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_H_Average

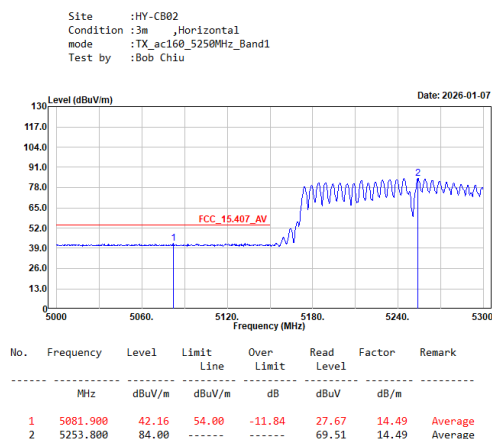


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_H_Peak

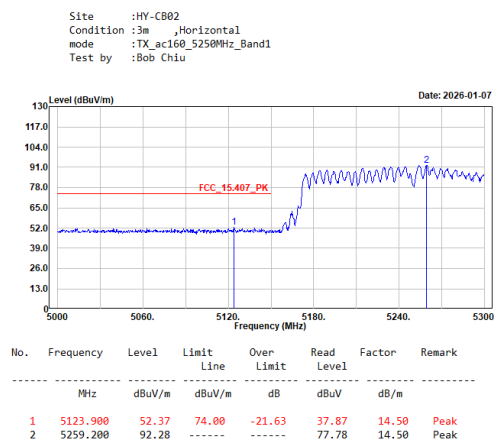


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_V_Average

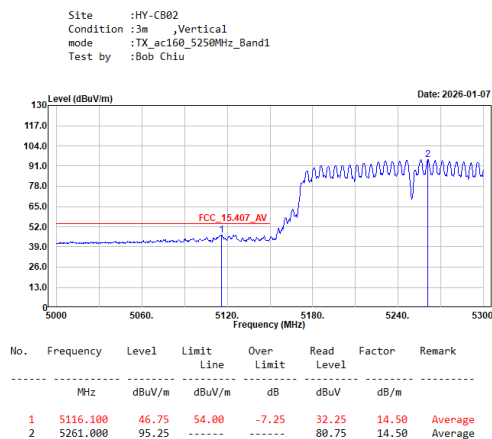


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_V_Peak

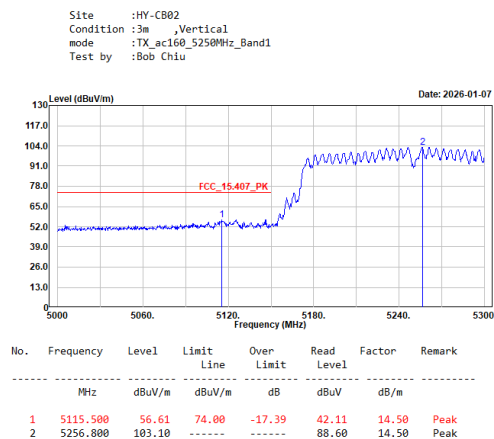


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band2_H_Average

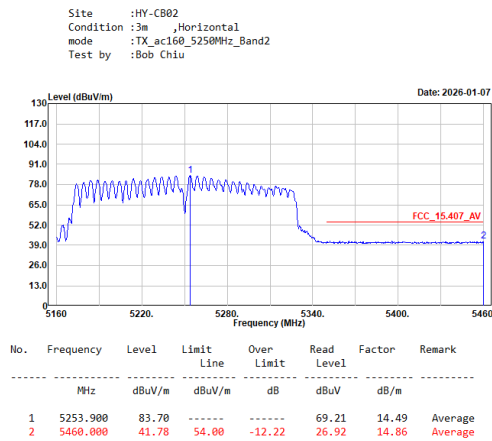


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band2_H_Peak

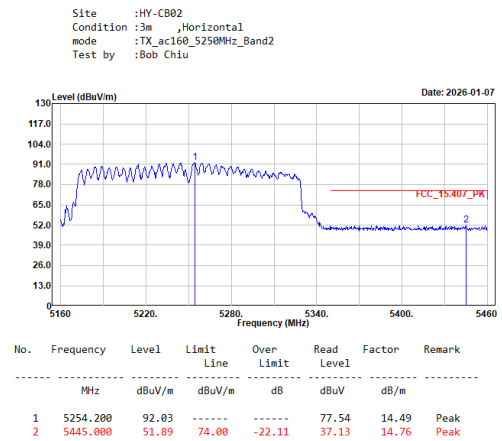


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band2_V_Average

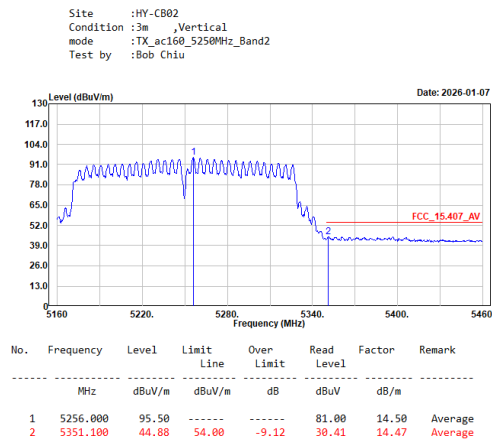


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band2_V_Peak

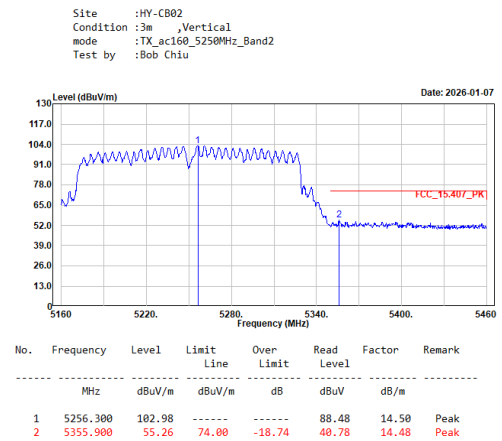


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_H_Average

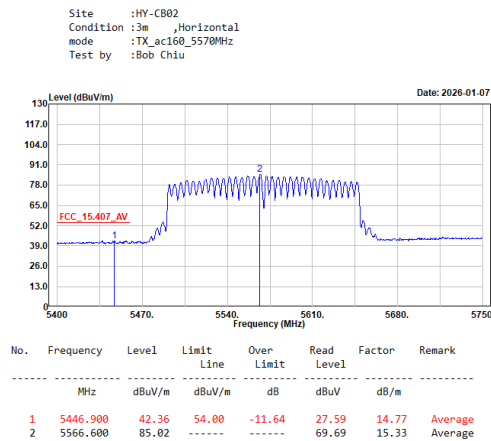


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_H_Peak

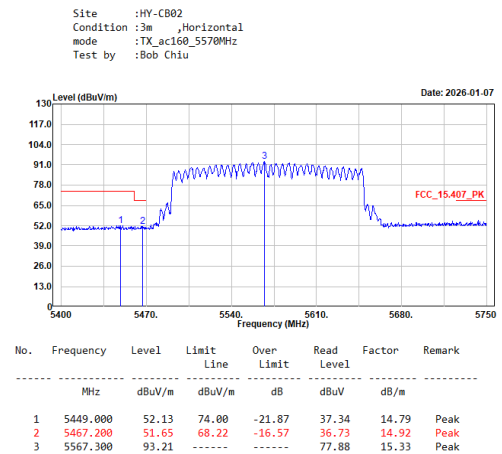


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_V_Average

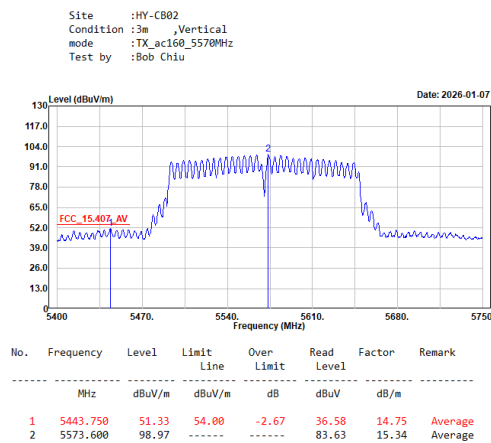

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac160_5570MHz_V_Peak

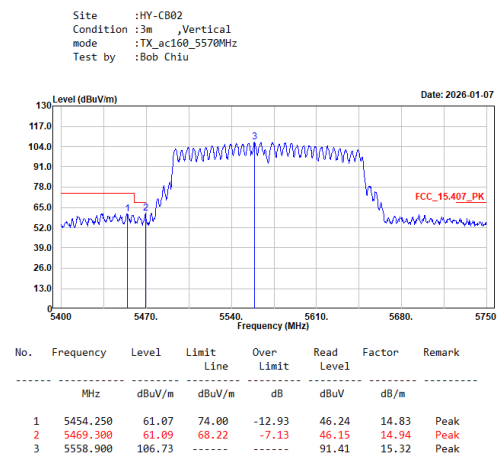

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5180MHz
Test by :Bob Chiu

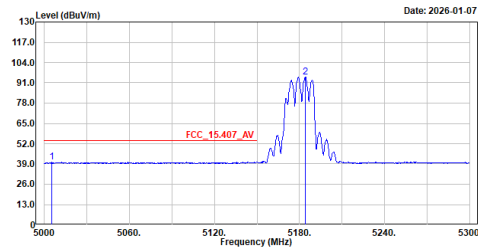


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5005.100	40.17	54.00	-13.83	25.72	14.45	Average
2	5184.200	94.68	-----	-----	80.19	14.49	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5180MHz
Test by :Bob Chiu

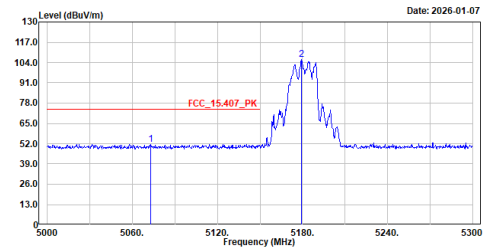


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5072.900	51.59	74.00	-22.41	37.12	14.47	Peak
2	5179.400	106.12	-----	-----	91.62	14.50	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5180MHz
Test by :Bob Chiu

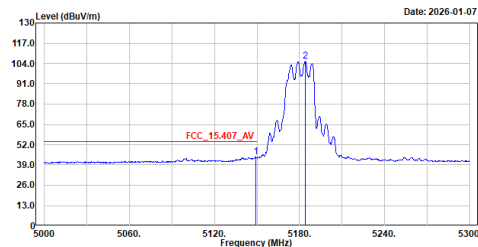


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	44.20	54.00	-9.80	29.68	14.52	Average
2	5184.200	105.67	-----	-----	91.18	14.49	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Peak


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5180MHz
Test by :Bob Chiu

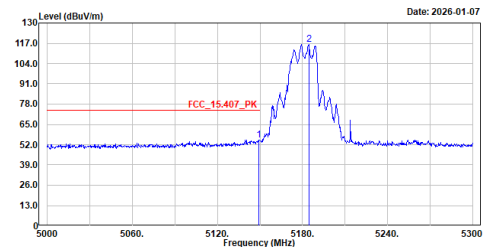

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	55.11	74.00	-18.89	40.59	14.52	Peak
2	5184.500	116.18	-----	-----	101.69	14.49	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_H_Average

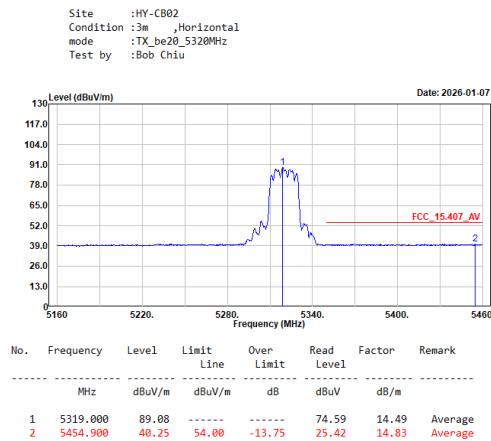


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_H_Peak

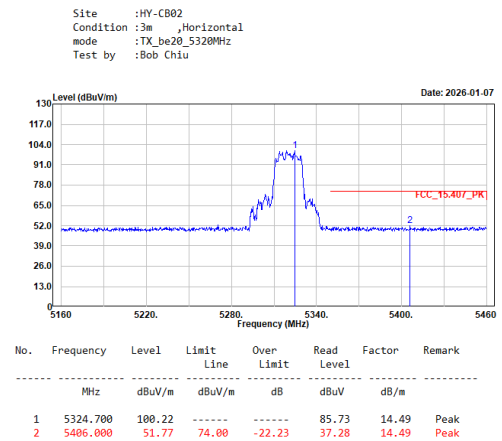


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_V_Average

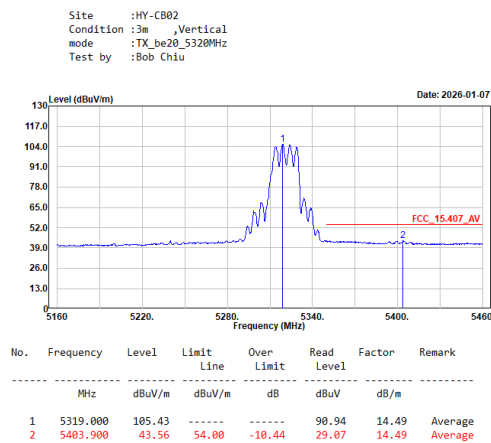


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_V_Peak

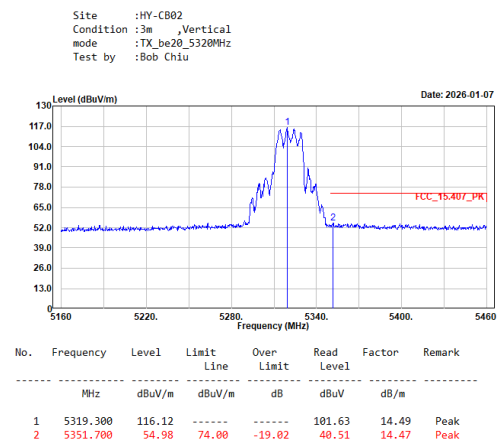


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_H_Average

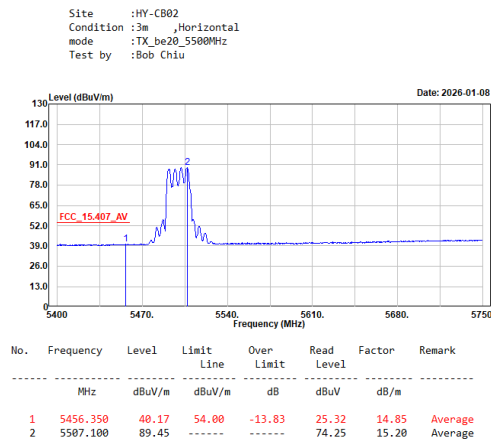


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_H_Peak

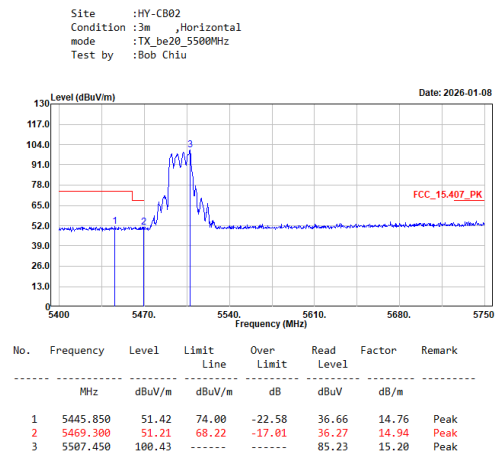


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_V_Average

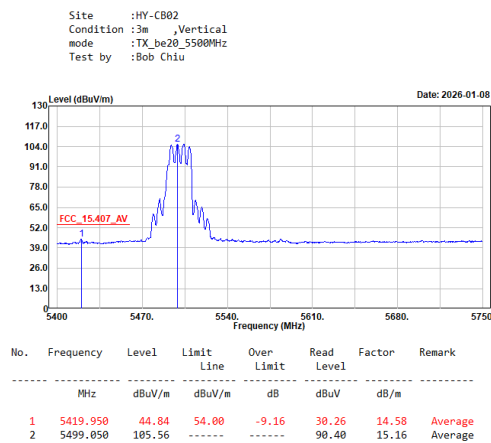


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_V_Peak

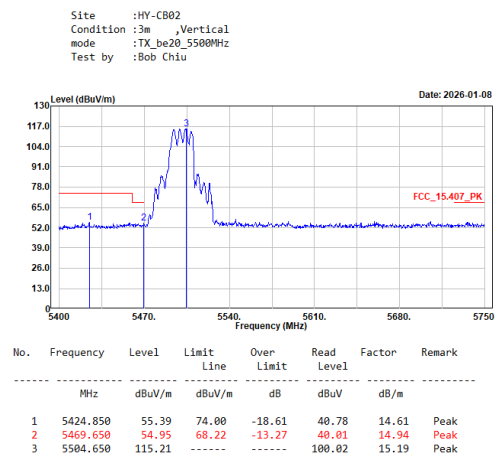

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be20 5700MHz H Peak

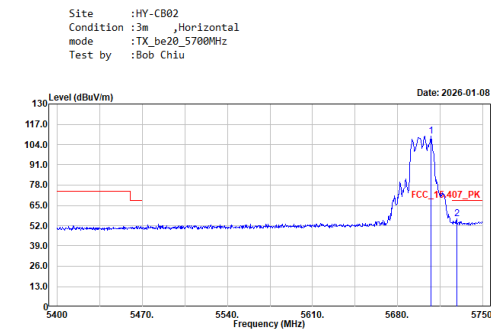

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5707.650	109.64	-----	-----	93.34	16.30	Peak
2	5728.650	56.27	68.22	-11.95	39.86	16.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be20 5700MHz V Peak

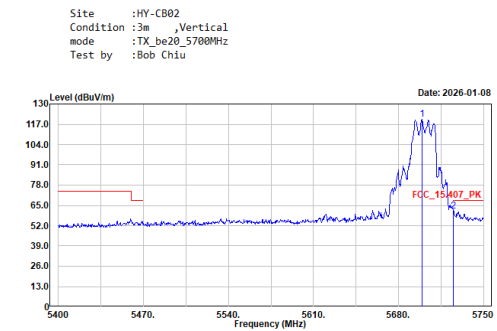

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5699.250	120.38	-----	-----	104.14	16.24	Peak
2	5725.150	61.50	68.22	-6.72	45.11	16.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be20 5745MHz H Peak

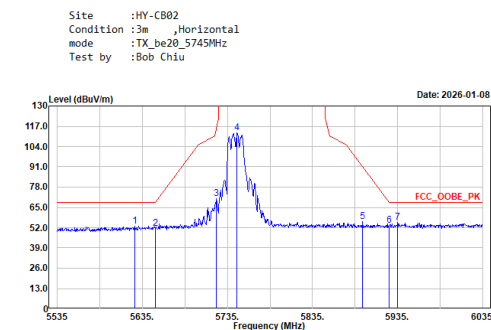

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5626.000	52.96	68.20	-15.24	37.37	15.59	Peak
2	5650.000	51.28	68.21	-16.93	35.51	15.77	Peak
3	5722.000	70.56	115.36	-44.80	54.19	16.37	Peak
4	5746.500	112.60	-----	-----	96.09	16.51	Peak
5	5894.000	55.83	91.14	-35.31	39.23	16.60	Peak
6	5925.000	53.70	68.21	-14.51	36.97	16.73	Peak
7	5935.000	55.59	68.20	-12.61	38.85	16.74	Peak



Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5745MHz V Peak

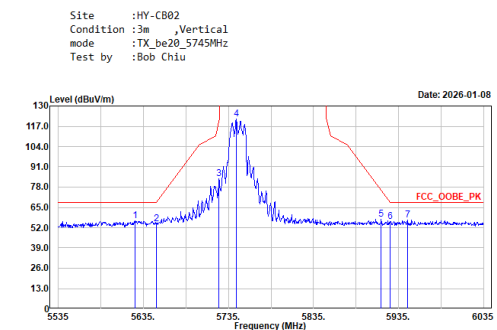

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5625.500	56.34	68.20	-11.86	40.76	15.58	Peak
2	5650.000	54.65	68.21	-13.56	38.88	15.77	Peak
3	5724.000	83.30	119.92	-36.62	66.91	16.39	Peak
4	5745.500	121.88	-----	-----	105.38	16.50	Peak
5	5914.500	57.26	75.98	-18.72	40.58	16.68	Peak
6	5925.000	55.78	68.21	-12.43	39.05	16.73	Peak
7	5945.500	56.69	68.20	-11.51	39.95	16.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

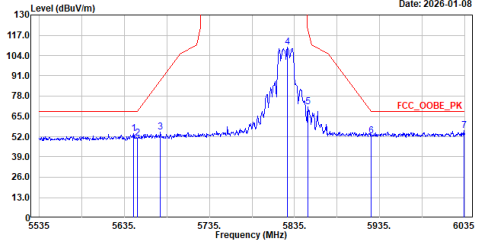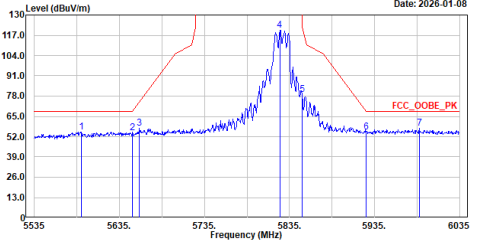TX be20 5825MHz H Peak								TX be20 5825MHz V Peak							
Site :HY-CB02 Condition :3m ,Horizontal mode :TX be20 5825MHz Test by :Bob Chiu 								Site :HY-CB02 Condition :3m ,Vertical mode :TX be20 5825MHz Test by :Bob Chiu 							
No.	Frequency	Level	Limit	Over	Read	Factor	Remark	No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m			MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5645.500	53.77	68.20	-14.43	38.03	15.74	Peak	1	5590.000	55.04	68.20	-13.16	39.69	15.35	Peak
2	5650.000	51.25	68.21	-16.96	35.48	15.77	Peak	2	5650.000	54.57	68.21	-13.64	38.80	15.77	Peak
3	5677.500	54.74	88.55	-33.81	38.70	16.04	Peak	3	5658.500	57.38	74.50	-17.12	41.51	15.87	Peak
4	5826.500	109.55	-----	-----	93.09	16.46	Peak	4	5823.500	120.32	-----	-----	103.86	16.46	Peak
5	5850.500	71.12	121.06	-49.94	54.70	16.42	Peak	5	5850.000	78.96	122.20	-43.24	62.54	16.42	Peak
6	5925.000	52.65	68.21	-15.56	35.92	16.73	Peak	6	5925.000	55.16	68.21	-13.05	38.43	16.73	Peak
7	6034.000	55.79	68.20	-12.41	39.01	16.78	Peak	7	5987.500	57.43	68.20	-10.77	40.73	16.70	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5190MHz
Test by :Bob Chiu

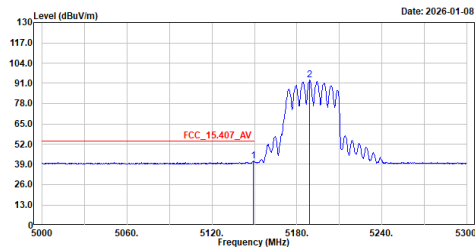


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	41.05	54.00	-12.95	26.53	14.52	Average
2	5189.000	93.48	-----	-----	78.91	14.49	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5190MHz
Test by :Bob Chiu

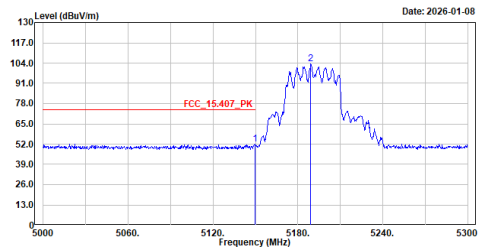


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	52.02	74.00	-21.98	37.50	14.52	Peak
2	5189.000	103.43	-----	-----	88.94	14.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5190MHz
Test by :Bob Chiu

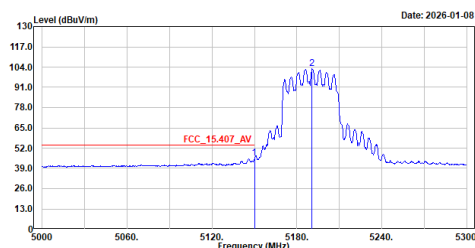


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	45.40	54.00	-8.60	30.88	14.52	Average
2	5190.000	102.82	-----	-----	88.32	14.50	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5190MHz
Test by :Bob Chiu

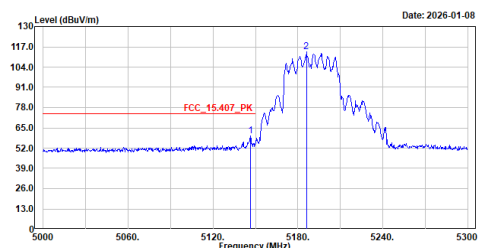


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.400	59.72	74.00	-14.28	45.21	14.51	Peak
2	5186.000	113.69	-----	-----	99.20	14.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz H Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5310MHz
Test by :Bob Chiu

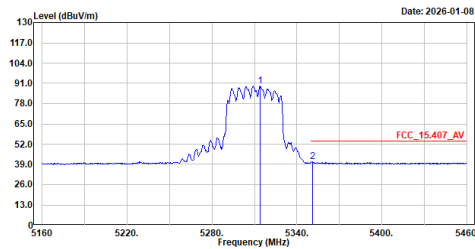


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5313.900	89.36	-----	-----	74.86	14.50	Average
2	5351.100	40.57	54.00	-13.43	26.10	14.47	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5310MHz
Test by :Bob Chiu

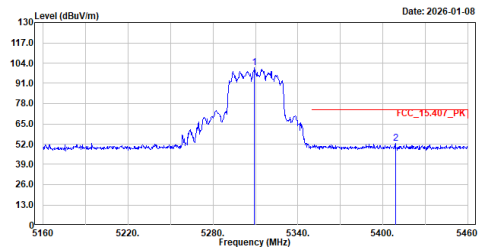


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5309.400	100.93	-----	-----	86.42	14.51	Peak
2	5409.000	52.25	74.00	-21.75	37.73	14.52	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz V Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5310MHz
Test by :Bob Chiu

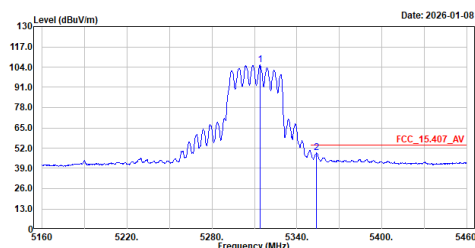


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5313.900	105.26	-----	-----	90.76	14.50	Average
2	5353.800	49.06	54.00	-4.94	34.58	14.48	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5310MHz
Test by :Bob Chiu

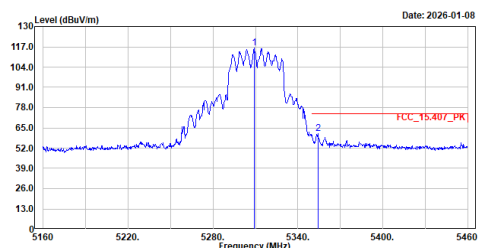


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5309.100	116.45	-----	-----	101.94	14.51	Peak
2	5354.100	61.18	74.00	-12.82	46.70	14.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5510MHz
Test by :Bob Chiu

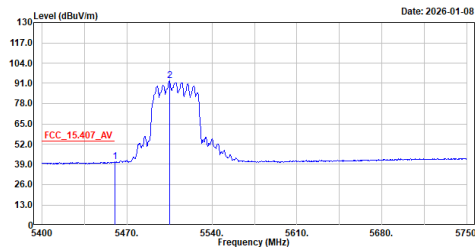


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	40.77	54.00	-13.23	25.91	14.86	Average
2	5505.000	92.68	-----	-----	77.49	15.19	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5510MHz
Test by :Bob Chiu

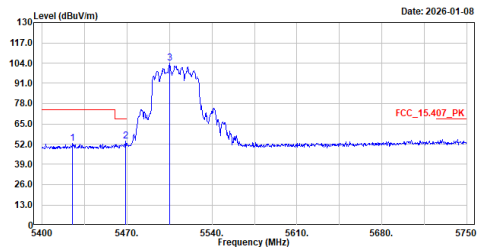


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5425.200	52.39	74.00	-21.61	37.78	14.61	Peak
2	5468.600	53.74	68.22	-14.48	38.82	14.92	Peak
3	5505.000	104.07	-----	-----	88.88	15.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5510MHz
Test by :Bob Chiu

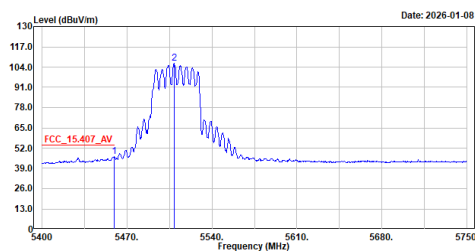


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.500	46.60	54.00	-7.40	31.74	14.86	Average
2	5508.850	106.26	-----	-----	91.06	15.20	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5510MHz
Test by :Bob Chiu

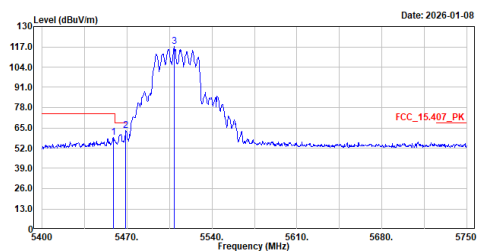


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	58.66	74.00	-15.34	43.80	14.86	Peak
2	5468.950	63.05	68.22	-5.17	48.11	14.94	Peak
3	5508.850	117.09	-----	-----	101.89	15.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5670MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5670MHz
Test by :Bob Chiu

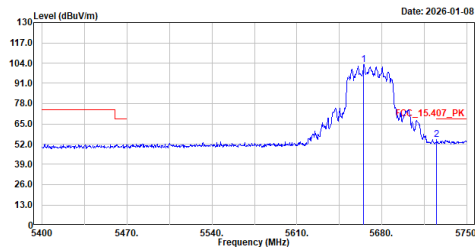


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5664.950	102.98	-----	-----	87.05	15.93	Peak
2	5725.150	54.98	68.22	-13.24	38.59	16.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5670MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5670MHz
Test by :Bob Chiu

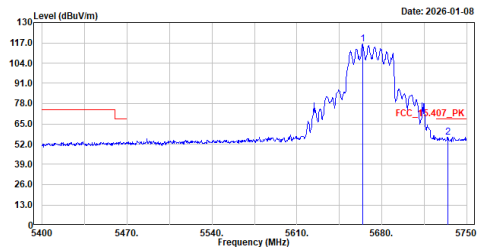


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5664.250	116.16	-----	-----	100.25	15.91	Peak
2	5734.600	56.64	68.22	-11.58	40.19	16.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5755MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5755MHz
Test by :Bob Chiu

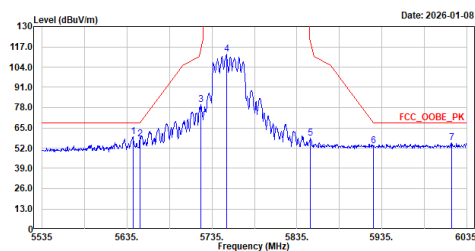


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5642.000	59.30	68.20	-8.90	43.81	15.49	Peak
2	5650.000	57.73	68.21	-10.48	42.18	15.55	Peak
3	5721.500	80.09	114.22	-34.13	64.03	16.06	Peak
4	5752.500	112.16	-----	-----	95.99	16.17	Peak
5	5851.000	58.29	119.92	-61.63	42.11	16.18	Peak
6	5925.000	53.32	68.21	-14.89	36.99	16.33	Peak
7	6017.000	55.59	68.20	-12.61	39.27	16.32	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5755MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5755MHz
Test by :Bob Chiu

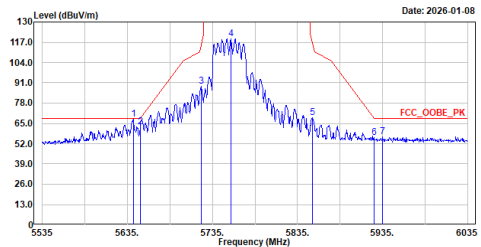


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5642.000	67.61	68.20	-0.59	52.12	15.49	Peak
2	5650.000	62.88	68.21	-5.33	47.33	15.55	Peak
3	5721.500	88.56	114.22	-25.66	72.50	16.06	Peak
4	5756.500	119.39	-----	-----	103.22	16.17	Peak
5	5853.000	68.76	115.36	-46.60	52.58	16.18	Peak
6	5925.000	55.73	68.21	-12.48	39.40	16.33	Peak
7	5935.000	56.52	68.20	-11.68	40.18	16.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5795MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5795MHz
Test by :Bob Chiu

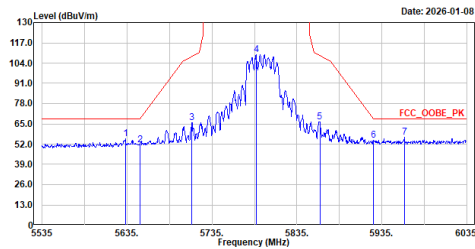


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5633.000	55.37	68.20	-12.83	39.93	15.44	Peak
2	5650.000	51.56	68.21	-16.65	36.01	15.55	Peak
3	5711.500	65.85	108.42	-42.57	49.83	16.02	Peak
4	5787.000	109.40	-----	-----	93.20	16.20	Peak
5	5862.000	66.22	108.84	-42.62	58.02	16.20	Peak
6	5925.000	54.31	68.21	-13.90	37.98	16.33	Peak
7	5961.500	56.34	68.20	-11.86	40.02	16.32	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5795MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5795MHz
Test by :Bob Chiu

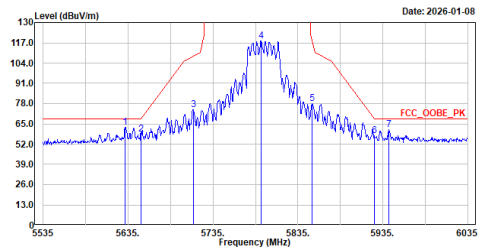


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5631.500	62.85	68.20	-5.35	47.43	15.42	Peak
2	5650.000	58.44	68.21	-9.77	42.89	15.55	Peak
3	5712.000	74.84	108.56	-34.52	58.02	16.02	Peak
4	5792.000	118.35	-----	-----	102.15	16.20	Peak
5	5851.500	78.07	118.78	-40.71	61.89	16.18	Peak
6	5925.000	57.24	68.21	-10.97	40.91	16.33	Peak
7	5942.000	61.31	68.20	-6.89	44.97	16.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5210MHz H Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5210MHz
Test by :Bob Chiu

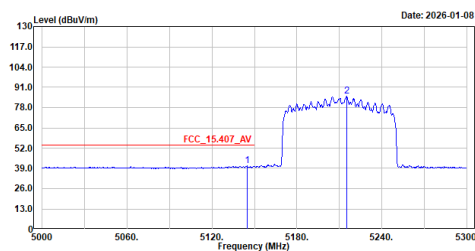


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.900	40.49	54.00	-13.51	26.17	14.32	Average
2	5215.400	85.43	-----	-----	71.14	14.29	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5210MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5210MHz
Test by :Bob Chiu

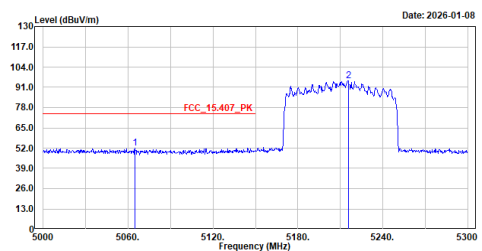


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5064.800	52.01	74.00	-21.99	37.79	14.22	Peak
2	5215.700	95.22	-----	-----	80.93	14.29	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5210MHz
Test by :Bob Chiu

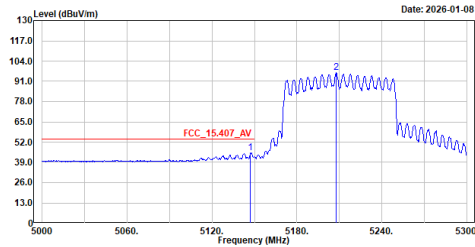


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.300	45.02	54.00	-8.98	30.69	14.33	Average
2	5207.900	96.43	-----	-----	82.14	14.29	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5210MHz
Test by :Bob Chiu

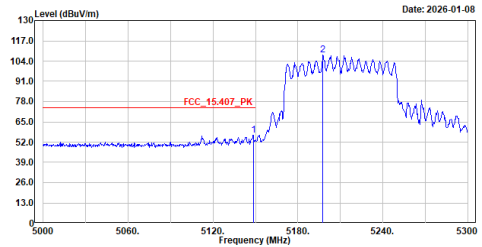


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	56.47	74.00	-17.53	42.14	14.33	Peak
2	5197.700	107.79	-----	-----	93.49	14.30	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5290MHz
Test by :Bob Chiu

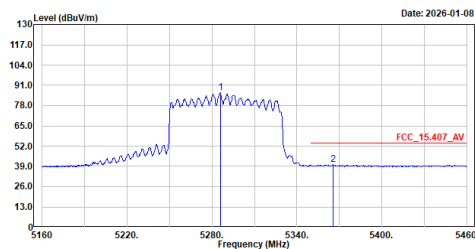


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5286.000	86.10	-----	-----	71.79	14.31	Average
2	5365.500	40.06	54.00	-13.94	25.79	14.27	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5290MHz
Test by :Bob Chiu

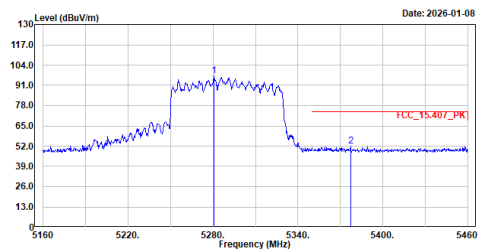


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5280.600	97.11	-----	-----	82.80	14.31	Peak
2	5377.200	51.87	74.00	-22.13	37.61	14.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5290MHz V Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5290MHz
Test by :Bob Chiu

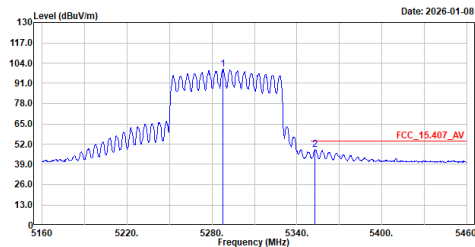


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5287.800	100.25	-----	-----	85.94	14.31	Average
2	5352.900	48.39	54.00	-5.61	34.11	14.28	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5290MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5290MHz
Test by :Bob Chiu

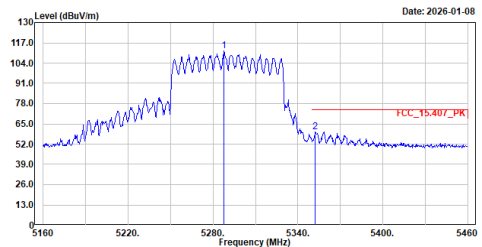


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5287.500	111.87	-----	-----	97.56	14.31	Peak
2	5352.300	60.03	74.00	-13.97	45.74	14.29	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5530MHz H Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5530MHz
Test by :Bob Chiu

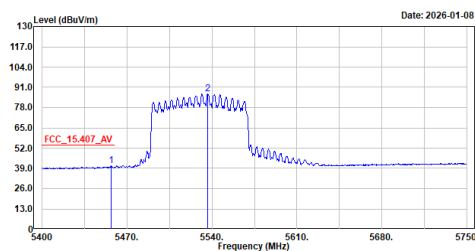


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.700	40.49	54.00	-13.51	25.95	14.54	Average
2	5536.500	86.76	-----	-----	71.77	14.99	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5530MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5530MHz
Test by :Bob Chiu

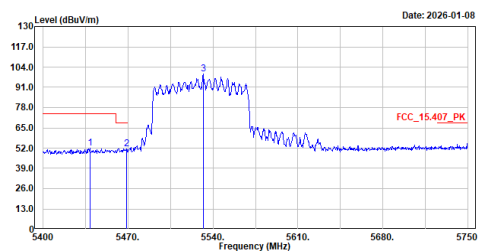


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5438.500	51.76	74.00	-22.24	37.34	14.42	Peak
2	5468.950	51.44	68.22	-16.78	36.83	14.61	Peak
3	5531.950	99.44	-----	-----	84.48	14.96	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5530MHz
Test by :Bob Chiu

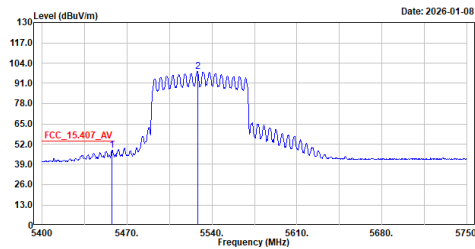


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5457.750	48.20	54.00	-5.80	33.66	14.54	Average
2	5528.100	98.69	-----	-----	83.76	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5530MHz
Test by :Bob Chiu

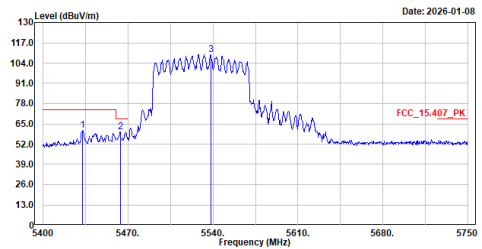


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5432.550	60.84	74.00	-13.16	46.45	14.39	Peak
2	5463.700	59.98	68.22	-8.24	45.40	14.58	Peak
3	5538.250	109.51	-----	-----	94.52	14.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5610MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5610MHz
Test by :Bob Chiu

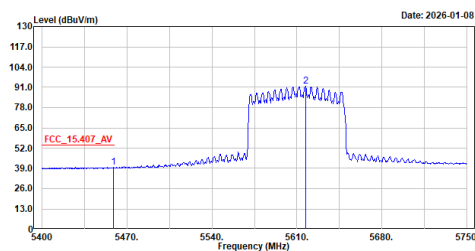


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	39.55	54.00	-14.45	25.00	14.55	Average
2	5617.350	91.59	-----	-----	76.27	15.32	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5610MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5610MHz
Test by :Bob Chiu

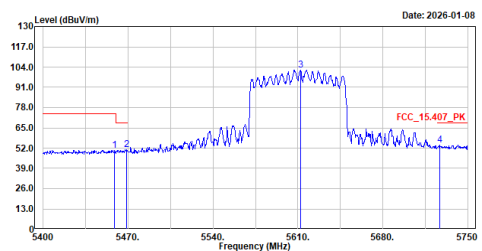


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	50.70	74.00	-23.30	36.15	14.55	Peak
2	5468.950	51.03	68.22	-17.19	36.42	14.61	Peak
3	5612.100	102.22	-----	-----	86.94	15.28	Peak
4	5726.900	54.16	68.22	-14.06	38.07	16.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5610MHz V Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5610MHz
Test by :Bob Chiu

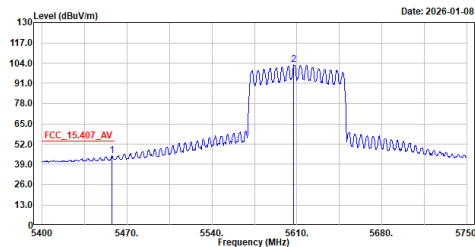


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5457.750	44.61	54.00	-9.39	30.07	14.54	Average
2	5607.550	103.13	-----	-----	87.87	15.26	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5610MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5610MHz
Test by :Bob Chiu

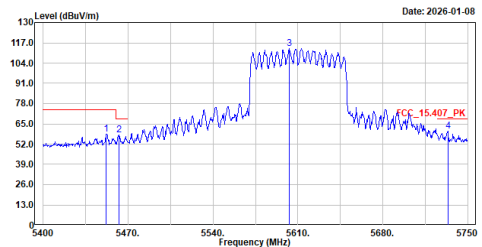


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5452.150	58.50	74.00	-15.50	43.99	14.51	Peak
2	5462.650	57.65	68.22	-10.57	43.07	14.58	Peak
3	5603.000	113.23	-----	-----	98.01	15.22	Peak
4	5733.550	60.25	68.22	-7.97	44.15	16.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5775MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5775MHz
Test by :Bob Chiu

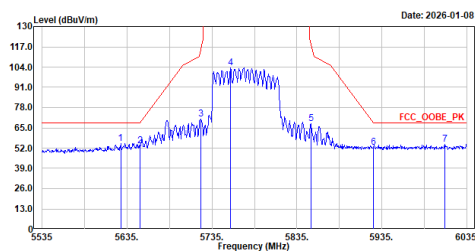


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5627.500	54.83	68.20	-13.37	39.44	15.39	Peak
2	5650.000	53.34	68.21	-14.87	37.79	15.55	Peak
3	5721.500	70.81	114.22	-43.41	54.75	16.06	Peak
4	5756.500	103.41	-----	-----	87.24	16.17	Peak
5	5851.500	67.57	118.78	-51.21	51.39	16.18	Peak
6	5925.000	52.44	68.21	-15.77	36.11	16.33	Peak
7	6009.000	54.63	68.20	-13.57	38.31	16.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5775MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5775MHz
Test by :Bob Chiu

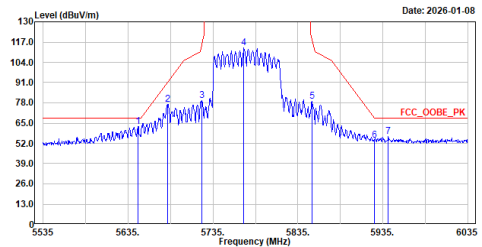


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5647.000	62.94	68.20	-5.26	47.42	15.52	Peak
2	5681.500	77.14	91.51	-14.37	61.31	15.83	Peak
3	5721.500	79.42	114.22	-34.80	63.36	16.06	Peak
4	5771.500	113.48	-----	-----	97.30	16.18	Peak
5	5851.500	79.12	118.78	-39.66	62.94	16.18	Peak
6	5925.000	53.95	68.21	-14.26	37.62	16.33	Peak
7	5941.500	56.30	68.20	-11.90	39.96	16.34	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_H_Average

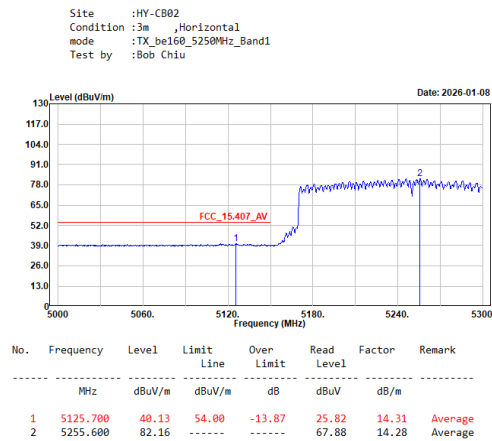


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_H_Peak

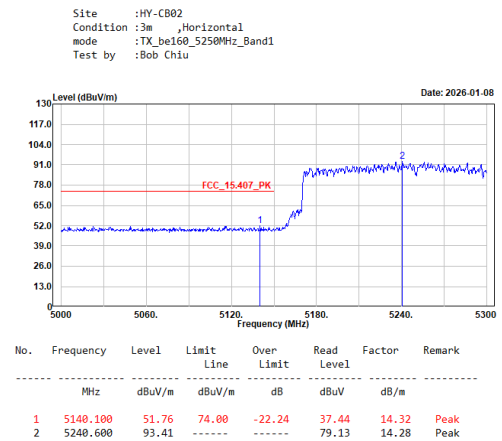


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_V_Average

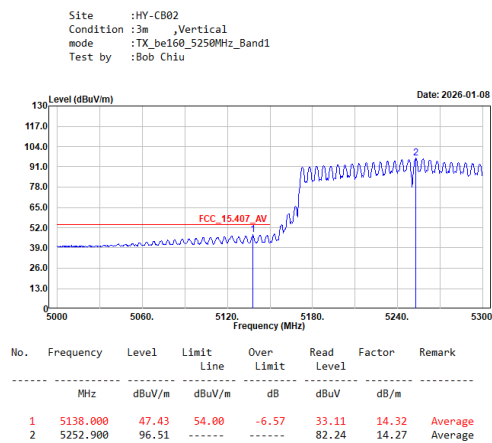


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_V_Peak

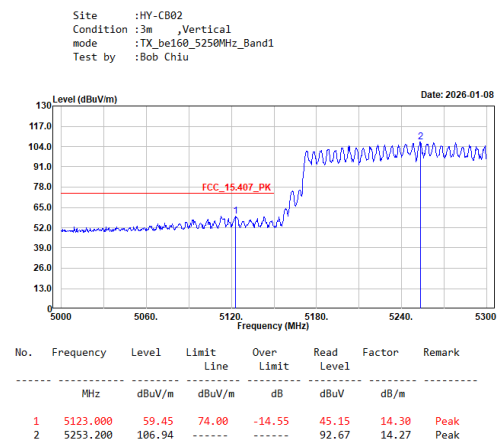


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band2_H_Average

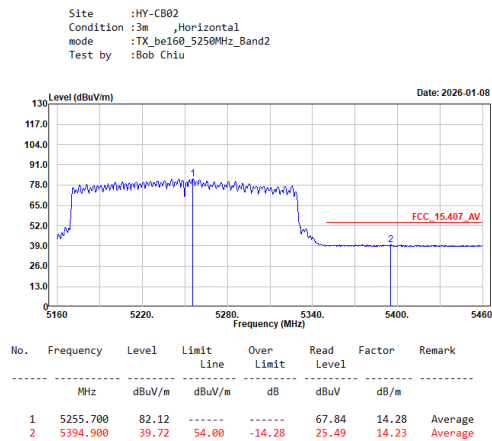


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band2_H_Peak

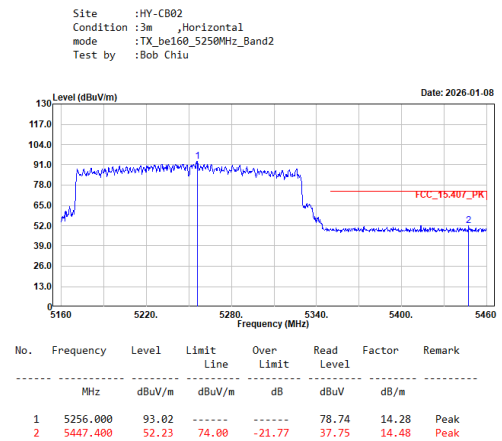


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band2_V_Average

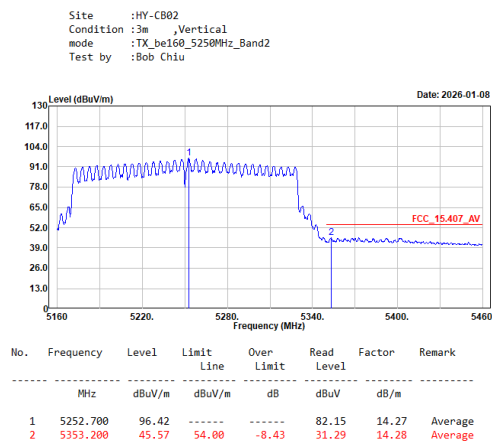

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be160_5250MHz_Band2_V_Peak

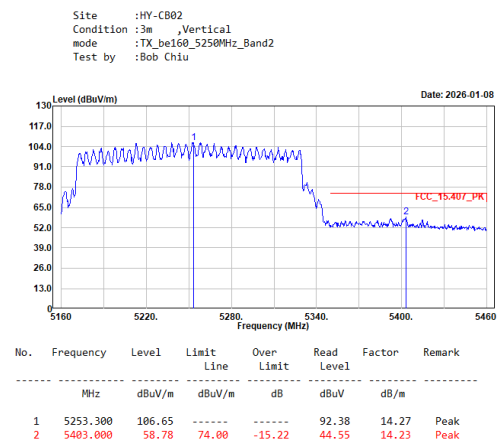

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be160_5570MHz
Test by :Bob Chiu

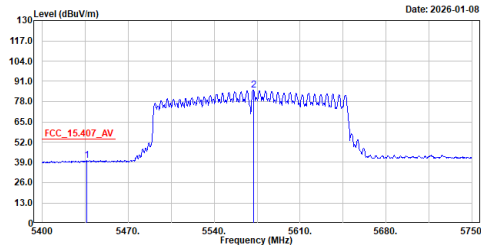


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5436.400	40.15	54.00	-13.85	25.73	14.42	Average
2	5572.200	85.44	-----	-----	70.33	15.11	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be160_5570MHz
Test by :Bob Chiu

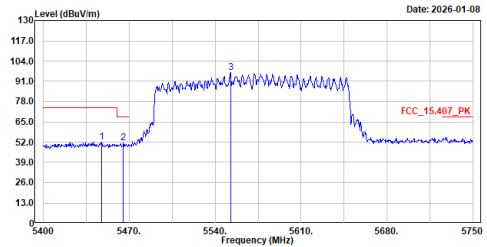


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5447.600	51.91	74.00	-22.09	37.43	14.48	Peak
2	5465.100	51.67	68.22	-16.55	37.08	14.59	Peak
3	5552.600	96.42	-----	-----	81.36	15.06	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be160_5570MHz
Test by :Bob Chiu

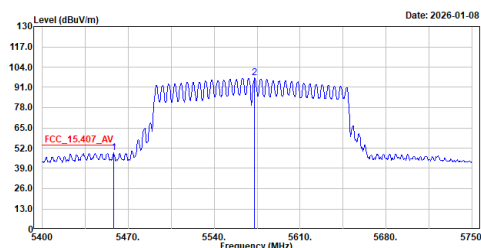


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.100	48.99	54.00	-5.01	34.45	14.54	Average
2	5572.900	97.01	-----	-----	81.89	15.12	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be160_5570MHz_V_Peak





Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be160_5570MHz
Test by :Bob Chiu

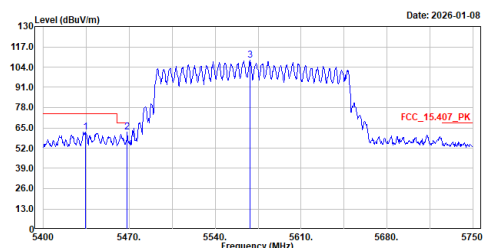


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5434.650	62.37	74.00	-11.63	47.96	14.41	Peak
2	5468.250	62.24	68.22	-5.98	47.64	14.60	Peak
3	5568.350	108.23	-----	-----	93.12	15.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

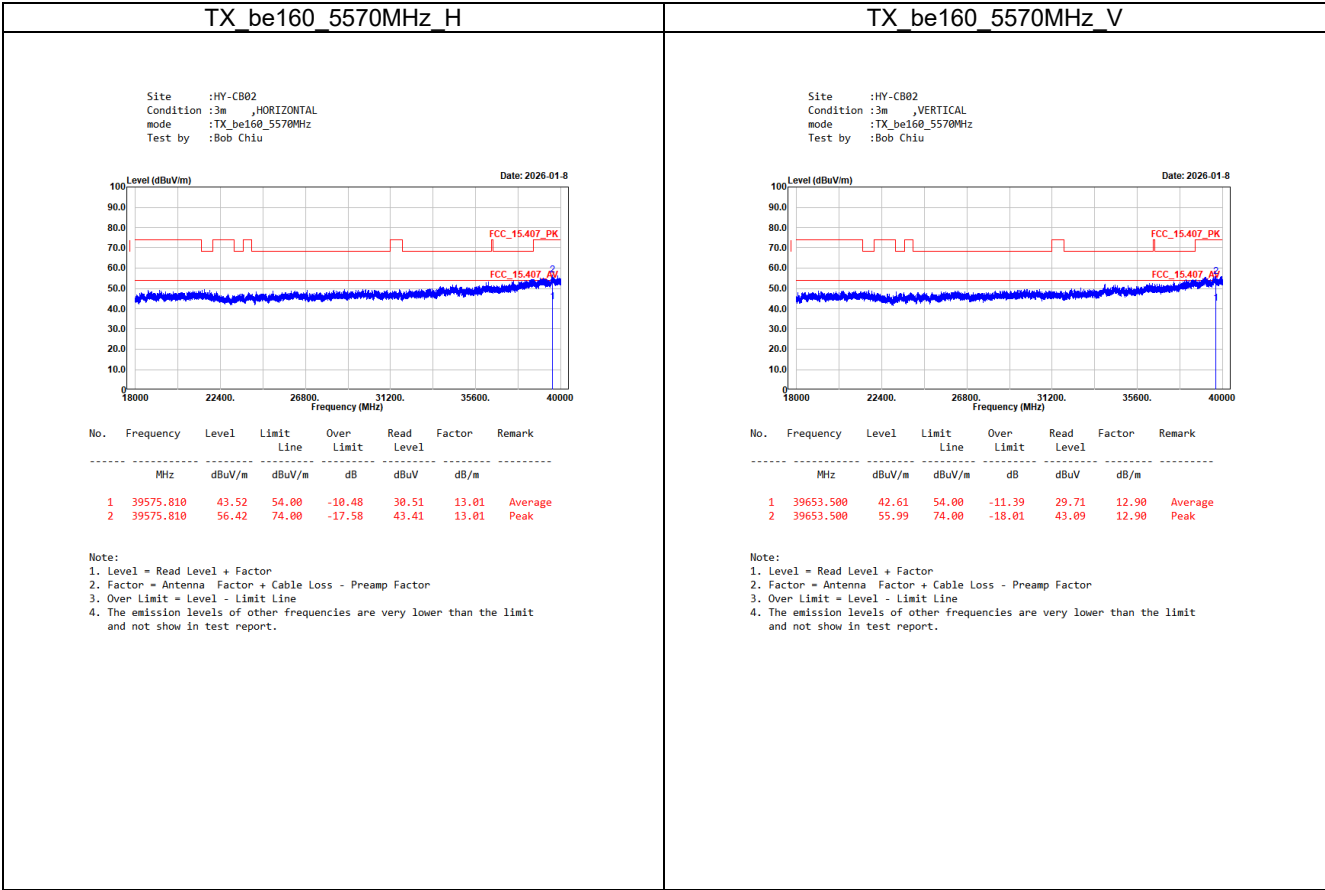

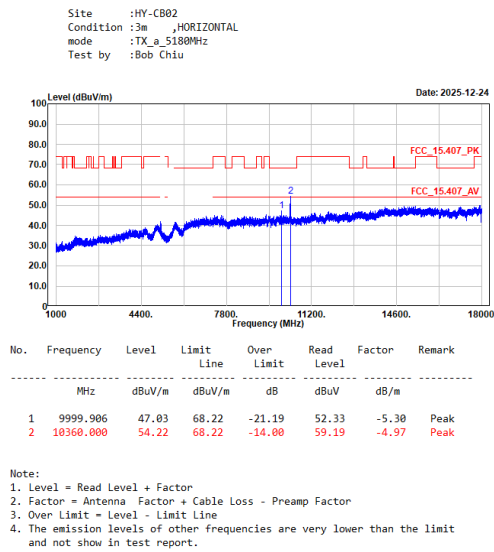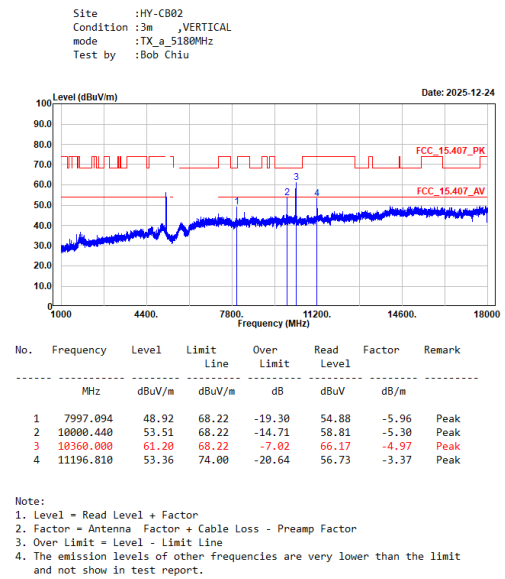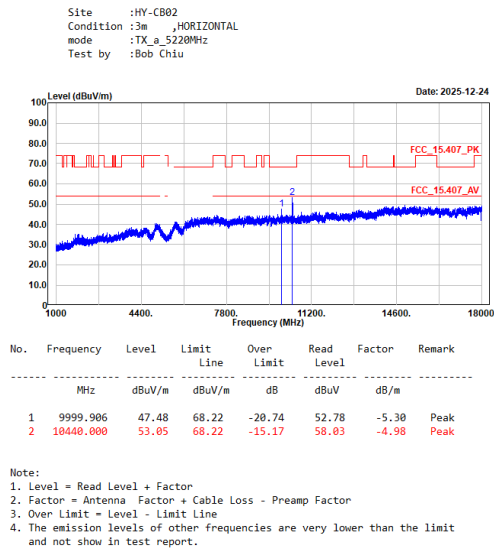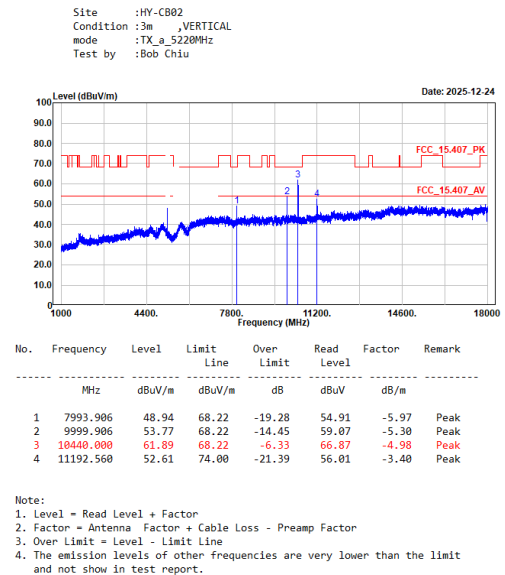
M/N: AW7990-AED, Antenna: PCB**TX_a 5180MHz_H****TX_a 5180MHz_V****TX_a 5220MHz_H****TX_a 5220MHz_V**

TX a 5240MHz H

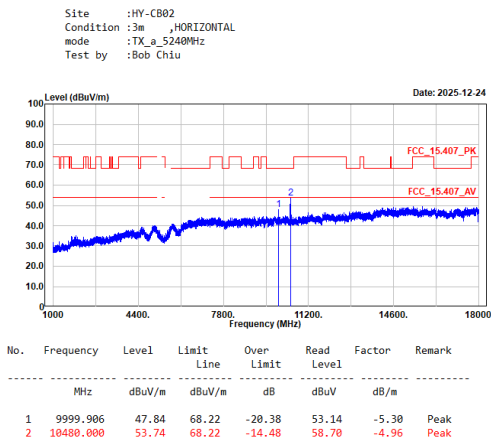


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5240MHz V

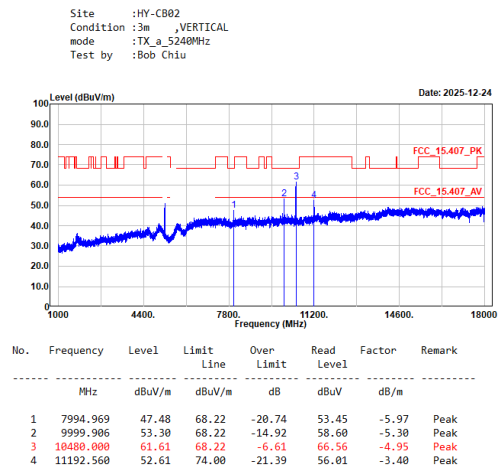


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5260MHz H

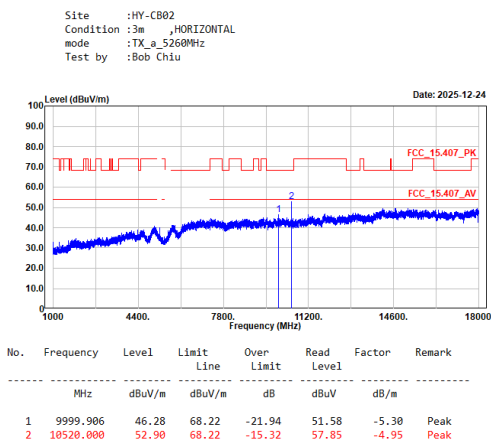


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5260MHz V

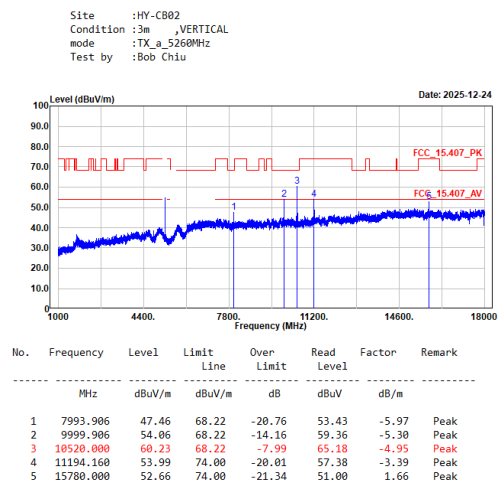


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX a 5300MHz H

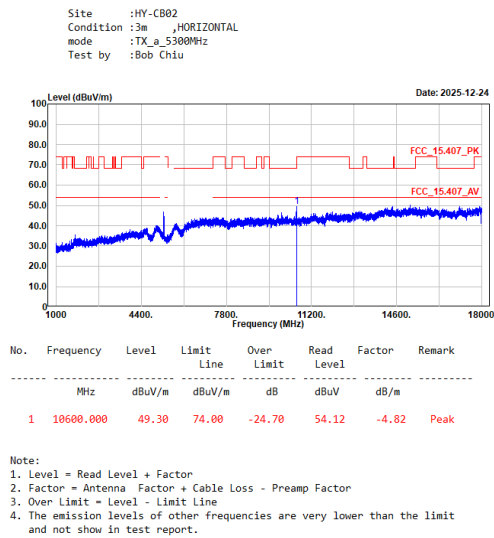


TX a 5300MHz V

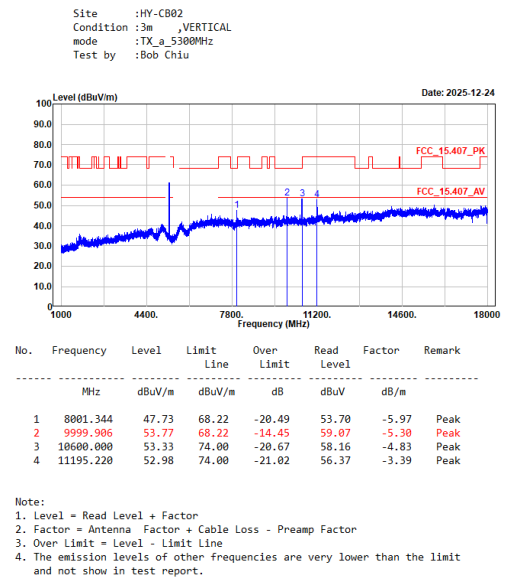


TX a 5320MHz H

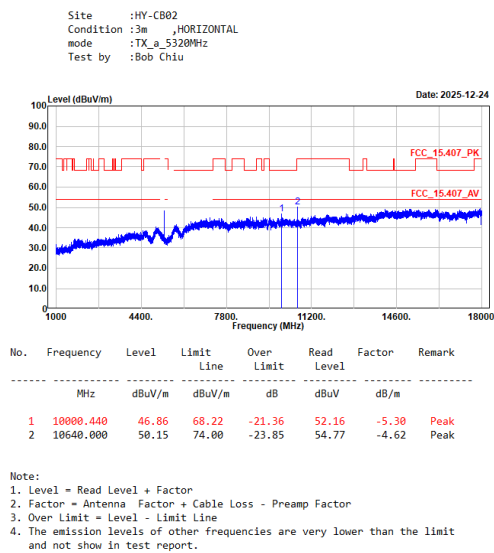

TX a 5320MHz V

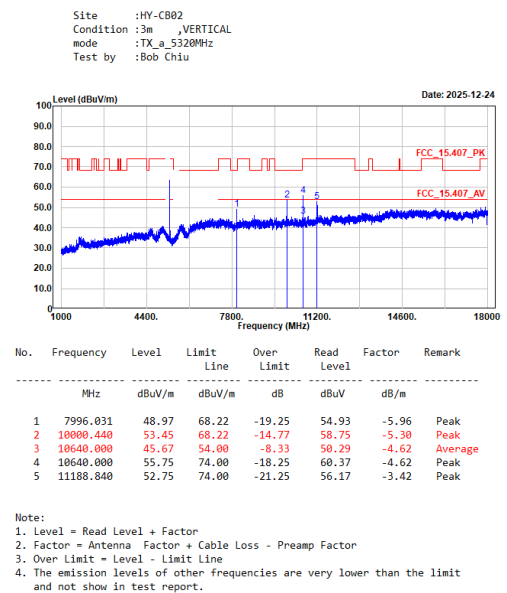


TX a 5500MHz H

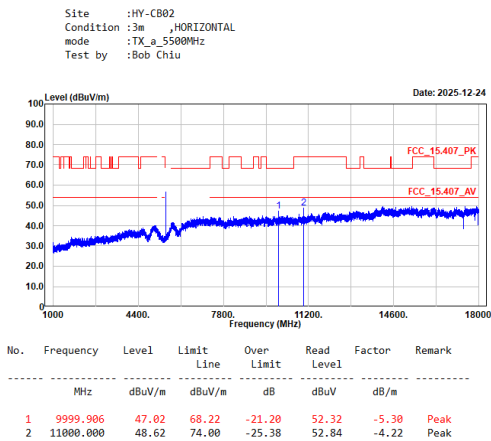


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz V

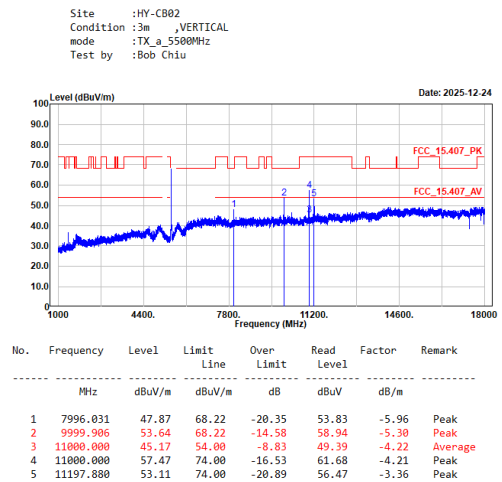


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5580MHz H

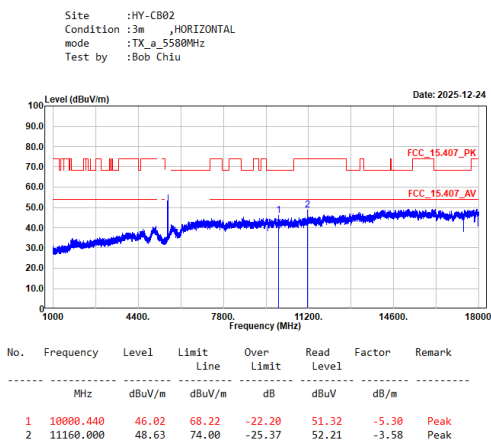


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5580MHz V

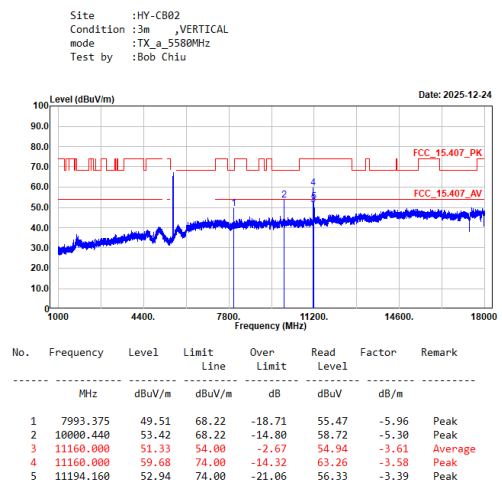


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5700MHz H

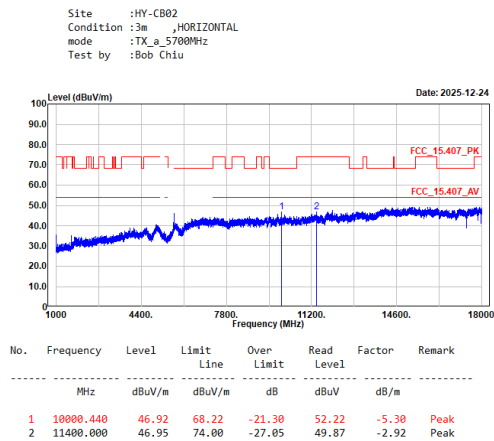


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5700MHz V

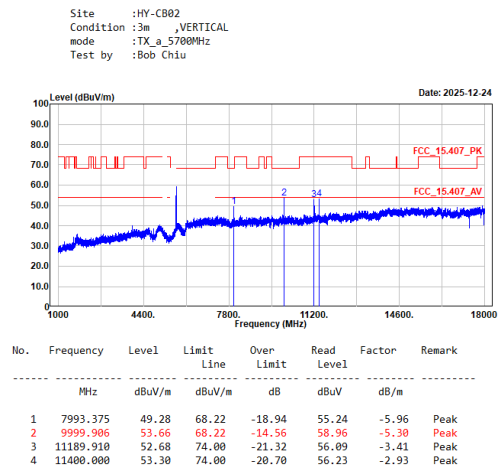


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5720MHz H

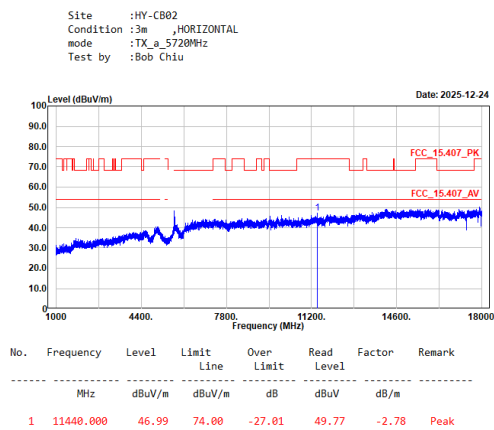

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX a 5720MHz V

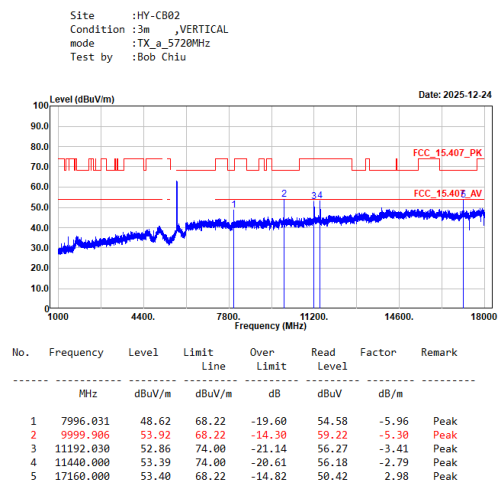

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5745MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5745MHz
Test by :Bob Chiu

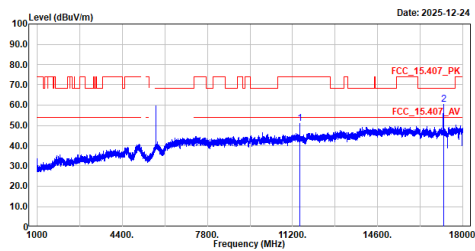


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	51.03	74.00	-22.97	53.83	-2.80	Peak
2	17235.000	60.55	68.22	-7.67	57.88	2.67	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5745MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5745MHz
Test by :Bob Chiu

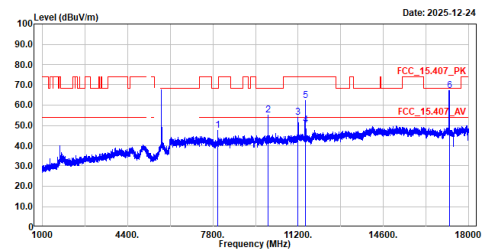


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	8000.281	47.72	68.22	-20.50	53.69	-5.97	Peak
2	10000.440	54.94	68.22	-13.28	60.24	-5.30	Peak
3	11196.810	53.92	74.00	-20.08	57.29	-3.37	Peak
4	11490.000	50.09	54.00	-3.91	52.89	-2.80	Average
5	11490.000	62.36	74.00	-11.64	65.16	-2.80	Peak
6	17235.000	67.29	68.22	-0.93	64.62	2.67	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5785MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5785MHz
Test by :Bob Chiu

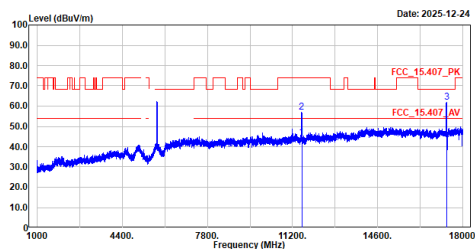


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	44.70	54.00	-9.30	47.32	-2.62	Average
2	11570.000	56.80	74.00	-17.20	59.42	-2.62	Peak
3	17355.000	62.02	68.22	-6.20	58.92	3.10	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5785MHz V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5785MHz
Test by :Bob Chiu

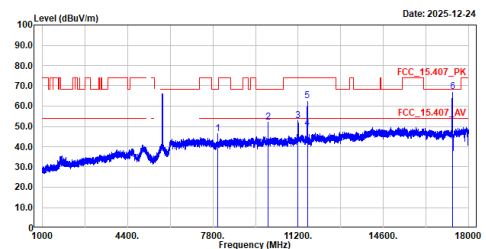

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7994.969	46.40	68.22	-21.82	52.37	-5.97	Peak
2	9999.906	51.99	68.22	-16.23	57.29	-5.30	Peak
3	11196.810	52.96	74.00	-21.04	56.33	-3.37	Peak
4	11570.000	49.22	54.00	-4.78	51.84	-2.62	Average
5	11570.000	62.75	74.00	-11.25	65.37	-2.62	Peak
6	17355.000	67.34	68.22	-0.88	64.24	3.10	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz H

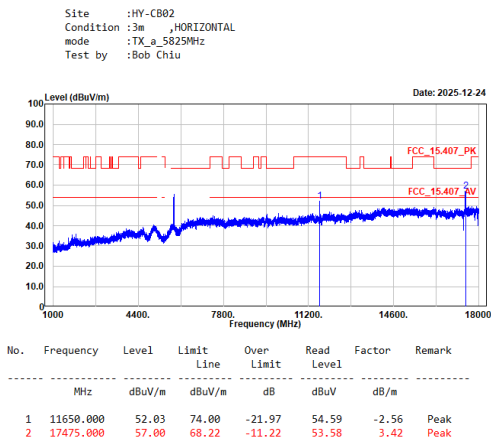


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz V

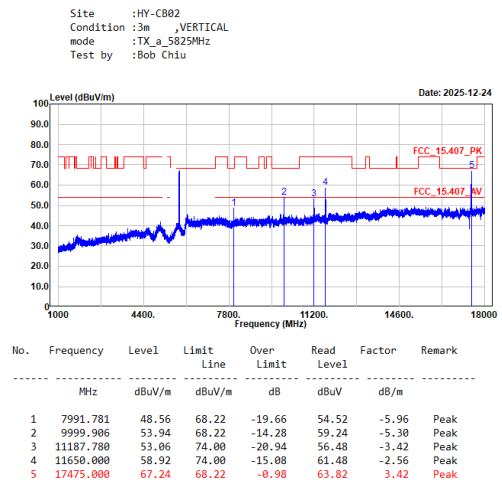


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX ac20 5180MHz H

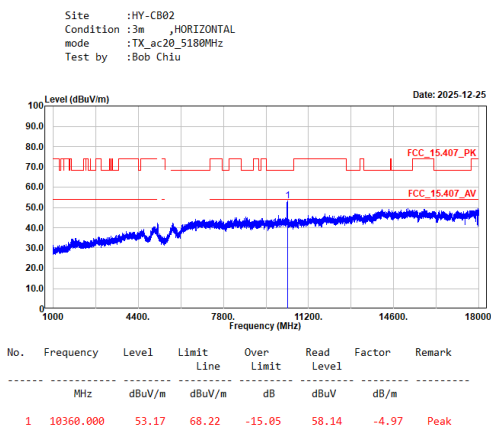


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX ac20 5180MHz V

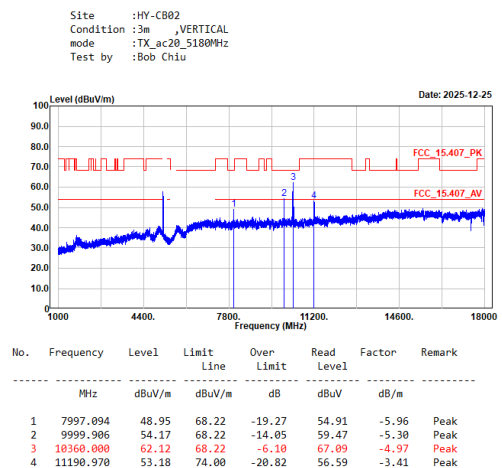


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_H

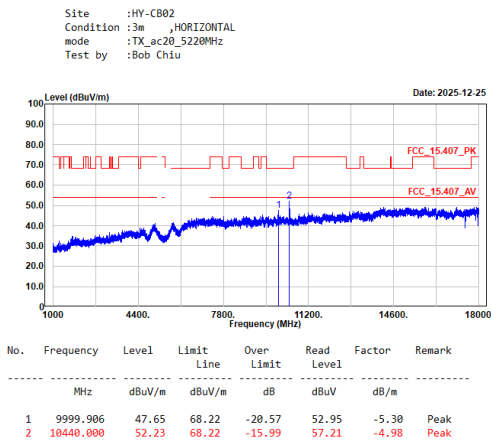


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_V

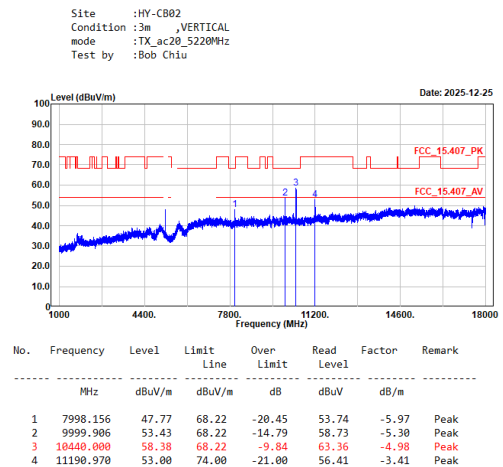


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_H

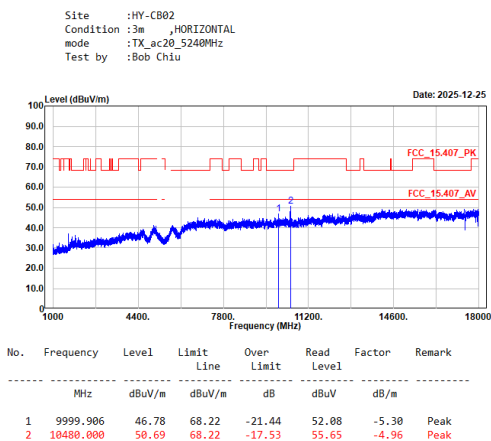

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac20_5240MHz_V

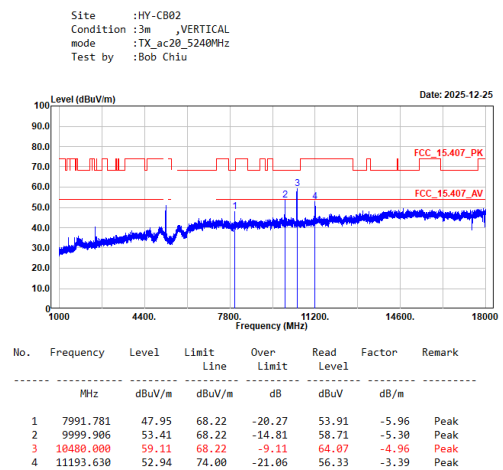

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5260MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5260MHz
Test by :Bob Chiu

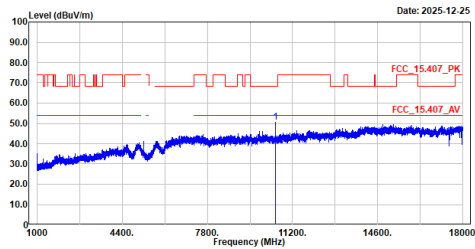


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	50.66	68.22	-17.56	55.61	-4.95	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5260MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5260MHz
Test by :Bob Chiu

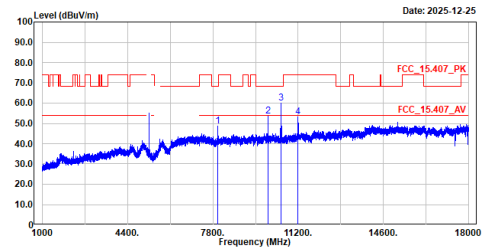


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.969	48.55	68.22	-19.67	54.52	-5.97	Peak
2	10000.440	53.65	68.22	-14.57	58.95	-5.30	Peak
3	10520.000	60.01	68.22	-8.21	64.96	-4.95	Peak
4	11194.160	53.30	74.00	-20.70	56.69	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5300MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5300MHz
Test by :Bob Chiu

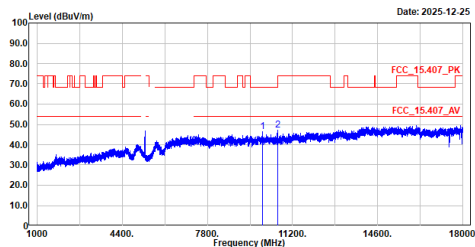


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	46.59	68.22	-21.63	51.89	-5.30	Peak
2	10600.000	47.28	74.00	-26.72	52.11	-4.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5300MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5300MHz
Test by :Bob Chiu

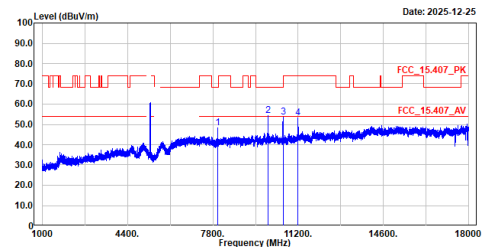

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7995.500	48.48	68.22	-19.74	54.45	-5.97	Peak
2	10000.440	54.34	68.22	-13.88	59.64	-5.30	Peak
3	10600.000	53.47	74.00	-20.53	58.30	-4.83	Peak
4	11190.440	53.11	74.00	-20.89	56.52	-3.41	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_H

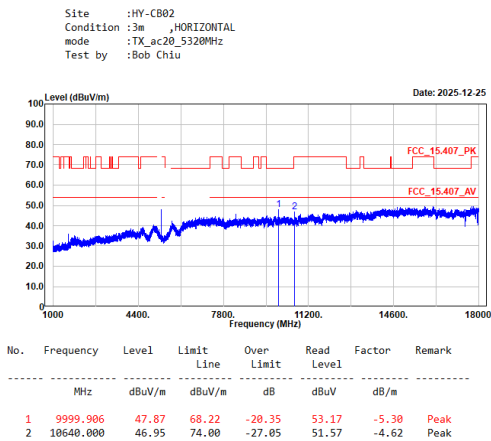


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_V

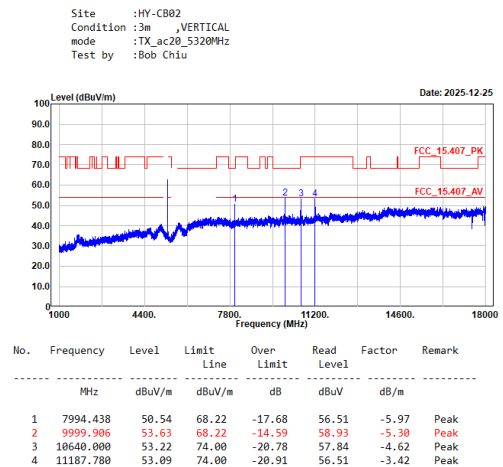


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_H

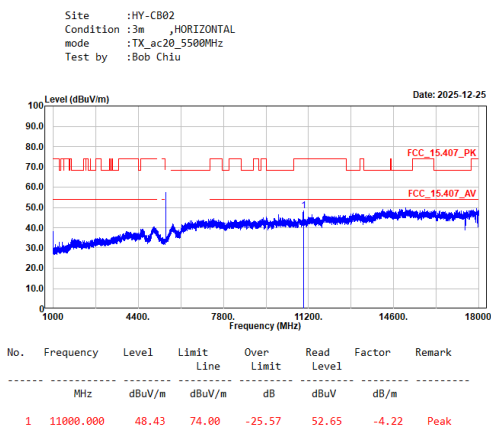

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac20_5500MHz_V

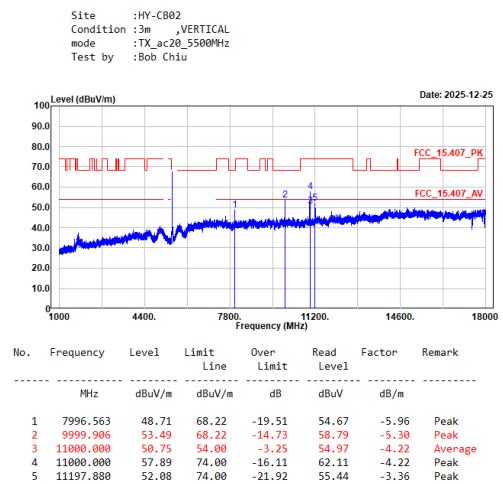

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5580MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5580MHz
Test by :Bob Chiu

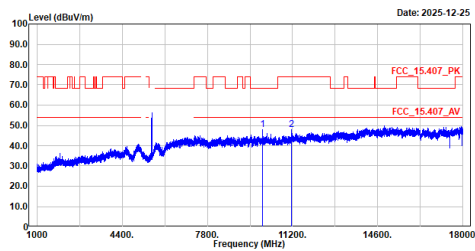


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	47.83	68.22	-20.39	53.13	-5.30	Peak
2	11160.000	47.93	74.00	-26.07	51.54	-3.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5580MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5580MHz
Test by :Bob Chiu

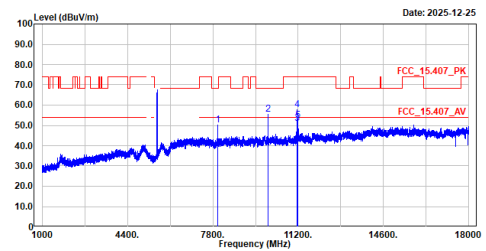


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7995.500	50.14	68.22	-18.08	56.11	-5.97	Peak
2	10000.440	55.36	68.22	-12.86	60.66	-5.30	Peak
3	11160.000	50.76	54.00	-3.24	54.37	-3.61	Average
4	11160.000	57.62	74.00	-16.38	61.23	-3.61	Peak
5	11199.470	52.43	74.00	-21.57	55.78	-3.35	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5700MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5700MHz
Test by :Bob Chiu

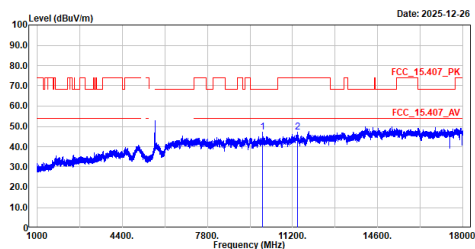


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	47.35	68.22	-20.87	52.65	-5.30	Peak
2	11400.000	47.32	74.00	-26.68	50.24	-2.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5700MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5700MHz
Test by :Bob Chiu

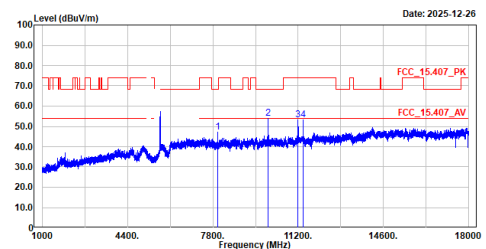

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7993.906	47.17	68.22	-21.05	53.14	-5.97	Peak
2	9999.906	53.86	68.22	-14.36	59.16	-5.30	Peak
3	11197.880	53.09	74.00	-20.91	56.45	-3.36	Peak
4	11400.000	53.32	74.00	-20.68	56.24	-2.92	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5720MHz_H

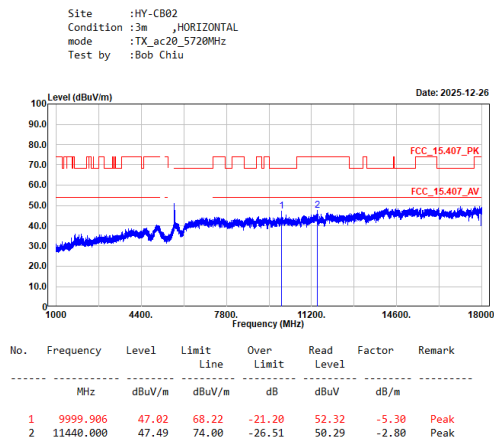


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5720MHz_V

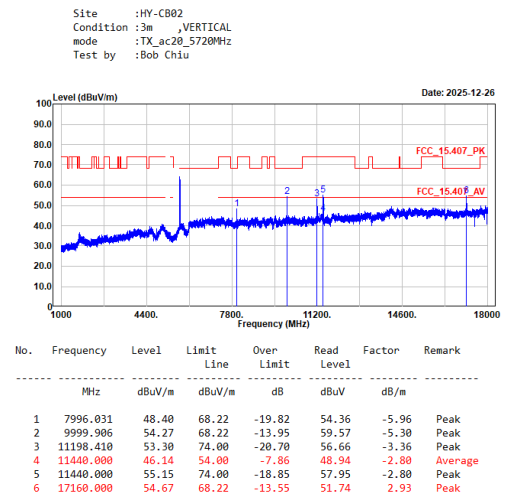


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_H

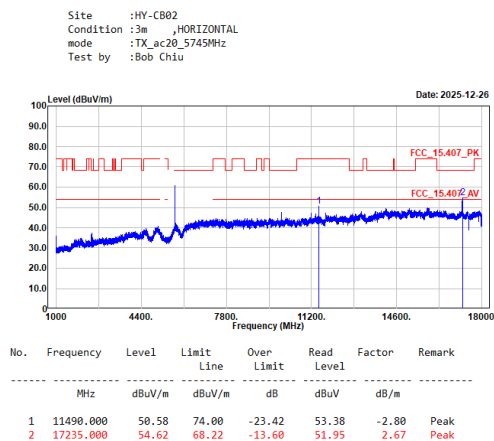

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_V

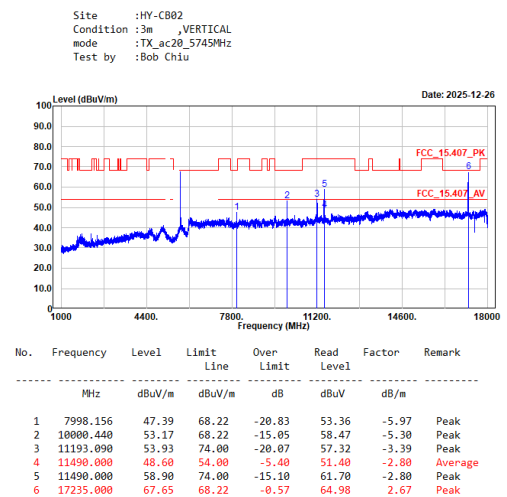

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.