

ECW510

User manual

Cloud7 2x2

Cloud Wi-Fi 7 2x2 Dual Band Indoor Access Point

Introduction

This Quick Start Guide is designed to guide you through the installation of the **Cloud Wi-Fi 7 2x2 Dual Band Indoor Access Point**, model **ECW510**, including hardware mounting and configuration.

■ Cloud7 2x2

Cloud Wi-Fi 7 2x2 Dual Band Indoor Access

Model: ECW510

- Wi-Fi 7 technology for high-performance Wi-Fi in high-density, multi-device environments.
- Two spatial streams support up to 2,900 Mbps 5GHz and 700 Mbps 2.4GHz .
- 2.5 GbE PoE-in port supports 802.3at PoE and PoE injector input for flexible installation up to 328 feet 100 meters).

■ Content Quick Links

- [Hardware Overview](#)
- [Hardware Mounting](#)
- [Configure with EnGenius Cloud](#)

Package Contents



Cloud Managed
Indoor Access Point



Ceiling Mount Base
(9/16" T-Rail)



Ceiling Mount Base
(15/16" T-Rail)



Mounting Kit



Spacer



Product Card

System Requirements

The EnGenius Cloud is primarily accessible with a web browser or mobile app. Before signing up for the EnGenius Cloud Service or logging on to the EnGenius Cloud Platform to manage your network, ensure that you've downloaded the right app and used the supported browser.

Mobile App:

EnGenius Cloud To-Go (iOS/ Android supported)

↓ [Download the Cloud To-Go mobile app here](#) ■



Web Browser:

- Google Chrome 57.0.2987.110 and later)
- Microsoft Edge 80.0.361.103 and later)
- Mozilla Firefox 52.0 and later)


Network Requirements

Before you get started, please make sure your network environment is DHCP enabled. EnGenius Cloud Access Points (ECW series) are default assigned an IP address dynamically by the DHCP server.

- If you encounter issues with IP address assignment, you may want to change your IP assignment from "**DHCP mode**" to "**Static IP**". Please check the "[User Manual: Login to Local Access Page](#)" for more details.

Hardware Overview

Ports

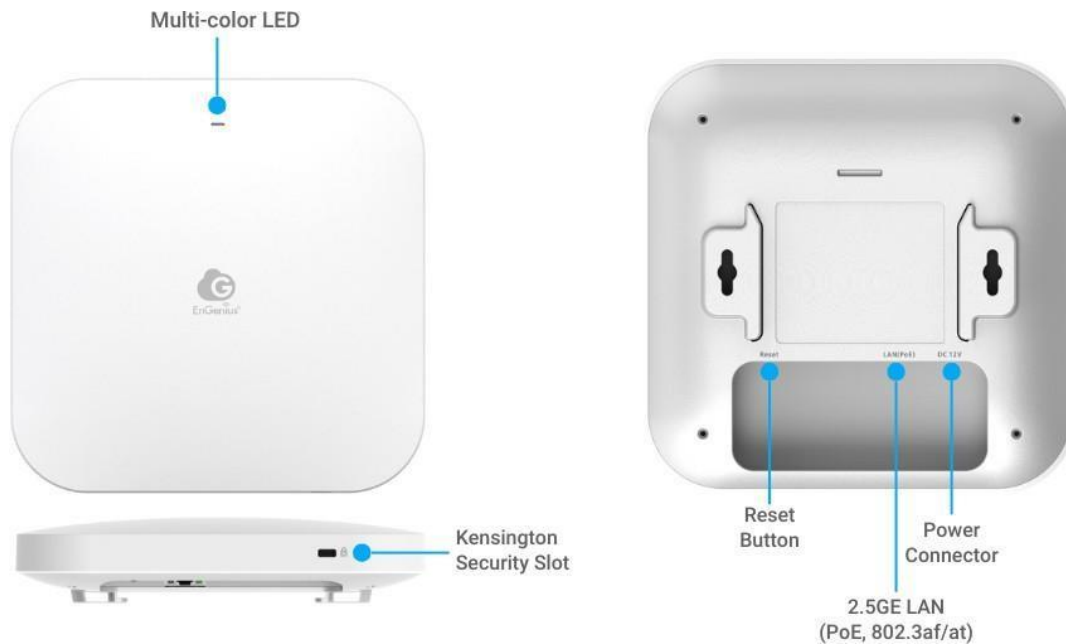

Reset Button:

- **Reset to default:** Press and hold the reset button for over **10** seconds, and the **LED PWR** will start *Fast Flashing* (0.2 sec). Then, the device will be reset to factory default settings.

LEDs

Status	LED Color		
Connecting to Cloud	Green Flashing (0.5 Sec)		
Cloud Connected	Blue Solid on		
Firmware Upgrading	Green Flashing (1 Sec)	<--->	Blue Flashing (1 Sec)
Reset to Default	Green Fast Flashing (0.2 Sec)		
AP Locating Mode	Blue Flashing (1.5 Sec. On -> 0.5秒 Sec. Off)		

Device status and LED behavior

- **ECW510** only has one LED indicator with two colors (**Green** / **Blue**)


Hardware Mounting

The access point can be mounted on the **Ceiling** and **Wall**, and please perform the steps for the appropriate installation:


Ceiling Mount

- T-Rail

1. Slide the **Ceiling Mount Base** into the slot of the Access Point.

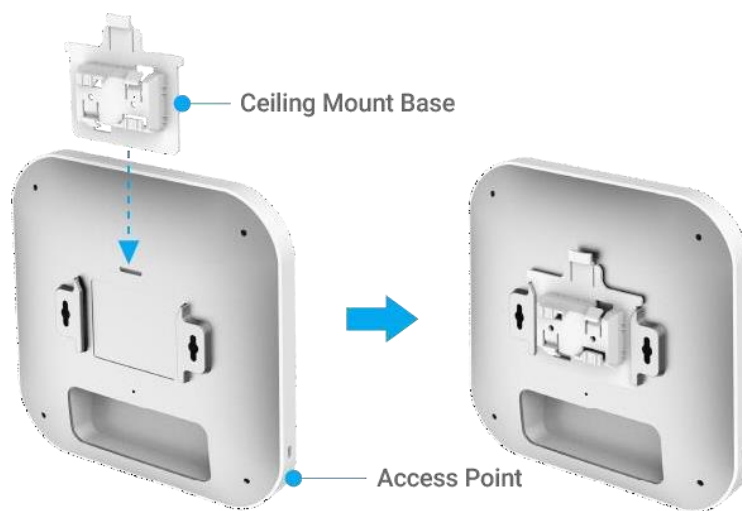


2. Slightly Hook the ceiling mount bracket onto the T Rail until you hear a click sound.

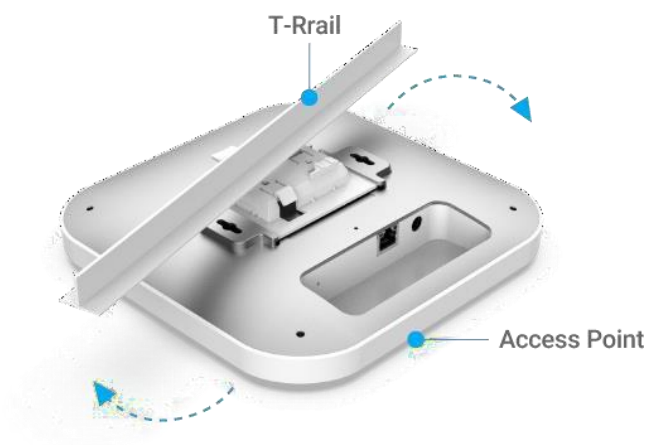


- Hard Ceiling

1. Screw the included **Screws** into the **Ceiling Mount Base** with **Spacers**, and the **Screws** unto the surface until they are flush with the surface.

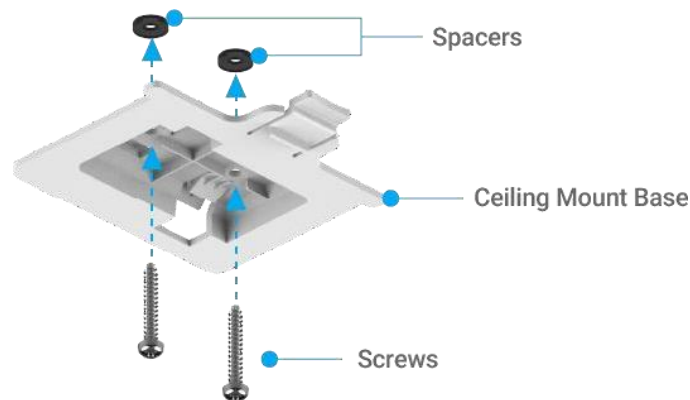


2. Slide the Access Point into the **Ceiling Mount Base**.

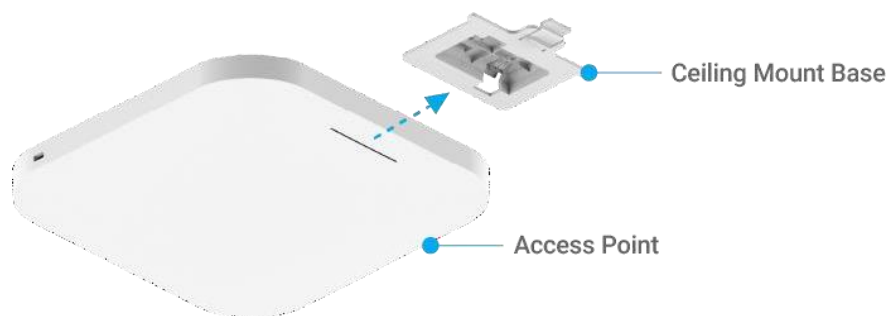

Wall Mount

1. Determine where the **Access Point** is to be placed and mark the location on the surface for the two mounting holes. Use the appropriate drill bit to drill two 8.1mm diameter and 26mm depth holes in the markings.
2. Screw the **Anchors** into the holes until they are flush with the wall; screw the included **Screws** into the **Anchors**, but leave the screw head sticking out so you can hang the **Access Point** on it.

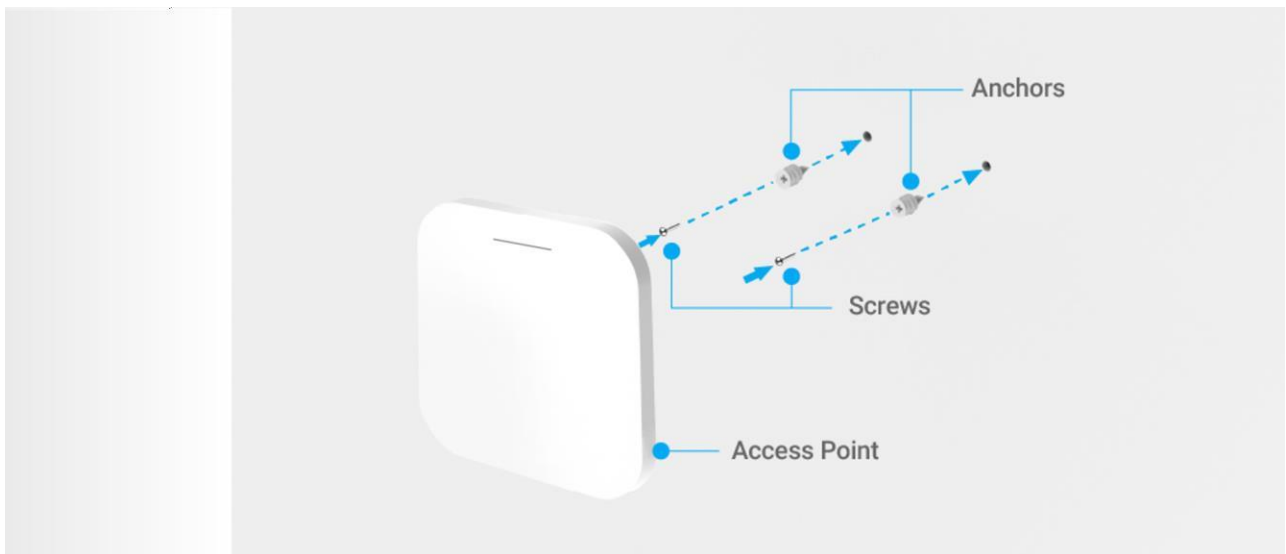

4. Hang the **Access Point** against wall onto the **Screw** heads.



Configure with EnGenius Cloud

Step1: Register Device and Assign to Network

You can register the device either by **Cloud To-Go mobile app** or the **EnGenius Cloud platform**.


Cloud To-Go Mobile App

1. Open and log in to the **EnGenius Cloud To-Go** mobile app.
2. Scan the QR code on the back of the device via the app.



Scan QR-code for device registration


3. If the camera successfully scans a QR code, the app will display the device Information. You could tap "**Register**" to complete the Registration.

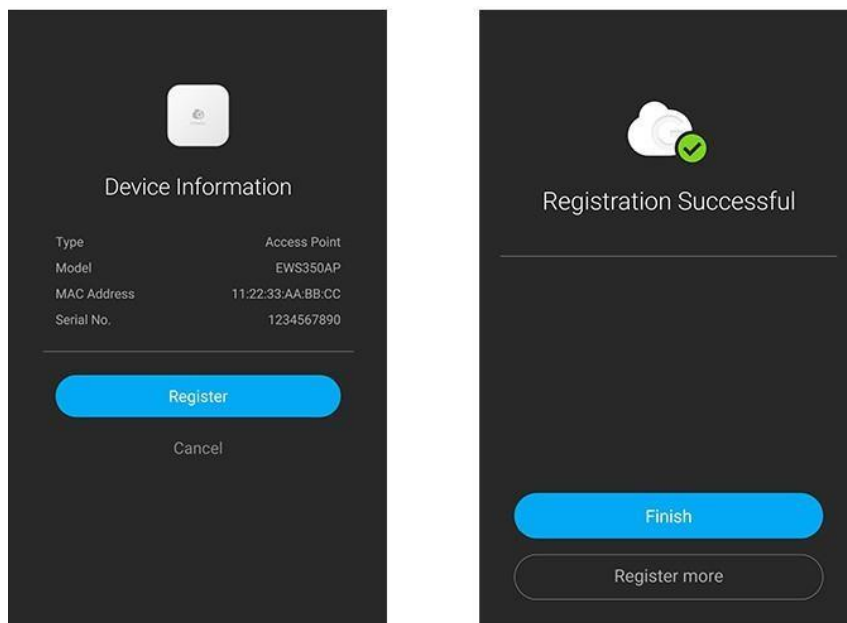

Device registration

4. Registered devices will be shown on the ***Inventory&License*** page. Slide left the device and click "**Add to Network**" add the device to your personalized Network.


Network: Management domain shared same configurations within EnGenius Cloud.

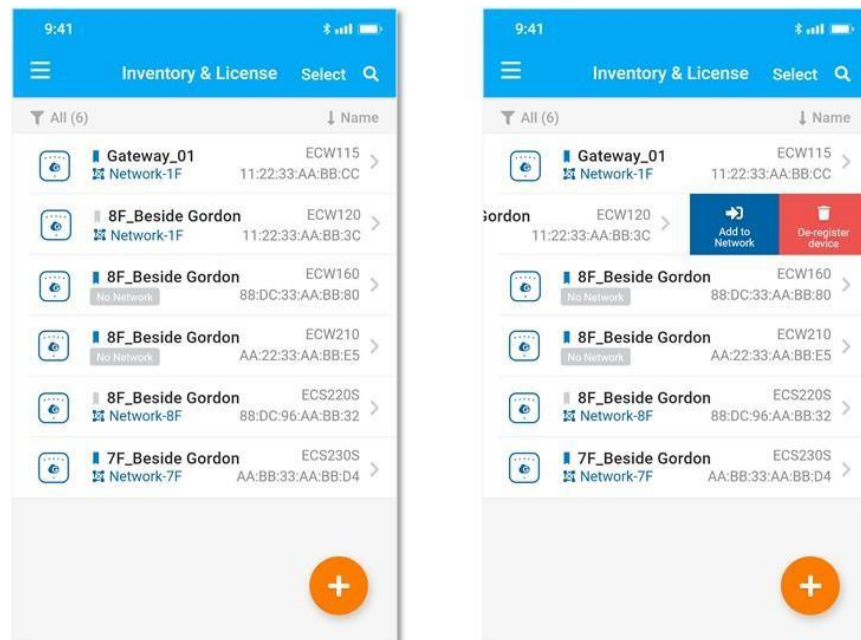

Assign device to a managed Network

EnGenius Cloud Platform


1. Log in to the **EnGenius Cloud Platform**: <https://cloud.engenius.ai/>.
2. Go to the **home > Inventory&License** page and click "**Register Device**".
3. Enter the **Serial Number** of the device(s) for device registration. Please refer to "[User Manual-Registering_Devices to Organization](#)".

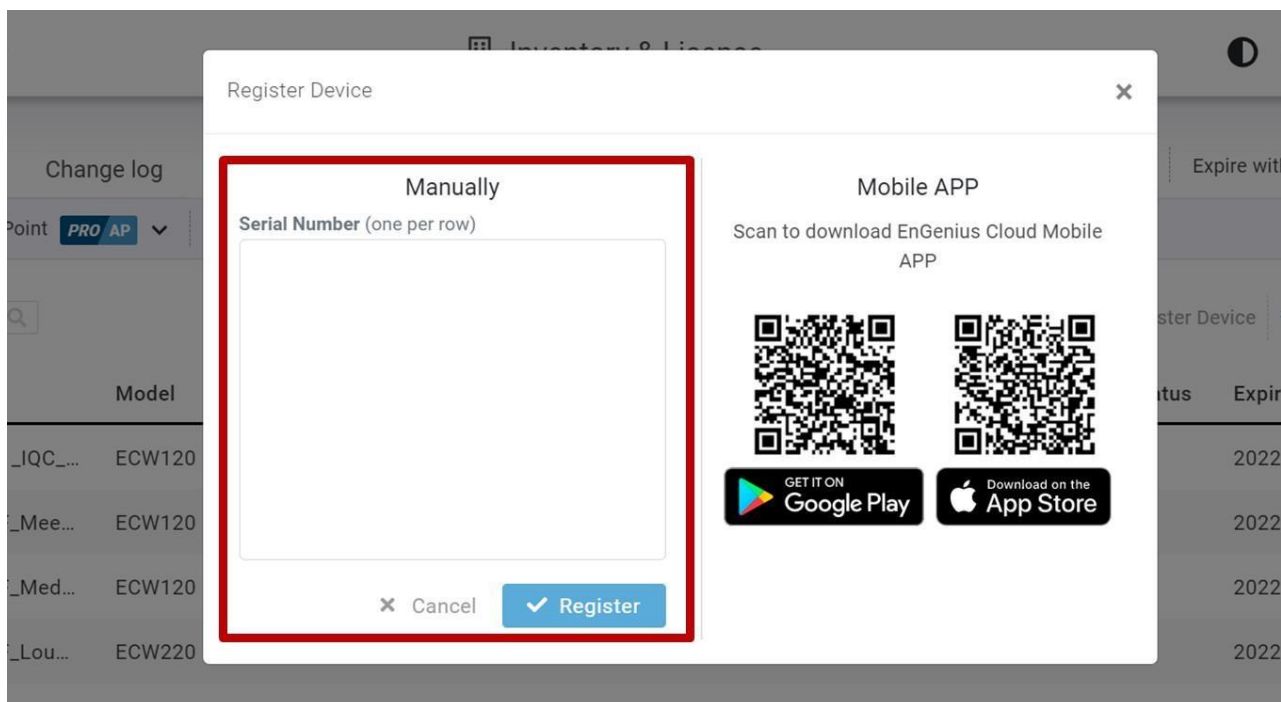

Register device(s) with device's Serial Number

4. Select the registered device and click **"Assign to Network"** to add the device to your personalized Network.

Network: Management domain shared same configurations within EnGenius Cloud.

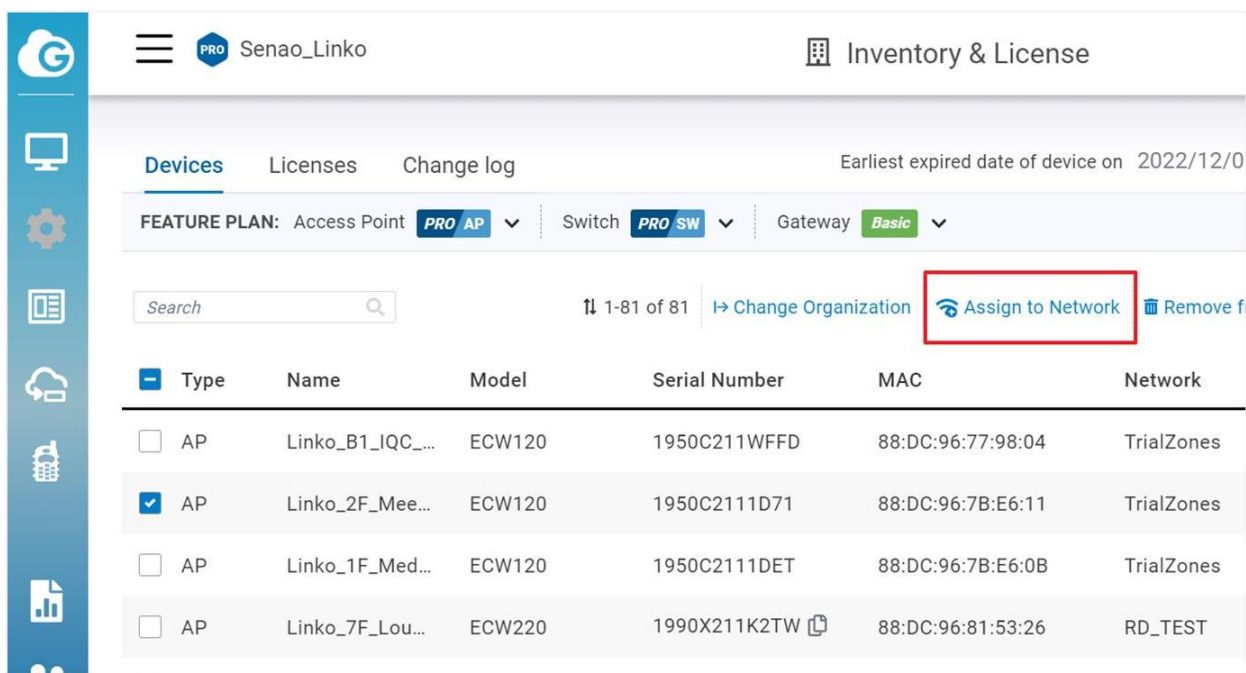

Assign selected device(s) to a managed Network

Step2: Power On Device


The EnGenius Cloud AP devices can be powered by any of the following:

- EnGenius Cloud PoE Switch or 802.3at PoE+ compliant Switch
- EnGenius PoE adaptor EPA5006GP/EPA5006GAT
- Power Adapter DC 12V/1.5A power input)

 Do not use both power sources at the same time.

Connecting to a PoE Switch

Connect the Ethernet cable from the EnGenius Cloud AP directly to the PoE port of the PoE switch.

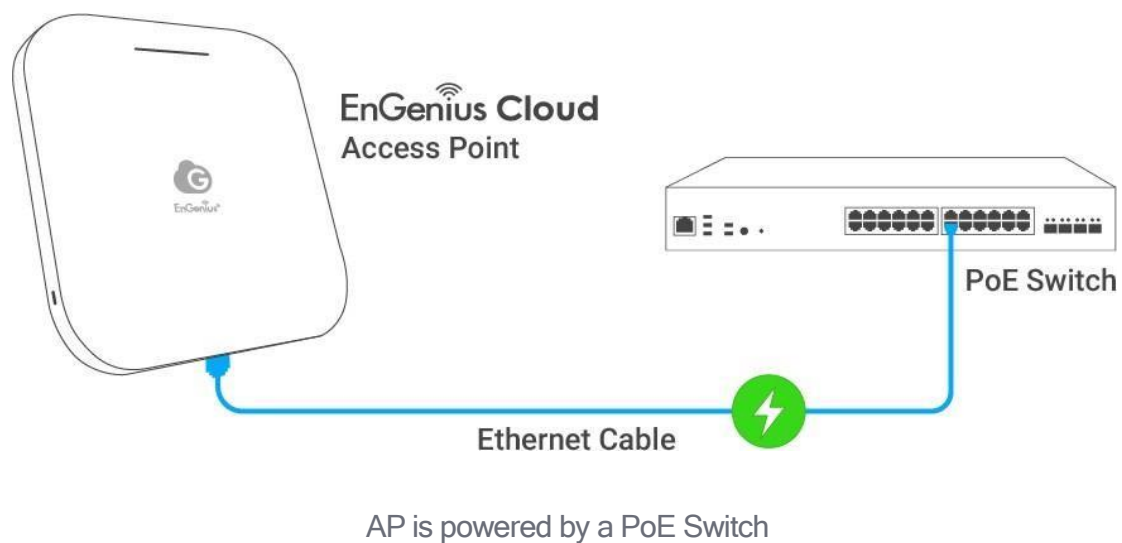


Powered with a PoE Adapter

A Connect one end of the Ethernet cable into the LAN (PoE) port of EnGenius Cloud AP and the other end to the PoE port on the PoE Adapter.


B Connect the power cord with the PoE Adapter and plug the other end into an electrical outlet. C Connect the second Ethernet cable into the LAN port of the PoE Adapter and the other end to the Ethernet port on the computer.

■ Please ensure to use cat5/cat5e UTP/STP RJ45 Ethernet cables.

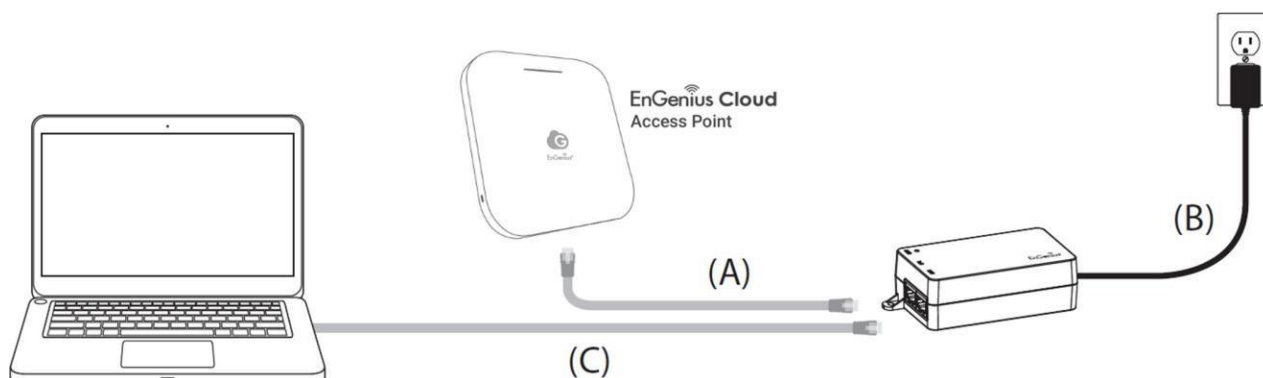

Powered with a Power Adapter

Connect the Power Cord to the adapter, and then plug the Power Cord into the power outlet.

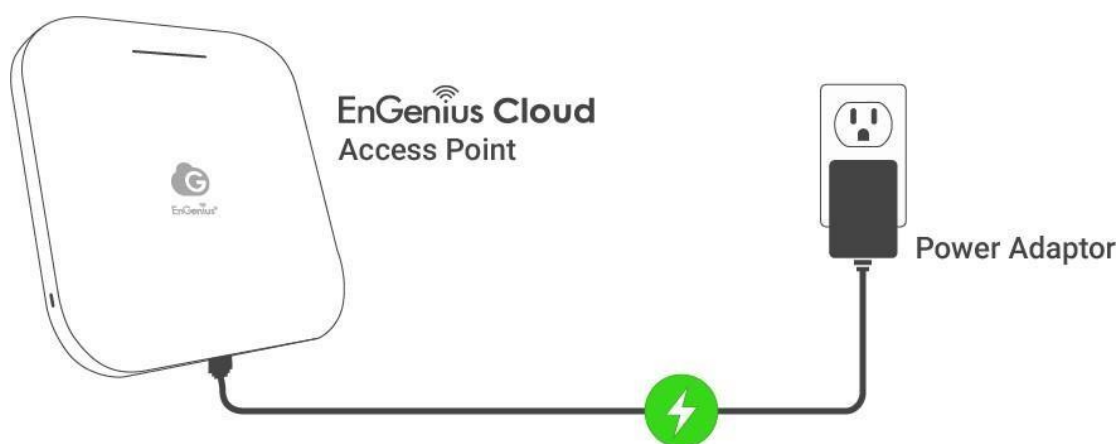

AP is powered with a power adapter


Step3: Connect to the EnGenius Cloud

Once the device is powered on and ready to connect to the Internet, the **LED indicator** will stay **Solid On**, which means the device is now connected to the EnGenius Cloud Platform. It will automatically download the default configuration settings from EnGenius Cloud for automated provisioning.

■ When the Access Point is connected to the EnGenius Cloud Platform for the first time, it will automatically check the latest firmware version available. If the **firmware upgrade** is required, it might take **8 10 minutes** to complete the process. The **LED indicator** will be **Flashing 0.5 sec** till the process is finished.

Step4: Manage with the EnGenius Cloud

Log in to the **EnGenius Cloud** platform to configure detailed settings. For more information, please refer to **User Manual**.

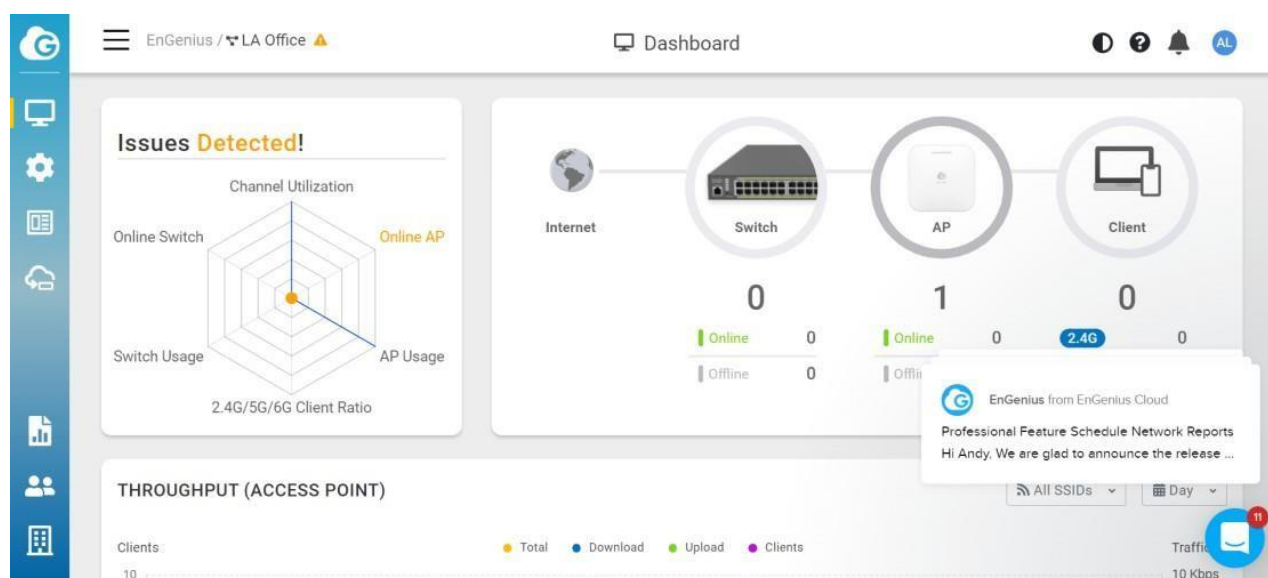

EnGenius Cloud Dashboard

Troubleshooting

If your AP cannot be managed by the EnGenius Cloud Platform, there might be a problem with connecting to EnGenius Cloud.

To troubleshoot the connection issue, you may log in to the **Device Local Access** page:

1. Use your client device (e.g., a laptop, mobile device, or tablet) to find the SSID **"EnMGMTxxxx"** (xxxx is the last four digits of MAC MAC would be found on the back of the device) and connect to it.
2. Under your web browser, enter the URL [http ://EnGenius.local](http://EnGenius.local) or <http://192.168.1.1> to access the device's user interface.
3. You can review the device status after logging into the AP with the default admin account/password (admin/admin).
4. Check the information on **Network Connectivity** and take action if necessary.

 Local Status Page English

Network Settings

[Device Status](#) [Local Setting](#)

Reboot Reset

Device Overview

System Name	ECW336-772C	IP Address	192.168.8.225
Model	ECW336	MAC Address	88:DC:97:01:77:2C
Serial Number	2230E4T1DCRC	Current Firmware	v1.8.81

Registration Overview

Registration Server	EnGenius Cloud
Date of Registration	6/25/2024, 3:50:08 PM
Last Update Time	6/27/2024, 3:23:16 PM

Network Connectivity

Local Network	✓ Connected to local network successfully - IP Address : 192.168.8.225 - Gateway : 192.168.8.1 - Get from LAN DHCP
Device to Internet	✓ This AP is connected to the Internet
Management Status	✓ This AP is successfully connected to the EnGenius Cloud

ECW AP's Local Access Page

 [Change IP Assignment Settings](#)

By default, the EnGenius Cloud Access Point (ECW series) is assigned an IP address dynamically by the DHCP server. If you encounter issues with IP address assignment, please double-check the IP setting, including IP address, subnet mask, gateway, proxy, and management VLAN. If the issue still exists, you may change your IP assignment from "**DHCP mode**" to "**Static IP**" via the following procedure.

1. Go to the **Local Setting** section.
2. Change IPv4 settings to "**Use Static IP**".
3. Configure the **IP address, gateway, subnet mask, and proxy** settings.
4. Reconnect this device to the LAN network and try again.

The screenshot displays the 'Local Status Page' of an EnGenius device. The 'Network Settings' section is active, showing options for IPv4, IPv6, Management VLAN, Web Proxy, and EPC Controller. The IPv4 settings are currently set to 'As DHCP Client: Get IP from LAN DHCP Server (default)'. The Management VLAN is set to 'Untagged' with a VLAN ID of 300. The Web Proxy is set to 'HTTP/HTTPS Proxy' with an address of 192.168.10.25 and a port of 80. The EPC Controller settings are currently empty. The Firmware Upgrade section shows a file upload area with a 'Choose File' button and an 'Upload' button.

EnGenius Local Status Page English

Network Settings Reboot Reset Apply

IPv4 Settings

☒ As DHCP Client: Get IP from LAN DHCP Server (default)
☐ Use Static IP

IPv6 Settings

☒ Link-local Address

Management VLAN Settings

☒ Untagged
☐ Tagged

VLAN ID 300

Web Proxy Settings

☐ HTTP/HTTPS Proxy

Address 192.168.10.25

Port 80

EPC Controller Settings

Specify EPC Controller IP address (if not at the same subnet)

Address [] Test

Firmware Upgrade

Drag & drop firmware file to upgrade here

Choose File No file chosen Upload

For more details, please refer to the "[User Manual-Troubleshooting ECW AP](#)".

Appendix

Technical Support

Country of Purchase	Service Center	Service Information
North America	Los Angeles, USA	cloud.engenius.ai support@engeniustech.com
North America	Canada	cloud.engenius.ai support@engeniustech.com
Europe	Netherlands	support@engeniusnetworks.eu
Africa / CIS / Middle East	Dubai, UAE	support@engenius-me.com Local: (+971) 4 339 1227
Asia / Oceania	Singapore	techsupport@engeniustech.com.sg Local: (+65) 6227 1088
Taiwan	Taiwan, R.O.C	twsupport@engeniusnetworks.com

Compliance

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

(If device is outdoor AP, please delete it. If device is indoor AP, need to add it.)

This device meets all the other requirements specified in Part 15E, Section 15.407 of the FCC Rules.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

CE

The device complies with Directive 2014/53/EU issued by the Commission of the European Community.

Standards:

- ETSI EN 300 328 V2.2.2 (2019-07)
- ETSI EN 301 893 V2.1.1 (2017-05) Final Draft
- ETSI EN 303 687 V0.0.20 (2022-03)
- EN 55032:2015+A1:2020 EN 55035:2017/A11:2020 ETSI
- EN 301489-1 V2.2.3 (2019-11)
- ETSI EN 301 489-17 V3.2.4 (2020-09)
- EN 62368-1:2014+A11: 2017
- EN 62311: 2020

UKCA

The device is in conformity with the relevant legislation of United Kingdom: 2017 (S.I. 2017/1206)/ Regulations 2016 (S.I. 2016/1091)/ Regulations 2016 (S.I. 2016/1101).

Standards:

- EN 300 328 V2.2.2 (2019-07)
- EN 301 893 V2.1.1 (2017-05) Final Draft
- EN 303 687 V0.0.20 (2022-03)
- EN 55032:2015+A1:2020
- EN 55035:2017/A11:2020
- EN 301489-1 V2.2.3 (2019-11)
- EN 301 489-17 V3.2.4 (2020-09)
- EN 62368-1:2014+A11: 2017
- EN 62311: 2020
- IR 2030

Declaration of Conformity

Hereby, EnGenius Networks declare that this product is in compliance with:

- Directive 2014/53/EU
- Regulations 2017 (S.I. 2017/1206)/ Regulations 2016 (S.I. 2016/1091)/ Regulations 2016 (S.I. 2016/1101)
- RoHS 2015/863
- WEEE 2022
- REACH Regulation

Disclaimer/ Note

- Maximum data rates are based on the IEEE standards. Actual throughput and range may vary depending on many factors including environmental conditions, the distance between devices, radio interference in the operating environment, and the mix of devices in the network.
- Features and specifications are subject to change without notice.
- This device complies with Part 15 of the FCC Rules.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Trademarks and registered trademarks are the property of their respective owners.
For the United States of America: Copyright © 2023 EnGenius Technologies, Inc.
All rights reserved.

Compliance

FCC :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC regulations restrict the operation of this device to indoor use only.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance **20cm** between the radiator & your body.

IC :

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

Operation shall be limited to indoor use only.
leur utilisation doit être limitée à l'intérieur seulement.

Operation on oil platforms, automobiles, trains, maritime vessels and aircraft shall be prohibited except for on large aircraft flying above 3,048 m (10,000 ft).

leur utilisation à bord de plateformes de forage pétrolier, d'automobiles, de trains, de navires maritimes et d'aéronefs doit être interdite, sauf à bord d'un gros aéronef volant à plus de 3 048 m (10 000 pi) d'altitude.

Devices shall not be used for control of or communications with unmanned aircraft systems.

Les dispositifs ne doivent pas être utilisés pour commander des systèmes d'aéronef sans pilote ni pour communiquer avec de tels systèmes.

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

The transmitter module may not be co-located with any other transmitter or antenna.

Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

The Country Code Selection feature is disabled for products marketed in the US/Canada.

CAN ICES-003(B) / NMB-003(B)