



Pepwave MAX User Manual

Pepwave Products:

MAX BR2 Pro / BR2 Pro / MAX BR2 Pro LTE / MAX BR2 Pro LTEA / MAX -CX2-Mini / MAX CX2 Mini / CX2 Mini / MAX-BR2-PRO-LTE-E-T / MAX-BR2-PRO-LTE-US-T / MAX-BR2-PRO-LTEA-W-T / UBR LTE / UBR-LTE-US-T-PRM / MAX UBR LTE / MAX UBR / MAX UBR LTEA / UBR / Pismo941 / UBR-LTE / UBR-LTE-US-T / UBR-LTEA-W-T / UBR-LTEA-W-T-PRM / MAX BR1 Pro / MAX BR1 Pro LTE / MAX BR1 Pro LTEA / MAX-BR1-PRO-LTEA-W-T / MAX-BR1-LTE-US-T / UBR-LTE-EJ-T-PRM

Pepwave Firmware 8.0.0
August 2019

Copyright & Trademarks

Specifications are subject to change without notice. Copyright © 2019 Pepwave Ltd. All Rights Reserved. Pepwave and the Pepwave logo are trademarks of Pepwave Ltd. Other brands or products mentioned may be trademarks or registered trademarks of their respective owners.

Table of Contents

Introduction and Scope	7
Glossary	8
Product Features	9
Supported Network Features	9
WAN	9
LAN	10
VPN	10
Firewall	10
Captive Portal	10
Outbound Policy	10
AP Controller	11
QoS	11
Other Supported Features	11
Pepwave MAX Mobile Router Overview	134
MAX BR2 Pro	13
Advanced Feature Summary	16
Drop-in Mode and LAN Bypass: Transparent Deployment	16
QoS: Clearer VoIP	16
Per-User Bandwidth Control	17
High Availability via VRRP	17
USB Modem and Android Tethering	18
Built-In Remote User VPN Support	18
SIM-card USSD support	19
Installation	20
Preparation	20
Constructing the Network	20
Configuring the Network Environment	21
Mounting the Unit	21
Wall Mount	21
Car Mount	22
IP67 Installation Guide	22
Connecting to the Web Admin Interface	22
Configuring the LAN Interface(s)	24

Basic Settings	24
Port Settings	33
Captive Portal	34
Configuring the WAN Interface(s)	36
Ethernet WAN	37
DHCP Connection	40
Static IP Connection	440
PPPoE Connection	41
L2TP Connection	43
Cellular WAN	44
Wi-Fi WAN	549
Creating Wi-Fi Connection Profiles	57
WAN Health Check	58
Dynamic DNS Settings	60
Advanced Wi-Fi Settings	62
ContentHub Configuration	67
ContentHub	67
Configuring the ContentHub	67
Configure a website to be published from the ContentHub	68
Configure an application to be published from the ContentHub	69
MediaFast Configuration	71
Setting Up MediaFast Content Caching	72
Scheduling Content Prefetching	73
Viewing MediaFast Statistics	76
Bandwidth Bonding SpeedFusion™ / PepVPN	77
PepVPN	77
The Pepwave Router Behind a NAT Router	83
SpeedFusion™ Status	84
IPsec VPN	85
IPsec VPN Settings	85
Outbound Policy Management	89
Outbound Policy	89
Custom Rules for Outbound Policy	91
Algorithm: Weighted Balance	91
Algorithm: Persistence	92
Algorithm: Enforced	94

Algorithm: Priority	94
Algorithm: Overflow	94
Algorithm: Least Used	95
Algorithm: Lowest Latency	95
Expert Mode	96
Inbound Access	96
Port Forwarding Service	96
UPnP / NAT-PMP Settings	99
NAT Mappings	99
QoS	101
User Groups	10001
Bandwidth Control	10102
Application	10102
Application Prioritization	10102
Prioritization for Custom Applications	10103
DSL/Cable Optimization	10203
Firewall	10204
Outbound and Inbound Firewall Rules	10305
Access Rules	10305
Apply Firewall Rules to PepVpn Traffic	10608
Intrusion Detection and DoS Prevention	10608
Content Blocking	10709
Application Blocking	10709
Web Blocking	10709
Customized Domains	10810
Exempted User Groups	10810
Exempted Subnets	10810
URL Logging	10810
OSPF & RIPv2	10810
BGP	11214
Remote User Access	11416
L2TP with IPsec	11517
OpenVPN	11517
PPTP	11618
Authentication Methods	11618
Miscellaneous Settings	11820

High Availability	11820
Certificate Manager	12123
Service Forwarding	12224
SMTP Forwarding	125
Web Proxy Forwarding	12326
DNS Forwarding	12426
Custom Service Forwarding	12426
Service Passthrough	12426
UART	12629
GPS Forwarding	12831
Ignition Sensing	12832
Ignition Sensing installation	12932
GPIO Menu	13134
Grouped Networks	13235
SIM Toolkit	13235
AP - access point	13538
AP Controller	13538
Wireless SSID	13538
Settings	13942
AP Controller Status	14447
Info	14447
Access Point (Usage)	146
Wireless SSID	14851
Wireless Client	14952
Nearby Device	15053
Event Log	15154
Toolbox	15255
System Settings	15356
Admin Security	15356
Firmware	15660
Web admin interface : automatically check for updates	15660
Web admin interface : install updates manually	15761
The InControl method	15862
Time	15962
Schedule	15963
Email Notification	16064
Event Log	166

SNMP	166
InControl	168
Configuration	169
Feature Add-ons	170
Reboot	170
Tools	171
Ping	171
Traceroute Test	171
PepVPN Test	172
Wake-on-LAN	172
CLI (Command Line Interface Support)	173
Status	174
Device	174
GPS Data	175
Active Sessions	176
Client List	177
WINS Client	178
UPnP / NAT-PMP	178
OSPF & RIPv2	179
BGP	179
SpeedFusion Status	180
Event Log	182
WAN Quality	184
Usage Reports	184
Real-Time	185
182	186
Daily	187
Monthly	188
Appendix B: Declaration	191

1 Introduction and Scope

Pepwave routers provide link aggregation and load balancing across multiple WAN connections, allowing a combination of technologies like 3G HSDPA, EVDO, 4G LTE, Wi-Fi, external WiMAX dongle, and satellite to be utilized to connect to the Internet.

The MAX wireless SD-WAN router series has a wide range of products suitable for many different deployments and markets. Entry level SD-WAN models such as the MAX BR1 are suitable for SMEs or branch offices. High-capacity SD-WAN routers such as the MAX HD2 are suitable for larger organizations and head offices.

This manual covers setting up Pepwave routers and provides an introduction to their features and usage.

Tips

Want to know more about Pepwave routers? Visit our YouTube Channel for a video introduction!



<https://youtu.be/13M-JHRAICA>

Glossary

The following terms, acronyms, and abbreviations are frequently used in this manual:

Term	Definition
3G	3rd generation standards for wireless communications (e.g., HSDPA)
4G	4th generation standards for wireless communications (e.g., LTE)
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System
EVDO	Evolution-Data Optimized
FQDN	Fully Qualified Domain Name
HSDPA	High-Speed Downlink Packet Access
HTTP	Hyper-Text Transfer Protocol
ICMP	Internet Control Message Protocol
IP	Internet Protocol
LAN	Local Area Network
MAC Address	Media Access Control Address
MTU	Maximum Transmission Unit
MSS	Maximum Segment Size
NAT	Network Address Translation
PPPoE	Point to Point Protocol over Ethernet
QoS	Quality of Service
SNMP	Simple Network Management Protocol
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
VPN	Virtual Private Network
VRRP	Virtual Router Redundancy Protocol

WAN	Wide Area Network
WINS	Windows Internet Name Service
WLAN	Wireless Local Area Network

2 Product Features

Pepwave routers enable all LAN users to share broadband Internet connections, and they provide advanced features to enhance Internet access. Our Max BR wireless routers support multiple SIM cards. They can be configured to switch from using one SIM card to another SIM card according to different criteria, including wireless network reliability and data usage.

Our MAX HD series wireless routers are embedded with multiple 4G LTE modems, and allow simultaneous wireless Internet connections through multiple wireless networks. The wireless Internet connections can be bonded together using our SpeedFusion technology. This allows better reliability, larger bandwidth, and increased wireless coverage are comparing to use only one 4G LTE modem.

Below is a list of supported features on Pepwave routers. Features vary by model. For more information, please see [peplink.com/products](https://www.peplink.com/products).

2.1 Supported Network Features

2.1.1 WAN

- Ethernet WAN connection in full/half duplex
- Static IP support for PPPoE
- Built-in cellular modems
- USB mobile connection(s)
- Wi-Fi WAN connection
- Network address translation (NAT)/port address translation (PAT)
- Inbound and outbound NAT mapping
- IPsec NAT-T and PPTP packet passthrough
- MAC address clone and passthrough
- Customizable MTU and MSS values
- WAN connection health check
- Dynamic DNS (supported service providers: changeip.com, dyndns.org, no-ip.org, tzo.com and [DNS-O-Matic](https://DNS-O-Matic.com))
- Ping, DNS lookup, and HTTP-based health check

2.1.2 LAN

- Wi-Fi AP
- Ethernet LAN ports
- DHCP server on LAN
- Extended DHCP option support
- Static routing rules
- VLAN on LAN support

2.1.3 VPN

- PepVPN with SpeedFusion™
- PepVPN performance analyzer
- X.509 certificate support
- VPN load balancing and failover among selected WAN connections
- Bandwidth bonding and failover among selected WAN connections
- IPsec VPN for network-to-network connections (works with Cisco and Juniper only)
- Ability to route Internet traffic to a remote VPN peer
- Optional pre-shared key setting
- SpeedFusion™ throughput, ping, and traceroute tests
- PPTP server
- PPTP and IPsec passthrough

2.1.4 Firewall

- Outbound (LAN to WAN) firewall rules
- Inbound (WAN to LAN) firewall rules per WAN connection
- Intrusion detection and prevention
- Specification of NAT mappings
- Outbound firewall rules can be defined by destination domain name

2.1.5 Captive Portal

- Splash screen of open networks, login page for secure networks
- Customizable built-in captive portal
- Supports linking to outside page for captive portal

2.1.6 Outbound Policy

- Link load distribution per TCP/UDP service
- Persistent routing for specified source and/or destination IP addresses per TCP/UDP

service

- Traffic prioritization and DSL optimization
- Prioritize and route traffic to VPN tunnels with Priority and Enforced algorithms

2.1.7 AP Controller

- Configure and manage Pepwave AP devices
- Review the status of connected APs

2.1.8 QoS

- Quality of service for different applications and custom protocols
- User group classification for different service levels
- Bandwidth usage control and monitoring on group- and user-level
- Application prioritization for custom protocols and DSL/cable optimization

2.2 Other Supported Features

- User-friendly web-based administration interface
- HTTP and HTTPS support for web admin interface
- Configurable web administration port and administrator password
- Firmware upgrades, configuration backups, ping, and traceroute via web admin interface
- Remote web-based configuration (via WAN and LAN interfaces)
- Time server synchronization
- SNMP
- Email notification
- Read-only user for web admin
- Shared IP drop-in mode
- Authentication and accounting by RADIUS server for web admin
- Built-in WINS servers*
- Syslog
- SIP passthrough
- PPTP packet passthrough
- Event log
- Active sessions
- Client list
- WINS client list *
- UPnP / NAT-PMP
- Real-time, hourly, daily, and monthly bandwidth usage reports and charts

- IPv6 support
- Support USB tethering on Android 2.2+ phones

* Not supported on MAX Surf-On-The-Go, and BR1 variants

3 Pepwave MAX Mobile Router Overview

3.1 BR2 Pro

3.1.1 Panel Appearance



3.1.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:

Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

Wi-Fi AP and Wi-Fi WAN Indicators		
Wi-Fi WAN	OFF	Disconnected
	Blinking slowly	Connecting to network
	Blinking	Connected to network with traffic
	ON	Connected to network without traffic
Wi-Fi AP	OFF	Disabled
	Blinking slowly	Enabled but no client connected
	Blinking	Connected to network with traffic
	ON	Client(s) connected to wireless network

LAN and Ethernet WAN Ports		
Green LED	ON	10 / 100/ 1000 Mbps
Orange LED	Blinking	Data is transferring
	OFF	No data is being transferred or port is not connected
Port Type	Auto MDI/MDI-X ports	

4 Advanced Feature Summary

4.1 Drop-in Mode and LAN Bypass: Transparent Deployment



As your organization grows, it needs more bandwidth. But modifying your network would require effort better spent elsewhere. In **Drop-in Mode**, you can conveniently install your Peplink router without making any changes to your network. And if the Peplink router loses power for any reason, **LAN Bypass** will safely and automatically bypass the Peplink router to resume your original network connection.


Compatible with: MAX 700, MAX HD2 (All variants), HD4 (All Variants)

4.2 QoS: Clearer VoIP



VoIP and videoconferencing are highly sensitive to latency. With QoS, Peplink routers can detect VoIP traffic and assign it the highest priority, giving you crystal-clear calls.

4.3 Per-User Bandwidth Control

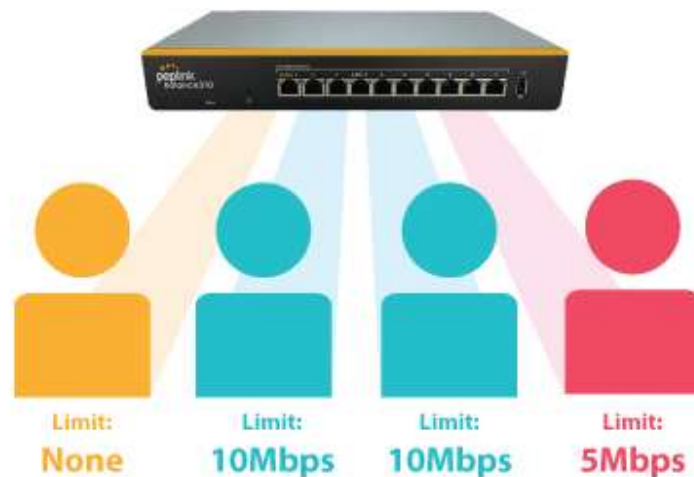

With per-user bandwidth control, you can define bandwidth control policies for up to 3 groups of users to prevent network congestion. Define groups by IP address and subnet, and set bandwidth limits for every user in the group.

4.4 High Availability via VRRP



When your organization has a corporate requirement demanding the highest availability with no single point of failure, you can deploy two Peplink routers in **High Availability mode**. With High Availability mode, the second device will take over when needed.

Compatible with: MAX 700, MAX HD2 (All variants), HD4 (All Variants)

4.5 USB Modem and Android Tethering



For increased WAN diversity, plug in a USB LTE modem as backup. Peplink routers are compatible with over [200 modem types](#). You can also tether to smartphones running Android 4.1.X and above.

Compatible with: MAX 700, HD2 (all variants except IP67), HD4 (All variants)

4.6 Built-In Remote User VPN Support



Use OpenVPN or L2TP with IPsec to safely and conveniently connect remote clients to your private network. L2TP with IPsec is supported by most devices, but legacy devices can also connect using PPTP.

[Click here for the full instructions on setting up L2TP with IPsec.](#)

[Click here for the full instructions on setting up OpenVPN connections](#)

4.7 SIM-card USSD support



Cellular-enabled routers can now use USSD to check their SIM card's balance, process pre-paid cards, and configure carrier-specific services. [Click here for full instructions on using USSD.](#)

5 Installation

The following section details connecting Pepwave routers to your network.

5.1 Preparation

Before installing your Pepwave router, please prepare the following as appropriate for your installation:


- At least one Internet/WAN access account and/or Wi-Fi access information
- Depending on network connection type(s), one or more of the following:
 - **Ethernet WAN:** A 10/100/1000BaseT UTP cable with RJ45 connector
 - **USB:** A USB modem
 - **Embedded modem:** A SIM card for GSM/HSPA service
 - **Wi-Fi WAN:** Wi-Fi antennas
 - **PC Card/Express Card WAN:** A PC Card/ExpressCard for the corresponding card slot
- A computer installed with the TCP/IP network protocol and a supported web browser. Supported browsers include Microsoft Internet Explorer 11 or above, Mozilla Firefox 24 or above, Apple Safari 7 or above, and Google Chrome 18 or above.

5.2 Constructing the Network

At a high level, construct the network according to the following steps:

1. With an Ethernet cable, connect a computer to one of the LAN ports on the Pepwave router. Repeat with different cables for up to 4 computers to be connected.
2. With another Ethernet cable or a USB modem/Wi-Fi antenna/PC Card/Express Card, connect to one of the WAN ports on the Pepwave router. Repeat the same procedure for other WAN ports.
3. Connect the power adapter to the power connector on the rear panel of the Pepwave router, and then plug it into a power outlet.

The following figure schematically illustrates the resulting configuration:

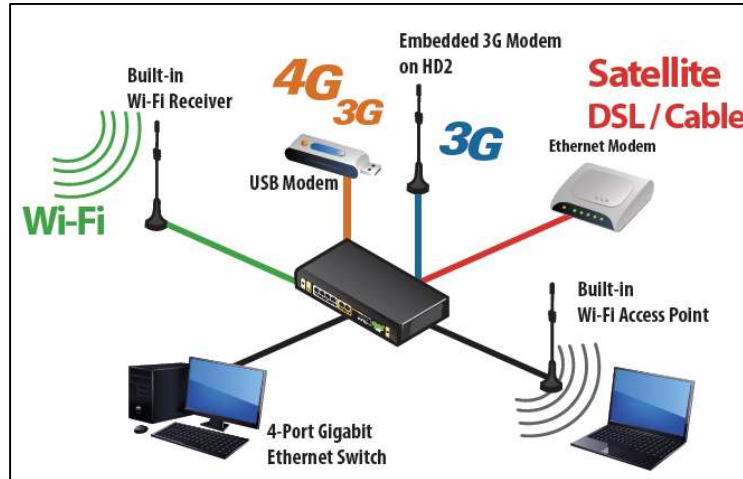

5.3 Configuring the Network Environment

To ensure that the Pepwave router works properly in the LAN environment and can access the Internet via WAN connections, please refer to the following setup procedures:

- LAN configuration
For basic configuration, refer to **Section 8, Connecting to the Web Admin Interface**.
For advanced configuration, go to **Section 9, Configuring the LAN Interface(s)**.
- WAN configuration
For basic configuration, refer to **Section 8, Connecting to the Web Admin Interface**.
For advanced configuration, go to **Section 9.2, Captive Portal**.

6 Mounting the Unit

6.1 Wall Mount

The Pepwave MAX 700/HD2/On-The-Go can be wall mounted using screws. After adding the screw on the wall, slide the MAX in the screw hole socket as indicated below. Recommended screw specification: M3.5 x 20mm, head diameter 6mm, head thickness 2.4mm.

The Pepwave MAX BR1 requires four screws for wall mounting.

6.2 Car Mount

The Pepwave MAX700/HD2 can be mounted in a vehicle using the included mounting brackets. Place the mounting brackets by the two sides and screw them onto the device.



6.3 IP67 Installation Guide

Installation instructions for IP67 devices can be found here:

http://download.peplink.com/manual/IP67_Installation_Guide.pdf

7 Connecting to the Web Admin Interface

1. Start a web browser on a computer that is connected with the Pepwave router through the LAN.
2. To connect to the router's web admin interface, enter the following LAN IP address in the address field of the web browser:

`http://192.168.50.1`


(This is the default LAN IP address for Pepwave routers.)

3. Enter the following to access the web admin interface.


Username: admin

Password: admin

(This is the default username and password for Pepwave routers. The admin and read-only user passwords can be changed at **System>Admin Security**.)

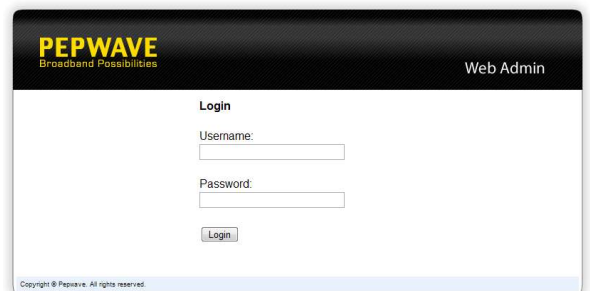

4. After successful login, the **Dashboard** will be displayed

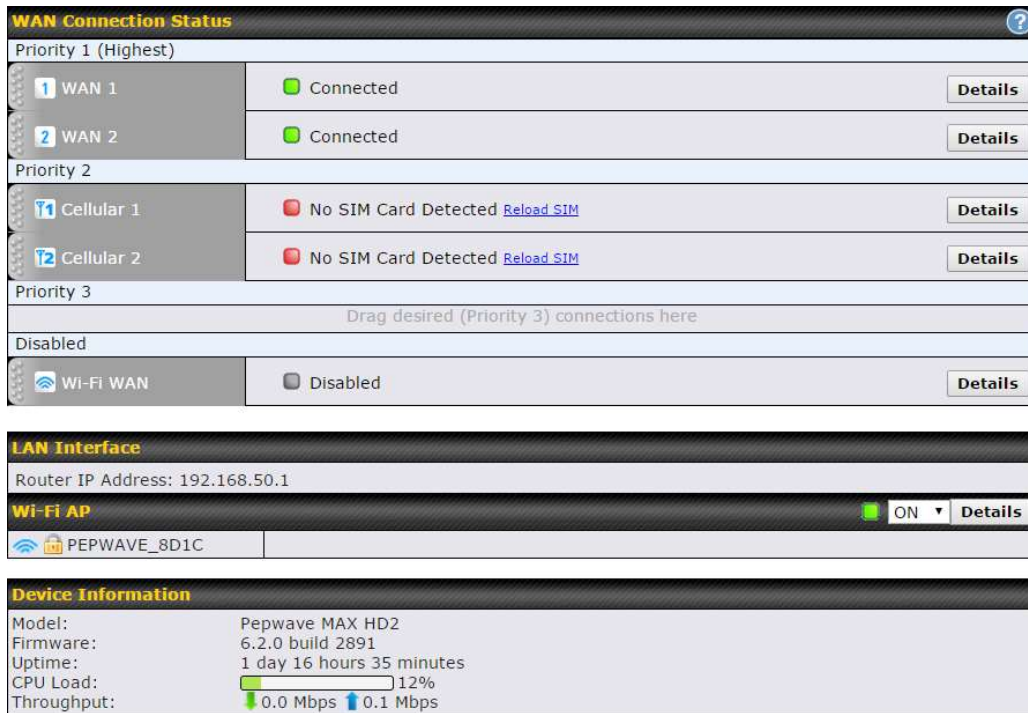

WAN Connection Status

Priority 1 (Highest)

1 WAN 1	Connected	Details
2 WAN 2	Connected	Details

Priority 2

1 Cellular 1	No SIM Card Detected Reload SIM	Details
2 Cellular 2	No SIM Card Detected Reload SIM	Details

Priority 3

Drag desired (Priority 3) connections here

Disabled

Wi-Fi WAN	Disabled	Details
-----------	----------	---------

LAN Interface

Router IP Address: 192.168.50.1

Wi-Fi AP ON Details

PEPWAVE_8D1C

Device Information

Model:	Pepwave MAX HD2
Firmware:	6.2.0 build 2891
Uptime:	1 day 16 hours 35 minutes
CPU Load:	12%
Throughput:	0.0 Mbps ↓ 0.1 Mbps ↑

The **Dashboard** shows current WAN, LAN, and Wi-Fi AP statuses. Here, you can change WAN connection priority and switch on/off the Wi-Fi AP. For further information on setting up these connections, please refer to **Sections 8** and **9**.

Device Information displays details about the device, including model name, firmware version, and uptime. For further information, please refer to **Section 22**.

Important Note

Configuration changes (e.g. WAN, LAN, admin settings, etc.) will take effect only after clicking the **Save** button at the bottom of each page. The **Apply Changes** button causes the changes to be saved and applied.

8 Configuring the LAN Interface(s)

8.1 Basic Settings

LAN interface settings are located at **Network>LAN>Network Settings**. Navigating to that page will show the following dashboard:

LAN	VLAN	Network	
LAN	None	172.16.251.1/24	
VLAN1	1	2.2.2.2/24	
VLAN2	2	3.3.3.3/24	
New LAN			

This represents the LAN interfaces that are active on your router (including VLAN). A grey “X” means that the VLAN is used in other settings and cannot be deleted. You can find which settings are using the VLAN by hovering over the grey “X”.

Alternatively, a red “X” means that there are no settings using the VLAN. You can delete that VLAN by clicking the red “X”

Clicking on any of the existing LAN interfaces (or creating a new one) will show the following :

IP Settings	
IP Address	255.255.255.0 (/24) ▼

IP Settings	
IP Address	The IP address and subnet mask of the Pepwave router on the LAN.

Network Settings 	
Name	
VLAN ID	
Inter-VLAN routing	☒

Network Settings	
Name	Enter a name for the LAN.
VLAN ID	Enter a number for your VLAN.
Inter-VLAN routing	Check this box to enable routing between virtual LANs.

Layer 2 PepVPN Bridging 	
PepVPN Profiles to Bridge 	No profile is available
Remote Network Isolation 	☐
Spanning Tree Protocol	☐
DHCP Option 82 Injection	☒
Override IP Address when bridge connected 	☒ Do not override ☐ Static ☐ By DHCP ☐ As None

Layer 2 PepVPN Bridging	
PepVPN Profiles to Bridge	The remote network of the selected PepVPN profiles will be bridged with this local LAN, creating a Layer 2 PepVPN, they will be connected and operate like a single LAN, and any broadcast or multicast packets will be sent over the VPN.
Remote Network Isolation	Enable this option if you want to block network traffic between the remote networks, this will not affect the connectivity between them and this local LAN.
Spanning Tree Protocol	Click the box will enable STP for this layer 2 profile bridge.
Override IP Address when bridge	Select "Do not override" if the LAN IP address and local DHCP server should remain unchanged after the Layer 2 PepVPN is up. If you choose to override IP address when the VPN is connected, the device will

connected	not act as a router, and most Layer 3 routing functions will cease to work.
DHCP Option 82	Click on the question Mark if you want to enable DHCP Option 82. This allows the device to inject Option 82 with Router Name information before forwarding the DHCP Request packet to a PepVPN peer, such that the DHCP Server can identify where the request originates from.

DHCP Server											
DHCP Server		☒ Enable									
DHCP Server Logging		☐									
IP Range		- 255.255.255.0 (/24) ▼									
Lease Time		1 Days 0 Hours 0 Mins									
DNS Servers		☒ Assign DNS server automatically									
WINS Servers		☐ Assign WINS server									
BOOTP		☐									
Extended DHCP Option		<table border="1"> <thead> <tr> <th>Option</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td colspan="2">No Extended DHCP Option</td> </tr> <tr> <td colspan="2">Add</td> </tr> </tbody> </table>		Option	Value	No Extended DHCP Option		Add			
Option	Value										
No Extended DHCP Option											
Add											
DHCP Reservation		<table border="1"> <thead> <tr> <th>Name</th> <th>MAC Address</th> <th>Static IP</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td>00:00:00:00:00:00</td> <td></td> <td></td> </tr> </tbody> </table>		Name	MAC Address	Static IP			00:00:00:00:00:00		
Name	MAC Address	Static IP									
	00:00:00:00:00:00										

DHCP Server Settings	
DHCP Server	When this setting is enabled, the DHCP server automatically assigns an IP address to each computer that is connected via LAN and configured to obtain an IP address via DHCP. The Pepwave router's DHCP server can prevent IP address collision on the LAN.
DHCP Server Logging	Enable logging of DHCP events in the eventlog by selecting the checkbox.
IP Range & Subnet Mask	These settings allocate a range of IP addresses that will be assigned to LAN computers by the Pepwave router's DHCP server.
Lease Time	This setting specifies the length of time throughout which an IP address of a DHCP client remains valid. Upon expiration of the lease time, the assigned IP address will no longer be valid and renewal of the IP address assignment will be required.
DNS Servers	This option allows you to input the DNS server addresses to be offered to DHCP clients. If Assign DNS server automatically is selected, the Pepwave router's built-in DNS server address (i.e., LAN IP address) will be offered.
WINS Servers	This option allows you to optionally specify a Windows Internet Name Service (WINS) server. You may choose to use the built-in WINS server or external WINS servers. When this unit is connected using SpeedFusion™, other VPN peers can share

	this unit's built-in WINS server by entering this unit's LAN IP address in their DHCP WINS Server setting. Afterward, all PC clients in the VPN can resolve the NetBIOS names of other clients in remote peers. If you have enabled this option, a list of WINS clients will be displayed at Status>WINS Clients .
BOOTP	Check this box to enable BOOTP on older networks that still require it.
Extended DHCP Option	In addition to standard DHCP options (e.g., DNS server address, gateway address, subnet mask), you can specify the value of additional extended DHCP options, as defined in RFC 2132. With these extended options enabled, you can pass additional configuration information to LAN hosts. To define an extended DHCP option, click the Add button, choose the option to define and enter its value. For values that are in IP address list format, you can enter one IP address per line in the provided text area input control. Each option can be defined once only.
DHCP Reservation	This setting reserves the assignment of fixed IP addresses for a list of computers on the LAN. The computers to be assigned fixed IP addresses on the LAN are identified by their MAC addresses. The fixed IP address assignment is displayed as a cross-reference list between the computers' names, MAC addresses, and fixed IP addresses. Name (an optional field) allows you to specify a name to represent the device. MAC addresses should be in the format of 00:AA:BB:CC:DD:EE. Press  to create a new record. Press  to remove a record. Reserved client information can be imported from the Client List, located at Status>Client List. For more details, please refer to Section 22.3.

LAN Physical Settings	
Speed	Auto

LAN Physical Settings	
Speed	This is the port speed of the LAN interface. It should be set to the same speed as the connected device to avoid port negotiation problems. When a static speed is set, you may choose whether to advertise its speed to the peer device. Auto is selected by default. You can choose not to advertise the port speed if the port has difficulty negotiating with the peer device.

Static Route Settings			
Static Route		Destination Network	Subnet Mask
			255.255.255.0 (/24)
		Gateway	

Static Route Settings

Static Route

This table is for defining static routing rules for the LAN segment. A static route consists of the network address, subnet mask, and gateway address. The address and subnet mask values are in w.x.y.z format.

The local LAN subnet and subnets behind the LAN will be advertised to the VPN. Remote routes sent over the VPN will also be accepted. Any VPN member will be able to route to the local subnets. Press  to create a new route. Press  to remove a route.

WINS Server Settings

Enable



WINS Server Settings

Enable

Check the box to enable the WINS server. A list of WINS clients will be displayed at **Status>WINS Clients**.


DNS Proxy Settings																						
Enable	☒																					
DNS Caching	☐																					
Include Google Public DNS Servers	☐																					
Local DNS Records	<table border="1"> <thead> <tr> <th>Host Name</th> <th>IP Address</th> <th></th> </tr> </thead> <tbody> <tr> <td></td> <td></td> <td>+</td> </tr> </tbody> </table>		Host Name	IP Address				+														
Host Name	IP Address																					
		+																				
DNS Resolvers	<table border="1"> <thead> <tr> <th>Connection</th> <th>Current Status</th> </tr> </thead> <tbody> <tr> <td>☐ WAN 1</td> <td>10.88.3.1</td> </tr> <tr> <td>☐ WAN 2</td> <td></td> </tr> <tr> <td>☐ Wi-Fi WAN</td> <td></td> </tr> <tr> <td>☐ Cellular 1</td> <td></td> </tr> <tr> <td>☐ Cellular 2</td> <td></td> </tr> <tr> <td>☐ USB</td> <td></td> </tr> <tr> <td colspan="2">Connection</td> </tr> <tr> <td>☐ LAN</td> <td>DNS Servers</td> </tr> <tr> <td></td> <td></td> </tr> </tbody> </table>		Connection	Current Status	☐ WAN 1	10.88.3.1	☐ WAN 2		☐ Wi-Fi WAN		☐ Cellular 1		☐ Cellular 2		☐ USB		Connection		☐ LAN	DNS Servers		
Connection	Current Status																					
☐ WAN 1	10.88.3.1																					
☐ WAN 2																						
☐ Wi-Fi WAN																						
☐ Cellular 1																						
☐ Cellular 2																						
☐ USB																						
Connection																						
☐ LAN	DNS Servers																					
Preferred connections are shown with ☒																						

DNS Proxy Settings	
Enable	To enable the DNS proxy feature, check this box, and then set up the feature at Network>LAN>DNS Proxy Settings . A DNS proxy server can be enabled to serve DNS requests originating from LAN/PPTP/SpeedFusion™ peers. Requests are forwarded to the DNS servers/resolvers defined for each WAN connection.
DNS Caching	This field is to enable DNS caching on the built-in DNS proxy server. When the option is enabled, queried DNS replies will be cached until the records' TTL has been reached. This feature can help improve DNS lookup time. However, it cannot return the most up-to-date result for those frequently updated DNS records. By default, DNS Caching is disabled.
Include Google Public DNS Servers	When this option is enabled , the DNS proxy server will also forward DNS requests to Google's Public DNS Servers, in addition to the DNS servers defined in each WAN. This could increase the DNS service's availability. This setting is disabled by default.
Local DNS Records	This table is for defining custom local DNS records. A static local DNS record consists of a host name and IP address. When looking up the host name from the LAN to LAN IP of the Pepwave router, the corresponding IP address will be returned. Press  to create a new record. Press  to remove a record.
DNS Resolvers ^A	Check the box to enable the WINS server. A list of WINS clients will be displayed at Network>LAN>DNS Proxy Settings>DNS Resolvers . This field specifies which DNS resolvers will receive forwarded DNS requests. If no WAN/VPN/LAN DNS resolver is selected, all of the WAN's DNS resolvers will be selected.

If a SpeedFusion™ peer is selected, you may enter the VPN peer's DNS resolver IP address(es). Queries will be forwarded to the selected connections' resolvers. If all of the selected connections are down, queries will be forwarded to all resolvers on healthy WAN connections.

^A - Advanced feature, please click the  button on the top right hand corner to activate.

Finally, if needed, configure Bonjour forwarding, Apple's zero configuration networking protocol. Once VLAN configuration is complete, click **Save** to store your changes.

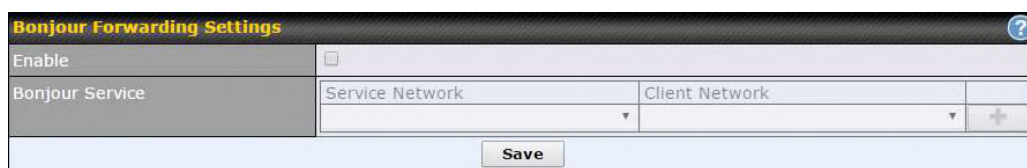

Bonjour Forwarding Settings	
Enable	Check this box to turn on Bonjour forwarding.
Bonjour Service	Choose Service and Client networks from the drop-down menus, and then click  to add the networks. To delete an existing Bonjour listing, click  .


To enable VLAN configuration, click the  button in the **IP Settings** section.



To add a new LAN, click the **New LAN** button. To change LAN settings, click the name of the LAN to change under the **LAN** heading.



The following settings are displayed when creating a new LAN or editing an existing LAN.

IP Settings

IP Address & Subnet Mask

Enter the Pepwave router's IP address and subnet mask values to be used on the LAN.

Network Settings	
Name	
VLAN ID	
Inter-VLAN routing	☒
Captive Portal	☐

Network Settings

Name

Enter a name for the LAN.

VLAN ID

Enter a number for your VLAN.

Inter-VLAN routing

Check this box to enable routing between virtual LANs.

Captive Portal

Check this box to turn on captive portals.

DHCP Server Settings									
DHCP Server	☒ Enable								
IP Range	- 255.255.255.0 (/24)								
Lease Time	1 Days 0 Hours 0 Mins								
DNS Servers	☒ Assign DNS server automatically								
WINS Servers	☐ Assign WINS server								
BOOTP	☐								
Extended DHCP Option	<table border="1"> <thead> <tr> <th>Option</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td colspan="2">No Extended DHCP Option</td> </tr> <tr> <td colspan="2"> </td> </tr> <tr> <td colspan="2"> Add </td> </tr> </tbody> </table>	Option	Value	No Extended DHCP Option				Add	
Option	Value								
No Extended DHCP Option									
Add									
DHCP Reservation	<table border="1"> <thead> <tr> <th>Name</th> <th>MAC Address</th> <th>Static IP</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table> +	Name	MAC Address	Static IP					
Name	MAC Address	Static IP							

DHCP Server Settings

DHCP Server

When this setting is enabled, the Pepwave router's DHCP server automatically assigns an IP address to each computer that is connected via LAN and configured to obtain an IP address via DHCP. The Pepwave router's DHCP server can

	prevent IP address collisions on the LAN. To enable DHCP bridge relay, please click the  icon on this menu item.
IP Range & Subnet Mask	These settings allocate a range of IP addresses that will be assigned to LAN computers by the Pepwave router's DHCP server.
Lease Time	This setting specifies the length of time throughout which an IP address of a DHCP client remains valid. Upon expiration of Lease Time , the assigned IP address will no longer be valid and the IP address assignment must be renewed.
DNS Servers	This option allows you to input the DNS server addresses to be offered to DHCP clients. If Assign DNS server automatically is selected, the Pepwave router's built-in DNS server address (i.e., LAN IP address) will be offered.
WINS Servers	This option allows you to specify the Windows Internet Name Service (WINS) server. You may choose to use the built-in WINS server or external WINS servers. When this unit is connected using SpeedFusion™, other VPN peers can share this unit's built-in WINS server by entering this unit's LAN IP address in their DHCP WINS Servers setting. Therefore, all PC clients in the VPN can resolve the NetBIOS names of other clients in remote peers. If you have enabled this option, a list of WINS clients will be displayed at Status>WINS Clients .
BOOTP	Check this box to enable BOOTP on older networks that still require it.
Extended DHCP Option	In addition to standard DHCP options (e.g. DNS server address, gateway address, subnet mask), you can specify the value of additional extended DHCP options, as defined in RFC 2132. With these extended options enabled, you can pass additional configuration information to LAN hosts. To define an extended DHCP option, click the Add button, choose the option to define, and then enter its value. For values that are in IP address list format, you can enter one IP address per line in the provided text area input control. Each option can be defined once only.
DHCP Reservation	This setting reserves the assignment of fixed IP addresses for a list of computers on the LAN. The computers to be assigned fixed IP addresses on the LAN are identified by their MAC addresses. The fixed IP address assignment is displayed as a cross-reference list between the computers' names, MAC addresses, and fixed IP addresses. Name (an optional field) allows you to specify a name to represent the device. MAC addresses should be in the format of 00:AA:BB:CC:DD:EE. Press  to create a new record. Press  to remove a record. Reserved clients information can be imported from the Client List, located at Status>Client List. For more details, please refer to Section 22.3.

To configure DHCP relay, first click the  button found next to the **DHCP Server** option to display the settings.

DHCP Relay Settings	
DHCP Relay	 ☒ Enable
DHCP Server IP Address	DHCP Server 1: DHCP Server 2:
DHCP Option 82	☐

DHCP Relay Settings	
Enable	Check this box to turn on DHCP relay. Click the  icon to disable DHCP relay.
DHCP Server IP Address	Enter the IP addresses of one or two DHCP servers in the provided fields. The DHCP servers entered here will receive relayed DHCP requests from the LAN. For active-passive DHCP server configurations, enter active and passive DHCP server relay IP addresses in DHCP Server 1 and DHCP Server 2 .
DHCP Option 82	DHCP Option 82 includes device information as relay agent for the attached client when forwarding DHCP requests from client to server. This option also embeds the device's MAC address and network name in circuit and remote IDs. Check this box to enable DHCP Option 82.

Once DHCP is set up, configure **LAN Physical Settings**, **Static Route Settings**, **WINS Server Settings**, and **DNS Proxy Settings** as noted above.

8.2 Port Settings

To configure port settings, navigate to **Network > Port Settings**

Port Settings					
Port Name	Enable	Speed	Advertise Speed	Port Type	VLAN
LAN Port 1	☒	Auto	☒	Trunk	Any
LAN Port 2	☒			Trunk	Any
LAN Port 3	☒			Trunk	Any
LAN Port 4	☒			Trunk	Any

On this screen, you can enable specific ports, as well as determine the speed of the LAN ports, whether each port is a trunk or access port, can well as which VLAN each link belongs to, if any.

8.3 Captive Portal

The captive portal serves as a gateway that clients have to pass if they wish to access the internet using your router. To configure, navigate to **Network>LAN>Captive Portal**.

Captive Portal Settings	
Enable	☒ Untagged LAN
Hostname	captive-portal.peplink.com Default
Access Mode	☒ Open Access ☐ User Authentication
Access Quota	30 mins (0: Unlimited) 0 MB (0: Unlimited)
Quota Reset Time	☒ Daily at 00 :00 ☐ 1440 minutes after quota reached
Allowed Networks	Domain Name / IP Address +
Allowed Clients	MAC / IP Address +
Splash Page	☒ Built-in ☐ External, URL: http://

Captive Portal Settings															
Enable	Check Enable and then, optionally, select the LANs/VLANs that will use the captive portal.														
Hostname	To customize the portal's form submission and redirection URL, enter a new URL in this field. To reset the URL to factory settings, click Default .														
Access Mode	Click Open Access to allow clients to freely access your router. Click User Authentication to force your clients to authenticate before accessing your router.														
RADIUS Server	This authenticates your clients through a RADIUS server. After selecting this option, you will see the following fields: <table border="1"> <tbody> <tr> <td>Authentication</td><td>RADIUS Server</td></tr> <tr> <td>Auth Server</td><td> Port 1812 Default</td></tr> <tr> <td>Auth Server Secret</td><td> ☒ Hide Characters</td></tr> <tr> <td>CoA-DM</td><td>☐</td></tr> <tr> <td>Accounting Server</td><td> Port 1813 Default</td></tr> <tr> <td>Accounting Server Secret</td><td> ☒ Hide Characters</td></tr> <tr> <td>Accounting Interim Interval</td><td> seconds</td></tr> </tbody> </table> Fill in the necessary information to complete your connection to the server and enable authentication.	Authentication	RADIUS Server	Auth Server	Port 1812 Default	Auth Server Secret	☒ Hide Characters	CoA-DM	☐	Accounting Server	Port 1813 Default	Accounting Server Secret	☒ Hide Characters	Accounting Interim Interval	seconds
Authentication	RADIUS Server														
Auth Server	Port 1812 Default														
Auth Server Secret	☒ Hide Characters														
CoA-DM	☐														
Accounting Server	Port 1813 Default														
Accounting Server Secret	☒ Hide Characters														
Accounting Interim Interval	seconds														
LDAP Server	This authenticates your clients through a LDAP server. Upon selecting this option, you will see the following fields: <table border="1"> <tbody> <tr> <td>Authentication</td><td>LDAP Server</td></tr> <tr> <td>LDAP Server</td><td> Port 389 Default</td></tr> <tr> <td></td><td>☐ Use DN/Password to bind to LDAP Server</td></tr> <tr> <td>Base DN</td><td> </td></tr> <tr> <td>Base Filter</td><td> </td></tr> </tbody> </table>	Authentication	LDAP Server	LDAP Server	Port 389 Default		☐ Use DN/Password to bind to LDAP Server	Base DN		Base Filter					
Authentication	LDAP Server														
LDAP Server	Port 389 Default														
	☐ Use DN/Password to bind to LDAP Server														
Base DN															
Base Filter															

	Fill in the necessary information to complete your connection to the server and enable authentication.
Access Quota	Set a time and data cap to each user's Internet usage.
Quota Reset Time	This menu determines how your usage quota resets. Setting it to Daily will reset it at a specified time every day. Setting a number of minutes after quota reached establish a timer for each user that begins after the quota has been reached.
Allowed Networks	Add networks that can bypass the captive Portal in this field. To whitelist a network, enter the domain name / IP address here and click  . To delete an existing network from the list of allowed networks, click the  button next to the listing.
Allowed Clients	Add MAC address and /or IP addresses for client devices that are allowed to bypass the Captive Portal. Clients accessing these domains and IP addresses will not be redirected to the splash page.
Splash Page	Here, you can choose between using the Pepwave router's built-in captive portal and redirecting clients to a URL you define.


The **Portal Customization** menu has two options:  and . Clicking  displays a pop-up previewing the captive portal that your clients will see. Clicking  displays the following menu:

Portal Customization	
Logo Image	☒ No image [Use default Logo Image] ☐ Choose File No file chosen NOTE: Size max 512KB. Supported images types: JPEG, PNG and GIF.
Message	
Terms & Conditions	[Use default Terms & Conditions]
Custom Landing Page	☒ http://

Portal Customization	
Logo Image	Click the Choose File button to select a logo to use for the built-in portal.
Message	If you have any additional messages for your users, enter them in this field.
Terms & Conditions	If you would like to use your own set of terms and conditions, please enter them here. If left empty, the built-in portal will display the default terms and conditions.
Custom Landing Page	Fill in this field to redirect clients to an external URL.

9 Configuring the WAN Interface(s)

WAN Interface settings are located at **Network>WAN**. To reorder WAN priority, drag on the appropriate WAN by holding the left mouse button, move it to the desired priority (the first one would be the highest priority, the second one would be lower priority, and so on), and drop it by releasing the mouse button.

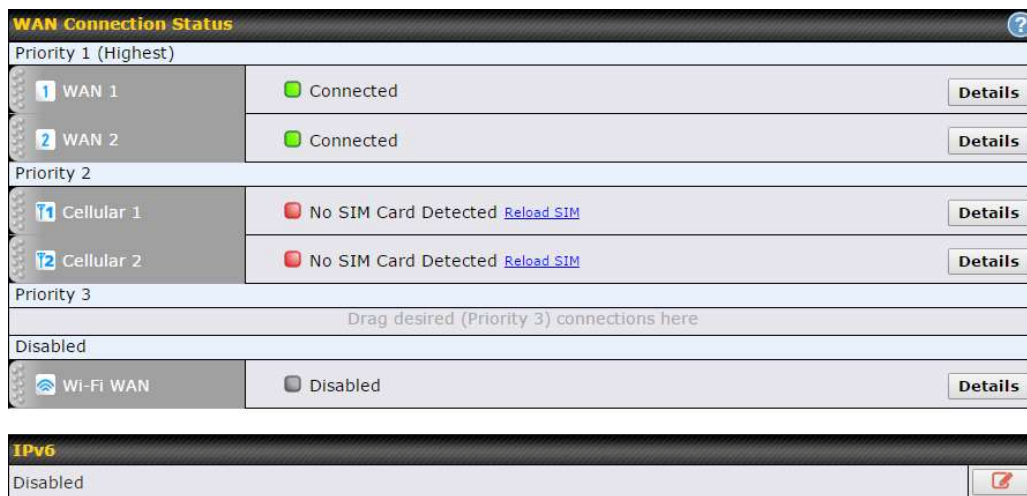

WAN Connection Status

Priority 1 (Highest)

1 WAN 1	■ Connected	Details
2 WAN 2	■ Connected	Details

Priority 2

1 Cellular 1	■ No SIM Card Detected Reload SIM	Details
2 Cellular 2	■ No SIM Card Detected Reload SIM	Details

Priority 3

Drag desired (Priority 3) connections here

Disabled

Wi-Fi WAN	☐ Disabled	Details
-----------	-----------------------------------	-------------------------

IPv6

Disabled [Edit](#)


To disable a particular WAN connection, drag on the appropriate WAN by holding the left mouse button, move it the **Disabled** row, and drop it by releasing the mouse button.

You can also set priorities on the **Dashboard**. Click the **Details** button in the corresponding row to modify the connection setting.

Important Note

Connection details will be changed and become effective immediately after clicking the **Save and Apply** button.

9.1 Ethernet WAN

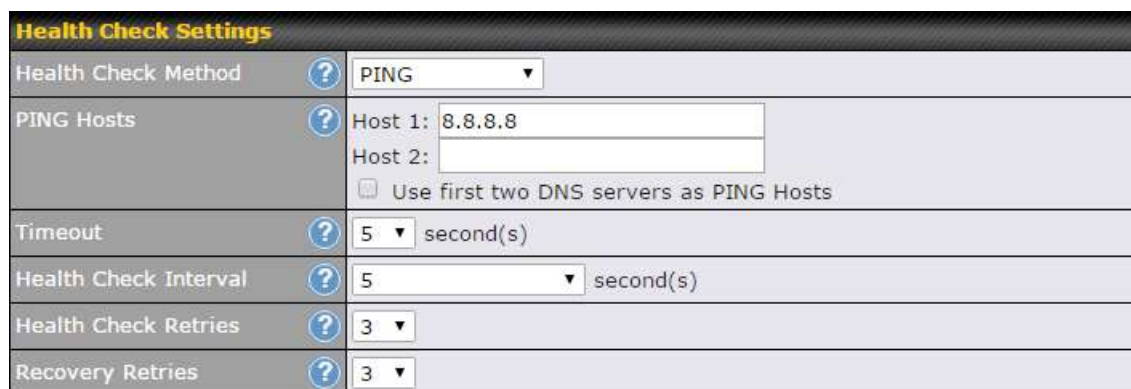

Health Check Settings

Health Check Method	? PING ▼
PING Hosts	? Host 1: 8.8.8.8 Host 2: ☐ Use first two DNS servers as PING Hosts
Timeout	? 5 ▼ second(s)
Health Check Interval	? 5 ▼ second(s)
Health Check Retries	? 3 ▼
Recovery Retries	? 3 ▼

Health Check Settings

Health Check Method

This field specifies the Health Check method to be used for this WAN connection.


- Disabled - The WAN connection is always considered to be up and will not be treated as down for any IP routing errors.

	• PING - ICMP PING packets will be issued to test connectivity with configurable target IP addresses or host names. • DNS Lookup - DNS lookups will be issued to test the connectivity with configurable target DNS server IP addresses. • HTTP - HTTP connections will be issued to test the connectivity with configurable URLs and strings to match. Default: DNS Lookup
PING Hosts	These fields are for specifying the target IP addresses or host names where ICMP Ping packets will be sent to for health check. If the box Use first two DNS servers as PING Hosts is checked, the first two DNS servers will be the ping targets for checking the connection healthiness. If the box is not checked, the field Host 1 must be filled and the field Host 2 is optional. The connection is considered to be up if ping responses are received from any one of the ping hosts.
Timeout	If a health check test cannot be completed within the specified amount of time, the test will be treated as failed.
Health Check Interval	This is the time interval between each health check test.
Health Check Retries	This is the number of consecutive check failures before treating a connection as down.
Recovery Retries	This is the number of responses required after a health check failure before treating a connection as up again.

Bandwidth Allowance Monitor Settings	
Bandwidth Allowance Monitor	☒ Enable
Action	Email notification is currently disabled. You can get notified when usage hits 75%/95% of monthly allowance by enabling Email Notification . ☒ Disconnect when usage hits 100% of monthly allowance
Start Day	On 1st of each month at 00:00 midnight
Monthly Allowance	MB


Bandwidth Allowance Monitor Settings	
Bandwidth	Check the box <i>Enable</i> to enable bandwidth usage monitoring on this WAN

Allowance Monitor	connection for each billing cycle. When this option is not enabled, bandwidth usage of each month is still being tracked but no action will be taken.
Action	If Email Notification is enabled, you will receive an email notification when usage hits 75% and 95% of the monthly allowance. If the box Disconnect when usage hits 100% of monthly allowance is checked, this WAN connection will be disconnected automatically when the usage hits the monthly allowance. It will not resume unless this option has been turned off or the usage has been reset when a new billing cycle starts.
Start Day	This option allows you to select which day of the month a billing cycle starts.
Monthly Allowance	This field is to specify the bandwidth allowance for each billing cycle.

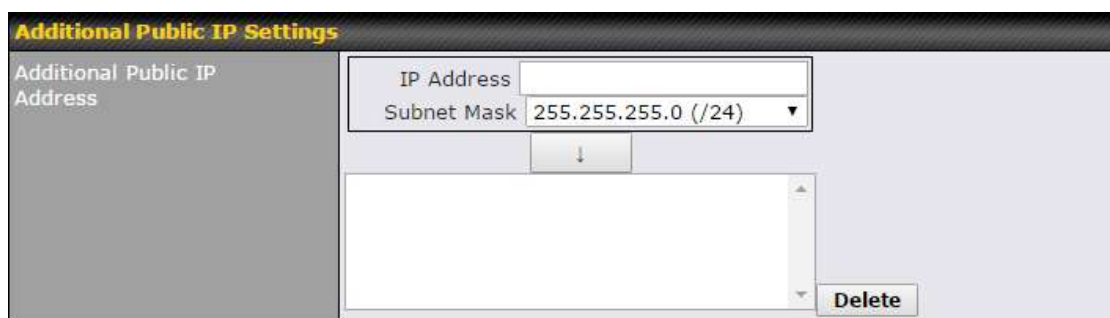

Additional Public IP Settings

If you have access to status public IP addresses, you can assign them on this field.



Dynamic DNS Settings

Dynamic DNS Service Provider	This setting specifies the dynamic DNS service provider to be used for the WAN based on supported dynamic DNS service providers: • changeip.com • dyndns.org • no-ip.org • tzo.com • DNS-O-Matic Select Disabled to disable this feature. See Section 9.5 for configuration details.
-------------------------------------	--

9.1.1 DHCP Connection

There are four possible connection methods:

1. DHCP
2. Static IP
3. PPPoE
4. L2TP

The DHCP connection method is suitable if the ISP provides an IP address automatically using DHCP (e.g., satellite modem, WiMAX modem, cable, Metro Ethernet, etc.).

Connection Method	 DHCP
Routing Mode	 NAT
IP Address	10.88.3.158
Subnet Mask	255.255.255.0
Default Gateway	10.88.3.253
Hostname (Optional)	 ☐ Use custom hostname
DNS Servers	☒ Obtain DNS server address automatically 10.88.3.1 ☐ Use the following DNS server address(es) DNS Server 1: DNS Server 2:

DHCP Connection Settings

Routing Mode

NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help icon in this field, you can display the **IP Forwarding** option, if your network requires it.

IP Address/ Subnet Mask/ Default Gateway

This information is obtained from the ISP automatically.

Hostname (Optional)

If your service provider's DHCP server requires you to supply a hostname value upon acquiring an IP address, you may enter the value here. If your service provider does not provide you with the value, you can safely bypass this option.

DNS Servers

Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection.

Selecting **Obtain DNS server address automatically** results in the DNS servers being assigned by the WAN DHCP server to be used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned from the DHCP server.)

When **Use the following DNS server address(es)** is selected, you may

enter custom DNS server addresses for this WAN connection into the **DNS Server 1** and **DNS Server 2** fields.

9.1.2 Static IP Connection

The static IP connection method is suitable if your ISP provides a static IP address to connect directly.

Connection Method	 Static IP ▾
Routing Mode	 ☒ NAT
IP Address	10.88.3.158
Subnet Mask	255.255.255.0
Default Gateway	10.88.3.253
IP Address	
Subnet Mask	255.255.255.0 (/24) ▾
Default Gateway	
DNS Servers	☒ Use the following DNS server address(es) DNS Server 1: DNS Server 2:

Static IP Settings

Routing Mode

NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help icon in this field, you can display the **IP Forwarding** option, if your network requires it.

IP Address / Subnet Mask / Default Gateway

These settings allow you to specify the information required in order to communicate on the Internet via a fixed Internet IP address. The information is typically determined by and can be obtained from the ISP.

DNS Servers

Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection. Selecting **Obtain DNS server address automatically** results in the DNS servers being assigned by the WAN DHCP server to be used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned from the DHCP server.) When **Use the following DNS server address(es)** is selected, you may enter custom DNS server addresses for this WAN connection into the **DNS Server 1** and **DNS Server 2** fields.

9.1.3 PPPoE Connection

This connection method is suitable if your ISP provides a login ID/password to connect via PPPoE.

Connection Method	? PPPoE ▾
Routing Mode	? ● NAT
IP Address	10.88.3.158
Subnet Mask	255.255.255.0
Default Gateway	10.88.3.253
PPPoE User Name	
PPPoE Password	
Confirm PPPoE Password	
Service Name (Optional)	 Leave it blank unless it is provided by ISP
IP Address (Optional)	 Leave it blank unless it is provided by ISP
DNS Servers	☒ Obtain DNS server address automatically 10.88.3.1 ☒ Use the following DNS server address(es) DNS Server 1: DNS Server 2:

PPPoE Settings	
Routing Mode	NAT allows substituting the real address in a packet with a mapped address that is routable on the destination network. By clicking the help icon in this field, you can display the IP Forwarding option, if your network requires it.
IP Address / Subnet Mask / Default Gateway	This information is obtained from the ISP automatically.
PPPoE Username / Password	Enter the required information in these fields in order to connect via PPPoE to the ISP. The parameter values are determined by and can be obtained from the ISP.
Confirm PPPoE Password	Verify your password by entering it again in this field.
Service Name (Optional)	Service name is provided by the ISP. Note: Leave this field blank unless it is provided by your ISP.
IP Address (Optional)	If your ISP provides a PPPoE IP address, enter it here. Note: Leave this field blank unless it is provided by your ISP.
DNS Servers	Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection. Selecting Obtain DNS server address automatically results in the DNS servers being assigned by the WAN DHCP server to be used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned from the DHCP server.) When Use the following DNS server address(es) is selected, you may enter custom DNS server addresses for this WAN connection into the DNS Server 1 and DNS Server 2 fields.

9.1.4 L2TP Connection

L2TP has all the compatibility and convenience of PPTP with greater security. Combine this with IPsec for a good balance between ease of use and security.

Connection Method	 L2TP ▼
Routing Mode	 ☒ NAT
IP Address	10.88.3.158
Subnet Mask	255.255.255.0
Default Gateway	10.88.3.253
L2TP User Name	
L2TP Password	
Confirm L2TP Password	
Server IP Address / Host	
Address Type	☒ Dynamic IP ☐ Static IP
DNS Servers	☒ Obtain DNS server address automatically 10.88.3.1 ☒ Use the following DNS server address(es) DNS Server 1: DNS Server 2:

L2TP Settings	
L2TP Username / Password	Enter the required information in these fields in order to connect via L2TP to your ISP. The parameter values are determined by and can be obtained from your ISP.
Confirm L2TP Password	Verify your password by entering it again in this field.
Server IP Address / Host	L2TP server address is a parameter which is provided by your ISP. Note: Leave this field blank unless it is provided by your ISP.
Address Type	Your ISP will also indicate whether the server IP address is Dynamic or Static. Please click the appropriate value.
DNS Servers	Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection. Selecting Obtain DNS server address automatically results in the DNS servers assigned by the PPPoE server to be used for outbound DNS lookups over the WAN connection. (The DNS servers are obtained along with the WAN IP address assigned from

the PPPoE
server.)

When **Use the following DNS server address(es)** is selected, you can enter custom DNS server addresses for this WAN connection into the **DNS server 1** and **DNS server 2** fields.

9.2 Cellular WAN



To access cellular WAN settings, click **Network>WAN>Details**.

Connection Details

Cellular 1 Status	
IMSI	(No SIM Card Detected)
MEID	A100001F7DC038 270113180708241208
ESN	8052FC8A
IMEI	356144040031862

Cellular Status	
IMSI	This is the International Mobile Subscriber Identity which uniquely identifies the SIM card. This is applicable to 3G modems only.
MEID	Some Pepwave routers support both HSPA and EV-DO. For Sprint or Verizon Wireless EV-DO users, a unique MEID identifier code (in hexadecimal format) is used by the carrier to associate the EV-DO device with the user. This information is presented in hex and decimal format.

ESN	This serves the same purpose as MEID HEX but uses an older format.
IMEI	This is the unique ID for identifying the modem in GSM/HSPA mode.

Connection Settings	
WAN Connection Name	Cellular 
Enable	☒ Always on 
Routing Mode 	☒ NAT ☐ IP Forwarding
Network Mode	☐ Auto ☐ Generic ☐ AT&T / T-Mobile ☒ Sprint ☐ Verizon Wireless
Subnet Selection 	☒ Auto ☐ Force /31 Subnet
Connection Priority 	☒ Always-on (Priority 1) ☐ Backup
Independent from Backup WANs 	☐
Idle Disconnect	☒ 1 minutes Time value is global. A change will affect all WAN profiles.
DNS Servers	☒ Obtain DNS server address automatically ☐ Use the following DNS server address(es) DNS Server 1: DNS Server 2:

Connection Settings

WAN Connection Name

Indicate a name you wish to give this WAN connection

Enable

Click the checkbox to toggle the on and off state of this connection.

Routing Mode

This option allows you to select the routing method to be used in routing IP frames via the WAN connection. The mode can be either NAT (Network Address Translation) or IP Forwarding.

In the case if you need to choose IP Forwarding for your scenario. Click the  button to enable IP Forwarding.

Subnet Selection

Choose between:

Auto: The subnet mask will be set automatically.

Force /31 Subnet: The subnet mask will be set as 255.255.255.254(/31), and the gateway IP address will be recalculated.

Connection Priority

This option allows you to configure the WAN connection whether for normal daily usage or as a backup connection only.

If **Always-on** is chosen, the WAN connection will be kept on continuously, regardless of the priority of other WAN connections.


	If Backup is chosen, the WAN connection will depend on other WAN connections. It will not be used when one or more higher priority dependent WAN connections are connected.
Independent from Backup WANs	If this is checked, the connection will be working independent from other Backup WAN connections. Those in Backup Priority will ignore the status of this WAN connection, and will be used when none of the other higher priority connections are available.
Idle Disconnect	If this is checked, the connection will disconnect when idle after the configured Time value. This option is disabled by default.
DNS Servers	Each ISP may provide a set of DNS servers for DNS lookups. This setting specifies the DNS (Domain Name System) servers to be used when a DNS lookup is routed through this connection. Selecting Obtain DNS server address automatically results in the DNS servers assigned by the WAN DHCP server being used for outbound DNS lookups over the connection. (The DNS servers are obtained along with the WAN IP address assigned by the DHCP server.) When Use the following DNS server address(es) is selected, you may enter custom DNS server addresses for this WAN connection into the DNS server 1 and DNS server 2 fields.

Cellular Settings		
SIM Card	☒ Both SIMs ☐ SIM A Only ☐ SIM B Only	
Preferred SIM Card	☒ No Preference ☐ SIM A ☐ SIM B	
	SIM Card A	SIM Card B
Network Selection	☒ Auto ☐ Manual	☒ Auto ☐ Manual
LTE/3G	☒ LTE Only	☒ LTE Only
Optimal Network Discovery	☐	☐
Band Selection	Auto	Auto
Data Roaming	☐	☐
Authentication	Auto	Auto
Operator Settings	☒ Auto ☐ Custom	☒ Auto ☐ Custom
APN		
Username		
Password		
Confirm Password		
SIM PIN (Optional)	(Confirm)	(Confirm)
Bandwidth Allowance Monitor	☒ Enable	☒ Enable
Action	☒ Receive email notification ☐ Reserve for management traffic when usage hits 100% ☐ Disconnect when usage hits 100%	☒ Receive email notification ☐ Reserve for management traffic when usage hits 100% ☐ Disconnect when usage hits 100%
Start Day	On 26th of each month	On 21st of each month
Monthly Allowance	4 GB	22 GB

Cellular Settings	
SIM Card	Indicate which SIM card this cellular WAN will use. Only applies to cellular WAN with redundant SIM cards.
Preferred SIM Card	If both cards were enabled on the above field, then you can designate the priority of the SIM card slots here.
LTE/3G	This drop-down menu allows restricting cellular to particular band. Click the  button to enable the selection of specific bands.
Optimal Network Discovery	Cellular WAsN by default will only handover from 3G to LTE network when there is no active data traffic, enable this option will make it run the handover procedures after fallback to 3G for a defined effective period, even this may interrupt the connectivity for a short while.
Band Selection	When set to Auto , band selection allows for automatically connecting to available, supported bands (frequencies) . When set to Manual, you can manually select the bands (frequencies) the SIM will connect to.
Data Roaming	This checkbox enables data roaming on this particular SIM card. When data roaming is enabled this option allows you to select in which countries the SIM has a data connection. The option is configured by using MMC (country) codes. Please check your service provider's data roaming policy before proceeding.
Authentication	Choose from PAP Only or CHAP Only to use those authentication methods exclusively. Select Auto to automatically choose an authentication method.
Operator Settings	This setting allows you to configure the APN settings of your connection. If Auto is selected, the mobile operator should be detected automatically. The connected device will be configured and connection will be made automatically. If there is any difficulty in making connection, you may select Custom to enter your carrier's APN , Login , Password , and Dial Number settings manually. The correct values can be obtained from your carrier. The default and recommended setting is Auto .
APN / Login / Password / SIM PIN	When Auto is selected, the information in these fields will be filled automatically. Select Custom to customize these parameters. The parameter values are determined by and can be obtained from the ISP.
Bandwidth Allowance Monitor	Check the box Enable to enable bandwidth usage monitoring on this WAN connection for each billing cycle. When this option is not enabled, bandwidth usage of each month is still being tracked but no action will be taken.

Action	If email notification is enabled, you will be notified by email when usage hits 75% and 95% of the monthly allowance. If Disconnect when usage hits 100% of monthly allowance is checked, this WAN connection will be disconnected automatically when the usage hits the monthly allowance. It will not resume connection unless this option has been turned off or the usage has been reset when a new billing cycle starts.
Start Day	This option allows you to define which day of the month each billing cycle begins.
Monthly Allowance	This field is for defining the maximum bandwidth usage allowed for the WAN connection each month.

Signal Threshold Settings

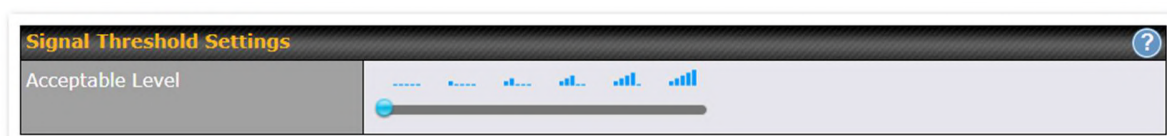

If signal threshold is defined, this connection will be treated as down when a weaker than threshold signal is determined.

The following values are used by the threshold scale:

	0 bars	1 bar	2 bars	3 bars	4 bars	5 bars
LTE / RSRP	-140	-128	-121	-114	-108	-98
3G / RSSI	-120	-100	-95	-90	-85	-75

To define the threshold manually using specific signal strength values, please click on the question Mark and the following field will be visible.

Signal Threshold Settings			
LTE	RSRP: n/a dBm	(Recovery: n/a dBm)	
	SINR: n/a dB	(Recovery: n/a dB)	
3G	RSSI: n/a dBm	(Recovery: n/a dBm)	

General Settings

Independent from Backup WANs	If this is checked, the connection will be working independent from other Backup WAN connections. Those in Backup Priority will ignore the status of this WAN connection, and will be used when none of the other higher priority connections are available.
Standby State	This option allows you to choose whether to remain connected or disconnected when this WAN connection is no longer in the highest priority and has entered the standby

state. When **Remain connected** is chosen, bringing up this WAN connection to active makes it immediately available for use.

Idle Disconnect

When Internet traffic is not detected within the user-specified timeframe, the modem will automatically disconnect. Once the traffic is resumed by the LAN host, the connection will be re-activated.

Health Check Settings	
Health Check Method	 SmartCheck ▼
Timeout	 5 ▼ second(s)
Health Check Interval	 10 ▼ second(s)
Health Check Retries	 3 ▼
Recovery Retries	 3 ▼

Health Check Settings

Health Check Method

This setting allows you to specify the health check method for the cellular connection. Available options are **Disabled**, **Ping**, **DNS Lookup**, **HTTP**, and **SmartCheck**. The default method is **DNS Lookup**. See **Section 10.4** for configuration details.

Timeout

If a health check test cannot be completed within the specified amount of time, the test will be treated as failed.

Health Check Interval

This is the time interval between each health check test.

Health Check Retries

This is the number of consecutive check failures before treating a connection as down.

Recovery Retries

This is the number of responses required after a health check failure before treating a connection as up again.

Dynamic DNS Settings	
Dynamic DNS Service Provider	Disabled ▼

Dynamic DNS Settings

Dynamic DNS Service Provider

This setting specifies the dynamic DNS service provider to be used for the WAN based on supported dynamic DNS service providers:

- changeip.com
- dyndns.org
- no-ip.org

- tzo.com
- DNS-O-Matic

Select **Disabled** to disable this feature. See **Section 9.5** for configuration details.

MTU		1428	Default
-----	---	------	---------

MTU	
MTU	This field is for specifying the Maximum Transmission Unit value of the WAN connection. An excessive MTU value can cause file downloads stall shortly after connected. You may consult your ISP for the connection's MTU value.


9.3 Wi-Fi WAN

To access Wi-Fi WAN settings, click **Network>WAN>Details**.

WAN Connection Settings	
WAN Connection Name	Wi-Fi WAN Default
Operating Schedule	Always on ▼
Independent from Backup WANs 	☐
Standby State	☒ Remain connected ☐ Disconnected
MTU 	☐ Auto ☒ Custom Value: 1500 Default
Reply to ICMP PING 	☒ Yes ☐ No


WAN Connection Settings	
WAN Connection Name	Enter a name to represent this WAN connection.
Operating Schedule	Click the drop-down menu to apply a time schedule to this interface.
Independent from Backup WANs	If this is checked, the connection will be working independent from other Backup WAN connections. Those in Backup Priority will ignore the status of this WAN connection, and will be used when none of the other higher priority connections are available.

Standby State	This setting specifies the state of the WAN connection while in standby. The available options are Remain Connected (hot standby) and Disconnect (cold standby).
MTU	This setting specifies the maximum transmission unit. By default, MTU is set to Custom 1440 . You may adjust the MTU value by editing the text field. Click Default to restore the default MTU value. Select Auto and the appropriate MTU value will be automatically detected. The auto-detection will run each time the WAN connection establishes
Reply to ICMP PING	If this setting is disabled, the WAN connection will not respond to ICMP ping requests. By default, this setting is enabled.

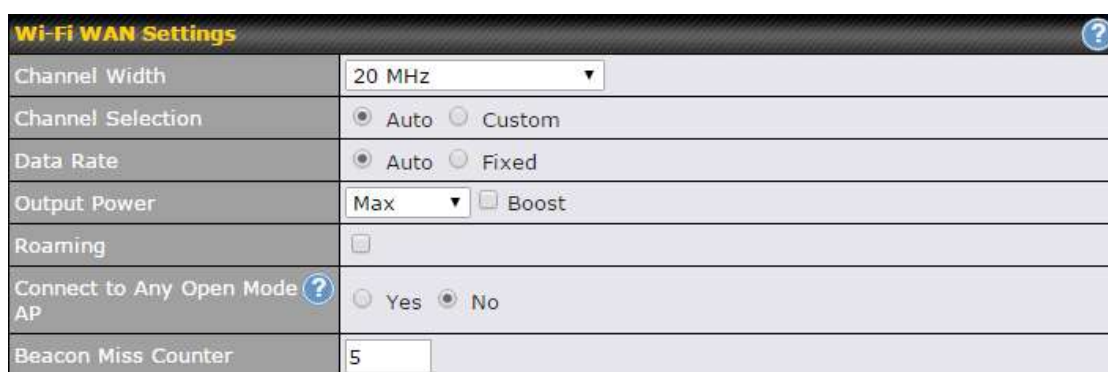

Wi-Fi WAN Settings

Channel Width	20 MHz
Channel Selection	☒ Auto ☐ Custom
Data Rate	☒ Auto ☐ Fixed
Output Power	Max ☐ Boost
Roaming	☐
Connect to Any Open Mode AP	☐ Yes ☒ No
Beacon Miss Counter	5

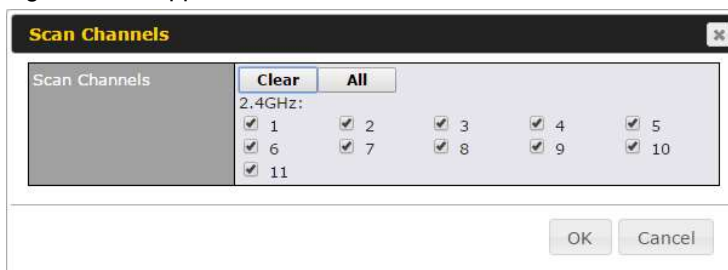Wi-Fi WAN Settings	
Channel Width	Select the channel width for this Wi-Fi WAN. 20MHz will have greater support for older devices using 2.4Ghz, while 40MHz is appropriate for networks with newer devices that connect using 5Ghz
Channel Selection	Determine whether the channel will be automatically selected. If you select custom, the following table will appear:  The Scan Channels dialog box shows a list of 2.4GHz channels (1-11) with checkboxes. Channels 1 through 11 are all checked. There are 'Clear' and 'All' buttons at the top, and 'OK' and 'Cancel' buttons at the bottom.
Data Rate	Selecting Auto will enable the router to automatically determine the best data rate, while manually selecting a rate will force devices to connect using the fixed rate.
Output Power	If you are setting up a network with many Wi-Fi devices in close proximity, then you

	can configure the output power here. Click the “boost” button for additional power. However, with that option ticked, output power may exceed local regulatory limits.
Roaming	Checking this box will enable Wi-Fi roaming. Click the  icon for additional options.
Connect to Any Open Mode AP	This option is to specify whether the Wi-Fi WAN will connect to any open mode access points it finds.
Beacon Miss Counter	This sets the threshold for the number of missed beacons.

Bandwidth Allowance Monitor	
Bandwidth Allowance Monitor	 ☒ Enable
Action	 Email notification is currently disabled. You can get notified when usage hits 75%/95% of monthly allowance by enabling Email Notification . ☒ Disconnect when usage hits 100% of monthly allowance
Start Day	On 1st of each month at 00:00 midnight
Monthly Allowance	MB

Bandwidth Allowance Monitor	
Action	If Error! Reference source not found. is enabled, you will be notified by email when usage hits 75% and 95% of the monthly allowance. If Disconnect when usage hits 100% of monthly allowance is checked, this WAN connection will be disconnected automatically when the usage hits the monthly allowance. It will not resume connection unless this option has been turned off or the usage has been reset when a new billing cycle starts.
Start Day	This option allows you to define which day of the month each billing cycle begins.
Monthly Allowance	This field is for defining the maximum bandwidth usage allowed for the WAN connection each month.

Health Check Settings	
Health Check Method	? DNS Lookup ▾
Health Check DNS Servers	? Host 1: Host 2: ☒ Use first two DNS servers as Health Check DNS Servers ☐ Include public DNS servers
Timeout	? 5 ▾ second(s)
Health Check Interval	? 5 ▾ second(s)
Health Check Retries	? 3 ▾
Recovery Retries	? 3 ▾

Health Check Settings

Method

This setting specifies the health check method for the WAN connection. This value can be configured as **Disabled**, **PING**, **DNS Lookup**, or **HTTP**. The default method is **DNS Lookup**. For mobile Internet connections, the value of **Method** can be configured as **Disabled** or **SmartCheck**.

Health Check Disabled

Health Check Settings	
Health Check Method	? Disabled ▾ Health Check disabled. Network problem cannot be detected.

When **Disabled** is chosen in the **Method** field, the WAN connection will always be considered as up. The connection will **NOT** be treated as down in the event of IP routing errors.

Health Check Method: PING

Health Check Method	? PING ▾
PING Hosts	? Host 1: Host 2: ☒ Use first two DNS servers as PING Hosts

ICMP ping packets will be issued to test the connectivity with a configurable target IP address or hostname. A WAN connection is considered as up if ping responses are received from either one or both of the ping hosts.

PING Hosts

This setting specifies IP addresses or hostnames with which connectivity is to be tested via ICMP ping. If **Use first two DNS servers as Ping Hosts** is checked, the target ping host will be the first DNS server for the corresponding WAN connection. Reliable ping hosts with a high uptime should be considered. By default, the first two DNS servers of the WAN connection are used as the ping hosts.

Health Check Method: DNS Lookup

Health Check Method	 DNS Lookup ▼
Health Check DNS Servers	 Host 1: Host 2: ☒ Use first two DNS servers as Health Check DNS Servers ☐ Include public DNS servers

DNS lookups will be issued to test connectivity with target DNS servers. The connection will be treated as up if DNS responses are received from one or both of the servers, regardless of whether the result was positive or negative.

Health Check DNS Servers

This field allows you to specify two DNS hosts' IP addresses with which connectivity is to be tested via DNS Lookup.

If **Use first two DNS servers as Health Check DNS Servers** is checked, the first two DNS servers will be the DNS lookup targets for checking a connection's health. If the box is not checked, **Host 1** must be filled, while a value for **Host 2** is optional.

If **Include public DNS servers** is selected and no response is received from all specified DNS servers, DNS lookups will also be issued to some public DNS servers. A WAN connection will be treated as down only if there is also no response received from the public DNS servers.

Connections will be considered as up if DNS responses are received from any one of the health check DNS servers, regardless of a positive or negative result. By default, the first two DNS servers of the WAN connection are used as the health check DNS servers.

Health Check Method: HTTP

Health Check Method	 HTTP ▼
URL 1	 http:// Matching String: ☐
URL 2	 http:// Matching String: ☐

HTTP connections will be issued to test connectivity with configurable URLs and strings to match.

URL1

WAN Settings>WAN Edit>Health Check Settings>URL1

The URL will be retrieved when performing an HTTP health check. When **String to Match** is left blank, a health check will pass if the HTTP return code is between 200 and 299 (Note: HTTP redirection codes 301 or 302 are treated as failures). When **String to Match** is filled, a health check will pass if the HTTP return code is between 200 and 299 and if the HTTP response content contains the string.

URL 2

WAN Settings>WAN Edit>Health Check Settings>URL2

If **URL2** is also provided, a health check will pass if either one of the tests passed.

Other Health Check Settings

Timeout	 5 second(s)
Health Check Interval	 5 second(s)
Health Check Retries	 3
Recovery Retries	 3

Timeout	This setting specifies the timeout in seconds for ping/DNS lookup requests. The default timeout is 5 seconds .
Health Check Interval	This setting specifies the time interval in seconds between ping or DNS lookup requests. The default health check interval is 5 seconds .
Health Check Retries	This setting specifies the number of consecutive ping/DNS lookup timeouts after which the Peplink Balance will treat the corresponding WAN connection as down. Default health retries is set to 3 . Using the default Health Retries setting of 3 , the corresponding WAN connection will be treated as down after three consecutive timeouts.
Recovery Retries	This setting specifies the number of consecutive successful ping/DNS lookup responses that must be received before the Peplink Balance treats a previously down WAN connection as up again. By default, Recover Retries is set to 3 . Using the default setting, a WAN connection that is treated as down will be considered as up again upon receiving three consecutive successful ping/DNS lookup responses.

Dynamic DNS Settings 	
Service Provider	DNS-O-Matic
Username	
Password	
Confirm Password	
Update All Hosts	☐
Hosts / IDs	

Dynamic DNS Settings	
Service Provider	This setting specifies the dynamic DNS service provider to be used for the WAN. Supported providers are: • changeip.com • dyndns.org • no-ip.org • tzo.com • DNS-O-Matic Select Disabled to disable this feature.

User ID / User / Email	This setting specifies the registered user name for the dynamic DNS service.
Password / Pass / TZO Key	This setting specifies the password for the dynamic DNS service.
Update All Hosts	Check this box to automatically update all hosts.
Hosts / Domain	This setting specifies a list of hostnames or domains to be associated with the public Internet IP address of the WAN connection.

Important Note


In order to use dynamic DNS services, appropriate hostname registration(s), as well as a valid account with a supported dynamic DNS service provider, are required.

A dynamic DNS update is performed whenever a WAN's IP address is changed, such as when an IP is changed after a DHCP IP refresh or reconnection.

Due to dynamic DNS service providers' policies, a dynamic DNS host expires automatically when the host record has not been updated for a long time. Therefore, the Peplink Balance performs an update every 23 days, even if a WAN's IP address did not change.

9.3.1 Creating Wi-Fi Connection Profiles

You can manually create a profile to connect to a Wi-Fi connection. This is useful for creating a profile for connecting to hidden-SSID access points. Click **Network>WAN>Details>Create Profile...** to get started.

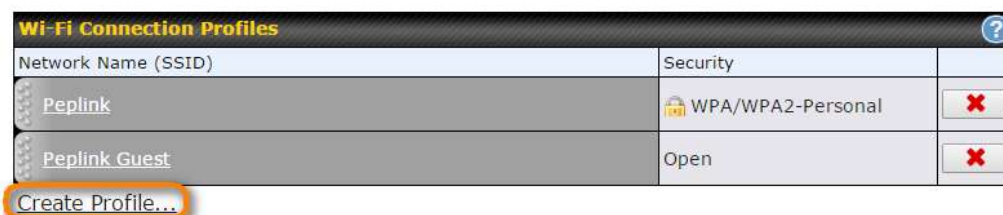

This will open a window similar to the one shown below

Create Wi-Fi Connection Profile
✕

Wi-Fi Connection

Network Name (SSID)	
Security	Open ▼
IP Address	☒ Obtain an IP address automatically ☐ Static

Wi-Fi Connection Profile Settings

Type	Select whether the network will connect automatically or manually.																								
Network Name (SSID)	Enter a name to represent this Wi-Fi connection. This option allows you to select which security policy is used for this wireless network. Available options:																								
Security	• Open <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: #ccc;">Security</td> <td>Open ▼</td> </tr> </table> • WEP <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: #ccc;">Security</td> <td>WEP ▼</td> </tr> <tr> <td style="background-color: #ccc;">Encryption Key ?</td> <td> ☒ Hide Characters </td> </tr> </table> • WPA/WPA2 – Personal <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: #ccc;">Security</td> <td>WPA/WPA2-Personal ▼</td> </tr> <tr> <td style="background-color: #ccc;">Shared Key ?</td> <td> ☒ Hide Characters </td> </tr> </table> • WPA/WPA2 – Enterprise <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: #ccc;">Security</td> <td>WPA/WPA2-Enterprise ▼</td> </tr> <tr> <td style="background-color: #ccc;">Login ID</td> <td> </td> </tr> <tr> <td style="background-color: #ccc;">Password</td> <td> </td> </tr> <tr> <td style="background-color: #ccc;">Confirm Password</td> <td> </td> </tr> <tr> <td style="background-color: #ccc;">EAP Method</td> <td>PEAP ▼</td> </tr> <tr> <td style="background-color: #ccc;">EAP Phase 2 Method</td> <td>EAP/CHAP ▼</td> </tr> <tr> <td style="background-color: #ccc;">EAP outer authentication identity</td> <td> ☒ Anonymous ☐ User Credentials ☐ Other: </td> </tr> </table>	Security	Open ▼	Security	WEP ▼	Encryption Key ?	 ☒ Hide Characters	Security	WPA/WPA2-Personal ▼	Shared Key ?	 ☒ Hide Characters	Security	WPA/WPA2-Enterprise ▼	Login ID		Password		Confirm Password		EAP Method	PEAP ▼	EAP Phase 2 Method	EAP/CHAP ▼	EAP outer authentication identity	☒ Anonymous ☐ User Credentials ☐ Other:
Security	Open ▼																								
Security	WEP ▼																								
Encryption Key ?	 ☒ Hide Characters																								
Security	WPA/WPA2-Personal ▼																								
Shared Key ?	 ☒ Hide Characters																								
Security	WPA/WPA2-Enterprise ▼																								
Login ID																									
Password																									
Confirm Password																									
EAP Method	PEAP ▼																								
EAP Phase 2 Method	EAP/CHAP ▼																								
EAP outer authentication identity	☒ Anonymous ☐ User Credentials ☐ Other:																								

9.4 WAN Health Check

To ensure traffic is routed to healthy WAN connections only, the Pepwave router can periodically check the health of each WAN connection. The health check settings for each WAN connection can be independently configured via **Network>WAN>Details**.

Health Check Settings	
Method	This setting specifies the health check method for the WAN connection. This value can be configured as Disabled , PING , DNS Lookup , or HTTP . The default method is DNS Lookup . For mobile Internet connections, the value of Method can be configured as Disabled or SmartCheck .
Health Check Disabled	
Health Check Method	? Disabled Health Check disabled. Network problem cannot be detected.
When Disabled is chosen in the Method field, the WAN connection will always be considered as up. The connection will NOT be treated as down in the event of IP routing errors.	
Health Check Method: PING	
Health Check Method	? PING
PING Hosts	? Host 1: Host 2: ☒ Use first two DNS servers as PING Hosts
ICMP ping packets will be issued to test the connectivity with a configurable target IP address or hostname. A WAN connection is considered as up if ping responses are received from either one or both of the ping hosts.	
PING Hosts	This setting specifies IP addresses or hostnames with which connectivity is to be tested via ICMP ping. If Use first two DNS servers as Ping Hosts is checked, the target ping host will be the first DNS server for the corresponding WAN connection. Reliable ping hosts with a high uptime should be considered. By default, the first two DNS servers of the WAN connection are used as the ping hosts.
Health Check Method: DNS Lookup	
Health Check Method	? DNS Lookup
Health Check DNS Servers	? Host 1: Host 2: ☒ Use first two DNS servers as Health Check DNS Servers ☐ Include public DNS servers
DNS lookups will be issued to test connectivity with target DNS servers. The connection will be treated as up if DNS responses are received from one or both of the servers, regardless of whether the result was positive or negative.	
Health Check DNS Servers	This field allows you to specify two DNS hosts' IP addresses with which connectivity is to be tested via DNS lookup.

If **Use first two DNS servers as Health Check DNS Servers** is checked, the first two DNS servers will be the DNS lookup targets for checking a connection's health. If the box is not checked, **Host 1** must be filled, while a value for **Host 2** is optional.

If **Include public DNS servers** is selected and no response is received from all specified DNS servers, DNS lookups will also be issued to some public DNS servers. A WAN connection will be treated as down only if there is also no response received from the public DNS servers.

Connections will be considered as up if DNS responses are received from any one of the health check DNS servers, regardless of a positive or negative result. By default, the first two DNS servers of the WAN connection are used as the health check DNS servers.

Health Check Method: HTTP

HTTP connections will be issued to test connectivity with configurable URLs and strings to match.

Health Check Method	 HTTP
URL 1	 http:// Matching String: ☐
URL 2	 http:// Matching String: ☐

URL1 **WAN Settings>WAN Edit>Health Check Settings>URL1**
The URL will be retrieved when performing an HTTP health check. When **String to Match** is left blank, a health check will pass if the HTTP return code is between 200 and 299 (Note: HTTP redirection codes 301 or 302 are treated as failures). When **String to Match** is filled, a health check will pass if the HTTP return code is between 200 and 299 and if the HTTP response content contains the string.

URL 2 **WAN Settings>WAN Edit>Health Check Settings>URL2**
If **URL2** is also provided, a health check will pass if either one of the tests passed.

Timeout	 10 second(s)
Health Check Interval	 5 second(s)
Health Check Retries	 3
Recovery Retries	 3

Other Health Check Settings

Timeout This setting specifies the timeout in seconds for ping/DNS lookup requests. The default timeout is **5 seconds**.

Health Check This setting specifies the time interval in seconds between ping or DNS lookup

Interval	requests. The default health check interval is 5 seconds .
Health Check Retries	This setting specifies the number of consecutive ping/DNS lookup timeouts after which the Pepwave router will treat the corresponding WAN connection as down. Default health retries is set to 3 . Using the default Health Retries setting of 3 , the corresponding WAN connection will be treated as down after three consecutive timeouts.
Recovery Retries	This setting specifies the number of consecutive successful ping/DNS lookup responses that must be received before the Pepwave router treats a previously down WAN connection as up again. By default, Recover Retries is set to 3 . Using the default setting, a WAN connection that is treated as down will be considered as up again upon receiving three consecutive successful ping/DNS lookup responses.

Automatic Public DNS Server Check on DNS Test Failure

When the health check method is set to **DNS Lookup** and health checks fail, the Pepwave router will automatically perform DNS lookups on public DNS servers. If the tests are successful, the WAN may not be down, but rather the target DNS server malfunctioned. You will see the following warning message on the main page:

 **Failed to receive DNS response from the health-check DNS servers for WAN connection 3. But public DNS server lookup test via the WAN passed. So please check the DNS server settings.**

9.5 Dynamic DNS Settings

Pepwave routers are capable of registering the domain name relationships to dynamic DNS service providers. Through registration with dynamic DNS service provider(s), the default public Internet IP address of each WAN connection can be associated with a host name. With dynamic DNS service enabled for a WAN connection, you can connect to your WAN's IP address from the external, even if its IP address is dynamic. You must register for an account from the listed dynamic DNS service providers before enabling this option.

If the WAN connection's IP address is a reserved private IP address (i.e., behind a NAT router), the public IP of each WAN will be automatically reported to the DNS service provider.

Either upon a change in IP addresses or every 23 days without link reconnection, the Pepwave router will connect to the dynamic DNS service provider to perform an IP address update within the provider's records.

The settings for dynamic DNS service provider(s) and the association of hostname(s) are configured via **Network>WAN>Details>Dynamic DNS Service Provider/Dynamic DNS Settings**.

Dynamic DNS Service Provider	changeip.com
User ID	
Password	
Confirm Password	
Hosts	

Dynamic DNS Settings

Dynamic DNS

This setting specifies the dynamic DNS service provider to be used for the WAN based on supported dynamic DNS service providers:

- changeip.com
- dyndns.org
- no-ip.org
- tzo.com
- DNS-O-Matic
- Others...

Support custom Dynamic DNS servers by entering its URL.
Works with any service compatible with DynDNS API.

Select **Disabled** to disable this feature.

Account Name / Email Address

This setting specifies the registered user name for the dynamic DNS service.

Password / TZO Key

This setting specifies the password for the dynamic DNS service.

Hosts / Domain

This field allows you to specify a list of host names or domains to be associated with the public Internet IP address of the WAN connection. If you need to enter more than one host, use a carriage return to separate them.

Important Note

In order to use dynamic DNS services, appropriate host name registration(s) and a valid account with a supported dynamic DNS service provider are required. A dynamic DNS update is performed whenever a WAN's IP address changes (e.g., the IP is changed after a DHCP IP refresh, reconnection, etc.). Due to dynamic DNS service providers' policy, a dynamic DNS host will automatically expire if the host record has not been updated for a long time. Therefore the Pepwave router performs an update every 23 days, even if a WAN's IP address has not changed.

10 Advanced Wi-Fi Settings

Wi-Fi settings can be configured at **Advanced>Wi-Fi Settings** (or **AP>Settings** on some models). Note that menus displayed can vary by model.

AP Settings	
SSID	☒ 2.4 GHz ☒ 5 GHz Integrated AP supports 2.4 GHz only. ☒ Testing
Operating Country	United States ▼
Preferred Frequency	☒ 2.4 GHz ☐ 5 GHz Integrated AP supports 2.4 GHz only.

AP Settings	
SSID	You can select the wireless networks for 2.4 GHz or 5 GHz separately for each SSID.
Operating Country	This drop-down menu specifies the national/regional regulations which the Wi-Fi radio should follow. • If a North American region is selected, RF channels 1 to 11 will be available and the maximum transmission power will be 26 dBm (400 mW). • If European region is selected, RF channels 1 to 13 will be available. The maximum transmission power will be 20 dBm (100 mW). NOTE: Users are required to choose an option suitable to local laws and regulations.
Preferred Frequency	Indicate the preferred frequency to use for clients to connect.

Important Note
Per FCC regulation, the country selection is not available on all models marketed in the US. All US models are fixed to US channels only.

	2.4 GHz	5 GHz
Protocol	802.11ng	802.11n/ac
Channel Width	20 MHz ▾	Auto ▾
Channel	Auto ▾ Edit Channels: 1 2 3 4 5 6 7 8 9 10 11	Auto ▾ Edit Channels: 36 40 44 48 52 56 60 64 100 104 108 112 116 120 124 128 132 136 140 149 153 157 161 165
Auto Channel Update	Daily at 03 ▾ :00 ☒ Wait until no active client associated	Daily at 03 ▾ :00 ☒ Wait until no active client associated
Output Power	Fixed: Max ▾ ☐ Boost	Fixed: Max ▾ ☐ Boost
Client Signal Strength Threshold	0 ▾ -95 dBm (0: Unlimited)	0 ▾ -95 dBm (0: Unlimited)
Maximum number of clients	0 ▾ (0: Unlimited)	0 ▾ (0: Unlimited)

AP Settings (part 2)

Protocol	This option allows you to specify whether 802.11b and/or 802.11g client association requests will be accepted. Available options are 802.11ng and 802.11na . By default, 802.11ng is selected.
Channel Width	Available options are 20 MHz , 40 MHz , and Auto (20/40 MHz) . Default is Auto (20/40 MHz) , which allows both widths to be used simultaneously.
Channel	This option allows you to select which 802.11 RF channel will be utilized. Channel 1 (2.412 GHz) is selected by default.
Auto Channel Update	Indicate the time of day at which update automatic channel selection.
Output Power	This option is for specifying the transmission output power for the Wi-Fi AP. There are 4 relative power levels available – Max , High , Mid , and Low . The actual output power will be bound by the regulatory limits of the selected country.
Client Signal Strength Threshold	This setting determines the maximum strength at which the Wi-Fi AP can broadcast
Maximum number of clients	This setting determines the maximum number of clients that can connect to this Wi-Fi frequency.

Advanced Wi-Fi AP settings can be displayed by clicking the  on the top right-hand corner of the **Wi-Fi AP Settings** section, which can be found at **AP>Settings**. Other models will display a separate section called **Wi-Fi AP Advanced Settings**, which can be found at **Advanced>Wi-Fi Settings**.

Management VLAN ID	 Untagged LAN (No VLAN) ▼
Operating Schedule	Always on ▼
Beacon Rate	 1 Mbps ▼ 6 Mbps will be used for 5 GHz radio
Beacon Interval	 100 ms ▼
DTIM	 1 Default
RTS Threshold	0 Default
Fragmentation Threshold	0 (0: Disable) Default
Distance / Time Converter	4050 m Note: Input distance for recommended values
Slot Time	 ☐ Auto ☒ Custom 9 μs Default
ACK Timeout	 48 μs Default
Frame Aggregation	☐

Advanced AP Settings

Management VLAN ID	This field specifies the VLAN ID to tag to management traffic, such as communication traffic between the AP and the AP Controller. The value is zero by default, which means that no VLAN tagging will be applied. NOTE: Change this value with caution as alterations may result in loss of connection to the AP Controller.
Operating Schedule	Choose from the schedules that you have defined in System>Schedule. Select the schedule for the integrated AP to follow from the drop-down menu.
Beacon Rate ^A	This option is for setting the transmit bit rate for sending a beacon. By default, 1Mbps is selected.
Beacon Interval ^A	This option is for setting the time interval between each beacon. By default, 100ms is selected.
DTIM ^A	This field allows you to set the frequency for the beacon to include delivery traffic indication messages. The interval is measured in milliseconds. The default value is set to 1 ms .
RTS Threshold ^A	The RTS (Request to Clear) threshold determines the level of connection required before the AP starts sending data. The recommended standard of the RTS threshold is around 500.
Fragmentation Threshold ^A	This setting determines the maximum size of a packet before it gets fragmented into multiple pieces.
Distance / Time Converter	Select the range you wish to cover with your Wi-Fi, and the router will make recommendations for the Slot Time and ACK Timeout.