


MFG label is in battery room. It is visible to the users as they install the battery.

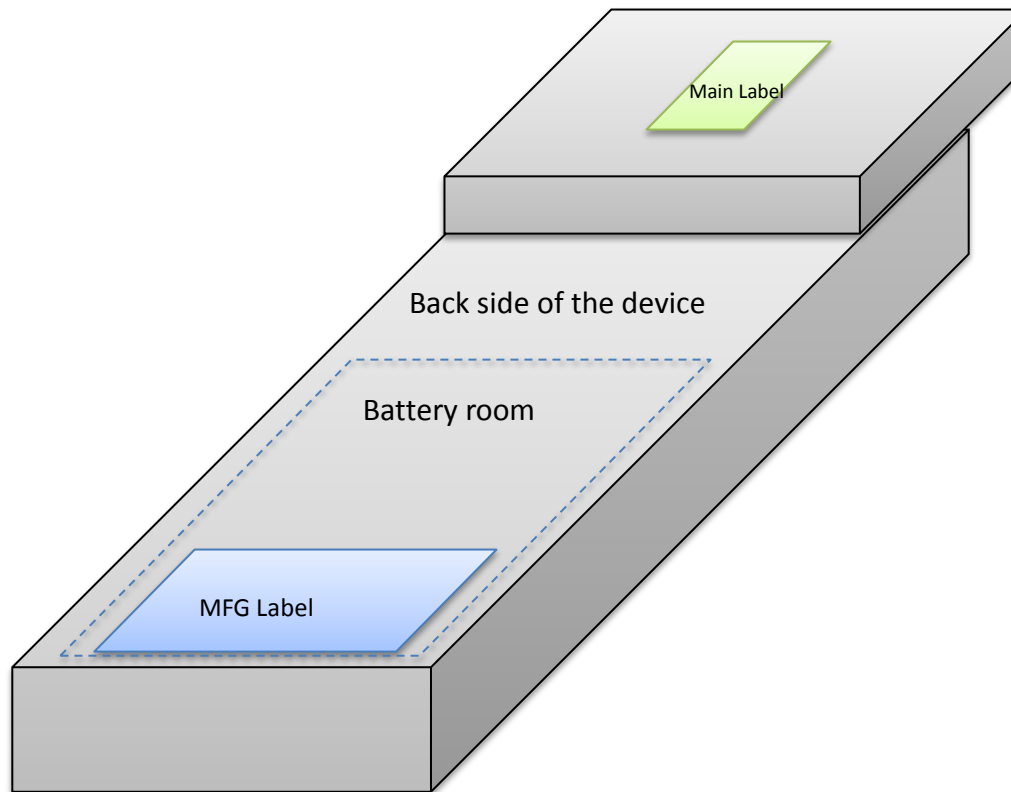

MFG label is in battery room. It is visible to the users as they install the battery.

