



C700 GMDSS Installation Guide

Serial number of the product

This serial number will be required for all troubleshooting or service inquiries.



© 2025 Intellian Technologies, Inc. All rights reserved. Intellian and the Intellian logo are trademarks of Intellian Technologies, Inc., registered in the U.S. and other countries. The C700 GMDSS is a trademark of Intellian Technologies, Inc. Intellian may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Intellian, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property. All other logos, trademarks, and registered trademarks are the property of their respective owners. Information in this document is subject to change without notice. Every effort has been made to ensure that the information in this guide is accurate. Intellian is not responsible for printing or clerical errors.

Disclaimer

The information in this user guide is subject to change without prior notice throughout the product life cycle. The printed version of the guide is periodically updated, but it may contain inaccuracies or omissions compared to the most recent product information. The most up-to-date information is always available on our website at www.intelliantech.com.

Document Information (HW/SW Version)

This manual applies to the following HW and SW versions. Please note that the contents may be updated without notice and could differ from the actual product.

HW Version

SDT	V0.6	Handset	V0.4
Alarm Box	V0.6	SSAS Box Alert/Test	V0.5
Junction Box	V0.4	Alarm Unit*	V5.0

* The Alarm Unit's version is the main control version because the alarm unit has four types of PCBAs inside.

SW Version

SDT	1.0.7	SSAS Box Alert/Test	1.1.1
Alarm Box #1, #2, #3	1.1.1	BDU	3.0.1
Alarm Unit	1.0.2	ADU	1.0.2

Table of Contents

Chapter 1. Precautions	6
1.1 Warnings, Cautions, and Notes	6
1.2 General Precautions	6
Chapter 2. Certifications	8
Chapter 3. Introduction	9
3.1 Introduction of C700 GMDSS System	9
3.2 Iridium Satellite Network	10
3.3 Iridium Certus GMDSS SIM Card	11
Chapter 4. Planning Installation	12
4.1 Selecting Installation Site	12
4.1.1 Required Visibility for Iridium satellites	12
4.1.2 Separation to Obstacles	13
4.1.3 Separation to other antennas (eg UHF, VHF)	13
4.1.4 Co-existing with Inmarsat and Iridium L-Band terminals	14
4.1.5 Avoiding Radar Interference	15
4.1.6 RF Hazard Precautions	16
4.2 System Package	17
4.2.1 Above Deck Unit (ADU)	17
4.2.2 Below Deck Unit (BDU)	17
4.2.3 Safety Display Terminal	18
4.2.4 Packing List	19
4.3 System Cables (Customer Supplied)	21
4.3.1 Antenna RF Cable (Customer Supplied)	21
4.4 Unpacking Package	22
4.4.1 Unpacking Antenna Package	22
4.4.2 Unpacking SDT Package	24
4.5 Procedure for upgrading an in-service C700 installation to C700 GMDSS	26
4.5.1 Assessing an existing installation	26
4.5.2 New RF Hazard Label	26
4.5.3 Software Update	27
4.5.4 SIM card	28
4.5.5 Installation of the SDT, accessories and GMDSS system commissioning	28
Chapter 5. Installing ADU	29
5.1 Antenna Dimensions	29
5.2 ADU Mounting Hole Pattern	30
5.3 Mast Designing (Installation Example)	31
5.4 Mounting Antenna	33
5.4.1 Mounting Antenna using Inner Holes (with M6 Bolts)	33
5.4.2 Mounting Antenna using Outer Holes (with M10 Bolts)	33
5.4.3 Mounting Antenna on Pole (Optional)	34
5.5 Vent Hole	35

5.6 Connecting Antenna RF Cable.....	36
5.7 Important Notice of Waterproofing Connector.....	37
5.7.1 Installing the Cold Shrink Tube on the Cable.....	37
5.7.2 Installing Waterproof Tape on the Cable (Optional).....	38

Chapter 6. Installing BDU..... 40

6.1 Selecting BDU Installation Site.....	40
6.2 BDU Dimensions.....	40
6.3 BDU Mounting Template.....	42
6.4 Mounting BDU.....	43
6.4.1 Direct Mounting Type	43
6.4.2 19" Rack Mounting Type (Optional).....	43
6.5 Antenna System Configuration.....	45
6.5.1 Data Sessions and Voice Calls.....	46
6.6 BDU Cable Connection.....	47
6.6.1 BDU Back Panel View.....	47
6.6.2 BDU Connector Pinout Guide.....	47
6.6.3 Connecting DC Power to BDU.....	51
6.6.4 Connecting BDU to ADU (Antenna).....	54
6.6.5 Connecting BDU to Devices using LAN Port (RJ45).....	54
6.6.6 Connecting BDU to Device using WAN Port.....	55
6.6.7 Connecting BDU to POTS Phone (RJ14).....	55
6.6.8 Connecting BDU to External Devices.....	56
6.6.9 Connecting Wi-Fi Antenna to BDU.....	56
6.6.10 Grounding Stud.....	56
6.6.11 Inserting SIM Card.....	57
6.7 DC Isolation Resistance.....	58
6.7.1 Grounding the system.....	58

Chapter 7. Installing the SDT..... 59

7.1 Selecting SDT Installation Site and Cautions.....	59
7.2 SDT Dimensions.....	60
7.3 Mounting SDT.....	61
7.3.1 Bracket Mounting Type.....	61
7.3.2 Flush Mounting Type.....	63
7.4 SDT System Configuration.....	66
7.4.1 Basic Configuration.....	66
7.4.2 Optional Configuration.....	67
7.5 SDT Cable Connection.....	68
7.5.1 SDT Front/Back Panel.....	68
7.5.2 SDT Connector Pinout Guide.....	70
7.6 Establishing SDT Connections.....	72
7.6.1 Connecting DC Power to the SDT.....	72
7.6.2 Connecting Main/ Emergency and Reserve Power Source.....	75
7.6.3 Connecting SDT to BDU using the BDU Port.....	76
7.6.4 Connecting SDT to Devices using the LAN Port.....	76
7.6.5 Connecting SDT to a Keyboard using the USB Port.....	77
7.6.6 Connecting the SDT to the Ship's Grounding System.....	77

7.7 Power Consumption	78
7.8 DC Isolation Resistance & Grounding	79
7.8.1 Connecting SDT Chassis Ground/ DC Power cable/ Isolation resistance	79
7.8.2 Connecting BDU Chassis Ground/ DC Power cable/ Isolation resistance	80
7.9 Galvanic Isolated Power Supply	81
7.9.1 Connecting VAC IN & Chassis Ground	81
7.9.2 Connecting VDC IN & Chassis Ground	82
7.9.3 Connecting Battery Power Supply with AC/DC Galvanic isolated Charger	82
Chapter 8. Installing Handset	83
8.1 Selecting Handset Installation Site	83
8.2 Dimensions	83
8.3 Overview	84
8.4 Connecting the Handset Cable to the SDT	85
8.4.1 Connecting the Handset to the Front Panel of the SDT	85
8.4.2 Connecting the Handset to the Back Panel of the SDT (Optional)	85
Chapter 9. Operating Install Wizard	86
9.1 Turning On System	86
9.2 Installation Wizard	86
Chapter 10. Specification	90
10.1 Applicable Equipment Standards	90
10.2 C700 GMDSS Specification	90
10.2.1 SDT7000C	90
10.2.2 Handset(HS7000) w/o PTT button for SDT	91
10.2.3 Above Deck Unit (C700)	91
10.2.4 Below Deck Unit (CP-T1A1)	92
10.3 Accessory Specification (Optional)	93
10.3.1 Alarm Box(AB1000)	93
10.3.2 SSAS Box (SB7000T/SB7000A)	93
10.3.3 Alarm Unit (AU1000)	93
10.3.4 Junction Box (JB1000)	93
10.4 Environmental Specification	94
Chapter 11. Optional products CAN Bus communication connection guide	95
Chapter 12. Appendix	97
12.1 Tightening Torque Specification	97
12.2 Accessory Connections (Optional)	98
12.2.1 Selection of BDU Installation Site	98
12.2.2 Junction Box	98
12.2.3 Alarm Box	105
12.2.4 SSAS Box	111
12.2.5 Alarm Unit	117
12.2.6 Power Supply (PSU-180D)	122
12.3 BAM Alert List	124
12.4 Abbreviation / Acronym	125

Chapter 1. Precautions

1.1 Warnings, Cautions, and Notes

WARNING, CAUTION, and NOTE statements are used throughout this manual to emphasize important and critical information. You must read these statements to help ensure safety and to prevent product damage. The statements are defined below.

	WARNING WARNING indicates a potentially hazardous situation that if not avoided, could result in death or serious injury.
	CAUTION CAUTION indicates a potentially hazardous situation that if not avoided, could result in minor or moderate injury or damage to equipment. It may also be used to alert users about unsafe practices.
	NOTE A NOTE statement is used to notify people of installation, operation, programming, or maintenance information that is important, but not hazard-related.

1.2 General Precautions

Before you use the antenna, make sure that you have read and understood all safety requirements.

	THIS WAY UP Place the boxes/crates on the floor with the arrow pointing up.
	FRAGILE Since the Radome is fragile, handle it with care. Do not apply excessive pressure or shock. These may cause surface cracking or other damage.
	DO NOT STACK MORE THAN FOUR UNITS Do not stack boxes/crates more than four units as there is a risk boxes/crates may fall and be damaged.
	KEEP DRY - Always make sure the antenna is stored on a dry surface in a dry, well-ventilated area. - The antenna is designed to withstand a normal rain shower; however, water resistance cannot be guaranteed if the antenna is submerged.

- * **DO NOT SHIP VIA RAIL:** Ensure systems are not shipped via rail.
- * **Shock Hazard:** To minimize shock hazard and to protect against lightning, you must connect the equipment chassis and cabinet to an electrical ground. Make sure the system is correctly grounded and power is off when installing, configuring, and connecting components.
- * **Do not operate in an explosive atmosphere:** Do not operate the equipment in explosive environments or in the presence of flammable gases. Operating this equipment in such an environment causes a definite safety hazard.
- * **Keep away from live circuits:** Operating personnel must at all times observe all safety regulations. Do not replace components or make adjustment inside the equipment with any power supply turned on. Under certain conditions, dangerous voltage may exist in the power supplies even with the power cable removed. To avoid injuries, always remove the power and discharge a circuit before touching it.

Chapter 2. Certifications

This device complies with Part 15 of the FCC Rules, Industry Canada licence-exempt RSS standard(s), as well as MED, MER, and other national regulatory requirements.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications made to this equipment not expressly approved by Intellian Technologies, Inc. may void the FCC authorization to operate this equipment.

Radiofrequency radiation exposure Information:

This equipment complies with MED and FCC, IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 1.5 m between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Chapter 3. Introduction

3.1 Introduction of C700 GMDSS System

Intellian's C700 GMDSS System is comprised of three core products that can be augmented with a range of accessories. The three core products are the ADU (above deck unit) and BDU (below deck unit) that comprise the C700 Standard System and the Safety Display Terminal (SDT).

The C700 Standard System is an L-band terminal designed by Intellian to connect to Iridium's constellation of 66 active LEO satellites that provide truly global coverage. The Iridium Certus® 700 service provides three high-quality voice lines with concurrent IP data. The maximum data speeds are 704 kbps for both downlink and uplink. The RF architecture includes dedicated interference blocking elements, making the C700 GMDSS terminal inherently resilient against interference from terrestrial cellular equipment and other sources of radio interference off or on board the vessel

The Safety Display Terminal (SDT) includes a 7" touchscreen and a dedicated handset that ship staff can use to access the GMDSS services

Intellian offer a full range of MED certified accessories to provide additional capabilities, including:

- AC/DC Power Supply Unit: Supports inputs from the vessel's AC distribution systems (110V/220V) or from the battery backup for the bridge communication equipment.
- GMDSS Alarm Box: Using these devices, a GMDSS DISTRESS Alert can be sent using the C700 GMDSS System from locations other than the GMDSS console. Typical locations include the conning position, Ship's Office & Captain's cabin.
- GMDSS Alarm Unit: Using this device, GMDSS DISTRESS Alerts can be sent using all of the available GMDSS communications devices (VHF, MF/HF & C700 GMDSS) from a location other than the GMDSS console.
- SSAS Box Alert: Using this device an SSAS Alert can be discreetly sent to the Company Security Officer at the vessel operator's shore offices
- SSAS Box Test: This device is used to test the SSAS communication system

The C700 GMDSS System can also be used for non-emergency communications. IP phones can be connected to the BDU, and devices, such as laptops can either be connected to the ethernet ports at the back of the BDU or connected using the WiFi router. The Iridium network prioritizes emergency communication to ensure that GMDSS services are always available. Consequently a single C700 GMDSS System can be used to provide both GMDSS services and also act as a companion terminal or provide OOBM, for other connected devices.

3.2 Iridium Satellite Network

The Iridium satellite network is comprised of 66 low-earth orbiting (LEO), cross-linked satellites, providing voice and data coverage over Earth's entire surface.

At only 476 mile (780 km) from the earth, the proximity of Iridium's LEO network means pole-to-pole coverage, a shorter transmission path, stronger signals, lower latency, and shorter registration time than with GEO satellites. The network is considered a meshed constellation of interconnected, cross-linked satellites so that each satellite "talks" with the other nearby satellites in front, behind, and adjacent orbits.

In space, each Iridium satellite is linked to up to four others creating a dynamic network that routes traffic among satellites to ensure global coverage, even when traditional local systems are unavailable.



Figure 1: Earth Showing Iridium Satellites in Six Defined Orbital Planes

The Iridium GMDSS Service provides essential maritime safety communications using the Iridium satellite network. It is the only GMDSS solution offering global satellite coverage, including the polar regions. This service integrates multiple functions, including GMDSS, the Ship Security Alert System (SSAS), Long Range Identification and Tracking (LRIT), auxiliary data services, and voice communication, within a single terminal for efficient operation.

3.3 Iridium Certus GMDSS SIM Card

The C700 GMDSS system requires a valid Iridium Certus GMDSS SIM Card to utilize GMDSS communication services via the Iridium satellite network. This SIM Card can be obtained from authorized Iridium GMDSS Service Providers. Link the Iridium website page that shows a list of their maritime Certus Service Providers: <https://www.iridium.com/services/certus-gmdss>.

During service enrollment, registration documents containing the ship's main information (Ship Name, IMO No., MMSI No., Vessel Call Sign, etc.) will be submitted to the service provider. Upon successful registration, a SIM card specifically configured for the registered ship will be issued. This SIM card is uniquely identified by its physically-assisted ICCID (Integrated Circuit Card Identifier) and MSISDN (Mobile Station International Subscriber Directory Number), which serves as the intrinsic Iridium satellite number used within the Iridium GMDSS service. The registered ship's main information will be verified during the Installation Wizard process for the C700 GMDSS.

If any information contains errors, the user must contact the service provider to modify it before activating or installing the GMDSS system.

The SIM card type is Mini-SIM (dimensions: 25mm x 15mm). It will be provided attached to a plastic card. Before inserting the SIM card into the equipment, detach the Mini-SIM portion from the plastic card.



Chapter 4. Planning Installation

The antenna installation requires precaution and safety measures to be followed. Failure to follow the correct installation process may lead to injury of the installer and/or cause damage to the system. To maximize the performance of the system, a thorough review of this installation guide is strongly recommended. In addition, you should follow the installation process as it is described in this manual.

4.1 Selecting Installation Site

The antenna should be placed in an area on-board the vessel with an unobstructed view extending from (at least) 8° above the horizontal surface in all azimuth directions. Maximizing visibility to 17° below the horizon is recommended to ensure a stable connection during vessel motion.

When the antenna is transmitting, obstacles in the beam path will cause decreased satellite signal strength. The antenna unit requires direct line-of-sight with the desired satellite without any obstacles in the beam path.

Do not place the antenna near to a funnel because smoke deposits can cause corrosion of the antenna. In addition, the deposit can impact performance or cause malfunctions.


Do not place the antenna where there is direct seawater spray of.

4.1.1 Required Visibility for Iridium satellites

The antenna requires line-of-sight visibility to the satellite to maintain the connection. For best performance, it's recommended to install the ADU at the highest possible position on the vessel.

The minimum elevation angle for Iridium satellites is 8° above the horizon. The ADU requires visibility to the sky with as few blockages as possible in the “Required Zone” in Figure 1.

Vessel motions will lower this value. Our recommendation is to minimize blockages to 22° below the horizon, to ensure reliable performance for up to 30° roll.

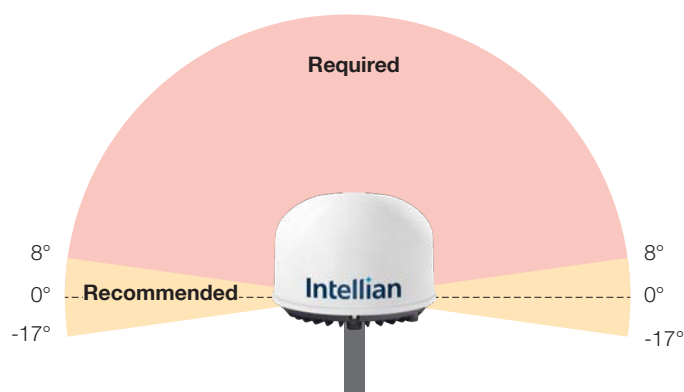


4.1.2 Separation to Obstacles

Obstructions between the ADU and satellite will interrupt the connection, and should be minimized as much as possible.


The distance from the ADU to any obstruction should be at least 1.5m (above 8° from horizon).

Small obstructions will not significantly impact performance. Our recommendation is to ensure the distance to any obstruction is greater than 15 times the effective diameter of the obstruction.

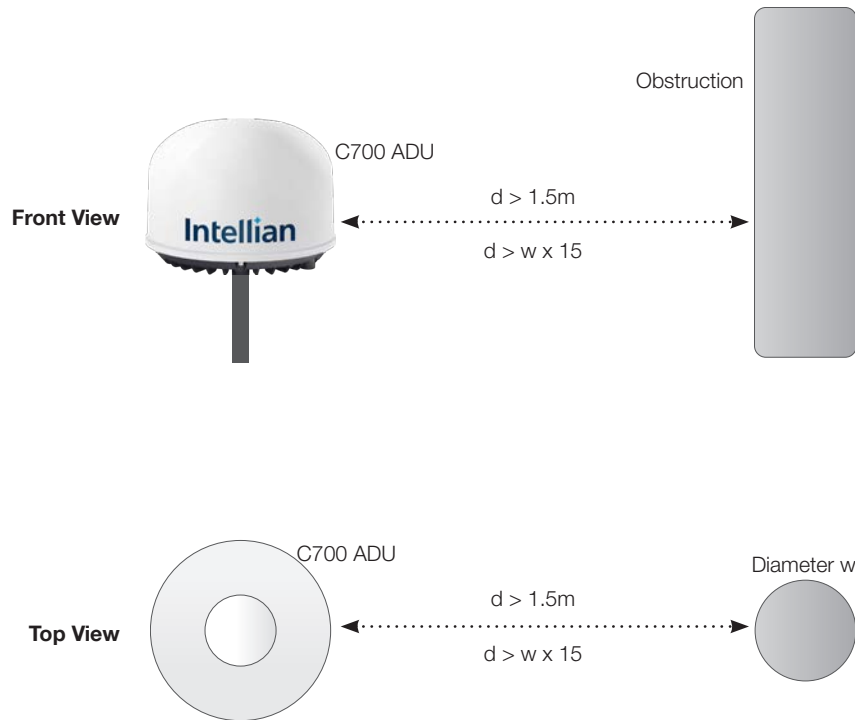

4.1.3 Separation to other antennas (eg UHF, VHF)

The ADU should be kept at least 1.5m away from any other antennas (eg VHF, UHF, Starlink, cellular).

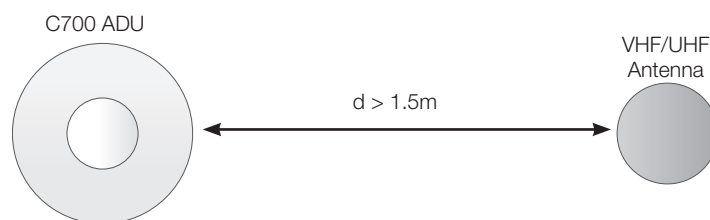

4.1.4 Co-existing with Inmarsat and Iridium L-Band terminals

It is possible to install the C700 GMDSS system on-board a vessel that already has an Inmarsat or Iridium L-Band equipment installed.


It is advised that the C700 GMDSS is installed as far away as possible, however if location is constrained then the C700 GMDSS ADU must be mounted below the other terminal antenna unit below an angle of 15 degrees and at the minimum horizontal distance specified below when co-locating is required.

- Install the C700 GMDSS ADU at a minimum horizontal distance of:

- 1m from an Inmarsat C antenna
- 5m from an Inmarsat Fleet Broadband antenna
- 1m from a Certus 100 antenna
- 2m from a Certus 200 antenna
- 5m from a Certus 700 antenna

It is advised that the units are separated by the maximum possible distance, irrespective of the guidance above. As this is an Iridium Certus GMDSS installation, we recommend a survey by a qualified installer.

Intellian also recommends that the GMDSS C700 Antenna Unit be installed with a minimum distance of 2 meters from any receivers and transmitters operating on the listed frequencies below:

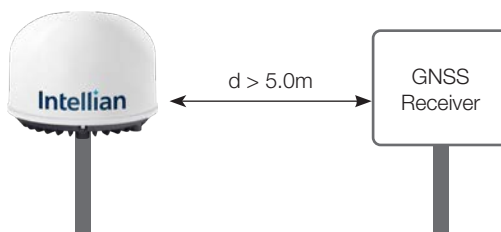

Receivers adjacent to Iridium Transmission band	
GNSS	1563.0 -1587.0 MHz
Glionass	1593.0 -1610.0 MHz
GALILEO	1559.0 -1591.0 MHz
BeiDou	1559.05 -1563.15 MHz


Transmitters and receivers adjacent to Iridium Transmission band	
Inmarsat Tx	1626.5 – 1675.0 MHz
Iridium Tx/Rx	1610.0 – 1626.5 MHz

4.1.5 Avoiding Radar Interference

Do not install the antenna near a high power shortwave radar. Most radar transmitters emit RF energy within an elevation range of -15° to $+15^{\circ}$. For this reason, you should position the antenna at least 4.6 m (15.09 feet) away from any radars (S-band and X-band Radar up to 50kW).

**WARNING**

Never place the antenna in the beam path of the radar, regardless of distance. The high power shortwave radar may impair its performance or permanently damage the antenna.

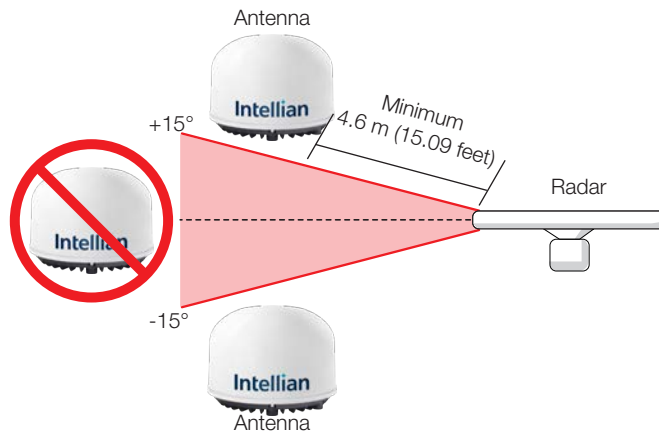


4.1.6 RF Hazard Precautions

The antenna is designed to be used with radiation transmitting equipment manufactured by others. Exposure to RF radiation, including exposure associated with improper use of the transmitting equipment, may be hazardous to people who work close to the Above Deck Unit. Ensure the safety of personnel who work with on the system.

During transmission, ensure to keep the minimum safety distance. The recommended minimum safety distance to the antenna on the focal line is as follows. It is based on a Radiation Exposure Level of W/m² that applies under an uncontrolled environment. No hazard exists >20° below the antenna's mounting plane.

Radiation Exposure Level	Recommended Minimum Safety Distance
10 W/m ²	more than 100cm
25 W/m ²	more than 60cm
100 W/m ²	more than 30cm

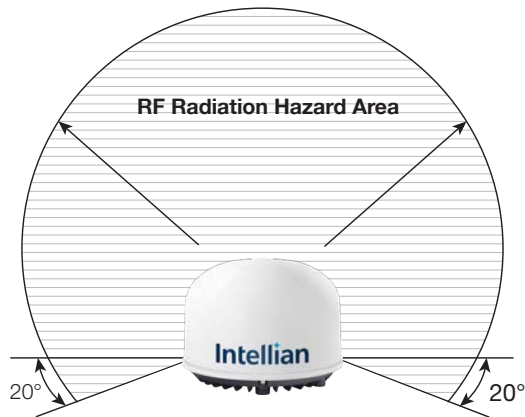

4.2 System Package

4.2.1 Above Deck Unit (ADU)

The Above Deck Unit (ADU) is an antenna unit with an omni-directional antenna, active RF circuitry, BCX (L-band modem), and a GNSS module. The radome protects the antenna unit from the marine environment. All signals (and DC power) pass through the single coaxial antenna cable, which connects the ADU to the BDU.



4.2.2 Below Deck Unit (BDU)

The Below Deck Unit (BDU) supports voice and data communications in a marine environment. The BDU is the main control unit of an antenna system that monitors and controls the antenna operation through Intellian's web-based software. The BDU contains user interfaces and controls all communication between the ADU and the local communication devices such as phones, and computers, etc.



4.2.3 Safety Display Terminal

The Safety display terminal(SDT7000C) functions as the display unit and controls the GMDSS system, supporting external interfaces and an operational user interface designed for safe and reliable maritime communication. It is intended for indoor mounting to ensure optimal performance and compliance with maritime safety standards.



4.2.4 Packing List

Before beginning installation, make sure you have all the included components.

Basic System including		
Item	Description	
C700 ADU with BDU(MED)	C700	
Safety Display Terminal	SDT7000C	
Handset w/o PTT	HS7000	
Handset Cradle	HC7000	
Shielded Lan 3m Cable for BDU to SDT	RJ45 CAT6 -3	
Data & Power 12P 3M cable for SDT7000C	DPC12-3	
4 tapping screws & bolts	Installation material	
Operaion Manual	OM-S	

Option		
Item	Description	
Intellian AC/DC Power Supply 180W/24VDC	PSU180D	
Junction Box Unit for Navtex and sat GMDSS	JB1000	
Data 14P 3M cable for IN3000R to JB1000	DC14-3	
Intellian AB1000 Alarm Box with Distress	AB1000	
Intellian AU1000 Alarm Unit with Distress	AU1000	
SSAS Box Alert	SB7000A	
SSAS Box Test	SB7000T	
SRP-350 PLUS III Serial and Lan interface printer 24V	SRP-350 PLUS III	
3M DC Power and data cable for Printer	PDCP-3	
Intellian HC2500 Handset w/o PTT	HS7000	
Intellian HC2500 Handset Cradle	HC7000	
Intellian EDS-205 MOXA Switch 5 Port	ISW205	
Extended Warranties 3year for sat GMDSS series (Part & Labour)	ISEXT3	
Extended Warranties 4year for sat GMDSS series (Part & Labour)	ISEXT4	
Extended Warranties 5year for sat GMDSS series (Part & Labour)	ISEXT5	

Equipment		
Item	Description	
C200 ADU with BDU(MED)	C1-20-A00S	
Safety Display Terminal (Iridium)	SDT7000C	
Handset w/o PTT and cradle	HSC7000	
Junction Box	JB1000	
Handset w/o PTT	HS7000	
Handset Cradle	HC7000	
GMDSS Alarm Unit (Multiple system)	AU1000	
GMDSS Alarm Box (Single system)	AB1000	
SSAS Box (Alert)	SB7000A	
SSAS Box (Test)	SB7000T	
AC/DC Power Supply Unit (180W)	PSU180D	
Serial & LAN Interface Printer 24V	SRP350 PLUS III	
EDS-205 MOXA Switch 5 Port	ISW205	
Keyboard	SPR-8695TU	

4.3 System Cables (Customer Supplied)

4.3.1 Antenna RF Cable (Customer Supplied)

The model does not come with an Antenna RF Cable (LMR 200, 25m), and you will need to purchase it separately. Due to the signal losses across the length of the RF coax on L-Band, it must only use RF cables with 50 Ω impedance coaxial cable types for standard system installation. The use of different type of cables (75 Ω coaxial types etc.) can cause problems. Check the instructions from the cable supplier. The table below shows the recommended cable types and maximum cable lengths for the antenna system.


Coaxial Cable Type	Attenuation (@ 900 MHz)	*Max. Cable Length (17.5 dB loss @ 900 MHz)	Min. Bend Radius
LMR200	0.326 dB/1 m	50 m	Installation 12.7 mm (0.5 in.)
LMR300	0.199 dB/1 m	60 m	Installation 22.2 mm (0.88 in.)
LMR400	0.128 dB/1 m	100 m	Installation 25.4 mm (1 in.)

- Connector type: TNC
- Optimal tightening torque: 1.5 N-m
- Maximum DC resistance of RF cable: 1.3 Ω
- *Maximum RF loss at 900MHz: 17.5 dB including connector


4.4 Unpacking Package

4.4.1 Unpacking Antenna Package


Follow the steps for easy and safe unpacking. The system package consists of two sub-packages comprising an ADU Package and a BDU Package.

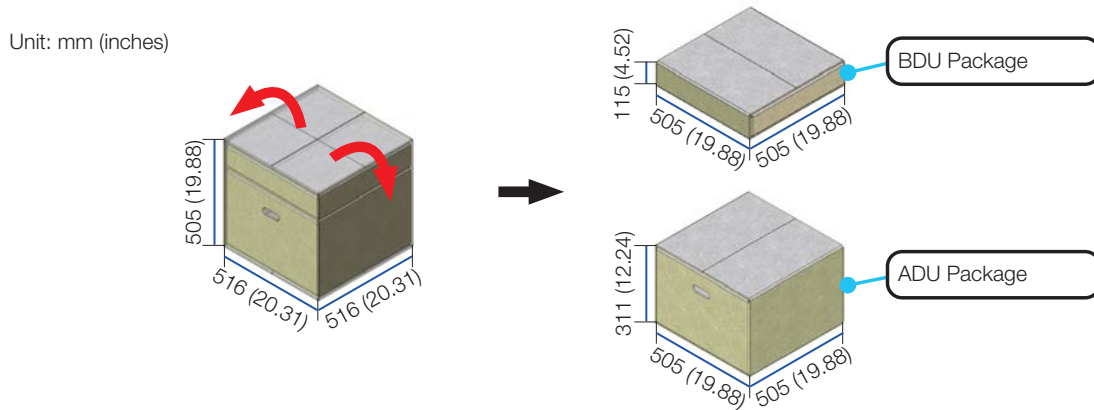

1. Remove the top cover and take out the BDU package including a Quick Installation Guide, a BDU Unit, a Wi-Fi Antenna, a DC Power Cable, an Ethernet Cable, a BDU Bolt Kit, and a Terminal Block. The 19-inch Rack Mount Kit (Optional) and AC-DC Power can be purchased separately.

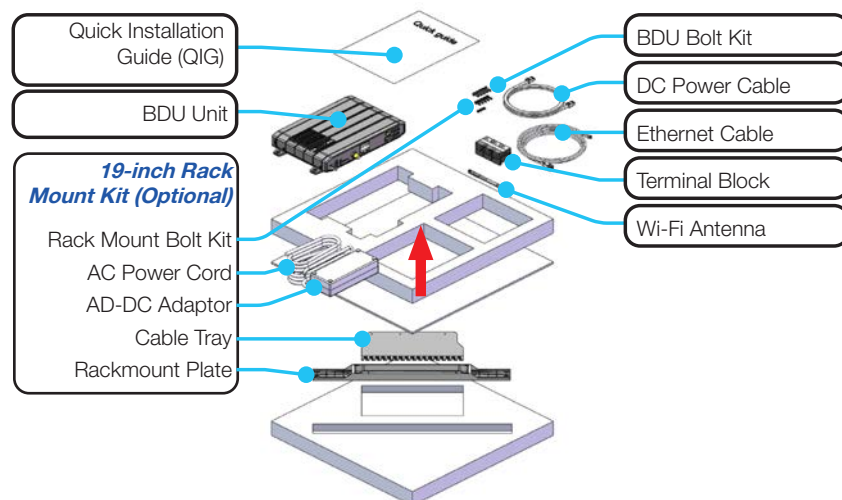


2. Take out the ADU package including an Antenna Mounting Template, an ADU Bolt Kit, an Antenna RF Cable, and an ADU Unit.

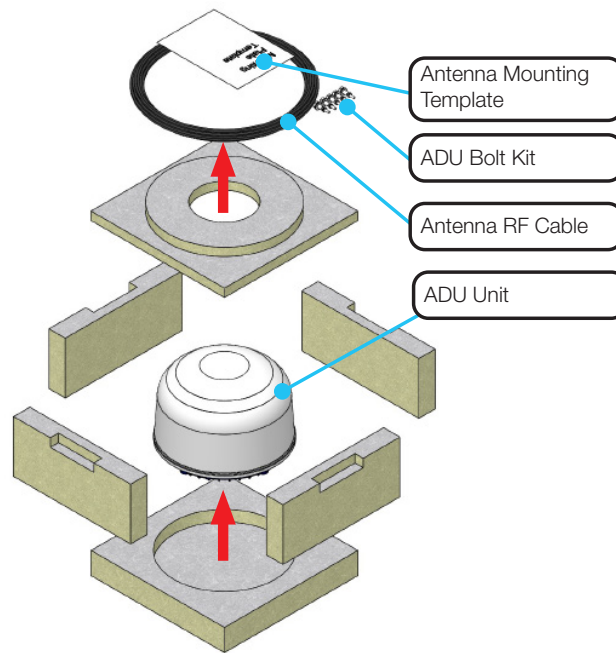


4.4.2 Unpacking SDT Package

Follow the steps for easy and safe unpacking. The SDT package consists of two sub-packages: an SDT Package and a Handset Package.


Unit: mm (inches)

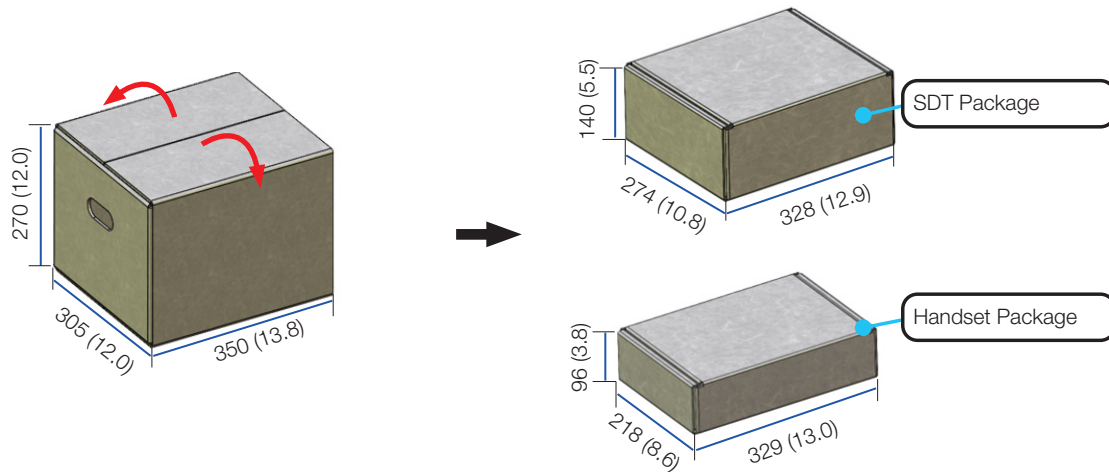

1. Open the package and take out the SDT package, which includes bracket mounting knobs (2 ea), an SDT Unit, a 7-inch bracket, an Ethernet cable, and a 12-pin cable.

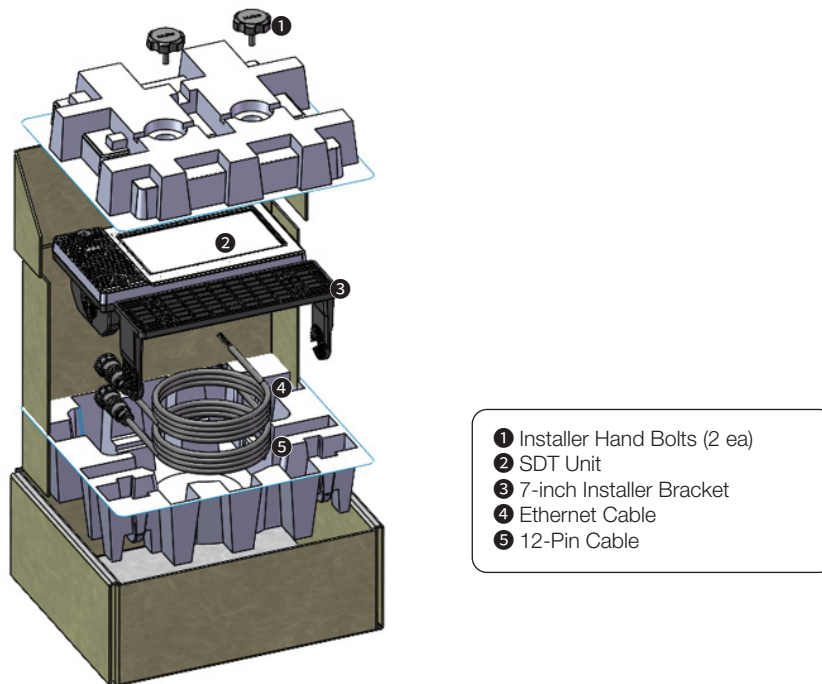

2. Open the package and take out the handset package, which includes a handset bracket and a Handset Unit.

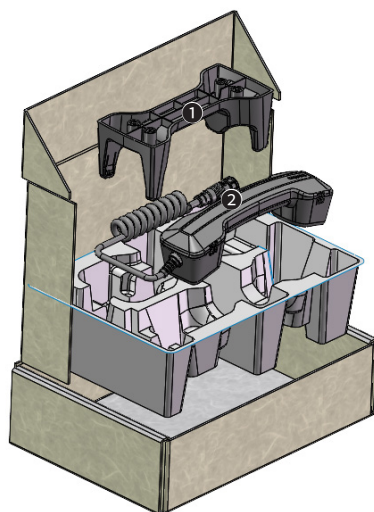

- ① Handset Bracket
- ② Handset Unit.

4.5 Procedure for upgrading an in-service C700 installation to C700 GMDSS

An in-service C700 terminal (comprising an ADU and BDU) can be upgraded to a GMDSS system. Refer to the Intellian C700 GMDSS Declaration of Conformity and the Module B and Module D Type Certificates for details on the regulatory approval of this upgrade.

The process for completing an in-service upgrade of a standalone system to a GMDSS compliant installation is:

1. Assess the installation for compliance against the GMDSS requirements (refer to Section 4, 5, 6 of this document and associated regulations) and modify if required
2. Affix the new RF Hazard label to the ADU on the opposite side to the existing label
3. Update the software to version V3.0.1 (or later if available)/
4. Replace the existing SIM card with new GMDSS SIM
5. Complete installation of SDT and handset (mandatory) and desired accessories (optional), and commission the system following the normal process (refer to section 7 and later of this document)

4.5.1 Assessing an existing installation

An existing installation must be assessed against the requirements and recommendations contained within this document, alongside any other relevant regulations. In particular, the ADU installation should be assessed against the guidelines prescribed in section 4 of- this document.

The existing installation may need to be modified if it does not meet the more stringent requirements necessary for forming part of a compliant GMDSS system.

This process must be completed by a person trained in the installation of the Intellian C700 GMDSS system.

4.5.2 New RF Hazard Label

A new RF hazard label must be affixed to the ADU for compliance to the GMDSS regulations. Specifically, the new label prescribes microwave hazard safe distances at three radiation intensities (10, 25 & 100 W/m²)

Existing Label	New Label
	

The new RF hazard label should be applied on the opposite side of the radome to the existing label. Ensure the surface is clean and dry before affixing the new label.

4.5.3 Software Update

The standalone software must be upgraded to support GMDSS usage. The lowest version to be used is the C700 unified binary V3.0.1 (containing BDU version V3.0.1 and ADU version 1.0.2). Please refer to Intellian technical support or your service provider to obtain the latest version of the software.

The procedure for updating the software to support GMDSS usage is as follows:

- Step 1. Connect the laptop and the BDU using the Ethernet cable. Ensure that the BDU is not connected to the SDT.
- Step 2. Login to the Web UI in the BDU with the proper ID/PW from the laptop.
- Step 3. Check (on the dashboard) what the current BDU software version is
- Step 4. If the existing software of the BDU is V2.0.1, then go to Step 9,
If the existing software of the BDU is V2.0.0, then go to Step 7,
If the existing software of the BDU is V1.0.12 or earlier, then go to Step 5.
- Step 5. Start the upgrade under the Web UI menu, TOOLS → Software Upgrade, with the new SW package binary of V2.0.0 from the laptop.
- Step 6. After reboot completion, make sure the SW binary version is correctly changed to V2.0.0 in the Web page.
- Step 7. Start the upgrade under the Web UI menu, TOOLS → Software Upgrade, with the new SW package binary of V2.0.1 from the laptop.
- Step 8. After reboot completion, make sure the SW binary version is correctly changed to V2.0.1 in the Web page.
- Step 9. Start the upgrade under the Web UI menu, TOOLS → Software Upgrade, with the new SW package binary of V3.0.1 from the laptop.
- Step 10. After reboot completion, make sure the SW binary version is correctly changed to V3.0.1 in the Web page.
- Step 11. Power off the BDU.
- Step 12. Connect the BDU to the SDT with the Ethernet cable, assuming the all GMDSS devices are connected correctly.
- Step 13. Turn on the PSU (to power the SDT and the BDU at the same time)
- Step 14. Do the Intellian GMDSS installation wizard from the SDT LCD screen.

For the detailed description for SW upgrade in the C700 (Step #1 - #10 above), see the C700 User Guide, chapter 8.2 (accessing Web page) and chapter 8.9.1 (Software upgrade via Web UI)

For the detailed description for the GMDSS installation (Step #12 - #13 above), see the C700 GMDSS Installation Guide (this document) Chapter 7 (Installing the SDT) and Chapter 9 (Operating Install Wizard)

4.5.4 SIM card

The SIM card must be replaced with a new SIM capable of GMDSS operation. The new SIM will need to be provisioned for the terminal and vessel. Please contact your service provider and Iridium for support.

4.5.5 Installation of the SDT, accessories and GMDSS system commissioning

The installation of the SDT and handset (mandatory) and desired accessory units (optional) should be completed following Chapter 7 and later sections of this document. The system must be powered by the approved Intellian PSU180D power supply or a suitable alternative.

Chapter 5. Installing ADU

5.1 Antenna Dimensions

Before installing the antenna unit, confirm its height and diameter (see figure below). To protect the cable connectors on the bottom of radome, the antenna is shipped from the factory with protective stickers on the Inner Holes and protective covers on the Outer Holes .

Unit: mm (inches)

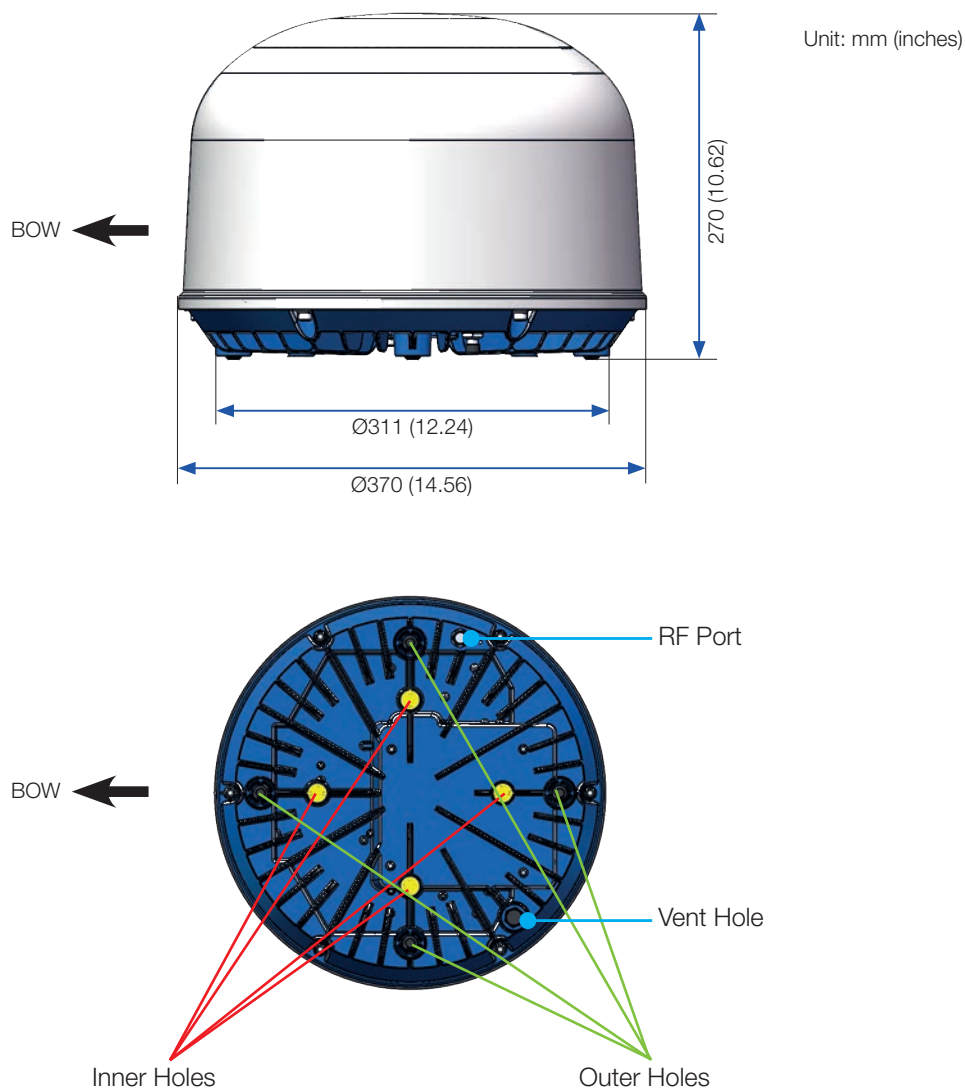


Figure 2: Antenna Dimensions

5.2 ADU Mounting Hole Pattern

Use the supplied mounting template when drilling mounting holes on the mast. The hole placement for the antenna must match the mounting hole pattern on the template.

The lower radome has two types of industry-standard mounting holes, each with four mounting points. This hole pattern is compatible with other companies' mounting holes. Select one of the two mounting types to secure the antenna to the desired mounting surface.

- **C700 Outer Common Holes:** Mount the antenna using '**C700 Outer Common Holes**' (with M6 Bolts). Intellian offers the Antenna Pole Mount Kit (separate purchase) that uses C700 Outer Common Holes (with M6 Bolts) to mount the antenna on a pole.



WARNING

When reusing an existing mast, make sure the location of the holes on the mast correspond to the hole locations and sizes printed on the mounting template.


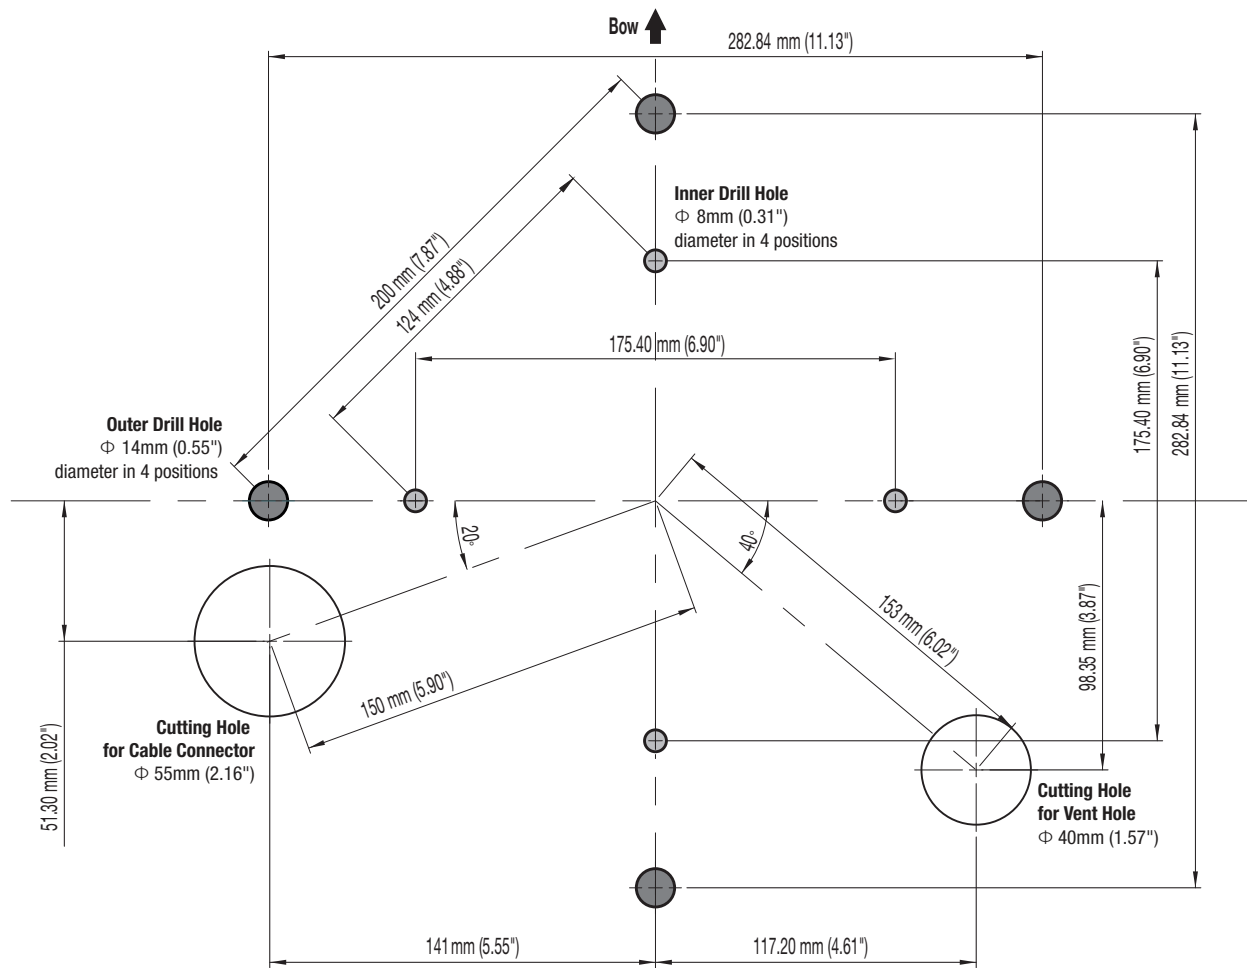


Figure 3: ADU Mounting Hole Pattern

5.3 Mast Designing (Installation Example)

The installation mast must be robust enough to prevent flecion, vibration, and sway when an external force is exerted on the mast with antenna and radome attached. Intellian strongly recommends installing the antenna less than 1200mm (47") above the deck. The flange thickness must be at least 8 mm. Refer to the following mast drawing for more details.

Option 1. When Mounting Antenna using Inner Holes (with M6 Bolts)

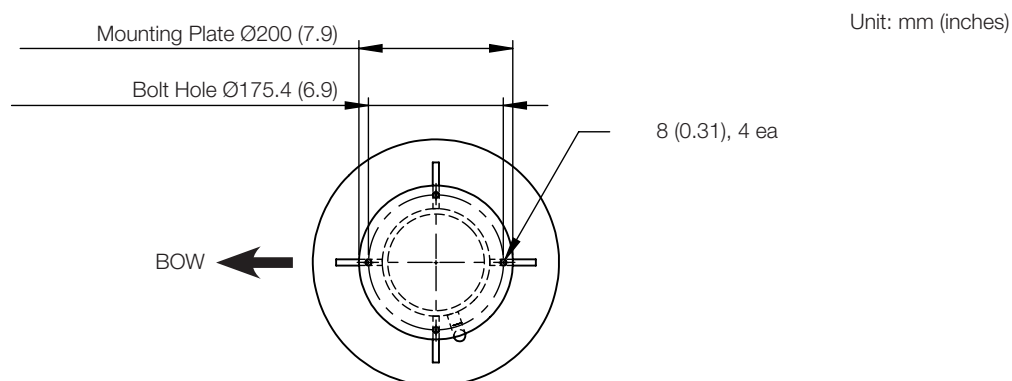

* **NOTE:** There is no need to install gusset at the top end of the mast when using Inner Holes.

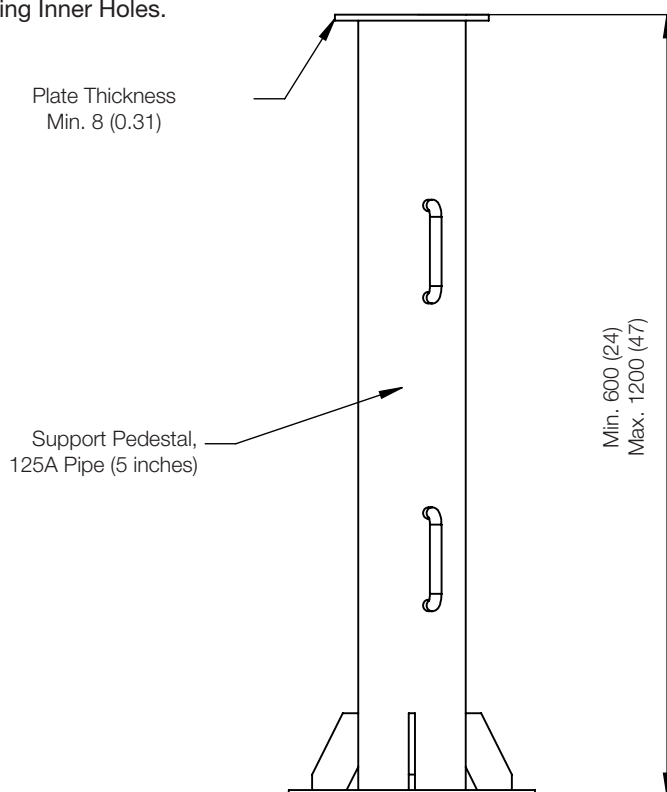


Figure 4: Recommended Mast Design using Inner Holes (with M6 Bolts)

Option 2. When Mounting Antenna using Outer Holes (with M10 Bolts)

Unit: mm (inches)

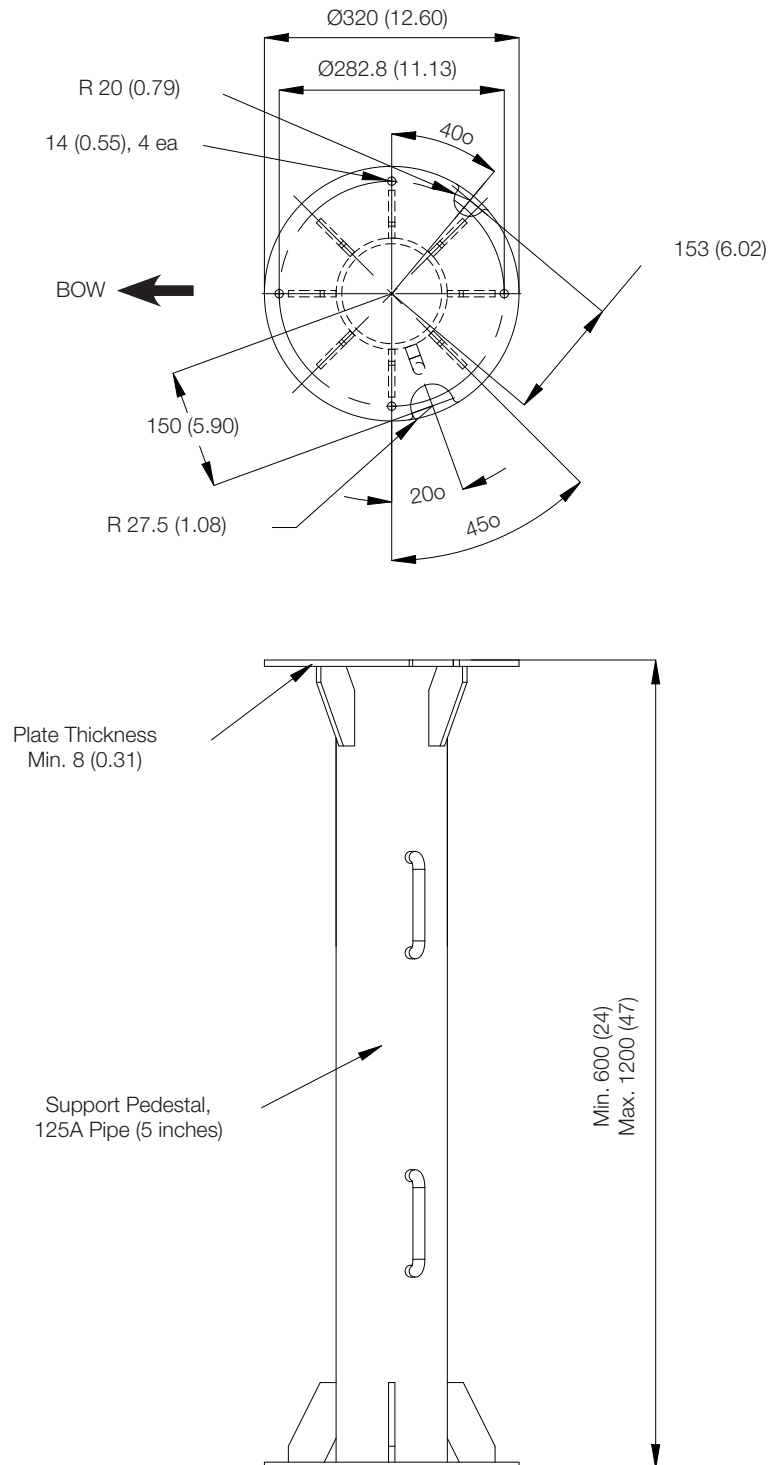


Figure 5: Recommended Mast Design using Outer Holes (with M10 Bolts)

5.4 Mounting Antenna

The lower radome has two types of industry-standard mounting holes, each with four mounting points. Select one of the two mounting types to secure the antenna to the desired mounting surface. Bring the provided Antenna Mounting Template and the ADU Bolt Kit from the ADU package. Create the appropriate hole pattern in the desired mounting surface for the chosen mounting bolts type.

5.4.1 Mounting Antenna using Inner Holes (with M6 Bolts)

First, remove the protective stickers on the Inner Holes. Check the position of **A** the antenna's RF port and BOW direction. Lift the antenna above the mounting surface using hands and carefully put the antenna down in place. Before assembling bolts, apply Loctite #263 to the bolt's threads to ensure the bolts are fastened firmly. Insert **B** the bolts and washers from under the mast into the radome then fasten them to the nuts assembled inside the radome using the torque wrench.

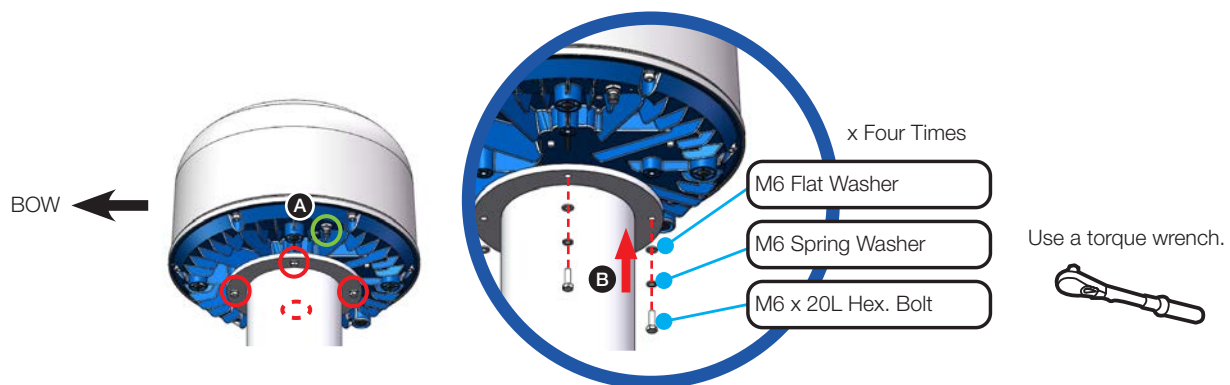


Figure 6: Mounting Antenna using Inner Holes (with M6 Bolts)

5.4.2 Mounting Antenna using Outer Holes (with M10 Bolts)

First, remove the protective covers on the Outer Holes. Check the position of **A** the antenna's RF port and BOW direction. When placing the antenna on the mounting surface, be careful of the direction of the cutting holes. Lift the antenna above the mounting surface using hands and carefully put the antenna down in place. Before assembling bolts, apply Loctite #263 to the bolt's threads to ensure the bolts are fastened firmly. Insert **B** the bolts and washers from under the mast into the radome then fasten them to the nuts assembled inside the radome using the torque wrench.

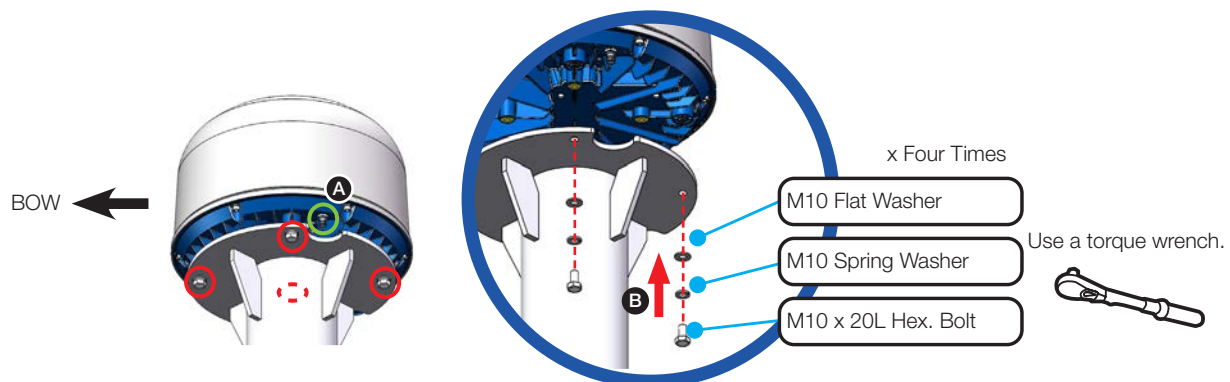


Figure 7: Mounting Antenna using Outer Holes (with M10 Bolts)

5.4.3 Mounting Antenna on Pole (Optional)

Intellian offers the Antenna Pole Mount Kit (separate purchase) to mount the antenna on the pole. The kit is designed to work on the 40A pole. The kit has mounting holes that match the inner hole with M6 bolts on the bottom of the antenna.

Name	Diameter (inch)	External Diameter (mm)
40A	1½	48.6

- When mounting antenna on the 40A pole, the 40A pole bushing needs to be installed inside pole tube additionally. **A** The one hole of the pole tube must be aligned with the BOW direction. Place the 40A pole bushing inside pole tube, then tighten them on the top end of the 40A pole using bolts. Before assembling bolts, apply Loctite #263 to the bolt's threads to ensure the bolts are fastened firmly.

*The pole tube Inner Diameter is Ø52 mm.

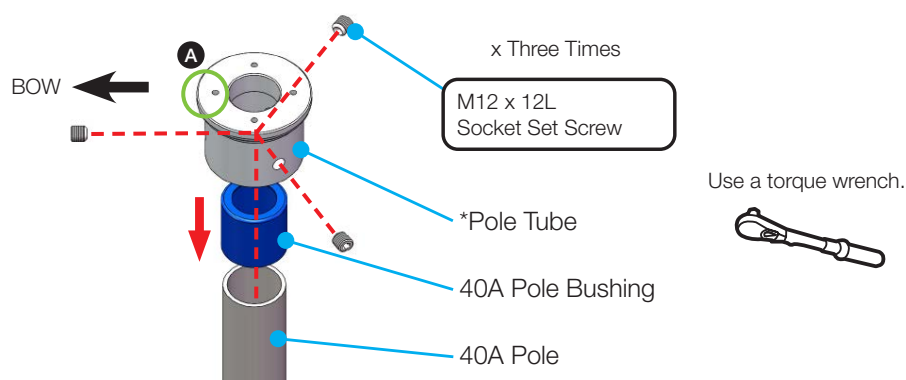


Figure 8: Installing 40A Pole Bushing inside Pole Tube

- A** The end of one leg of the pole bracket must be aligned with the BOW direction. Place the pole bracket onto the pole tube then tighten them using bolts. Before assembling bolts, apply Loctite #263 to the bolt's threads to ensure the bolts are fastened firmly.

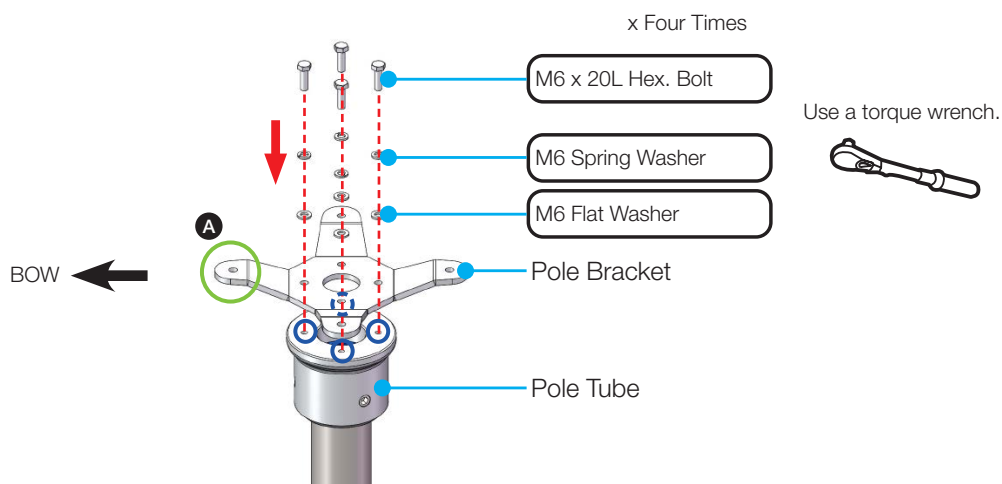


Figure 9: Installing Pole Bracket

- Place the antenna on the pole-mounted bracket then tighten them using bolts. Before assembling bolts, apply Loctite #263 to the bolt's threads to ensure the bolts are fastened firmly.

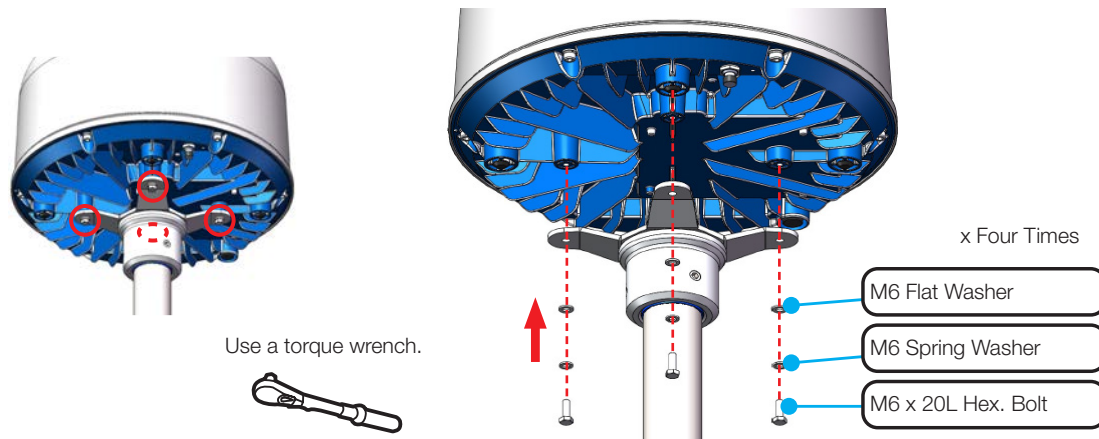


Figure 10: Mounting Antenna on Pole Mounted Bracket

5.5 Vent Hole

In some weather conditions, there may occur condensation and moisture inside the ADU. The vent hole is designed to allow easy air exchange and thus ensures that the enclosed area remains dry, and prevent water condensation. There is no need to open the vent hole assembled at the factory.

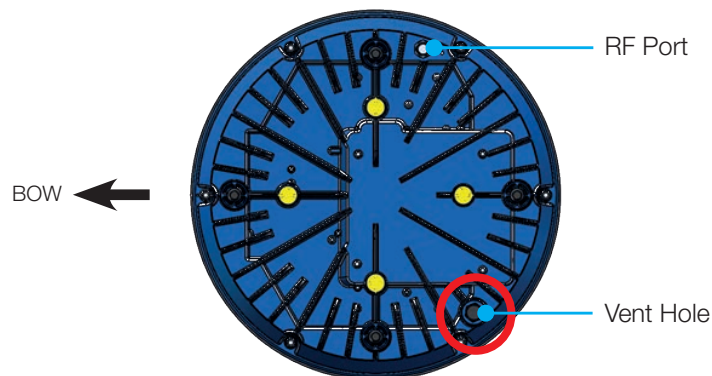


Figure 11: Vent Hole

5.6 Connecting Antenna RF Cable

The cable must be routed from the antenna and through various areas of the ship to end up at the Below Deck Unit. When pulling the cables in place, avoid sharp bends, kinking, and excessive force. After placement, seal the deck penetration gland and tie the cable securely in place. The cable bracket must be installed on the mast to fix the relevant cable. The gooseneck must be installed on the side of the mast to protect the relevant cable against water. The supplied RF cable connector has the rubber grommet to protect inside the ADU from any water.

1. The RF cable is connected to the **Antenna** port of the BDU. Route the RF cable from the gooseneck placed on the deck to the antenna.
2. Maintain a cable length at least 2 m considering service loops when routing the cable on the mast. Connect the RF cable to the RF port on the bottom of radome, adjust the length, and fix the cable position along the routing path using cable ties on the cable brackets. Since the cable connector at the bottom of radome is waterproofed at the factory, there is no need to work waterproofing.

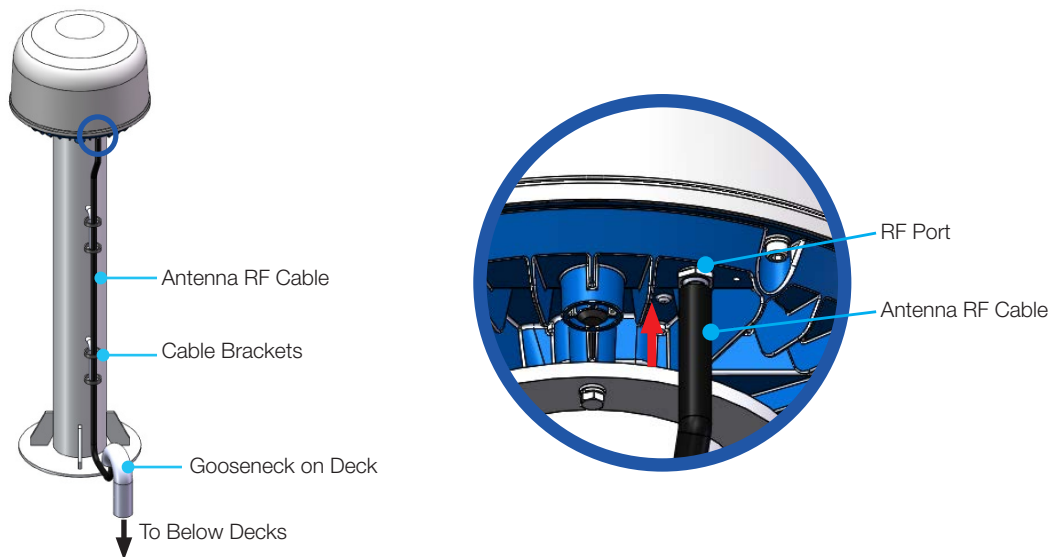


Figure 12: Connecting Antenna RF Cable using Inner Holes (with M6 Bolts)

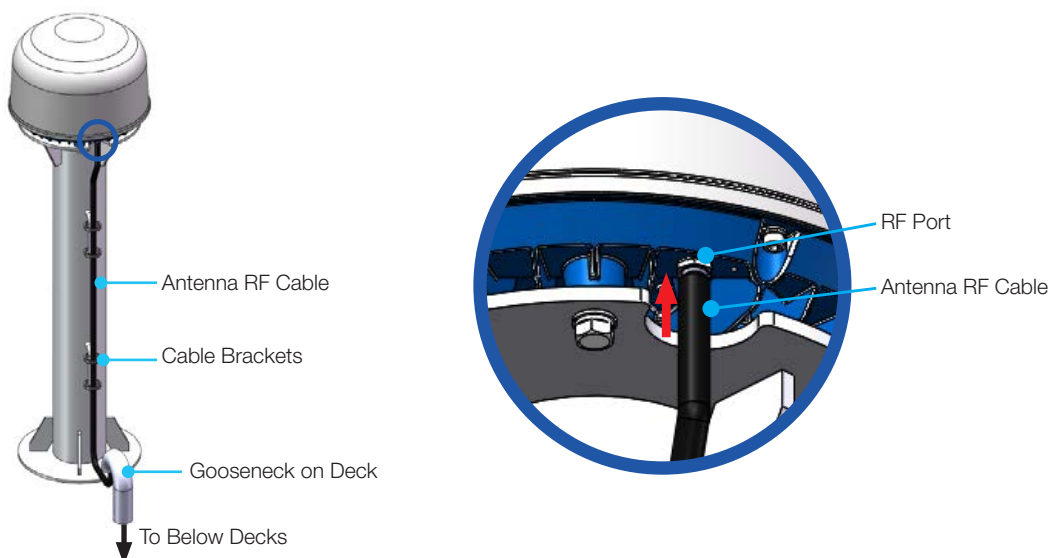



Figure 13: Connecting Antenna RF Cable using Outer Holes (with M10 Bolts)

5.7 Important Notice of Waterproofing Connector


5.7.1 Installing the Cold Shrink Tube on the Cable

To prevent cable damage, use the supplied cold shrink tube when wrapping the cable and connector by following the steps below.


1. Ensure there are no sharp or acute edges on the cable part where the cold shrink tube is to be installed.
2. Be careful not to damage the cold shrink tube with sharp objects when taking it out of the PE bag.
3. Place the shrink wrap tube over the end of the antenna cable with the arrow pointing point away from the ADU.
4. Plug the cable connector into the RF port on the antenna

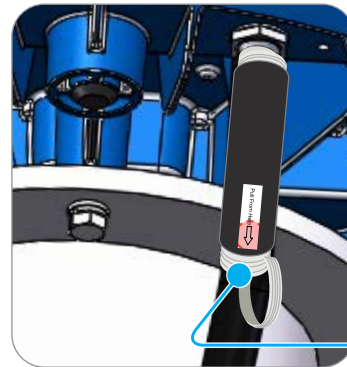


5. Pull the plastic strap downward lightly, aligning the edge of the outer tube with the inside plastic core.

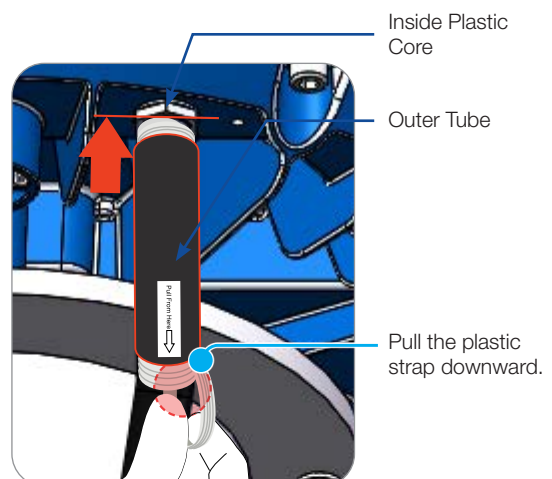

6. Leave space between the cable connector and the end edge of the tube (a maximum of 6mm).

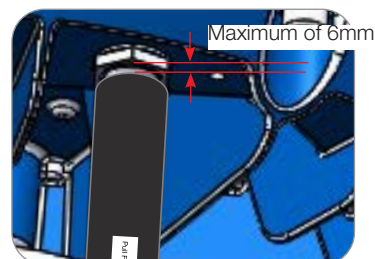

7. Pull the plastic strap downward slowly until the cable and connector are wrapped.

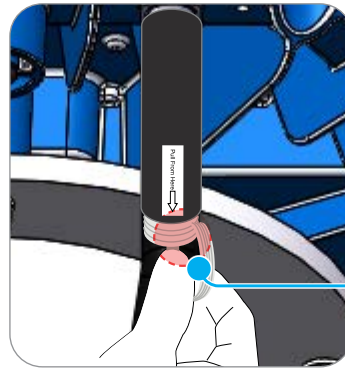

Pull the plastic strap downward.

8. After the tube shrinkage is complete, check whether the installed tube has any external damage or lifting. If there is damage or lifting, wrap the cable with rubber or tape.



5.7.2 Installing Waterproof Tape on the Cable (Optional)

During antenna installation, make sure that, once the cable is connected to the antenna, proper waterproofing of the connector is done with self-amalgamating tape.

If you need any assistance, please contact Intellian Technical Support (support@intelliantech.com).

Outline of Taping

Self-amalgamating tape comes with a protective plastic peel-away layer that allows the tape to be rolled and shipped. To waterproof a connector, first peel away a portion of this protective plastic layer, and then start wrapping the tape around the cable to be protected.



Procedure

1. Connect the cable to the connector where it is to be fully secured.




CAUTION

- DO NOT over-tighten the connector, nuts, or screws when mounting the antenna to avoid damage.
- DO NOT leave any cables loosened or non-fixed, especially those installed outside of the antenna.

2. Apply tape over the connector.

It is best practice is to wrap the tape over itself by 50%. This means that, once you wrap your first layer, your second layer should overlap half of the first layer, and so on. This ensures that you get a strong bond between the different layers of tape by having them properly adhere to one another.

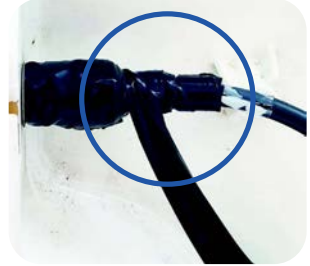

3. Ensure that the entire RF connector is taped up as shown in the picture on the right.



WARNING

- Note that you cannot use ordinary electrical tape to waterproof the RF connector. Only self-amalgamating tape is able to waterproof the connector properly.
- Failure to properly wrap cabling will result in rust and corrosion to the cable and its connector, and this might end up damaging the antenna.

Chapter 6. Installing BDU

The Intellian offers two versions of BDU installation, one can be installed to the surface of the wall or desktop, and one can be installed to the 19-inch rack frame using the BDU Rack Mount Kit (separate purchase).

6.1 Selecting BDU Installation Site

The BDU should be installed below the deck in a location that is dry, cool, and ventilated. The front panel of BDU should be easily accessible to users.

6.2 BDU Dimensions

Confirm the dimensions of the BDU before installing it.

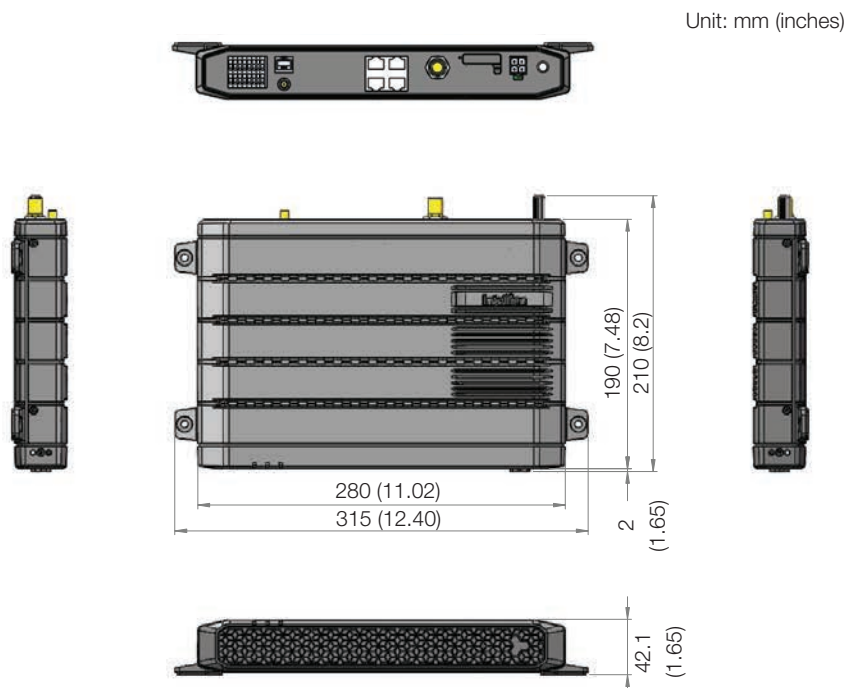


Figure 14: BDU Dimensions (Direct Mounting Type)

Unit: mm (inches)

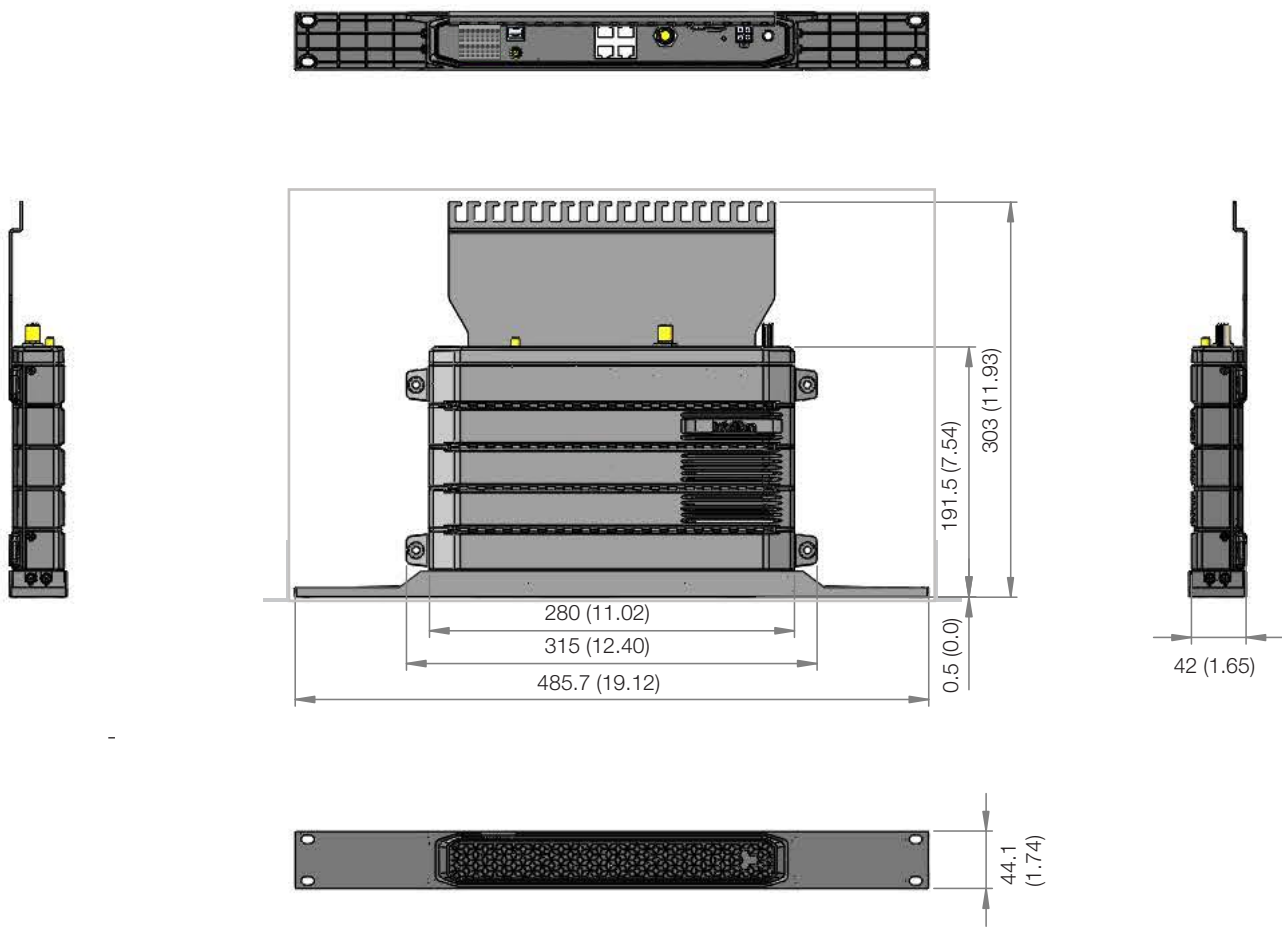


Figure 15: BDU dimensions (installed using 19-inch BDU Rack Mount Kit)

6.3 BDU Mounting Template

The BDU mounting holes must be in the exact same place as shown in the provided mounting template below.

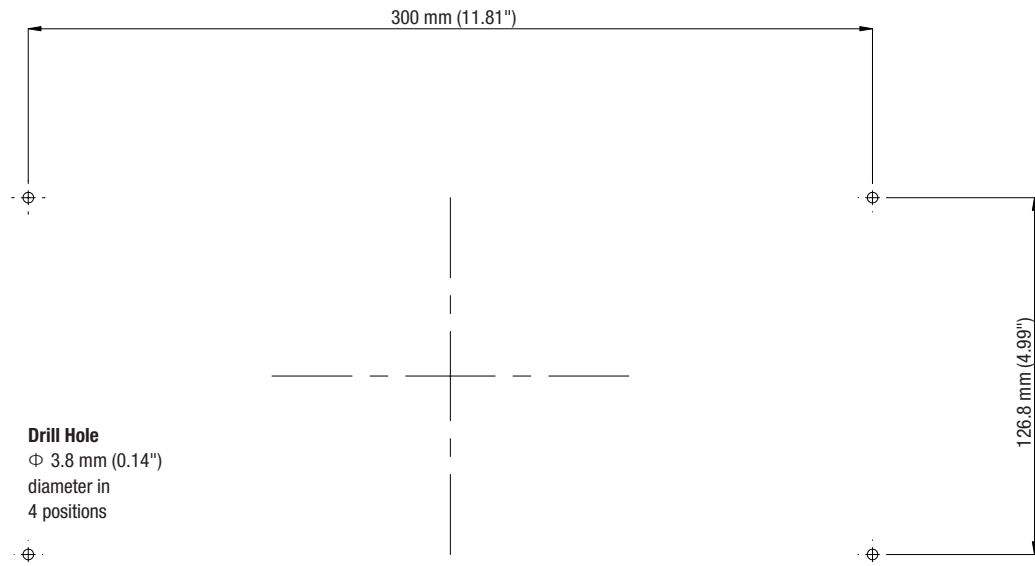


Figure 16: BDU Mounting Template

6.4 Mounting BDU

The BDU can be mounted in any orientation but for best performance, Intellian recommends that it is mounted horizontally.



WARNING

Ensure that the cables connected to the BDU are long enough to prevent damage when the BDU is pulled out from the rack.

6.4.1 Direct Mounting Type

The BDU is designed with four corner mounting holes to make direct mounting on the wall or desktop easily.

1. Mount the BDU on the mounting surface by inserting four screws through the mounting holes.

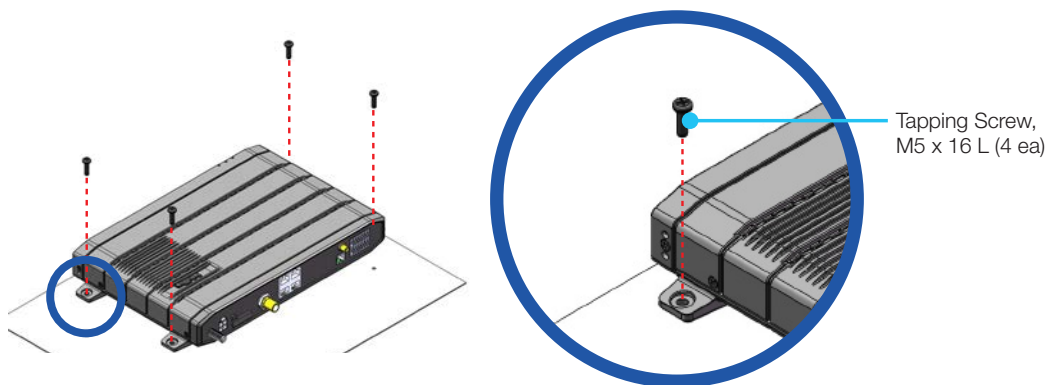


Figure 17: Direct Mounting of BDU

6.4.2 19" Rack Mounting Type (Optional)

Intellian offers the BDU Rack Mount Kit (separate purchase) including the rackmount plate and cable tray to mount the BDU in a 19-inch rack. Intellian recommends using a 19-inch rack shelf (not supplied) to support the BDU in the rack.

1. Using the Screws supplied, attach the cable tray to the BDU.

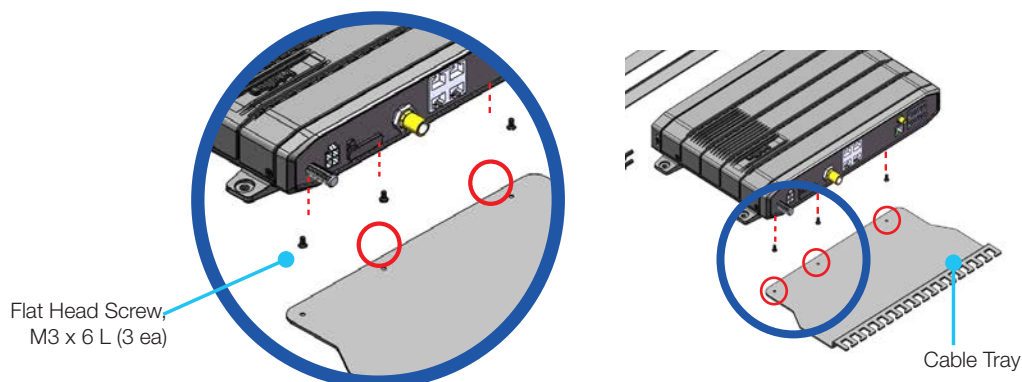


Figure 18: Attach Cable Tray to BDU

2. Using the Screws supplied, attach the rackmount plate to the BDU.

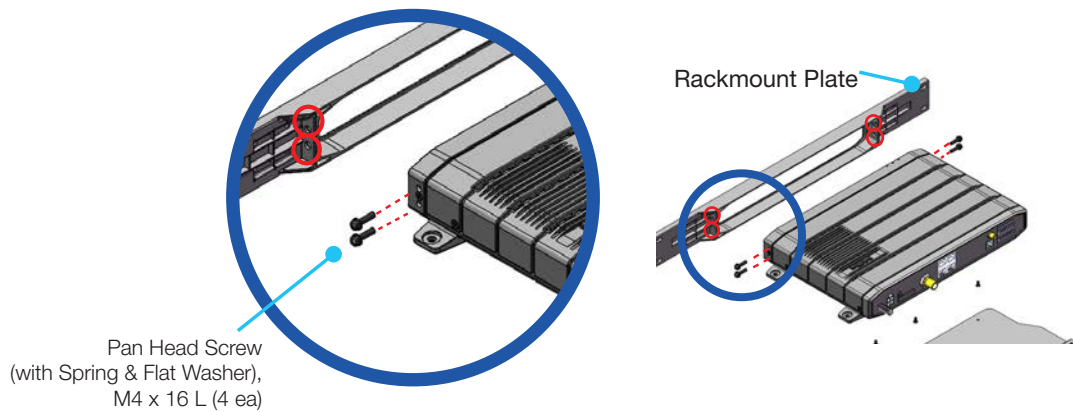


Figure 19: Attach Rackmount Plate to BDU

3. Slide the BDU assembly into a 19" rack frame. Mount the screws in each side through the holes in the front and fasten the screws to the rack. Make sure that the BDU assembly is mounted securely according to the requirements for your 19" rack. In case of using a provided AC-DC adapter for AC power connection, mount it securely in a safe place. After connecting all cables, fix the cables on the end of the cable tray using cable ties.


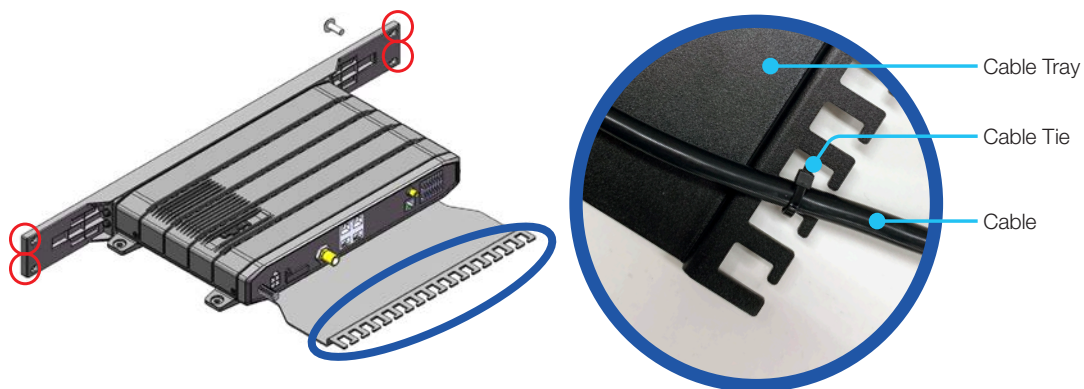


Figure 20: Mount BDU Assembly into 19" Rack


6.5 Antenna System Configuration

The basic system consists of one antenna and one BDU. Separate purchase of standard items including POTS phones, SIP phones, computers, etc. may be needed. A modem can be connected to the WAN port for data at least-cost routing operations. Voice calls are always routed through the Iridium system unless using a data call application. For your satellite communication system to work properly, connect the cables according to the configuration below.

C700 Antenna System with GMDSS System

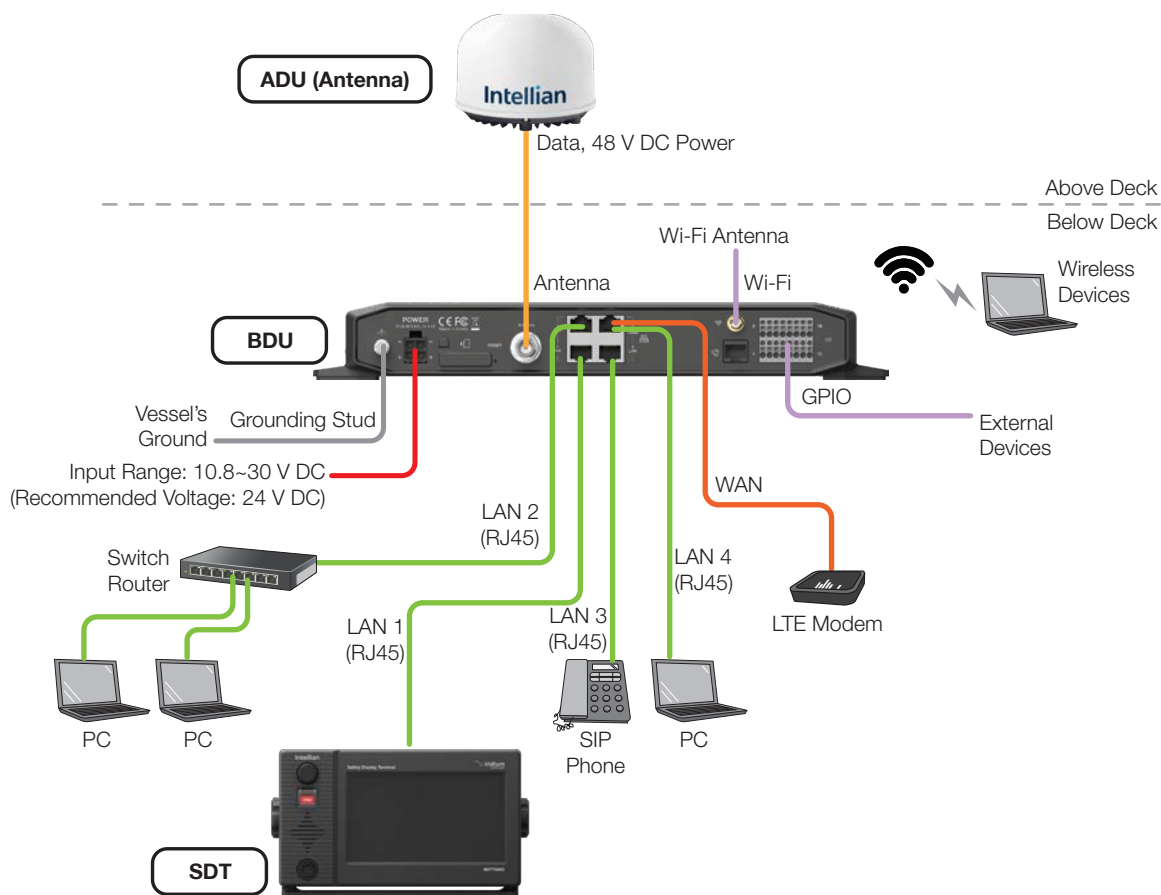

C700 Antenna System without GMDSS System

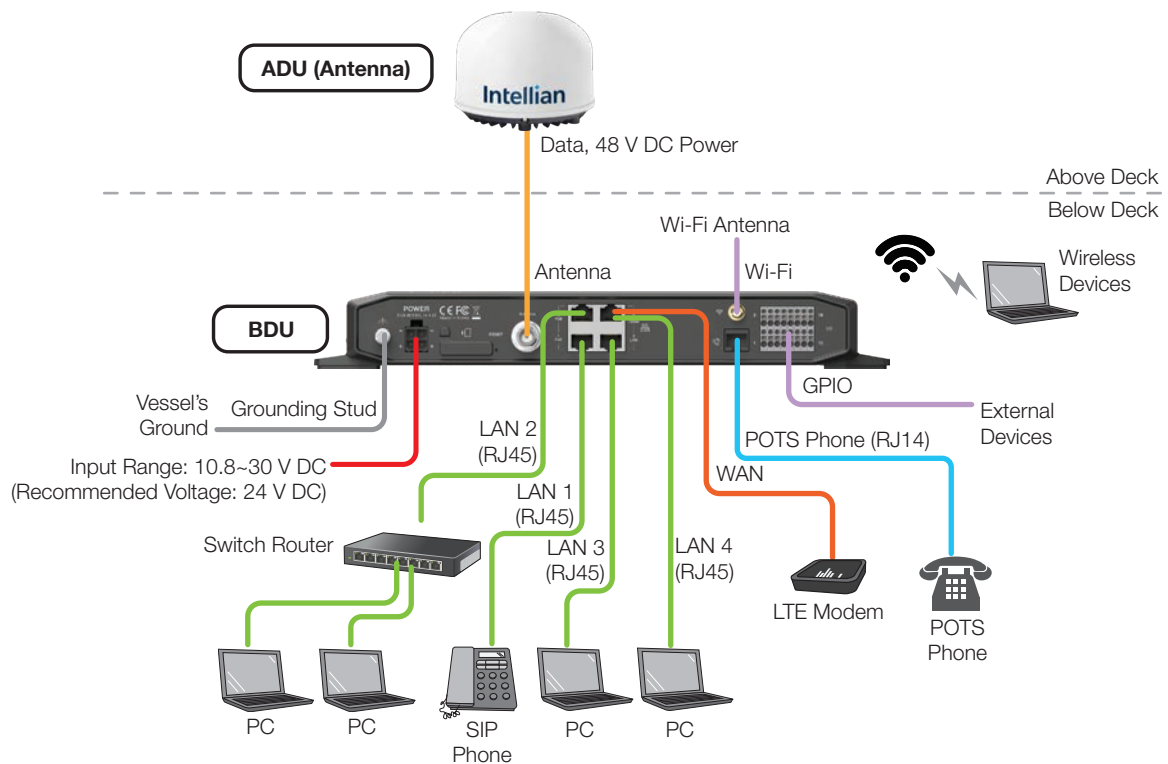

6.5.1 Data Sessions and Voice Calls


The System provides up to 3 high-quality voice calls, multiple data sessions, Wi-Fi, and supports up to 18 extensions (including 2 analog phones and 16 sip phones).

The BDU communicates directly with SIP phones on any of the 4 LAN user ports (LAN 1, 2, 3, or 4). The SIP phones register directly to the SIP server in the BDU.

6.6 BDU Cable Connection

6.6.1 BDU Back Panel View

The following figure shows the BDU back panel connectors.

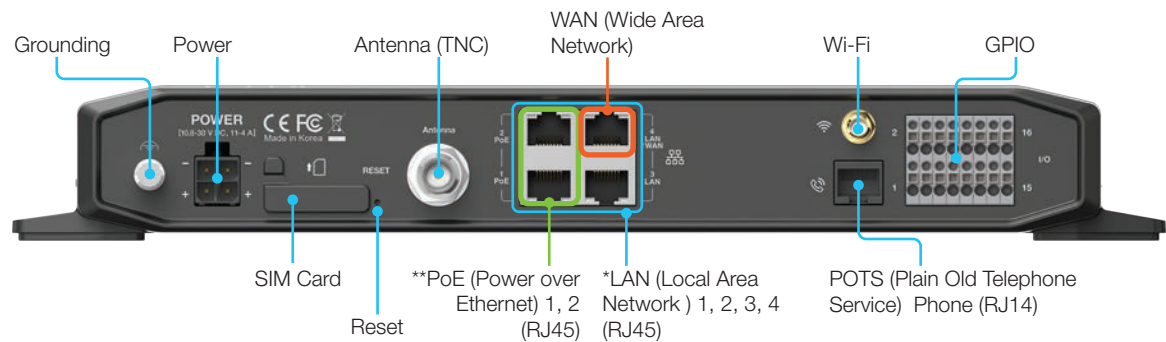

* All LAN ports are IEEE 802.3 compliant.


** Each PoE Port is designed to use 7.5W power. When using over 12.5W in one port, the PoE function will be stopped in port 1 or port 2.

Figure 21: BDU Back Panel View

6.6.2 BDU Connector Pinout Guide

The BDU connector pins and their corresponding descriptions are shown in the following figures and tables.

Power Connector (DC Power)




4 Contact Power Plug Male

Pin	Signal
1	+
2	+
3	-
4	-

Figure 22: DC Power Connector Pinout


Antenna Connector (TNC)

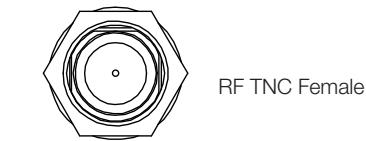

Conductor	Function
Inner	Data, 48 V DC Power
Outer	Ground

Figure 23: Antenna Connector (TNC) Pinout

LAN Connectors (1~4) (RJ45)

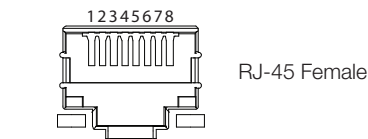

Pin	Signal
1	Tx+
2	Tx-
3	Rx+
4	N/C
5	N/C
6	Rx-
7	N/C
8	N/C

Figure 24: LAN Connector (RJ45) Pinout

POTS Phone Connector (RJ14)




Pin	Signal
1	N/C
2	T2+ (POTS Phone 2, no. 102)
3	R1- (POTS Phone 1, no. 101)
4	T1+ (POTS Phone 1, no. 101)
5	R2- (POTS Phone 2, no. 102)
6	N/C

Figure 25: POTS Phone Connector (RJ14 & 6P4C) Pinout

General Purpose Inputs/Outputs (GPIO) Connector

The BDU has a dedicated 16-pin connector to provide a GPIO (General Purpose Input/Output) interface to the external devices. All wires for the GPIO connector must use AWG 24 unscreened wire type.

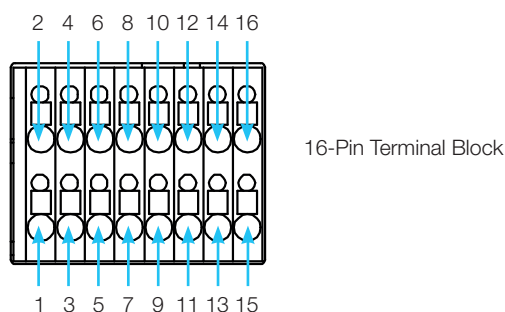


Pin	Signal	Explanation	Pin	Signal	Explanation
1	External Power Input	Power Input (DC 12 V ~ DC 24 V)	2	External Power Ground	Input/Output Ground
3	Input 1	• Satellite Data Prevention	4		
5	Input 2	• Force Prevent RF Activity	6		
7	N/A		8		
9	Output 1	• Incoming Call Alarm	10		
11	Output 2	• Data Connection Indication	12		
13	Output 3	• System Event Indication	14		
15	Remote Power On/Off +	Remote Control of BDU Power +	16	Remote Power On/Off -	Remote Control of BDU Power -

Figure 26: GPIO Connector Pinout

To use External GPIO, connect the external power (DC 12V ~ 24V). Refer to the External GPIO Block Diagram below.

External GPIO Block Diagram

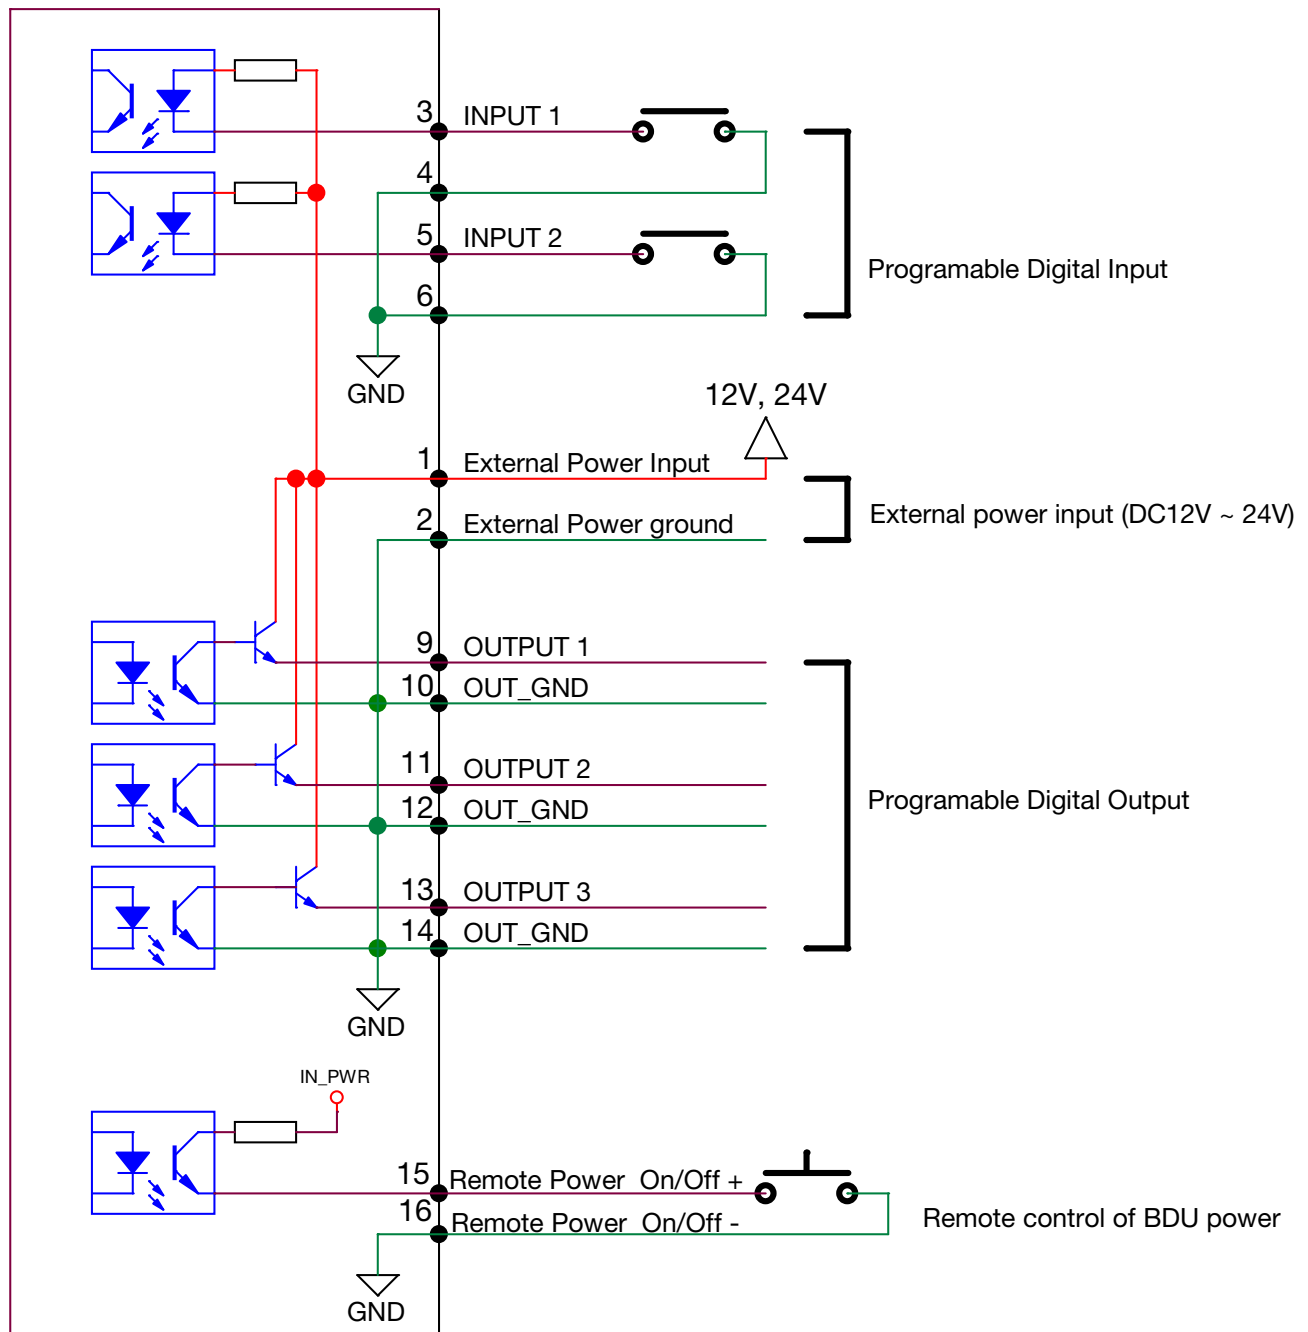

6.6.3 Connecting DC Power to BDU

You can supply DC power to the BDU in the following methods depending on the power supply available in the vessel. Intellian provides a DC Power Cable, an AC-DC Adapter* (optional), and a Terminal Block for the power connections.

* When the AC-DC adaptor is used the grounding can be connected between the Ground stud on the BDU and the vessel ground.
The spare part number is MC-0001 (AC-DC adaptor)

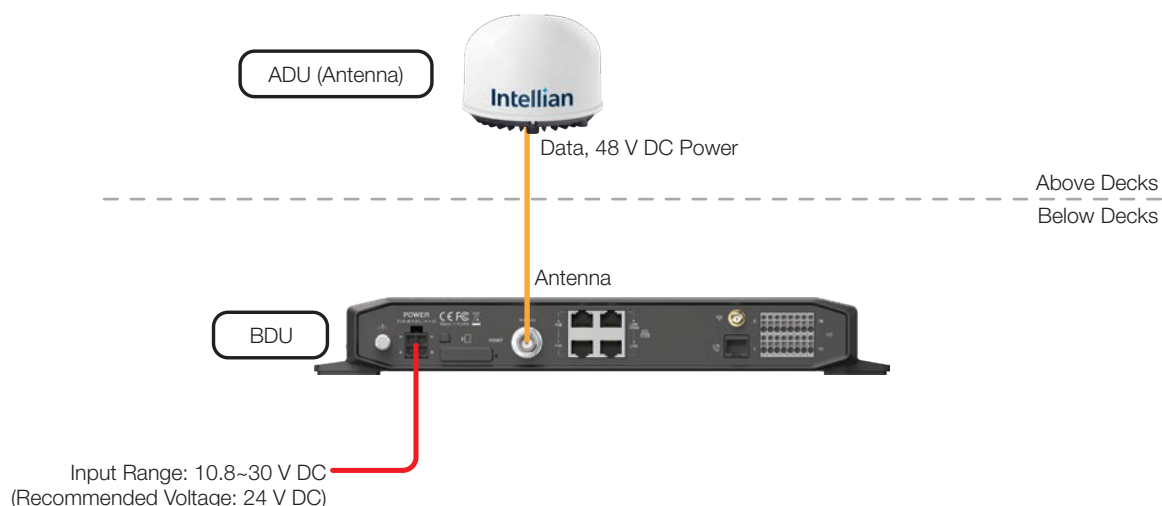


Figure 27: DC Power to BDU Connection

1. Connecting to Battery (default): Using the DC power cable (1 m), supply the DC power to the BDU from the battery. The power cable is installed with the Molex connector (P/No. 1716920204, Max. AWG 12). Use 1~2 m (3.28~6.56 ft) length wire for the power supply to prevent voltage drop. If you need an extended length of power cable, refer to the following table to choose a correct size cable. Check with your cable supplier for more information.

Cable Length	Maximum Wire Size	
	AWG	mm ²
5 m (16.40 ft)	13	2.62
10 m (32.80 ft)	11	4.17
20 m (65.61 ft)	9	6.63

BDU Power Input Range: 10.8~30 V DC

2. Connecting to AC Power Source (optional): Using the AC-DC adapter (110~220V Input, 24 V DC output) and power cord, supply the DC power to the BDU from the AC power source. (You can find the AC-DC adapter in the 19-inch Rack Mount Kit).



NOTE

To connect multiple power cables from the power source, use a Terminal Block (supplied). Refer to the following page "How to Use Terminal Block" for more details.

How to Use Terminal Block




WARNING

Turn off the power before installing the wire nut connector.

Intellian provides a 3-position double-row barrier terminal block as below.


Terminal Block: KH-6060-3P

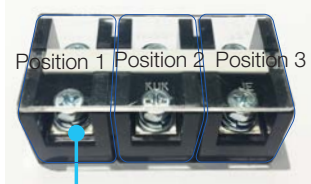

Barrier type terminal strip:
3 positions, 6 contacts


KH-6060-3P Specification	
Rated Voltage	600 V
Rated Current	60A (250 V)
Insulation Resistance	100M Ω min.
Dielectric Strength	2,500 VAC for 1min.
Wire	22 mm ²
Terminal Screw	M6

Terminal Blocks Dimension





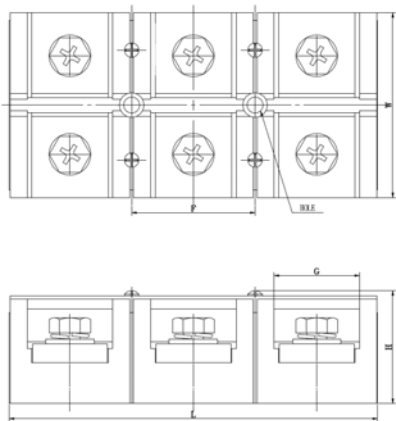


Rating/Pole	F(mm)	G(mm)	Hole($\varnothing$)	L(mm)	W(mm)	H(mm)	Weight
60A 3P	28	16	5.2	85	40	36	142 g

Wiring Lug Dimension

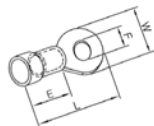

E	14.5 mm
F	Min. $\varnothing$ 6.1
W	Max. 16.8 mm
L	35.5 mm

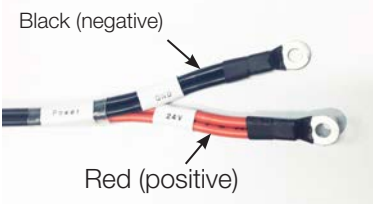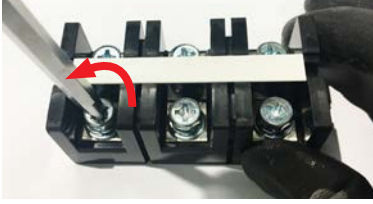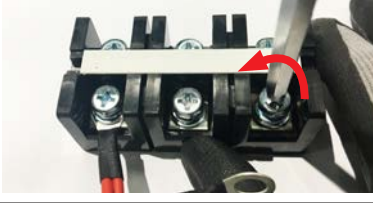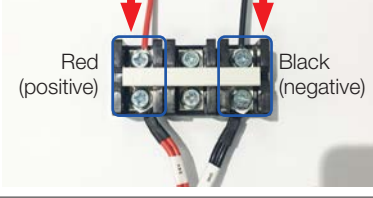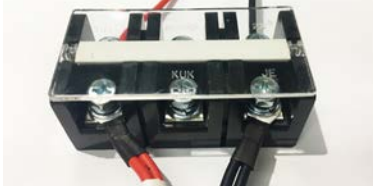	For the DC power wires, Red (positive) and Black (negative), you can connect each wire with other wires using the terminal block.
	1. Open the top cover of the terminal block.
	2. Unscrew the 1st position terminal using a Phillips screwdriver. Insert the ring connector of the Red (positive) wire to the terminal and tighten the screw back into the terminal.
	
	3. Unscrew the 3rd position terminal using a Phillips screwdriver. Insert the ring connector of the Black (negative) wire to the terminal and tighten the screw back into the terminal.
	
	4. Connect wires for distribution to the terminals on the opposite side of each connected wires. CAUTION: DO NOT switch positions of the Red (positive) and Black (negative) wires. Switching the polarity of power may damage the product.
	5. Close the top cover of the terminal block.

6.6.4 Connecting BDU to ADU (Antenna)

The model does not come with an Antenna RF Cable, and you will need to purchase it separately. Connect the **Antenna RF Cable** from the **Antenna** port on the back of the BDU to the RF port on the bottom of radome (Antenna).

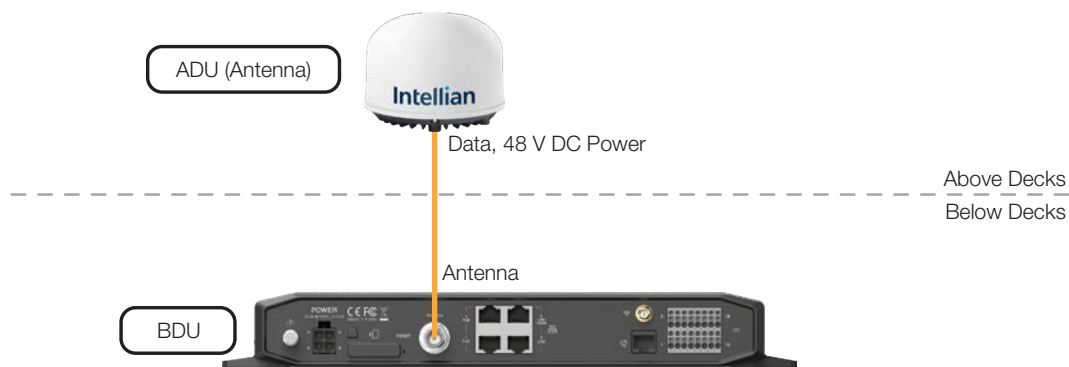


Figure 28: BDU to Antenna Cable Connection

6.6.5 Connecting BDU to Devices using LAN Port (RJ45)

Intellian provides the Ethernet Cable. Connect the **Ethernet Cable** from the **Port 1, Port 2, Port 3, or Port 4** on the back of the BDU to the **LAN** port on the devices such as SIP Phone or Computer. Only the **Port 1** and **Port 2** are LAN port includes Power over Ethernet (PoE).

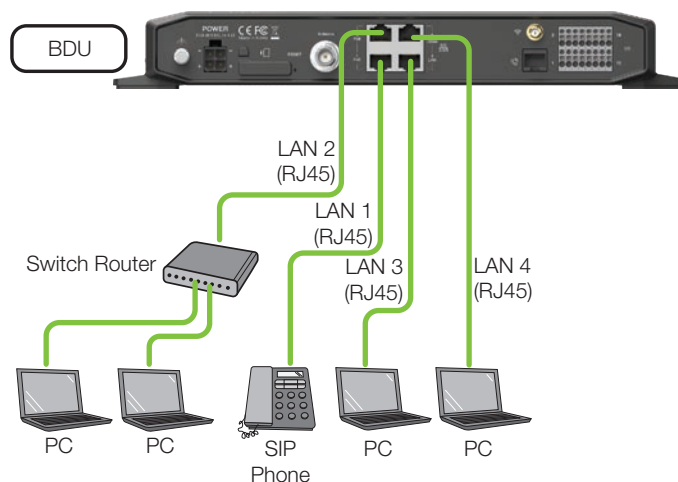


Figure 29: BDU to Devices Cable Connection using LAN Port (RJ45)

6.6.6 Connecting BDU to Device using WAN Port

Intellian provides the Ethernet Cable. Connect the **Ethernet Cable** from the **WAN port** on the back of the BDU to the **RJ-45 port** on the devices such as LTE modem.



Figure 30: BDU to Device Cable Connection using WAN Port

6.6.7 Connecting BDU to POTS Phone (RJ14)

Connect the standard phone cord (customer supplied) from the **POTS Phone port** on the back of the BDU to the **RJ-14 port** on the POTS phone as default.



Figure 31: BDU to POTS Phone (RJ14) Cable Connection

Up to 2 POTS Phones can be connected to the BDU using a RJ14 Cable Splitter (customer supplied). Using a RJ14 Cable Splitter, the two POTS phones can each have a separate phone line (not two phones using the same phone line). The POTS phone 1 (no. 101) is connected to a pair of Pin 3 (R1-) and Pin 4 (T1+) wires. The POTS phone 2 (no. 102) is connected to a pair of Pin 5 (R2-) and Pin 2 (T2+) wires.

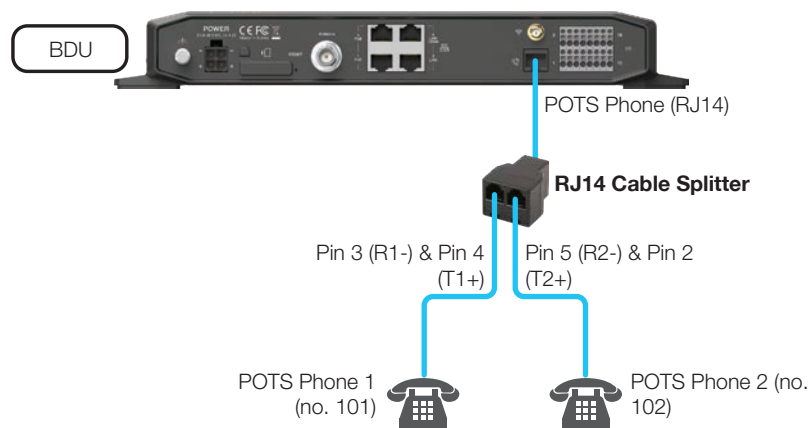


Figure 32: Using Cable Splitter with POTS Phones (RJ14)



NOTE

POTS phones can only be used when not supported to a GMDSS system.

6.6.8 Connecting BDU to External Devices

The BDU has a dedicated 16-pin connector to provide a GPIO (General Purpose Input/Output) interface to the external devices. All wires for the GPIO port must use AWG 24 unscreened wire type. Connect the end of these AWG 24 wires to the GPIO port's Pin A (point 1) and Pin B (point 2) respectively.



Figure 33: BDU to External Devices Connection

6.6.9 Connecting Wi-Fi Antenna to BDU

Intellian provides the Wi-Fi Antenna for Wi-Fi connection. Plug the **Wi-Fi Antenna** into the **Wi-Fi** port on the back of the BDU.

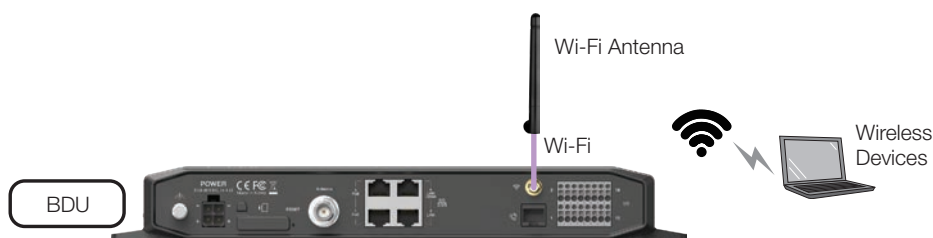


Figure 34: Wi-Fi Antenna to BDU Connection

6.6.10 Grounding Stud

The BDU should be grounded. Use a heavy ground cable (customer supplied) to connect the BDU to the vessel's ground during normal use. A safety grounding system is necessary to protect your radio hardware from lightning strikes and the build-up of static electricity. The grounding system must comply with the safety standards that apply in your country.


Ground the BDU using a heavy ground cable (not included) from the **Grounding Stud** of the BDU back panel to the vessel's ground to protect the system from unwanted surges and voltage differentials.



Figure 35: Grounding Stud Connection

6.6.11 Inserting SIM Card

The system requires a SIM card from the service provider to use the terminal and configure the settings of the BDU.

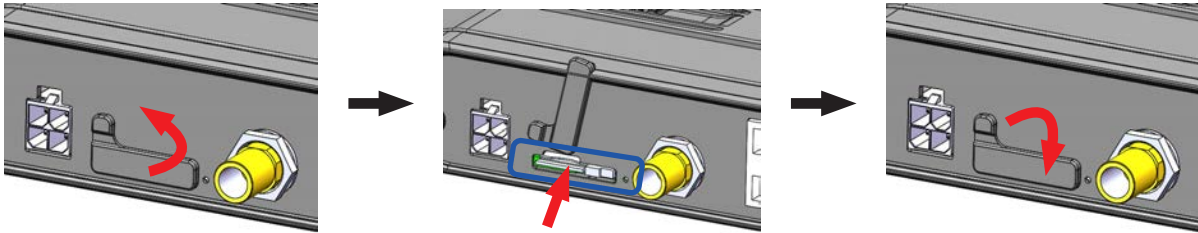

1. Find the SIM card slot on the BDU and open the cover.
2. Insert the SIM card into the slot until it clicks. Face the contact surface down when inserting it.
3. After the SIM Card is placed in the slot, close the cover.



NOTE

If the SIM card is not detected properly ("NO USIM" message is displayed on the dashboard), remove and re-insert the SIM card or turn the BDU power off and on again with the SIM card inserted.

6.7 DC Isolation Resistance

For some installations it is required that the power supply to the BDU is galvanically isolated from the vessel's power supply. Guidance for these installations is as follows:

When the terminal is connected to the vessel's AC distribution system, Intellian's AC/DC Adapter (Part No. MC-0001) provides the required galvanic isolation and has the correct DC termination to connect to the BDU. Use of other, non-Intellian, AC/DC Adapters is not recommended and voids the terminal's warranty.

When the terminal is connected to the vessel's DC distribution system (including installations that are covered by a battery back-up) a 3rd party galvanically isolated DC-DC converter is required. The Mastervolt DC Master 24/24-7 (Isolated) is a suitable DC-DC Converter for this purpose.

6.7.1 Grounding the system

We recommend using an Intellian's AC/DC Adapter or a galvanically isolated DC/DC converter to eliminate the risk of a current leak to the vessel's ground. Additionally, do not use the ground connection on the BDU.

Isolated AC/DC Power Supply

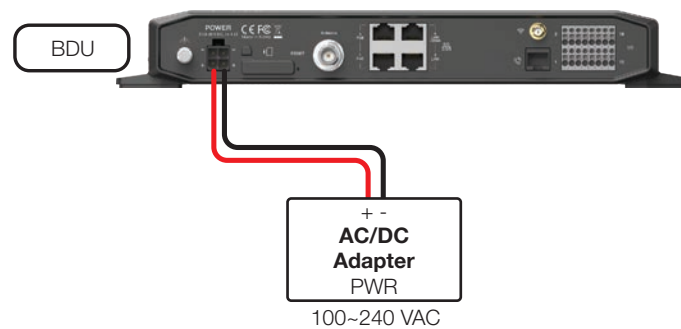


Figure 36: Isolated AC/DC Power Supply

Isolated DC/DC Power Supply

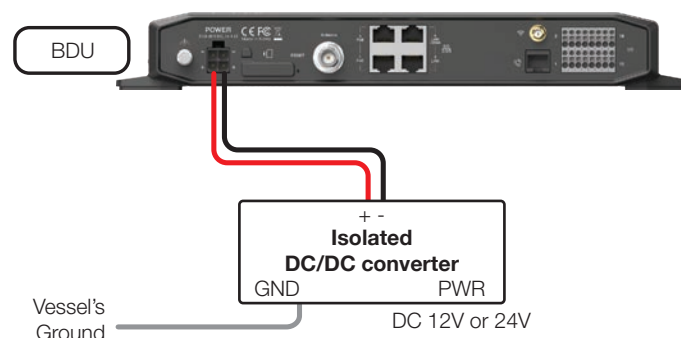


Figure 37: Isolated DC/DC Power Supply

In a very few cases, the installation of the terminal has caused a low earth insulation alarm. If this happens then check that the power supply is galvanically isolated. If this doesn't resolve the issue contact Technical Support for further assistance.

Chapter 7. Installing the SDT

7.1 Selecting SDT Installation Site and Cautions


For optimum system performance, the following guidelines on where to install and mount the SDT must be followed. It is recommended to mount the unit in a location that fulfills these requirements:

- Mount the unit indoors (not exposed to direct water).
- Maintain a compass safe distance of 0.6m.
- Do not turn on the system power to prevent electric shock if the front and rear panels are damaged during shipping.
- Read the precautions on the title page of the user guide before installing or operating the system.
- Mount the unit using either the bracket mount or flush mount.
- Mount the unit on a rigid structure with minimal exposure to vibration and shock.
- Mount the unit in an area with an ambient temperature between -15°C and +55°C (+5°F and +131°F).

7.2 SDT Dimensions

Confirm the dimensions of the BDU before installation.

Unit: mm (inch)

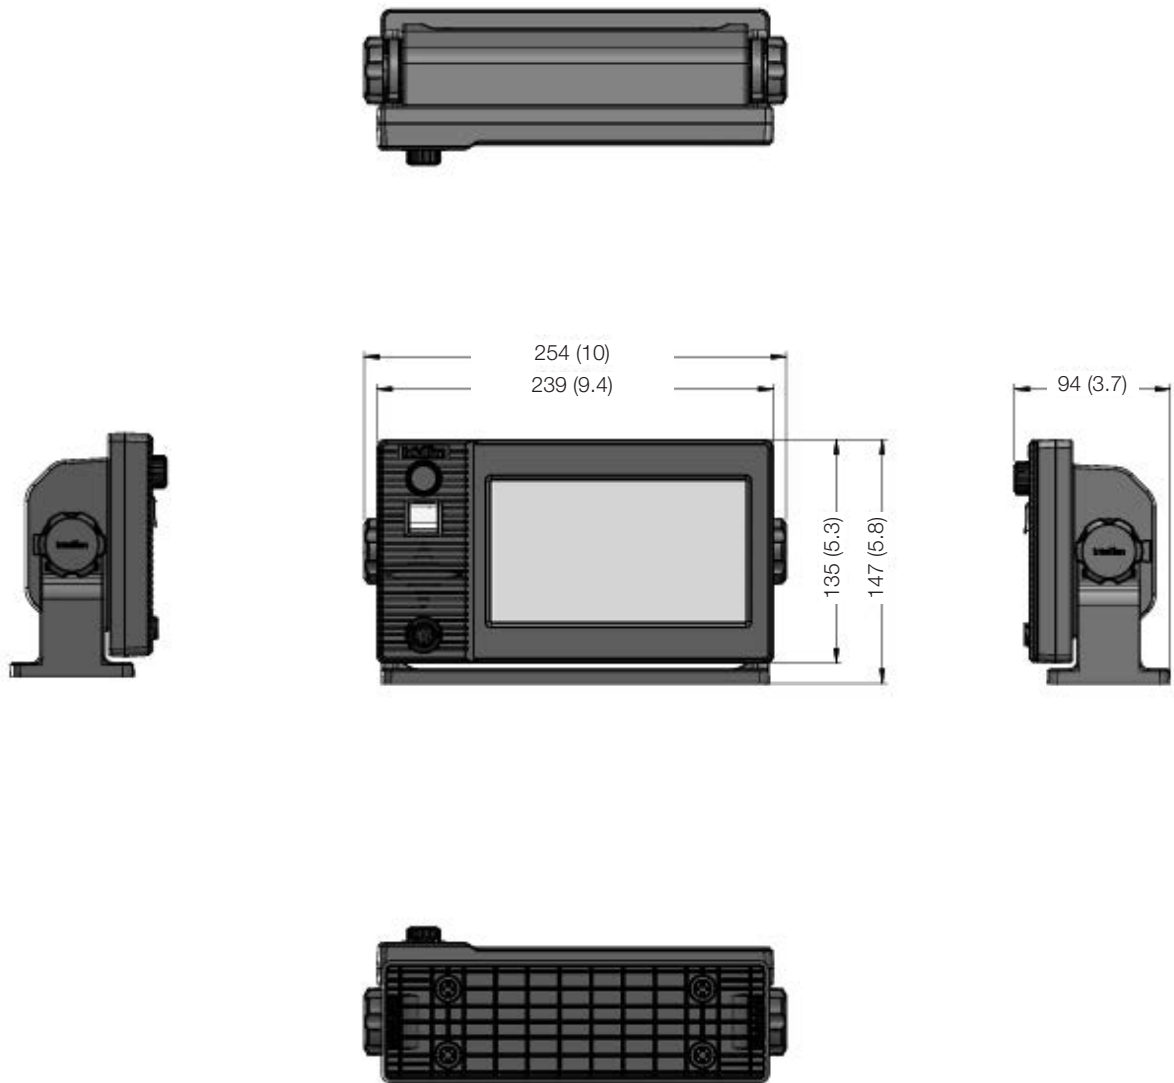


7.3 Mounting SDT

The SDT offers two mounting options. It can be installed on a desktop or mounted flush, typically within a console. If needed, a cable strain relief can also be used.


7.3.1 Bracket Mounting Type

The SDT is equipped with a fixing bracket, which is designed with four corner holes for easy direct mounting on a wall or desktop.


1. Turn knob bolts anticlockwise to detach the display from the bracket.

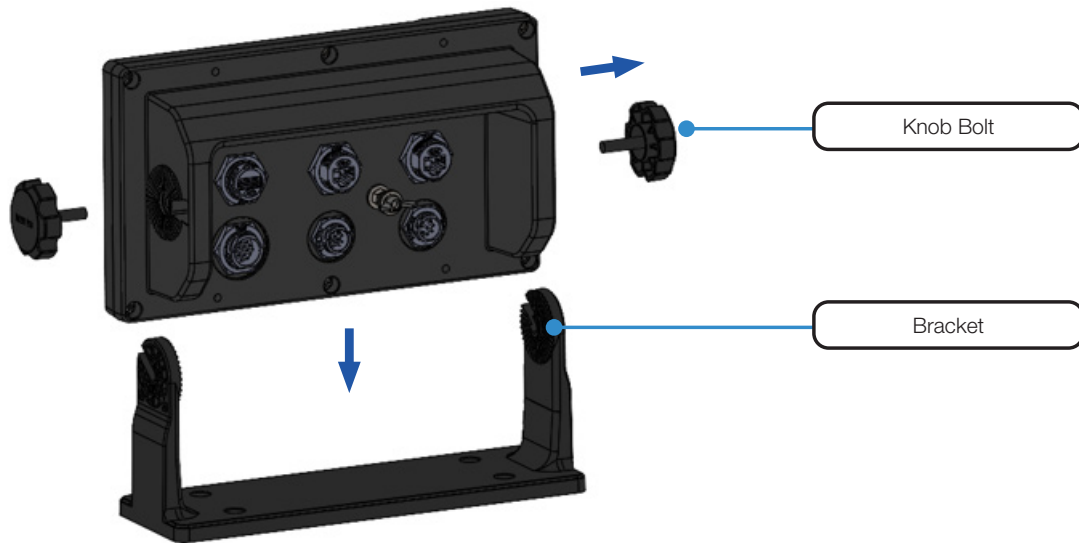


2. Place the SDT in the bracket. Position the SDT mounting bracket to ensure at least 100mm of clearance behind the SDT for cable access.

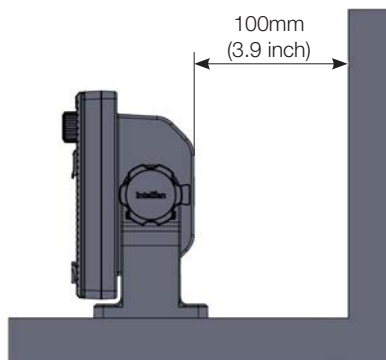


3. Insert the AISI 410 #8-19 Pan washer self-drilling screws (4ea) through the holes in the bracket, then tighten using a Phillips screwdriver.

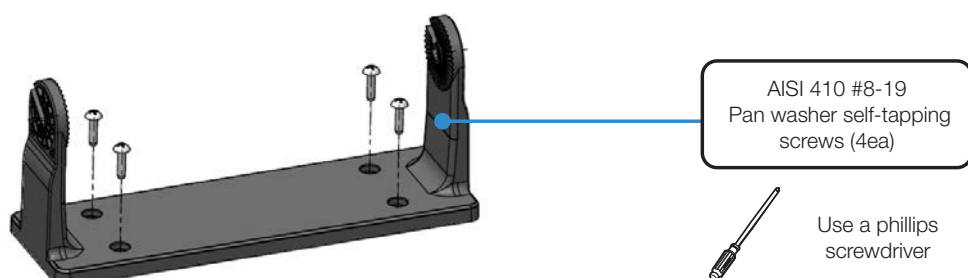

4. Connect the cables. See section 7.5.
5. Align the grooves on the SDT with those on the bracket, then insert the SDT into the bracket.

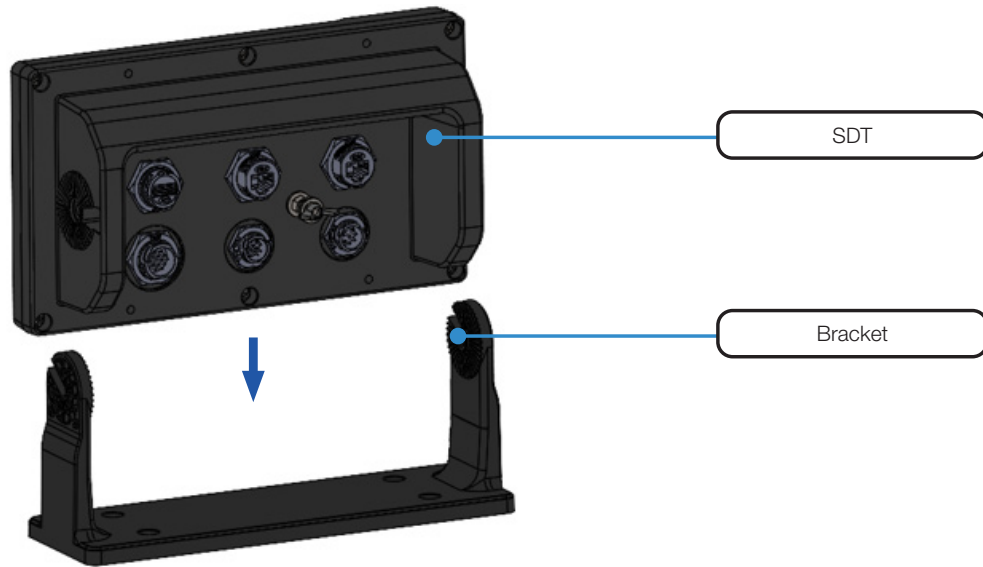


6. Adjust the SDT angle to the desired position.
7. Turn knob bolts clockwise to attach the display to the bracket.

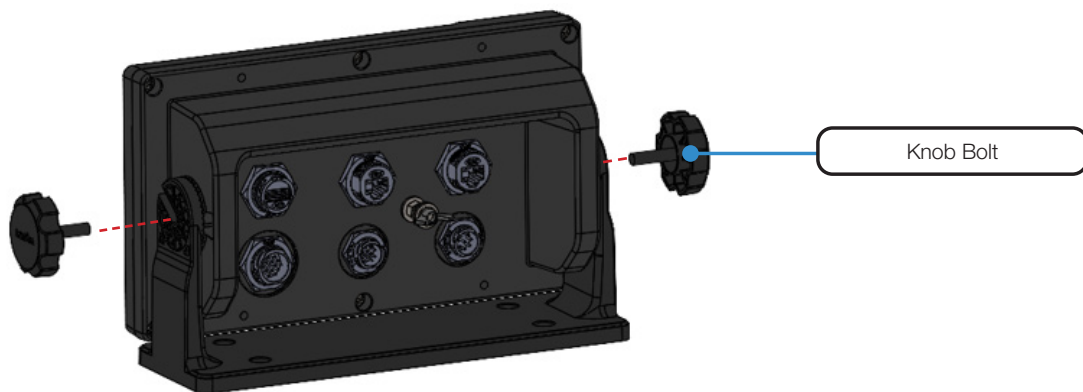


7.3.2 Flush Mounting Type

This method involves embedding the indicator inside the ship's hull by cutting a hole in the ship panel to match the indicator's size, inserting the indicator, and securing it with bolts from the rear.

1. Print out the mount cutout template. When printing the template, set the print scale to 200% in the print setup.

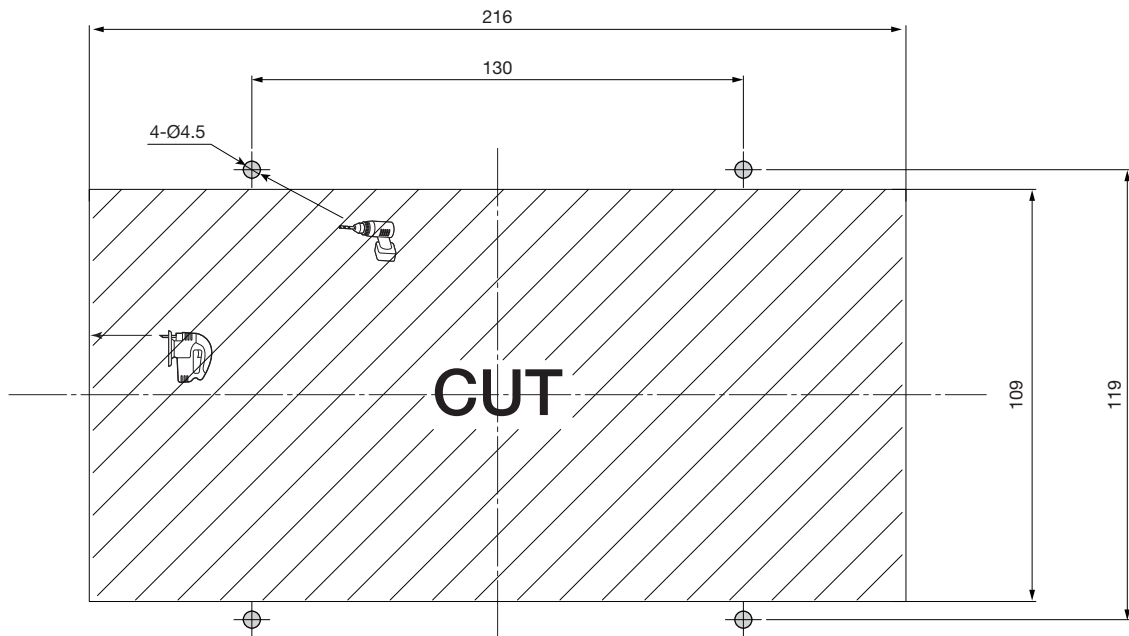

2. Making the cutout for flush mounting
 - a. Secure the template to the ship's panel.
 - b. Drill four 4.5mm holes using a 4.5mm drill bit.
 - c. Using a jigsaw or rotary cutting tool, cut along the inside of the solid line indicated on the template.

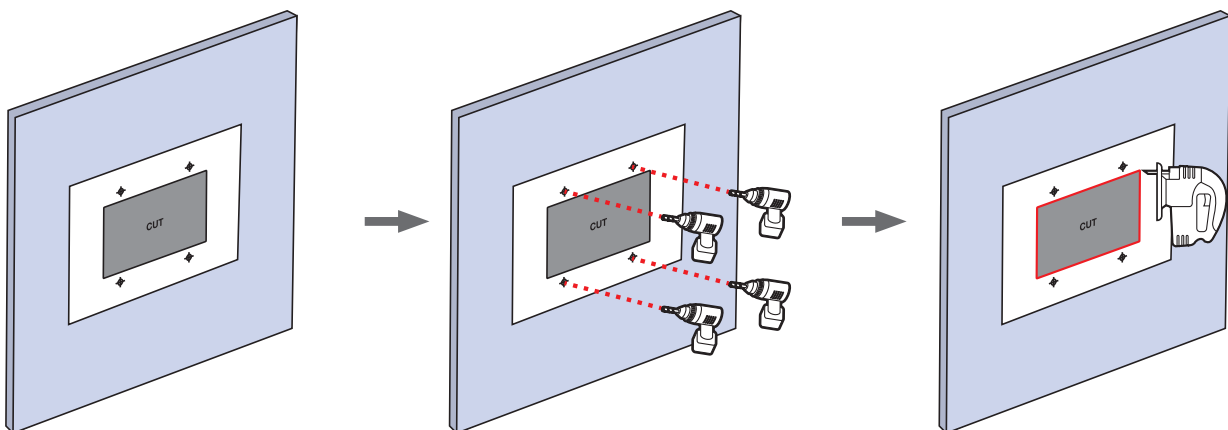

- d. Insert the device into the cutout to check the fit.




NOTE


If necessary, use a file or sandpaper to adjust the hole size.

- e. Remove the template from the mounting surface.

3. Turn knob bolts anticlockwise to detach the display from the bracket.

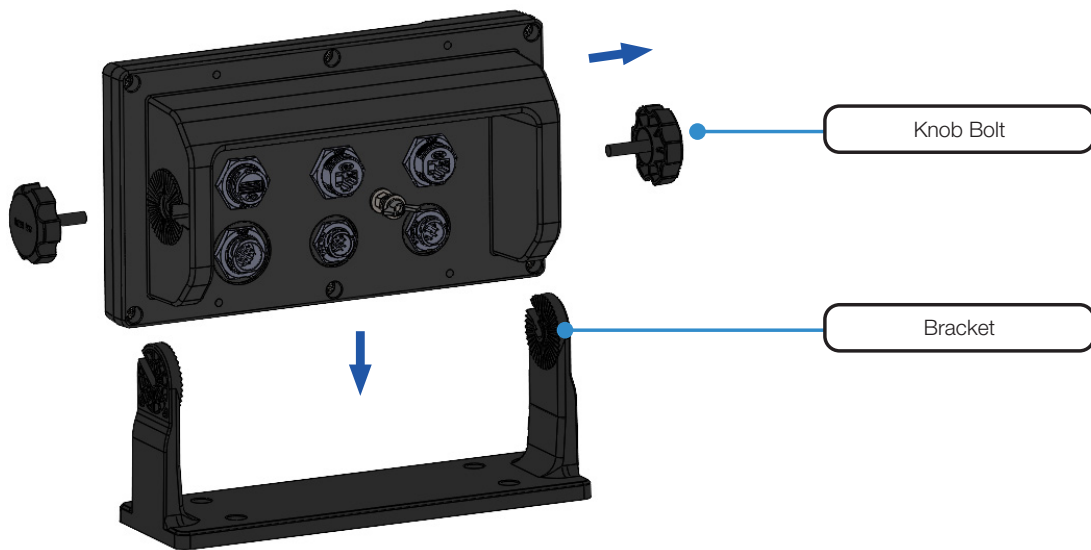


4. Connect the cables. See section 7.5.
5. Insert the SDT into the bezel cutout.

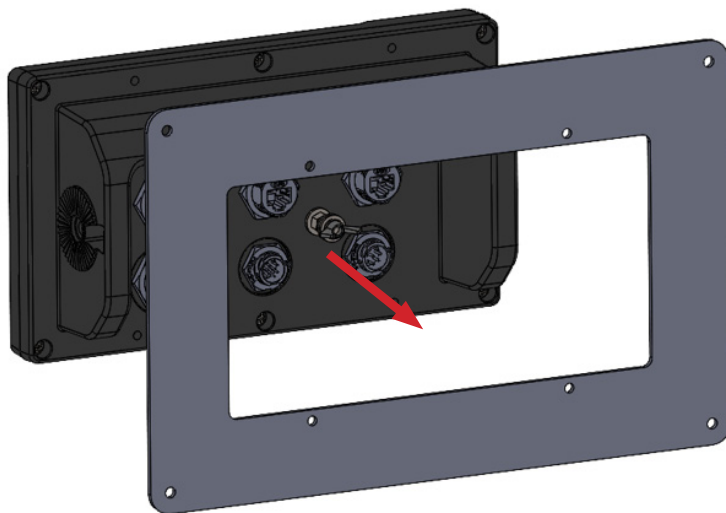

NOTE


If access to the back of the device will be restricted after installation, connect all necessary cables to the cradle and secure them with the locking bracket or locking rings before inserting the device.

6. Insert the STS304 M4x8L Truss head bolts(4ea) into the built-in insert on the back of the SDT and tighten them using a Phillips screwdriver.

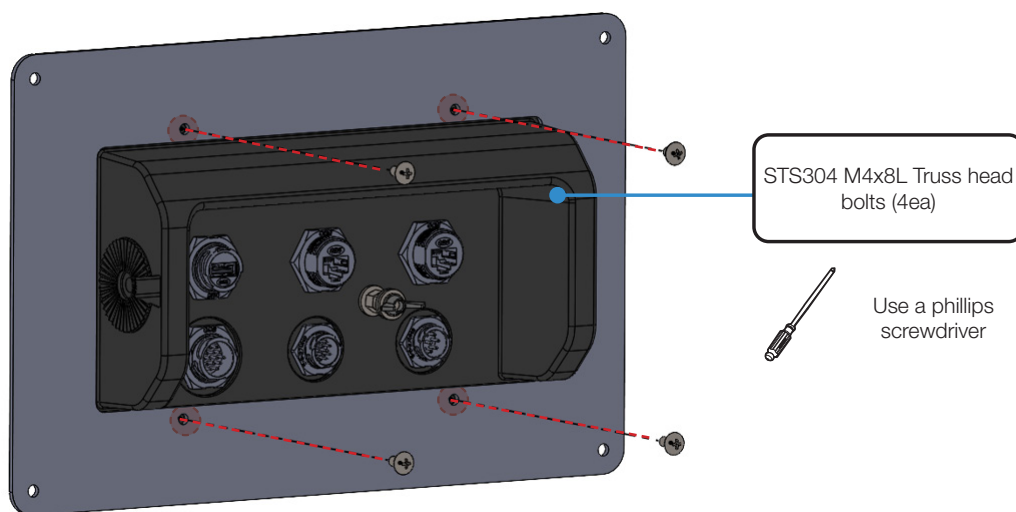


7.4 SDT System Configuration

7.4.1 Basic Configuration

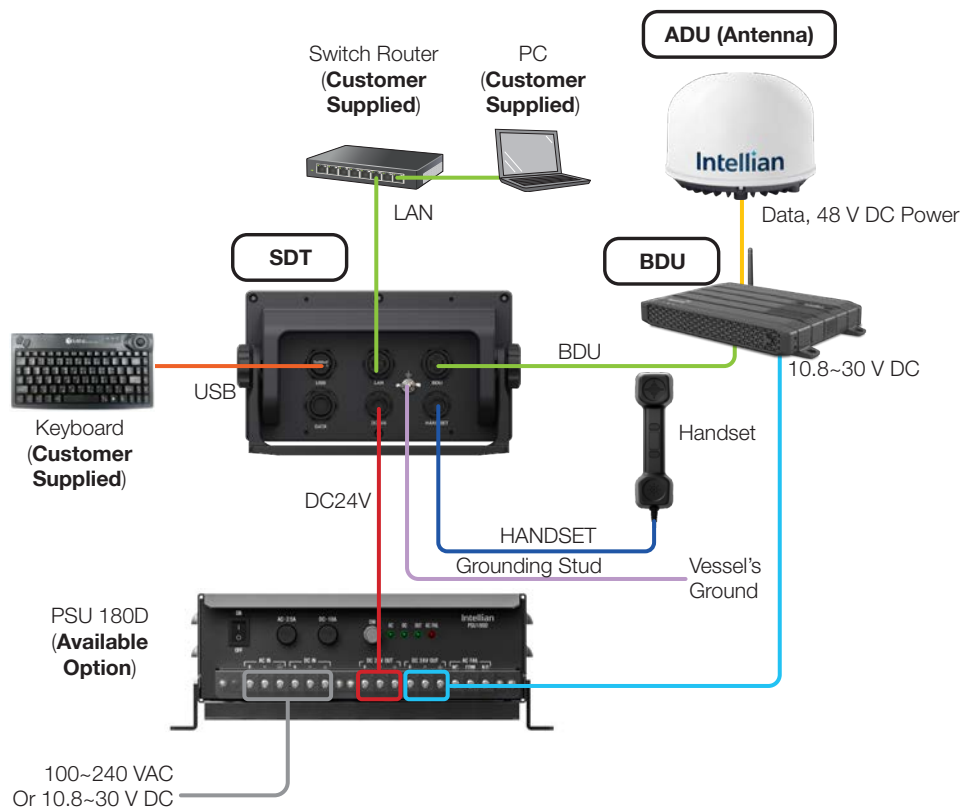

7.4.2 Optional Configuration

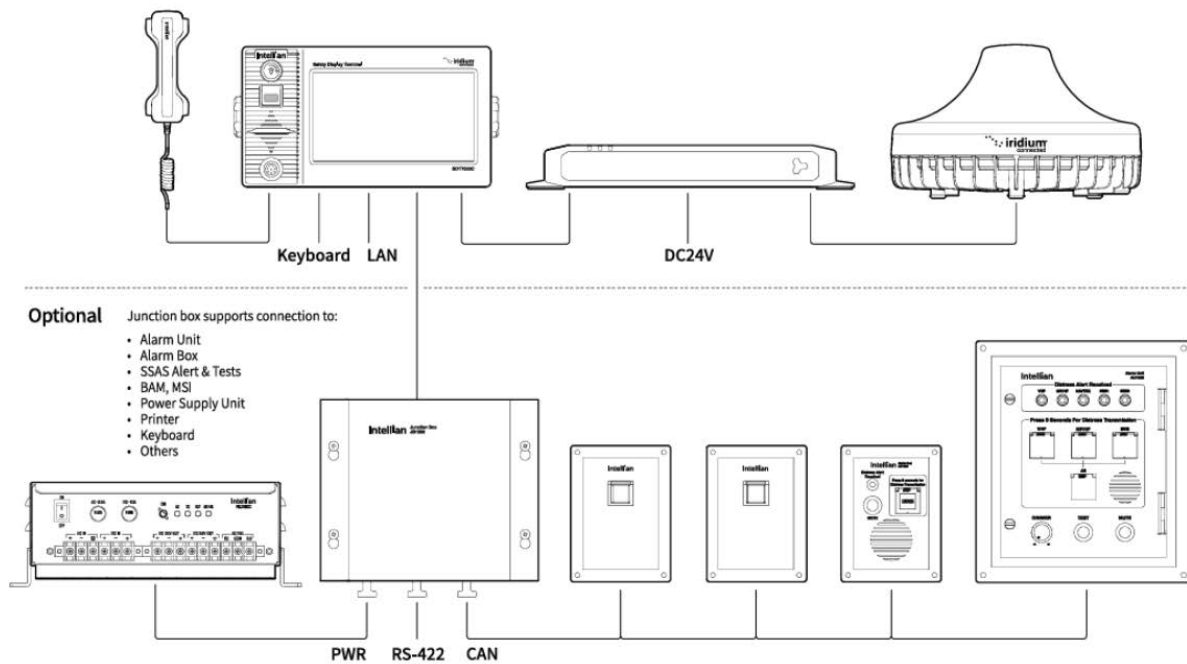

NOTE


- CAM-HMI Installation Location:
 - At least one Central Alert Management HMI (CAM-HMI) device must be installed at the navigation and maneuvering workstation.
 - If necessary, it can also be additionally installed at the monitoring workstation.
- Attention:
 - If an Integrated Navigation System (INS) is already installed and operational on-board, installing an additional, separate Central Alert Management (CAM) system alongside this equipment is not permitted. The INS system must include or integrate the CAM functionality.

7.5 SDT Cable Connection

7.5.1 SDT Front/Back Panel

The following figures show the SDT front and back panels.

Front

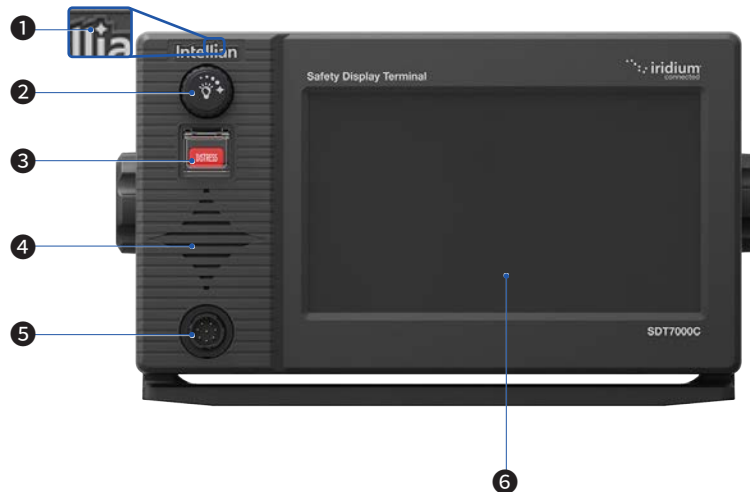

No.	Key	Function
①	Photo IC Diode (Light Sensor)	Provide the Auto-Dimming function so that the LCD screen brightness is automatically changed and it depends on the brightness of surroundings. Auto-Dimming function will be activated in case the user sets the Auto-Dimming mode in the display menu.
②	Dimmer knob	Control the LCD screen brightness by the dimmer knob.
③	DISTRESS key	Press and hold the button for three seconds to transmit the Distress Alert. Note: DISTRESS button is covered by transparent cover to prevent user from accidental operation.
④	Front speaker	Front speaker is located inside the housing.
⑤	Handset port	Connect the provided handset (HS7000). (It can also be connected to the rear 8P port.)
⑥	7" LCD screen	Displays the user interface including menu, function, message, etc.


Rear



No.	Port	Function
①	LAN	Enter the APTUS web UI by connecting the LAN port to the EDS-205A (LAN switch) or a PC/LAPTOP. • The web UI displays information such as the C700 link state.
②	USB	Connect the optionally provided SPR-8695TU (keyboard). Connect the USB flash drive. (only supports FAT32).
③	DATA	Connect the provided IN-CCCAF14FCC-03H cable to the JB1000. This cable supports RS-422, CAN, and RS-232 (printer) communications.
④	GND	It enhances robustness against electromagnetic interference, including ESD, bursts, noise, etc. • If possible, connect the shield to the earth using the cable.
⑤	BDU	Connect the BDU using an Ethernet cable.
⑥	HANDSET	Connect the provided handset. (It can also be connected to the front 8P connector.)
⑦	DC24V	Connect the provided IN-CCBAF12FBB-03H cable to the JB1000. • This cable supplies DC power from the PSU180D and supports RS-422 communication.

7.5.2 SDT Connector Pinout Guide


Handset (Front/Rear) Connector

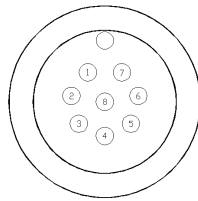

IEC 320 C14 Plug Male

Pin	Signal
1	MIC+BIAS
2	Det_Key_ADC
3	Speaker +
4	Speaker -
5	Hook_ADC
6	AF_1.8V
7	Shield
8	GND

Power Connector (DC Power)

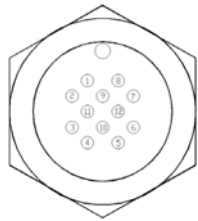Font view, Panel lock,
12 pin male


Pin	Signal	Wire color
1	BATT- (DC 24V -)	Black
2	BATT- (DC 24V -)	Brown
3	BATT+ (DC 24V +)	Red
4	BATT+ (DC 24V +)	Orange
5	EARTH (Isolation, GND)	Yellow
6	EARTH (Isolation, GND)	Green
7	Not Connect	Blue
8	EXT1_RX A (Input, IEC61162-1/2)	Purple
9	EXT1_RX B (Input, IEC61162-1/2)	Gray
10	EXT1_GND	White
11	EXT1_TX Z (Output, IEC61162-1/2)	Pink
12	EXT1_TX Y(Output, IEC61162-1/2)	Light Green

DATA Connector (DC Power)

Front view, Panel lock,
14 pin male

Pin	Signal	Wire color
1	EXT2_RX A (Input, IEC61162-1/2)	Black
2	EXT2_RX B (Input, IEC61162-1/2)	Brown
3	EXT1_GND	Red
4	EXT2_TX Z (Output, IEC61162-1/2)	Orange
5	EXT2_TX Y (Output, IEC61162-1/2)	Yellow
6	DC_OUT + (DC 24V+ Out)	Green
7	DC_OUT - (DC 24V- Out)	Blue
8	CAN_H (IEC61162-3)	Purple
9	CAN_L (IEC61162-3)	Gray
10	EXT_EARTH (Isolation, GND)	White
11	RS-232 RX (Output, IEC61162-1/2)	Pink
12	RS-232_GND	Light Green
13	RS-232 TX (Output, IEC61162-1/2)	Black/White
14	Not Connect	Black/White


BDU / LAN Connector (LAN)

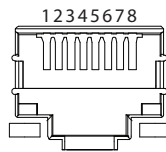

RJ-45 Female

Pin	Signal
1	Tx+
2	Tx-
3	Rx+
4	N/C
5	N/C
6	Rx-
7	N/C
8	N/C

USB Connector



USB A Female


Pin	Signal
1	VBUS
2	USB DM(-)
3	USB DP(+)
4	GND

7.6 Establishing SDT Connections

7.6.1 Connecting DC Power to the SDT

Directly Connecting Power Cable to the SDT

- The wire should be terminated with a ring connector (Optional) as shown below:
 - Positive (BATT + / DC 24 +): Red and Orange wires
 - Negative (BATT - / DC 24 -): Black and Brown wires
 - Earth: Yellow and Green wires
- Remove the safety protection cover of the Power Supply.
- Unscrew the “+” terminal on DC 24V OUT using a Phillips screwdriver. Insert the ring connector of the Red and Orange (positive) wires into the terminal and tighten the screw back into the terminal.
- Unscrew the “-” terminal on DC 24V OUT using a Phillips screwdriver. Insert the ring connector of the Black and Brown (negative) wires into the terminal and tighten the screw back into the terminal.
- Unscrew the “ $\perp$ ” terminal on DC 24V OUT using a Phillips screwdriver. Insert the ring connector of the Yellow and Green (earth) wires into the terminal and tighten the screw back into the terminal.

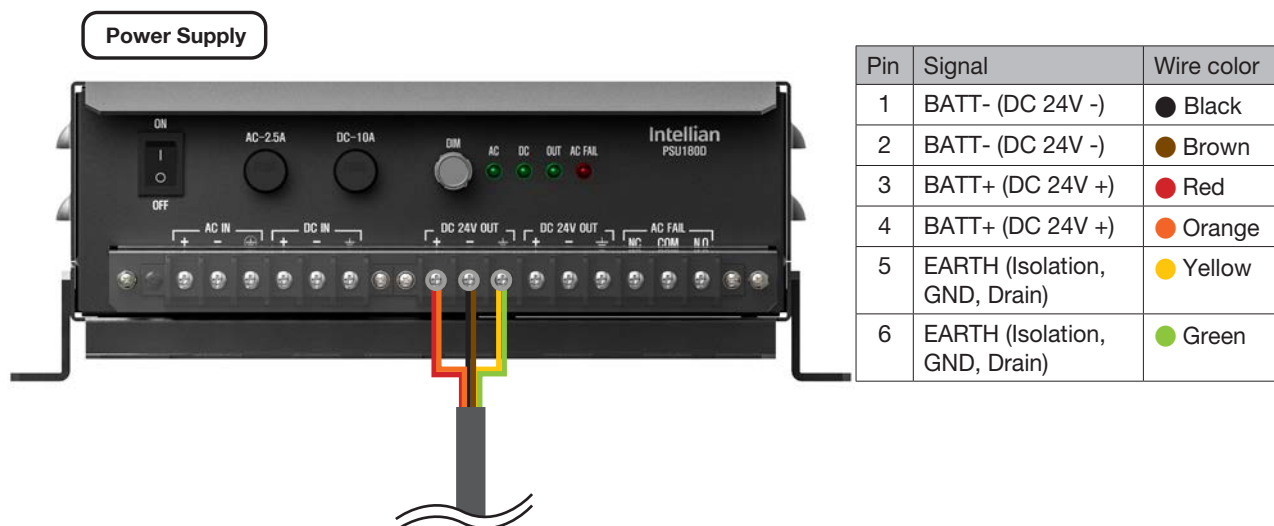


- Replace the safety protection cover of the Power Supply.
- Connect the 12-pin power connector to the DC 24V port on the back of the SDT.
- Finger-tighten the lock ring on the waterproof housing connector to ensure a secure and waterproof connection.




Connecting Power Cable to SDT Junction Box Power Supply

To connect the power to the junction box, you will need to purchase the Junction Box and Power Supply (PSU-18D) separately. These items are provided in a separate box when supplied.

1. Connect the PSU-18D to the junction box using the power cable:
 - a. Unscrew the “+” terminal on DC 24V OUT using a Phillips screwdriver. Insert the ring connector of the Red (positive) wire into the terminal and tighten the screw back into the terminal.
 - b. Unscrew the “-” terminal on DC 24V OUT using a Phillips screwdriver. Insert the ring connector of the Black (negative) wire into the terminal and tighten the screw back into the terminal.
 - c. Connect the Red wire to both the terminals labeled “+” on the junction box.
 - d. Connect the Black wire to both the terminals labeled “-” on the junction box.

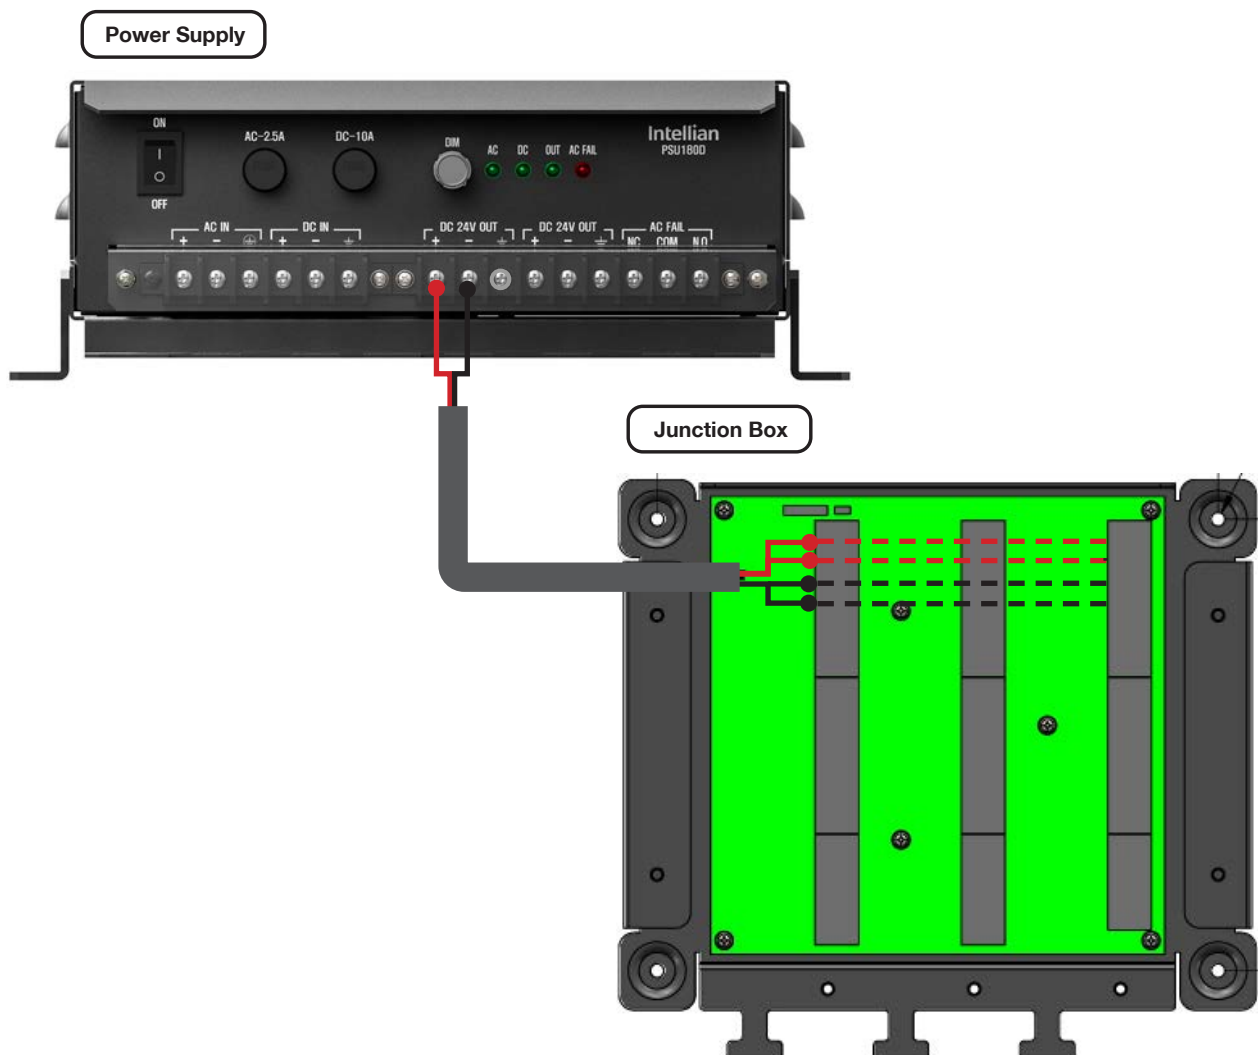

2. Connect the Power Supply (PSU-18D) to the junction box with the power cable:
 - a. Connect the 12-pin power connector to the DC 24V port on the back of the SDT.
 - b. Finger-tighten the lock ring on the waterproof housing connector to ensure a secure and waterproof connection.
 - c. Thread the red and orange wires into the cable groove in the junction box, aligning them with the '+' pin. Then, fully tighten the screws using a Phillips screwdriver.
 - d. Thread the red and orange wires into the cable groove of the junction box, aligning them with the '-' pin. Then, fully tighten the screws using a Phillips screwdriver.

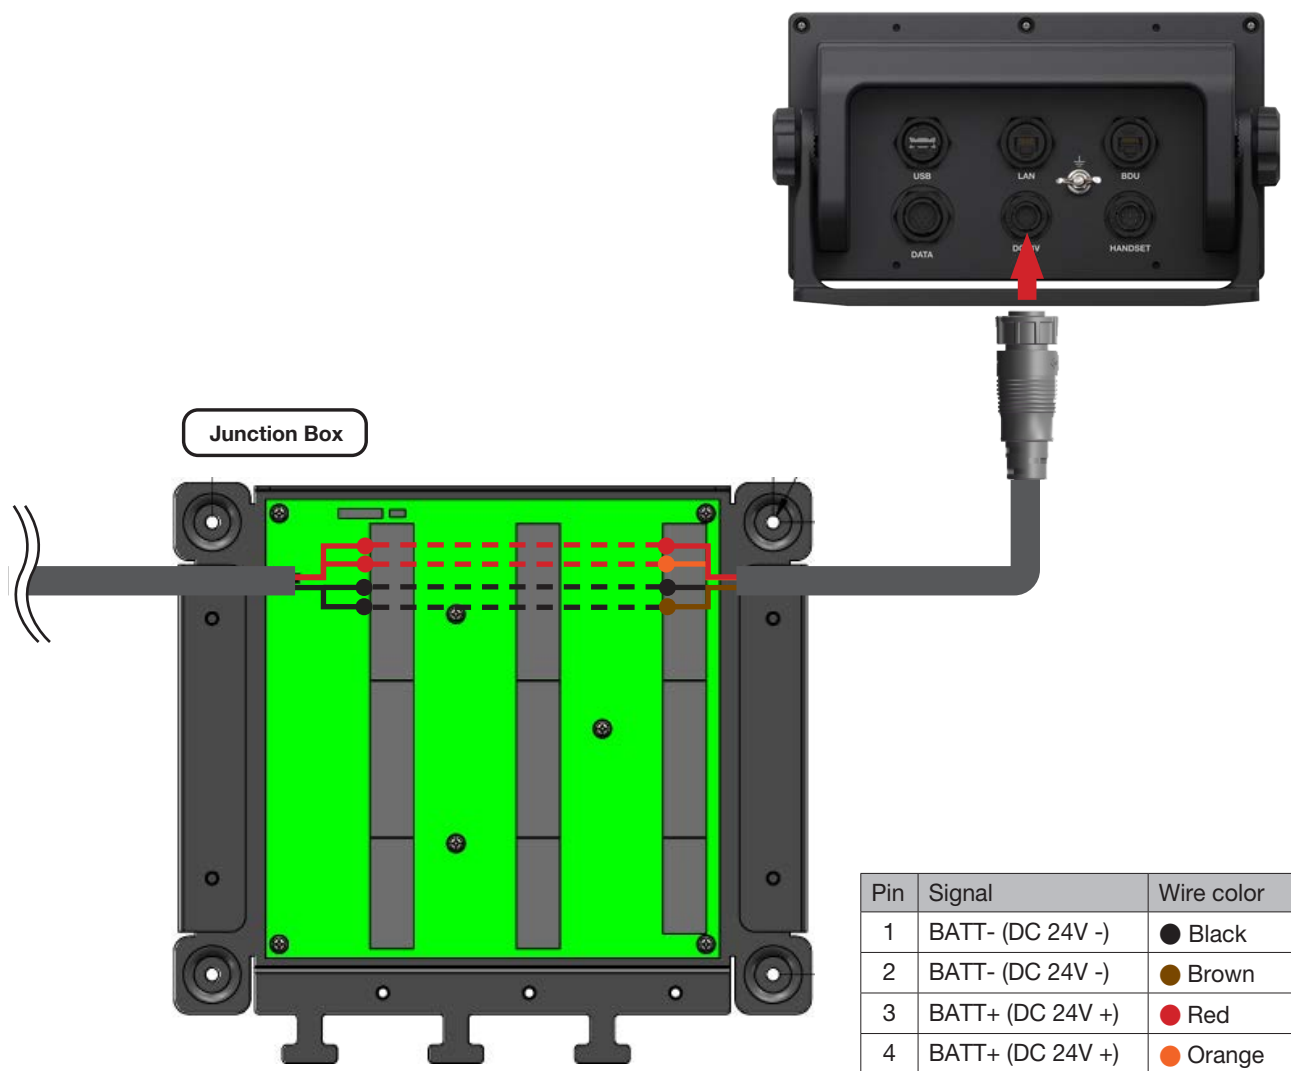


7.6.2 Connecting Main/ Emergency and Reserve Power Source

The C700 GMDSS system can be connected to main/emergency (VAC input) and reserve (VDC input) power sources through the PSU180D (Power Supply Unit).

When both main/emergency (VAC input) and reserve (VDC input) power sources are connected simultaneously, the PSU 180D (Power Supply Unit) delivers DC output using the main/emergency VAC input. In case of a failure on the VAC supply, it automatically switches over to the reserve VDC input.


If the VAC input, such as the main power, disconnects or experiences irregularities, it automatically switches to the VDC input and outputs DC voltage.

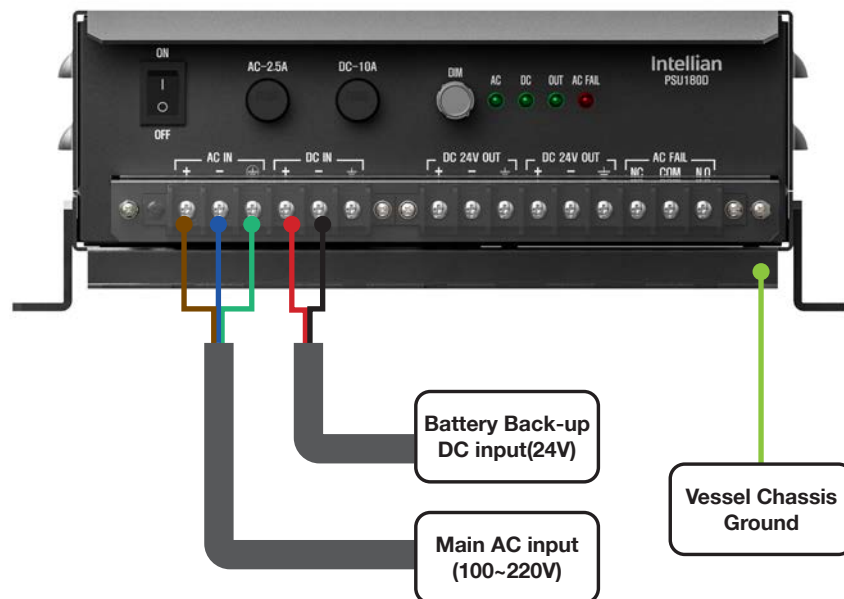

7.6.3 Connecting SDT to BDU using the BDU Port

Intellian provides an Ethernet cable.

1. Connect one end of the Ethernet cable to the BDU port on the back of the SDT and the other end to the LAN port on the BDU.
2. Finger-tighten the cable locker on the water housing connector to ensure a secure and waterproof connection.

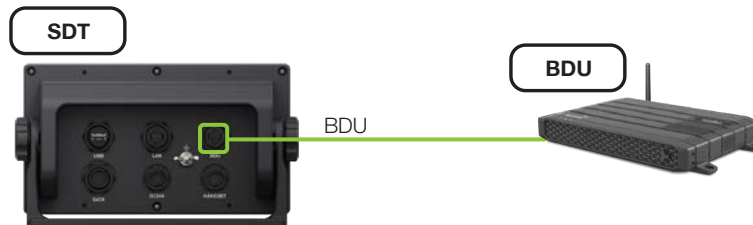

7.6.4 Connecting SDT to Devices using the LAN Port

Intellian provides an Ethernet cable. To access the APTUS web UI, connect the SDT's LAN port to a LAN switch (HUB) or a PC/Laptop.

1. Connect one end of the Ethernet cable to the LAN port on the back of the SDT and the other end to a LAN switch (HUB) or a PC/Laptop.
2. Finger-tighten the cable locker on the water housing connector to ensure a secure and waterproof connection.



7.6.5 Connecting SDT to a Keyboard using the USB Port

Intellian provides a USB A male to A female extension cable. This allows a keyboard to be connected for entering safety messages and controlling the mouse pointer within the GMDSS SDT user interface.

1. Connect the USB A connector of the keyboard's cable to the USB A female end of the provided extension cable.
2. Connect the USB A male end of the extension cable to the USB port on the back of the SDT.
3. Finger-tighten the cable locker on the water housing connector to ensure a secure and waterproof connection.




7.6.6 Connecting the SDT to the Ship's Grounding System

The grounding stud is located on the back of the SDT. To properly ground the SDT to the ship's grounding system, follow these steps:

1. Unscrew the ground screw on the GND terminal using a Phillips screwdriver.
2. Attach a grounding cable as short as possible with a minimum cross-section area of 5 mm² to the grounding stud and secure it with a bolt.
3. Connect the other end of the grounding cable to the ship's grounding system.

7.7 Power Consumption

The SDT and BDU (including ADU) of the main basic configuration for the C700 GMDSS system are powered by a 24 VDC power source. This section provides the maximum power consumption and typical average power consumption. This information can be used for calculating the back-up battery capacity, a requirement for GMDSS equipment onboard SOLAS vessels.

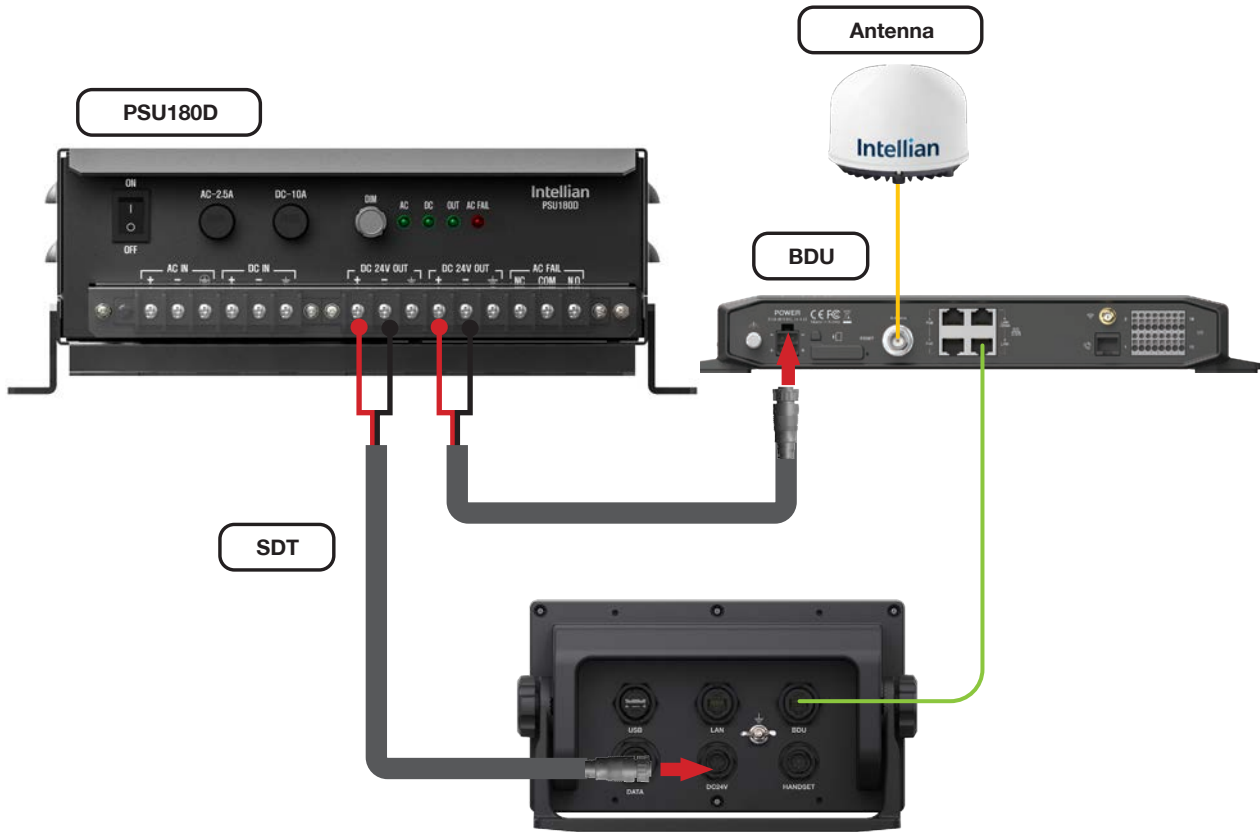

If you installed the C700 GMDSS system using the PSU180D (customer-supplied) as shown in the image, the maximum power consumption is listed in the table below.

Maximum 24V DC Output Power Consumption (W) - PSU180D	
System Unit	Power [W]
SDT (SDT7000C)	20W
BDU (with ADU Usage)	120W
Total Power (maximum)	140W



NOTE


The maximum power consumption is calculated based on the operation of all interfaces.

7.8 DC Isolation Resistance & Grounding

7.8.1 Connecting SDT Chassis Ground/ DC Power cable/ Isolation resistance


SDT Unit

- Chassis Ground (GND) must be connected to Vessel GND.
- VDC (+) and VDC (-) connected Power Cable must be connected to the Vessel 24 VDC power supply.
- Isolation resistance, measured between GND and VDC (-), is $> 10 \text{ M}\Omega$.
- Galvanic isolation between VDC (-) and GND must be maintained.

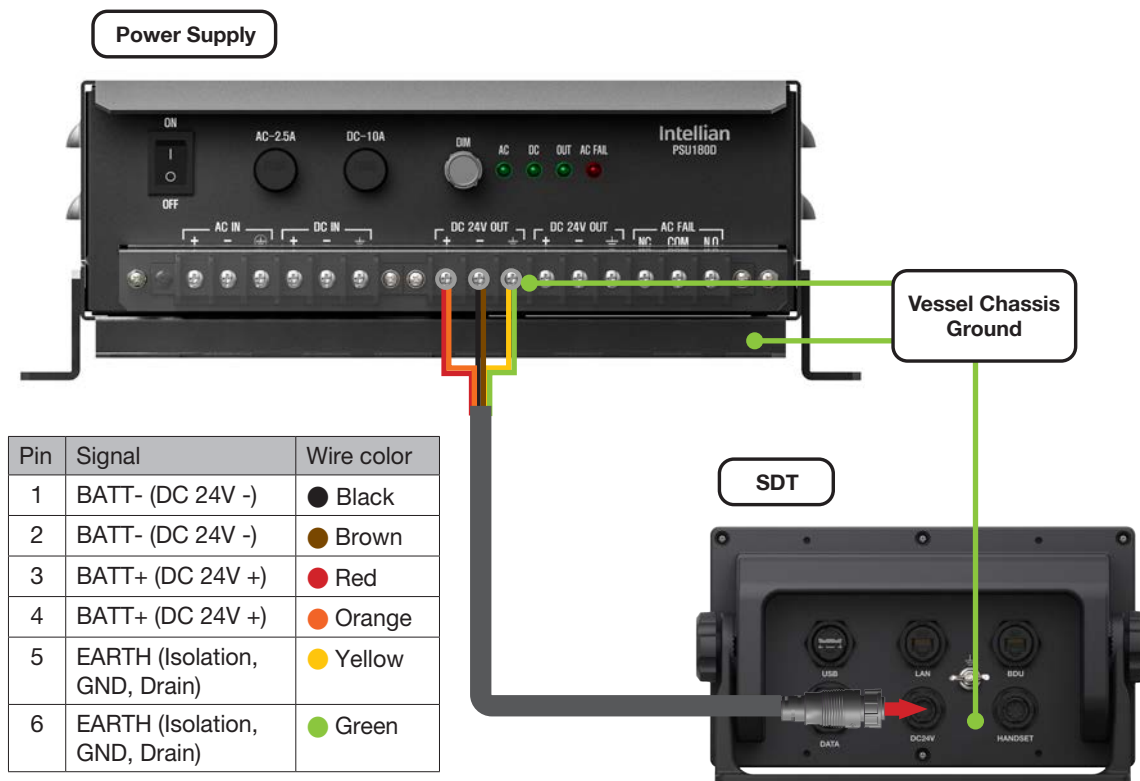

7.8.2 Connecting BDU Chassis Ground/ DC Power cable/ Isolation resistance

The Chassis Ground must be connected only to the Galvanic Ground of the power supply (PSU-180D). Connect the VDC (+) and VDC (-) from the DC 24V OUT port on the power supply to the POWER port on the BDU using a power cable. Do not use the ground connection on the BDU.

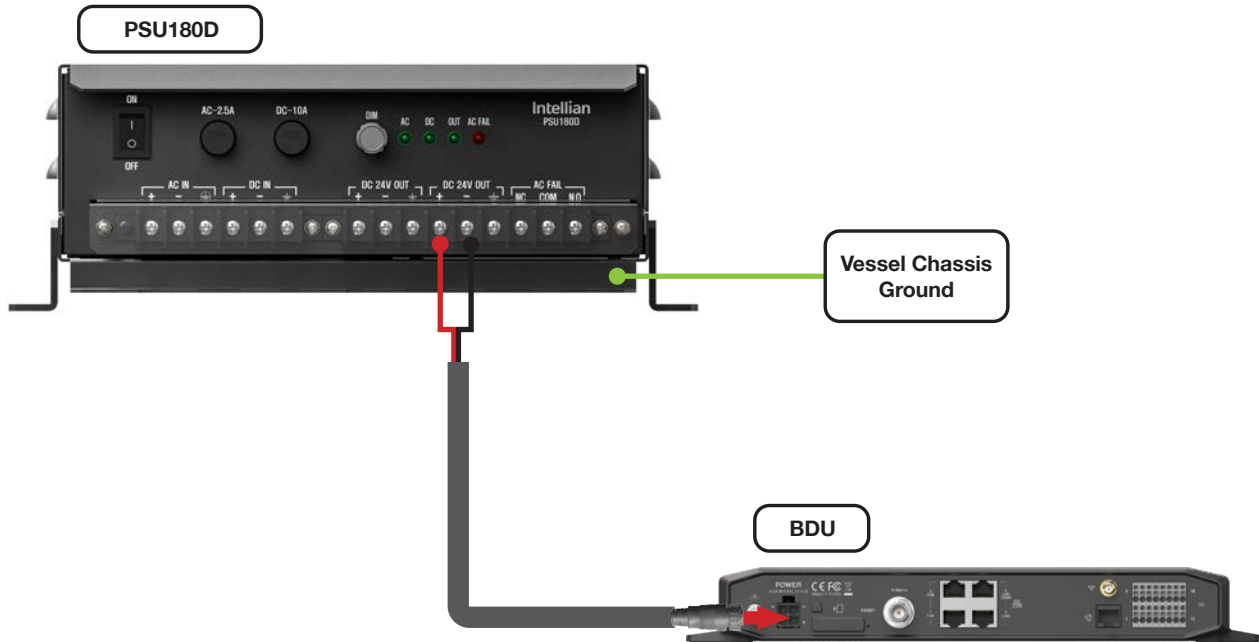


7.9 Galvanic Isolated Power Supply

Use an IEC 60945 approved AC/DC or DC/DC galvanic isolated power supply for the C700 GMDSS system (SDT and BDU etc..). The galvanic isolated power supply must be used to protect the C700 GMDSS. It is also possible to use a Battery as a power supply, but it must be connected to a galvanic isolated Power Supply.

7.9.1 Connecting VAC IN & Chassis Ground

PSU-180D Power Unit


- Chassis Ground (GND) must be connected to Vessel GND.
- AC Power Cable must be connected to Vessel VAC.
- Isolation resistance, measured between GND and VAC (L or N), is $> 10 \text{ M}\Omega$.
- Galvanic isolation between VAC (L or N) and GND must be maintained.

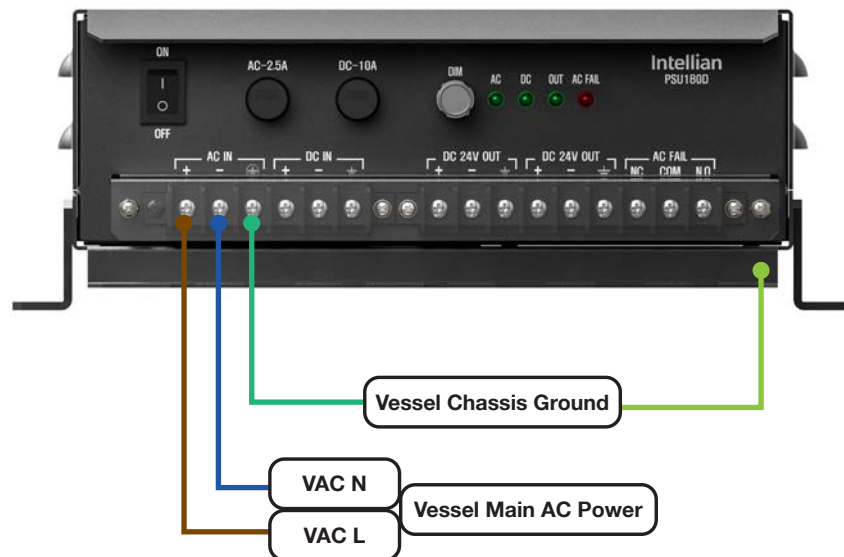

7.9.2 Connecting VDC IN & Chassis Ground


PSU-180D Power Unit

- Chassis Ground (GND) must be connected to Vessel GND.
- DC Power Cable must be connected to Vessel VDC (Emergency Battery or VDC).
- Isolation resistance, measured between GND and VDC (-), is $> 10\text{ M}\Omega$.
- Galvanic isolation between VDC (-) and GND must be maintained.

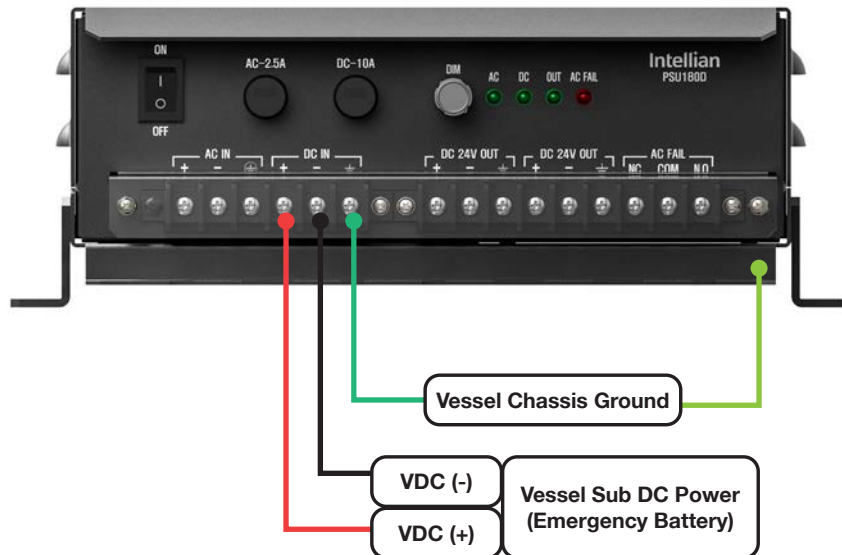

7.9.3 Connecting Battery Power Supply with AC/DC Galvanic isolated Charger

Connection of 24 VDC Battery to a Galvanically Isolated AC/DC Charger

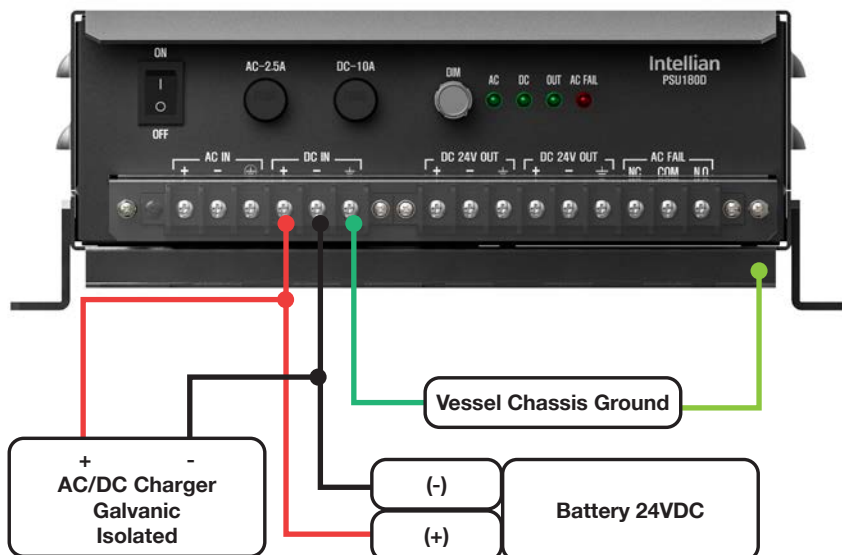


Chapter 8. Installing Handset

8.1 Selecting Handset Installation Site


The handset should be installed below the deck in a location that is dry, cool, and ventilated. The front panel of handset should be easily accessible to users.

8.2 Dimensions

Unit: mm (inch)

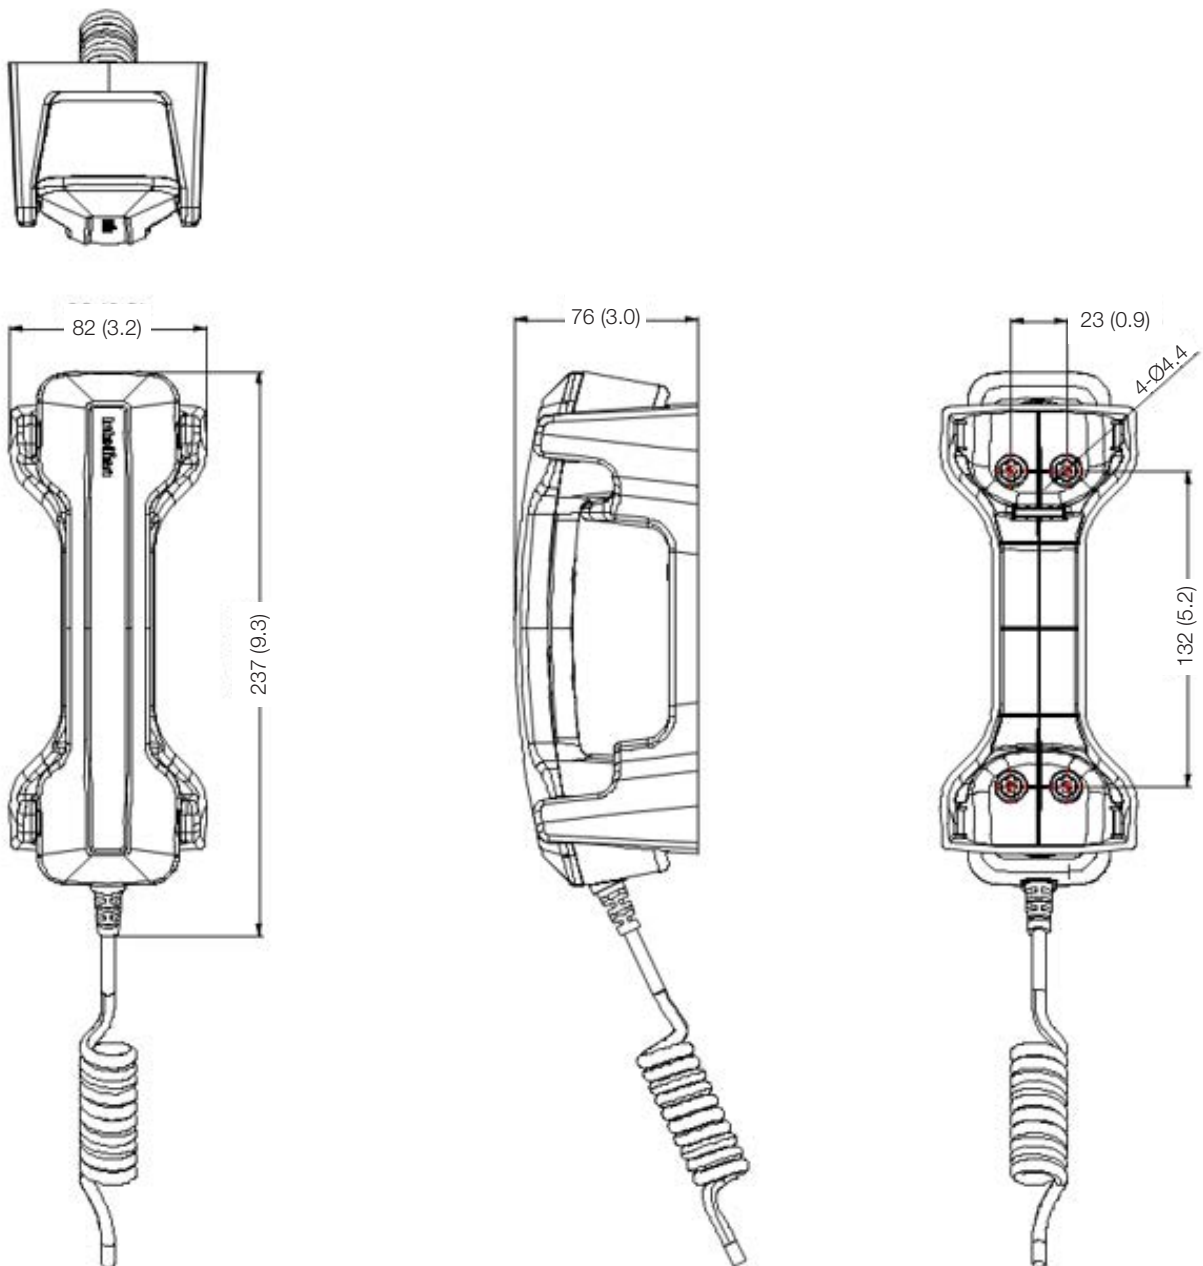

8.3 Overview

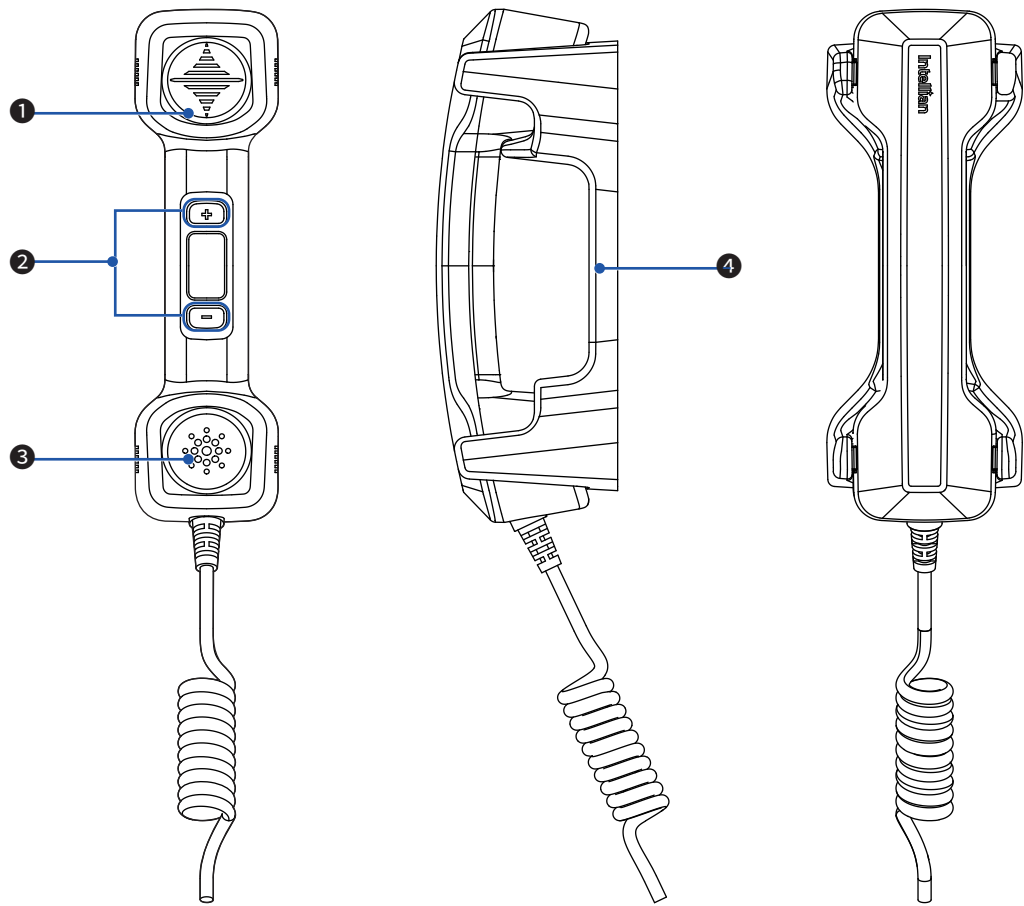

No.	Part	Function
①	Speaker	The opposite user's voice output is generated.
②	Volume button	Adjust the volume by pressing the button.
③	MIC	The microphone (MIC) allows the user to transmit their voice by converting sound into an electrical signal.
④	Cradle	The object used to place the handset. P/N: HC7000

8.4 Connecting the Handset Cable to the SDT

There are two ways to connect the handset to the SDT:

- Connect it to the 8-pin connector on the front panel of the SDT.
- Connect it to the 8-pin connector on the back panel of the SDT.

The appropriate method can be chosen depending on the installation conditions.

8.4.1 Connecting the Handset to the Front Panel of the SDT

1. Connect the 8-pin handset connector on the handset cable to the 8-pin port on the front of the SDT.
2. Finger-tighten the cable lock on the waterproof housing connector to ensure a secure and watertight connection.



8.4.2 Connecting the Handset to the Back Panel of the SDT (Optional)


1. Connect the 8-pin handset connector on the handset cable to the HANDSET port on the back of the SDT.
2. Finger-tighten the cable lock on the waterproof housing connector to ensure a secure and watertight connection.



Chapter 9. Operating Install Wizard

9.1 Turning On System


When the system starts up for the first time, connect the SDT and BDU to the PSU180D, then switch on the power switch on the front of the PSU180D. The equipment and accessories will then power on. (For the BDU, press the power button on the front of the BDU to turn it on.) The bootplash (logo) screen will appear, followed by the home screen.

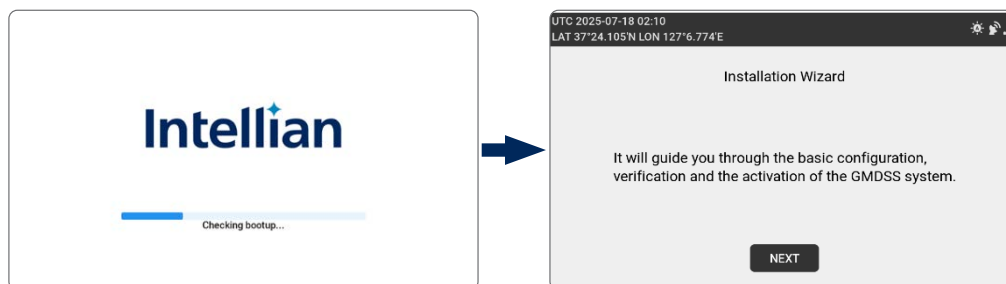

9.2 Installation Wizard

When installing the SDT and switching it on for the first time, the Installation Wizard will start automatically. Afterward, the Installation Wizard can be manually executed through a separate menu. The Installation Wizard guides you through essential system setup tasks, such as commissioning and network configuration, to ensure the SDT operates normally. Once the setup is complete, a test of the main functions will be executed, and the SDT will activate after connecting to the Iridium GMDSS network.


The Installation Wizard must be completed successfully for the GMDSS system to function properly.

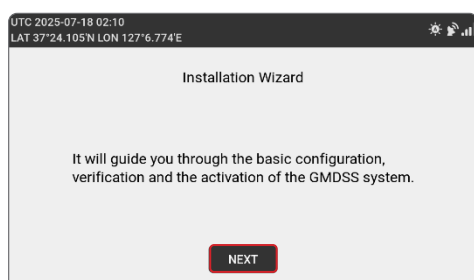


The Installation Wizard will be displayed when powering up the system for the first time or after a factory reset.


It proceeds in the following order: Date/Time Setting → Display Setting → Select SES #1/2 → OTA Commissioning → GMDSS Test.

1. Click the **Next** button to start the installation wizard.
2. Select the date format (**YYYY-MM-DD**, **MM-DD-YYYY**, **DD-MM-YYYY**) and the time format (**12**, **24 hour**).

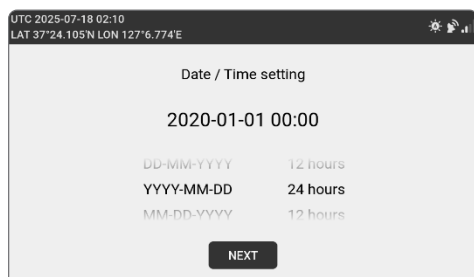


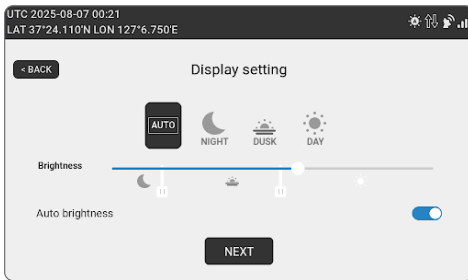


3. Select the display theme (**Auto**, **Day**, **Night**).

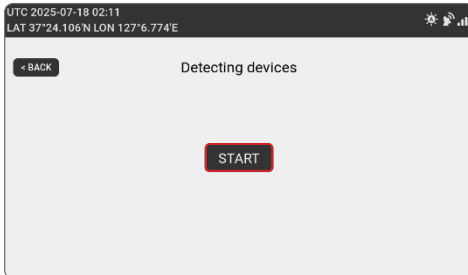


4. Press the **Start** button to verify the connected devices.

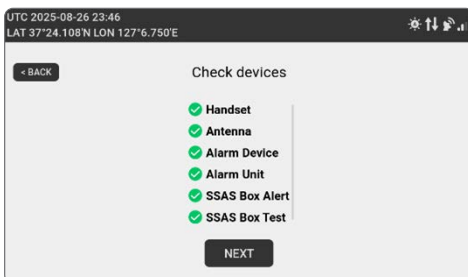


Connected devices will be indicated with a check mark and displayed.

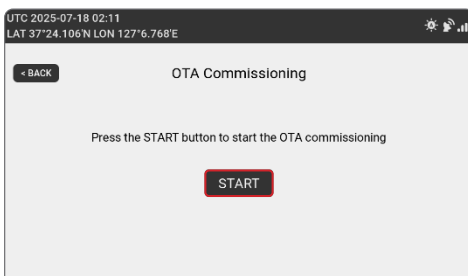

5. Proceed with OTA Commissioning to activate the GMDSS function. Press the **Start** button.

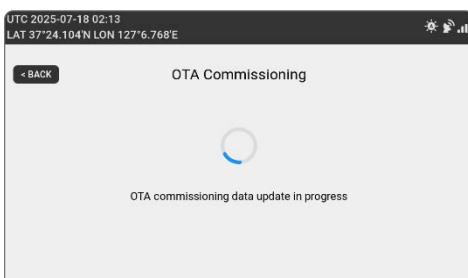

This will take a few seconds. The information in the SIM will be registered to the server via satellite.

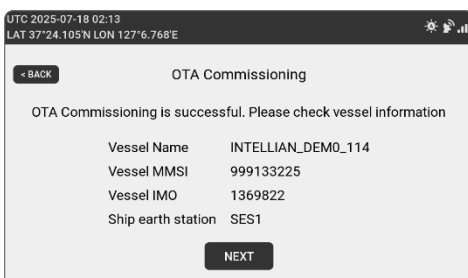


If OTA Commissioning is successful, the screen will display as shown in the image.



6. Select the Default RCC (**Automatic or Manual**).



If Automatic is selected, the RCC will be sent based on the current position.

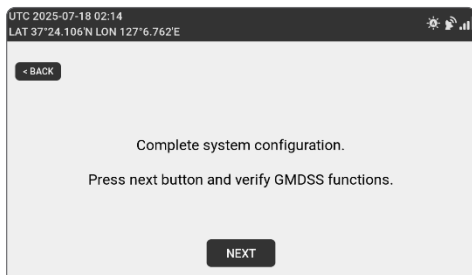

7. After completing the system configuration, enter GMDSS Test Mode to verify the GMDSS functions. The terminal enters the configured GMDSS mode. The GMDSS functions will be tested to ensure they are working correctly. In Test Mode, verify that the Iridium GMDSS server interaction is functioning properly.


Note: In Distress Test mode, Distress messages and Distress Calls attempt to connect to a Test RCC, not an actual RCC.

- a. Press and hold the **Distress** button for 3 seconds.

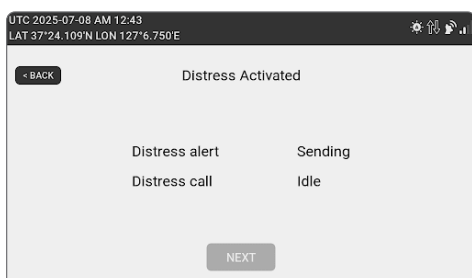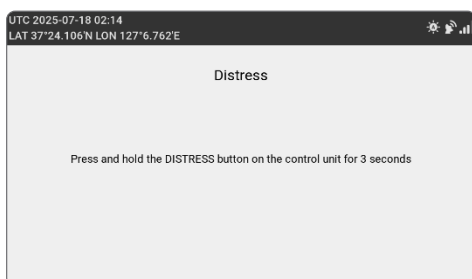


- b. Verify the Distress status. When the alert is successfully transmitted to the IGS (Change order for Distress alert status: Sending → Sent → Delivered), a Distress Call will be received.


When the Distress alert status is “Delivered,” a Distress call will attempt to connect to the Test RCC. If a Distress call successfully connects to the Test RCC, a voice call will sound from the Test RCC.

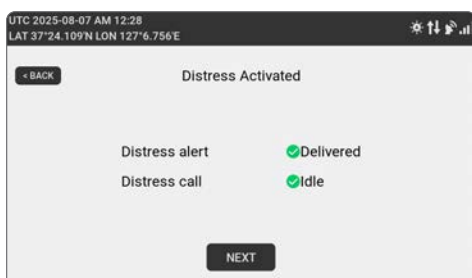


- c. Wait for a few minutes until the communication is finished. If communication is completed automatically, the **Next** button will activate.

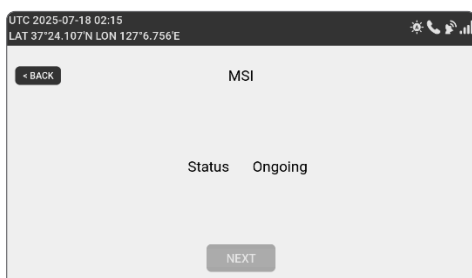


- d. Receives a Test MSI message.

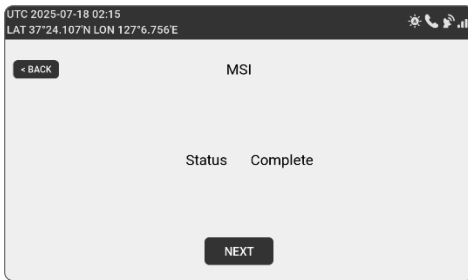


- e. If the MSI message is received normally, the **Next** button will activate.

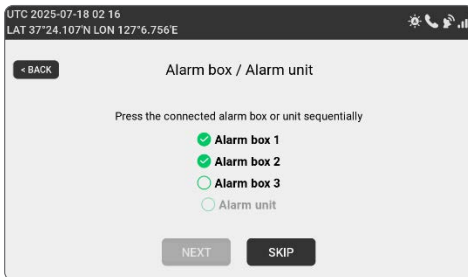

- f. If an Alarm Box and Alarm Unit are connected to the system, press the Distress button for each accessory and verify them.

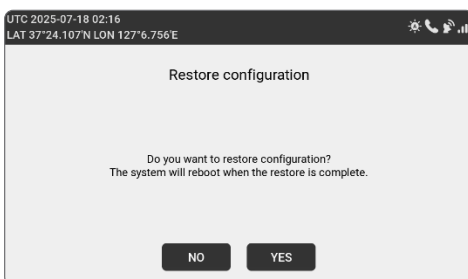


- g. The system can be restored to the previous configuration.

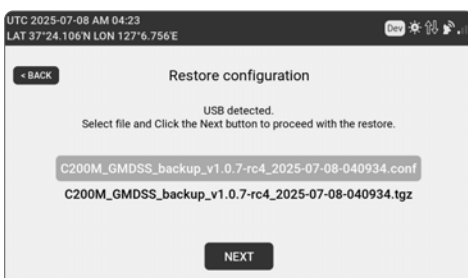

- h. Connect a USB containing a Config backup file* to restore the system. When the restore is completed, the system will start rebooting automatically.

* Config backup file: This file contains the SDT settings from a previous backup. It is backed up using the Web UI or a USB drive in advance.

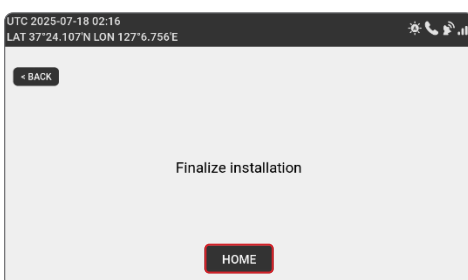

9. The Installation Wizard has now been successfully completed, and the GMDSS System is ready for use. Press the **Home** button to return to the home screen.

Chapter 10. Specification

10.1 Applicable Equipment Standards

Standards
IEC 60945:2002 incl. IEC 60945 Corr. 1:2008
IEC 61162-1:2016
IEC 61162-2 Ed.1.0:1998-09
IEC 61162-3 Ed.1.2 Consol. with A1 Ed. 1.0:2010-11 and A2 Ed. 1.0:2014-07
IEC 61162-450:2018
IEC 61097-16:2019
IEC 62923-1:2018
IEC 62923-2:2018
ETSI EN 301 444 V2.2.1:2021. And additionally, for Iridium equipment

10.2 C700 GMDSS Specification

10.2.1 SDT7000C

Item	Specification
Input Voltage	24Vdc
Power Consumption	15W
Weight	1.0 kg (2.2 lbs)
Dimensions	255 x 148 x 86 mm (10.0" x 5.8" x 3.4")
Temperature, operational	-15°C to +55°C (+5°F to +131°F)
IP rating, dust and water	IP34
Interfaces	2 x Ethernet, 2 x RS-422, 2 x RS-232, USB, CAN
Interface Input	ACK, ACNI, CRQ, GGA, GLL, GNS, HBT, NRM, RMC VBW, VHW, VTG, ZDA
Interface Output	ALC, ALF, ALR, ARC, HBT, NRM, NRX
LCD	7 inch
CPU	800MHz
Brilliance control	10 steps
Compass Safe Distance, standard	1.3 m (4.3 ft)
Compass Safe Distance, steer	0.9 m (3.0 ft)
Response time(Backlight on)	25ms(Max 35ms)

10.2.2 Handset(HS7000) w/o PTT button for SDT

HandSet(HS7000)	
Item	Specification
Weight	0.4 kg (0.9 lbs)
Dimensions	60 x 236 x 63 mm (2.4" x 9.3" x 2.5")
Temperature, operational	-15°C to +55°C (+5°F to +131°F)
IP rating, dust and water	IP56
Compass Safe Distance, standard	1.5m (4.9 ft)
Compass Safe Distance, steer.	1.2m (3.9 ft)
Cradle(HC1000)	
Item	Specification
Weight	0.2 kg (0.4 lbs)
Dimensions	82 x 189 x 69 mm (3.2" x 7.4" x 2.7")
Compass Safe Distance, standard	1.5m (4.9 ft)
Compass Safe Distance, steer.	1.2m (3.9 ft)

10.2.3 Above Deck Unit (C700)

ADU Specification		
Item		Specification
Vessel Motions	Roll	±20°
	Pitch	±20°
	Yaw	±20°
Tx Module	Frequency Range	1616 ~ 1626 MHz
	Output Power level	41.8 dBm (15.1 W) nominal
	Normal signal Gain	40 dB typ.
ADU Input Voltage		48 V DC supplied from BDU over Coax Cable
Radome Height		270 mm (10.62")
Radome Diameter		Ø370 mm (14.99")
ADU Weight		6.8 kg (15 lbs)
GNSS		GPS, GLONASS
Compass Safe Distance, standard		0.60 m (2.0 ft)
Compass Safe Distance, steer.		0.40 m (1.3 ft)
Coaxial cable		
Item		Specification
BDU connector		TNC (male)
ADU connector		TNC (male)
Max cable RF loss (@900 MHz)		13.4 dB (including connectors)
Maximum DC resistance		1.3 Ohm

RF Specification		
Item		Specification
Frequency	Rx	1616 MHz ~ 1626.5 MHz
	Tx	1616 MHz ~ 1626 MHz
Antenna Gain (Peak)		9.3 dBc
Coverage	Minimum Elevation where TX and RX performance is fully met	7.0° below horizon (This would allow for 15° vessel motion)
G/T (average over azimuth angles)		-8.2 ~ 10° (above the horizon) : -19.4dB/K < G/T 10 ~ 20°: -19.4 dB/K < G/T < -18 dB/K 20 ~ 40°: -18 dB/K < G/T 40 ~ 50°: -19.4 dB/K < G/T < -18 dB/K 50 ~ 90°: -19.4 dB/K < G/T
EIRP (average over azimuth angles)		-8.2 ~ 10° (above the horizon) : 17.4 dBW < EIRP 10 ~ 20°: 17.4 dBW < EIRP < 18.2 dBW 20 ~ 40°: 18.2 dBW < EIRP 40 ~ 50°: 17.4 dBW < EIRP < 18.2 dBW 50 ~ 90°: 17.4 dBW < EIRP
Antenna Polarization		RHCP

10.2.4 Below Deck Unit (CP-T1A1)

Item		Specification
Size (W x D x H)		315 x 190 x 42 mm (12.4" x 7.5" x 1.7")
Weight		1.5 kg (3.3 lbs) (Stand-alone Type)
LED Indicator		3 LEDs for Power, Tracking, Event
SIM		1 ea, 2FF Push-Push type with locking structure User Authentication
Ethernet		4x RJ45 female TCP/ IP connection 2 port PoE
RF Interface		1 ea, TNC Female Sub-System Connection to ADU
Analog		1 ea, RJ14 Female Analog Phone
GPIO		1 ea, (16 pins) General Purpose I/O
Wi-Fi		1 ea, SMA Female (802.11 b/g) External Wi-Fi Antenna
On/Off switch		1 ea., power switch or toggle type System Power Switch
Reset		1 ea System Reset
Grounding stud		1 ea Grounding
BDU Input Voltage		10.8 ~ 30 V DC, 120 W max
Power consumption	Tx Max	58W
	Rx only	33W
	Rating	110W (for power supply)
Web Interface		Embedded in BDU, available by Ethernet or Wi-Fi
Compass Safe Distance, std.		0.20 m (0.7 ft)
Compass Safe Distance, steer.		0.20 m (0.7 ft)

10.3 Accessory Specification (Optional)

10.3.1 Alarm Box(AB1000)

Item	Specification
Input Voltage	24Vdc
Power Consumption	2.5W
Weight	0.5 kg (1.1 lbs)
Dimensions	104 x 139 x 94 mm (4.1" x 5.5" x 3.7")
Temperature, operational	-15°C to +55°C (+5°F to +131°F)
IP rating, dust and water	IP10
Interfaces	CAN
Compass Safe Distance, standard	0.80 m (2.6 ft)
Compass Safe Distance, steer.	0.60 m (2.0 ft)

10.3.2 SSAS Box (SB7000T/SB7000A)

Item	Specification
Input Voltage	24Vdc
Power Consumption	0.2W
Weight	0.4 kg (0.9 lbs)
Dimensions	104 x 139 x 57 mm (4.1" x 5.5" x 2.2")
Temperature, operational	-15°C to +55°C (+5°F to +131°F)
IP rating, dust and water	IP10
Interfaces	CAN
Compass Safe Distance, standard	0.50 m (1.6 ft)
Compass Safe Distance, steer.	0.30 m (1.0 ft)

10.3.3 Alarm Unit (AU1000)

Item	Specification
Input Voltage	24Vdc
Power Consumption	3.6W
Weight	2.3 kg (5.1 lbs)
Dimensions	215 x 240 x 103 mm (8.5" x 9.4" x 4.1")
Temperature, operational	-15°C to +55°C (+5°F to +131°F)
IP rating, dust and water	IP20
Interfaces	CAN
Compass Safe Distance, std.	0.90 m (3.0 ft)
Compass Safe Distance, steer.	0.60 m (2.0 ft)

10.3.4 Junction Box (JB1000)

Item	Specification
Weight	1.1 kg (2.4 lbs)
Dimensions	210 x 190 x 34 mm (8.3" x 7.5" x 1.3")
IP rating, dust and water	IP10
Interfaces	2 x RS-422, RS-232, CAN
Compass Safe Distance, std.	0.40 m (1.3 ft)
Compass Safe Distance, steer.	0.30 m (1.0 ft)

10.4 Environmental Specification

Test	Intellian Standard	
Operation temperature	Antenna	IEC-60945 (-25°C to +55°C / power on)
	Other	-15°C to +55°C
Storage temperature	IEC-60945 (-40°C to +85°C / power off)	
Relative humidity	95% at 40°C (without dew condensation)	
Vibration	IEC 60945	