
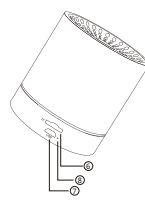
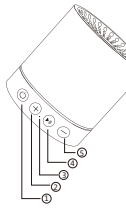

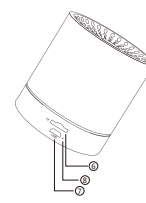
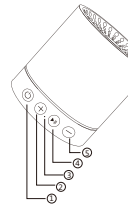


ATIVA™ WIRELESS SPEAKER USER MANUAL Altavoz inalámbrico Manual de usuario Call for technical support 1-877-777-4357 Llame para asistencia técnica 1-877-777-4357 Before operating this unit, please read all instructions. Lea atentamente las instrucciones antes de usar este producto. version 0218 Item 8927924 Importado por: Santos America Trading LLC, Inc., 6000 N. Midway Trail, Boca Raton, FL 33491-0524. Ativa is a trademark or a registered trademark of The Office Depot, Inc. © 2008 Office Depot, Inc. All rights reserved. Hecho en China  Pairing Your Device - Place the speaker near the Bluetooth-enabled device. - Long press POWER to start the Bluetooth speaker. White LED flashes, the speaker is now in pairing mode. Follow the instructions of your device to search for the speaker. - The speaker is called "872209". - When your device is connected and the pairing is completed, the voice prompts and the white LED light turn to slowly flash. - Short press Volume +/- to skip to next track/ previous track, long press volume +/- to adjust the desired volume. White LED light turn to slowly flash during playing. NOTE: The speaker is in the state of pairing the last device default in the first 3 seconds after starting. If failed to pair, the speaker will be in state of pairing automatically. Speaker Phone If a Bluetooth enabled phone is connected wirelessly to the unit, you can receive calls and speak through the microphone on the unit. Short press the play/pause button to answer the phone, long press the button to reject the phone. When the call ends, music will resume playing.	ATIVA Portable Wireless Audio Speaker Main Features - Connect wirelessly with smartphones, tablets, pads and many notebooks and MP3 players. - Built-in speaker phone and support long free for calling. - Up to 10 meters wireless connection range. - Built-in 100mAh re-chargeable battery for up to 2 hours playing time. - USB charging port. Package contents - Wireless speaker - USB charging cable - User manual  Controls - Power - Volume up (long press button) / Next track (short press button) - Microphone - Phone answer - Volume down (long press button) / Previous track (short press button) - TF card insert port - USB charging port - Charging indicator light LED indicators - Charging: Solid RED - Fully charged: RED off - Low battery: Voice of "60%" will informed - Pairing Mode: Flashing WHITE - Connected: Solid WHITE - Play: Slowly flashing WHITE Charging the speaker Before using the speaker for the first time, charging it for at least 0.5 hours. Approximately 2 hours required for fully charged. - Plug the USB cable into the port on the speaker, plug the other end into the USB port on the computer or on the AC adapter with USB (Jack DC 5V). - Red indicator will turn on to indicate that the unit is charging. - Red indicator will turn off when fully charged. Start-up/ Shutdown Functions - Long press POWER to start the Bluetooth speaker. - Blue LED flashes, waiting for pairing. - Long press POWER to shut down the Bluetooth speaker. - LED off if shutdown the speaker.	Pairing Your Device - Place the speaker near the Bluetooth-enabled device. - Long press POWER to start the Bluetooth speaker. White LED flashes, the speaker is now in pairing mode. Follow the instructions of your device to search for the speaker. - The speaker is called "872209". - When your device is connected and the pairing is completed, the voice prompts and the white LED light turn to slowly flash. - Short press Volume +/- to skip to next track/ previous track, long press volume +/- to adjust the desired volume. White LED light turn to slowly flash during playing. NOTE: The speaker is in the state of pairing the last device default in the first 3 seconds after starting. If failed to pair, the speaker will be in state of pairing automatically. Speaker Phone If a Bluetooth enabled phone is connected wirelessly to the unit, you can receive calls and speak through the microphone on the unit. Short press the play/pause button to answer the phone, long press the button to reject the phone. When the call ends, music will resume playing. TF card port To play the music in your TF card, insert your TF card to the TF card port on back of unit. The Bluetooth mode will be transferred to TF card function. Short press play/pause button to transfer back to Bluetooth function. IMPORTANT SAFETY GUARDS - Do not attempt to disassemble the unit as it might get damaged if you are not professional. - Do not expose the device to water or attempt to disassemble the device. If the device is exposed to water or disassembled, the user may be risking an electric shock. - Do not expose the device to direct sunlight, heat and flame. - Device may be warm while charging. It is normal. - Use only a soft dry cloth to clean the enclosure of the unit. Never use the liquid or abrasive cleaner. FCC statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.
ATIVA™ WIRELESS SPEAKER USER MANUAL Altavoz inalámbrico Manual de usuario Call for technical support 1-877-777-4357 Llame para asistencia técnica 1-877-777-4357 Before operating this unit, please read all instructions. Lea atentamente las instrucciones antes de usar este producto. version 0218 Item 8927924 Importado por: Santos America Trading LLC, Inc., 6000 N. Midway Trail, Boca Raton, FL 33491-0524. Ativa is a trademark or a registered trademark of The Office Depot, Inc. © 2008 Office Depot, Inc. All rights reserved. Hecho en China  Emparejamiento de su dispositivo - Ubique el parlante cerca del dispositivo con Bluetooth. - Haga una presión larga sobre el botón de ENCENDIDO para activar el parlante Bluetooth. El LED blanco parpadeará y el parlante estará ahora en modo de emparejamiento. Siga las instrucciones de su dispositivo para buscar el parlante. - El identificador del parlante es "872209". - Cuando su dispositivo esté conectado y el emparejamiento completo, recibirá un aviso de voz y el LED blanco comenzará a parpadear lentamente. - Haga una presión corta sobre Volumen +/- para pasar a la pista siguiente / anterior. Haga una presión larga sobre Volumen +/- para ajustar el volumen al nivel deseado. El LED blanco parpadeará lentamente durante la reproducción. NOTE: El parlante entra en modo de emparejamiento con el último dispositivo por defecto los primeros 3 segundos después de encenderlo. Si no se empareja, el parlante entrará en modo de emparejamiento automáticamente. Parlante del teléfono Si hay un teléfono Bluetooth conectado de modo inalámbrico al dispositivo, podrá recibir llamadas y hablar por el micrófono en los dispositivos. Haga una presión corta sobre el botón de reproducción/pausa para responder al llamado. Haga una presión larga sobre el botón para rechazar el llamado. Cuando finalice el llamado, la música seguirá reproduciéndose.	Parlante de audio portátil e inalámbrico ATIVA Características principales - Se conecta de modo inalámbrico con smartphones, tablets, pads y un gran número de notebooks y reproducciónes MP3. - Parlante para teléfono incorporado y compatibilidad con manos libres para realizar llamadas. - Alcance de conexión inalámbrica de hasta 30 metros. - Pila integrada recargable de 100mAh que ofrece hasta 2 horas de reproducción. - Puerto de carga USB Contenido del empaque - Parlante inalámbrico - Cable de carga USB - Manual del usuario  Controls - Encendido - Aumento de volumen (presión larga sobre el botón) / Pista siguiente (presión corta sobre el botón) - Microfono - Responder un llamado telefónico - Disminución de volumen (presión larga sobre el botón) / Pista anterior (presión corta sobre el botón) - Puerto de inserción de tarjeta TF - Puerto de carga USB - Luz indicadora de carga Indicadores LED - Cargando: ROJO fijo - Completamente cargado: ROJO apagado - Batería agotándose: Una señal acústica le informa - Modo de emparejamiento: BLANCO parpadeara - Reproducción: BLANCO fijo Carga del parlante Antes de usar el parlante por primera vez, cargarlo durante al menos 0.5 horas. Tarda aproximadamente 2 horas a cargarse completamente. - Conecte el cable USB al puerto de parlante, conecte el otro extremo a un puerto USB de una computadora o a un adaptador que contenga CA con una toma USB (DC 5V). - El indicador rojo se iluminará para mostrar que el dispositivo está cargando. - El indicador rojo se apagará cuando esté completamente cargado. Funciones de inicio y apagado - Haga una presión larga sobre el botón de ENCENDIDO para activar el parlante Bluetooth. - El LED azul parpadeará en espera del emparejamiento. - Haga una presión larga sobre el botón de ENCENDIDO para desactivar el parlante Bluetooth. - El LED se apaga para indicar que el parlante está apagado.	Puerto de tarjeta TF Para reproducir música desde una tarjeta TF, inserte la tarjeta TF en el puerto para tarjeta TF ubicado en la parte posterior del dispositivo. El modo Bluetooth será transferido a la función de tarjeta TF. Haga una presión corta sobre el botón de reproducción/pausa para volver a transferir la función Bluetooth. IMPORTANTES MEDIDAS DE SEGURIDAD - No exponga el dispositivo porque podría resultar dañado si no lo hiciera un profesional. - No exponga el dispositivo al agua ni trate de desarmarlo. Si el dispositivo se expone al agua o se desarma, el usuario podría recibir una descarga eléctrica. - No exponga el dispositivo a la luz directa del sol, al calor o a las llamas. - El dispositivo se puede calentar mientras se carga. Esto es normal. - Use un paño suave y seco para limpiar la carcasa del dispositivo. No utilice nunca líquidos o limpiadores abrasivos. Declaración FCC Este dispositivo cumple con la parte 15 de las Reglas de la FCC. La operación está sujeta a las siguientes dos condiciones: (1) El dispositivo no debe causar interferencias dañinas. (2) Este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan causar un funcionamiento no deseado. Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento pueden anular la autoridad del usuario para operar el equipo. NOTE: Este equipo ha sido probado y se encontró que cumple con los límites para un dispositivo digital de Clase B, de acuerdo con la parte 15 de las Reglas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, usa y puede transferir energía de radiofrecuencia y, si no se instala y usa de acuerdo con las instrucciones, puede causar interferencias dañinas a las comunicaciones de radio. Sin embargo, no hay garantía de que las interferencias no ocurran en una instalación en particular. Si este equipo causa interferencias dañinas a la recepción de radio o televisión, lo que puede determinarse apagando y encendiendo el equipo, se recomienda al usuario que intente corregir las interferencias mediante una o más de las siguientes medidas: - Reorientar o reubicar la antena receptora. - Aumentar la separación entre el equipo y el receptor. - Conectar el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor. - Consultar con el distribuidor, o con un técnico de radio/TV con experiencia, para que le aconseje.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.