



# **FMB010 User Manual**

## **V0.06**

## Table of contents

|          |                                                                       |           |
|----------|-----------------------------------------------------------------------|-----------|
| <b>1</b> | <b>INTRODUCTION .....</b>                                             | <b>6</b>  |
| 1.1      | ATTENTION .....                                                       | 6         |
| 1.2      | INSTRUCTIONS OF SAFETY .....                                          | 6         |
| 1.3      | LEGAL NOTICE .....                                                    | 7         |
| 1.4      | ABOUT DOCUMENT .....                                                  | 7         |
| <b>2</b> | <b>BASIC DESCRIPTION .....</b>                                        | <b>7</b>  |
| 2.1      | BASIC CHARACTERISTICS .....                                           | 8         |
| 2.2      | TECHNICAL FEATURES.....                                               | 9         |
| 2.3      | TECHNICAL INFORMATION ABOUT INTERNAL BATTERY.....                     | 10        |
| 2.4      | ELECTRICAL CHARACTERISTICS.....                                       | 11        |
| 2.5      | ABSOLUTE MAXIMUM RATINGS.....                                         | 11        |
| <b>3</b> | <b>CONNECTION, PINOUT, ACCESSORIES.....</b>                           | <b>12</b> |
| 3.1      | HOW TO INSERT MICRO SIM CARD INTO FMB010 DEVICE:.....                 | 12        |
| 3.2      | INSTALLING FMB010 DRIVERS .....                                       | 14        |
| 3.3      | OBD II .....                                                          | 16        |
| 3.4      | NAVIGATE LED.....                                                     | 17        |
| 3.5      | STATUS LED .....                                                      | 17        |
| <b>4</b> | <b>OPERATIONAL BASICS.....</b>                                        | <b>17</b> |
| 4.1      | OPERATIONAL PRINCIPALS.....                                           | 17        |
| 4.2      | SLEEP MODE .....                                                      | 17        |
| 4.2.1    | <i>Sleep mode .....</i>                                               | <i>17</i> |
| 4.2.2    | <i>Deep Sleep mode .....</i>                                          | <i>18</i> |
| 4.2.3    | <i>Online Sleep mode .....</i>                                        | <i>18</i> |
| 4.3      | VIRTUAL ODOMETER.....                                                 | 18        |
| 4.4      | FEATURES.....                                                         | 19        |
| 4.4.1    | <i>Green Driving Scenario. ....</i>                                   | <i>19</i> |
| 4.4.2    | <i>Over Speeding Scenario. ....</i>                                   | <i>20</i> |
| 4.4.3    | <i>Jamming detection .....</i>                                        | <i>20</i> |
| 4.4.4    | <i>Trip.....</i>                                                      | <i>20</i> |
| 4.5      | ACCELEROMETER SCENARIOS.....                                          | 20        |
| 4.5.1    | <i>Towing Detection.....</i>                                          | <i>20</i> |
| 4.5.2    | <i>Unplug Detection.....</i>                                          | <i>20</i> |
| 4.5.3    | <i>Crash Detection .....</i>                                          | <i>20</i> |
| 4.5.3.1  | <i>Crash Trace operation.....</i>                                     | <i>20</i> |
| <b>5</b> | <b>CONFIGURATION .....</b>                                            | <b>21</b> |
| 5.1      | CONFIGURATOR.....                                                     | 21        |
| 5.1.1    | <i>System settings.....</i>                                           | <i>22</i> |
| 5.1.2    | <i>Records settings.....</i>                                          | <i>25</i> |
| 5.1.3    | <i>GSM settings, GPRS part .....</i>                                  | <i>26</i> |
| 5.1.4    | <i>GSM settings, SMS part .....</i>                                   | <i>27</i> |
| 5.1.5    | <i>SMS Event Time Zones.....</i>                                      | <i>28</i> |
| 5.1.6    | <i>SMS events .....</i>                                               | <i>28</i> |
| 5.1.7    | <i>GSM settings, Operator list .....</i>                              | <i>30</i> |
| 5.1.8    | <i>Features settings .....</i>                                        | <i>31</i> |
| 5.1.9    | <i>Trip settings .....</i>                                            | <i>33</i> |
| 5.1.10   | <i>AutoGeofencing settings .....</i>                                  | <i>34</i> |
| 5.1.11   | <i>GPS Fuel Counter .....</i>                                         | <i>35</i> |
| 5.1.12   | <i>Scenarios Accelerometer .....</i>                                  | <i>36</i> |
| 5.1.13   | <i>Bluetooth.....</i>                                                 | <i>40</i> |
| 5.1.13.1 | <i>How to connect Bluetooth Hands Free adapter to FMB device.....</i> | <i>41</i> |
| 5.1.13.2 | <i>Device's log using your mobile phone. ....</i>                     | <i>43</i> |
| 5.1.13.3 | <i>How to connect OBD II Bluetooth Dongle to FMB device .....</i>     | <i>46</i> |

|          |                                                                  |           |
|----------|------------------------------------------------------------------|-----------|
| 5.1.14   | Data Acquisition Mode settings.....                              | 49        |
| 5.1.15   | Connecting to device via Bluetooth .....                         | 53        |
| 5.2      | I/O SETTINGS .....                                               | 53        |
| <b>6</b> | <b>SMS COMMAND LIST .....</b>                                    | <b>54</b> |
| 6.1      | SMS COMMAND LIST.....                                            | 54        |
| 6.1.1    | getinfo .....                                                    | 55        |
| 6.1.2    | getver .....                                                     | 55        |
| 6.1.3    | getstatus.....                                                   | 56        |
| 6.1.4    | getgps.....                                                      | 56        |
| 6.1.5    | ggps.....                                                        | 56        |
| 6.1.6    | readio #.....                                                    | 57        |
| 6.1.7    | getparam.....                                                    | 57        |
| 6.1.8    | setparam .....                                                   | 57        |
| 6.1.9    | flush #,#,#,#,#,## .....                                         | 57        |
| 6.1.10   | setdigout.....                                                   | 58        |
| 6.1.11   | countrecs .....                                                  | 58        |
| 6.1.12   | towingreact .....                                                | 58        |
| 6.1.13   | faultcodes.....                                                  | 58        |
| 6.1.14   | obdinfo .....                                                    | 58        |
| 6.1.15   | btgetlist .....                                                  | 58        |
| 6.2      | SYSTEM PARAMETERS .....                                          | 59        |
| 6.2.1    | Sleep Mode (ID=102) .....                                        | 59        |
| 6.2.2    | Sleep timeout (ID=103).....                                      | 59        |
| 6.2.3    | Movement Source (ID=100).....                                    | 59        |
| 6.2.4    | Static Navigation (ID=106) .....                                 | 59        |
| 6.2.5    | Saving/Sending without time synchronization (ID=107) .....       | 60        |
| 6.2.6    | GNSS Source (ID=109).....                                        | 60        |
| 6.2.7    | Ignition settings (ID=101) .....                                 | 60        |
| 6.2.8    | High voltage level (ID=104) .....                                | 60        |
| 6.2.9    | Low voltage level (ID=105) .....                                 | 60        |
| 6.2.10   | Led indication (ID=108).....                                     | 61        |
| 6.3      | RECORDS PARAMETERS .....                                         | 61        |
| 6.3.1    | Sorting (ID=1002) .....                                          | 61        |
| 6.3.2    | Open Link Timeout (ID=1000).....                                 | 61        |
| 6.3.3    | Server Response Timeout (ID=1001).....                           | 61        |
| 6.4      | GSM PARAMETERS .....                                             | 62        |
| 6.4.1    | GPRS content activation (ID=2000).....                           | 62        |
| 6.4.2    | APN Name (ID=2001).....                                          | 62        |
| 6.4.3    | APN username (ID=2002) .....                                     | 62        |
| 6.4.4    | APN Password (ID=2003).....                                      | 62        |
| 6.4.5    | Domain (ID=2004) .....                                           | 62        |
| 6.4.6    | Target Server Port (ID=2005).....                                | 63        |
| 6.4.7    | Protocol (ID=2006).....                                          | 63        |
| 6.5      | SMS/CALL SETTINGS .....                                          | 63        |
| 6.5.1    | SMS data sending settings (ID=3000).....                         | 63        |
| 6.5.2    | Data send number (ID=3001) .....                                 | 63        |
| 6.5.3    | Authorized phone numbers (ID=4000-4009) .....                    | 63        |
| 6.5.4    | SMS Event Predefined Numbers (ID=6000-6009) .....                | 64        |
| 6.5.5    | SMS Login (ID=3003) .....                                        | 64        |
| 6.5.6    | SMS Password (ID=3004).....                                      | 64        |
| 6.5.7    | Incoming call action (ID=3005).....                              | 64        |
| 6.5.8    | Outgoing Call Trigger (ID=3007).....                             | 64        |
| 6.5.9    | GSM number index (ID=3008) .....                                 | 64        |
| 6.5.10   | Operator List (ID=5000-5049).....                                | 65        |
| 6.6      | DATA ACQUISITION MODES PARAMETERS.....                           | 65        |
| 6.6.1    | Home Network GSM operator code "Vehicle on STOP" parameters..... | 65        |
| 6.6.1.1  | Min Period (ID=10000).....                                       | 65        |

|         |                                                                      |    |
|---------|----------------------------------------------------------------------|----|
| 6.6.1.2 | Min Saved Records (ID=10004) .....                                   | 65 |
| 6.6.1.3 | Send Period (ID=10005) .....                                         | 65 |
| 6.6.2   | Home Network GSM operator code "Vehicle MOVING" parameters .....     | 65 |
| 6.6.2.1 | Min Period (ID=10050).....                                           | 65 |
| 6.6.2.2 | Min Distance (ID=10051) .....                                        | 66 |
| 6.6.2.3 | Min Angle (ID=10052) .....                                           | 66 |
| 6.6.2.4 | Min Speed delta (ID=10053).....                                      | 66 |
| 6.6.2.5 | Min Saved Records (ID=10054) .....                                   | 66 |
| 6.6.2.6 | Send Period (ID=10055) .....                                         | 66 |
| 6.6.3   | Roaming Network GSM operator code "Vehicle on STOP" parameters ..... | 67 |
| 6.6.3.1 | Min Period (ID=10100).....                                           | 67 |
| 6.6.3.2 | Min Saved Records (ID=10104) .....                                   | 67 |
| 6.6.3.3 | Send Period (ID=10105) .....                                         | 67 |
| 6.6.4   | Roaming Network GSM operator code "Vehicle MOVING" parameters .....  | 67 |
| 6.6.4.1 | Min Period (ID=10150).....                                           | 67 |
|         | Min Distance (ID=10151).....                                         | 67 |
| 6.6.4.2 | Min Distance (ID=10151) .....                                        | 68 |
|         | Min Period (ID=10150) .....                                          | 68 |
| 6.6.4.3 | Min Angle (ID=10152) .....                                           | 68 |
| 6.6.4.4 | Min Speed (ID=10153) .....                                           | 68 |
|         | Min Period (ID=10150) .....                                          | 68 |
|         | Min Distance (ID=10151).....                                         | 68 |
| 6.6.4.5 | Min Saved Records (ID=10154) .....                                   | 69 |
| 6.6.4.6 | Send Period (ID=10155) .....                                         | 69 |
| 6.6.5   | Unknown Network GSM operator code "Vehicle on STOP" parameters ..... | 69 |
| 6.6.5.1 | Min Period (ID=10200).....                                           | 69 |
| 6.6.5.2 | Min Saved Records (ID=10204) .....                                   | 69 |
| 6.6.5.3 | Send Period (ID=10205) .....                                         | 69 |
| 6.6.6   | Unknown Network GSM operator code "Vehicle MOVING" parameters .....  | 69 |
| 6.6.6.1 | Min Period (ID=10250).....                                           | 69 |
| 6.6.6.2 | Min Distance (ID=10251) .....                                        | 70 |
|         | Min Period (ID=10150) .....                                          | 70 |
| 6.6.6.3 | Min Angle (ID=10252) .....                                           | 70 |
| 6.6.6.4 | Min Speed (ID=10253) .....                                           | 70 |
|         | Min Distance (ID=10151).....                                         | 70 |
| 6.6.6.5 | Min Saved Records (ID=10254) .....                                   | 71 |
| 6.6.6.6 | Send Period (ID=10255) .....                                         | 71 |
| 6.7     | FEATURES PARAMETERS .....                                            | 71 |
| 6.7.1   | Green driving priority (ID=11000).....                               | 71 |
| 6.7.2   | Max Acceleration Force (ID=11004) .....                              | 71 |
| 6.7.3   | Max Braking Force (ID=11005).....                                    | 71 |
| 6.7.4   | Max Cornering (ID=11006) .....                                       | 71 |
| 6.7.5   | Green/Eco driving (ID=11007) .....                                   | 72 |
| 6.7.6   | Green driving digital output control settings (ID=11003).....        | 72 |
| 6.7.7   | Green driving Digital output on duration (ID=11001) .....            | 72 |
| 6.7.8   | Green driving Digital output off duration (ID=11002) .....           | 72 |
| 6.7.9   | Overspeeding priority (ID=11100) .....                               | 72 |
| 6.7.10  | Max allowed Speed (ID=11104).....                                    | 72 |
| 6.7.11  | Overspeeding output control (ID=11103) .....                         | 73 |
| 6.7.12  | Overspeeding Digital output on duration (ID=11101) .....             | 73 |
| 6.7.13  | Overspeeding Digital output off duration (ID=11102).....             | 73 |
| 6.7.14  | Excessive idling priority (ID=11200).....                            | 73 |
| 6.7.15  | Eventual records (ID=11203) .....                                    | 73 |
| 6.7.16  | Excessive idling minimum stop duration (ID=11205).....               | 73 |
| 6.7.17  | Excessive idling minimum move duration (ID=11206).....               | 74 |
| 6.7.18  | Excessive idling output control (ID=11204) .....                     | 74 |
| 6.7.19  | Excessive idling output on duration (ID=11201) .....                 | 74 |
| 6.7.20  | Excessive idling output off duration (ID=11202).....                 | 74 |
| 6.7.21  | Jamming (ID=11300) .....                                             | 74 |
| 6.7.22  | Jamming Eventual records (ID=11303).....                             | 74 |
| 6.7.23  | Jamming Output Control (ID=11304) .....                              | 75 |

|          |                                                   |    |
|----------|---------------------------------------------------|----|
| 6.7.24   | Jamming DOUT on duration [ms] (ID=11301) .....    | 75 |
| 6.7.25   | Jamming DOUT off duration [ms] (ID=11302) .....   | 75 |
| 6.7.26   | DOUT control via call (ID=12000) .....            | 75 |
| 6.7.27   | DOUT deactivation settings (ID=12001) .....       | 75 |
| 6.7.28   | DOUT duration timeout [s] (ID=12002) .....        | 75 |
| 6.7.29   | Trip priority priority (ID=11800) .....           | 76 |
| 6.7.30   | Start Speed (ID=11803).....                       | 76 |
| 6.7.31   | Ignition Off Timeout (ID=11804).....              | 76 |
| 6.7.32   | Trip mode (ID=11802).....                         | 76 |
| 6.8      | AUTOGEOFENCING.....                               | 76 |
| 6.8.1.1  | AutoGeofencing priority (ID=20000) .....          | 76 |
| 6.8.1.2  | Activation Timeout (ID=20003) .....               | 76 |
| 6.8.1.3  | Deactivate by (ID=20005).....                     | 77 |
| 6.8.1.4  | AutoGeofence event generating (ID=20001) .....    | 77 |
| 6.8.1.5  | Radius (ID=20004).....                            | 77 |
| 6.9      | GPS FUEL COUNTER .....                            | 77 |
| 6.9.1.1  | City Consumption L/100km (ID=11900).....          | 77 |
| 6.9.1.2  | Highway Consumption L/100km (ID=11901) .....      | 77 |
| 6.9.1.3  | Average Consumption L/100km (ID=11902) .....      | 77 |
| 6.9.1.4  | City Speed [km/h] (ID=11903).....                 | 77 |
| 6.9.1.5  | Highway Speed [km/h] (ID=11904) .....             | 78 |
| 6.9.1.6  | Average Speed [km/h] (ID=11905) .....             | 78 |
| 6.9.1.7  | Correction coefficient (ID=11906) .....           | 78 |
| 6.9.1.8  | Fuel Consumption on Idling [L/h] (ID=11907) ..... | 78 |
| 6.9.1.9  | Higher Speeds Add [%] (ID=11908).....             | 78 |
| 6.9.1.10 | Highway Consumption every km/h (ID=11909) .....   | 78 |
| 6.10     | SCENARIOS ACCELEROMETER.....                      | 78 |
| 6.10.1   | Unplug Detection.....                             | 78 |
| 6.10.1.1 | Scenario settings (ID=11500).....                 | 78 |
| 6.10.1.2 | Eventual records (ID=11501) .....                 | 79 |
| 6.10.1.3 | Unplug detection mode (ID=11502) .....            | 79 |
| 6.10.1.4 | Send sms to (ID=7067) .....                       | 79 |
| 6.10.1.5 | SMS Text (ID=8067) .....                          | 79 |
| 6.10.2   | Crash Detection .....                             | 79 |
| 6.10.2.1 | Scenario settings (ID=11400).....                 | 79 |
| 6.10.2.2 | Duration [ms] (ID=11401) .....                    | 79 |
| 6.10.2.3 | Threshold [mG] (ID=11402).....                    | 79 |
| 6.10.2.4 | Crash trace (ID=11406) .....                      | 80 |
| 6.11     | BLUETOOTH .....                                   | 80 |
| 6.11.1.1 | BT Radio (ID=800) .....                           | 80 |
| 6.11.1.2 | Local name (ID 801) .....                         | 80 |
| 6.11.1.3 | Local PIN (ID=802) .....                          | 80 |
| 6.11.1.4 | Security mode (ID=803) .....                      | 80 |
| 6.11.1.5 | External MAC (ID=804).....                        | 80 |
| 6.11.1.6 | External name (ID=805) .....                      | 80 |
| 6.11.1.7 | External PIN (ID=806).....                        | 81 |
| 6.11.1.8 | Connection mode (ID=807) .....                    | 81 |
| 6.11.1.9 | Authorized devices MAC list (ID=830 - 834).....   | 81 |
| 6.12     | I/O PARAMETERS.....                               | 81 |
| 6.12.1   | I/O#1 property parameter Ignition (ID=50000)..... | 81 |
| 6.12.2   | I/O#1 Logic operand (ID=50001) .....              | 81 |
| 6.12.3   | I/O#1 High level (ID=50002) .....                 | 82 |
| 6.12.4   | I/O#1 Low level (ID=50003) .....                  | 82 |
| 6.12.5   | I/O#1 Event only (ID=50004) .....                 | 82 |
| 6.12.6   | I/O#1 averaging length (ID=50005).....            | 83 |
| 6.13     | I\O ELEMENTS PARAMETERS AND TYPES. ....           | 83 |
| 7        | SPY CALL FUNCTIONALITY .....                      | 87 |
|          | CHANGE LOG.....                                   | 88 |

## 1 INTRODUCTION

### 1.1 Attention



Do not disassemble the device. If the device is damaged, before unplugging the power supply, do not touch the device.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



Please consult representatives of your vehicle model regarding OBD II location on your vehicle. In case you are not sure of proper connection, please consult qualified personnel.



The programming must be performed using a second class PC (with autonomic power supply).



The device is susceptible to water and humidity.



Any installation and/or handling during a lightning storm are prohibited.



FMB010 has USB interface;  
Teltonika is not responsible for any harm caused by using wrong cables for PC <-> FMB010 connection.



Warning! Do not use FMB010 device if it distracts driver or causes inconvenience due to OBD II placement. Device must not interfere with driver.

### 1.2 Instructions of safety

This chapter contains information on how to operate FMB010 safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

The device uses a 10 V...16 V DC power supply. The nominal voltage is 12 V DC. The allowed range of voltage is 10 V...16 V DC.

To avoid mechanical damage, it is advised to transport the FMB010 device in an impact-proof package.

Before dismounting the device from the vehicle, ignition must be off.

### **1.3 Legal Notice**

Copyright © 2017 Teltonika. All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Teltonika is prohibited.

Other products and company names mentioned here may be trademarks or trade names of their respective owners.

The manufacturer reserves the right to make changes and/or improvements at any time in design, functionality, parameters and electrical characteristics without any prior notice and without incurring obligations.

### **1.4 About document**

This document contains information about the architecture, possibilities, mechanical characteristics, and configuration of the FMB010 device.

Acronyms and terms used in document:

PC – Personal Computer;

GPS – Global Positioning System;

GPRS – General Packet Radio Service;

GNSS – Global Navigation Satellite System;

GSM – Global System for Mobile Communications;

SMS – Short Message Service;

AC/DC – Alternating Current/Direct Current;

I/O – Input/Output;

Record – AVL data stored in FMB010 memory. AVL data contains GNSS and I/O information;

AVL packet - data packet which is being sent to the server during data transmission.

## **2 BASIC DESCRIPTION**

FMB010 is tracking terminal with GNSS and GSM connectivity, which is able to collect device coordinates and transfer them via GSM network to server. This device is perfectly suitable for applications, which need location acquirement of remote objects. FMB010 also has a USB port for device status log output and entering configurations.

Package contents<sup>1</sup>

The FMB010 device is supplied to the customer in a cardboard box containing all the equipment that is necessary for operation. The package contains:

Already implemented FMB010 device into case;

Top and bottom device cover parts;

128MB Micro SD card;

OBD II power supply adapter.

---

<sup>1</sup> Package content depends on Order Code, and can be customized by customer needs.

## **2.1 Basic characteristics**

GSM / GPRS / GNSS features:

- Teltonika TM2500 quad band module (GSM 850 / 900 / 1800 / 1900 MHz);
- GPRS class 12;
- SMS (text, data).
- Integrated GNSS receiver
- Up to -162 dBm GNSS receiver sensitivity.

Hardware features:

- Built-in movement sensor;
- Built-in Bluetooth 3.0;
- Internal High Gain GNSS antenna;
- Internal High Gain GSM antenna;
- microSD card reader;
- 170 mAh Li-ion rechargeable 3.7 V battery;
- OBD II interface.

Interface features:

- Power supply: 10 ÷ 16V;
- 1 digital input;
- CAN;
- K-LINE;
- USB port
- OBD II;
- 2 LEDs indicating device status.

Special features:

- Fast position fix;
- High Quality track even in high density urban canyon;
- Small case;
- High gain internal GNSS and GSM antennas;
- 2 LED status indication;
- Real-Time tracking;
- Smart data acquisition based on:
  - Time;
  - Angle;
  - Distance;
  - Ignition or any other I/O event;
- Sending acquired data via GPRS;
- GPRS and SMS I/O events;
- Virtual odometer;
- Jamming detection;
- Configurable using Secured SMS Commands;
- Spy call;
- Overvoltage protection.

## 2.2 Technical features

| Part name        | Physical specification    | Technical details                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------------------|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Navigation LED   | LED                       | Power supply 10...16 V DC<br>2 W Max<br>Energy consumption <sup>1</sup> :<br>GPRS: --- 50 mA r.m.s Max.,<br>Nominal: --- average 35 mA r.m.s,<br>GPS Sleep: --- average 12 mA,<br>Deep Sleep: --- average 10 mA <sup>2</sup><br>Battery charge current:<br>--- average 120 mA,<br>Rated current:<br>--- 250 mA,<br>Operation temperature:<br>-25 °C ... +55 °C<br>Storage temperature:<br>-40 °C ... +70 °C<br>Storage relative humidity 5 ... 95 % (no condensation)<br>Internal fuse: 3A, 125V |
| Modem LED        | LED                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| OBD-II connector | Standard OBD-II connector |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| USB              | Mini USB socket           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 1. FMB010 specifications

<sup>1</sup> Energy consumption has been tested at 12V voltage with no battery charging.

<sup>2</sup> When in Deep Sleep mode no data storing and sending is activated.

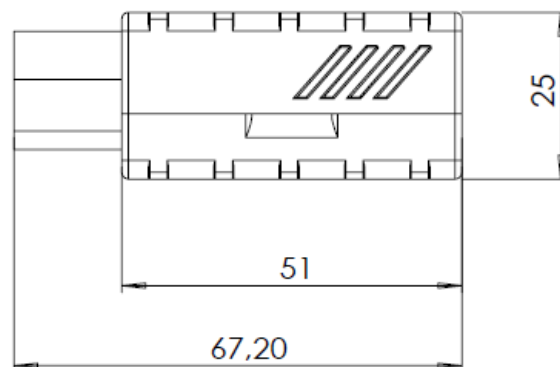
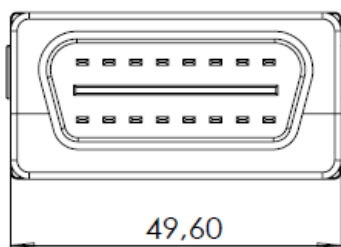
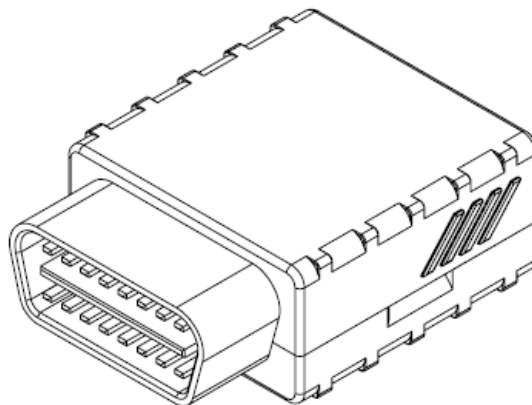


Figure 1 FMB010 view & dimensions (tolerance  $\pm 2\text{mm}$ )

### 2.3 Technical Information about internal battery

Li-Polymer rechargeable battery, 3.7 V, 170 mAh.

| Internal back-up battery        | Battery voltage V | Nominal capacity (mAh) | Power(Wh)   | Charging temperature °C |
|---------------------------------|-------------------|------------------------|-------------|-------------------------|
| Li-Polymer rechargeable battery | 3.75 ~ 3.90       | $\geq 170$             | 0.64 - 0.66 | 0 – 45                  |

Table 2 Battery specifications

FMB010 internal battery is used for detecting external voltage disconnection.



CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

## 2.4 Electrical characteristics


| CHARACTERISTIC DESCRIPTION                        | VALUE | Min. | Typ. | Max.           | Unit |
|---------------------------------------------------|-------|------|------|----------------|------|
|                                                   |       |      |      |                |      |
| <b>Supply Voltage:</b>                            |       |      |      |                |      |
| Supply Voltage (Recommended Operating Conditions) |       | 10   |      | 16             | V    |
| <b>Digital Input:</b>                             |       |      |      |                |      |
| Input resistance (DIN1)                           |       | 15   |      |                | kΩ   |
| Input Voltage (Recommended Operating Conditions)  |       | 0    |      | Supply voltage | V    |
| Input Voltage threshold (DIN1)                    |       |      | 5    |                | V    |

## 2.5 Absolute Maximum Ratings


| CHARACTERISTIC DESCRIPTION                       | VALUE | Min. | Typ. | Max. | Unit |
|--------------------------------------------------|-------|------|------|------|------|
|                                                  |       |      |      |      |      |
| Supply Voltage (Absolute Maximum Ratings)        |       | -16  |      | 16   | V    |
| Digital Input Voltage (Absolute Maximum Ratings) |       | -32  |      | 32   | V    |

### 3 CONNECTION, PINOUT, ACCESSORIES


#### 3.1 How to insert micro SIM card into FMB010 device:

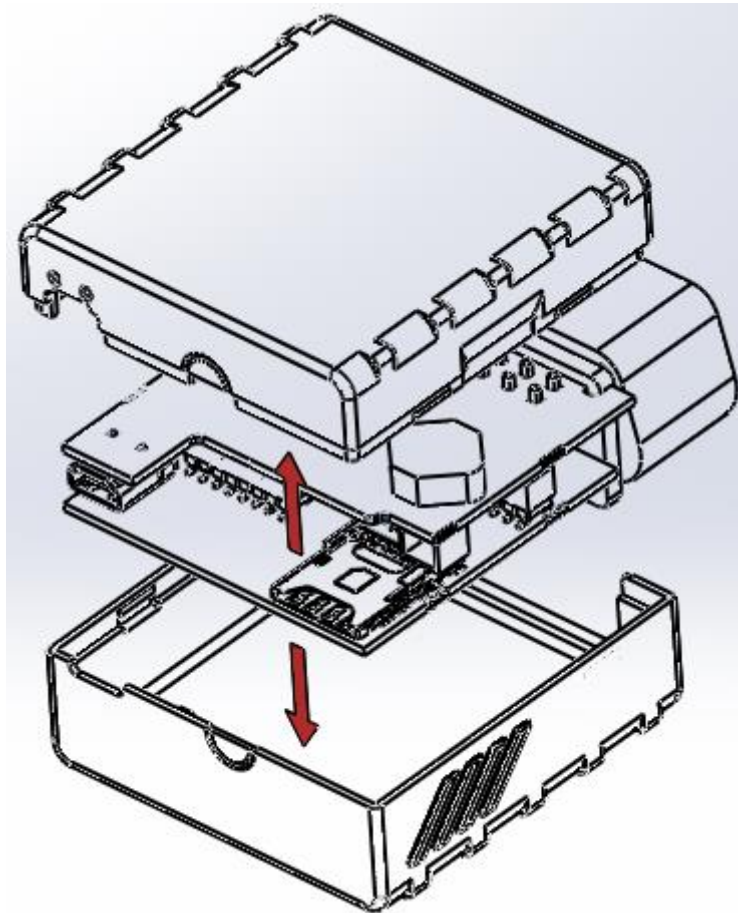


① Remove FMB010 cover

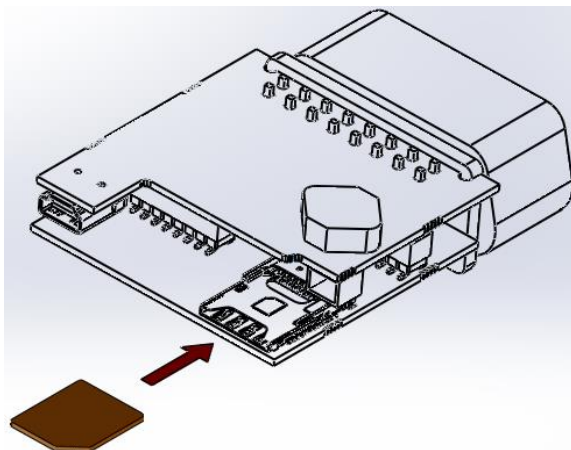


② Insert micro SIM card as shown (bottom slot)

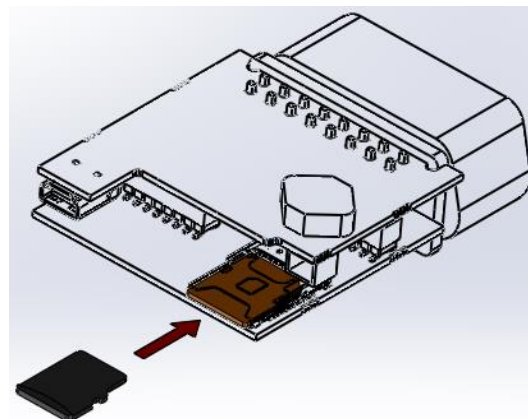

③ Insert SD card as shown (top slot)

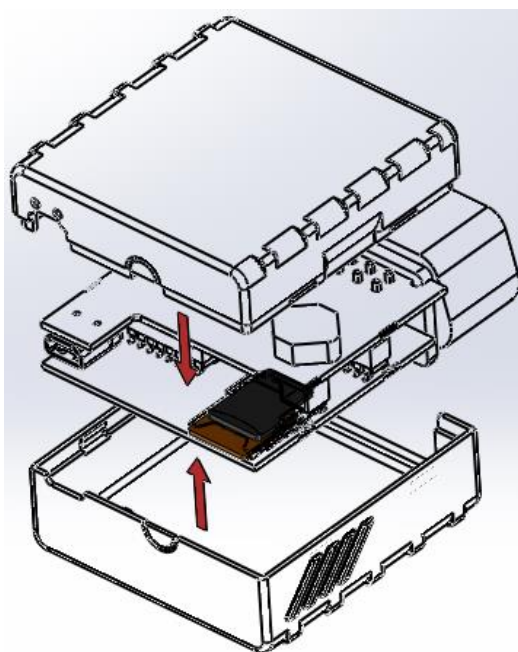

③ Attach cover

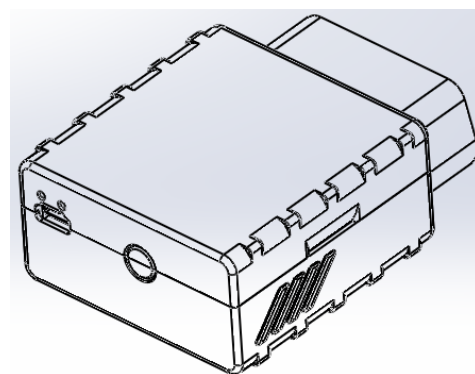

④ Device is ready

### 3.2 Installing FMB010 drivers

#### Software requirements:

- Operating system 32-bit and 64-bit: Windows XP with SP3 or later, Windows Vista, Windows 7.
- MS .NET Framework V3.5 or later (<http://www.microsoft.com> or <http://av11.teltonika.lt/downloads/tav/Framework/dotnetfx35setupSP1.zip>).

#### Drivers:

Please download MediaTek inbox COM Port drivers from Teltonika website: [http://av11.teltonika.lt/downloads/FMB0/MS\\_USB\\_ComPort\\_Driver\\_exe\\_v1.1032.3.zip](http://av11.teltonika.lt/downloads/FMB0/MS_USB_ComPort_Driver_exe_v1.1032.3.zip)

#### Installing drivers:

Extract and run FP\_INBOX\_InstallDriver\_v1.1032.3.exe. This driver is used to detect FMB010 device connected to the computer. Click 'Next' in driver installation window (figures below):

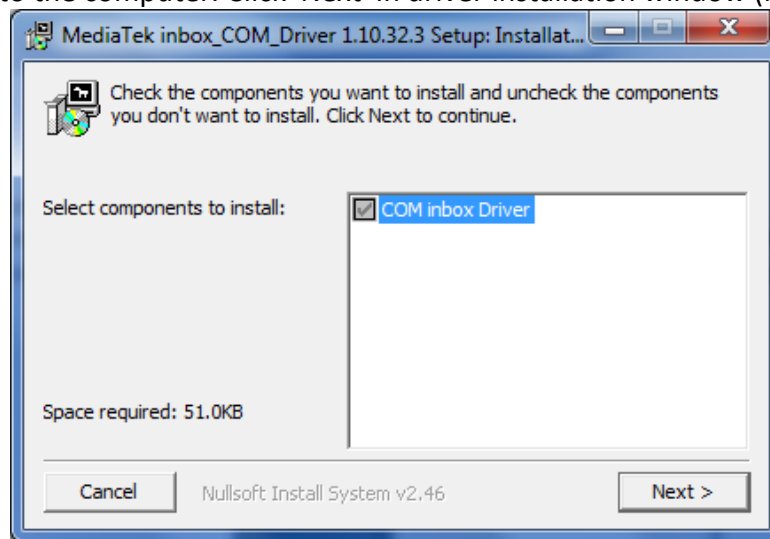


Figure 2 Driver installation window

This will launch device driver installation wizard. In the following window click 'Install' button:


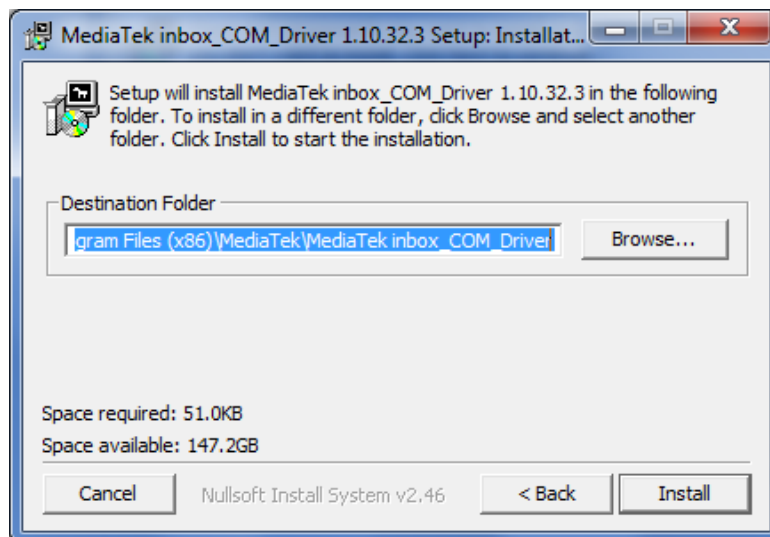


Figure 3 Driver installation window

Setup will continue installing drivers and will display a window about successful process at the end. Click 'Finish' to complete setup:

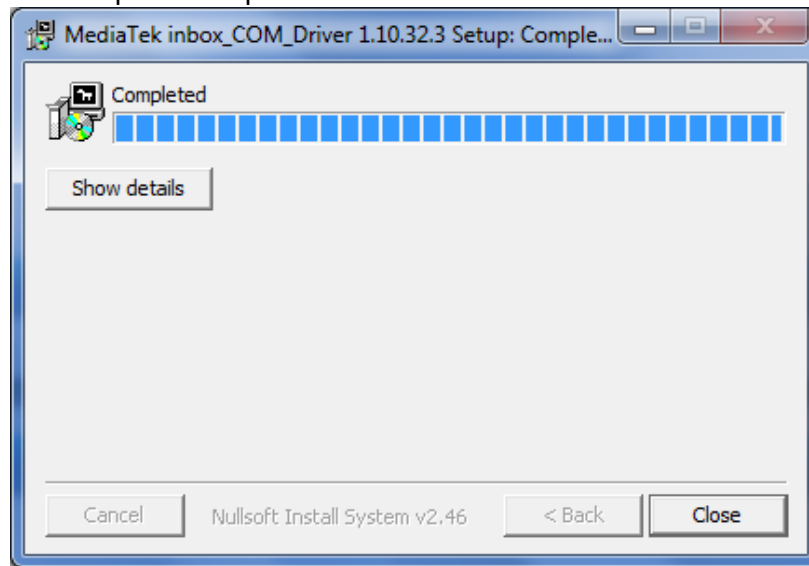

**Figure 4 Driver installation window**

You have now installed drivers for FMB010 device successfully.

### 3.3 OBD II

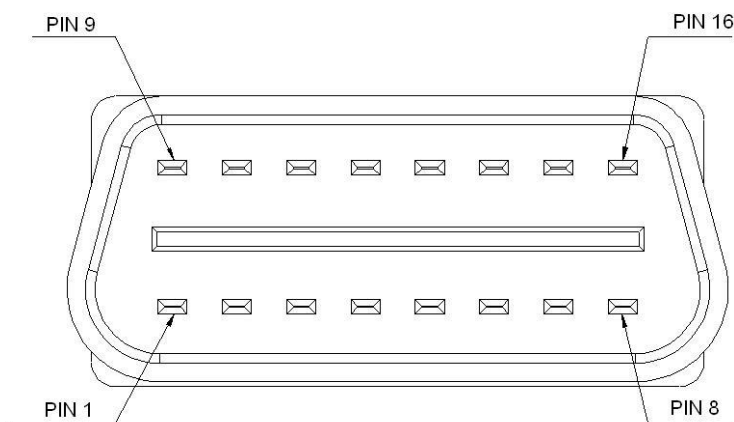


Figure 5 OBD II pinout

| Pin Nr. | Pin Name            | Description                           |
|---------|---------------------|---------------------------------------|
| 1       | Ignition input      |                                       |
| 2       | PWM_BUS+/VPW        |                                       |
| 3       | -                   |                                       |
| 4       | GND (-)             | Ground pin.                           |
| 5       | GND (-)             | Ground pin.                           |
| 6       | CAN_H               |                                       |
| 7       | K-Line              |                                       |
| 8       | -                   |                                       |
| 9       | -                   |                                       |
| 10      | PWM_BUS-            |                                       |
| 11      | -                   |                                       |
| 12      | -                   |                                       |
| 13      | -                   |                                       |
| 14      | CAN_L               |                                       |
| 15      | L-Line              |                                       |
| 16      | Power +(10÷16) V DC | Power range +(10...16) V DC to ground |

Table 3 FMB010 pinout description

### 3.4 Navigate LED

| Behavior                | Meaning                                                                                                                                                                             |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Permanently switched on | GNSS signal is not received                                                                                                                                                         |
| Blinking every second   | Normal mode, GNSS is working                                                                                                                                                        |
| Off                     | GNSS is turned off because: <ul style="list-style-type: none"> <li>• Deep sleep mode</li> </ul> Or <ul style="list-style-type: none"> <li>• GNSS antenna short circuited</li> </ul> |

### 3.5 Status LED

| Behavior                       | Meaning                                                                                                                                                        |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blinking every second          | Normal mode                                                                                                                                                    |
| Blinking every 2 seconds       | Deep sleep mode                                                                                                                                                |
| Blinking fast for a short time | Modem activity                                                                                                                                                 |
| Blinking fast constantly       | Boot mode                                                                                                                                                      |
| Off                            | <ul style="list-style-type: none"> <li>• Device is not working</li> </ul> Or <ul style="list-style-type: none"> <li>• Device firmware being flashed</li> </ul> |

## 4 OPERATIONAL BASICS

### 4.1 Operational principals

FMB010 module is designed to acquire records and send them to the server. Records contain GNSS data and I/O information. Module uses GNSS receiver to acquire GNSS data and is powered with three data acquiring methods: time-based, distance-based and angle-based. Note, that if FMB010 loses connection to GNSS satellites, it continues to make records, however coordinate in these records remains the same (last known coordinate). All data is stored in flash memory and later can be sent via GPRS.

GPRS and SMS settings are described in later sections. FMB010 communicates with server using special data protocol.

FMB010 can be managed by SMS commands. SMS Command list is described in SMS COMMAND LIST section. Module configuration can be performed only via SMS.

### 4.2 Sleep mode

#### 4.2.1 Sleep mode

FMB010 is able to go to sleep mode if such mode is enabled.

This timeout (defined period) starts counting when device is in STOP mode. After timeout is reached and all conditions for sleep mode are met, device goes to sleep mode. While in sleep mode, FMB010 turns GPS module off and it is still making new periodic records. As a result power usage decreases, in turn saving vehicle battery.

FMB010 can enter sleep mode if **ALL** of these conditions are met:

- FMB010 has to be configured to work in Sleep mode and start sleep timeout is reached;

- Device must have synchronized time with GNSS satellites;
- No movement by movement sensor is detected;
- Ignition (configured Ignition Source) is off.

FMB010 exits sleep mode when if **ONE** of following conditions are true:

- Movement by movement sensor is detected;
- Ignition (configured Ignition Source) is turned on.

#### 4.2.2 Deep Sleep mode

While in deep sleep mode, FMB010 sets GNSS receiver to sleep mode and turns off GSM/GPRS module (it is not possible to wake up device via SMS). Despite records with last known coordinate are being saved and send to AVL server (GSM/GPRS module is turned on to send data and after that it is turned off again), power usage is decreased to save vehicle's battery. Note, that power saving depends on two configurable parameters: send period and min. record saving period in "X on Stop Mode".

FMB010 can enter deep sleep mode if **ALL** of these conditions are met:

- FMB010 has to be configured to work in Deep Sleep mode;
- Device must be synchronized time with GNSS satellites;
- FMB010 has to be in „X on Stop Mode“ (Configured by Mode switch parameter);
- Movement by accelerometer is not detected;
- Ignition (Configured to be detected by Power Voltage, Ignition or Accelerometer) is off;
- Min. Record Saving Period (Data Acquisition Mode settings) must be bigger than Active Data Link Timeout parameter, that FMB010 could close GPRS link.
- Send period (Data Acquisition Mode settings) minus Active Data Link Timeout must be more than 90 sec., that FMB010 could close GPRS link for at least 90 sec.
- Sleep timeout is reached.

FMB010 exits deep sleep mode when if **ONE** of following conditions are true:

- Movement by accelerometer is detected;
- Ignition (Configured to be detected by Power Voltage, Ignition or Accelerometer) is turned on.

#### 4.2.3 Online Sleep mode

In this mode device works as in Deep Sleep mode, but without turning off GSM network. GSM part stays powered, so this increases power consumption. In this mode, device should received/send SMS and make/receive calls. Also not closes GPRS context, if previously opened.

#### 4.3 Virtual odometer

Virtual odometer is used to calculate traveled distance in FMB010 as a separate I/O element. When FMB010 detects movement, it starts counting distance using GNSS signal: every second it checks current location and calculates distance between current and previous point. It keeps adding these intervals until it is time to make a record, then FMB010 records its location

and adds odometer value, which is equal to the sum of all distances, measured every second. User can choose Odometer mode: 0 – Normal mode, or 1 – Continuous.

At Normal mode, when record is made, odometer resets to zero and distance calculation starts all over again.

Continuous odometer mode requires ignition (configured Ignition source) to be turned on. Odometer counts all distance calculations from records and sums them to one distance. Continuous odometer stops counting, when vehicle is at stop and ignition is turned off.

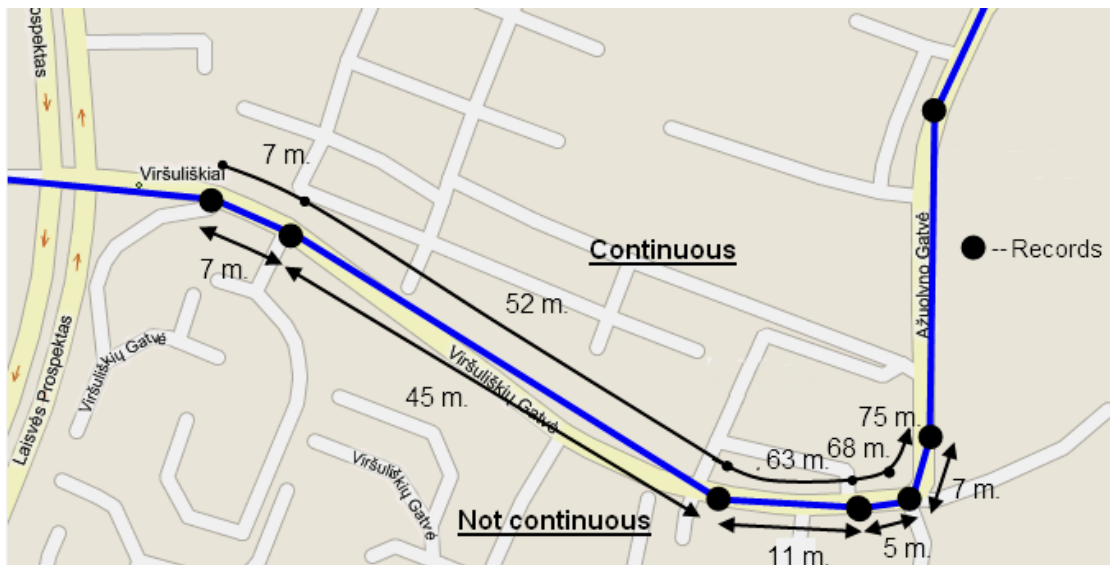


Figure 6 Odometer continuous and Not continuous distance counting parameter example

#### 4.4 Features

Using available features can greatly increase FMB010 usability options.

##### 4.4.1 Green Driving Scenario.

Helps to prevent and inspect driver about harsh driving. Scenario continuously monitors: accelerating force, braking force and cornering angles.

To prevent generating false events, harsh acceleration and harsh braking is monitored only when following conditions are fulfilled:

- Ignition is ON (DIN1 = 1)
- Vehicle speed is equal or higher than 10km/h

Harsh cornering is monitored only when following conditions are fulfilled:

- Ignition is ON (DIN1 = 1)
- Vehicle speed is equal or higher than 30km/h



Note: Green Driving Scenario is a factor on various cars and various drivers testing phase and can be subject to changes. Teltonika is constantly working on improvement of the functionality of the devices, and strongly recommends using the latest version of the firmware.

#### 4.4.2 Over Speeding Scenario.

Helps to prevent from exceeding fixed speed.

#### 4.4.3 Jamming detection

Jamming detection shows when GSM signal jamming occurs.

#### 4.4.4 Trip

Trip customizable feature enables user extended monitoring of performed trips (from engine start at present location to engine stop at arrived location), log their start and stop points, view driven total distance<sup>3</sup>.



Note: Scenarios and Trip feature are activated only if DIN1=1 (ignition is on).

### 4.5 Accelerometer scenarios

#### 4.5.1 Towing Detection

**Towing detection scenario** helps to inform driver about car departing. FMB010 generates event when car is being towed or raised, for example in case of vehicle evacuation.

FMB010 activates towing function when these conditions are met:

- Ignition (configured Ignition Source) is OFF
- Activation Timeout (set in Towing detection features) is reached

When Activation Timeout is reached and Ignition is still in OFF state, FMB010 monitors accelerometer data. If Acceleration or Angle value reaches configured threshold for configured Duration (in ms), check Ignition state. If Ignition is still OFF during configured "Ignition check after Event Timeout" time, then event is generated. If configured - sends sms event or makes a call.

Function will be reactivated after FMB010 again detects change of Ignition state from ON to OFF.

#### 4.5.2 Unplug Detection

**Unplug detection Scenario** generates event when FMB010 is unplugged from OBD socket.

#### 4.5.3 Crash Detection

If Crash detection is enabled, it monitors acceleration on each axis, if acceleration exceeds configured value for longer then configured duration, event with value "1" is generated.

##### 4.5.3.1 Crash Trace operation

If trace is enabled FMB will collect acceleration data every 40 msec.

---

<sup>3</sup> Continuous odometer – total driven distance, works only in TRIP mode. Continues distance is counted only for ONE trip. If trip is finished (stop point is detected), odometer resets to 0 (zero). Next trip will start counting from the beginning.

## 5 CONFIGURATION

### 5.1 *Configurator*

New FMB010 module has default factory settings. Settings should be changed according to your application and your GSM operator information.

FMB010 configuration may be performed via SMS commands or configurator.

FMB010 has one user editable profile.

It can be configured to acquire and send data to server. If device is not able to send data to server, GSM is not available FMB010 will start storing records to flash memory. It is possible to store up to 122880 data records with 64mb SD memory card. It will send data later when GPRS is available again. Note that FMB010 can have memory full of records. In such case it will start deleting oldest records in order to save new ones. Sending all data records to server may take some time.

FMB010 configuration is performed via FMB010 Configurator program. Contact sales manager to get the latest FMB010 Configurator version. FMB010 configurator operates on Microsoft Windows OS and uses MS .Net Framework 3.5 or higher. Please ensure that MS .Net Framework 3.5 or later is installed on your PC before starting configurator. Latest MS .Net Framework version can be downloaded from official Microsoft web page.

Module configuration is performed over USB cable or BlueTooth connection. Configuration process starts from starting FMB010 Configurator program and then connecting to FMB010 device via Connect button located in Online menu part. FMB010 has one user editable profile, which can be loaded from device, and saved. User can also revert to default settings, by pressing Reset to defaults button. After any modification of configuration settings it has to be saved to FMB010 device, otherwise it will not be written to device.

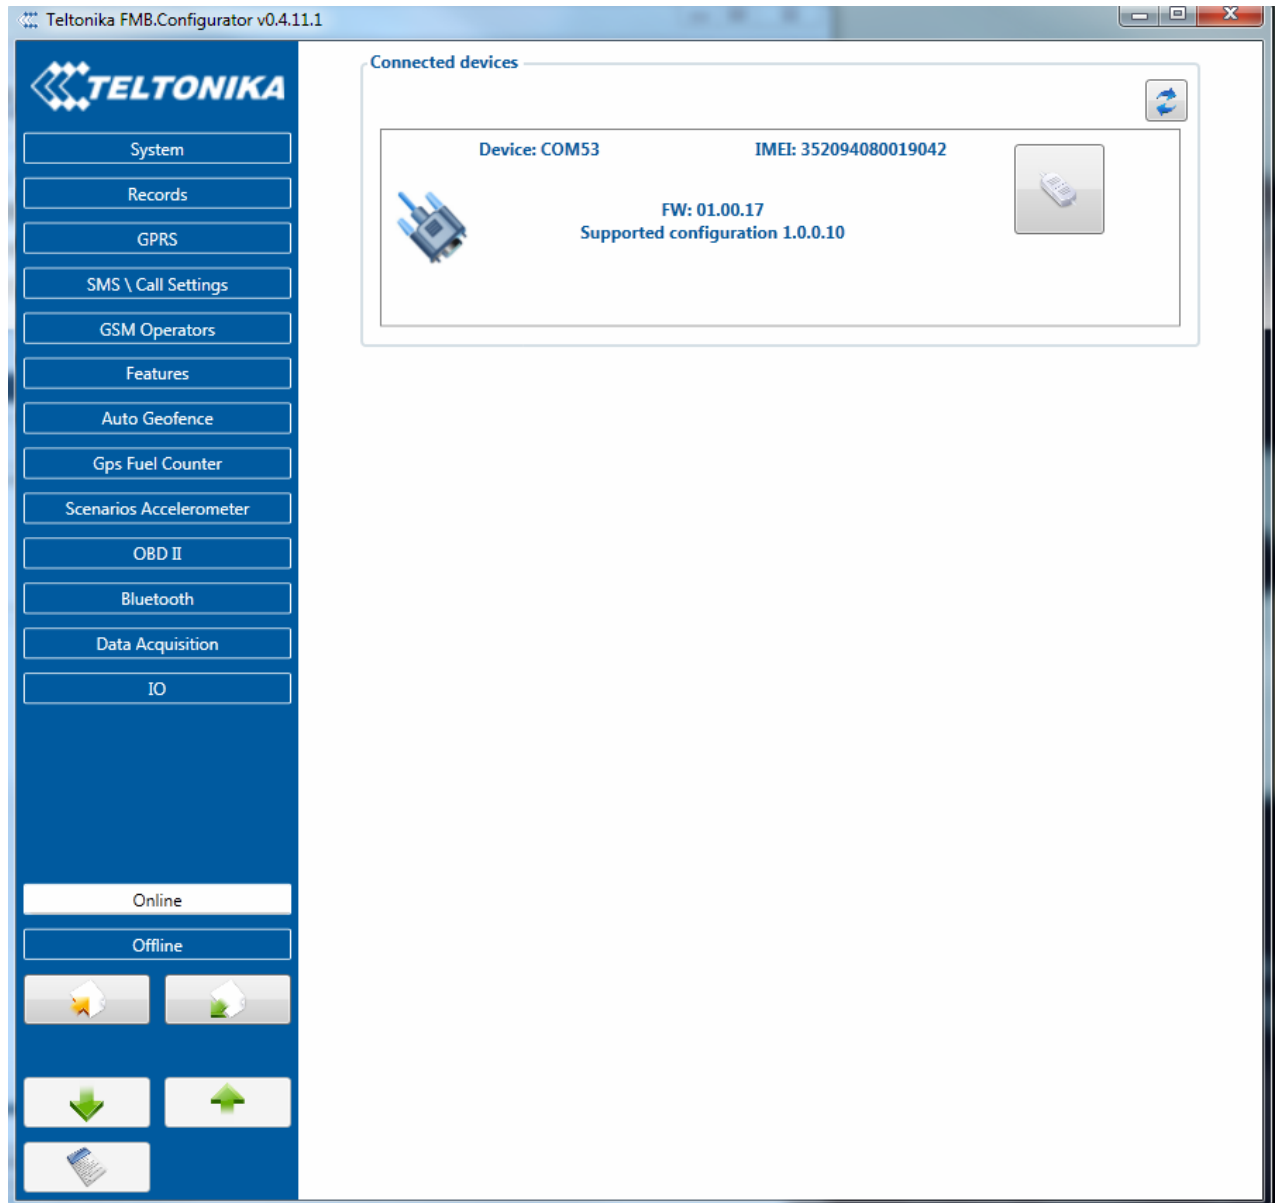


Figure 8 Configurator main window

#### Main Buttons description:

- 'Scan' – scans for available devices.
- 'Connect to device' – connects device.
- 'Store configuration to file' – saves configuration.
- 'Read configuration from file' – loads saved configuration.
- 'Read configuration' – loads configuration from device.
- 'Store configuration' – saves configuration to device.

#### 5.1.1 System settings

System settings 9 configurable parameters:

1. Sleep settings, where user can choose sleep mode;
2. Ignition source, where user can choose between power voltage, digital input 1 and accelerometer ignition sources

3. Object Motion Detection Settings, where user can configure 3 ways how FMB010 will detect stopped movement, and change its working mode (for working modes, read section 5.1.8);
4. Static navigation settings, where user can turn static navigation on or off;
5. Records Settings, where user can enable or disable records when GPS is not available (no time synchronization);
6. GNSS source Settings, where user can choose satellite system.
7. LED indication, where user can turn on or off indication LEDs.
8. Battery charge mode, where user can choose when battery charger is turned on.
9. Time synchronization mode, where you can choose how time synchronization is done. Possible values:
  - a) Disable (GPS only) – time is synchronized only from GNSS satellites
  - b) NITZ – time is synchronized from GNSS satellites or GSM operator (not all GSM operators support this functionality)
  - c) NTP – time is synchronized from GNSS satellites or NTP servers.
  - d) NITZ+NTP – time can be synchronized from GNSS satellites, GSM operator or NTP server

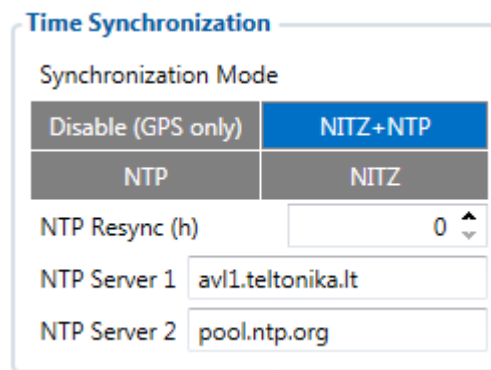


Figure 6

If necessary, you can configure your NTP servers and how often device should resynchronize time from NTP (NTP Resync parameter).

Table 5 Configuration parameters

| Movement Source               | Vehicle on Stop mode                                                                            | Vehicle Moving mode                                          |
|-------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------|
| Ignition<br>(recommended)     | If ignition (DIN1) is logic low                                                                 | If ignition (DIN1) is logic high                             |
| Movement<br>(movement sensor) | Internal movement sensor does not detect movement                                               | Internal movement sensor detects movement                    |
| GPS                           | GPS fix is available and vehicle speed is lower than 5 km/h                                     | GPS fix is available and vehicle speed is higher than 5 km/h |
|                               | While GPS fix is unavailable, Object Motion Detection Settings are working like in Msensor mode |                                                              |

Static Navigation Mode is a filter, which filters out track jumps when the object is stationary. If Static navigation filter is disabled, it will apply no changes on GPS data. If Static navigation filter is enabled, it will filter changes in GPS position if no movement is detected

(depends on Object Motion Detection Settings). It allows filtering GPS jumps when object is parked (is not moving) and GPS position is still traced.

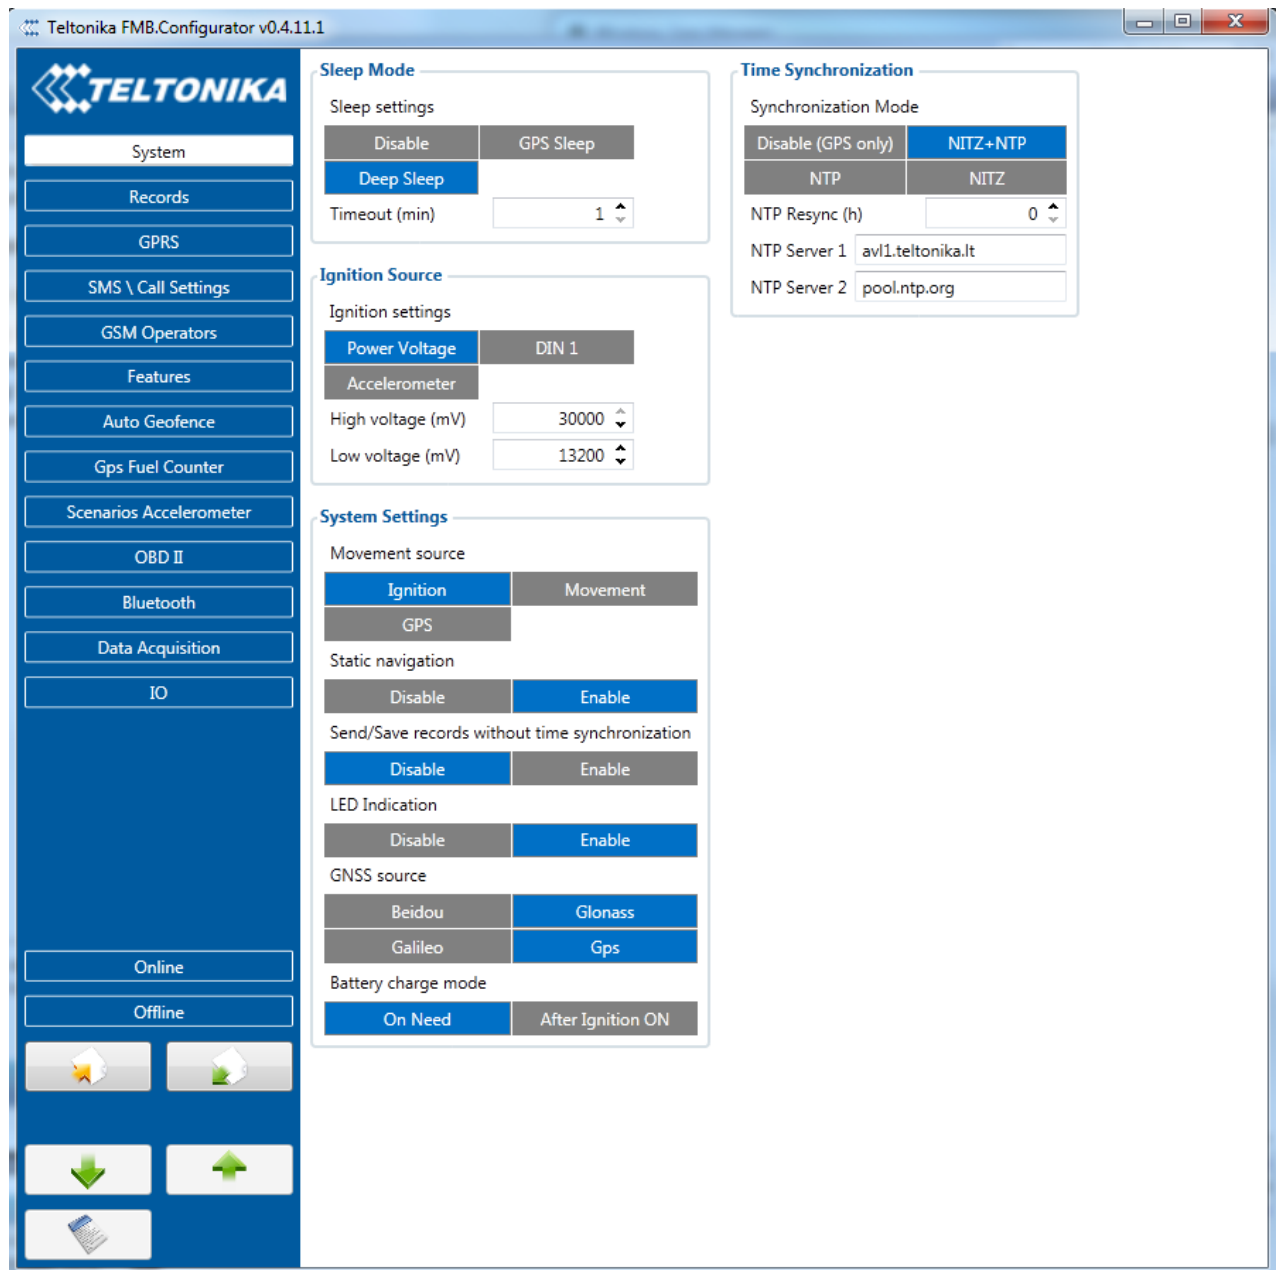


Figure 9 System settings configuration

In GNSS source Settings user can configure which GNSS system or systems to use.

User has choice to use only one system of GPS, Glonass, Galileo or Beidou. Also it is able to choose two or three systems together. One exception is that you can not combine Beidou and Glonass systems together.

List of configurable GNSS sources:

|              |       |
|--------------|-------|
| Beidou only  | ID:01 |
| Glonass only | ID:02 |
| Galileo only | ID:04 |

GNSS source

|         |         |
|---------|---------|
| Beidou  | Glonass |
| Galileo | Gps     |

|                     |       |
|---------------------|-------|
| Galileo+Beidou      | ID:05 |
| Galileo+Glonass     | ID:06 |
| Gps only            | ID:08 |
| Gps+Beidou          | ID:09 |
| Gos+Glonass         | ID:10 |
| Gps+Galileo         | ID:12 |
| Gps+Galileo+Beidou  | ID:13 |
| Gps+Galileo+Glonass | ID:14 |

Example of a good configuration

List of **NON**-configurable GNSS sources:

Glonass+Beidou  
Galileo+Glonass+Beidou  
Gos+Glonass+Beidou  
GPS+Galileo+Glonass+Beidou

GNSS source

|         |         |
|---------|---------|
| Beidou  | Glonass |
| Galileo | Gps     |

Example of a bad configuration

### 5.1.2 Records settings

Here user can modify if FMB010 device will send newest records first, meaning, that the most important thing is to know recent position of car, older records are being sent right after newest records arrive to AVL application.

Activate Data Link Timeout is used to set timeout of link between FMB010 and AVL application termination. If FMB010 has already sent all records it waits for new records before closing link. If new records are generated in the period of this timeout, and minimum count to send is reached, they are sent to AVL application. This option is useful when GSM operator charge for link activation.

Server Response Timeout is used to set time period waiting for response from server side.


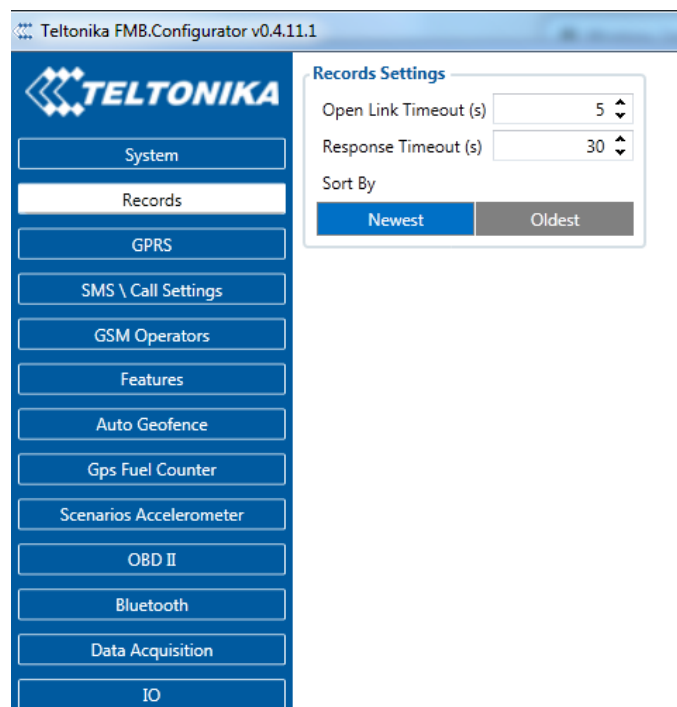


Figure 10 Records settings configuration

### 5.1.3 GSM settings, GPRS part

'GPRS' defines main parameters for FMB010: GSM operator APN and GPRS username and password (optional – depending on operator), destination server IP and port, and allows to set protocol used for data transfers – TCP or UDP.

Some operators use specific authentication for GPRS session – CHAP or PAP. If any of these is used, APN should be entered as 'chap:<APN>' or 'pap:<APN>'. I.e. if operator is using APN 'internet' with CHAP authentication, it should be entered as 'chap:internet'. Information about APN and authentication type should be provided by your GSM operator.

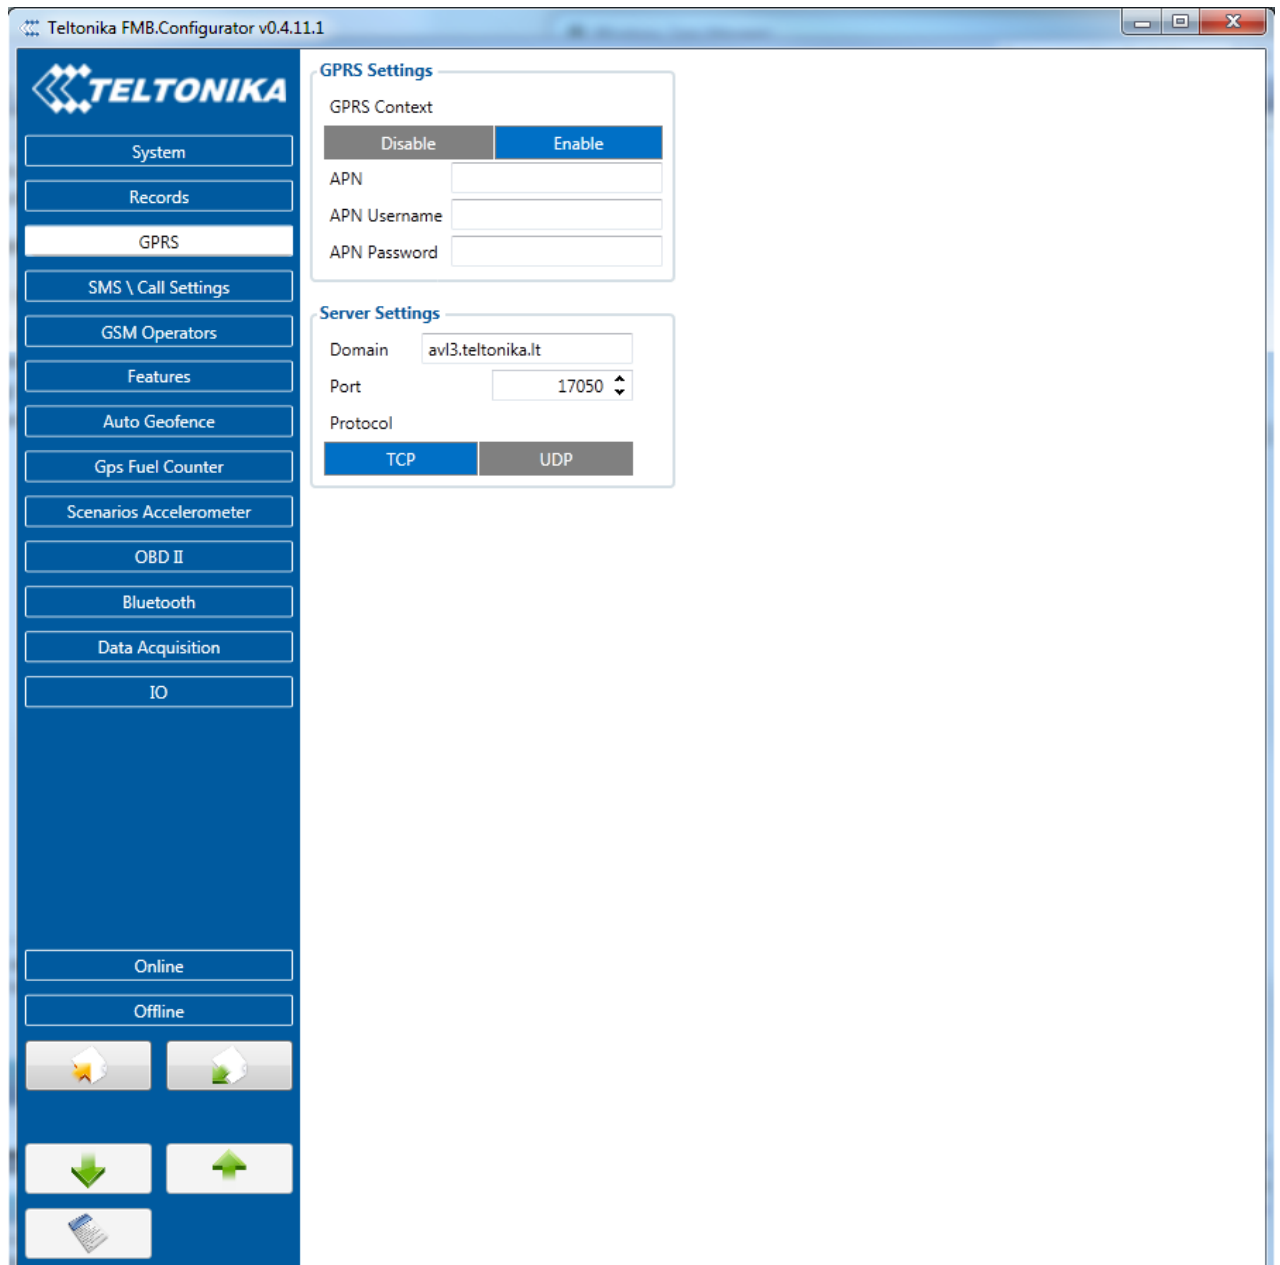

The screenshot shows the 'Teltonika FMB.Configurator v0.4.11.1' window. On the left is a blue sidebar with a menu containing: System, Records, GPRS (highlighted), SMS \ Call Settings, GSM Operators, Features, Auto Geofence, Gps Fuel Counter, Scenarios Accelerometer, OBD II, Bluetooth, Data Acquisition, and IO. Below the menu are buttons for 'Online' and 'Offline', and several status icons. The main area on the right is titled 'GPRS Settings' and contains two sections: 'GPRS Context' with 'Disable' and 'Enable' buttons (where 'Enable' is selected), and input fields for 'APN', 'APN Username', and 'APN Password'. Below this is the 'Server Settings' section with a 'Domain' field (containing 'avl3.teltonika.it'), a 'Port' field (containing '17050'), and a 'Protocol' section with 'TCP' and 'UDP' buttons (where 'TCP' is selected).

Figure 11 GPRS configuration

#### 5.1.4 GSM settings, SMS part


Essential fields in 'SMS' part are 'Login' and 'Password'. The login and password are used with every SMS sent to FMB010. If login and password are not set, in every SMS sent to FMB010 device two spaces before command have to be used (<space><space><command>).

Command structure with set login and password:

<login><space><password><space><command>, example: "asd 123 getgps"

Phone numbers have to be written in international standard, without using "+" or "00" signs in prefix. If no numbers are entered, configuration and sending commands over SMS are allowed from all GSM numbers.

SMS data sending settings – enable or disable **periodic** data and event SMS usage. This setting does not affect replies to SMS request messages – answers are always sent back to sender telephone number.

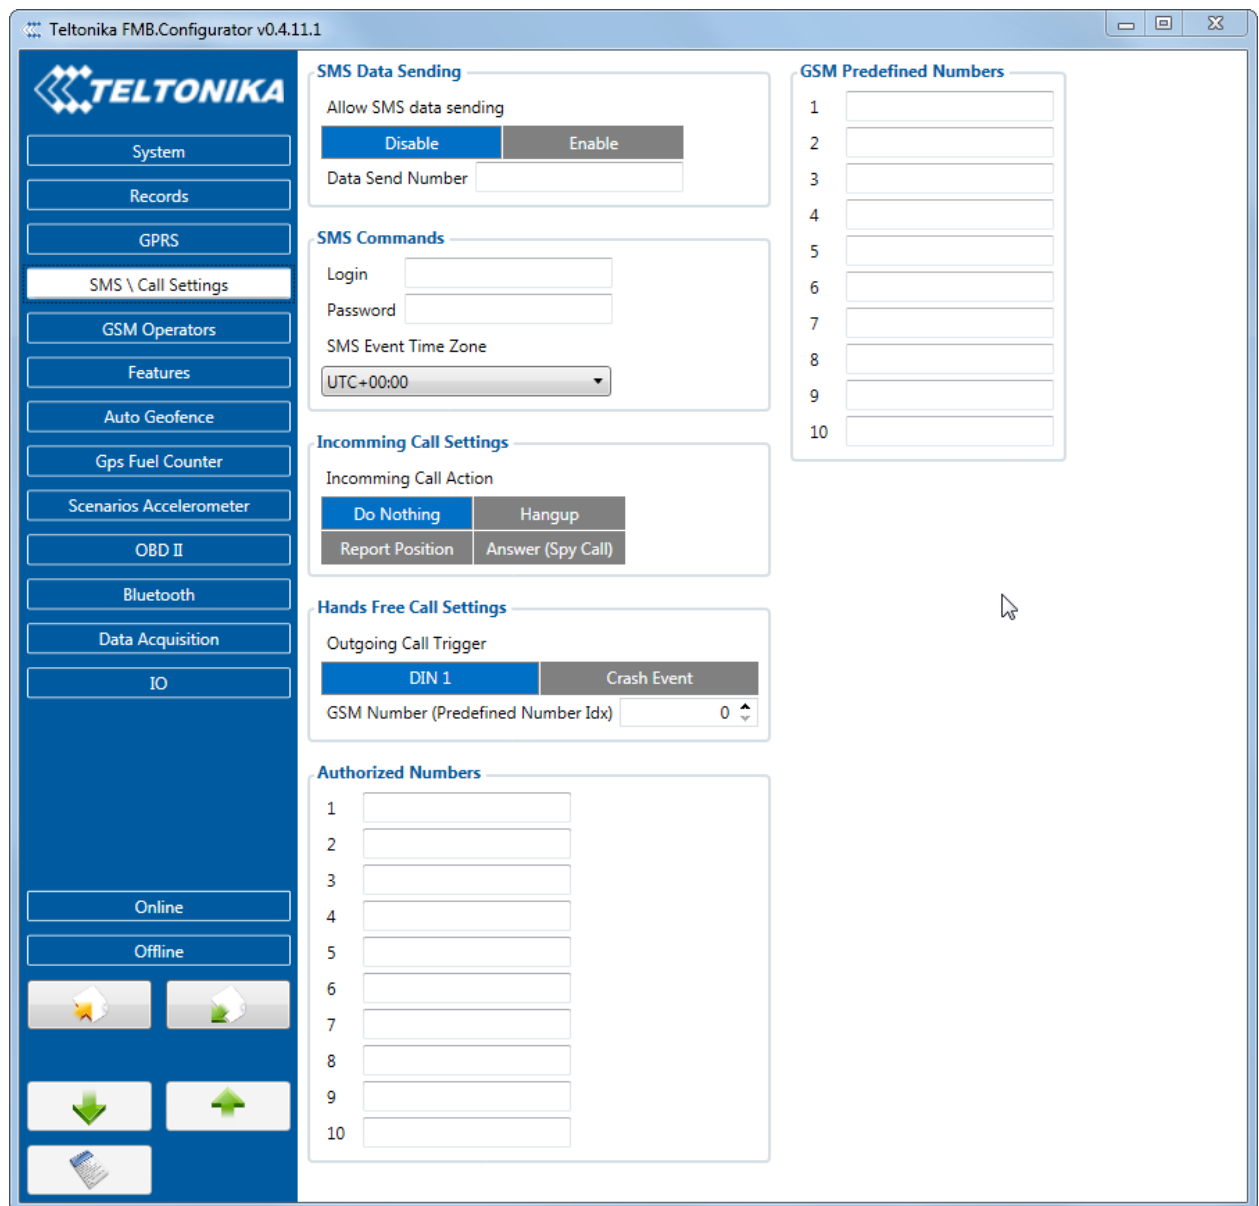

The screenshot displays the 'Teltonika FMB.Configurator v0.4.11.1' window. On the left is a blue sidebar with a menu containing: System, Records, GPRS, SMS \ Call Settings (highlighted), GSM Operators, Features, Auto Geofence, Gps Fuel Counter, Scenarios Accelerometer, OBD II, Bluetooth, Data Acquisition, IO, Online, Offline, and several status icons. The main area is divided into several configuration panels:

- SMS Data Sending:** Includes a toggle for 'Allow SMS data sending' (currently set to 'Disable'), a 'Data Send Number' input field, and a 'Data Send Interval' dropdown menu.
- SMS Commands:** Includes 'Login' and 'Password' input fields, and an 'SMS Event Time Zone' dropdown menu set to 'UTC+00:00'.
- Incomming Call Settings:** Includes an 'Incomming Call Action' section with buttons for 'Do Nothing', 'Hangup', 'Report Position', and 'Answer (Spy Call)'.
- Hands Free Call Settings:** Includes an 'Outgoing Call Trigger' section with buttons for 'DIN 1' and 'Crash Event', and a 'GSM Number (Predefined Number Idx)' dropdown menu set to '0'.
- Authorized Numbers:** A list of 10 input fields for authorized phone numbers.
- GSM Predefined Numbers:** A list of 10 input fields for predefined GSM numbers.

Figure 12 SMS configuration

### 5.1.5 SMS Event Time Zones

FMB010 works with synchronized GPS time which is UTC+0, with this option customer can configure his time zone and get SMS with correct time.



Note: Please do not set Data Send Number to some cell phone number, because it will not understand binary SMS. When sending a binary SMS to a phone number, which is a server phone number, the server can interpret and understand binary code, so the data can be read and you can view it on the server.




SMS login and password and authorized number list are used to protect FMB010 module from unauthorized access. Module accepts messages only from a list of authorized numbers and with proper module login and password. Numbers must be without “+” or “00” prefix. If no authorized numbers are entered, module accepts messages from all numbers.

### 5.1.6 SMS events

SMS events functionality allows FMB010 to send a configured SMS when an event is triggered. This event can be triggered by ever I/O element.

Then any of the I/O elements is triggered, FMB010 sends a configured SMS message to a defined phone number. If SMS events is activated, but there are no numbers defined in SMS events PreDefined Numbers list (figure 20), then the device will not send any messages.

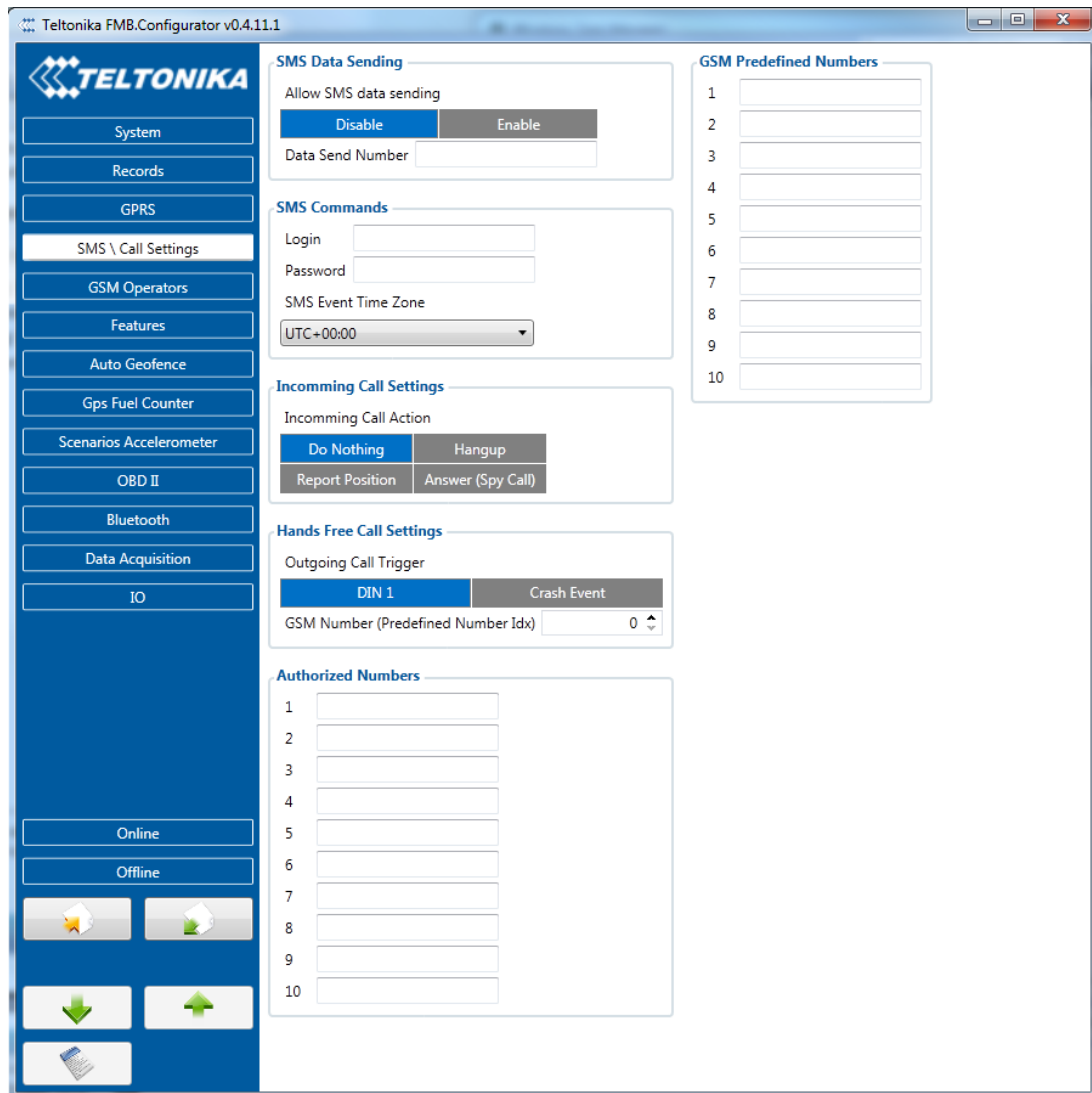

**Figure 20 SMS Events PreDefined Numbers list**

The sent SMS messages format is according to:

*“Date Time EventText”*

For example, if FMB010 is configured to send an SMS, when Ignition reaches High level, with priority High and configured to generate event on both, range enter and exit (figure 21), then the sent SMS is:

*“2012/6/7 12:00:00 Ignition 1”*

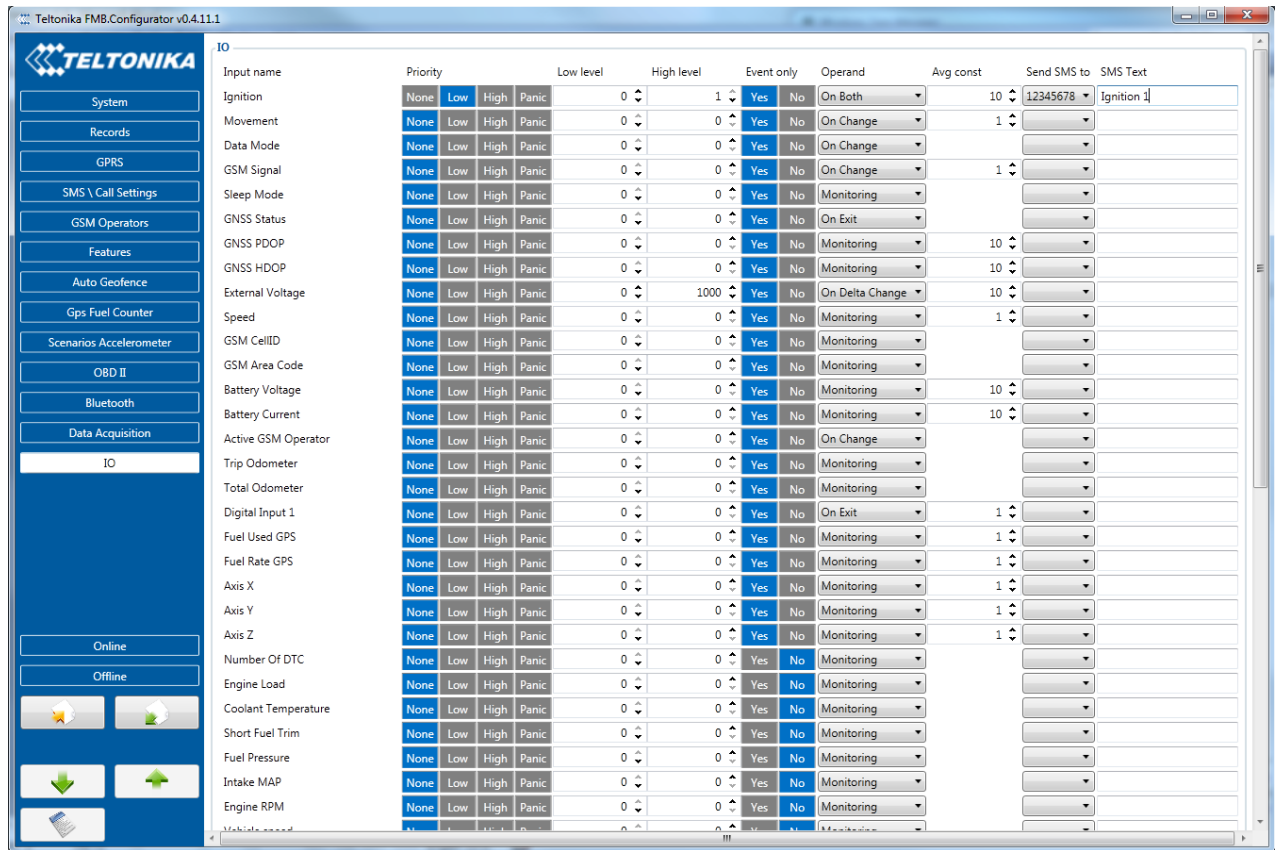


Figure 21 Configured Ignition SMS event

The SMS Text field can be altered and any text can be entered. Maximum message length is 90 symbols (numbers, letters and symbols in ASCII, except for comma “,”).



#### ATTENTION!

If FMB010 is in Deep Sleep mode and SMS event occurs with LOW priority (which does not wake up FMB010), then the device does not send the message. It is saved in device memory until it wakes up from Deep Sleep mode and GSM modem starts working normally. After it wakes up, all the messages that are saved in memory will be sent, but keep in mind that only 10 messages can be saved in memory – all other messages will not be saved, until there is room in device memory.

### 5.1.7 GSM settings, Operator list

Operators list – FMB010 can work in different modes (use different settings) according to the operator list defined. Operator list is used for Data Acquisition Mode switching (see chapter 5.1.8 Data Acquisition Mode settings for more details). Modes are changed based on GSM operator FMB010 is connected to.

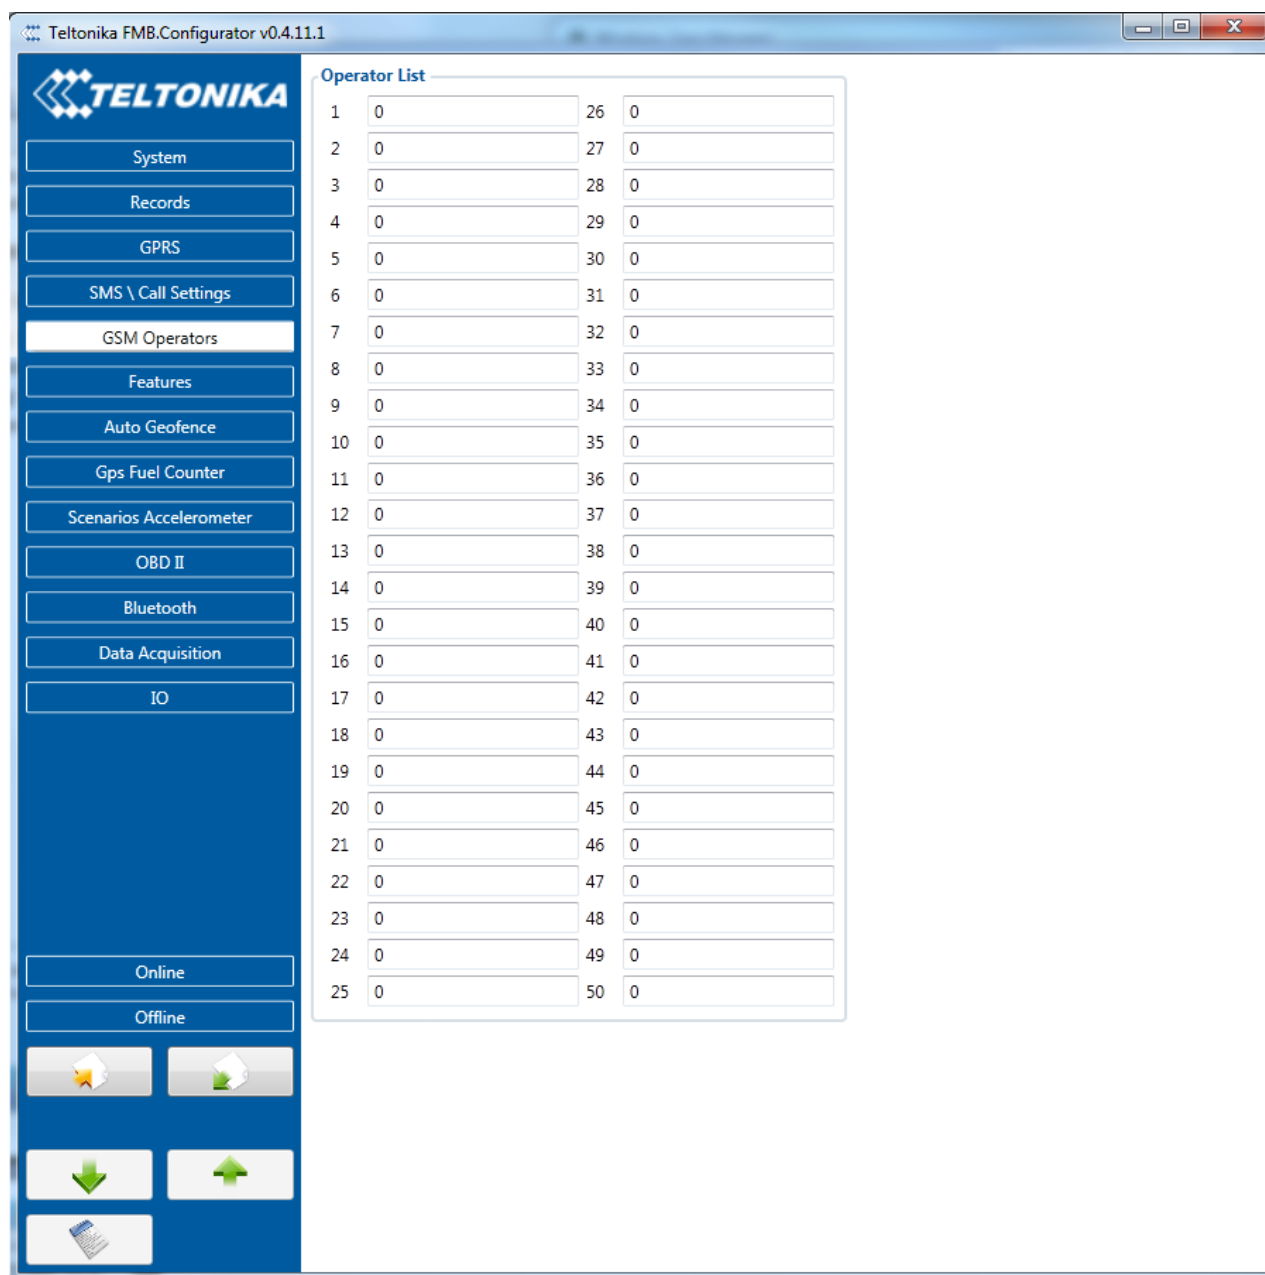


Figure 13 Operator list configuration

If operator list is left empty, it will allow using GPRS to any GSM operator. Please note that FMB010 will work in **Unknown mode only** (make sure it is configured to allow data sending – GPRS context is enabled).

### 5.1.8 Features settings

In Features window five different scenarios are available.

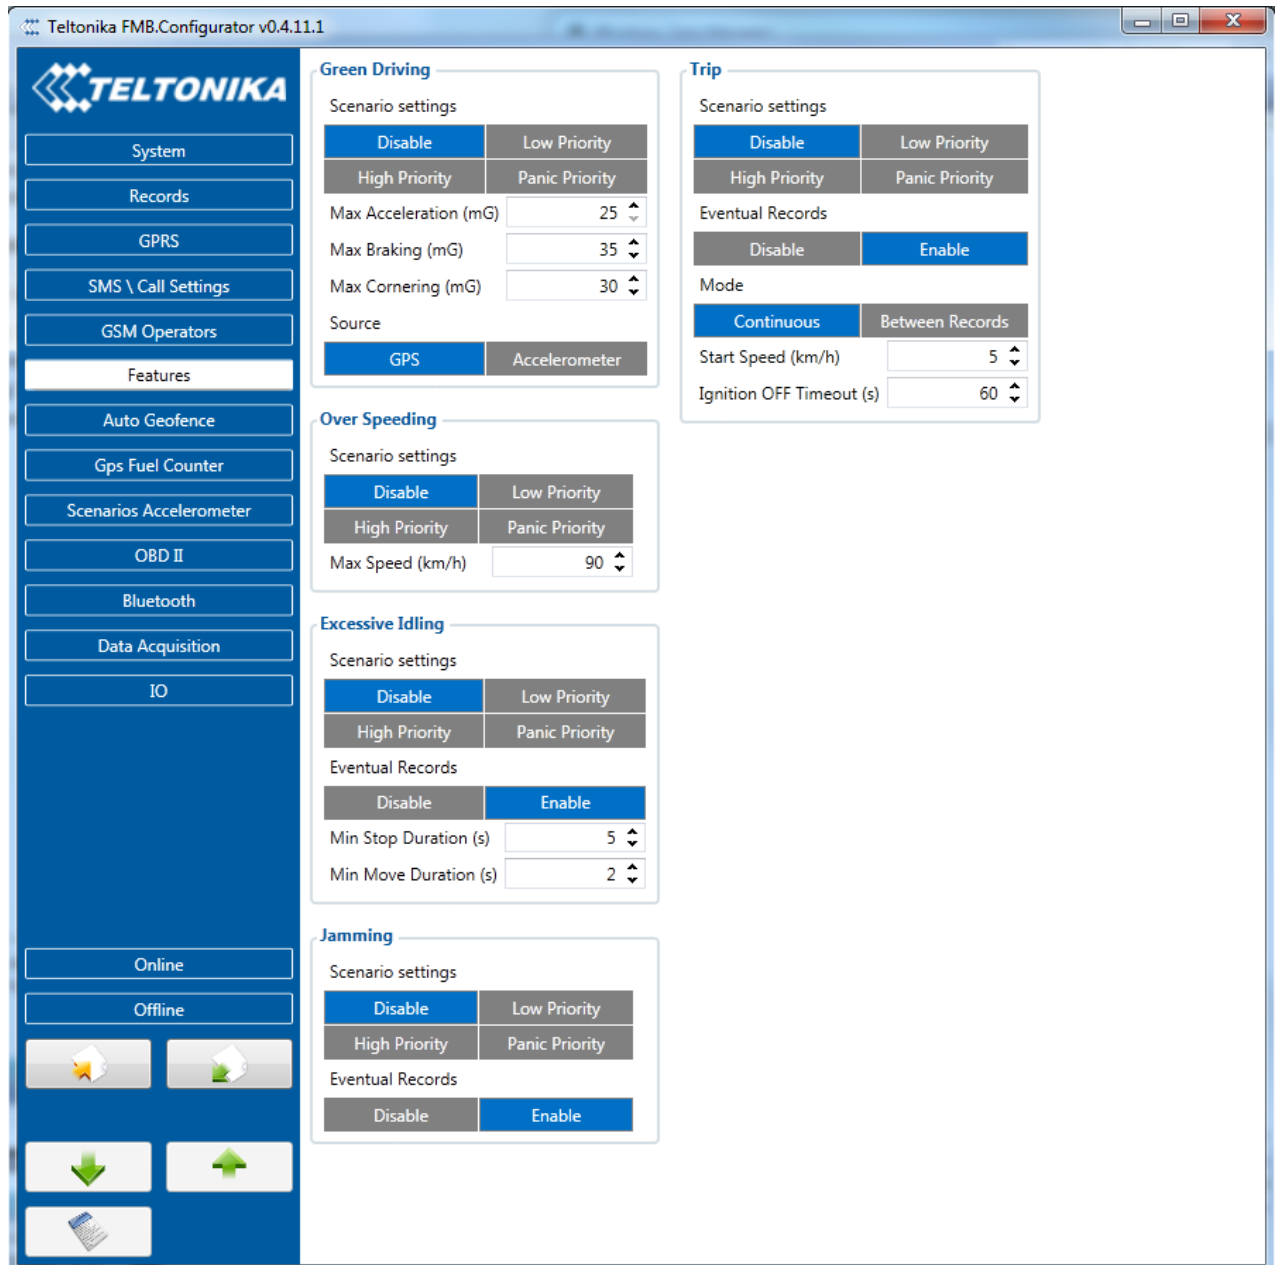


Figure 16 Scenarios configuration

### 1. Green Driving

Scenario is activated, when vehicle exceeds on of Max. Acceleration, Max Braking or Max Cornering parameters value. You can configure Max. Acceleration and Max. Braking parameters in mG (miliG) units and Max. Cornering parameter in rad/s units and the source of data. Scenario is activated until current Acceleration, Braking or Cornering value decreases below parameter value.

### 2. Over Speeding

Scenario is activated, when vehicle speed exceeds parameter value. Scenario is activated until current speed decreases below parameter value.

### 3. Excessive Idling

Scenario is activated, when vehicle stops for specific amount of time. You can configure time it takes to turn on this scenario (Time to Stopped). Scenario is activated until vehicle starts

moving and keeps moving for amount of time that is configured. You can configure time it takes to turn OFF this scenario (Time to Stopped).

#### 4. Jamming

Scenario is activated, when jamming is detected.

#### 5. Trip

Scenario is activated, when ignition is on and movement is detected. Scenario calculates distance user has moved.

##### 5.1.9 Trip settings

Trip scenario offers user to configure Trip feature.

Start Speed – GPS speed has to be greater than the specified Start Speed in order to detect Trip Start.

Ignition Off Timeout – timeout to wait if ignition was off, to detect Trip stop.

Continuous distance counting – Not or Continuous can be chosen. For this feature I/O Odometer must be enabled.

If I/O Odometer is enabled and Continuous distance counting variable (Mode) is set to Continuous, **Trip distance** is going to be counted continuously (**from Trip start to Trip stop**). This value is written to I/O Odometer value field. When Trip is over and next Trip begins, Odometer value is reset to zero. When the next trip starts counting continuously starts from the beginning again.

If I/O Odometer is enabled and Continuous Distance Counting variable (Mode) is set “Between Records”, then the distance is going to be counted only between every record made. This value is written to I/O Odometer value field and reset to zero every new record until Trip stops. If later all Odometer values are summed up manually, the user gets the distance driven during the whole period of the Trip.

**Trip**

Scenario settings

|               |                |
|---------------|----------------|
| Disable       | Low Priority   |
| High Priority | Panic Priority |

Eventual Records

|         |        |
|---------|--------|
| Disable | Enable |
|---------|--------|

Mode

|            |                 |
|------------|-----------------|
| Continuous | Between Records |
|------------|-----------------|

Start Speed (km/h)

5

Ignition OFF Timeout (s)

60

Figure 17 Trip configuration

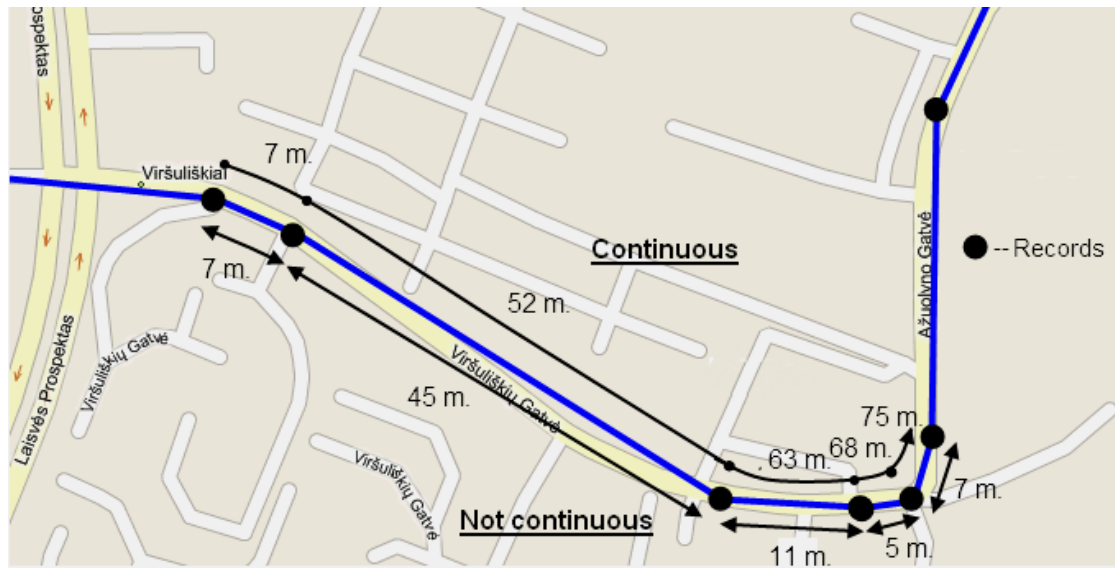


Figure 18 Trip continuous distance counting parameter example

#### 5.1.10 AutoGeofencing settings

AutoGeofence – the last known position after movement = off. If your car's being taken away – you can be notified. The shape and size of the geofence zones are parameters. It is possible to state whether entering in or out of the geofence triggers an asynchronous message.

AutoGeofencing option can be configured by following parameters visible in figure 19 below.

Activation TMO – Time period before Geofence is activated after vehicle stops.

Deactivate By:

Ignition – If ignition becomes high it will disable AutoGeofence Zone;

Power Voltage – if power voltage enters entered value it will disable AutoGeofence Zone.

Digital input 1 – if digital input is triggered it will disable AutoGeofence Zone.

Feature – Priority of generated event, which will be applied to saved record.

Enter Event – Event generation on Geofence entrance.

Exit Event – Event generation on Geofence exit.

On Both - Event generation on Geofence entrance Or exit

Eventual Records – Enable or Disable Eventual Records functionality.

Note that AutoGeofencing does not require entering coordinates, instead it requires GPS visibility. If vehicle stopped and activation timeout has passed, an AutoGeofence will be created around vehicle's last position with set Radius value.

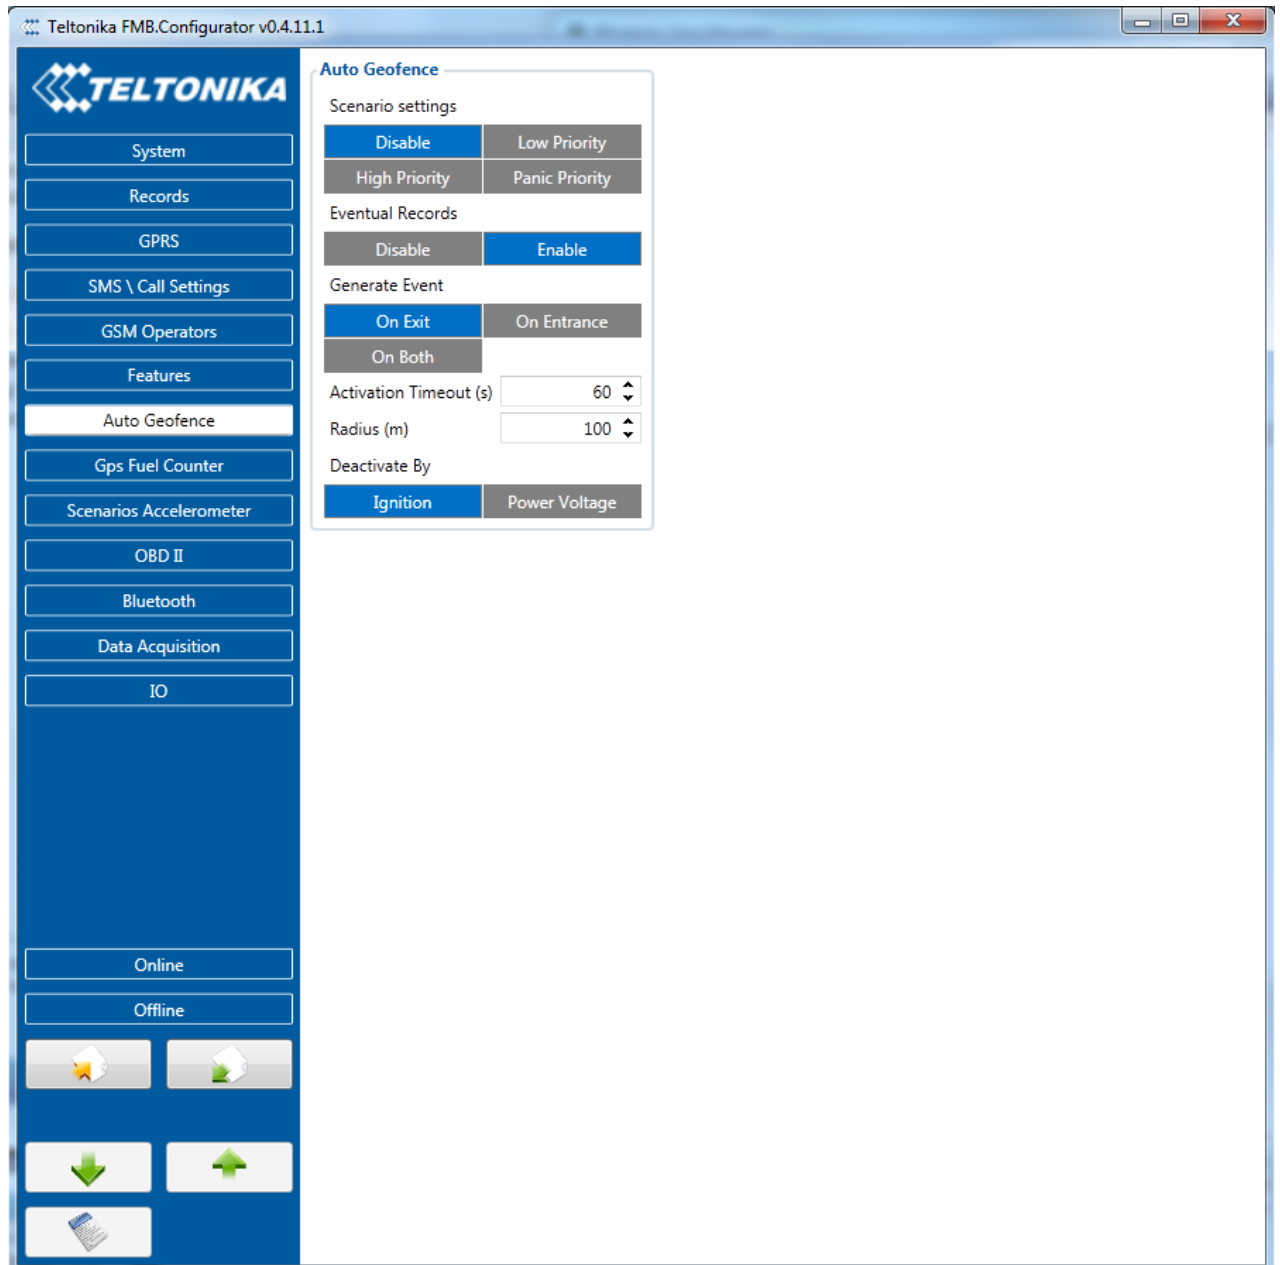


Figure 19 Geofence configuration

### 5.1.11 GPS Fuel Counter

Configuration of Fuel Consumption (Figure 7)


1. To configure these parameters use fuel consumption data, which is stated in your car technical documentation. By default speeds for this fuel consumption norms are: City – 30 km/h, Average – 60 km/h, Highway - 90 km/h. If you want, you can change it.

2. When speed is higher than highway speed, FMB010 adds highway fuel consumption x % of highway fuel consumption every y km/h, by default FMB010 adds 20% every 50 km/h. It

means that fuel consumption is (1.2 \* Highway Fuel Consumption) on 140 km/h speed, (1.4 \* Highway Fuel Consumption) on 190 km/h speed.

3. Correction coefficient is used for correction of every fuel consumption value which is sent to server (Used Fuel \* Correction coefficient). By default it is 1, min 0.01 and max 2. For example when correction coefficient is 1 and FMB010 calculates that used fuel for 35 m distance is 20 ml, sent value will be 20 ml; if correction coefficient is 1.2, sent value will be  $20 * 1.2 = 24$  ml.

4. Fuel consumption on idling is used to calculate fuel consumption when ignition is on, but vehicle speed is 0 km/h. By default it is 1 l/h, min 0 and max 5 l/h. Almost in all diesel cars this parameter is less than 1.0 l/h. In gasoline cars this parameter is about 1.5 – 2.0 l/h.

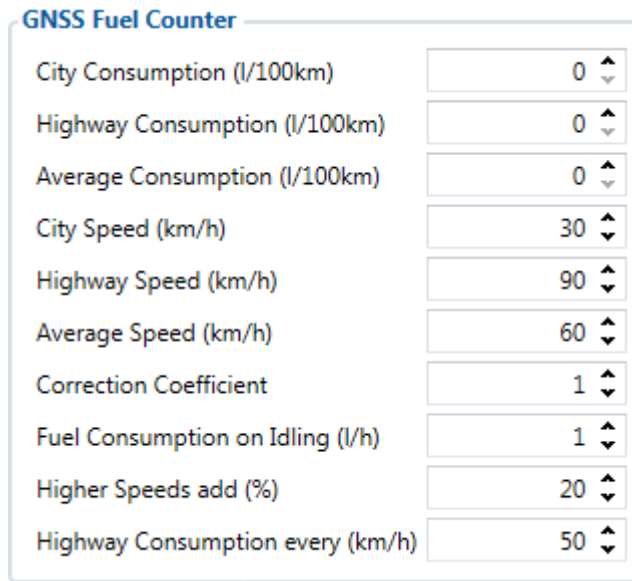

| GNSS Fuel Counter                |    |
|----------------------------------|----|
| City Consumption (l/100km)       | 0  |
| Highway Consumption (l/100km)    | 0  |
| Average Consumption (l/100km)    | 0  |
| City Speed (km/h)                | 30 |
| Highway Speed (km/h)             | 90 |
| Average Speed (km/h)             | 60 |
| Correction Coefficient           | 1  |
| Fuel Consumption on Idling (l/h) | 1  |
| Higher Speeds add (%)            | 20 |
| Highway Consumption every (km/h) | 50 |

**Figure 7 GPS fuel counter settings**

When ignition is on, device starts calculating fuel consumption. When GPS speed is 0, used fuel is calculated l/h. When device is moving FMB010 gets speed value every second from satellites and according to this speed calculation of fuel consumption is done. Device takes travelled distance of this period to calculate used fuel in ml, and sends this value to server, parameter Used fuel (ml) calculated by GPS. Also parameter AVG fuel consumption (l/100km) is sent, which is calculated by GPS (this parameter is sent multiplied by 100).

Both parameters are calculated from the moment when device powers on for the first time. If you want to reset “Used fuel (ml) calculated by GPS” and “AVG fuel consumption (l/100km) calculated by GPS” parameters, you need to send SMS command “fc\_reset”. If GNSS fix was lost FMB010 uses average fuel consumption setting to calculate used fuel for range without GNSS fix.

### 5.1.12 Scenarios Accelerometer

#### Towing detection

FMB010 activates towing function when these conditions are met:

- Ignition (configured Ignition Source) is OFF
- Activation Timeout (set in Towing detection features) is reached

When Activation Timeout is reached and Ignition is still in OFF state, FMB010 monitors accelerometer data. If Acceleration or Angle value reaches configured threshold for configured Duration (in ms), check Ignition state. If Ignition is still OFF during configured "Ignition check after Event Timeout" time, then event is generated. If configured - sends sms event or makes a call. Function will be reactivated after FMB010 again detects change of Ignition state from ON to OFF.

### Towing Detection

Scenario settings

|               |                |
|---------------|----------------|
| Disable       | Low Priority   |
| High Priority | Panic Priority |

Eventual Records

|         |        |
|---------|--------|
| Disable | Enable |
|---------|--------|

|                                 |      |
|---------------------------------|------|
| Activation Timeout (min)        | 5    |
| Event Timeout (s)               | 0    |
| Make Call (Sms Event Number ID) | 0    |
| Treshold (mg)                   | 0.22 |
| Angle (deg)                     | 1    |
| Duration (ms)                   | 1000 |

**Figure 8 Towing detection configuration**

**Activation timeout** – Activation timeout is time after which FMB010 turns ON Towing detection function if other requirement is met (Ignition OFF state detected). It is measured in minutes.

**Ignition check after event** – defines time period (in seconds) to check ignition state when Acceleration or Angle value reach. If towing event is generated during this time period, it is skipped. It allows to filter out redundant towing events while entering the car.

**Make Call to** – if function enabled makes call to specified phone number (configured in pre defined numbers)

**Acceleration, Angle** – values used to detect towing when ignition is OFF

**Duration** – defines time period to check Acceleration, Angle values.

### Unplug Detection

Eventual event will be generated when FMB010 is unplugged from OBD socket.

### Unplug Detection

#### Scenario settings

Disable

Low Priority

High Priority

Panic Priority

#### Eventual Records

Disable

Enable

#### Unplug Detection Mode

Disable

Simple

Figure 9 Unplug detection

### Crash detection

If Crash detection is enabled, it monitors acceleration on each axis, if acceleration exceeds configured value for longer then configured duration, event with value "1" is generated.

| ID    | Name                         | Possible values | Units |
|-------|------------------------------|-----------------|-------|
| 11400 | Crash Detection Enable       | [0/1]           |       |
| 11401 | Duration                     | 0 – 2000        | ms    |
| 11402 | Threshold                    | 0 - 7900        | mG    |
| 11406 | Crash Detection Trace Enable | [0/1]           |       |
| 11400 | Crash Detection Enable       | [0/1]           |       |

Table 4 Configuration parameters

### Crash Trace operation

If trace is enabled FMB will collect acceleration data every 40 msec. Buffer is big enough to hold data for 5 seconds and on Crash Event detection, records will be generated from this buffer, following these conditions:

- Every second
- Acceleration changed more then > 50mG

Data will be collected and records generated 5 seconds after the event using the same conditions.

Every generated record will have accelerometer X Y Z values included. Each record will have accurate timestamps in milliseconds (for detailed crash trace record structure refer to FMB010 protocol document).

Usually between 20 to 30 records is generated on crash event detection.

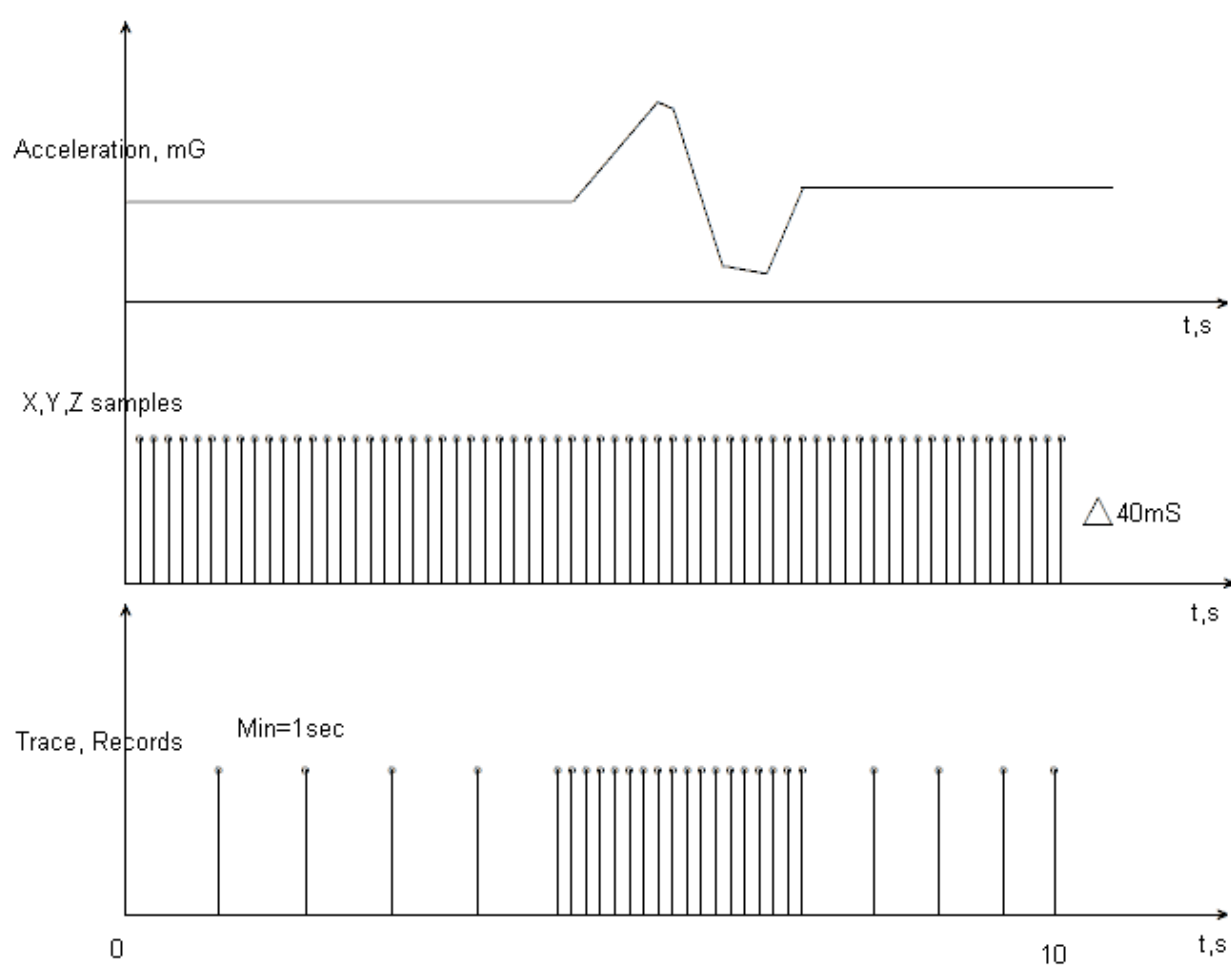


Figure 10 Example of Crash Trace logic

### 5.1.13 Bluetooth

**General**

**General**

BT Radio

|                  |                 |
|------------------|-----------------|
| Disable          | Enable (hidden) |
| Enable (visible) |                 |

Local Name

Local PIN

Security Mode

|               |                |
|---------------|----------------|
| PIN only      | PIN + MAC list |
| MAC list only | None           |

**Figure 11 General Bluetooth settings**

BT Radio determines state determines Bluetooth status, possible values:

- a) Disable – Bluetooth is off;
- b) Enable (hidden) – Bluetooth is on, device automatically connects to defined MAC, but is invisible for external devices which want to pair with it.
- c) Enable (visible) – Bluetooth is on and visible for external devices.

Local name can be set according to your needs. If this field is empty, name will be automatically generated:

FMBxx\_<imei last chars>

Local PIN - PIN code which will be used when external device will try to pair with FMB010.

Security mode possible options:

- a) PIN only – only pin is used when external device tries to connect to FMB010.
- b) PIN+MAC list – PIN is used, also external device's MAC address needs to be in Authorized MAC list
- c) MAC list only – connection to FMB010 is possible only if external device MAC is in Authorized MAC list.
- d) None – no security enabled.

**Auto Connect to External Device**

**Auto Connect to External Device**

Connection Mode

|      |            |
|------|------------|
| None | Hands Free |
|------|------------|

External MAC

External Name

External PIN

**Figure 12 Auto connection to external devices**

Here you can enter details of external Bluetooth headset for hands free communication.

External MAC – MAC of your Bluetooth headset.

External Name – Bluetooth name of you

**Authorized Devices MAC List**

|   |                      |
|---|----------------------|
| 1 | <input type="text"/> |
| 2 | <input type="text"/> |
| 3 | <input type="text"/> |
| 4 | <input type="text"/> |
| 5 | <input type="text"/> |

**Figure 13** MAC list

Figure 13 shows list of Authorized MAC addresses which are allowed to connect to FMB010. If list is empty, any external device can connect to FMB010.

#### 5.1.13.1 How to connect Bluetooth Hands Free adapter to FMB device

##### Bluetooth settings configuration


These are instructions how to easily prepare Bluetooth Hands Free device connection to FMB device. First we need to configure FMB device Bluetooth settings for proper connection to this hands-free unit. These are required steps:

1. Connect FMB device to PC using USB cable.
2. Launch **FMB Configurator** and connect to device as shown in **Figure 1** below.




**Figure 1.** FMB configurator connected devices window

3. After successful connection to device press “**Load from device**” button to load device current configuration visible at **Figure 2.1**

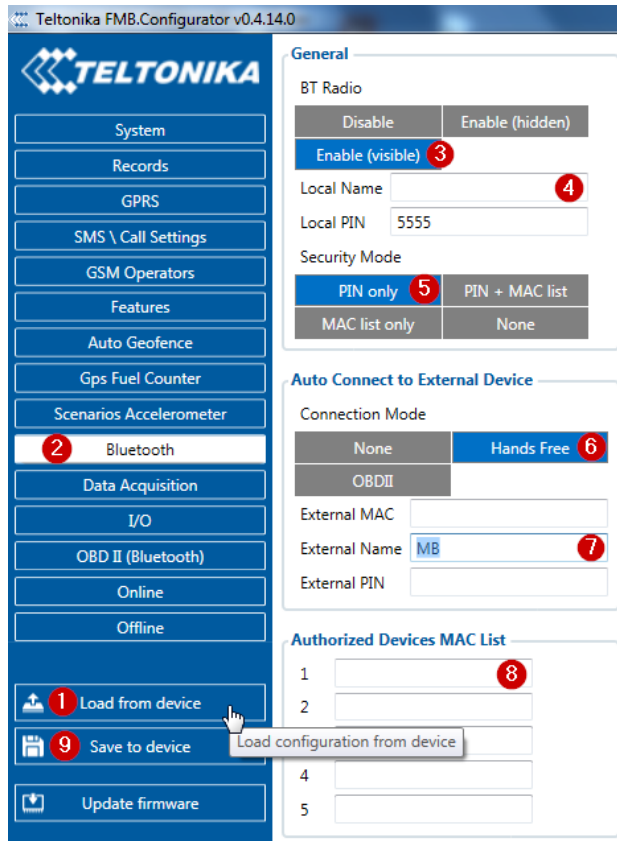

**Figure 2.1** Load configuration from device; **2.2** Bluetooth settings; **2.3** Enable Bluetooth; **2.4** Bluetooth local name; **2.5** Bluetooth security mode **2.6** Hands Free connection mode; **2.7** External Bluetooth device name; **2.8** Authorized Devices MAC List; **2.9** Save device configuration

4. When device configuration is loaded press „**Bluetooth**“ settings (**Figure 2.2**).
5. Turn on BT Radio by pressing „**Enable (visible)**“ (**Figure 2.3**). You could leave „**Local name**“ (**Figure 2.4**) box empty (then device name will automatically be „FMBxx\_last 7 imei digits“) or type your own name.
6. Set Security Mode (**Figure 2.5**) to „**PIN only**“ or „**None**“ (you could select „**PIN + MAC list**“ or „**MAC list only**“ security mode but in this case you need to type external device MAC address in „**Authorized Devices MAC List**“ (**Figure 2.8**).
7. Set connection mode to „**Hands Free**“ (**Figure 2.6**).
8. Set „**External Name**“ as your Hands Free device name for proper device identification and connection to it. In this example Hands Free headset name is „MBH10“ but at least 2 characters are needed to recognize it and connect to it. For better and faster adapter identification in network you could enter a full device name. You could check your Hands Free adapter Bluetooth name by scanning nearby Bluetooth devices using mobile phone or computer with Bluetooth adapter.
9. Go to „**SMS \ Call Settings**“ in left menu and set „**Incomming Call Action**“ to „**Do Nothing**“ visible at **Figure 3**.

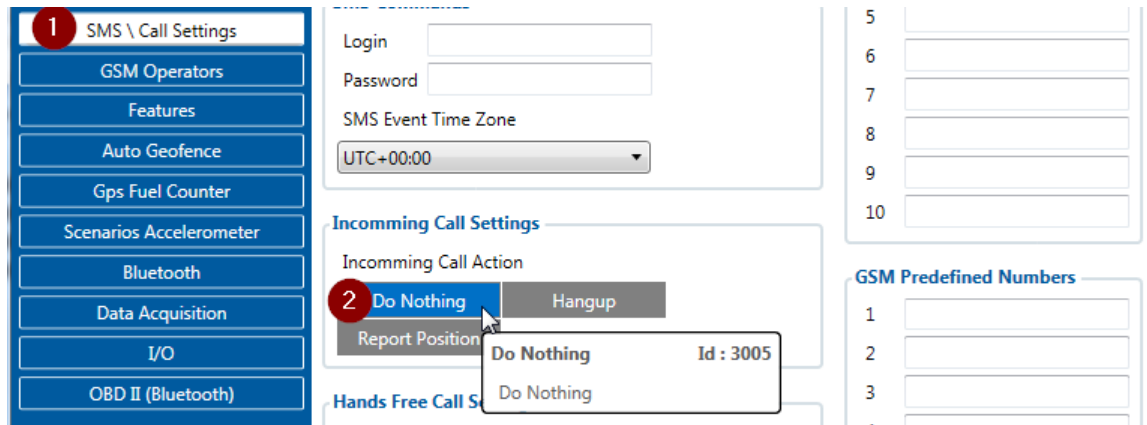

**Figure 3.** Incoming Call Action settings.

10. After all these steps press „**Save to device**“ to save configuration (**Figure 2.9**).
11. Now you can disconnect FMB device from a PC or stay connected if you want to make further changes to configuration.

#### Connecting Bluetooth Hands Free adapter

After this configuration you could connect your Hands Free device to FMB device. Turn on Hands Free device then turn on its Bluetooth connection for pairing following your model instructions<sup>4</sup>. Hands Free adapter should make a special sound in ear from speaker or its led identification should change to inform about successful connection<sup>5</sup>. To check if adapter is successfully connected, call to FMB device, Hands Free device should start ringing. If you later restart FMB device it will automatically connect to this adapter.

#### 5.1.13.2 Device's log using your mobile phone.

When FMB device starts, automatically Bluetooth is ON too. Take your mobile phone, go to settings>Bluetooth and turn it on. Scan for near by devices, find you device in list, distinguish device by last IMEI numbers on device module. Press pair, wait until device will ask to enter pairing password, type: 5555. Paired device will show up in paired device list. Now download from play store/app store terminal for Bluetooth. E.g BlueTerm. Run app, click find>connect to your paired device. Now we need to send command to FMB0XX through Bluetooth terminal, type: .log:1

Device will respond Debug enabled and FMB0XX log will how up. Do not forget to start save log file to mobile phone.

<sup>4</sup> Hands Free device Bluetooth connection pairing instructions depends on specific model.


<sup>5</sup> Hands Free device notification about paired Bluetooth connection depends on specific model.

## Device debug over Android smartphone

1. Scan for visible BT devices using your Android smartphone and connect to your FMB device.

Default FMB BT name: ***FMBxx\_last\_7\_imei\_digits***


Default PIN code: **5555**

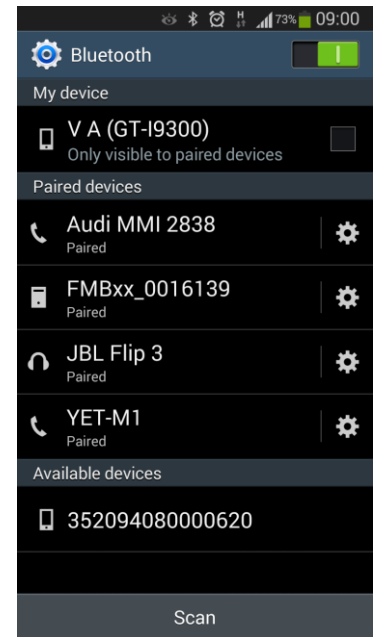




2. Download “Bluetooth Terminal” application. You can use link or QR code shown here:  
<https://play.google.com/store/apps/details?id=com.hatf1abs.btt>



- Run Bluetooth Terminal. In menu press “Connect” button and select paired FMB device. To start log check CR and enter the command in terminal: **.log:1**

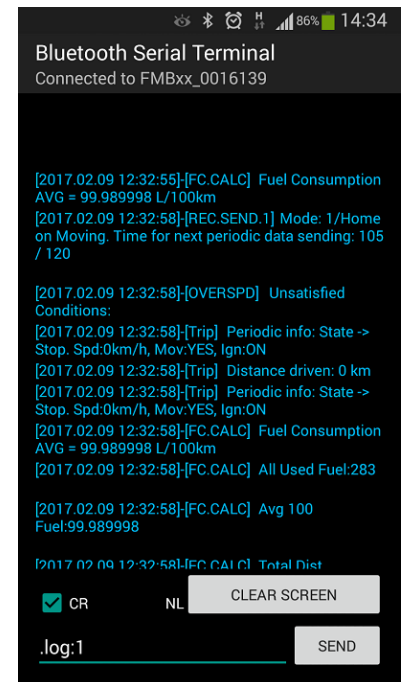


- Wait ~10 minutes and press “Save” button in menu. You will find saved log file in device folder (My Files/BluetoothTerminal), select log files and press button Share via Email and send them to the Teltonika support.

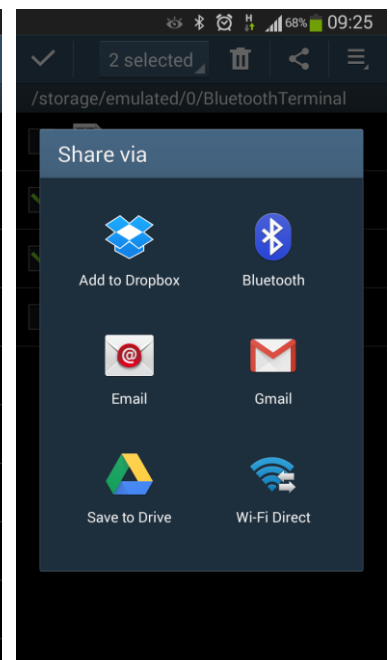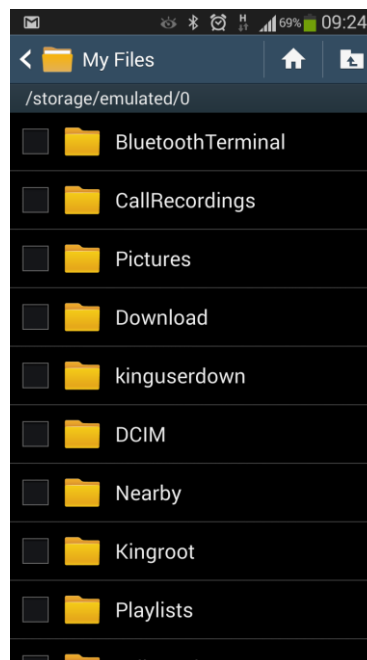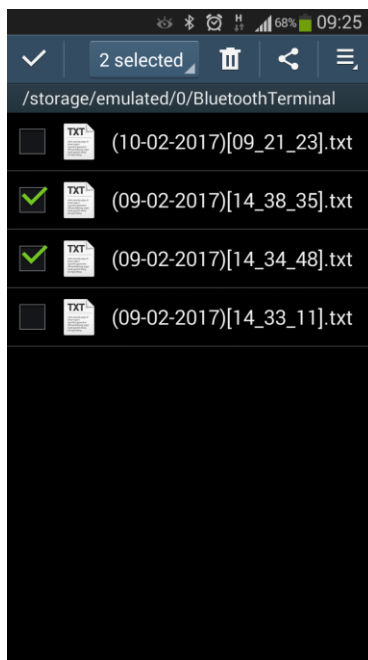

In order to pair FMB device with Android smartphone, make sure that BT radio is enabled (visible) in device configuration. It can be checked via SMS command too:

**getparam 800**

The answer has to be 2, which means “Enabled and visible”.

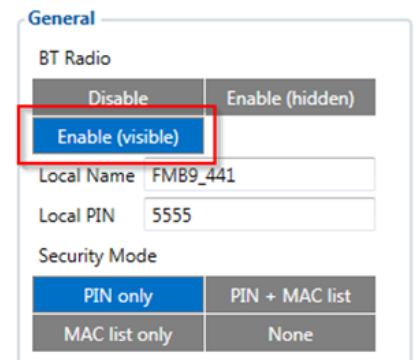

General

BT Radio

|                         |                 |
|-------------------------|-----------------|
| Disable                 | Enable (hidden) |
| <b>Enable (visible)</b> |                 |

Local Name FMB9\_441

Local PIN 5555

Security Mode

|               |                |
|---------------|----------------|
| PIN only      | PIN + MAC list |
| MAC list only | None           |

### 5.1.13.3 How to connect OBD II Bluetooth Dongle to FMB



device

**Note:** Unfortunately it is not possible to do the same on iPhone, because there is no native SPP Bluetooth profile support in iPhone.

#### Bluetooth settings configuration

These are instructions how to easily prepare Bluetooth Dongle connection to FMB device. First we need to configure FMB device Bluetooth settings for proper connection to this unit. These are required steps:

1. Connect FMB device to PC using USB cable.
2. Launch **FMB Configurator** and connect to device as shown in **Figure 1** below.



**Figure 1.** FMB configurator connected devices window

3. After successful connection to device press “**Load from device**” button to load device current configuration visible at **Figure 2.1**

**Figure 2.1** Load configuration from device; **2.2** Bluetooth settings; **2.3** Enable Bluetooth; **2.4** Bluetooth local name; **2.5** Bluetooth security mode **2.6** OBD II connection mode; **2.7** External OBD II Bluetooth device name; **2.8** Authorized Devices MAC List; **2.9** Save device configuration

4. When device configuration is loaded press „**Bluetooth**“ settings (**Figure 2.2**).
5. Turn on BT Radio by pressing „**Enable (visible)**“ (**Figure 2.3**). You could leave „**Local name**“ (**Figure 2.4**) box empty (then device name will automatically be „FMBxx\_last 7 IMEI digits“) or type your own name.
6. Set Security Mode (**Figure 2.5**) to „**PIN only**“ or „**None**“ (you could select „**PIN + MAC list**“ or „**MAC list only**“ security mode but in this case you need to type external device MAC address in „**Authorized Devices MAC List**“ (**Figure 2.8**).
7. Set connection mode to „**OBDII**“ (**Figure 2.6**).
8. Set „**External Name**“ as your Bluetooth OBD II device name for proper device identification and connection to it. In this example OBD II device name is „DONGLE“ but at least 2 characters are needed to recognize it and connect to it. For better and faster adapter identification in network you could enter a full device name. You could check your OBD II adapter Bluetooth name by scanning nearby Bluetooth devices using mobile phone or computer with Bluetooth adapter.
9. Go to „**OBD II (Bluetooth)**“ in left menu and select priority and others parameters visible at **Figure 3**.

| OBD II (Bluetooth)                  |         |                     |                     |                 |                |               |                  |                         |           |     |                    |                  |  |
|-------------------------------------|---------|---------------------|---------------------|-----------------|----------------|---------------|------------------|-------------------------|-----------|-----|--------------------|------------------|--|
| System                              | Records | GPRS                | SMS \ Call Settings | GSM Operators   | Features       | Auto Geofence | Gps Fuel Counter | Scenarios Accelerometer | Bluetooth | I/O | OB2 II (Bluetooth) | Data Acquisition |  |
| Online                              | Offline | Load from device    | Save to device      | Update firmware | Load from file | Save to file  | Reset device     |                         |           |     |                    |                  |  |
| Input name                          | Units   | Priority            | Low level           | High level      | Event only     | Operand       | Send SMS to      | SMS Text                |           |     |                    |                  |  |
| Number Of DTC                       |         | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Engine Load                         | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Coolant Temperature                 | °C      | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Short Fuel Trim                     | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Fuel Pressure                       | kPa     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Intake MAP                          | kPa     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Engine RPM                          | rpm     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Vehicle speed                       | km/h    | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Timing advance                      | °       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Intake air temperature              | °C      | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| MAF                                 | g/sec   | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Throttle position                   | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Run time since engine start         | s       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Distance traveled MIL on            | km      | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Relative fuel rail pressure         | kPa     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Direct fuel rail pressure           | kPa     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Commanded EGR                       | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| EGR error                           | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Fuel level                          | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Distance traveled since codes clear | km      | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Barometric pressure                 | kPa     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Control module voltage              | V       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Absolute load value                 | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Ambient air temperature             | °C      | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Time run with MIL on                | min     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Time since trouble codes cleared    | min     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Absolute fuel rail pressure         | kPa     | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Hybrid battery pack remaining life  | %       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Engine oil temperature              | °C      | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |
| Fuel injection timing               | °       | None Low High Panic | 0                   | 0               | Yes No         | Monitoring    |                  |                         |           |     |                    |                  |  |

Figure 3. OBD II Bluetooth settings.

10. After all these steps press „**Save to device**“ to save configuration (Figure 2.9).

11. Now you can disconnect FMB device from a PC or stay connected if you want to make further changes to configuration.

### Connecting to Bluetooth OBD II dongle

After this configuration you could connect your car OBD II dongle to FMB device. Turn on ignition then turn on its Bluetooth connection. For pairing follow your dongle instructions<sup>6</sup>. OBD II device notification about paired Bluetooth connection depends on specific model. If you later restart FMB device it will automatically connect to this dongle.

### Supported Bluetooth OBD II dongles

FMB module works with Bluetooth OBD II dongles which are made with **ELM327** or **STN1110** chips.

<sup>6</sup> OBD II dongle Bluetooth connection pairing instructions depends on specific model.

Comparison of these chips is presented in **Figure 4**.

|                                 | ELM327 v1.4          | STN1110                  |
|---------------------------------|----------------------|--------------------------|
| Base microcontroller            | PIC18F2580           | PIC24HJ128GP502          |
| Architecture                    | 8-bit                | 16-bit                   |
| Processing speed                | 4 MIPS               | 40 MIPS                  |
| Flash (ROM)                     | 32 KB                | 128 KB                   |
| RAM                             | 1.5 KB               | 8 KB                     |
| Pin count                       | 28                   | 28                       |
| Available packages              | PDIP, SOIC           | PDIP, SOIC, QFN          |
| Supply voltage range            | 4.5 to 5.5V          | 3.0 to 3.6V <sup>1</sup> |
| Supports all OBD-II protocols   | yes                  | yes                      |
| ELM327 command set              | yes                  | yes                      |
| Enhanced "ST" command set       | no                   | yes                      |
| Firmware upgradeable            | no                   | yes                      |
| Large OBD message memory buffer | no                   | yes                      |
| Low power mode                  | yes                  | yes                      |
| Supported UART baud rates       | 9600 bps to 500 kbps | 38 bps to 10 Mbps        |
| OBD message filtering           | basic                | advanced                 |

Figure 4. ELM327 and STN1110 comparison.

#### 5.1.14 Data Acquisition Mode settings

Data Acquisition Modes are an essential part of FMB010 device, it is also highly configurable.

By configuration user defines how records will be saved and sent. There are three different modes: Home, Roaming and Unknown. All these modes with configured data acquisition and send frequencies depend on current GSM Operator defined in Operator list (see section 5.1.6) and are switched when GSM operator changes (e.g. vehicle passes through country boarder).

If current GSM operator is defined as Home Operator, device will work in Home Data Acquisition mode, if current operator is defined as Roaming Operator, device will work in Roaming Data Acquisition mode, and if current operator code is not written in Operator list (but there is at least one operator code in the operator list), device will work in Unknown Acquisition mode.

This functionality allows having different AVL records acquire and send parameters values when object is moving or stands still. Vehicle moving or stop state is defined by Stop Detection Source parameter. There are 3 ways for FMB010 to switch between Vehicle on Stop and Vehicle Moving modes see section 5.7.

FMB010 has 6 different modes. Operational logic is shown in Figure 14.



If there are no operator codes entered into operator list, FMB010 will work in Unknown network mode ONLY.


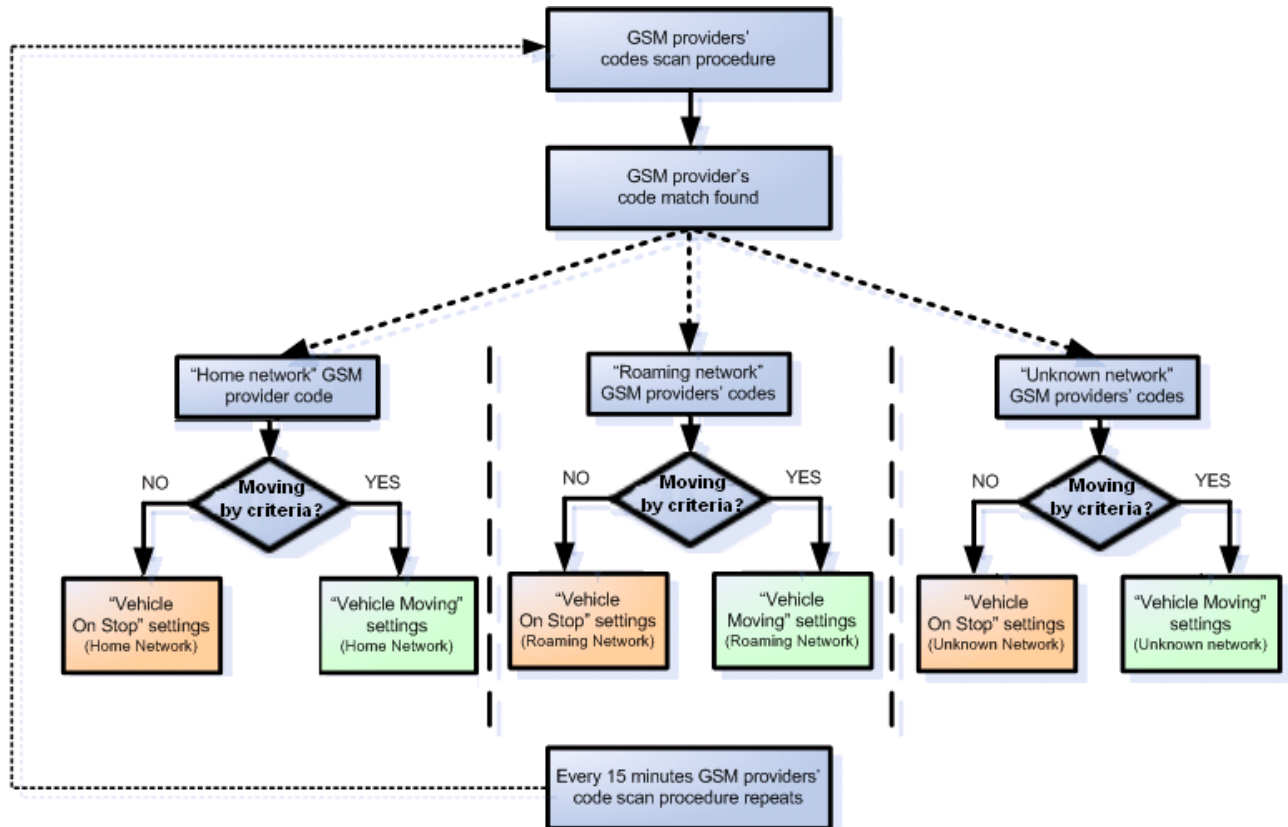


Figure 14 Data Acquisition Mode configuration

Operator search is performed every 15 minutes. Depending on current GSM operator, Home, Roaming or Unknown mode can be changed faster than every 15 minutes. This process is separate from operator search. Movement criteria are checked every second.

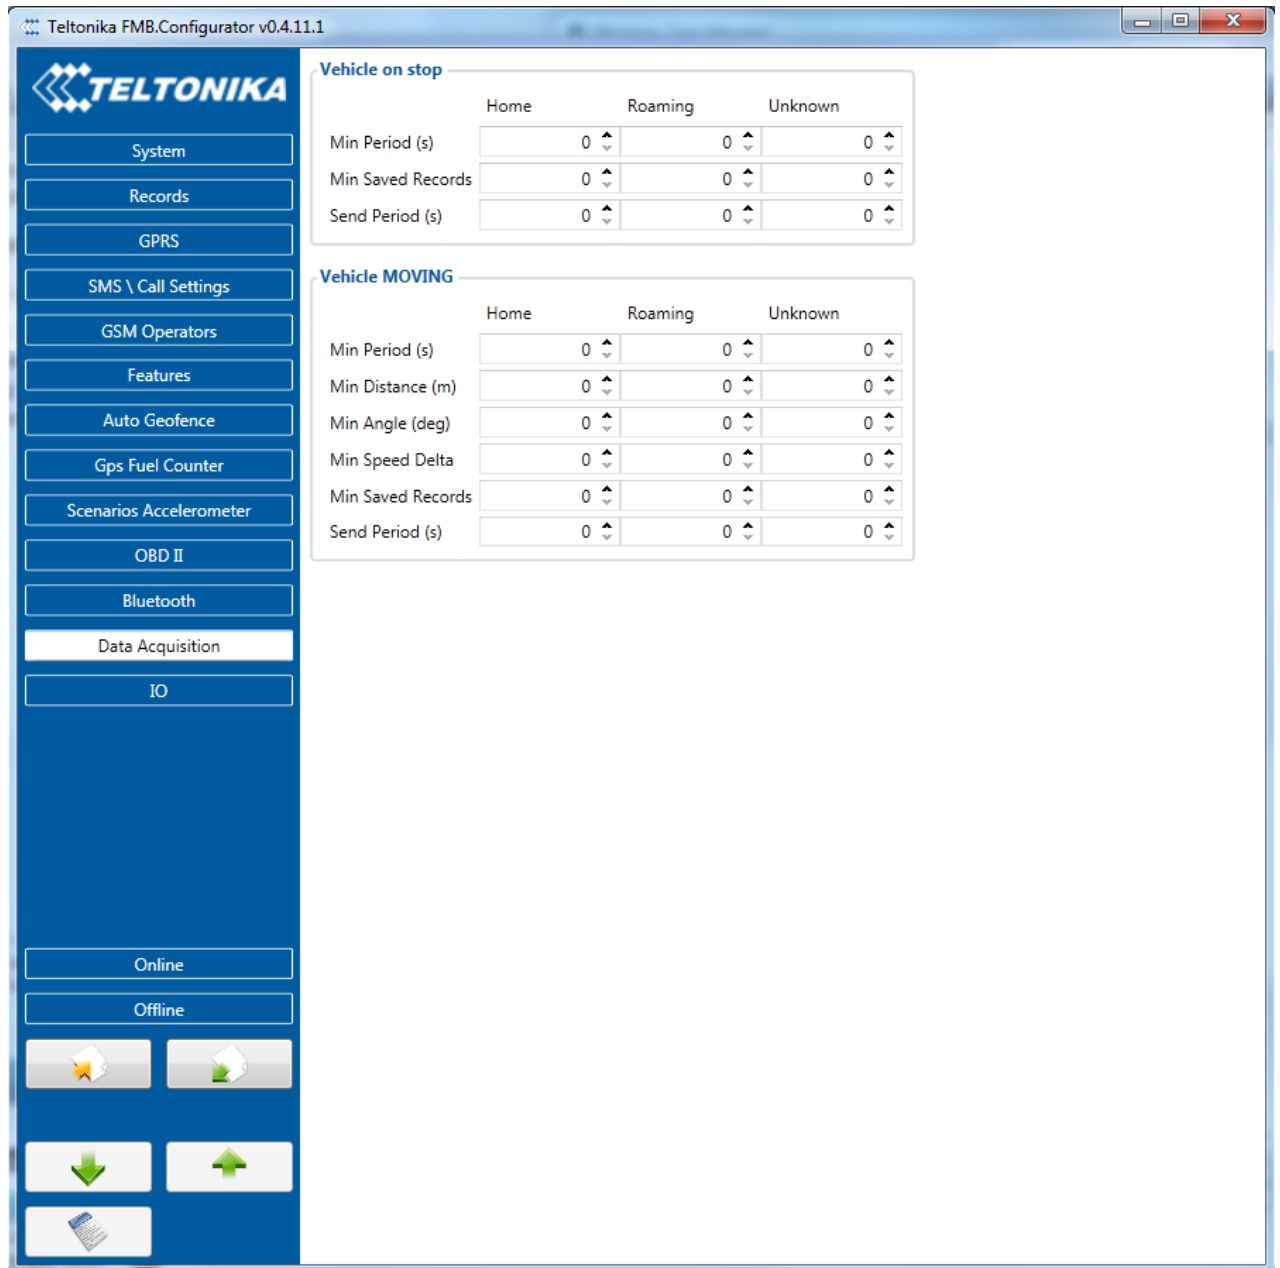

**Teltonika FMB.Configurator v0.4.11.1**

**Vehicle on stop**

|                   | Home | Roaming | Unknown |
|-------------------|------|---------|---------|
| Min Period (s)    | 0    | 0       | 0       |
| Min Saved Records | 0    | 0       | 0       |
| Send Period (s)   | 0    | 0       | 0       |

**Vehicle MOVING**

|                   | Home | Roaming | Unknown |
|-------------------|------|---------|---------|
| Min Period (s)    | 0    | 0       | 0       |
| Min Distance (m)  | 0    | 0       | 0       |
| Min Angle (deg)   | 0    | 0       | 0       |
| Min Speed Delta   | 0    | 0       | 0       |
| Min Saved Records | 0    | 0       | 0       |
| Send Period (s)   | 0    | 0       | 0       |

**Figure 15 Data Acquisition Mode configuration**


'Min Saved Records' defines minimum number of coordinates and I/O data that should be transferred with one connection to server. If FMB010 does not have enough coordinates to send to server, it will check again after time interval defined in 'Sending Period'.

Send period – GPRS data sending to server period. Module makes attempts to send collected data to server every defined period. If it does not have enough records (depends on parameter Min. Saved Records described above), it tries again after defined time interval.




Note: Keep in mind that FMB010 operates in **GMT: 0** time zone, without daylight saving.


FMB010 is able to collect records using four methods at the same time: time, distance, angle and speed based data acquisition:

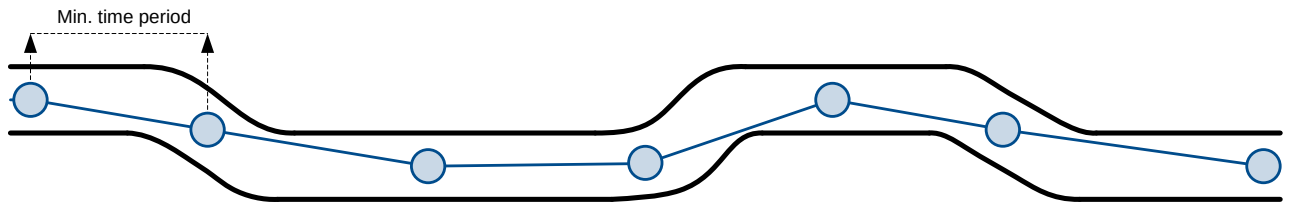

Distance based data acquiring (Min. distance) – records are being acquired when the distance between previous coordinate and current position is greater than defined parameter value. Entering zero disables data acquisition depending on distance.

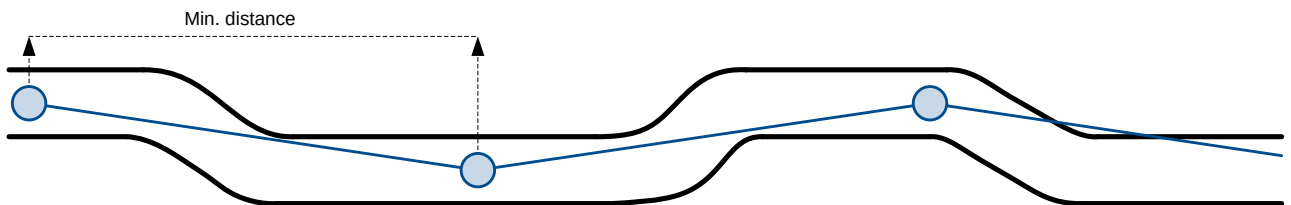

Angle based data acquiring (Min. angle) – records are being acquired when angle difference between last recorded coordinate and current position is greater than defined value. Entering zero disables data acquisition depending on angle.

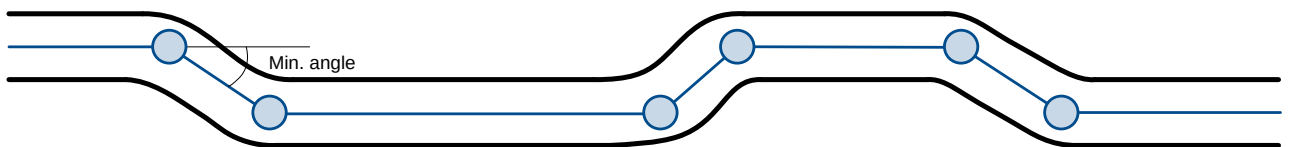

Speed based data acquiring (Min. Speed Delta) – records are being acquired when speed difference between last recorded coordinate and current position is greater than defined value. Entering zero disables data acquisition depending on speed.



### 5.1.15 Connecting to device via Bluetooth

When FMB device starts, automatically Bluetooth is ON too. Take your mobile phone, go to settings>Bluetooth and turn it on. Scan for near by devices, find you device in list, distinguish device by last IMEI numbers on device module. Press pair, wait until device will ask to enter pairing password, type: 5555. Paired device will show up in paired device list. Now download from play store/app store terminal for Bluetooth. E.g. BlueTerm. Run app, click find>connect to your paired device. Now we need to send command to FMB010 through Bluetooth terminal, type: .log:1

Device will respond Debug enabled and FMB010 log will show up. Do not forget to start save log file to mobile phone.

## 5.2 I/O settings

When none of I/O elements are enabled, AVL packet comes with GNSS information only. After enabling I/O element(s) AVL packet along with GNSS information contains current value(s) of enabled I/O element.

Enabled or disabled field – allows enabling I/O element so it is added to the data packet and is sent to the server. By default all I/O element are disabled and FMB010 records only GNSS coordinates.

Priority (AVL packet priority) all records made by FMB010 are regular. Regular packets are sent as Low priority records. When low priority event is triggered, FMB010 makes additional record with indication that the reason for that was I/O element change.

Table 6 Permanent I/O elements

| Permanent I/O elements<br>(are always sent to server if enabled) |                  |                                                                                                                                                                                                                   |
|------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Nr.                                                              | Property Name    | Description                                                                                                                                                                                                       |
| 1                                                                | Ignition         | Logic: 0 / 1                                                                                                                                                                                                      |
| 2                                                                | Movement         | Logic: 0 / 1                                                                                                                                                                                                      |
| 3                                                                | Data mode        | 0 – home on stop, 1 – home on move, 2 – roaming on stop, 3 – roaming on move, 4 – unknown on stop, 5 – unknown on move                                                                                            |
| 4                                                                | GSM signal       | GSM signal level value in scale 1 – 5                                                                                                                                                                             |
| 5                                                                | Sleep mode       | Logic: 0 / 1                                                                                                                                                                                                      |
| 6                                                                | GNSS Status      | States: 0 – short circ., 1 – connected.<br>Parameter defines if GPS antenna is short circuit.<br>All the time value will be sent 1. The only condition to get value 0, then antenna is damaged and short circuit. |
| 7                                                                | GNSS PDOP        | Probability * 10; 0-500                                                                                                                                                                                           |
| 8                                                                | GNSS HDOP        | Probability * 10; 0-500                                                                                                                                                                                           |
| 9                                                                | External Voltage | Voltage: mV, 0 – 30 V                                                                                                                                                                                             |

|    |                     |                                                                                                                                                |
|----|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| 10 | Speed               | Value in km/h, 0 – xxx km/h                                                                                                                    |
| 11 | GSM Cell ID         | GSM base station ID                                                                                                                            |
| 12 | GSM Area Code       | Location Area code (LAC), it depends on GSM operator. It provides unique number which assigned to a set of base GSM stations. Max value: 65536 |
| 13 | Battery Voltage     | Shows battery Voltage in mV                                                                                                                    |
| 14 | Battery Current     | Shows battery Current in mA                                                                                                                    |
| 15 | Active GSM operator | Currently used GSM Operator code                                                                                                               |
| 16 | Trip odometer       | Distance between two records: m                                                                                                                |
| 17 | Total odometer      | Total odometer count: m                                                                                                                        |
| 18 | Digital Input 1     | Logic: 0 / 1                                                                                                                                   |
| 19 | Fuel Used GPS       | Fuel used (ml) by GPS                                                                                                                          |
| 20 | Fuel Rate GPS       | Fuel Consumption by average speed (l/100km)                                                                                                    |
| 21 | Axis X              | Accelerometer axis x value                                                                                                                     |
| 22 | Axis Y              | Accelerometer axis y value                                                                                                                     |
| 23 | Axis Z              | Accelerometer axis z value                                                                                                                     |

\*- make sure your vehicle supports OBD communication and related OBD codes.



There are two types of operations with Permanent I/O elements: simple monitoring and event generating. Monitoring method is used when current I/O information needed with regular GNSS coordinates. Event generating method is used when additional AVL packet is needed when current value of I/O exceeds predefined High and Low levels. I/O settings allow defining I/O event criteria.

## 6 SMS COMMAND LIST

All commands are case sensitive. While FMB010 operates in Sleep mode and user tries to send SMS message it will arrive to FMB010 device, because GSM module is enabled. Only GNSS module is disabled in sleep mode.

### 6.1 SMS command list

Table 4 SMS commands

| Command   | Description                                                                                             | Response |
|-----------|---------------------------------------------------------------------------------------------------------|----------|
| getinfo   | Returns RTC time, GPS status, SAT                                                                       | Yes      |
| getver    | Returns code version, device IMEI, modem app version, RTC time                                          | Yes      |
| getstatus | Returns Data Link:0 GPRS:0 Phone:0 SIM:0 OP:24602 Signal:5 NewSMS:0 Roaming:0 SMSFull:0 LAC:0 Cell ID:0 | Yes      |
| getgps    | Returns GPS status, Satellite number, Latitude,                                                         | Yes      |

|               |                                                                                                                                                         |     |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|-----|
|               | Longitude, Altitude, Speed, Date, Time                                                                                                                  |     |
| ggps          | Returns location information with Google maps link                                                                                                      | Yes |
| readio        | Returns IO status                                                                                                                                       | Yes |
| cpureset      | Resets device                                                                                                                                           | No  |
| getparam      | Returns selected parameter value                                                                                                                        | Yes |
| setparam      | Sets selected parameter value                                                                                                                           | Yes |
| flush         | Redirects device to other server                                                                                                                        | Yes |
| countrecs     | Returns record number                                                                                                                                   | Yes |
| setdigout X,Y | Set digital output<br>X – 0 or 1<br>(0 - OFF or 1 – ON)<br>Y – timeout value if needed (in seconds)                                                     | Yes |
| fc_reset      | Resets fuel consumption parameters                                                                                                                      | Yes |
| towingreact   | Towing reactivation                                                                                                                                     | Yes |
| btgetlist     | Returns requested Bluetooth list(values:0, 1, 2)                                                                                                        | Yes |
| btgscan       | Starts Bluetooth scan(values: none, 1)                                                                                                                  | Yes |
| btvisible     | Sets Bluetooth to visible with TMO                                                                                                                      | Yes |
| btrelease     | Disconnects from current device and pauses auto connect functionality for TMO                                                                           | Yes |
| btunpair      | Unpair Bluetooth device                                                                                                                                 | Yes |
| faultcodes    | Fault codes reading from OBD                                                                                                                            | Yes |
| obdinfo       | Returns OBD info. Protocol, VIN, AdaptiveTiming value, requested PID counter, OBD application state, available vehicle PIDs, mil status, number of DTCs | Yes |

Setparam and setdigout SMS is used to configure device.

Parameter ID consists of 3 or 5 digits. Detailed list of parameters and IDs can be found in chapter number 5.2 “System parameters”

Example: ‘**username password setparam 102:0**’ will disable sleep mode.

Example: ‘**username password setdigout 1 60**’ will set digital output ON for 60s

#### 6.1.1 getinfo

| Response details | Description                                                                                           |
|------------------|-------------------------------------------------------------------------------------------------------|
| RTC              | RTC Time                                                                                              |
| GPS              | GPS receiver state. 0 – OFF, 1 – restarting, 2 – ON but no fix, 3 –ON and operational, 4 – sleep mode |
| SAT              | Average satellites                                                                                    |

*Example: RTC:2017/1/9 14:13 GPS:1 SAT:0*

#### 6.1.2 getver

| Response details | Description                  |
|------------------|------------------------------|
| App Ver          | Firmware version             |
| Modem Ver        | Version of modem application |
| GPS Ver          | Version of GPS module        |

|             |                     |
|-------------|---------------------|
| Hw Ver      | Version of hardware |
| Device IMEI | IMEI                |

*Example: App Ver:01.00.17 Rev:01 Modem Ver:TM25Q\_D\_01.00.00.00\_010 GPS Ver:AXN\_3.82\_3333\_1Hw Ver:FMB0\_MOD2\_A0:B0:C1:D0 Device IMEI:352094080000950*

### 6.1.3 getstatus

| Response details | Description                                                                                              |
|------------------|----------------------------------------------------------------------------------------------------------|
| Data Link        | Indicate module connection to server at the moment: 0 – Not connected, 1 – connected                     |
| GPRS             | Indicate if GPRS is available at the moment                                                              |
| Phone            | Voice Call status: 0 – ready, 1 – unavailable, 2 – unknown, 3 –ringing, 4 – call in progress, 5 – asleep |
| SIM              | SIM Status: 0-ready, 1-pin, 2-puk, 3-pin2, 4-puk2                                                        |
| OP               | Connected to GSM Operator: numerical id of operator                                                      |
| Signal           | GSM Signal Quality [0-5]                                                                                 |
| NewSMS           | Indicate if new message received                                                                         |
| Roaming          | 0 – Home Network, 1 – roaming                                                                            |
| SMSFull          | SMS storage is full? 0 – ok, 1 – SMS storage full                                                        |
| LAC              | GSM Tower Location Area Code                                                                             |
| Cell ID          | GSM Tower Cell ID Code                                                                                   |

*Example: Data Link: 0 GPRS: 1 Phone: 0 SIM: 0 OP: 24602 Signal: 5 NewSMS: 0 Roaming: 0 SMSFull: 0 LAC: 1 Cell ID: 3055*

### 6.1.4 getgps

| Response details | Description                                 |
|------------------|---------------------------------------------|
| GPS              | Indicates valid (1) or invalid (0) Gps data |
| Sat              | Count of currently available satellites     |
| Lat              | Latitude (Last good Latitude)               |
| Long             | Longitude (Last good Longitude)             |
| Alt              | Altitude                                    |
| Speed            | Ground speed, km/h                          |
| Dir              | Ground direction, degrees                   |
| Date             | Current date                                |
| Time             | Current GMT time                            |

*Example: GPS:1 Sat:0 Lat:54.666042 Long:25.225031 Alt:0 Speed:0 Dir:0 Date: 17/1/9 Time: 12:52:30*

### 6.1.5 ggps

| Response details | Description  |
|------------------|--------------|
| D                | Date         |
| T                | Time         |
| S                | Actual Speed |

|     |                                                                |
|-----|----------------------------------------------------------------|
| C   | Latitude (Last good Latitude), Longitude (Last good Longitude) |
| Url | Google Maps Link                                               |

Example: D:17/1/9 T:12:52:30 S:0.00 C:54.666042, 25.225032 Url:  
<http://maps.google.com/?q=54.666042,25.225032&om=1speed:0>

#### 6.1.6 readio #

| Response details | Description       |
|------------------|-------------------|
| ID               | I/O element ID    |
| Value            | I/O Element value |

Example: Param ID:3 Value:0

#### 6.1.7 getparam

Read parameter value. ID consists of 3 or 4 digits. Detailed list of parameters and IDs can be found in chapter number 8 "Parameter List"

Example: ,getparam 2001' command will request APN name

Answer: Param ID:2001 Value:wap

#### 6.1.8 setparam

Sets new value for parameter. ID consists of 3 or 4 digits. Detailed list of parameters and IDs can be found in chapter number 8 "Parameter List"

Example: ,setparam 2001 wap2' will change configured APN name

Answer: Param ID:2001 Value:wap2

#### 6.1.9 flush #,#,#,#,#,#

Initiates all data sending by GPRS to specified target server. Comma separated parameters go as numbered:

- 1.# - IMEI
- 2.# - APN
- 3.# - GPRS LOGIN
- 4.# - GPRS PASSWORD
- 5.# - IP
- 6.# - PORT
- 7.# - MODE (0-TCP/1-UDP)

Parameters are separated by comma (no spaces needed). In case you don't need to enter parameter (Login/Pass) – do not put space, simply put comma and write next parameter.

Example: opa opa flush 353976012555151,banga,,,212.47.99.62,12050,0

| Response details           | Description                                     |
|----------------------------|-------------------------------------------------|
| FLUSH SMS Accepted         | FLUSH SMS Accepted                              |
| # records found on FLASH   | Number of records found on FLASH                |
| Minimum Records to Send: # | Number of minimum saved records to send         |
| GPRS Enabled: #            | State of the GPRS connection, 0 – disabled; 1 – |

|              |                                                                                      |
|--------------|--------------------------------------------------------------------------------------|
|              | enabled                                                                              |
| Time Sync: # | Indicates time synchronization on the device, 0 – not synchronized; 1 – synchronized |

*Example: FLUSH SMS Accepted. 11 records found on FLASH. Minimum Records to Send: 1.  
GPRS Enabled: 1. Time Sync: 1*

#### 6.1.10 setdigout

Sets digital output to ON or OFF state (timeout for output is controllable)

*Example: 'setdigout 1 60' will set OUT to high level for 60 seconds,  
'setdigout 1' will set OUT to high level for infinite time.*

#### 6.1.11 countrecs

Returns the number of records save in the Micro SD card.

#### 6.1.12 towingreact

Reactivates Towing Detection to initial state (does not wait for ignition to be OFF). Useful when generated false Towing event and needs reactivation.

#### 6.1.13 faultcodes

| Response details | Description                                                                      |
|------------------|----------------------------------------------------------------------------------|
| LIST             | Returns list of fault codes; response when no faults: "No fault codes detected." |

*Example: "P0100,P0200,P0300,C0300,B0200,U0100".*

#### 6.1.14 obdinfo

| Response details | Description                                                                                                                           |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| LIST of OBD info | Protocol, VIN, AdaptiveTiming value, requested PID counter, OBD application state, available vehicle PIDs, mil status, number of DTCs |

*Example:Protocol:5,VIN:N/A,TM:5,CNT:5,ST:OBDDATA  
REQUESTING,P1:0x0,P2:0x0,P3:0x0,P4:0x0,MIL:0,DTC:0,ID0*

#### 6.1.15 btgetlist

btgetlist command needs argument what list should be printed!

*btgetlist 0; device will respond with BT\_LIST\_Discovered*

*btgetlist 1; device will respond with all paired devices*

*btgetlist 2; device will respond with connected bluetooth device*

Note: Without argument it is always 0 i.e **BT\_LIST\_Discovered**  
In FW 01.00.23 btgetlist (without args) will not respond (as unknown command)

## 6.2 System parameters

### 6.2.1 Sleep Mode (ID=102)

Device has two sleep modes: sleep and deep sleep mode. While sleep is disabled (value 0) module will never enter sleep mode, in sleep mode (value 1) module reduces level of power usage by turning GPS module to sleep, in deep sleep mode (value 2) module turns GPS module to sleep and device is deregistered from network (note, that FMB010 do not receive SMS while in deep sleep).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2             | -                 |                                   | U8         |

### 6.2.2 Sleep timeout (ID=103)

Sleep timeout is time after which FMB010 goes to sleep or deep sleep if other requirements are met. It is measured in minutes.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 1             | 3000          | -                 |                                   | U8         |

### 6.2.3 Movement Source (ID=100)

Device can operate and change its working mode according to motion detection source: ignition (value 0), movement sensor (value 1), GPS (value 2)

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2             | -                 |                                   | U8         |

### 6.2.4 Static Navigation (ID=106)

When static navigation is enabled, FMB010 filters out GPS jumps, when it is not moving. When it is disabled, it does not make any changes to collected GPS data.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 1                 |                                   | U8         |

### 6.2.5 Saving/Sending without time synchronization (ID=107)

When this feature is enabled (value = 1), then records can be saved and sent to server without time synchronization.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 1                 |                                   | U8         |

### 6.2.6 GNSS Source (ID=109)

This parameter sets Satellite System, available values:

|                     |          |
|---------------------|----------|
| Beidou only         | value:1  |
| Glomass only        | value:2  |
| Galileo only        | value:4  |
| Galileo+Beidou      | value:5  |
| Galileo+Glomass     | value:6  |
| Gps only            | value:8  |
| Gps+Beidou          | value:9  |
| Gos+Glomass         | value:10 |
| Gps+Galileo         | value:12 |
| Gps+Galileo+Beidou  | value:13 |
| Gps+Galileo+Glomass | value:14 |

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 14            | -                 |                                   | U8         |

### 6.2.7 Ignition settings (ID=101)

This parameter sets ignition source available values : 0 – Power voltage, 1 – Digital Input, 2– Accelerometer.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2             | 0                 |                                   | U8         |

### 6.2.8 High voltage level (ID=104)

Sets high level of voltage if ignition settings is set to power voltage.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 30000         | 30000             |                                   | U8         |

### 6.2.9 Low voltage level (ID=105)

Sets low level of voltage if ignition settings is set to power voltage.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 29999         | 13000             |                                   | U8         |

### 6.2.10 Led indication (ID=108)

Sets led indication: 0 – disabled, 1 – enabled

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 1                 |                                   | U8         |

## 6.3 Records parameters

### 6.3.1 Sorting (ID=1002)

Record sorting parameter is responsible for record sorting order. Value of 0 arranging data starting from newest, while value of 1 arranging data starting from oldest.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | -                 |                                   | U8         |

### 6.3.2 Open Link Timeout (ID=1000)

Defines for how many seconds device will keep connection to the server after successful data transfer while waiting for a new record.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 259200        | -                 |                                   | U32        |

### 6.3.3 Server Response Timeout (ID=1001)

Defines time period (in seconds) for server response to sent records.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 5             | 300           | -                 |                                   | U8         |



ATTENTION! Some GSM operators may disconnect the device from an active data link if the device doesn't send any data for a very long time, even if active data link timeout is set to maximum value. The amount of time that an operator keeps the link open depends solely on the operator. For example, if active data link timeout is set to maximum, 259200 seconds (72 hours), and the device sends data to server every 86400 seconds (24 hours), the operator might disconnect the link earlier and the device will have to connect to the server anew. This may cost extra, depending on the operator GPRS data charge. It is strongly recommended, when using active data link timeout, that data sending to the server should not be very rare (24 hours or more). If data sending is more frequent, then the operator will not disconnect the device from the server.

## 6.4 GSM parameters

### 6.4.1 GPRS content activation (ID=2000)

Parameter allows or does not allow GPRS usage. If GPRS is not allowed value is 0, if GPRS is allowed value is 1.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                      | Value type |
|---------------|---------------|-------------------|------------------------------------------------------------------------|------------|
| 0             | 1             | -                 | APN Name (ID=2001)<br>APN username (ID=2002)<br>APN Password (ID=2003) | S8         |

### 6.4.2 APN Name (ID=2001)

Parameter defines GPRS Access Point Name.

| Minimum value | Maximum value  | Recommended value | Goes with (depends on) parameters                                                     | Value type |
|---------------|----------------|-------------------|---------------------------------------------------------------------------------------|------------|
| Empty         | 32 char string | -                 | GPRS content activation (ID=2000)<br>APN username (ID=2002)<br>APN Password (ID=2003) | S8[32]     |

### 6.4.3 APN username (ID=2002)

Parameter defines APN username. In case operator does not use username for login, value should be empty.

| Minimum value | Maximum value  | Recommended value | Goes with (depends on) parameters                                                 | Value type |
|---------------|----------------|-------------------|-----------------------------------------------------------------------------------|------------|
| Empty         | 30 char string | -                 | GPRS content activation (ID=2000)<br>APN Name (ID=2001)<br>APN Password (ID=2003) | S8[30]     |

### 6.4.4 APN Password (ID=2003)

Parameter defines APN password. In case operator does not use password for login, value should be empty.

| Minimum value | Maximum value  | Recommended value | Goes with (depends on) parameters                                                 | Value type |
|---------------|----------------|-------------------|-----------------------------------------------------------------------------------|------------|
| Empty         | 30 char string | -                 | GPRS content activation (ID=2000)<br>APN Name (ID=2001)<br>APN username (ID=2002) | S8[30]     |

### 6.4.5 Domain (ID=2004)

Parameter defines AVL data destination server IP address. Example: 212.47.99.62

| Minimum | Maximum | Recommended | Goes with (depends on) | Value |
|---------|---------|-------------|------------------------|-------|
|---------|---------|-------------|------------------------|-------|

| value | value          | value | parameters                        | type   |
|-------|----------------|-------|-----------------------------------|--------|
| 0     | 54 char string | -     | GPRS content activation (ID=2000) | S8[16] |

#### 6.4.6 Target Server Port (ID=2005)

Parameter defines AVL data destination server port number. Example: 12050

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| Empty         | 65535         | -                 | GPRS content activation (ID=2000) | U16        |

#### 6.4.7 Protocol (ID=2006)

Parameter defines GPRS data transport protocol. Module can use TCP or UDP transport protocol to send data to server. For TCP protocol value is 0, for UDP protocol value is 1.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | -                 | GPRS content activation (ID=2000) | U8         |

### 6.5 SMS/Call settings

#### 6.5.1 SMS data sending settings (ID=3000)

Parameter allows or does not allow sending AVL data using binary SMS. If SMS use is not allowed value is 0 and 1 if SMS use is allowed.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | -                 | S8                                |            |

#### 6.5.2 Data send number (ID=3001)

In this field are written GSM numbers, to which will be sent Data SMS.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 1 digit       | 16 digits     | -                 |                                   | S8         |

#### 6.5.3 Authorized phone numbers (ID=4000-4009)

If at least one number is entered then only those number can send messages to device. Number must be entered without "+" or "00".

Example: 37060012346

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
|               |               |                   |                                   |            |

|         |           |   |  |        |
|---------|-----------|---|--|--------|
| 1 digit | 16 digits | - |  | S8[17] |
|---------|-----------|---|--|--------|

#### 6.5.4 SMS Event Predefined Numbers (ID=6000-6009)

In this field GSM numbers are written, to which will be sent "Event SMS" text message. Number must be entered without "+" or "00".

Example: 37060012346

#### 6.5.5

##### SMS Login (ID=3003)

User login is used to ensure module security. Used in every SMS that is sent to device. Example: ba321

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| Empty         | 5 char        | -                 | SMS Password (ID=3004)            | S8[5]      |

#### 6.5.6 SMS Password (ID=3004)

User password is used to ensure module security. Used in every SMS that is sent to device. Example: ab123

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| Empty         | 5 char        | -                 |                                   | S8[5]      |

#### 6.5.7 Incoming call action (ID=3005)

Parameter defines action during call: 0 – do nothing, 1 – hang up, 2 – report position

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2             | 0                 |                                   | S8[17]     |

#### 6.5.8 Outgoing Call Trigger (ID=3007)

Parameter defines hands free call trigger: 0 – Disable, 1 – DIN1, 2 – Crash event, 3 – DIN1 and Crash event.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 3             | -                 |                                   | UInt64     |

#### 6.5.9 GSM number index (ID=3008)

Parameter defines gsm number's, in predefined number list, index.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 9             | -                 |                                   | UInt64     |

#### 6.5.10 Operator List (ID=5000-5049)

Parameter defines operator list. According to this list module selects operating profile. First in a list is *Home Operator Code*, then Preferred Roaming Operator Codes are written.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| Empty         | 7 digits      | -                 |                                   | U32        |

### 6.6 Data Acquisition Modes parameters

#### 6.6.1 Home Network GSM operator code “Vehicle on STOP” parameters

##### 6.6.1.1 Min Period (ID=10000)

This parameter indicates time interval in seconds in order to acquire new record. If value is 0 it means no records by min period will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 |                                   | U32        |

##### 6.6.1.2 Min Saved Records (ID=10004)

This parameter defines minimum number of records in one data packet that can be sent to server. It has higher priority than Data Send Period (ID=10005).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 1             | 255           | 1                 |                                   | U8         |

##### 6.6.1.3 Send Period (ID=10005)

This parameter indicates frequency (time interval in seconds) of sending data to server.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 | Min Saved Records (ID=10004)      | U32        |

#### 6.6.2 Home Network GSM operator code “Vehicle MOVING” parameters

##### 6.6.2.1 Min Period (ID=10050)

This parameter indicates time interval in seconds in order to acquire new record. If value is 0 it means no records by min period will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters               | Value type |
|---------------|---------------|-------------------|-------------------------------------------------|------------|
| 0             | 2592000       | -                 | Min Distance (ID=10051)<br>Min Angle (ID=10052) | U32        |

#### 6.6.2.2 Min Distance (ID=10051)

This parameter indicates distance in meters in order to acquire new record. Record is stored when the distance between previous records is greater than parameters value. If value is 0 it means no records by min distance will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters             | Value type |
|---------------|---------------|-------------------|-----------------------------------------------|------------|
| 0             | 65535         | -                 | Min Period (ID=10050)<br>Min Angle (ID=10052) | U32        |

#### 6.6.2.3 Min Angle (ID=10052)

This parameter indicates angle in degrees in order to acquire new record. If angle difference between last recorded coordinate and current position is greater than defined value, new record is stored. This parameter is operational, when speed is higher than 10km/h. If value is 0 it means no records by min angle will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                | Value type |
|---------------|---------------|-------------------|--------------------------------------------------|------------|
| 0             | 180           | -                 | Min Period (ID=10050)<br>Min Distance (ID=10051) | U16        |

#### 6.6.2.4 Min Speed delta (ID=10053)

This parameter indicates speed difference in order to acquire new record. If speed difference between last recorded coordinate and current position is greater than defined value, new record is stored. If value is 0 it means no records by min distance will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                        | Value type |
|---------------|---------------|-------------------|--------------------------------------------------------------------------|------------|
| 0             | 255           | 10                | Min Period (ID=10050)<br>Min Distance (ID=10051)<br>Min Angle (ID=10052) | U16        |

#### 6.6.2.5 Min Saved Records (ID=10054)

This parameter defines minimum number of records in one data packet that can be sent to server. It has higher priority than Data Send Period (ID=10055).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                        | Value type |
|---------------|---------------|-------------------|--------------------------------------------------------------------------|------------|
| 1             | 255           | 1                 | Min Period (ID=10050)<br>Min Distance (ID=10051)<br>Min Angle (ID=10052) | U8         |

#### 6.6.2.6 Send Period (ID=10055)

This parameter indicates frequency (time interval in seconds) of sending data to server.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 |                                   | U32        |

### 6.6.3 Roaming Network GSM operator code “Vehicle on STOP” parameters

#### 6.6.3.1 Min Period (ID=10100)

This parameter indicates time interval in seconds in order to acquire new record. If value is 0 it means no records by min period will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 |                                   | U32        |

#### 6.6.3.2 Min Saved Records (ID=10104)

This parameter defines minimum number of records in one data packet that can be sent to server. It has higher priority than Data Send Period (ID=10105).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 1             | 255           | 1                 |                                   | U8         |

#### 6.6.3.3 Send Period (ID=10105)

This parameter indicates frequency (time interval in seconds) of sending data to server.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 | Min Saved Records (ID=10104)      | U32        |

### 6.6.4 Roaming Network GSM operator code “Vehicle MOVING” parameters

#### 6.6.4.1 Min Period (ID=10150)

This parameter indicates time interval in seconds in order to acquire new record. If value is 0 it means no records by min period will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters               | Value type |
|---------------|---------------|-------------------|-------------------------------------------------|------------|
| 0             | 2592000       | -                 | Min Distance (ID=10151)<br>Min Angle (ID=10152) | U32        |

#### 6.6.4.2 Min Distance (ID=10151)

This parameter indicates distance in meters in order to acquire new record. Record is stored when the distance between previous records is greater than parameter's value. If value is 0 it means no records by min distance will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters             | Value type |
|---------------|---------------|-------------------|-----------------------------------------------|------------|
| 0             | 65535         | -                 | Min Period (ID=10150)<br>Min Angle (ID=10152) | U32        |

#### 6.6.4.3 Min Angle (ID=10152)

This parameter indicates angle in degrees in order to acquire new record. If angle difference between last recorded coordinate and current position is greater than defined value, new record is stored. This parameter is operational, when speed is higher than 10km/h. If value is 0 it means no records by min angle will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 180           | -                 | Min Period (ID=10150)             | U16        |

#### 6.6.4.4 Min Speed (ID=10153)

This parameter indicates speed difference in order to acquire new record. If speed difference between last recorded coordinate and current position is greater than defined value, new record is stored. If value is 0 it means no records by min distance will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                        | Value type |
|---------------|---------------|-------------------|--------------------------------------------------------------------------|------------|
| 0             | 255           | 10                | Min Period (ID=10150)<br>Min Distance (ID=10151)<br>Min Angle (ID=10152) | U16        |

#### 6.6.4.5 Min Saved Records (ID=10154)

This parameter defines minimum number of records in one data packet that can be sent to server. It has higher priority than Data Send Period (ID=10105).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 1             | 255           | 1                 |                                   | U8         |

#### 6.6.4.6 Send Period (ID=10155)

This parameter indicates frequency (time interval in seconds) of sending data to server.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 | Min Saved Records (ID=10104)      | U32        |

### 6.6.5 Unknown Network GSM operator code “Vehicle on STOP” parameters

#### 6.6.5.1 Min Period (ID=10200)

This parameter indicates time interval in seconds in order to acquire new record. If value is 0 it means no records by min period will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 |                                   | U32        |

#### 6.6.5.2 Min Saved Records (ID=10204)

This parameter defines minimum number of records in one data packet that can be sent to server. It has higher priority than Data Send Period (ID=10205).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 1             | 255           | 1                 |                                   | U8         |

#### 6.6.5.3 Send Period (ID=10205)

This parameter indicates frequency (time interval in seconds) of sending data to server.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 | Min Saved Records (ID=10204)      | U32        |

### 6.6.6 Unknown Network GSM operator code “Vehicle MOVING” parameters

#### 6.6.6.1 Min Period (ID=10250)

This parameter indicates time interval in seconds in order to acquire new record. If value is 0 it means no records by min period will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
|               |               |                   |                                   |            |

|   |         |   |                                                 |     |
|---|---------|---|-------------------------------------------------|-----|
| 0 | 2592000 | - | Min Distance (ID=10151)<br>Min Angle (ID=10152) | U32 |
|---|---------|---|-------------------------------------------------|-----|

#### 6.6.6.2 Min Distance (ID=10251)

This parameter indicates distance in meters in order to acquire new record. Record is stored when the distance between previous records is greater than parameter's value. If value is 0 it means no records by min distance will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters             | Value type |
|---------------|---------------|-------------------|-----------------------------------------------|------------|
| 0             | 65535         | -                 | Min Period (ID=10150)<br>Min Angle (ID=10152) | U32        |

#### 6.6.6.3 Min Angle (ID=10252)

This parameter indicates angle in degrees in order to acquire new record. If angle difference between last recorded coordinate and current position is greater than defined value, new record is stored. This parameter is operational, when speed is higher than 10km/h. If value is 0 it means no records by min angle will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 180           | -                 | Min Period (ID=10150)             | U16        |

#### 6.6.6.4 Min Speed (ID=10253)

This parameter indicates speed difference in order to acquire new record. If speed difference between last recorded coordinate and current position is greater than defined value, new record is stored. If value is 0 it means no records by min distance will be saved.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                        | Value type |
|---------------|---------------|-------------------|--------------------------------------------------------------------------|------------|
| 0             | 255           | 10                | Min Period (ID=10150)<br>Min Distance (ID=10151)<br>Min Angle (ID=10152) | U16        |

#### 6.6.6.5 Min Saved Records (ID=10254)

This parameter defines minimum number of records in one data packet that can be sent to server. It has higher priority than Data Send Period (ID=10105).

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 1             | 255           | 1                 |                                   | U8         |

#### 6.6.6.6 Send Period (ID=10255)

This parameter indicates frequency (time interval in seconds) of sending data to server.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 2592000       | -                 | Min Saved Records (ID=10104)      | U32        |

### 6.7 Features Parameters

#### 6.7.1 Green driving priority (ID=11000)

Defines priority of green driving scenario:

0 – disabled, 1 – low, 2 – high, 3 – panic

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 3             | -                 |                                   | U8         |

#### 6.7.2 Max Acceleration Force (ID=11004)

It is max allowed acceleration force which can be reached while accelerating without triggering harsh acceleration event.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 0.25              |                                   | Float      |

#### 6.7.3 Max Braking Force (ID=11005)

It is max allowed braking force which can be reached while braking without triggering harsh braking event.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 0.35              |                                   | Float      |

#### 6.7.4 Max Cornering (ID=11006)

It is max allowed cornering angle which can be reached while cornering without triggering harsh cornering event.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | -                 |                                   | U16        |

#### 6.7.5 Green/Eco driving (ID=11007)

Choose between Eco driving(accelerometer) and Green driving(gps). 0 – GPS, 1 – Accelerometer

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 0             |                                   | U16        |

#### 6.7.6 Green driving digital output control settings (ID=11003)

Sets digital output off (0) or on (1)

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 0                 |                                   | Float      |

#### 6.7.7 Green driving Digital output on duration (ID=11001)

Output ON duration in mili-seconds

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 200           |                                   | Float      |

#### 6.7.8 Green driving Digital output off duration (ID=11002)

Output OFF duration in in mili-seconds

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 200           |                                   | Float      |

#### 6.7.9 Overspeeding priority (ID=11100)

Defines priority of overspeeding scenario:

0 – disabled, 1 – low, 2 – high, 3 – panic

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 3             | -                 |                                   | U8         |

#### 6.7.10 Max allowed Speed (ID=11104)

It is max allowed speed which can be reached. If this value exceeded Over speeding event will occur.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 260           | -                 |                                   | U16        |

#### 6.7.11 Overspeeding output control (ID=11103)

Enables (1) or disables (0) overspeeding output control

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 0                 |                                   | Float      |

#### 6.7.12 Overspeeding Digital output on duration (ID=11101)

Output ON duration in mili-seconds

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 200           |                                   | U8         |

#### 6.7.13 Overspeeding Digital output off duration (ID=11102)

Output OFF duration in mili-seconds

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 200           |                                   | U8         |

#### 6.7.14 Excessive idling priority (ID=11200)

Defines priority of Excessive idling scenario:

0 – disabled, 1 – low, 2 – high, 3 – panic

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 3             | -                 |                                   | U8         |

#### 6.7.15 Eventual records (ID=11203)

Disables (0) or enables (1) eventual records with idling value

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | -                 |                                   | U16        |

#### 6.7.16 Excessive idling minimum stop duration (ID=11205)

Defines minimum time in seconds of vehicle idling before scenario enables.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 255           | 5             |                                   | Float      |

#### 6.7.17 Excessive idling minimum move duration (ID=11206)

Defines minimum time in seconds of vehicle idling before scenario disables.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 255           | 2             |                                   | Float      |

#### 6.7.18 Excessive idling output control (ID=11204)

Enables (1) or disables (0) Excessive idling output control

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | 0                 |                                   | U16        |

#### 6.7.19 Excessive idling output on duration (ID=11201)

Output ON duration in seconds

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 0             |                                   | Float      |

#### 6.7.20 Excessive idling output off duration (ID=11202)

Output OFF duration in seconds

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 0             |                                   | Float      |

#### 6.7.21 Jamming (ID=11300)

Scenario settings: 0 – Disable, 1 – Low, 2 – High, 3 – Panic

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 3             | 0             |                                   | U8         |

#### 6.7.22 Jamming Eventual records (ID=11303)

Disables or enables eventual records. 0 – Disable, 1 – Enable

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 1             |                                   | U8         |

### 6.7.23 Jamming Output Control (ID=11304)

Defines rather jamming will control digital output or not. 0 – Disable, 1 – Enable.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 0             |                                   | U8         |

### 6.7.24 Jamming DOUT on duration [ms] (ID=11301)

Sets time period, that Dout will be on.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 200           |                                   | U8         |

### 6.7.25 Jamming DOUT off duration [ms] (ID=11302)

Sets time period, that Dout will be off.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 200           |                                   | U8         |

### 6.7.26 DOUT control via call (ID=12000)

Disables or enables dout control via call. 0 – Disable, 1 – Enable.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 0             |                                   | U8         |

### 6.7.27 DOUT deactivation settings (ID=12001)

Enables or disables dout deactivation by Din1. 0 – Disable, 1 – Enable.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 0             |                                   | U8         |

### 6.7.28 DOUT duration timeout [s] (ID=12002)

Defines the time that dout will be activated for.

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2147483647    | 5             |                                   | U8         |

#### 6.7.29 Trip priority priority (ID=11800)

Defines priority of trip scenario:

0 – disabled, 1 – low, 2 – high, 3 – panic

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 3             | 0             |                                   | U8         |

#### 6.7.30 Start Speed (ID=11803)

This parameter represents speed, which is detected as minimum speed to indicate TRIP START and generate event.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 255           | -                 | Trip (ID=11800)                   | U8         |

#### 6.7.31 Ignition Off Timeout (ID=11804)

This parameter represents timeout to wait if ignition is off in order to detect TRIP STOP and generate event.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 65535         | -                 | Trip (ID=11800)                   | U16        |

#### 6.7.32 Trip mode (ID=11802)

For this feature I/O ODOMETER must be enabled. If I/O ODOMETER is enabled, and mode is set to Continuous (value 0), TRIP distance is going to be counted till the end of trip, if between records mode is set, ODOMETER will count distance only between two records.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 1             | -                 | Trip (ID=11800)                   | U8         |

### 6.8 AutoGeofencing

#### 6.8.1.1 AutoGeofencing priority (ID=20000)

Defines priority of trip scenario:

0 – disabled, 1 – low, 2 – high, 3 – panic

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters | Value type |
|---------------|---------------|-------------------|-----------------------------------|------------|
| 0             | 3             | 0                 |                                   | U8         |

#### 6.8.1.2 Activation Timeout (ID=20003)

Parameter represents AutoGeofencing activation timeout in seconds.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|------------------------------------|------------|
| 0             | 65535         | 60                | AutoGeofencing priority (ID=20000) | U16        |

#### 6.8.1.3 Deactivate by (ID=20005)

Parameter defines Autogeofence deactivation source. Value 0 – for Ignition, - Power Voltage, Digital Input 1

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|------------------------------------|------------|
| 0             | 2             | -                 | AutoGeofencing priority (ID=20000) | U8         |

#### 6.8.1.4 AutoGeofence event generating (ID=20001)

Generate event: 0 – on exiting zone , 1 – on entering zone; 2 – on both;

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters  | Value type |
|---------------|---------------|-------------------|------------------------------------|------------|
| 0             | 2             | 0                 | AutoGeofencing priority (ID=20000) | U8         |

#### 6.8.1.5 Radius (ID=20004)

Parameter represents radius of circle with center device coordinates after activating AutoGeofence feature.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                              | Value type |
|---------------|---------------|-------------------|----------------------------------------------------------------|------------|
| 0             | 1000000       | 100               | AutoGeofencing priority (ID=20000)<br>Deactivate by (ID=20005) | U32        |

### 6.9 GPS Fuel counter

#### 6.9.1.1 City Consumption L/100km (ID=11900)

Consumption in the city

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 50            | 0             |                                   | Double     |

#### 6.9.1.2 Highway Consumption L/100km (ID=11901)

Consumption on highway

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 50            | 0             |                                   | Double     |

#### 6.9.1.3 Average Consumption L/100km (ID=11902)

Average fuel consumption of the vehicle

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 50            | 0             |                                   | Double     |

#### 6.9.1.4 City Speed [km/h] (ID=11903)

Speed in the city

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 250           | 30            |                                   | Unit64     |

#### 6.9.1.5 Highway Speed [km/h] (ID=11904)

Speed on highway

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 250           | 90            |                                   | Unit64     |

#### 6.9.1.6 Average Speed [km/h] (ID=11905)

Average speed of the vehicle

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 250           | 60            |                                   | Unit64     |

#### 6.9.1.7 Correction coefficient (ID=11906)

Sets the correction coefficient

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0.01          | 2             | 1             |                                   | Double     |

#### 6.9.1.8 Fuel Consumption on Idling [L/h] (ID=11907)

Sets fuel consumption while vehicle is idling

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 5             | 1             |                                   | Double     |

#### 6.9.1.9 Higher Speeds Add [%] (ID=11908)

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 250           | 20            |                                   | Unit64     |

#### 6.9.1.10 Highway Consumption every km/h (ID=11909)

| Minimum value | Maximum value | Default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 100           | 50            |                                   | Unit64     |

### 6.10 Scenarios Accelerometer

#### 6.10.1 Unplug Detection

##### 6.10.1.1 Scenario settings (ID=11500)

Sets priority of the scenario: 0 – Disable, 1 – Low Priority, 2 – High Priority, 3 – Panic Priority

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
|---------------|---------------|---------------|-----------------------------------|------------|

|   |   |   |  |     |
|---|---|---|--|-----|
| 0 | 3 | 0 |  | U64 |
|---|---|---|--|-----|

#### 6.10.1.2 Eventual records (ID=11501)

If enabled, only eventual records of unplug detection will be sent. 0 – Disable, 1 - Enable

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 1             |                                   | U64        |

#### 6.10.1.3 Unplug detection mode (ID=11502)

Sets Unplug detection mode. 0 – simple, 1 – advanced.

Simple – unplug detection according to external voltage only

Advanced – unplug detection according to: external voltage OR accelerometer

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 0             |                                   | U64        |

#### 6.10.1.4 Send sms to (ID=7067)

Enable/disable sms event sending. 0 – Disable, 1-10 – sms will be sent to configured GSM number. (SMS \ Call Settings -> GSM Predefined Numbers list.)

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 10            | 0             |                                   | U64        |

#### 6.10.1.5 SMS Text (ID=8067)

Configure uplug sms event text here.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 160           | 0             |                                   | U64        |

**Note:** „Unplug Detection“ work just in device with battery. FMB010 doesn't have this.

### 6.10.2 Crash Detection

#### 6.10.2.1 Scenario settings (ID=11400)

Sets priority of the scenario: 0 – Disable, 1 – Low Priority, 2 – High Priority, 3 – Panic Priority

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 3             | 0             |                                   | U64        |

#### 6.10.2.2 Duration [ms] (ID=11401)

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2000          | 5             |                                   | U64        |

#### 6.10.2.3 Treshold [mG] (ID=11402)

| Minimum | Maximum | default value | Goes with (depends on) | Value |
|---------|---------|---------------|------------------------|-------|
|---------|---------|---------------|------------------------|-------|

| value | value |      | parameters | type |
|-------|-------|------|------------|------|
| 0     | 7900  | 1500 |            | U64  |

#### 6.10.2.4 Crash trace (ID=11406)

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 1             | 0             |                                   | U64        |

### 6.11 Bluetooth

#### 6.11.1.1 BT Radio (ID=800)

Enables or disable Bluetooth feature. 0 – Disabled, 1 – Enable hidden, 2 – Enable visible

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2             | 0             |                                   | U64        |

#### 6.11.1.2 Local name (ID 801)

Parameter defines a visible name of FMBX device.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0<br>Symbols  | 30<br>Symbols | -             |                                   | String     |

#### 6.11.1.3 Local PIN (ID=802)

Parameter Lets to configure Bluetooth PIN.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0<br>Symbols  | 4 Symbols     | 5555          |                                   | String     |

#### 6.11.1.4 Security mode (ID=803)

Parameter defines a security mode of FMBX device. 0 – PIN only, 1 – PIN and MAC, 2 – MAC only, 3 – None.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 3             | 0             |                                   | U64        |

#### 6.11.1.5 External MAC (ID=804)

Defines external device's MAC, for FMB010 to auto connect to.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0 symbols     | 12<br>symbols | 0             |                                   | string     |

#### 6.11.1.6 External name (ID=805)

Defines external device's name, for FMB010 to auto connect to.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0 symbols     | 30 symbols    | 0             |                                   | string     |

#### 6.11.1.7 External PIN (ID=806)

Defines external device's PIN, for FMB010 to auto connect to.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0 symbols     | 8 symbols     | 0             |                                   | string     |

#### 6.11.1.8 Connection mode (ID=807)

Defines a mode in which FMB010 will connect to external devices. 0 – None,

1 – FMB010 will connect to Hands Free Headset, 2 – FMB010 will connect to OBDII Bluetooth dongle.

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0             | 2             | 0             |                                   | U64        |

#### 6.11.1.9 Authorized devices MAC list (ID=830 - 834)

Parameter allows to add an authorized devices MAC for connection to FMB010

| Minimum value | Maximum value | default value | Goes with (depends on) parameters | Value type |
|---------------|---------------|---------------|-----------------------------------|------------|
| 0 symbols     | 12 symbols    | -             |                                   | String     |

### 6.12 I/O parameters

I/O properties are additional data sources which are recorded along with usual GPS data.

#### 6.12.1 I/O#1 property parameter Ignition (ID=50000)

Parameter defines I/O property value. Possible values: 0-Disabled; 1-Low; 2-High; 3-Panic.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                                                                                                                                            | Value type |
|---------------|---------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| 0             | 3             | -                 | I/O#1 priority (ID=50000)<br>I/O#1 logic operand (ID=50001)<br>I/O#1 High level (ID=50002)<br>I/O#1 Low level (ID=50003)<br>I/O#1 Event only (ID=50004)<br>I/O#1 averaging length (ID=50005) | S8         |

#### 6.12.2 I/O#1 Logic operand (ID=50001)

Parameter defines eventual record is saved. Possible values: 0 – On Exit; 1-On Entrance; 2-Both; 3-Monitoring; 4-Hysteresis; 5-On Change; 6-On Delta Change

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                           | Value type |
|---------------|---------------|-------------------|-------------------------------------------------------------|------------|
| 0             | 6             | 0                 | I/O#1 priority (ID=50000)<br>I/O#1 logic operand (ID=50001) | S8         |

|  |  |  |                                                                                                                               |  |
|--|--|--|-------------------------------------------------------------------------------------------------------------------------------|--|
|  |  |  | I/O#1 High level (ID=50002)<br>I/O#1 Low level (ID=50003)<br>I/O#1 Event only (ID=50004)<br>I/O#1 averaging length (ID=50005) |  |
|--|--|--|-------------------------------------------------------------------------------------------------------------------------------|--|

#### 6.12.3 I/O#1 High level (ID=50002)

Parameter defines high value of triggered I/O property. This parameter is used to set thresholds for I/O properties to generate events.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                                                                                                                                            | Value type |
|---------------|---------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| -2147483647   | 2147483647    | 1                 | I/O#1 priority (ID=50000)<br>I/O#1 logic operand (ID=50001)<br>I/O#1 High level (ID=50002)<br>I/O#1 Low level (ID=50003)<br>I/O#1 Event only (ID=50004)<br>I/O#1 averaging length (ID=50005) | S32        |

#### 6.12.4 I/O#1 Low level (ID=50003)

Parameter defines low value of triggered I/O property. This parameter is used to set thresholds for I/O properties to generate events.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                                                                                                                                            | Value type |
|---------------|---------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| -2147483647   | 2147483647    | 0                 | I/O#1 priority (ID=50000)<br>I/O#1 logic operand (ID=50001)<br>I/O#1 High level (ID=50002)<br>I/O#1 Low level (ID=50003)<br>I/O#1 Event only (ID=50004)<br>I/O#1 averaging length (ID=50005) | S32        |

#### 6.12.5 I/O#1 Event only (ID=50004)

Parameter defines whether element should be sent only when event is generated. Possible values:

1 – Yes (parameter ID and value is sent when event is generated);

0 – No (parameter ID and value is sent in every record).

| Minimal value | Maximum value | Recommended value | Goes with (depends on) parameters                                                                                                                                                            | Value type |
|---------------|---------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| 0             | 1             | 0                 | I/O#1 priority (ID=50000)<br>I/O#1 logic operand (ID=50001)<br>I/O#1 High level (ID=50002)<br>I/O#1 Low level (ID=50003)<br>I/O#1 Event only (ID=50004)<br>I/O#1 averaging length (ID=50005) | S8         |

### 6.12.6 I/O#1 averaging length (ID=50005)

Parameter defines I/O property sample length to average. If no averaging needed default value is 1.

| Minimum value | Maximum value | Recommended value | Goes with (depends on) parameters                                                                                                                                                            | Value type |
|---------------|---------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| 0             | 2147483647    | 1                 | I/O#1 priority (ID=50000)<br>I/O#1 logic operand (ID=50001)<br>I/O#1 High level (ID=50002)<br>I/O#1 Low level (ID=50003)<br>I/O#1 Event only (ID=50004)<br>I/O#1 averaging length (ID=50005) | S32        |

Other I/O property elements can be configured in same logic. All I/O element parameters are listed in the next table.

### 6.13 I/O elements parameters and types.

| Parameter ID | Parameter Type | Default value | Value range |       | Parameter name       |
|--------------|----------------|---------------|-------------|-------|----------------------|
|              |                |               | Min         | Max   |                      |
| 50000        | UInt8          | 1             | 0           | 3     | Ignition Priority    |
| 50001        | UInt8          | 5             | 0           | 6     | Ignition Operand     |
| 50002        | UInt8          | 0             | 0           | 1     | Ignition High level  |
| 50003        | UInt8          | 0             | 0           | 1     | Ignition Low level   |
| 50004        | UInt8          | 0             | 0           | 1     | Ignition Event only  |
| 50005        | UInt16         | 10            | 0           | 65535 | Ignition Average     |
| 7000         | UInt8          | 0             | 0           | 10    | Send SMS             |
| 8000         | String         | 0             | 0           | 160   | SMS Text             |
| 50010        | UInt8          | 1             | 0           | 3     | Movement Priority    |
| 50011        | UInt8          | 5             | 0           | 6     | Movement Operand     |
| 50012        | UInt8          | 0             | 0           | 1     | Movement High level  |
| 50013        | UInt8          | 0             | 0           | 1     | Movement Low level   |
| 50014        | UInt8          | 0             | 0           | 1     | Movement Event only  |
| 50015        | UInt16         | 1             | 0           | 65535 | Movement Average     |
| 7001         | UInt8          | 0             | 0           | 10    | Send SMS             |
| 8001         | String         | 0             | 0           | 160   | SMS Text             |
| 50020        | UInt8          | 1             | 0           | 3     | Data Mode Priority   |
| 50021        | UInt8          | 5             | 0           | 6     | Data Mode Operand    |
| 50022        | UInt8          | 0             | 0           | 5     | Data Mode High level |
| 50023        | UInt8          | 0             | 0           | 5     | Data Mode Low level  |
| 50024        | UInt8          | 0             | 0           | 1     | Data Mode Event only |
| 7002         | UInt8          | 0             | 0           | 10    | Send SMS             |
| 8002         | String         | 0             | 0           | 160   | SMS Text             |
| 50030        | UInt8          | 1             | 0           | 3     | GSM Signal Priority  |
| 50031        | UInt8          | 5             | 0           | 6     | GSM Signal Operand   |

|       |        |      |   |       |                           |
|-------|--------|------|---|-------|---------------------------|
| 50032 | Uint8  | 0    | 0 | 5     | GSM Signal Hight level    |
| 50033 | Uint8  | 0    | 0 | 5     | GSM Signal Low level      |
| 50034 | Uint8  | 0    | 0 | 1     | GSM Signal Event only     |
| 50035 | Uint16 | 1    | 0 | 65535 | GSM Signal Average        |
| 7003  | Uint8  | 0    | 0 | 10    | Send SMS                  |
| 8003  | String | 0    | 0 | 160   | SMS Text                  |
| 50040 | Uint8  | 1    | 0 | 3     | Deep Sleep Priority       |
| 50041 | Uint8  | 3    | 0 | 6     | Deep Sleep Operand        |
| 50042 | Uint8  | 0    | 0 | 2     | Deep Sleep Hight level    |
| 50043 | Uint8  | 0    | 0 | 2     | Deep Sleep Low level      |
| 50044 | Uint8  | 0    | 0 | 1     | Deep Sleep Event only     |
| 7004  | Uint8  | 0    | 0 | 10    | Send SMS                  |
| 8004  | String | 0    | 0 | 160   | SMS Text                  |
| 50050 | Uint8  | 1    | 0 | 3     | GNSS Status Priority      |
| 50051 | Uint8  | 5    | 0 | 6     | GNSS Status Operand       |
| 50052 | Uint8  | 0    | 0 | 5     | GNSS Status Hight level   |
| 50053 | Uint8  | 0    | 0 | 5     | GNSS Status Low level     |
| 50053 | Uint8  | 0    | 0 | 1     | GNSS Status Event only    |
| 7005  | Uint8  | 0    | 0 | 10    | Send SMS                  |
| 8005  | String | 0    | 0 | 160   | SMS Text                  |
| 50060 | Uint8  | 0    | 0 | 3     | GNSS PDOP Priority        |
| 5006  | Uint8  | 3    | 0 | 6     | GNSS PDOP Operand         |
| 5006  | Uint16 | 0    | 0 | 1000  | GNSS PDOP Hight level     |
| 5006  | Uint16 | 0    | 0 | 1000  | GNSS PDOP Low level       |
| 5006  | Uint8  | 0    | 0 | 1     | GNSS PDOP Event only      |
| 5006  | Uint16 | 10   | 0 | 65535 | GNSS PDOP Average         |
| 7006  | Uint8  | 0    | 0 | 10    | Send SMS                  |
| 8006  | String | 0    | 0 | 160   | SMS Text                  |
| 50070 | Uint8  | 1    | 0 | 3     | GNSS HDOP Priority        |
| 50071 | Uint8  | 3    | 0 | 6     | GNSS HDOP Operand         |
| 50072 | Uint16 | 0    | 0 | 1000  | GNSS HDOP Hight level     |
| 50073 | Uint16 | 0    | 0 | 1000  | GNSS HDOP Low level       |
| 50074 | Uint8  | 0    | 0 | 1     | GNSS HDOP Event only      |
| 50075 | Uint16 | 10   | 0 | 65535 | GNSS HDOP Average         |
| 7007  | Uint8  | 0    | 0 | 10    | Send SMS                  |
| 8007  | String | 0    | 0 | 160   | SMS Text                  |
| 50080 | Uint8  | 1    | 0 | 3     | External Voltage Priority |
| 50081 | Uint8  | 6    | 0 | 6     | External Voltage          |
| 50082 | Uint16 | 1000 | 0 | 60000 | External Voltage Hight    |
| 50083 | Uint16 | 0    | 0 | 60000 | External Voltage Low      |
| 50084 | Uint8  | 0    | 0 | 1     | External Voltage Event    |
| 50085 | Uint16 | 10   | 0 | 65535 | External Voltage Average  |
| 7008  | Uint8  | 0    | 0 | 10    | Send SMS                  |
| 8008  | String | 0    | 0 | 160   | SMS Text                  |
| 50090 | Uint8  | 1    | 0 | 3     | Speed Priority            |
| 50091 | Uint8  | 3    | 0 | 6     | Speed Operand             |

|       |        |   |   |         |                          |
|-------|--------|---|---|---------|--------------------------|
| 50092 | Uint16 | 0 | 0 | 300     | Speed Hight level        |
| 50093 | Uint16 | 0 | 0 | 300     | Speed Low level          |
| 50094 | Uint8  | 0 | 0 | 1       | Speed Event only         |
| 50095 | Uint16 | 1 | 0 | 65535   | Speed Average            |
| 7009  | Uint8  | 0 | 0 | 10      | Send SMS                 |
| 8009  | String | 0 | 0 | 160     | SMS Text                 |
| 50100 | Uint8  | 0 | 0 | 3       | GSM Cell ID Priority     |
| 50101 | Uint8  | 3 | 0 | 6       | GSM Cell ID Operand      |
| 50102 | Uint32 | 0 | 0 | 999999  | GSM Cell ID Hight level  |
| 50103 | Uint32 | 0 | 0 | 999999  | GSM Cell ID Low level    |
| 50104 | Uint8  | 0 | 0 | 1       | GSM Cell ID Event only   |
| 7010  | Uint8  | 0 | 0 | 10      | Send SMS                 |
| 8010  | String | 0 | 0 | 160     | SMS Text                 |
| 50110 | Uint8  | 0 | 0 | 3       | GSM Area Code Priority   |
| 50111 | Uint8  | 3 | 0 | 6       | GSM Area Code Operand    |
| 50112 | Uint32 | 0 | 0 | 999999  | GSM Area Code Hight      |
| 50113 | Uint32 | 0 | 0 | 999999  | GSM Area Code Low        |
| 50114 | Uint8  | 0 | 0 | 1       | GSM Area Code Event      |
| 7011  | Uint8  | 0 | 0 | 10      | Send SMS                 |
| 8011  | String | 0 | 0 | 160     | SMS Text                 |
| 50120 | Uint8  | 1 | 0 | 3       | Battery Voltage Priority |
| 50121 | Uint8  | 3 | 0 | 6       | Battery Voltage Operand  |
| 50122 | Uint16 | 0 | 0 | 5000    | Battery Voltage Hight    |
| 50123 | Uint16 | 0 | 0 | 5000    | Battery Voltage Low      |
| 50124 | Uint8  | 0 | 0 | 1       | Battery Voltage Event    |
| 50125 | Uint8  | 0 | 0 | 10      | Battery Voltage Average  |
| 7012  | Uint8  | 0 | 0 | 10      | Send SMS                 |
| 8012  | String | 0 | 0 | 160     | SMS Text                 |
| 50130 | Uint8  | 1 | 0 | 3       | Battery Current Priority |
| 50131 | Uint8  | 3 | 0 | 6       | Battery Current Operand  |
| 50132 | Uint16 | 0 | 0 | 5000    | Battery Current Hight    |
| 50133 | Uint16 | 0 | 0 | 5000    | Battery Current Low      |
| 50134 | Uint8  | 0 | 0 | 1       | Battery Current Event    |
| 50135 | Uint8  | 0 | 0 | 10      | Battery Current Average  |
| 7013  | Uint8  | 0 | 0 | 10      | Send SMS                 |
| 8013  | String | 0 | 0 | 160     | SMS Text                 |
| 50140 | Uint8  | 0 | 0 | 3       | Active GSM Operator      |
| 50141 | Uint8  | 5 | 0 | 6       | Active GSM Operator      |
| 50142 | Uint32 | 0 | 0 | 999999  | Active GSM Operator      |
| 50143 | Uint32 | 0 | 0 | 999999  | Active GSM Operator      |
| 50144 | Uint8  | 0 | 0 | 1       | Active GSM Operator      |
| 7014  | Uint8  | 0 | 0 | 10      | Send SMS                 |
| 8014  | String | 0 | 0 | 160     | SMS Text                 |
| 50150 | Uint8  | 0 | 0 | 3       | Trip Odometer Priority   |
| 50151 | Uint8  | 3 | 0 | 6       | Trip Odometer Operand    |
| 50152 | Uint32 | 0 | 0 | 1000000 | Trip Odometer Hight      |
| 50153 | Uint32 | 0 | 0 | 1000000 | Trip Odometer Low level  |
| 50154 | Uint8  | 0 | 0 | 1       | Trip Odometer Event      |

|       |        |      |   |          |                            |
|-------|--------|------|---|----------|----------------------------|
| 7015  | Uint8  | 0    | 0 | 10       | Send SMS                   |
| 8015  | String | 0    | 0 | 160      | SMS Text                   |
| 50160 | Uint8  | 0    | 0 | 3        | Total Odometer Priority    |
| 50161 | Uint8  | 3    | 0 | 6        | Total Odometer             |
| 50162 | Uint32 | 0    | 0 | 10000000 | Total Odometer Hight       |
| 50163 | Uint32 | 0    | 0 | 10000000 | Total Odometer Low         |
| 50164 | Uint8  | 0    | 0 | 1        | Total Odometer Event       |
| 7016  | Uint8  | 0    | 0 | 10       | Send SMS                   |
| 8016  | String | 0    | 0 | 160      | SMS Text                   |
| 50170 | Uint8  | 0    | 0 | 3        | Digital Input 1 Priority   |
| 50171 | Uint8  | 0    | 0 | 6        | Digital Input 1 Operand    |
| 50172 | Uint8  | 0    | 0 | 1        | Digital Input 1 Hight      |
| 50173 | Uint8  | 0    | 0 | 1        | Digital Input 1 Low level  |
| 50174 | Uint8  | 0    | 0 | 1        | Digital Input 1 Event only |
| 50175 | Uint16 | 1    | 0 | 65535    | Digital Input 1 Average    |
| 7017  | Uint8  | 0    | 0 | 10       | Send SMS                   |
| 8017  | String | 0    | 0 | 160      | SMS Text                   |
| 50180 | Uint8  | 0    | 0 | 3        | Analog Input 1 Priority    |
| 50181 | Uint8  | 6    | 0 | 6        | Analog Input 1 Operand     |
| 50182 | Uint16 | 1000 | 0 | 30000    | Analog Input 1 Hight       |
| 50183 | Uint16 | 0    | 0 | 30000    | Analog Input 1 Low level   |
| 50184 | Uint8  | 0    | 0 | 1        | Analog Input 1 Event       |
| 50185 | Uint16 | 10   | 0 | 65535    | Analog Input 1 Average     |
| 7018  | Uint8  | 0    | 0 | 10       | Send SMS                   |
| 8018  | String | 0    | 0 | 160      | SMS Text                   |
| 50190 | Uint8  | 0    | 0 | 3        | Digital Output 1 Priority  |
| 50191 | Uint8  | 0    | 0 | 6        | Digital Output 1           |
| 50192 | Uint8  | 0    | 0 | 1        | Digital Output 1 Hight     |
| 50193 | Uint8  | 0    | 0 | 1        | Digital Output 1 Low       |
| 50194 | Uint8  | 0    | 0 | 1        | Digital Output 1 Event     |
| 50195 | Uint16 | 1    | 0 | 65535    | Digital Output 1 Average   |
| 7019  | Uint8  | 0    | 0 | 10       | Send SMS                   |
| 8019  | String | 0    | 0 | 160      | SMS Text                   |
| 50200 | Uint8  | 0    | 0 | 3        | Fuel Used GPS Priority     |
| 50201 | Uint8  | 3    | 0 | 6        | Fuel Used GPS Operand      |
| 50202 | Uint32 | 0    | 0 | 1000000  | Fuel Used GPS Hight        |
| 50203 | Uint32 | 0    | 0 | 1000000  | Fuel Used GPS Low level    |
| 50204 | Uint8  | 0    | 0 | 1        | Fuel Used GPS Event        |
| 50205 | Uint16 | 1    | 0 | 65535    | Fuel Used GPS Average      |
| 7020  | Uint8  | 0    | 0 | 10       | Send SMS                   |
| 8020  | String | 0    | 0 | 160      | SMS Text                   |
| 50210 | Uint8  | 0    | 0 | 3        | Fuel Rate GPS Priority     |
| 50211 | Uint8  | 3    | 0 | 6        | Fuel Rate GPS Operand      |
| 50212 | Uint32 | 0    | 0 | 1000000  | Fuel Rate GPS Hight level  |
| 50213 | Uint32 | 0    | 0 | 1000000  | Fuel Rate GPS Low level    |
| 50214 | Uint8  | 0    | 0 | 1        | Fuel Rate GPS Event only   |
| 50215 | Uint16 | 1    | 0 | 65535    | Fuel Rate GPS Average      |

|       |        |   |       |       |                    |
|-------|--------|---|-------|-------|--------------------|
| 7021  | Uint8  | 0 | 0     | 10    | Send SMS           |
| 8021  | String | 0 | 0     | 160   | SMS Text           |
| 50220 | Uint8  | 0 | 0     | 3     | Axis X Priority    |
| 50221 | Uint8  | 3 | 0     | 6     | Axis X Operand     |
| 50222 | Uint16 | 0 | -8000 | 8000  | Axis X Hight level |
| 50223 | Uint16 | 0 | -8000 | 8000  | Axis X Low level   |
| 50224 | Uint8  | 0 | 0     | 1     | Axis X Event only  |
| 50225 | Uint16 | 1 | 0     | 65535 | Axis X Average     |
| 7022  | Uint8  | 0 | 0     | 10    | Send SMS           |
| 8022  | String | 0 | 0     | 160   | SMS Text           |
| 50230 | Uint8  | 0 | 0     | 3     | Axis Y Priority    |
| 50231 | Uint8  | 3 | 0     | 6     | Axis Y Operand     |
| 50232 | Uint16 | 0 | -8000 | 8000  | Axis Y Hight level |
| 50233 | Uint16 | 0 | -8000 | 8000  | Axis Y Low level   |
| 50234 | Uint8  | 0 | 0     | 1     | Axis Y Event only  |
| 50235 | Uint16 | 1 | 0     | 65535 | Axis Y Average     |
| 7023  | Uint8  | 0 | 0     | 10    | Send SMS           |
| 8023  | String | 0 | 0     | 160   | SMS Text           |
| 50240 | Uint8  | 0 | 0     | 3     | Axis Z Priority    |
| 50241 | Uint8  | 3 | 0     | 6     | Axis Z Operand     |
| 50242 | Uint16 | 0 | -8000 | 8000  | Axis Z Hight level |
| 50243 | Uint16 | 0 | -8000 | 8000  | Axis Z Low level   |
| 50244 | Uint8  | 0 | 0     | 1     | Axis Z Event only  |
| 50245 | Uint16 | 1 | 0     | 65535 | Axis Z Average     |
| 7024  | Uint8  | 0 | 0     | 10    | Send SMS           |
| 8024  | String | 0 | 0     | 160   | SMS Text           |

## 7 Spy call functionality

To activate Spy call function user has to configure incoming call settings to Answer (Spy Call) and then spy call to FMB010 device can be made. The device will answer automatically and transmit sound to the user.

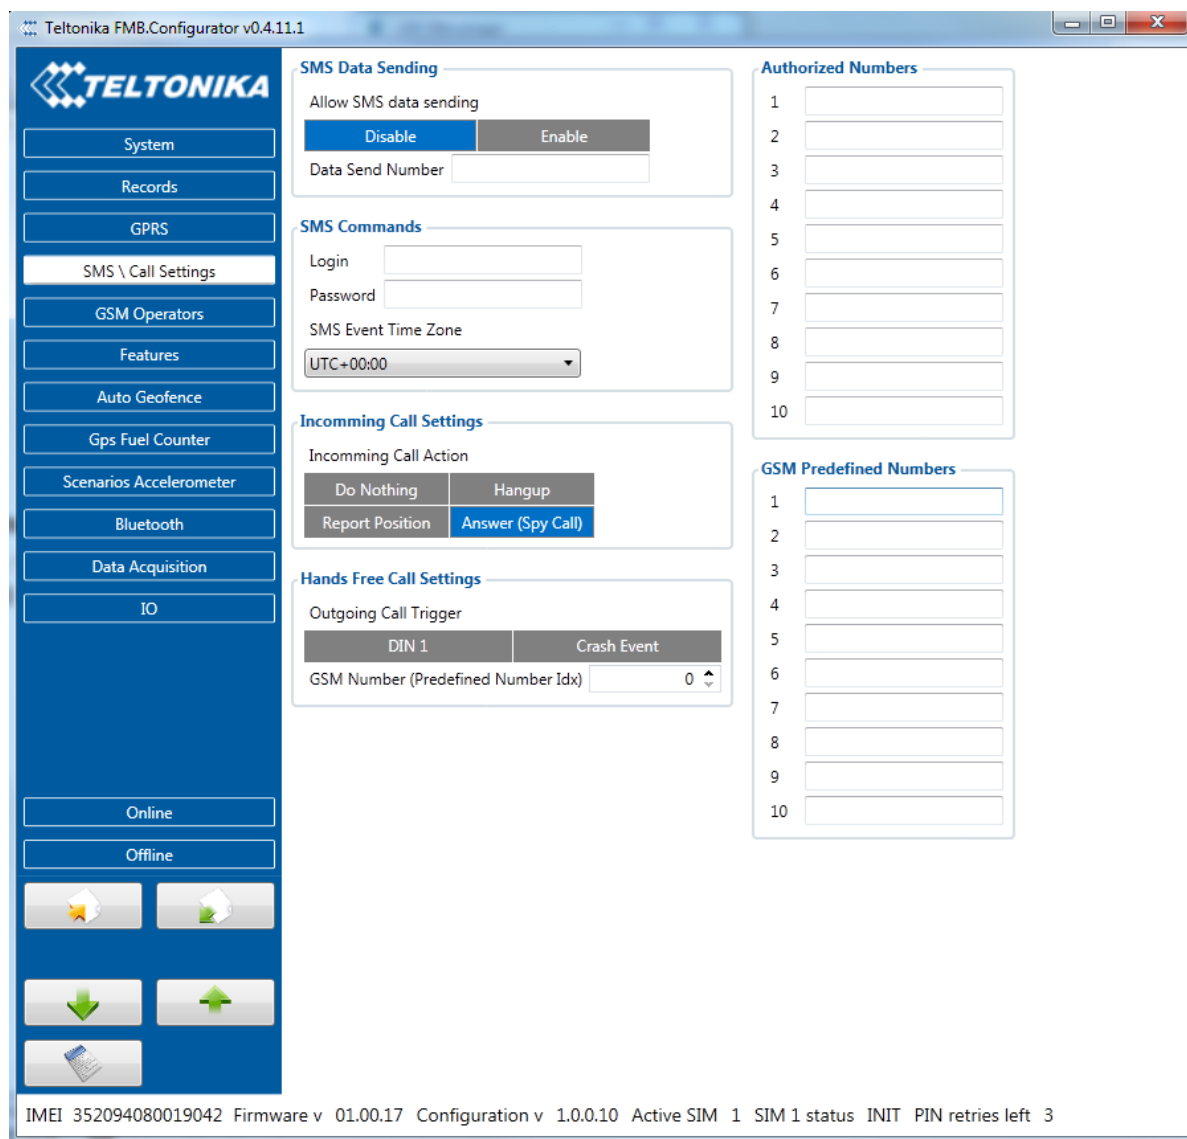


Figure 22 Configured Spy Call

## CHANGE LOG

| Nr. | Date       | Version | Comments                                                                                                                         |
|-----|------------|---------|----------------------------------------------------------------------------------------------------------------------------------|
| 1   | 2017-01-11 | 0.01    | Preliminary draft release.                                                                                                       |
| 2   | 2017-01-24 | 0.02    | Bluetooth radio, accelerometer scenarios, time synchronization explanation added, parameter IDs for remote configuration added.  |
| 3   | 2017-02-07 | 0.03    | I/O element parameter IDs updated.                                                                                               |
| 4   | 2017-02-21 | 0.04    | Updated IO element "Event only" parameter values                                                                                 |
| 5   | 2017-04-05 | 0.05    | Updated I\O elements, sms ID parameter description.                                                                              |
| 6   | 2017-05-08 | 0.06    | Sim insert edited. Added sms commands. Bluetooth: debug over android, OBD dongle connection, hands free connection. Crash Trace. |