

Product overview


This product is a wearable device that is inserted into a dedicated shirt or dedicated band. It measures the user's posture changes in real time and alerts them with vibrations when bad posture is detected. Users who receive notifications can correct their bad posture and form good posture habits.

Composition

PostureSense Components

· Sensor (Main Device) · Band (Sensor Band) · User Guide

Name of Each Part

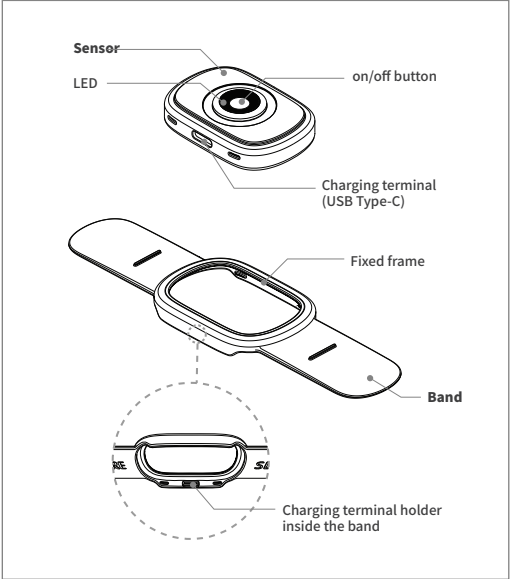

How to use

Power on/off


- To turn the PostureSense On press the sensor's power button. It will vibrate once and the LED will start blinking. The sensor is now On.
- While the sensor is On the red LED light keeps blinking.
- If you press and hold the power button for more than 2 seconds, the sensor vibrates twice, the LED light blinks twice then it switches off.
- * After 2 minutes of not being used (sensor placed horizontally), the sensor will vibrate 3 times, and will automatically turn off after an additional 1 minute.

Recharging

1. When recharging, take the sensor out of the band and connect a USB-C cable to the charging port. (USB-C cable is not included in the pack)
2. While charging the LED light blinks.
3. When charging is complete, the LED light stays on without blinking.
- * Fully charge the battery before using the PostureSense for the first time.

PostureSense usage

1. Wear the PostureWear shirt.
2. Insert the sensor into the back of the band's fixed frame with the sensor's charging port facing down.
3. Insert the band of the sensor into PostureWear's sensor pocket in the front.

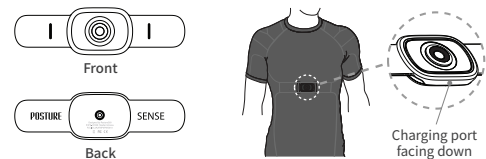

Installing Posutre360 App

1. Search and download the Posture360 app from the app store.
2. Install, launch the app and sign up.
3. After registration is complete, follow the instructions in the app to link your PostureSense with the app.

Cautions and Safety

Safety precautions

- PostureSense uses electricity so if an inappropriate method is used it might cause injury.
- Posturesense is not a medical device and is not intended to diagnose, treat, or prevent disease.
- For people with related medical conditions, if you think that using posturesense will affect you, please consult your doctor.
- When the vibration notification is disturbing from what you are doing please refrain from using it as much as possible, as the data is not accurately measured.
- Posturesense is not waterproof, so avoid contact with moisture and be careful not to let water in.
- To prevent damage to the product and shortening of the battery life, please observe the proper operating temperature and storage temperature (-10°C-45°C).

Notes on the built-in battery

The built-in battery is not user-replaceable, and applying heat or forcibly opening the sensor module's lid will void warranty service and may expose you to risk.

FCC Rules

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions , may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with FCC RF exposure requirement.

POSTURE|SENSE

Quick Guide

간단 사용 설명서

POSTURE360

제품 개요


- 본 제품은 전용 셔츠나 전용 밴드에 삽입하여 사용하는 웨어러블 디바이스입니다.
- 실시간 사용자의 자세 변화를 측정하고 나쁜 자세가 감지되면 진동으로 알림을 줍니다.
- 알림을 받은 사용자는 스스로 나쁜 자세를 바로 잡고 바른 자세 습관을 형성하는데 도움을 받을 수 있습니다.

제품 구성

구성품 확인

· 센서 · 밴드 · 간단 사용 설명서

각 부분의 명칭

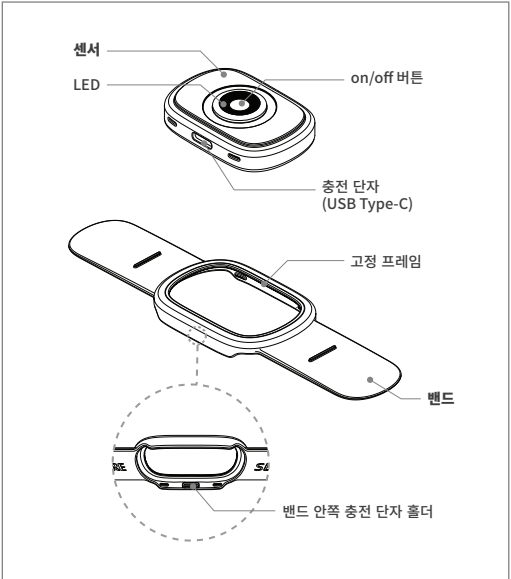

제품 사용법

전원 켜기/끄기

- 본체의 전원 버튼을 누르시면 한번의 진동과 함께 LED에 빨간색 불빛이 들어오면서 전원이 켜집니다.
- 전원이 켜져 있는 경우 LED의 빨간색 불빛이 깜박입니다.
- 전원 버튼을 2초 이상 길게 누르시면 두번의 짧은 진동과 함께 LED 불빛이 깜박거리면서 전원이 꺼집니다.

* 본 제품을 사용하지 않을 경우(수평으로 놓인상태)에서는 2분 경과 후 3번의 짧은 진동이 울리며 추가 1분후 전원이 자동으로 꺼집니다.


배터리 충전하기

1. 충전을 위해 센서 밴드와 센서를 분리 후 충전 단자에 Type-C 케이블을 연결해 주세요. (USB 연결잭은 구성품에 포함되어 있지 않습니다.)
2. 충전이 시작되면 LED에 빨간색 불이 들어오고 충전 중에는 빨간색 LED가 깜박거리립니다.
3. 충전이 완료되면 빨간색 LED가 깜박거리지 않습니다.

* PostureSense를 처음으로 사용하시는 경우, 반드시 배터리를 완전히 충전해주세요.

PostureSense 착용하기

1. PostureWear를 착용해주세요.
2. 밴드의 고정 프레임 뒷면에 센서의 충전단자가 아래로 향하도록 센서를 끼웁니다.
3. PostureWear 센서 포켓에 센서의 밴드를 삽입합니다.

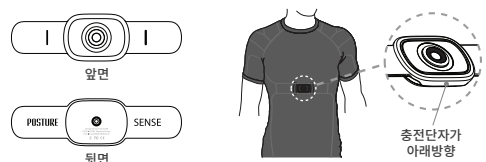

Posture360 앱 설치하기

1. 앱스토어에서 'Posture360 앱'을 검색하여 앱을 설치합니다.
2. 앱이 설치되면 클릭하여 앱을 연 뒤 필요한 정보를 입력하여 회원가입을 합니다.
3. 회원가입이 완료되면 앱에서 지시하는 내용을 따라 PostureSense 와 앱을 연동합니다.

주의사항

안전을 위한 주의사항

- PostureSense는 전기 에너지를 사용하므로 부적절한 방법으로 사용하면 부상을 일으킬 수 있습니다.
- PostureSense는 의료기기가 아니므로 질병의 진단, 치료, 예방을 목적으로 제조되지 않았습니다.
- 관련 질환자의 경우, PostureSense를 사용하는 것이 영향을 미친다고 생각되면 의사와 상의하시기 바랍니다.
- 진동 알림이 방해가 되는 작업 중에는 데이터가 정확하게 측정되지 않으니 가급적 사용을 자제해주시기 바랍니다.
- PostureSense는 방수가 되지 않으니 습기와와의 접촉을 피하시고 물이 스며들지 않도록 주의해 주시기 바랍니다.
- 제품 손상과 배터리 수명단축 방지를 위하여 적정 사용 온도 및 보관 온도(-10°C ~ 45°C)를 지켜주시기 바랍니다.

내장 배터리 관련 주의사항

내장된 배터리는 사용자가 교체할 수 없으며 열을 가하거나 강제로 센서 모듈의 뚜껑을 열면 보증 서비스를 받을 수 없고 위험에 노출될 수 있습니다.

제품 A/S 관련 문의

A/S 문의 시에는 제품 모델명, 고장 상태, 연락처를 알려 주세요.

- 포스처360 대표 전화 : 1522-3602
- 모바일 상담 : 카카오톡 플러스친구 '포스처360'

KC 인증번호	R-R-PXV-P3PS-101BK
상표명	주식회사 포스처360
기자재의 명칭(모델명)	특정 소음측 무선기기 (무선 데이터 통신 시스템을 무선기기) / P3PS-101BK
제품명	PostureSense
정격	DC3.7V
블루투스 무선사양	Bluetooth V5.2 BLE (1Mbps) 2402MHz ~ 2480MHz
제조자 / 제조국	주식회사 포스처360 / 한국

* 사용 설명서의 내용은 제품의 소프트웨어 버전 또는 제조사의 사정에 따라 다를 수 있으며, 사용자에게 통보 없이 일부 변경될 수 있습니다.

제 품 보 증 서

포스처360에서는 품목별 소비자 분쟁해결기준에 따라 아래와 같이 제품에 대한 보증을 실시합니다. 제품에 고장 이 발생하면 구입처 또는 1522-3602로 전화주세요. 수리 고체 후 불합부품은 재사용 방지 및 안전을 위해 전량 회수하는 것을 원칙으로 하고 있으며, 일부 수리의 경우 기기등록이 필요할 수 있습니다.

제 품 명	모 델 명
구 입 일	구 입 처
구 매 교 역	*제품보증기간은 1년, 부품보증기간은 4년입니다.

무상 서비스

제품보증기간 이내에 정상적인 사용 상태에서 발생한 고장의 경우 무상 서비스를 받을 수 있습니다.(비 고장성, 과실은 제외) 이 제품을 열면 용도로 전환하여 사용할 경우 보증기간은 6개월로 단축되고, 합금 시 구입가로 환급되며 구입 시 영수증을 제출해 주셔야 합니다

소비자 피해유형		보상내용	
구입 후, 10개월이내 중요한 수리* 시		제품보증기간 이내	제품보증기간 이후
구입 후, 1개월이내 중요한 수리* 시		제품 교환 or 환불	해당없음
제품 교환 불가시		환급	
부품보증 기간 내 정상적인 사용조건에서 성능, 기능상영 고장 발생	수리 가능	동일한 원인으로 고장이 2회까지 발생	무상수리
		동일한 원인으로 고장이 3회까지 발생	유상수리
	서로 다른 원인으로 고장이 5회 발생		유상수리
	소비자가 수리 제외한 제품을 사용자가 분실	제품교환 or 환급	항액 평가상당한 금액에 10%를 가산하여 환급
부품보증 기간 이내 수리용 부품을 보유하고 있지않아 수리가 불가			유상수리

중요한 수리*란 제품을 분해하여 부품 교체를 위하여 정상적인 사용을 할 수 있는 상태

유상 서비스

소비자 피해유형		보상내용	
소비자의 고의과실로 인한 고장 발생		제품보증기간 이내	제품보증기간 이후
수리가 가능한 경우	수리가 불가능한 경우	유상수리	유상수리
	수리가 불가한 경우	유상 수리에 해당하는 금액 중 수 후 제품 교환 또는 환급	항액 평가상당한 금액에 10%를 가산하여 환급

1. 소비자의 과실로 고장이 난 경우
 - 사용상의 부주의(침수, 파손, 손상)으로 고장이 발생한 경우
 - 소비자가 데이터를 잃고 조작하여 수리할 한 경우
 - 당사에서 미지정된 소모품, 액세서리를 사용하여 고장이 발생한 경우
 - 사용 설명서의 주의사항을 지키지 않아 고장이 발생한 경우
2. 그 밖의 경우
 - 전제(변환, 개조, 열매, 수해, 낙하등)에 의해 고장이 발생한 경우
 - 소모성 부품(배터리, 커패시터의 부속품)의 수명이 다한 경우
 - 제품 보증기간 이내 부품의 고장이 발생하더라도 소비자 과실이 함께 발생한 경우

※ 아래와 같은 경우 서비스가 거부될 수 있습니다.

- 임의로 개조, 변조, 복제하거나 사제(모조) 제품을 사용하거나 소비자가 회사에 건 미반납 부품으로 재수리를 요구하는 경우
- 동일 제품을 반복해서 수리 요구하는 경우 등을 포함하여 수리 의 다른 목적의 수리 요구로 추정되는 경우
- 구입 또는 A/S 당시의 부품이 아닌 다른 부품으로 교체된 상태인 경우

POSTURE360

이 보증서는 대한민국에서만 사용이 가능합니다.