
USB Light Projector & Speaker

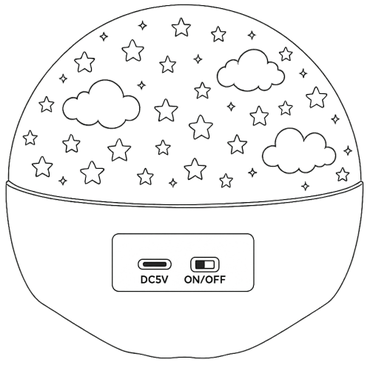

DS20844-KH

Ages 3+

USER MANUAL

©Disney
www.disney.com

• SPECIFICATIONS

Max. Power Output: 5W
Frequency Band: 2.402 – 2.480MHz

• PACKAGE INCLUDES

1x Projector
1x Micro USB power cable - 39.4”/1m length
1x Instruction Manual

DISTRIBUTED BY QUEST USA CORP.
495 FLATBUSH AVE BROOKLYN, NY 11225

© GOIJOY & IJOY ARE REGISTERED TRADEMARKS OF QUEST USA CORP. ALL OTHER TRADEMARKS AND TRADE NAMES ARE PROPERTY OF THEIR RESPECTIVE OWNERS. DESIGNED BY GOIJOY & IJOY IN NEW YORK. ALL RIGHTS RESERVED QUEST USA CORP.

ALL PICTURES SHOWN ARE FOR ILLUSTRATION PURPOSE ONLY. ACTUAL PRODUCT MAY VARY DUE TO PRODUCT ENHANCEMENT.

MADE IN CHINA.

HOW TO SET IT UP:

Remove the Film: Gently peel off the protective film from the projector lens.

Connect Power: Plug the TYPE C end into the projector and the USB end into a power source (like a wall adapter or USB port).

Turn It On: Flip the switch to power up the speaker.

IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapter/ USB ports only. Quick charging devices over 5V may cause heat and fire.

PAIRING YOUR PRODUCT

The RGB light will come on — this means it’s ready to pair.
Place your device within 30 ft. of your bluetooth enabled device.
Follow the instructions of your device to search for the device.
The device is called “Disney Projector”.
You will hear a “beep” sound when pairing is complete.

Play Music: Start your tunes! Use your phone to control playback and volume.

⚠ WARNINGS:

Do not hold close to ears – loud volume may damage hearing.
Keep this manual for future reference.
Dispose of batteries properly — never toss them in household trash. Look for proper recycling options.

• SAFETY INFORMATION

-Never expose your product to high temperatures, extreme cold, high humidity, or any liquids. Never use near to other heat sources or in direct sunlight to avoid overheating of the product. Only use on a heat resistant surface.

-Never use next to combustible materials in damp conditions.

-To avoid the risk of electric shock, never attempt to open or repair the product, consult a certified professional.

-Do not use this product if the product overheats, has been dropped or damaged, or has been dropped in any liquids.

-Your product is not to be used by children without adult supervision.

-Do not use your product at temperatures under 32°F or over 104°F.

正面

-Do not drop, throw, or subject the product to strong impacts.

-If you detect any abnormalities when using your product, immediately discontinue use and contact the manufacturer.

-Unplug your product when it will not be in use for long periods or during lightning storms. Do not leave your product on overnight.

-Before plugging any electronic device into your product, check the voltage of your electronic device to make sure that is compatible with your charger.

-Remove the product from the electrical socket to disconnect it from voltage.

-Do not clean the product with harmful chemicals or detergents.

-Regularly examine the USB for damage. If any damage is found do not use until the damage has been repaired by a qualified person.

• USB CABLE SAFETY

IMPORTANT: PLEASE READ ALL THE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS
When using this cable basic safety precautions should be followed, include the following:
This cable is not a toy. Keep away from babies and children. Only adults should plug the device into a power outlet.
Keep the cable away from heat sources, direct sunlight, humidity, water and any other liquid.
Keep the cable, its connections and any ports intended to connect free from dust, lint etc.
Never force a connection into a port, check for obstructions in the cable and port.
Do not operate the cable in water or other liquid.
Do not operate the cable with wet hands.
Do not operate the cable if it has been exposed to water, moisture or any other liquid, to prevent against electric shock, explosion and/or injury to yourself and damage to the cable.
Do not use the cable for anything other than its intended use.
Do not store the cable in direct sunlight or in high humidity conditions.
Do not exposde to extreme temperatures of hot or cold. For example, do not leave in a parked car where it is very cold in winter or very hot in summer.
Do not put objects into any of the openings.
Do not short-circuit.
Do not stack up with other electrical or electronic cables to avoid overheating.
Do not overload or overcharge the cable.
This cable is intended for domestic use only. It should not be used for commercial purposes.
This cable is not suitable for charging high drain devices such as laptops or tablets.
Use only with the product this cable was supplied with.
Do not leave unattended whilst connect to a device.
The cable should only be used on flat, stable, heat resistance surface.
Do not store the chaging cable in a kinked or twisted manner. Regularly check its condition for damage before use. If damaged, DO NOT USE!
Do not pull, twist or strain the cable.
The cable should be unobstructed when in use. Do not place items on the cable.
When connecting and disconnecting from devices, remove gently using the solid plastic head at either end of the cable. Do not pull on the cable or flex as this can cause damage.
Do not use the cable if it or if any connected devices are damaged. Discontinue use immediately.

FCC ID STATEMENT

FCCID：2A2WN-PTJSPK

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
RF warning statement:
The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Quest USA Corp. is under license. Other trademarks and trade names are those of their respective owners.

Model#
DS20844-KH / DS20844-KHE

反面