YEECORE

Manual

ドライブレコーダーマニュアル

English version
日本語版

Retain owner's manual for future reference

Contents

Safety Warnings 1
What's in the box ? 2
Getting to Know the Dash Cam 3
Function Buttons 4
Installation 5
Inserting MicroSD Card
Ejecting MicroSD Card
Installation in the vehicle
Feature Guide 7
Product Specifications 11
Troubleshooting 12
Warranty & Support 13

Safety Warnings

The laws or rules of certain countries or regions may forbid or restrict to install or use this product in your vehicle. Please obey all applicable laws and rules to use this product. The users should obey all applicable local laws and rules.

- Please don't use, store or transport this product in an extremely high or low temperature environment.
- Please don't put this product into the fire or oven.
- Please don't operate this product while driving. And please always obey safety driving rules and current traffic rules.
- Please don't disassemble this product, otherwise, the internal components may be damaged.
- The installation position of the products should not block the driver's sight or the operation of the airbag.
- Please don't let this product come into contact with liquid, otherwise, the product maybe be damage.
- Please use the original accessories provided with this product.

What's in the box ?

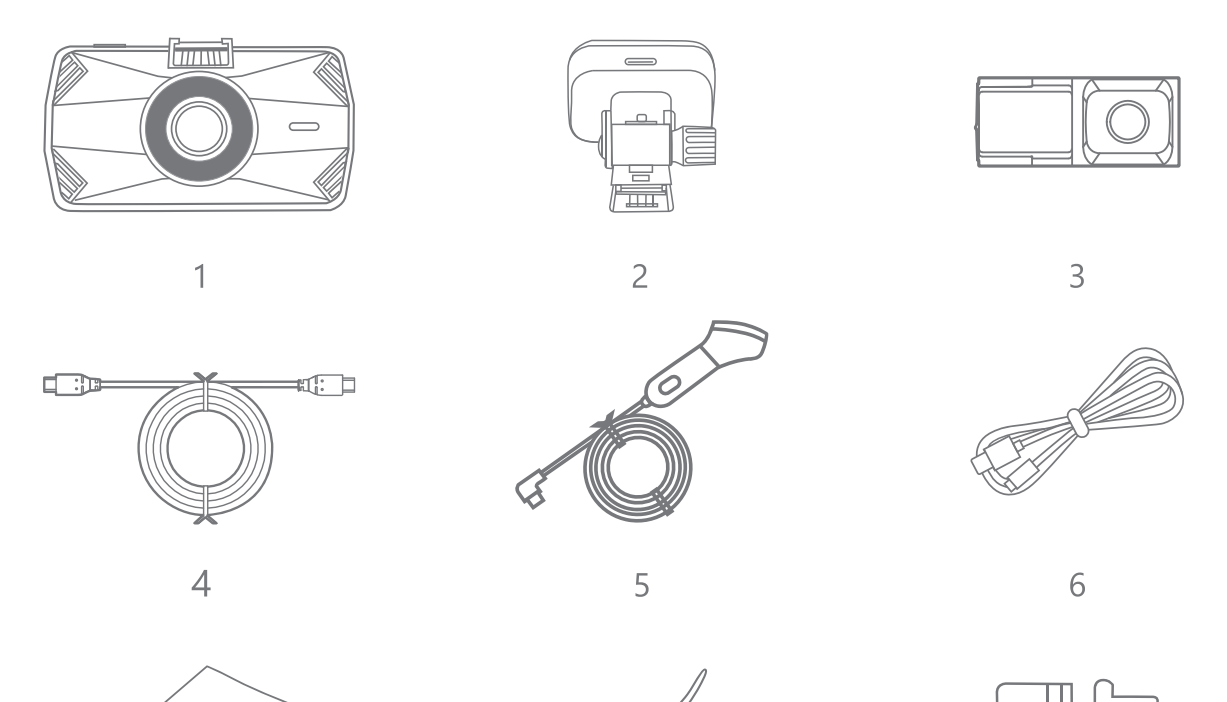

1. Front Camera x 1
2. Suction Mount x 1
3. Rear Wired Camera x 1 (Optional)
4. Rear Camera Cable x 1 (Optional)
5. Car Charger Cable x 1
6. USB Cable x 1
7. User Manual x 1
8. Crowbar x 1
9. Cable Clip x 6

Getting to Know the Dash Cam

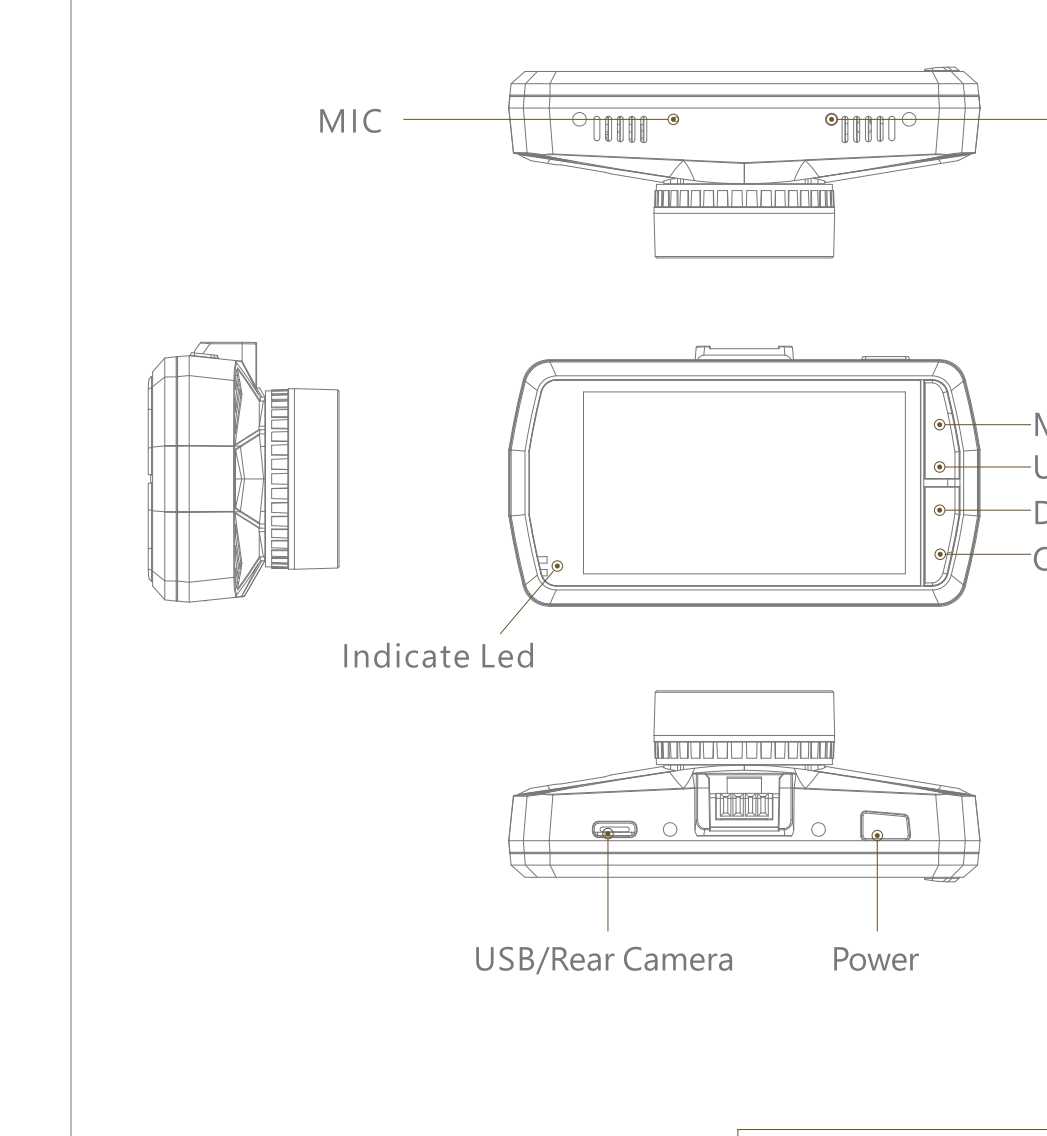

Function Buttons

Each button has different functions in different modes

Button \ Mode		Preview	Recording	Menu	Playback	Parking
POWER	Long Press	Power on & off	Power on & off	Power on & off	Power on & off	Power on & off
	Short Press	N/A	Take a photo	N/A	Enter the playback menu	Switch to normal mode
MODE	Long Press	N/A	N/A	N/A	N/A	N/A
	Short Press	Switch to menu	Lock the recording file	Back to previous	Back to previous & Stop play	Switch to normal mode
UP	Long Press	Wi-Fi on	Wi-Fi on	Wi-Fi on	N/A	N/A
	Short Press	Switch front & rear camera	Switch front & rear camera	Move up	Move up & Slow back	Switch to normal mode
DOWN	Long Press	N/A	N/A	N/A	N/A	N/A
	Short Press	Mic on & Mic off	Mic on & Mic off	Move down	Move down & Fast forward	Switch to normal Mode
OK	Long Press	N/A	N/A	N/A	N/A	N/A
	Short Press	Start video recording	Stop video recording	Confirms the action	Stop play & Start play & Confirms the action	Switch to normal mode

Installation

Inserting MicroSD Card

1.Please don't insert the MicroSD card diagonally, it will cause damage to the MicroSD card.
2.Please use U3 or above high-speed MicroSD card.
3.Insert the MicroSD card and turn on the dash camera, format the MicroSD card on the Camera before first use.

Ejecting MicroSD Card

Push on the top edge of the MicroSD card slowly until it clicks. The lock will be released then pull out the MicroSD card.

Suggestion

Please turn off the dash camera first when insert or eject the MicroSD card.

Installation in the vehicle

1.The installation position of the products should not interfere with the driver's field of vision, such as behind the rearview mirror.
2.Connect the car charger cable with the USB port of the suction mount. If you have the rear camera(optional), please connect the rear camera cable with the"USB/Rear Camera" port on the dash camera. As shown below.

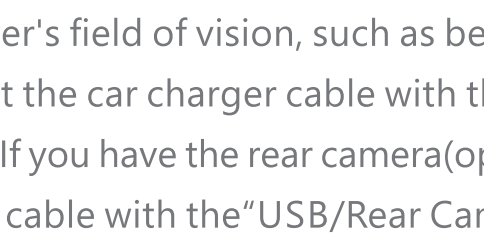

3.Use the crowbar we provide to stuff the car charger cable on the top of the windshield neatly then fold it down from the side to keep the car charger cable away from the sightline and keep it tidy. And connect another end of the car charger cable to the cigarette lighter. As shown below.

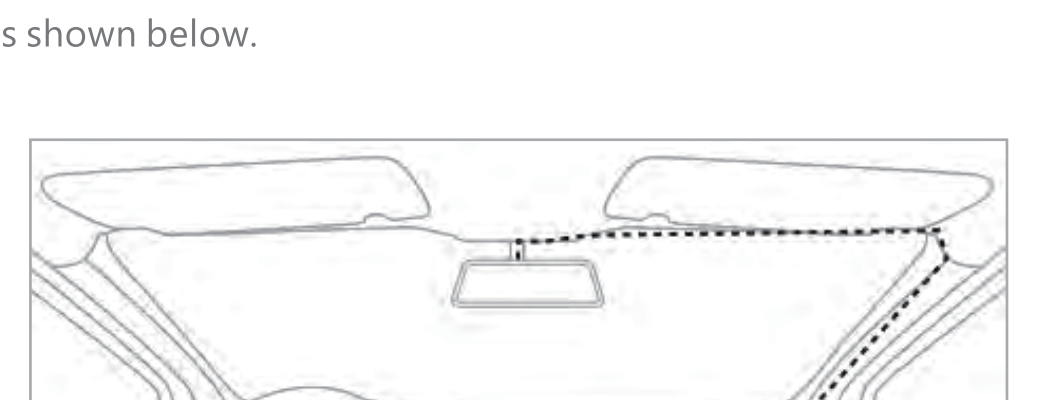

4.If you have the rear camera(optional), connect the other end of the rear camera cable to the rear camera. Install the rear camera on the windshield. As shown below..

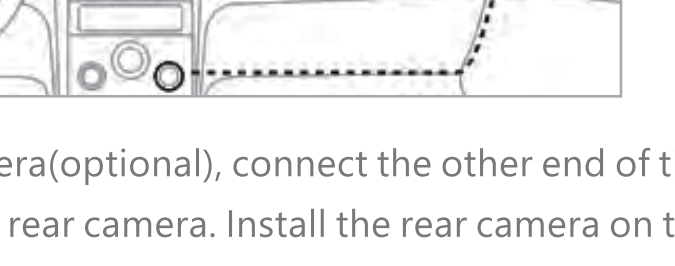

Feature Guide

Loop Recording

Connect power and turn on the dash camera, it will start loop recording immediately. When the MicroSD card is full, the oldest recording file will be replaced by the latest recording file to ensure continuous recording.

Collision Detection Triggered(Emergency Recording)

Automatically: The G-Sensor will be triggered when a collision, sudden acceleration, or sudden swerve event occurs. The recording file will be locked for a certain period of time before and after the event. These emergency video files will be saved in the Event folder and will not be overwritten unless the storage space of the folder is full.

Manually: When you see beautiful scenery or an emergency while driving, you can short press the MODE button to trigger the emergency recording in case of safe driving.

Time Lapse

If Time Lapse function is selected, the camera will take a photo at the set time interval, then merge these photos into a video file. The Time Lapse recording mode can save a lot of storage space.

1 Sec: Take a picture every 1 second.
5 Secs: Take a picture every 5 seconds.
10 Sec: Take a picture every 10 seconds.

Parking Mode(Constant Power Supply Needed)

When you turn on the parking mode, you can select the sensitivity. After parking,if a collision is detected, the camera will be started automatically and record 1 minutes. The first file will be saved in the EVENT folder and other files will be saved in the NORMAL folder.

Note: You use this function, you should use the Hardwire Kit we provide(need to buy separately）to connect to the car battery directly to keep the camera continuously powered. We don't recommend running the camera continuously for too long in parking mode.

Taking Photos

In recording mode, short press POWER button, camera will take a picture and save it in the PHOTO folder.

Playback

1.Browse files: Short press the "Mode" button to enter the playback mode. In this mode, there are Event,Normal,and Photo folders, press the up and down button to browse and press the "OK" button to play.
2.Files playback: Press the "OK" button to play or pause, press the up and down buttons to select fast forward, and press the "Mode" button to exit playback.
3.Delete files: When you want to delete a file in playback mode, press the "Power" button to pop up two menus: delete files (delete single and delete all files) and protect files (protect files, cancel protection files, lock files and unlock files), Press "OK" to perform corresponding operations.
4.NOTE: Locked files can't be deleted, you need to unlock the file first.

APP

App named YeecoreViewer, it can be downloaded from App Store & Google Play Store. Using this app, you can download or save the videos or snapshots to your smartphone album directly. Then you can easily share these wonderful videos with friends and families all over the world by social medial Youtube, Google Drive, etc.

How to connect the APP and dash cam?

Step 1: Long press the "UP" button, the Wi-Fi name and password is show on the dash cam screen.

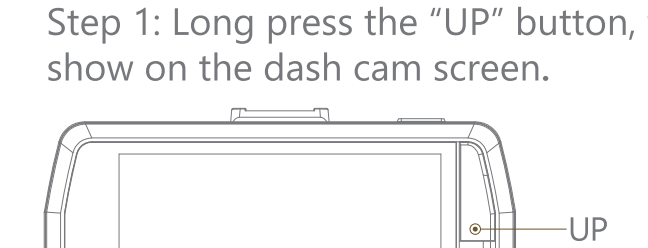

Step 2: Find the Wi-Fi name and enter password, Connect the Wi-Fi with your phone.

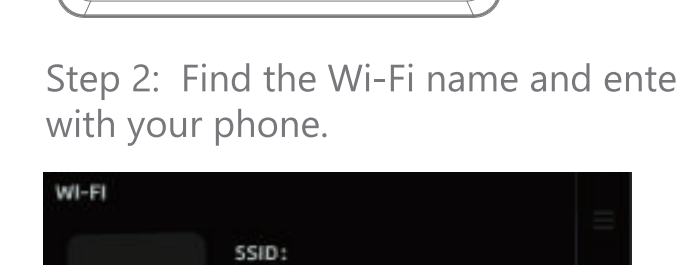
WI-FI
SSID:
YEECORE_2cd26b61e9de
PWA:
123456789

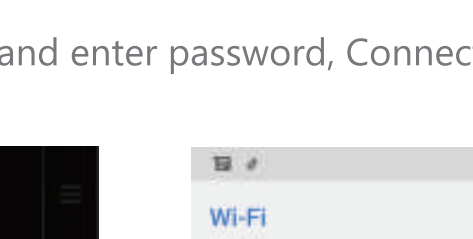

YEECORE_2cd26b61e9b3
Connected, no Internet f=5180 2c:d2:6b:61:e9:b3 rssi=-30 score=60 tx=29.4,0.6,0.6 rx=0.9 [;(1) (2c:d2:6b:61:e9:b3*=5180,-28)]

Step 3: Open the APP "YeecoreViewer" and click "JOIN CAM". And then it connect successful.

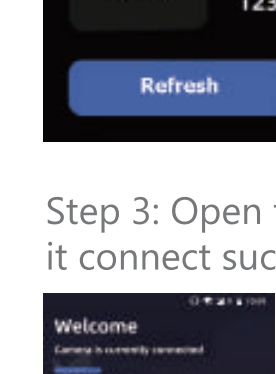

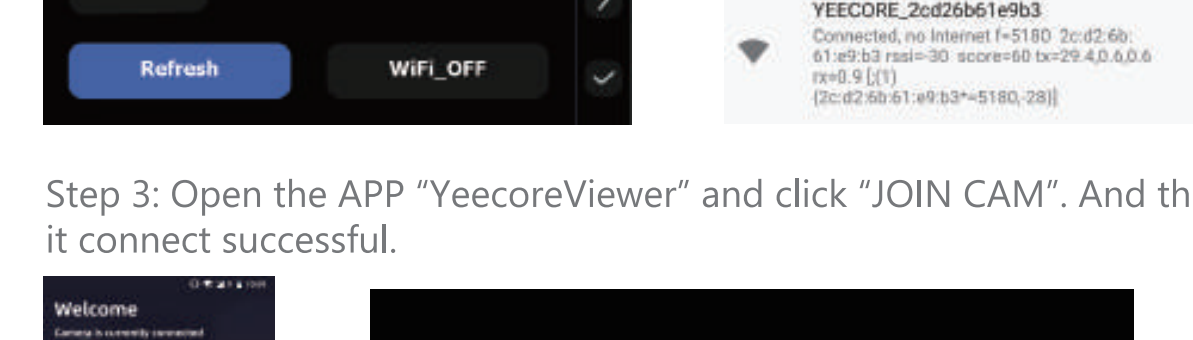
Please use mobile phone to operate
Press any button to Exit Wi-Fi

PC Tools

Please download the latest PC Tools on our official website (www.yeecore.biz/support/PCTools/YeecorePlayer.exe).
After installing the tool, you can playback the video files on the MicroSD card. It can display audio, video, GPS tracking, G-Sensor information, and so on. As shown below.

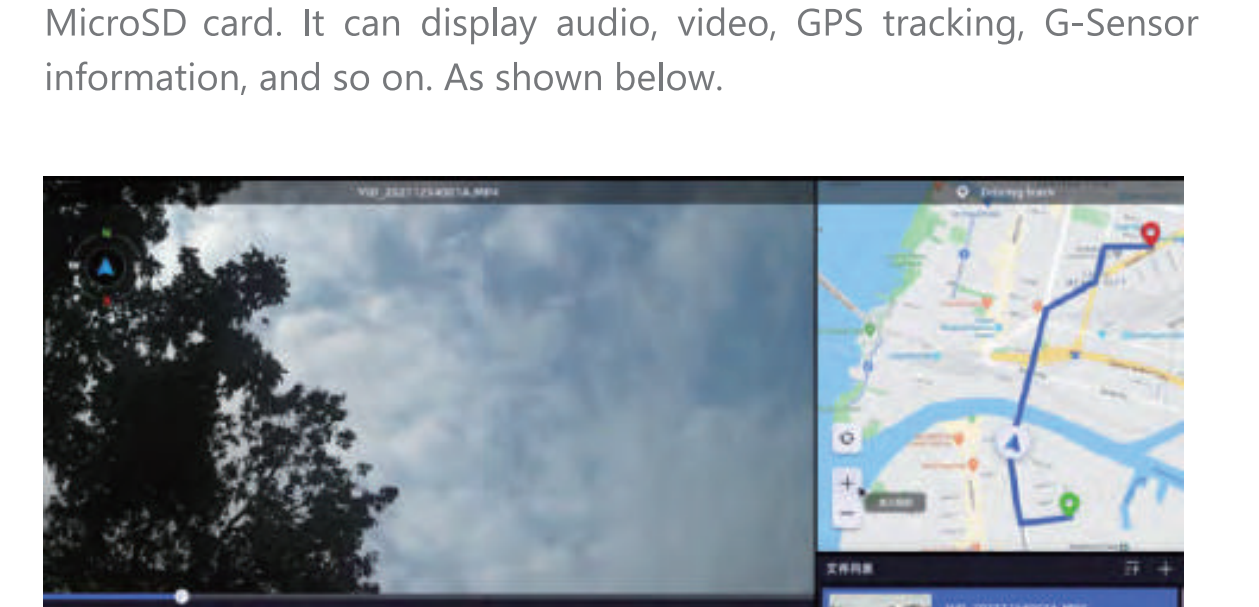

Product Specifications

Sensor	Front：8M Night Vision
	Rear(optional): 2M Night Vision
Lens	Front: 157 Degree Wide Angle, 6-Glass Lens
	Rear(optional): 140 Degree Wide Angle, 6-Glass Lens
LCD	3.0 Inches IPS
Video Resolution	Front: 4K30FPS, 1440P30FPS, 1080P30FPS WDR
	Rear(optional): 1080P30FPS HDR
Wi-Fi	Built-in 2.4G/5G
GPS	Built-in
Audio	Built-in mic and speaker
G-Sensor	Built-in
Photo Format	JPG
File Format	Mp4
USB Port	Type-C
Battery Type	Super-capacitor
Working Temperature	14°F~158°F(-10°C~70°C)
Compatible OS(PC Player)	Windows XP/Vista/7/8/10/Mac OS

Troubleshooting

When loop recording does not work or recording is interrupted

1.The MicroSD card may be a low speed card, please use U3 or higher speed MicroSD card.
2.The speed of the MicroSD card will be slowed down after a long period of time, it is recommended to format it on the camera.

Prompt" file error" when playing video or photo files

It is possible that the writing speed of the MicroSD card has decreased and some video and photo files are abnormal. It is recommended to format the MicroSD card on the camera.

When the MicroSD card over 64G cannot be read by the dash camera:

It must be formatted as FAT32 32KB file system on the computer, or formatted on the dash cam.

When the video is hazy

It may be fingerprints or spots on the lens, please keep the lens clean.

When recording indoors, there are horizontal stripes in the video

Please set the flicker to 50Hz or 60Hz according to the local power frequency.

When it is difficult to obtain GPS information

Some car navigation GPS antennas will affect the camera's GPS reception. The dash camera should be installed as far away from the antenna as possible.

FCC Statement:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
This equipment should be installed and operated with minimum distance 20cm between the radiator&your body.

YEECORE

ドライビングレコーダー
使用説明書

後で参照できるようにオーナーズマニュアルを保管してください

目 次

安全上のご注意 16
同梱品リスト 17
製品紹介 18
ボタン機能 19
取扱 20
MicroSD カードを挿入する
MicroSD カードを抜き出す
車内での取扱方法
操作一覧 22
製品仕様 26
故障かなと思った時 27
保証サービスとサポート 28

安全上のご注意

特定の国及び地域の法律·法令により、車内での放置及びご使用が禁止又は制限される場合がありますので、予めご了承ください。この製品の使用に関して適用されるすべての法律及び規制を遵守してください。ユーザーは、それらの地域の法令及び規制を遵守すべきです。

- 極高温若しくは低温環境での使用、保存又は運送をしないでください。
- 火中投入又はオーブンへの放置をしないでください。
- 運転しながら本品の操作をしないでください。常に道路交通法を遵守し安全運転を心がけてください。
- 本品を勝手に分解したりしないでください。製品内部のある部品を壊れる恐れがあります。
- 運転者の視線を遮る又はエアバッグを邪魔する位置に本品を取り付けないでください。
- 液体などをかけないでください。本品を壊れる恐れがあります。
- 必ず本梱包のオリジナル付属品を使用してください。

同梱品リスト

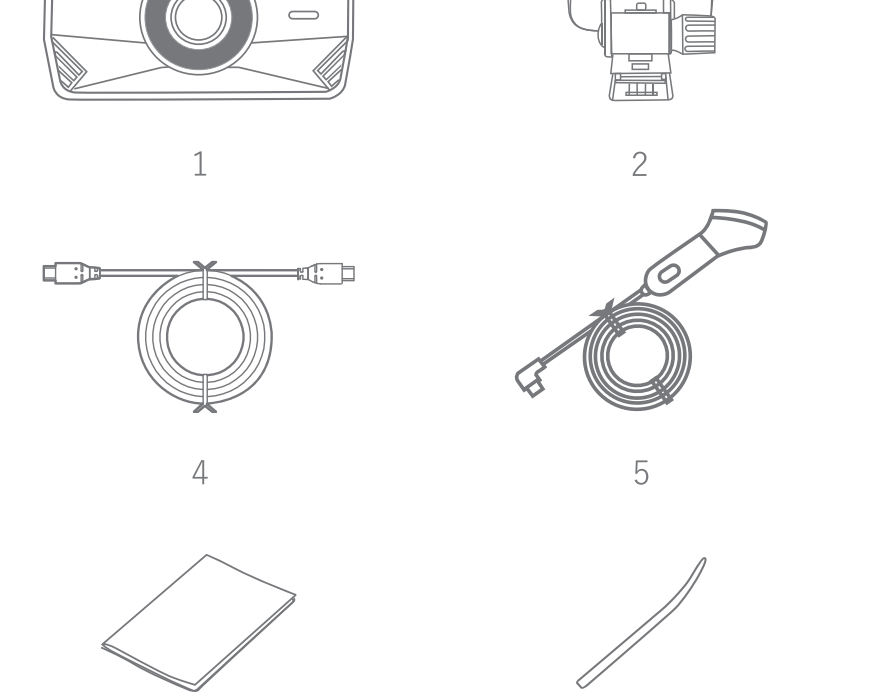

1. フロントカメラ　1個
2. 吸盤　1個
3. バックワイヤカメラ　1個（オプション）
4. バックカメラケーブル　1本（オプション）
5. 車載充電ケーブル　1本
6. USBケーブル　1本
7. 取扱説明書　1冊
8. バール　1個
9. クリート　6個

製品紹介

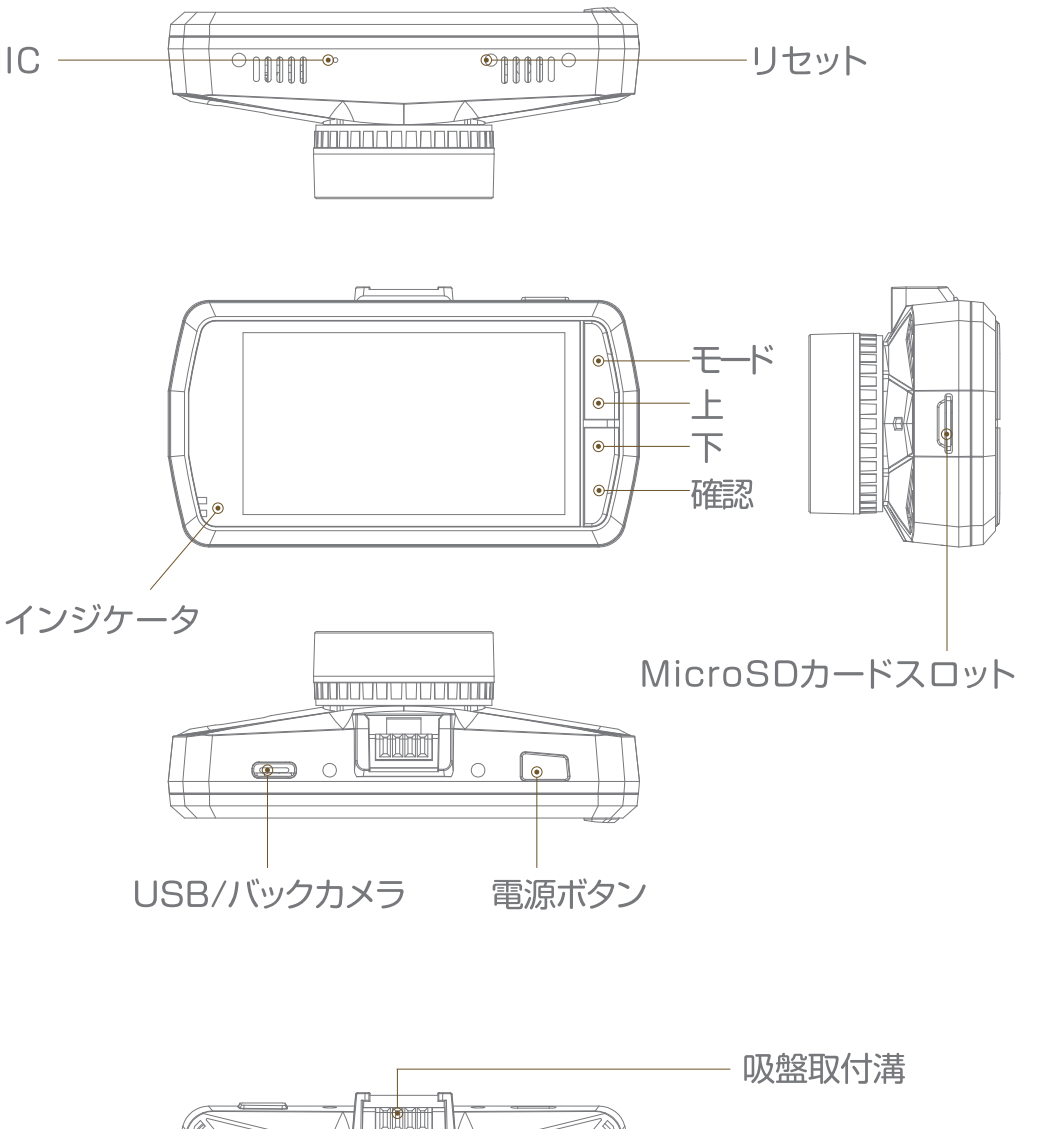

ボタン機能

異なるモードでの異なる機能

ボタン \ モード		プレビュー	録 画	メニュー	再 生	停 車
電源	長押す	オン·オフ	オン·オフ	オン·オフ	オン·オフ	オン·オフ
	短く押す	N/A	スナップショット	N/A	再生メニューに入る	ノーマルモードに切替える
モード	長押す	N/A	N/A	N/A	N/A	N/A
	短く押す	メニューに切替える	現在の動画をロックする	上戻り	上戻り 一時停止	ノーマルモードに切替える
上	長押す	Wi-Fiオン	Wi-Fiオン	Wi-Fiオン	N/A	N/A
	短く押す	フロント·バックカメラに切替える	フロント·バックカメラに切替える	上へ	上へ· 早送りを減少	ノーマルモードに切替える
下	長押す	N/A	N/A	N/A	N/A	N/A
	短く押す	MICオン＆MIC オフ	MICオン＆MIC オフ	下へ	下へ＆早送り	ノーマルモードに切替える
確認	長押す	N/A	N/A	N/A	N/A	N/A
	短く押す	録画開始	録画停止	確認	再生停止＆再生開始＆確認	ノーマルモードに切替える

取 扱

カードを挿入する

1.斜めにMicroSD カードを挿入しないでください。MicroSD カードを壊れる恐れがあります。
2.U3以上の高速MicroSDカードをご利用ください
3.MicroSDカードを挿入してから本品を起動してください。初めてご使用になる場合、本品にMicroSDカードをフォーマットしてください。

MicroSD カードを抜き出す

「カチッ」という音を聞こえるまで、MicroSDカードの上端のエッジへゆっくりと押し込んで、ロックを解除した後、MicroSDカードを抜き出してください。
ご注意:MicroSD カードを抜き出す時、まずカメラの電源を切ってください。

車内での取扱方法

1.バックカメラの後端など、運転者の視野を遮る位置に本品を取り付けてないでください。
2.車載充電ケーブルを吸盤のUSBポートに接続してください。以下のように、バックカメラ（オプション）をご購入になった場合、その電源ケーブルを本品上の「USB/Rear Camera」ポートに接続してください。



3.以下のように、同梱品のバールを使って車載充電ケーブルをフロントガラスの頂部内に詰めて、側面から下へ折り畳んで、視線を遮ず、きちんとして、また車載充電ケーブルの他端を車載シガーライタに接続してください。

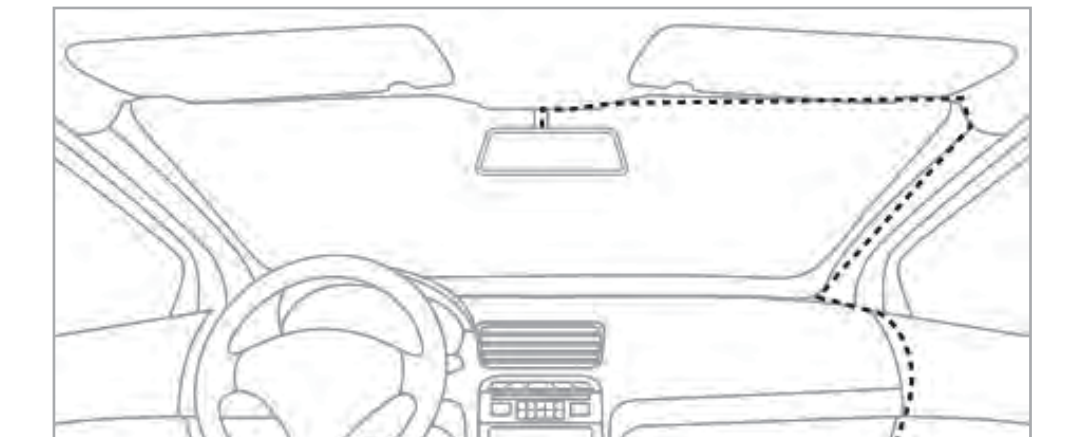

1.以下のように、バックカメラ（オプション）をご購入になった場合、その他端をバックカメラに接続して、またバックカメラをバックガラスに取り付けてください。

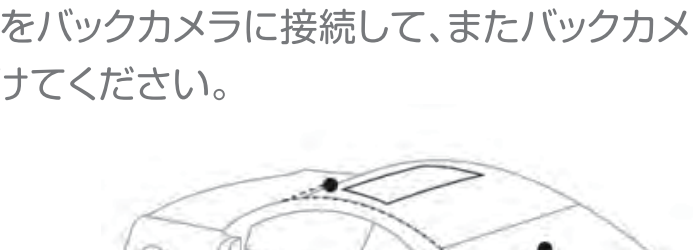

機 能 一 覧

循環録画

電源を入れると、本品は循環録画を開始します。MicroSDカードの空き容量がなくなった場合、連続録画を確保するために、一番古い記録ファイルが最新の記録ファイルに上書きされます。

ぶつかり検出·触発（緊急録画）

ぶつかったり、突然に加速を掛けしたり、曲がったりすると、, G-Sensorが触発されます。録音ファイルが該イベントの前後に一定時間にロックされます。これらの緊急動画ファイルはイベントファイルに保存され、該ファイルの空き容量がなくない限り、上書きされません。手動:運転中、美しい風景を見て又は緊急イベントがある場合、MODEボタンを短く押して緊急録画を触発させ、安全運転を確保します。

タイムラプス動画

遅延撮影機能を選んだ場合、カメラは所定時間の間隔ごとに1枚の写真を撮って、これらの写真を一つの動画ファイルに合成します。遅延録画モードの場合、保存スペースを大幅に節約することができます。
1秒:1秒ごとに一枚の写真を撮る。
5秒:5秒ごとに一枚の写真を撮る。
10秒:10秒ごとに一枚の写真を撮る。

停車モード（定常的な電源が必要とする）

この機能を開始すると、感度を設定することができます。停車した後、ぶつかりを検出すると、カメラは自動的に起動し1分間録画します。最初のファイルはイベントファイルに保存され、その他のファイルはNORMALファイルに保存します。

ご注意:この機能を使用する時、カメラに持続的に給電できるように、弊社により提供されたACC電源ケーブルセット（別途購入が必要）を直接に自動車のバッテリーに接続してください。停車モードの場合、連続にカメラを長時間に運行させないでください。

撮 影

録画モードの場合、POWERボタンを短く押すと、カメラは撮影を開始しその写真をPHOTOファイルに保存します。

再生

1.ファイルの閲覧:「Mode」ボタンを短く押すと、再生モードに入ります。再生モードでは、イベント、ノーマル、写真などのファイルがあり、上下ボタンを押して閲覧し、「OK」を押して再生します。
2.ビデオ再生:「OK」ボタンを押して再生又は一時停止し、上下ボタンを押して早送りをし、「MODE」ボタンを押して再生を終了します。
3.ファイルの削除:再生モードでファイルを削除する場合、[POWER]ボタンを押して、ファイルの削除（1つ削除するか又は全部削除する）とファイルの保護（ファイルの保護、ファイルの保護解除、ファイルのロック·アンロック）という2つのメニューをポップアップします。「OK」ボタンを押して対応する操作を実行します。
ご注意ロックされたファイルは削除できません。ファイルをアンロックする必要があります。

APP

APP名はYeecoreViewerです。AppStoreとGooglePlayストアからダウンロードできます。このアプリケーションを使用すると、動画やスナップショットをスマートフォンのフォトアルバムに直接ダウンロードして保存できます。それから、ソーシャルメディア、YouTube、Googleドライブなどを通じて、これらのすばらしい動画を世界中の友人や家族と気軽に共有できます。

如何にしてアプリとダッシュカムを接続 しますでしょうか

ステップ1：WiFi名とパスワードがダッシュカム画面に表示されるため、「UP」ボタンを長押ししてください。

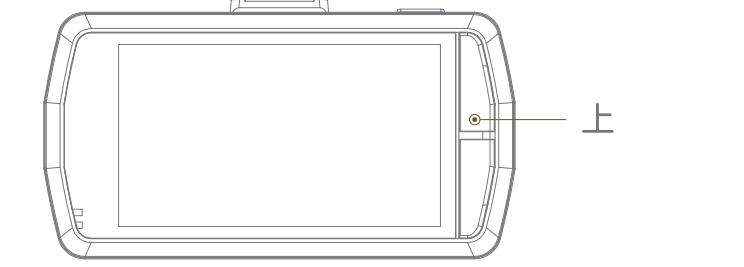

ステップ2：WiFiを見つけ、パスワードを正しく入力し、お使いのスマートフォンをWiFiに接続してください。

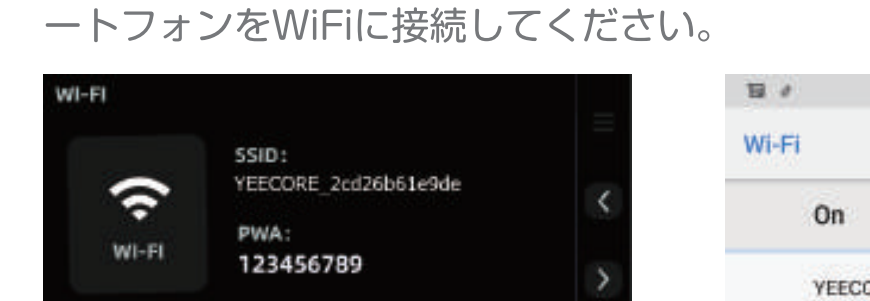
WI-FI
SSID:
YEECORE_2cd26b61e9de
PWA:
123456789

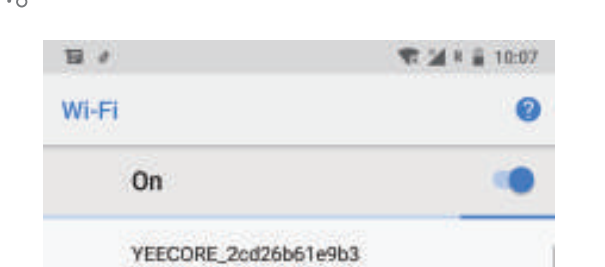

YEECORE_2cd26b61e9b3
Connected, no Internet f=5180 2c:d2:6b:61:e9:b3 rssi=-30 score=60 tx=29.4,0.6,0.6 rx=0.9 [;(1) (2c:d2:6b:61:e9:b3*=5180,-28)]

ステップ3：アプリ「YeecoreViewer」を立ち上げ、「JOIN CAM」をクリックすれば、接続が完成します。

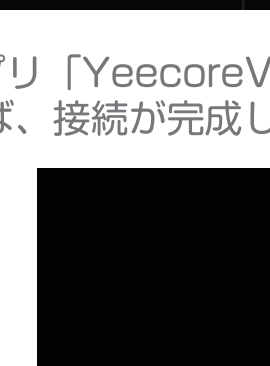

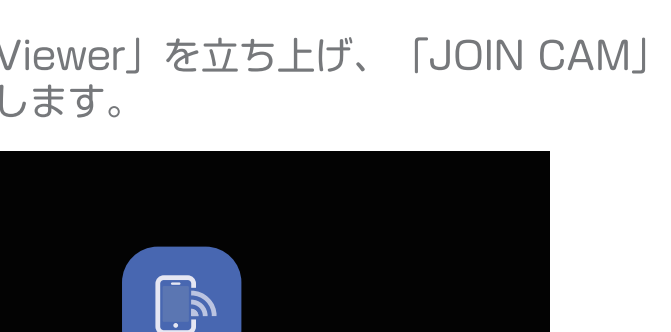
Please use mobile phone to operate
Press any button to Exit Wi-Fi

PC Tools

当社の公式ウェブサイト
（www.yeecore.biz/support/PCTools/YeecorePlayer.exe）
へ最新バージョンのPCツールをダウンロードしてください。以下に示すように、ツールをインストールすると、録画ファイルを再生でき、オーディオとビデオ、GPSトラック、GSensorなどを表示できます。

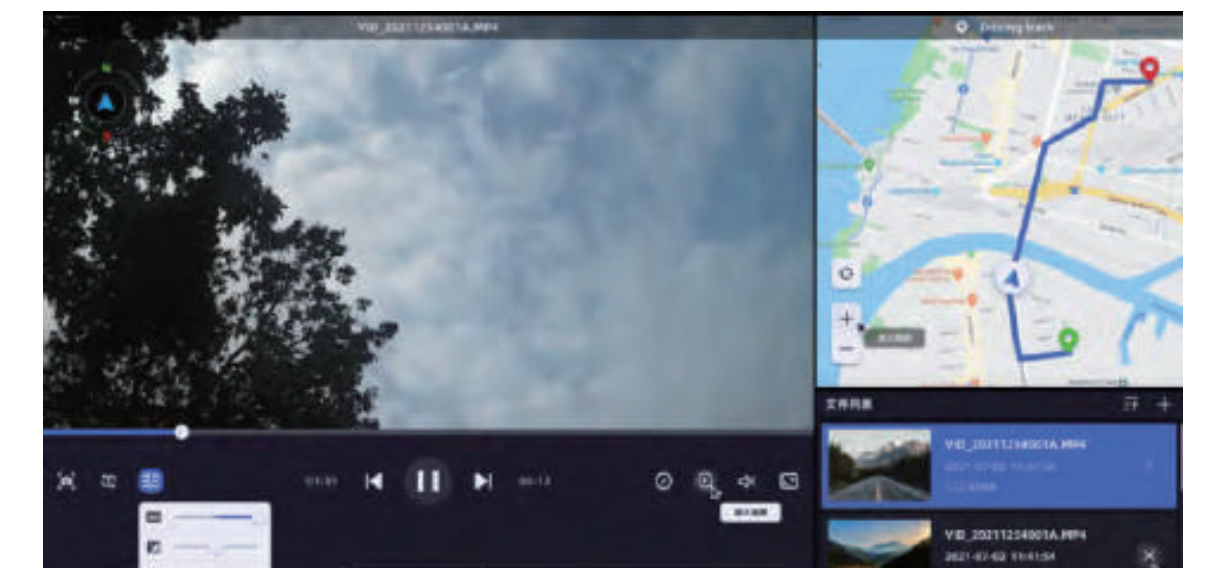

製品仕様

Sensor	フロントカメラ:8M Night Vision
	バックワイヤカメラ(オプション): 2M Night Vision
レンズ	フロントカメラ: 157度広角, 6-Glass Lens
	バックワイヤカメラ(オプション): 140度広角, 6-Glass Lens
LCD	3.0インチのips
Video Resolution	フロントカメラ: 4K30FPS, 1440P30FPS, 1080P30FPS WDR
	バックワイヤカメラ(オプション): 1080P30FPS HDR
Wi-Fi	内蔵 2.4G/5G
GPS	内蔵
オーディオ	内蔵マイク和スピーカー
G-Sensor	内蔵
画像のフォーマット	JPG
ファイル形式	Mp4
USBポート	Type-C
バッテリータイプ	スーパーキャパシタ
作業温度	14°F~158°F(-10°C~70°C)
似合います OS (PCプレイヤー)	Windows XP/Vista/7/8/10/Mac OS

故障かなと思った時

循環録画が機能しないまたは録画が中断された。

1.MicroSDカードは低速カードの場合があります。U3以上の高速MicroSDカードを使用してください。
2.MicroSDカードを長時間使用すると速度が遅くなりますので、カメラでフォーマットすることをお勧めします。

動画若しくは写真ファイルの再生時に「ファイルエラー」が表示された。

MicroSDカードの書き込み速度が低下し、一部の動画や写真ファイルが異常である可能性があります。カメラでMicroSDカードをフォーマットすることをお勧めします。

本品が64G以上のMicroSDカードを読み取れない。

コンピューターでFAT3232KBファイルシステムとしてフォーマットするか、本品でフォーマットする必要があります。

室内で録画する時、ビデオには横縞があった。

地域の電源周波数に応じて、フリッカーを50Hz若しくは60Hzに設定してください。

本品がGPS情報を取得し難い

一部のカーナビゲーションGPSアンテナは、本品のGPS受信に影響を与えます。できるだけ本品をアンテナから離して取り付けてください。

保証サービスとサポート

本品は12ヶ月の保証期間を提供しています。弊社の公式サイト（www.yeecore.biz/register）にご購入なさた商品を登録すると、該保証期間は18ヶ月に延長することができます。

サポート

製品には何かご質問がございましたら、随時アマゾンにて又は電子メール（support@yeecore.biz）までご連絡ください。24時間以内に対応いたします。

ねえ、ここで私たちを見つけてください

公式サイト　Facebook

MADE IN CHINA

FC CE RoHS COMPLIANT

D22说明书20210727