

руководство по эксплуатации



электронная почта: Adison0228@126.com

CONTENTS

Important Notice	01
Packing List	02
Camera Overview	03
Function of the Dash Cam.....	05
Screen Overview	06
Installations	07
Connect the Cables	09
Wi-Fi Connection	10
Specifications	14
Warranty & Support	15

Инструкция

Важное уведомление	1 6
Упаковочная карточка	1 7
Обзор записывающего устройства	1 8
Функция	2 0
Функции экрана	21
Инструкция по установке карты SD	2 2
наличие кабелей в транспортном средстве	24
Подключите свой Wi-Fi	2 5
Описание технических характеристик	29
гарантия и послепродажное обслуживание	30

Important Notice

1. Micro sd card is Included in the package

Please use a brand new high speed sd card to avoid any unexpected issue.

If you are satisfied with the camera, please help to share a 5 stars product comments and write to the support team

Support team: Adison0228@126.com

2. The dash cam supports Wi-Fi and app connecton so that you can view the video on your phone please do follow the instructions in this user manual to use the Wi-Fi and app function.

3. Be sure the camera lens is clean and there is nothing blocking the lens.

4. DO NOT leave the camera in direct sunlight for a long period of time or where the temperature could go above 176°F(80°C).

5. If you have any problems or doubts, please contact us at email address:

Adison0228@126.com

We will respond as soon as we receive your email.

Packing List



Dash Cam*1



Mount*1



Car charger*1



Rear Camera and Cable*1
(PB2+Rear camera)



User Manual*1



double-sided sticker*2



Plastic crowbar*1



Cable storage clip*5



Electrostatic sticker*2

Camera Overview



1.	Mount Connector	Used to couple with mount
2.	Rear Cam Jack	Used to couple with rear cam
3.	Front Camera	For capturing the road ahead
4.	Speaker	Used to play sound
5.	Power Button	Long press it to power ON/OFF the camera; Short press it to turn on/off the screen
6.	Lock/Unlock/ Menu/Wi-Fi/ Back Button	Under video mode: 1) Recording: Short press it to manually lock/unlock files 2) No recording: Short press it to go to the menu settings; Long press it to turn on Wi-Fi Under menu/replay mode: Short press it to back return the previous interface

7.	Sound/ Replay/ OK	Under video mode: 1)Recording:Short press it to manually turn on/off sound recording 2)No recording:Short press it to go to the album Under menu/replay mode: Short press it to confirm. While playing videos, short press it to pause/start video, long press it to "Delete" file.
8.	Up/Snapshot Front and rear view switch Button	Under video mode: 1)Recording:Short press it to take a snapshot 2)No recording:Short press it to switch the display option (front/rear view) Under menu/replay mode: Short press it to move upward
9.	Down/Pause	Under video mode: 1)Recording:Short press it to pause recording 2)No recording:Short press it to start recording Under menu/replay mode: Short press it to move downward
10.	Micro sd card slot	For inserting sd card
11.	Screen	3.69" PS Screen

Function of the Dash Cam



1.To get the camera working,you have to get the camera charged via the car charger included and prepare a qualified Micro sd card.Once setting it up in the car,the camera will turn on and start recording automatically when the car engine is on and willturn off when the car engine is off.

2.To adjust the settings of the camera,you need to use the app.The time and date stamp on the camera screen will be updated according to the time and date of your phone when you connects the Wi-Fi.

3.The dash cam supports Wi-Fi and app connection,which enables you to control the camera using the app.Please do follow the steps in this user manual to use the app. Please understand that Wi-Fi and app has something to do with the internet environment and Mobile Compatibility.

If you are not able to use the app,please do let us know and we will help you:

Adison0228@126.com


Note about 24-Hours Parking Mode:

This camera only kkeeps recording when thrre is power supply.If you want the camera to recordall the time even the car engine is o and car is parked,You will need to hardwire it to the constant fuse of the car battery,so extra hardwire kit is needed.

When you hardwire the camera to constant fuse of the car battery,parking mode allows you to record videos in timelapse while you are away

You can get to us at Adison0228@126.comfor help if you are not so clear about this.

Screen Overview

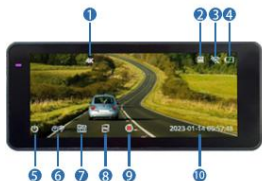

- ① Clarity Sign
- ② Micro sd card icon
- ③ Wi-Fi:off
- ④ Battery indicator
- ⑤ Power Switch
- ⑥ Menu Label/Return
- ⑦ Recorded Videos Folder
- ⑧ Front/Rear Camera Switch
- ⑨ Recording
- ⑩ Date Stamp & Time Stamp
- ⑪ Wi-Fi Name
- ⑫ Wi-Fi Password

Installation

Insert a memory card:

*Please do not insert a Micro sd card that stored with important files into the camera directly as the cam may format it and all datas will be deleted.Please transfer and save the files first.

- 1.We suggest you choose a card from big brands,such as Samsung or Toshiba Micro sd card at U3 level,high speed,32-256GB.
- 2.Every card has its lifespan,if the camera will not record normally,it may has something to do with the card,please try to change for another card.
- 3.Please insert the micro SD card as the following picture shows.(Pay attention not to insert it in a wrong way or the card will get stuck and break the cam.)
- 4.To remove the card,gently press inward its top edge with ngertip and it will jump out



Note:

*Please do not insert a Micro sd card that stored with important files into the camera directly as the cam may format it and alldatas will be deleted.Please transfer and save the files first

If there is no Micro sd card inserted,the camera will remind "No Card"on the camera screen or on the phone if you have connected via app.

If a Micro sd card is inserted,but the camera can not read it and start recording,it will remind "Card Error".This may happen if the card is a low speed card or the card is not in good quality,please change for another card

Mount the Dash Cam

1. Please find a clear and proper area on the windshield that you plan to mount the camera. Clean the area and then stick the electrostatic film onto the windshield first in case the 3m tapes stuck on the window directly.

2. Tear off the protective film of the 3m tape on the mount, attach the mount (sticked with double sided tapes) onto the proper area of the electro-static film. Press the mount until it is tightly glued to the electrostatic film.



Connect the cables

Route the cables through the top ceiling and the A-pillar. Connect the car charger to the dash cam and then plug it into the cigarette lighter.



Position A: Install the rear camera on the rear windshield. The installation is easier.

Position B: Install the rear camera near the license plate. Position 2 is highly recommended. The rear image is crisp and clear for both rear viewing and reversing guide.



Wi-Fi connection

Overall Steps to Connect the app:

Wi-Fi Connection

There are two modes,Wi-Fi mode and Hotspot mode.

Wi-Fi mode is default mode,we suggest you use this mode.

Wi-Fi Mode

1.Get the camera charged,once the camera is on,it will launch a Wi-Fi signal:

Wi-Fi Name:P10-43D092

Password:12345678

2.Open the app-Log in-"Device"-Enter Device,foolwing these steps and the app will lead you to the Wi-Fi settings of the phone.Please go to WLAN of your phone and conenct the Wi-Fi launched by the camera.After connecting the camera Wi-Fi,go back to the app,you will be able to control the camera in the app.

Hotspot Mode

1.Hold the camera button for more than 5s.Wi-Fi mode willbe switched to Hotspot mode.The camera stops launching a Wi-Fi signal.

To switch back to Wi-Fi mode,please hold the camera button for more than 5s again

2.Hotspot mode is a little bit more complicated than Wi-Fi mode.You need to turn on the Hotspot of your phone,and change the Hotspot name and password of the phone to what is showing on the cam screen:

Name:P10-XXXXXX

Password:12345678

The app will show you how to change the name and password of the hotspot according the model of your phone When you select Hotspot mode in the app.



After this,the camera will connect your phone Hotspot,and you will be able to control the camera in the phone app.

APP Download

The steps to download the APP, connect the Wi-Fi and instructions on how to use the APP

1.Download the APP"Viidure"

- 1) Search "**Viidure**" on APP Store or Google Play and download it;

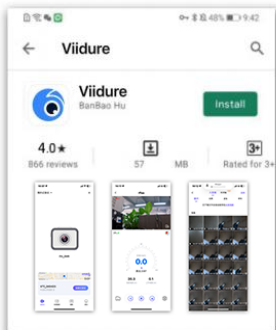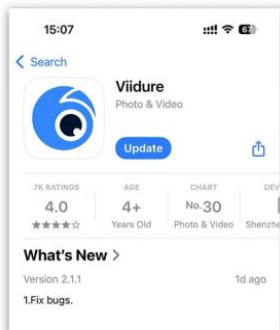

2)Or you can scan the QR code below to down.
load the APP"Viidure"directly;



(When you encounter any problems while download-ing
the APP,please contacte mail:

Adison0228@126.com.we will give you the
mostprofessional guidance.)

**Please note that the basic features of this app(watching
and downloading videos)are availablefor free,while
additional features require payment.**

1.How to view/download the video/photofiles to the local album of the app?

- 1)Hit the video Collection or Photo Galery icon tocheck the videos or photos.
- 2)Hit "Select"and choose videos or photos thatyou want.
- 3)Select the icon to download or delete files.(Please select "Allow Access to All Photos"whenyou see the following prompt,otherwise you willnot be able to save the video or picture in yourphone)

2.How to insert a Memory Card?

- 1)Please insert the micro SD card as the followingpicture shows.(Pay attention not to insert in awrong way or the card will get stuck and break thecam.)
- 2)To remove the card,gently press inward it stopedge with fingertip and it willjump out

Specifications

Model	S300
Processor	SA230D
Image Sensor	Dual Sony Sensors
Display	3.69"IPS Screen
Languages	English/日本語/Deutsch/Francais/ Italiano/Español/中文. (Default:English)
Video Resolution	Front camera:4K/2.5K/1080P Rear Camera:2.5K
Audio	Built-in microphone and speaker
Memory Storage	External:MicroSD Card (32 to256GBCard,U3 level or above)
USB Port	Type-C Charging and Micro USB(PC)
Working Temperature	-4° to 176° F(-20° to 80°C)

Warranty & Support

*Note:

Please write "warranty registration" to us at Adison0228@126.com to register your warranty 30 days after you receive your dash cam otherwise the warranty will be invalid.

If you have any questions or doubts, please contact us at Adison0228@126.com, we will reply you within 12 hours (There is time difference. So please do not worry. We will definitely get back to you as soon as we see your message).

We are firmly committed to improving our products, services and user experience. Any constructive suggestion for the development of our products is welcomed by us.

(Contact e-mail: Adison0228@126.com)

Thank you for choosing us.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

1. В упаковке входит microSD-карта.

Чтобы избежать неожиданных проблем, используйте новый высокоскоростной SD-карту.

Если вам понравилась камера, поделитесь с нами и пятизвёздной оценкой.

2. Данный видеорегистратор поддерживает подключение через Wi-Fi и мобильное приложение, что позволяет просматривать видео на смартфоне. Следует правильно использовать функции Wi-Fi и приложения в соответствии с инструкцией по эксплуатации.

3. Убедитесь, что объектив камеры чист и не имеет посторонних предметов, мешающих его работе. 4. Не оставляйте камеру в течение длительного времени под прямым солнечным светом или в условиях, когда температура может превысить 176 °F (80 °C).

5. Если у вас возникнут вопросы или возникнут трудности при использовании, свяжитесь с нами в любое время — мы готовы оказать вам помощь круглосуточно.

Упаковочная карточка



Автомобильный видеорегистратор*1



монтажная стойка*1



данный кабель для диктора*1



Руководство по эксплуатации*1



задняя камера и кабель для передачи данных*1



Двусторонняя наклейка для крепления диктора*2



Простой рычаг для монтажа*1



Подставка для хранения кабелей*5



электростатический фольговый прибор

*2

Обзор записывающего устройства



1.	Подставка для записи	Для подключения к видеорегистратору
2.	разъём для задней камеры	Для подключения задней камеры
3.	передняя камера	для фиксации дороги впереди
4.	динамик	Для воспроизведения звука
5.	Пульт питания	Долгое нажатие/ включить/выключить камеру; короткое нажатие / включить/выключить экран
6.	Заккрыть/Открыт ы/Меню/Wi- Fi/Вернуть	В видео-режиме: 1) Режим записи: нажмите и удерживайте/для ручного блокировки или разблокировки видео; 2) Без записи (стандартный режим): нажмите и удерживайте/ для пере

7.	Звук/Повтор/Подтвердить	В режиме записи видео: 1) В режиме записи /нажмите и удерживайте, чтобы вручную включить или отключить звук и запись. 2) В режиме обычного (без записи) / нажмите и удерживайте, чтобы перейти в альбом. В режиме меню/воспроизведения / нажмите и удерживайте, чтобы подтвердить. Нажмите коротко / видео остановится, держите / видео начнётся; держите /видео удалится
8.	Для переключения между верхним, снимком и передним/задним видом	В режиме записи видео: 1) В режиме записи /нажмите и удерживайте, чтобы сделать снимок; 2) В режиме обычного просмотра / нажмите и удерживайте, чтобы переключить между режимами отображения (передний/задний). В режиме меню и воспроизведения / нажмите и удерживайте, чтобы переместить вверх.
9.	Вниз / Пауза	В режиме записи видео: 1) В режиме записи / нажмите и удерживайте, чтобы приостановить запись. 2) В режиме обычного воспроизведения /нажмите и удерживайте, чтобы начать запись. В режиме меню и воспроизведения /нажмите и удерживайте, чтобы переместиться вниз.
10.	карточный слот для мини-SD-карты	Вставить карту SD
11.	Экран	3,69-дюймовый экран

Функции автомобильного



1. Чтобы камера работала корректно, заряжайте её с помощью оригинального автомобильного зарядного устройства и подготовьте подходящую карту Micro SD. После установки камеры в салон автомобиля она автоматически включается при запуске двигателя и начинает запись видео; при его отключении она автоматически выключается.

2. Если необходимо настроить камеру, используйте приложение для смартфона. При подключении к телефону по Wi-Fi время и дата на экране камеры автоматически обновляются в соответствии с временем и датой вашего телефона.


3. Данный видеорегистратор поддерживает подключение через Wi-Fi и мобильное приложение, с помощью которого вы можете управлять камерой удалённо. См. инструкцию по эксплуатации для использования приложения. Обратите внимание: использование Wi-Fi и приложений зависит от сетевой среды и совместимости вашего телефона.

Если при использовании возникла проблема с подключением к приложению, свяжитесь с нашим службовым поддержкой — мы готовы помочь в любое время, круглосуточно.

Объяснение режима 24-часового видеонаблюдения: камера записывает видео только при постоянном питании. Если вы хотите, чтобы запись продолжалась даже при выключённом двигателе и при парковке, необходимо подключить камеру напрямую к постоянному выключателю аккумулятора автомобиля, что потребует дополнительного комплекта жёстких проводов.

После подключения камеры к постоянному выключателю батареи и включения режима видеонаблюдения при парковке система запускает запись видео в режиме съёмки с задержкой, если вы не находитесь рядом с автомобилем. Если вы не понимаете, как действовать, не бойтесь обращаться в нашу службу поддержки — мы готовы помочь вам круглосуточно.

Функции экрана

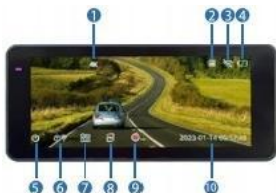

- ① Уровень чёткости
- ② Иконка карты SD
- ③ Wi-Fi: выключено
- ④ Индикатор заряда
- ⑤ Переключатель питания
- ⑥ Панель меню / Вернуться
- ⑦ Папка для записи видео
- ⑧ Переключение между передней и задней камерой
- ⑨ Запись
- ⑩ Вывод даты и времени
- ⑪ Название Wi-Fi
- ⑫ Пароль Wi-Fi

Инструкция по установке карты SD

Вставьте карту памяти: *Не вставляйте в камеру карту Micro SD с важными файлами, поскольку она может быть отформатирована, что приведёт к удалению всех данных. Перед этим перенесите файлы и создайте резервную копию.

1. Рекомендуем выбирать карты памяти от крупных брендов, например Micro SD от Samsung или Toshiba, с классом U3, высокой скоростью и объёмом от 32 до 256 ГБ.
2. У каждой карты памяти есть срок службы. Если камера не записывает видео, возможно, проблема в карте памяти. Попробуйте заменить карту и проверьте, работает ли устройство.
3. При вставке карты Micro SD следуйте инструкции на рисунке ниже (обратите внимание: не вставляйте карту с обратной стороной внутрь, иначе слот может застрять, а камера — повредиться).
4. Чтобы извлечь карту памяти, слегка нажмите её верхний край пальцем — она автоматически выскочит.



Обратите внимание:

Не вставляйте карту Micro SD с важными файлами в камеру напрямую — она может отформатировать карту, и все данные могут быть удалены. Перед этим передайте файлы и создайте резервную копию. Если не вставлено Micro SD-карточку, на экране появится сообщение «Без карты». Если вы подключили телефон через приложение, на устройстве также отобразится соответствующее уведомление. Если вы вставили карту Micro SD, но камера не может её прочитать и начать запись, появится сообщение «ошибка карты». Причиной может быть слишком низкая скорость карты или низкое качество карты. Попробуйте использовать другую карту.

Установка автомобильного видеорегистратора

1. Найдите на лобовом стекле хорошо видимое и удобное место для установки камеры.

Сначала очистите эту область, а затем наклейте статический фольговый лист в указанном месте, чтобы предотвратить прямое прилипание клея 3М к стеклу.

2. Снимите защитную пленку с 3М-ленты с каркаса и прикрепите каркас с двусторонним клеем в нужное место на электростатической плёнке. Нажмите на него, пока он не прилипёт к ней плотно.



наличие кабелей в транспортном средстве

Пройдите кабель через верхнюю часть крыши и внутреннюю часть А-столба, подключите автомобильный зарядный устройство к бортовой записывающей системе, затем вставьте сигаретный зажим.



Решение А: установите заднюю камеру на заднее стекло. Такой вариант установки проще.

Место В: установите заднюю камеру рядом с номерным знаком. Этот вариант особенно рекомендуется — с него получается чёткое и резкое изображение заднего края автомобиля.



Подключите свой Wi-Fi

Все этапы подключения к приложению:

Wi-Fi соединение

Устройство поддерживает два режима подключения: Wi-Fi и режим «горячая точка» (Hotspot). Режим Wi-Fi — это стандартный режим, который рекомендуется использовать в первую очередь.

Wi-Fi Режим

1. Зарядите камеру — после включения она автоматически отправит Wi-Fi-сигнал:

Wi-Fi Название: P1-43D092

Пароль: 12345678

2. Откройте приложение → войдите в аккаунт → нажмите «Устройство» → добавьте устройство и выполните все действия, указанные в приложении. Система перенесёт вас в настройки Wi-Fi телефона. Подключите камеру к Wi-Fi-сигналу, излучаемому камерой, в настройках Wi-Fi телефона. После успешной подключения вернитесь в приложение — теперь вы сможете управлять камерой через это приложение.

режим «горячая точка»

1. Держите кнопку камеры нажатой более 5 секунд, чтобы переключить Wi-Fi в режим хотспота. В этом случае камера перестанет излучать Wi-Fi-сигнал.

Чтобы вернуться в Wi-Fi-режим, держите кнопку камеры нажатой более 5 секунд.

2. Режим хотспот сложнее, чем Wi-Fi. Включите функцию хотспота в телефоне и измените имя и пароль, чтобы они соответствовали тем данным, которые отображаются на экране камеры.

Название: P1-XXXXXX (Название может различаться в зависимости от устройства.)

Пароль: 12345678



Если вы выберете режим «горячая точка» в приложении, система предложит вам изменить имя и пароль точки доступа в зависимости от модели вашего телефона. После настройки камера будет подключена к точке доступа вашего телефона, и вы сможете управлять камерой через приложение.

Скачать приложение

Скачайте приложение, подключитесь к Wi-Fi и выполните все необходимые действия по инструкции

1. Скачайте приложение «Лүфэнчжэ»:

1) найдите его в App Store или Google Play и скачайте.

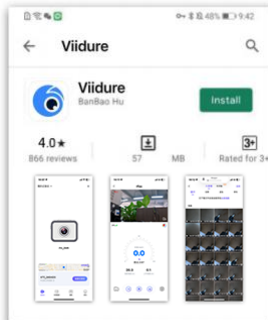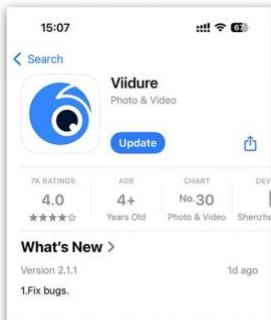

2) Или сканируйте QR-код ниже, чтобы сразу скачать приложение «Луфэн Чжао».



(Если возникли проблемы при загрузке приложения, свяжитесь с нашей службой поддержки — мы готовы оказать вам профессиональную помощь.)

Обратите внимание: базовые функции приложения — просмотр и загрузка видео — доступны бесплатно, а дополнительные функции требуют оплаты.

1. Как открыть видео или фото и сохранить их в локальную галерею приложения?

1) Нажмите на иконку видео или фото, чтобы просматривать соответствующее видео или фото.

2) Нажмите «Выбереть», а затем выберите нужное видео или фотографию.

3) Нажмите на иконку для загрузки или удаления файла. (Если появится следующее уведомление, выберите «Разрешить доступ ко всем фотографиям», иначе вы не сможете сохранить видео или изображение на свой телефон.)

2. Как вставить карту памяти (Micro SD)?

1) Вставьте карту Micro SD в нужное направление. (Обратите внимание: не вставляйте карту в обратную сторону — это может привести к заземлению или повреждению устройства.)

2) Чтобы извлечь карту памяти, слегка нажмите кончиком пальца на края слота — она выск

Технические характеристики

Модель	S300
процессор(CPU)	SA230D
сенсор изображения	двойной сенсор Sony
Размер дисплея	3,69-дюймовый экран
язык	English/русский язык/Deutsch/Francais/Italiano/Español/中文
разрешение видео	Передняя камера: 4K/2.5K/1080P, задняя камера: 2,5K
Аудио	Встроенный микрофон и динамик
ёмкость хранения	Внешняя память: карта формата microSD (32–256 ГБ, класс U3 или выше)
USB-порт	зарядка по стандарту Type-C и мини-USB (PC)
рабочая температура	-4 до 176 °F (от -20 до 80 °C)

***Обратите внимание**

Если у вас возникнут вопросы или сомнения, не стесняйтесь обращаться в нашу службу поддержки — мы готовы помочь вам круглосуточно.

Мы постоянно стремимся улучшать наши продукты, услуги и пользовательский опыт. Добро пожаловать к нам с предложениями и замечаниями по развитию наших продуктов.

Спасибо, что выбрали наш продукт.

Прежде чем использовать камеру бортового дисплея, обязательно ознакомьтесь с этим руководством и храните его для последующего использования.

Please read this guide before operating your dash cam,
and keep it for future reference.