DYNALOG

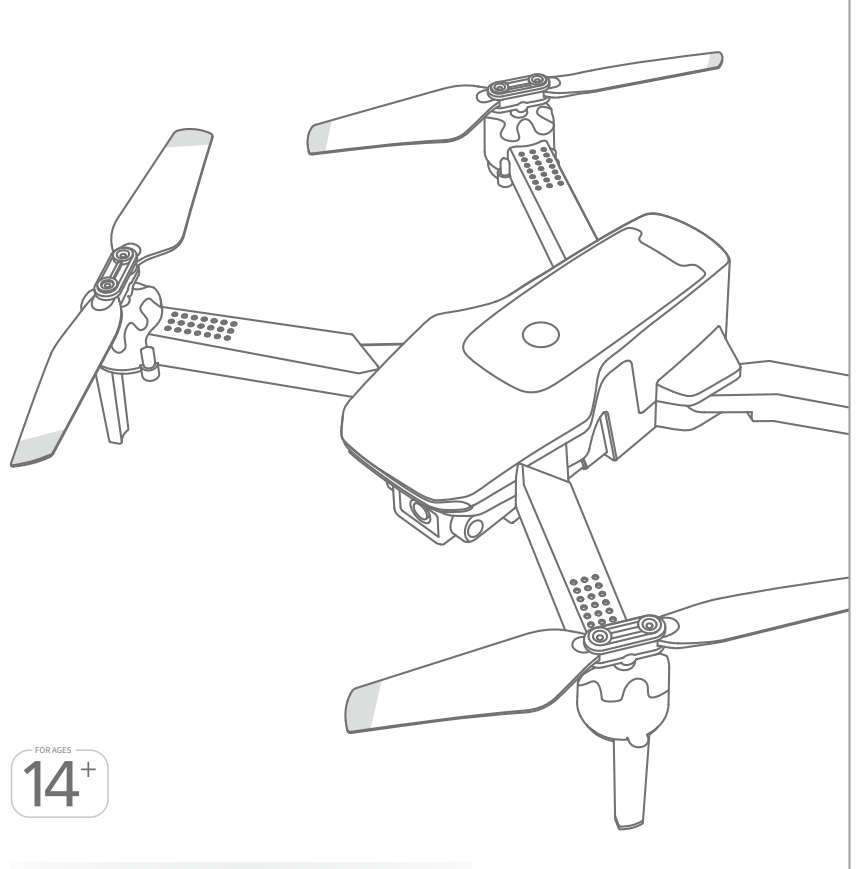

FOR AGES 14+

DR-DG600C

FOLDABLE GPS DRONE

User Manual

Please read this manual carefully before flying and keep it for future reference.

V1.04

Thank you for choosing our product.
If you have any questions, concerns, or need any help,
please contact us at
support@idynalog.com
or call us via hotline
(443) 998-8789 (UTC 14:00-22:00, Monday to Friday)

CONTENTS

DISCLAIMER AND SAFETY GUIDELINES 01
MAINTENANCE AND CARE 03
PRODUCT OVERVIEW 05
FLIGHT PREPARATION 07
FLIGHT OPERATION GUIDE 10
Remote Operation Guide 10
  Pair the Remote with the Drone 10
  Calibrate the Compass 12
  Calibrate the Gyro 13
  Search GPS Satellites 13
  Connect to Your Mobile Device 14
    App Downloading and Installation 14
    APP Launch 15
  Flight Instructions 16
    Take-off 16
    Landing 17
    Flight Directions 18
    Photo/Video 19
  Speed Switch 19
  Headless Mode 19
  Return-to-Home (RTH) 20
  Emergency Stop 24
APP Operation Guide 25
  Function Overview of the App 25
  Settings 27
  Take-off 28
  Point of Interest (POI) 29
  Follow Me 30
  Waypoints 31
  Photo/Video 32
  Gestures for Photo/Video 32
  Smart RTH 32
  Landing 32
TROUBLESHOOTING 33
SPECIFICATIONS 35

DISCLAIMER AND SAFETY GUIDELINES

Please read the disclaimer carefully before using this product. By using it, you hereby agree to this disclaimer and signify that you have read them fully.

1. Before flying, please make some practice with a simulator or seek for the instruction from a professional.
2. DO NOT fly above or near obstacles, crowds, open water, public road, high voltage power lines or trees.
3. DO NOT use the drone in severe weather conditions, such as a rainy day or windy day (wind speed is more than 5.5m/s), snow, hail, lightning, tornadoes, hurricanes, etc..
4. DO NOT fly the drone in the magnetic interference area, radio interference area, and government regulated no-fly zones.
5. The fast rotating motors and propellers are a potential hazard to cause serious damage and injury. A distance of at least 5m must be maintained from the drone at all times while it is operational. Fly with responsibility.

← 5M →

6. Please maintain the line-of-sight of your drone at all times after it is powered up. Do not rely on the camera image to control your drone.
7. This product is not a toy and not recommended for users under age 14.
8. This product is not intended for professional aerial drone photography.
9. All parts must be kept out of the reach of children to avoid CHOKE HAZARD.
10. CAUTION: Dispose of the drone and batteries in accordance with local regulations. DO NOT treat it as household waste.
11. Be sure to observe all local regulations, obtain appropriate authorizations and understand risks. Please note it is solely your responsibility to comply with all flight regulations.

DYNALOG accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in these Disclaimer and Safety Guidelines. DYNALOG reserves the right to update this user manual.

MAINTENANCE AND CARE

1. Thoroughly check the drone after a crash or a violent impact.
2. Clean off your drone with a dry cloth to prevent any moisture from getting into the electronics.
3. Do not try to disassemble or repair the product yourself. Please contact us for more help.
4. Remove the battery from the drone if it will not be used for a long time.
5. Please store and charge the battery in a cool (0~40°C) and dry place. Do not leave the battery in an extremely high-temperature environment that can result in an explosion or the leakage of flammable liquid or gas.
6. Please use the original battery provided. Use an incorrect type of battery may lead to fire hazards.
7. Do not charge the battery if it is hot. Let it cool down first.
8. ONLY use the original USB cable provided. Do not over charge the battery. Unplug the charger once the battery is fully charged.
9. Do not charge the battery next to inflammables, such as bed, carpet, wood floor, etc., or on surfaces that are electrically conductive. Do not leave the battery unattended while charging.
10. Keep the battery away from any sharp objects that could puncture into the battery to avoid risks of explosion and fire.
11. Do not dispose of the battery in fire or a hot oven, cut or mechanically crush the battery, as this may cause explosions.
12. Do not drive a nail in, hit with a hammer, or stamp on the battery. Do not strike the battery in other ways.
13. Do not disassemble or alter the outside structure of the battery.

14. Do not expose the battery to the extremely low air pressure, as this may result in an explosion or the leakage of flammable liquid.
15. Do not store the battery for long periods of time when it's in low battery status. To extend the battery's lifespan, recharge it at least once every three months if not using it for long periods of time.
16. Replace the battery if it's swollen.
17. Batteries are only to be charged by adults or by children at least 8 years old under adult supervision.
18. Different types of batteries or new and used batteries are not to be mixed.
19. Exhausted batteries are to be removed from the toy.
20. The supply terminals are not to be short-circuited.
21. Batteries are to be inserted with the correct polarity (+ and –).

PRODUCT OVERVIEW

Drone

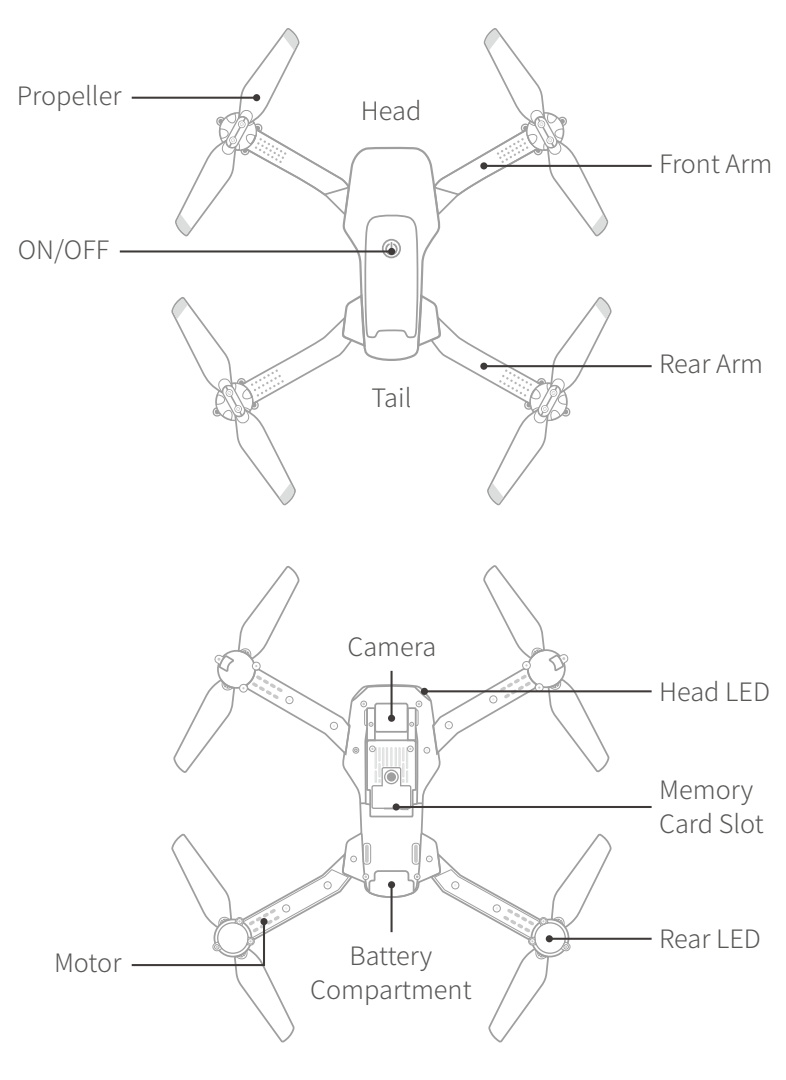

Remote

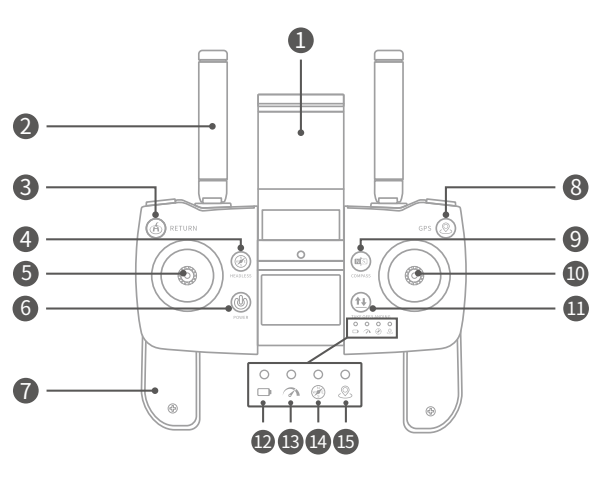

❶ Phone Clamp	❿ Right Control Stick
❷ Antenna	⓫ One Key Take-off/Landing (short press); Emergency Stop (long press)
❸ Return-to-Home (RTH)	⓬ Remote Power Indicator
❹ Headless Mode	⓭ Speed Indicator
❺ Left Control Stick	⓮ Headless Mode Indicator
❻ ON/OFF	⓯ GPS/RTH Indicator
❼ Handle	
❽ GPS Mode ON/OFF (long press)	
❾ Compass Calibration (long press)	

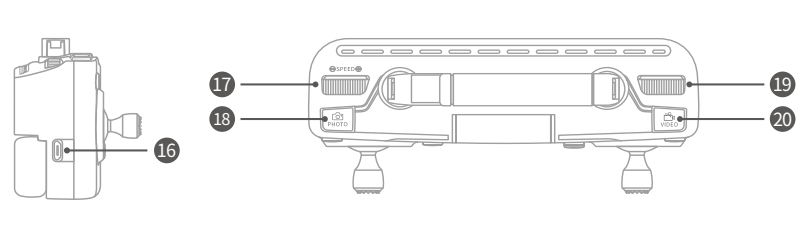

⓰ Charging Port	⓳ Unavailable
⓱ Speed Switch	⓴ Video
⓲ Photo	

FLIGHT PREPARATION

1. Unfold the front arms, then the rear arms.

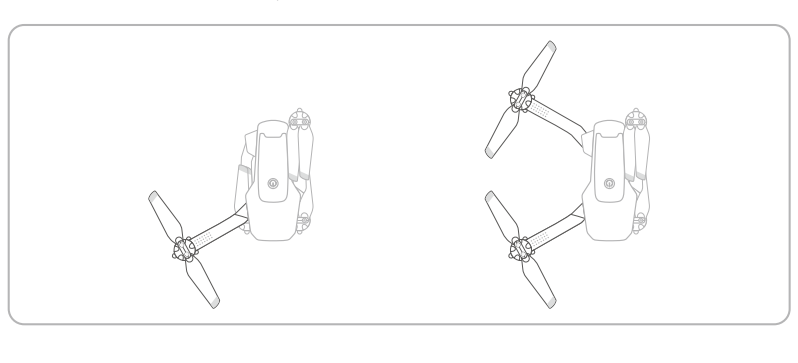

2. Charge the battery.

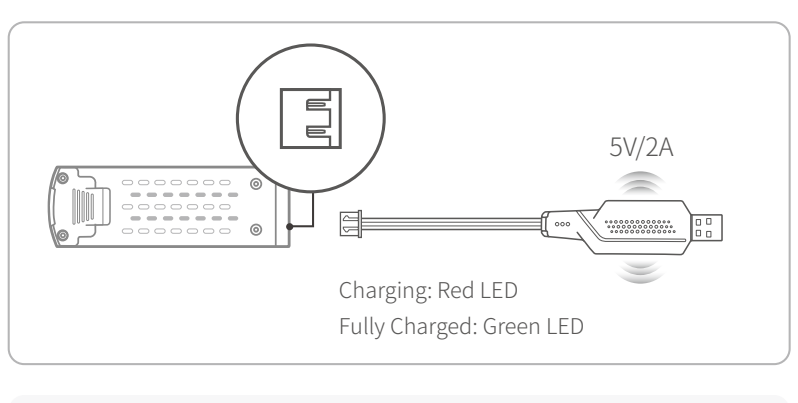

Notes:
- * You could check the drone's battery status on our app. When the drone battery gets low, the remote will also keep beeping.
- * Please use the original battery and USB cable provided.
- * It's not recommended to charge the battery from the USB port of PC.
- * Flight time may be reduced when flying in low-temperature environments.

3. Install the battery into the drone after it's fully charged.

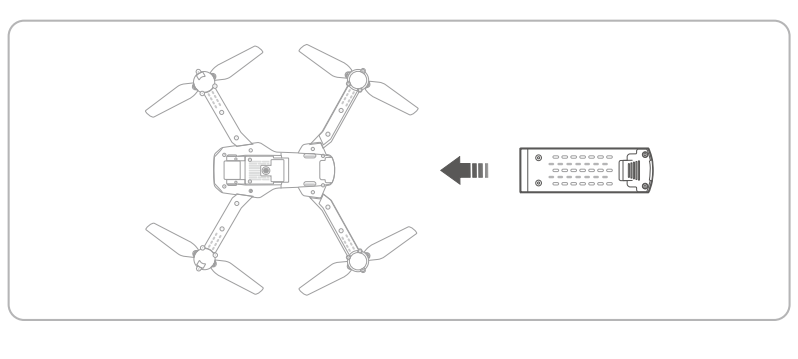

4. Insert a memory card (not included) into the drone.

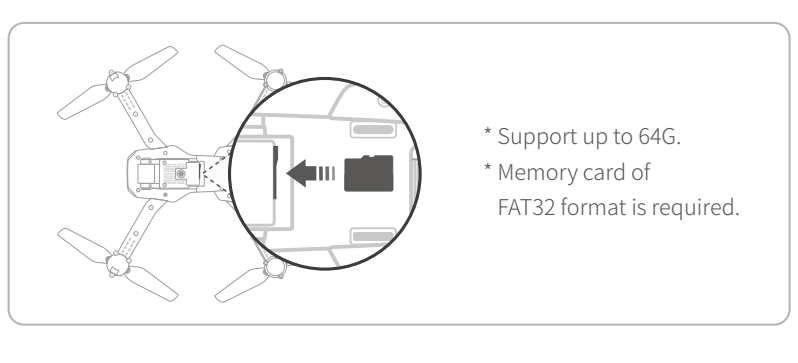

* Support up to 64G.
* Memory card of FAT32 format is required.

5. Charge the remote.

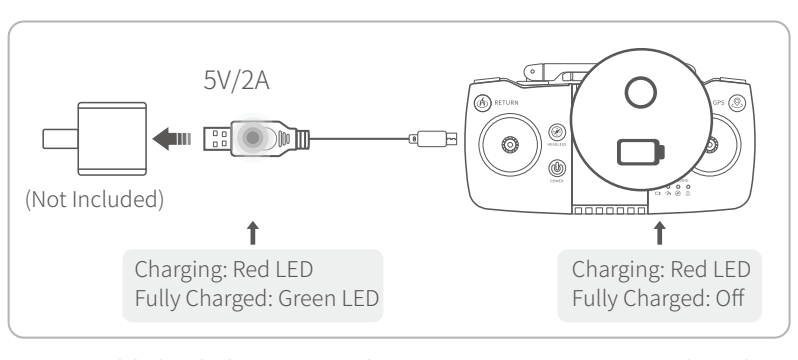

* You could check the remote's battery status on our app. When the remote battery gets low, the **Remote Power Indicator** will keep flashing, and the remote will keep beeping.

6. Unfold the **Handle** and **Antenna**.

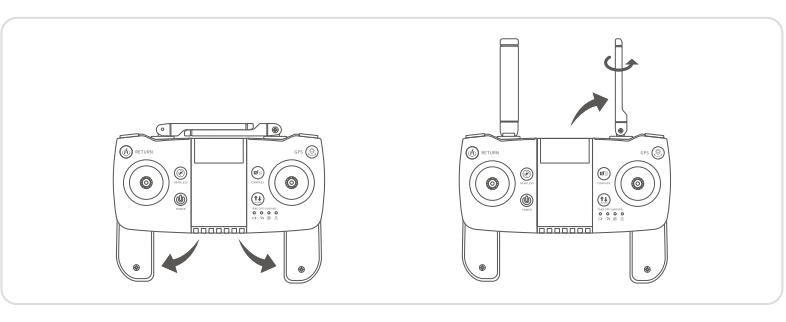

7. Unfold the **Phone Clamp** to mount your mobile device. Before mounting, please take off the protective case on your mobile device for a better fit.

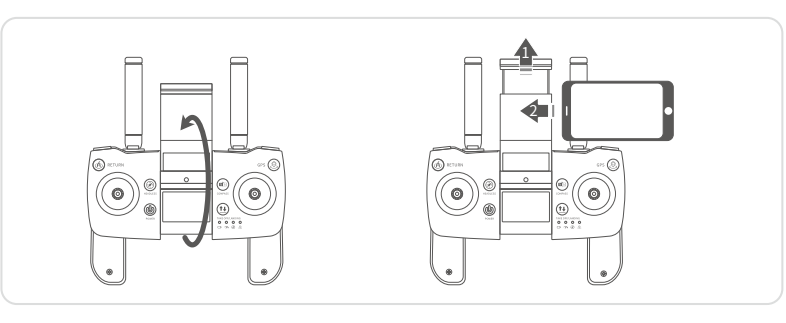

8. Replace the propeller when it's needed. (Optional)

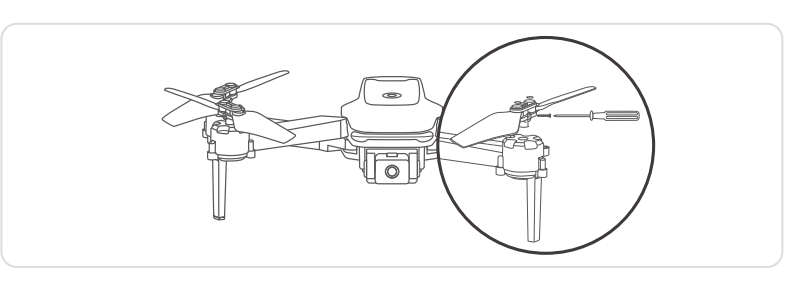

* Loosen the screw to remove the propellers.
* Fit the spare propellers into the drone according to the mark (A/B) on it.

FLIGHT OPERATION GUIDE

IMPORTANT:
- * Make sure you power on the drone first, then the remote in each flight.
- * Do repeat the pairing procedure each time when the drone or remote is restarted.
- * For all flight functions and modes, the operator and tail of the drone must be aligned.
- * We recommend flying in the open air and within the control range for beginners.

REMOTE OPERATION GUIDE

Pair the Remote with the Drone

Step 1:
Press and hold the **ON/OFF** button to turn on the drone. All the LEDs on the drone start flashing when the drone is powered on. Then place the drone on a flat surface with its head facing forward.

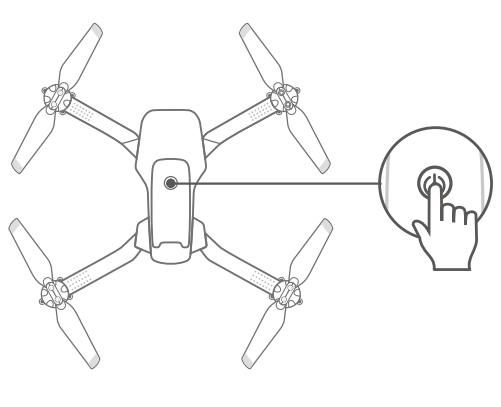

Step 2:
Press the **ON/OFF** button to turn on the remote. The **Remote Power Indicator** keeps flashing when pairing.

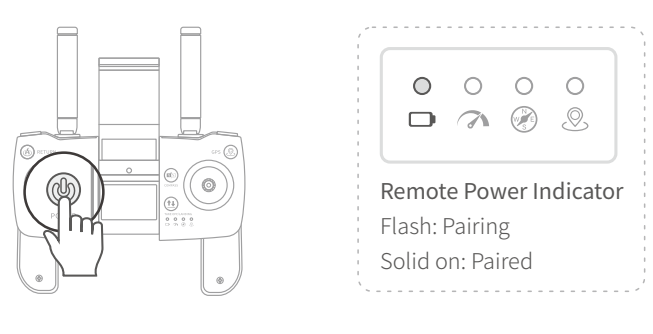

Remote Power Indicator
Flash: Pairing
Solid on: Paired

Step 3:
Wait for the remote to automatically pair with the drone. When pairing is completed, the remote beeps once; the **Remote Power Indicator** and the drone's rear LEDs will both turn solid on.

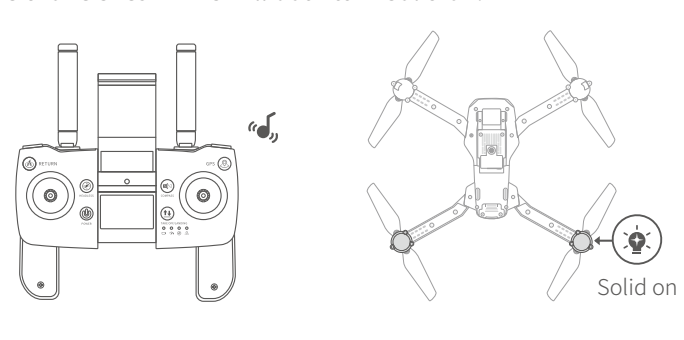

Tips:
- * The drone will automatically turn off if no operation is performed within 5 minutes.
- * The remote will automatically turn off if no operation is performed within 30 minutes.

Calibrate the Compass

Step 1:
Press and hold the button for three seconds to start calibrating; the remote beeps once and all the LEDs on the drone turn off.

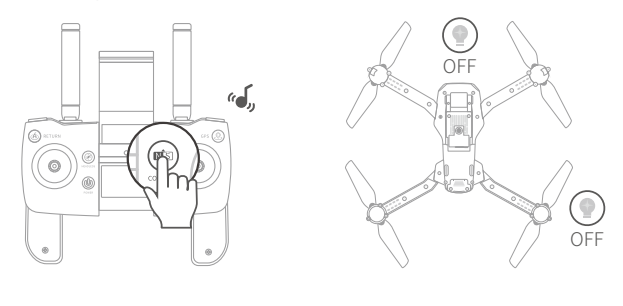

Step 2:
Hold the drone horizontally and rotate it until the remote beeps once. The head LEDs light up in blue.

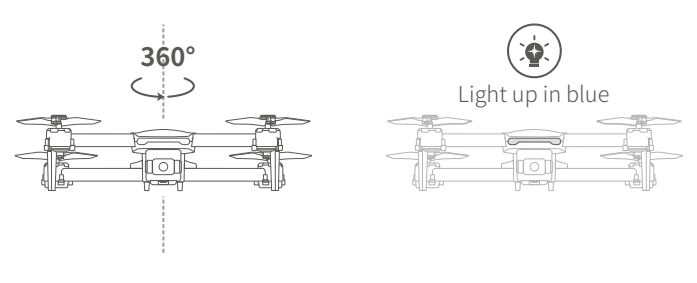

Step 3:
Hold the drone vertically with its head facing down, and rotate it until the remote beeps twice. The rear LEDs light up in green.

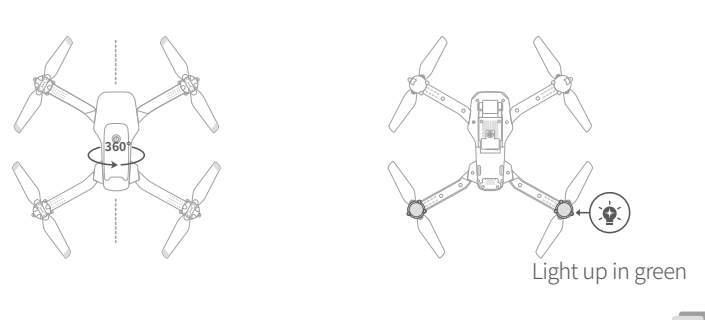

Calibrate the Gyro

Place the drone on a flat surface. Push both sticks to lower left at 45°; the remote beeps once and the drone's rear LEDs flash quickly. Gyro calibration is completed when the drone's rear LEDs turn solid on.

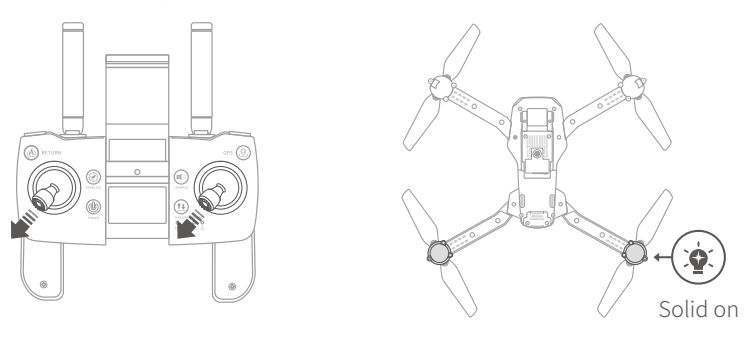

Search for GPS Satellites

IMPORTANT:
GPS Mode is the default mode for the drone, which requires a strong GPS signal. Please fly the drone outdoors.



GPS/RTH Indicator
Solid on: GPS Mode on
OFF: GPS Mode off
Flash: RTH(Return-to-Home) on

Please wait for the drone to search for satellites; its head LEDs keep flashing quickly when searching for satellites.
If the drone finds enough satellites, you'll hear a long beep from the remote, and the drone's head LEDs will turn solid on, indicating that it's ready to take off in **GPS Mode**.

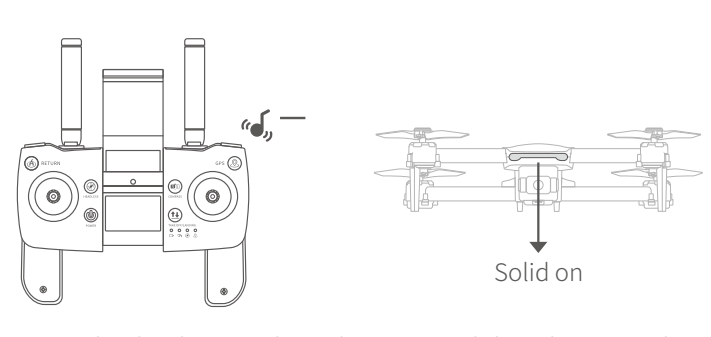

In GPS mode, the drone utilizes the GPS module to locate and make a precise hovering flight. For optimal hovering, we strongly recommend **GPS Mode** for outdoor flight.

Connect to Your Mobile Device

App Downloading and Installation

Download and install an App into your mobile device from **App Store™/Google Play™** or by scanning the QR code below.

App's Name: Dynalog Besta
App's QR Codes:

For Android 5.0 or later
For iOS 8.0 or later

Name of the Drone's WiFi:
DR-DG600C-B****** or DR-DG600C-W******

Note:
Google Play™ is a trademark of Google Inc., and App Store™ is a trademark of Apple Inc.

App Launch

Step 1:
Turn on cellular data and location service of your mobile device, then open the App, and tap **START** to enter the App.

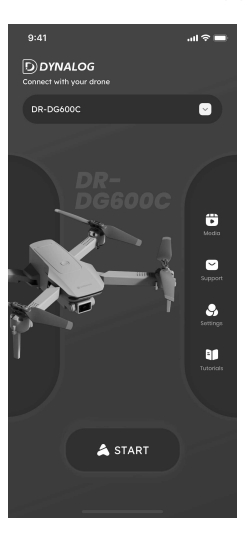

Step 2:
Tap the **Live Map** to load the map, then tap to have your location displayed on the center of the live map.

Step 3:
Turn off cellular data, then go to the WiFi setting of your mobile device and connect to the drone's WiFi.

Notes:
- * If the drone's WiFi is not listed in your WiFi list or the App does not show the preview image, please restart the drone and remote, then repeat the pairing and calibration procedures.
- * Make sure the drone's WiFi is only connected to one mobile device.
- * It's recommended that you turn off cellular data when your mobile device connects to the drone's WiFi. Otherwise, the WiFi connection with the drone may be interrupted.

Flight Instructions

Take-off

Option 1:
Press the button and the four rotor blades start rotating, then press the button to take off.

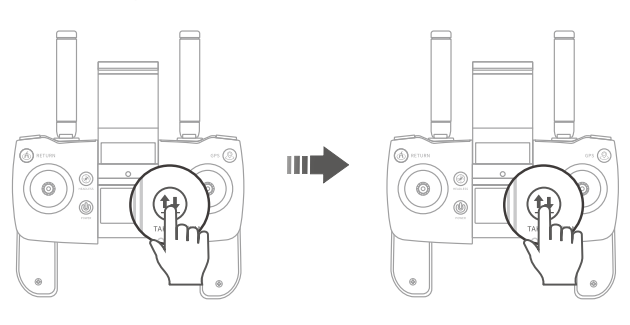

Option 2:
Simultaneously move the **Left Control Stick** to lower left at 45° and the **Right Control Stick** to lower right at 45° until four rotor blades start rotating, then slowly push the **Left Control Stick** forward to take off.

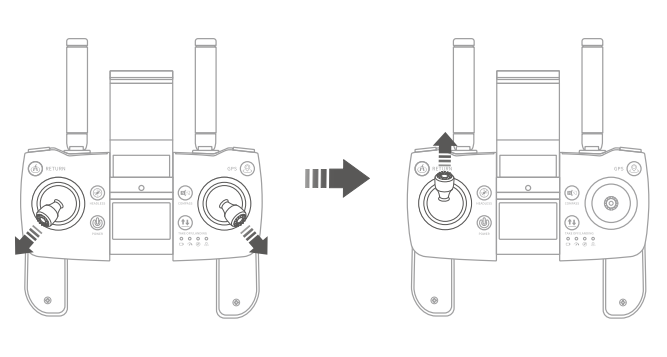

Landing

Option 1:
Press the button to land the drone.

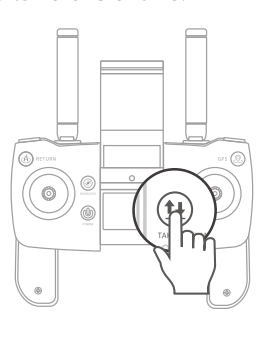

Option 2:
Slowly pull the **Left Control Stick** backward until the propellers stop rotating to land the drone.

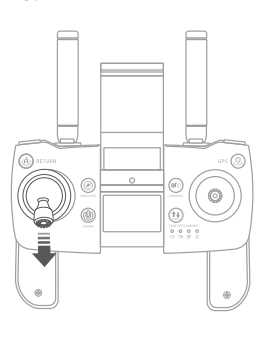

Flight Directions

Left Control Stick

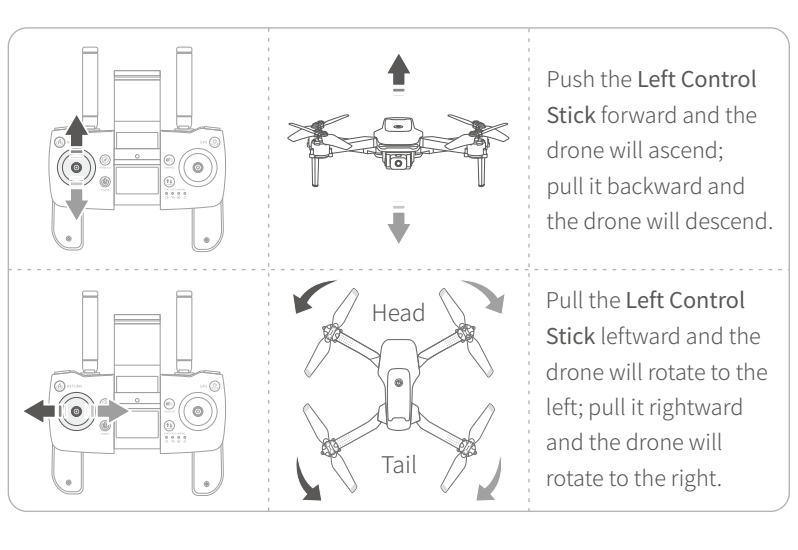

Push the **Left Control Stick** forward and the drone will ascend; pull it backward and the drone will descend.

Pull the **Left Control Stick** leftward and the drone will rotate to the left; pull it rightward and the drone will rotate to the right.

Right Control Stick

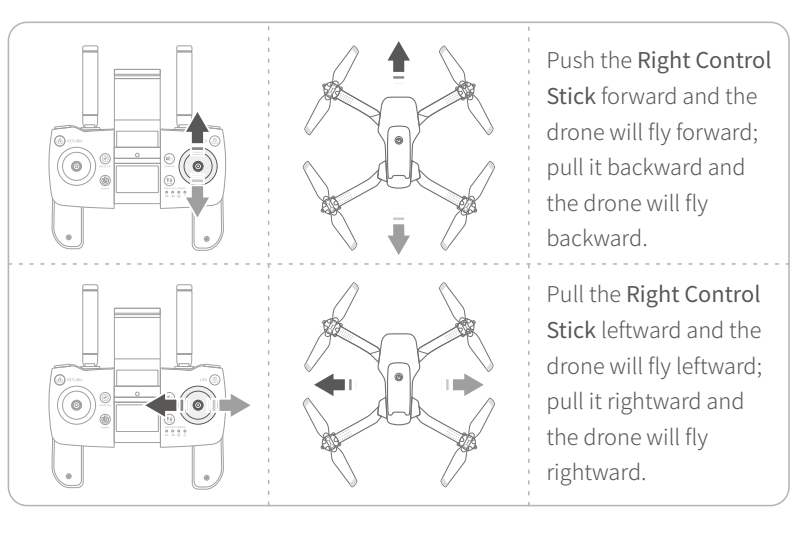

Push the **Right Control Stick** forward and the drone will fly forward; pull it backward and the drone will fly backward.

Pull the **Right Control Stick** leftward and the drone will fly leftward; pull it rightward and the drone will fly rightward.

Photo/Video

Press the button to take a photo.
Press the button to start recording a video. Press it again to stop and save the video to your mobile device and memory card.

Speed Switch

The speed of the drone is set as **Low** speed by default.
Push SPEED rightward to switch to **High** speed, and the remote beeps twice.

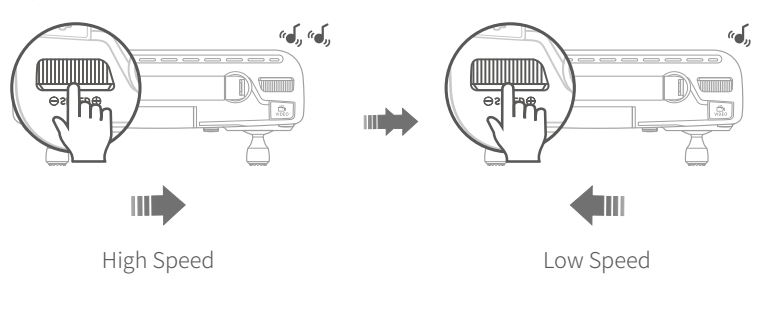

Push it leftward to switch back to **Low** speed, and the remote beeps once.

Speed Indicator
Solid on: High Speed
OFF: Low Speed

Headless Mode

Press the button to activate **Headless Mode**.
In this mode, the drone will fly following the direction of the **Right Control Stick** regardless of the position of your drone's head or the tail. Press the same button again to cancel this mode.

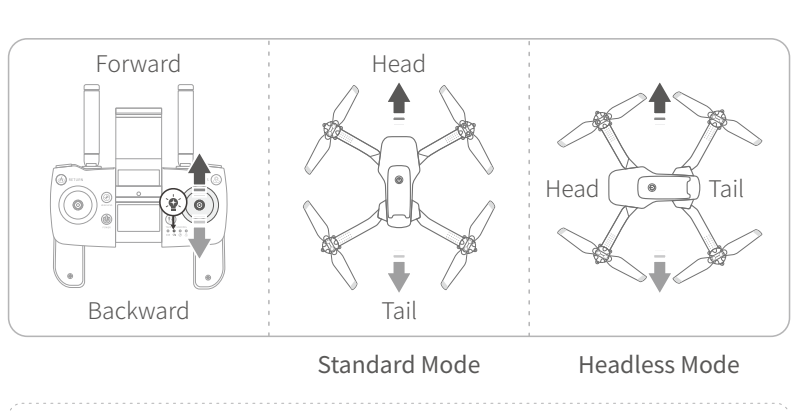



Headless Mode Indicator
Solid on: Headless mode on
OFF: Headless mode off

Return-To-Home(RTH)

The **Return-to-Home(RTH)** function brings the drone back to the last recorded **Home Point** where the drone took off last time. RTH works only when the GPS signal is strong enough and the compass functions normally.

* During RTH, the remote keeps beeping and its **RTH Indicator** keeps flashing.



GPS/RTH Indicator
Flash: RTH on
Solid on: GPS Mode on
OFF: GPS Mode off

Smart RTH

Press on the remote to enable **Smart RTH**.

* RTH Distance:
The distance between the drone and the last recorded **Home Point** where the drone took off last time.

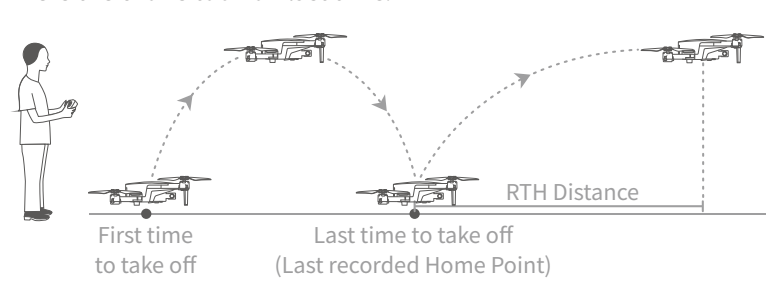

The preset RTH altitude for the drone is 20 meters.

1. RTH Distance > 20M, Current Flight Altitude < 20M
The drone will ascend to the altitude of 20 meters, then fly back to the Home Point and land.

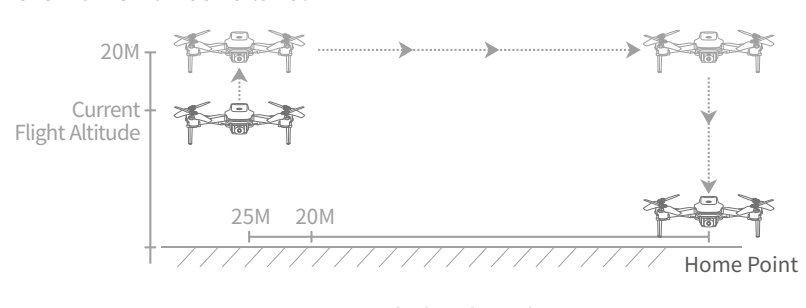

2. RTH Distance > 20M, Current Flight Altitude ⩾ 20M
The drone will directly fly back to Home Point at its current flight altitude and land.

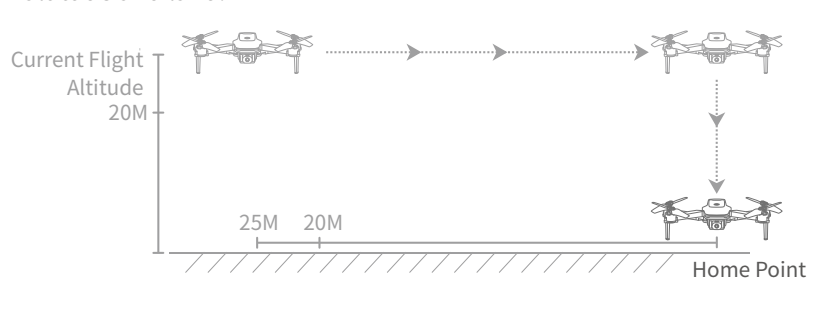

3. RTH Distance ⩽ 20M
The drone will directly fly back to Home Point at its current flight altitude and land.

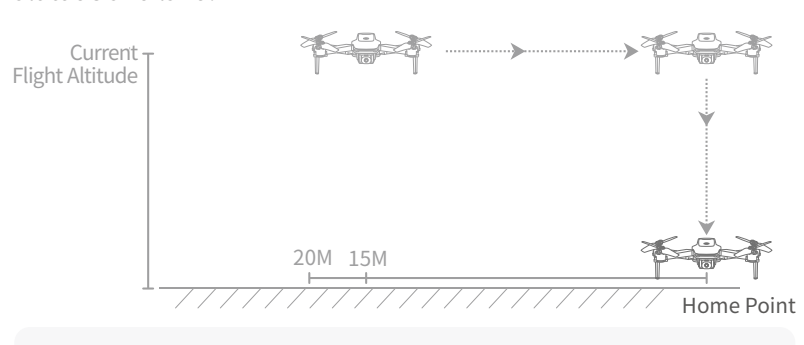

Note:
You could reset the RTH altitude when using the app to control the drone.

Failsafe RTH

Failsafe RTH will be automatically activated when the remote disconnects with the drone for more than 6 seconds. The drone will fly back to the last recorded **Home Point** under the control of its flight system.
If the remote reconnects with the drone, you could press the button to cancel RTH and regain control of the drone. If no operation is performed, the RTH process will continue.

Notes:
- * The drone cannot avoid obstacles during the flight path of **Failsafe RTH**.
- * If the remote disconnects with the drone for more than 6 seconds, and the GPS function is not available, the drone will slowly descend from the current altitude till landing.

Low Battery RTH

1. The **Low Battery RTH** will be triggered when the drone battery is low and the RTH Distance is over 15 meters.

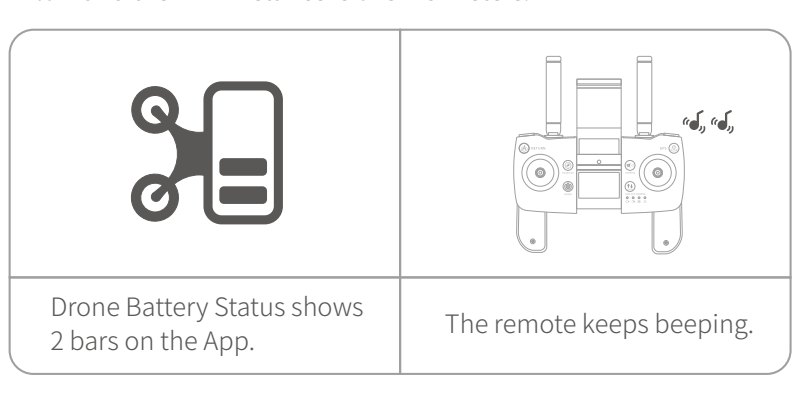

Drone Battery Status shows 2 bars on the App.
The remote keeps beeping.

RTH will be canceled automatically after the drone flies back to where RTH distance is less than 15 meters. It cannot fly beyond 15 meters anymore no matter how you operate.

2. The **Critically Low Battery RTH** will be triggered when the drone battery is Critically low. The drone will automatically fly back and land on the last recorded Home Point.

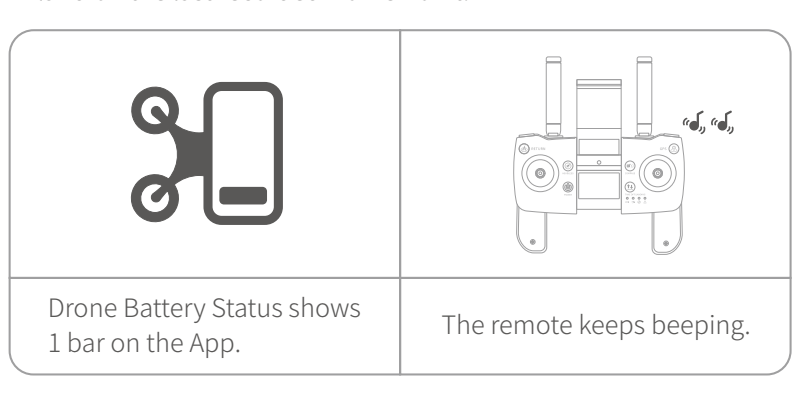

Drone Battery Status shows 1 bar on the App.
The remote keeps beeping.

Emergency Stop

Press and hold for 3 seconds, the drone will stop in the air and fall.

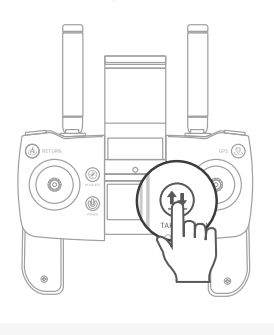

Note:
It's NOT recommended to use this function during the normal flight, which may result in serious damage to your drone.

APP OPERATION GUIDE

Function Overview of the App

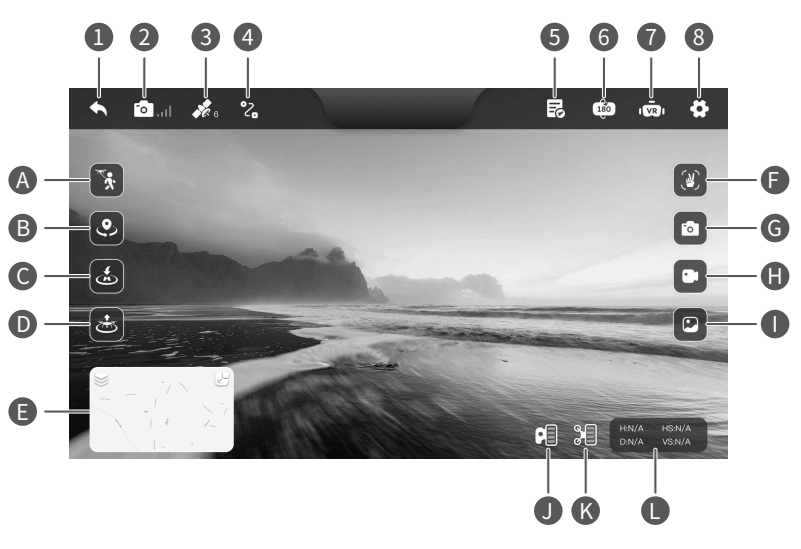

❶ Back	❺ Flight Records
❷ WiFi Signal	❻ Flip Image
❸ Number of Satellites	❼ VR Mode
❹ Waypoints	❽ Settings
Ⓐ Follow Me	Ⓘ Media Gallery
Ⓑ Point of Interest	Ⓙ Remote Battery Status
Ⓒ Smart RTH	Ⓚ Drone Battery Status
Ⓓ One Key Take-off/Landing	Ⓛ D: Flight Distance
Ⓔ Live Map	H: Flight Altitude
Ⓕ Gestures for Photo/Video	DS: Flight Speed
Ⓖ Photo	VS: Ascent/Desent Speed
Ⓗ Video	

WiFi Signal:
Check the WiFi signal strength to prevent your mobile device from losing track of the drone. When it shows low signal strength (⩽1 bar), please fly the drone back immediately.

Number of Satellites:
Check the signal of the GPS satellites.

Flight Records:
Check all kinds of flight records here.

Flip Image:
Tap to flip the image 180°.

VR Mode:
Tap to activate VR mode (VR device is not supplied).

Remote Battery Status:
Check the battery status of the remote.

Drone Battery Status:
Check the battery status of the drone.

Media Gallery:
Tap to check the photos and videos saved.

Settings

Tap to start setting up your drone.

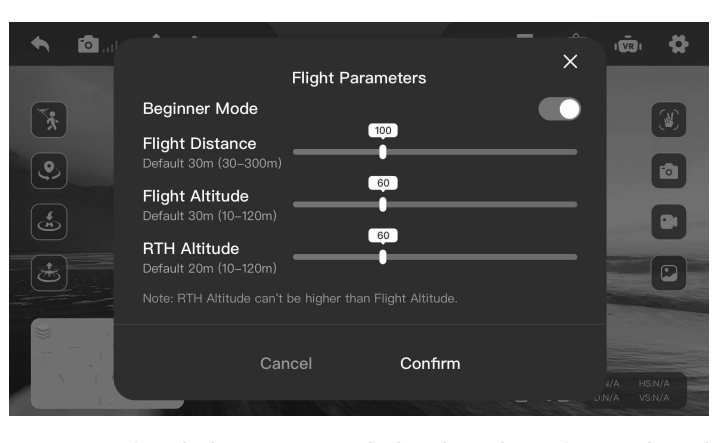

Flight Parameters
Beginner Mode
Flight Distance
Default 30m (30–300m)
100
Flight Altitude
Default 30m (10–120m)
60
RTH Altitude
Default 20m (10–120m)
60
Note: RTH Altitude can't be higher than Flight Altitude.
Cancel
Confirm

You can reset the **Flight Distance**, **Flight Altitude** and **RTH Altitude** as needed.

Beginner Mode:
Beginner Mode with preset flight parameters is recommended for beginners.

Flight Distance:
Tap to reset the maximum flight distance between the drone and last recorded Home Point.

Flight Altitude:
Tap to reset the maximum flight altitude of the drone.

RTH Altitude:
Tap to reset the RTH altitude when returning home.

Note:
* RTH Altitude can't be higher than the Flight Altitude.

IMPORTANT
* Before flying, please check the flight prompts on the app to see if the drone is ready to take off.

Take-off

Step 1:
Move the **Left Control Stick** to lower left at 45° and the **Right Control Stick** to lower right at 45° at the same time until the four rotor blades start rotating.

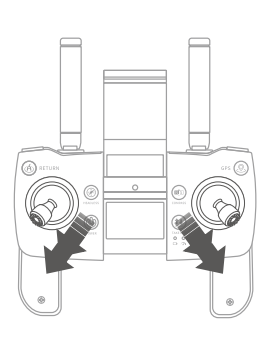

Step 2:
Tap , then slide righward on the pop-up window to take off.

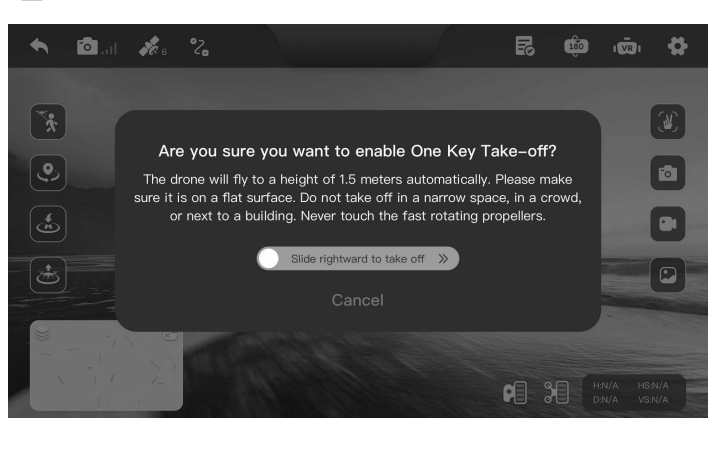

Are you sure you want to enable One Key Take–off?
The drone will fly to a height of 1.5 meters automatically. Please make sure it is on a flat surface. Do not take off in a narrow space, in a crowd, or next to a building. Never touch the fast rotating propellers.
Slide rightward to take off
Cancel

Point of Interest (POI)

Tap to activate **POI** based on GPS Mode during flight, enter the **POI Radius** and tap **Confirm** to start. The drone will circle around the current point of the drone while keeping that point centered in the frame.

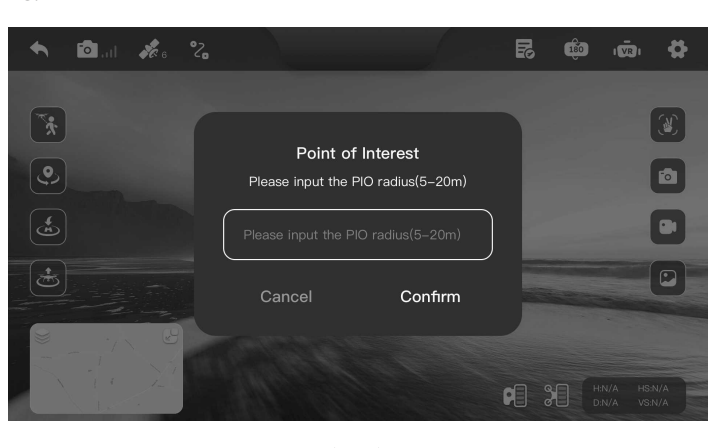

Point of Interest
Please input the PIO radius(5–20m)
Please input the PIO radius(5–20m)
Cancel
Confirm

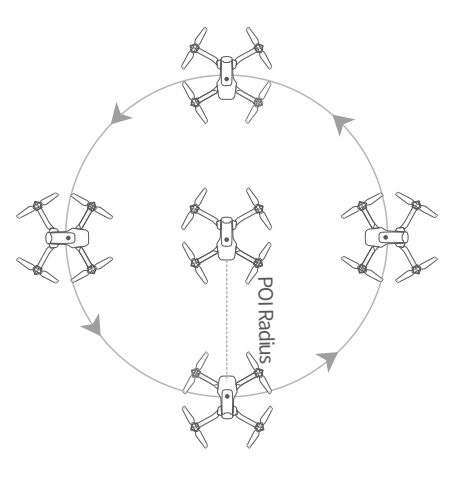

Move the **Left Control Stick** forward or backward to adjust the flight altitude if it's needed.

Tap again during the flight to cancel this mode and regain control of the drone.

Note:
* This function can't be activated when the battery of the drone is low.

Follow Me

Tap to enable **Follow Me** based on GPS Mode, then slide rightward on the pop-up window to start. When this function is enabled during flight, the drone will fly follow your mobile device with its camera lens pointing at it.

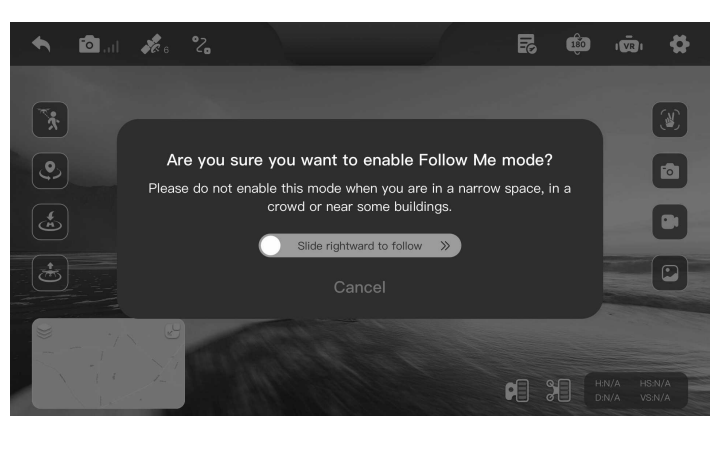

Are you sure you want to enable Follow Me mode?
Please do not enable this mode when you are in a narrow space, in a crowd or near some buildings.
Slide rightward to follow
Cancel

Tap again during the flight to cancel this mode and regain control of the drone.

Notes:
1. The function of **Follow Me** may have deviation due to the **GPS Signal**. Please maintain a safe distance between you and the drone when enabling this function.
2. Activate this function only when there is no obstacle around you in case of unexpected accidents.
3. This function can't be activated when the battery of the drone is low.

Waypoints

Waypoints function based on GPS Mode allows you to define an exact flying route on a map during the flight.

Step 1:
Tap to start setting waypoints.

Step 2:
Tap to find your current location, then tap some desired waypoints on the map. Tap Single Delete or All Delete to delete waypoint(s) if you want to reset.

Step 3:
Tap Upload to upload waypoints.

Step 4:
Slide rightward on the pop-up window to start.

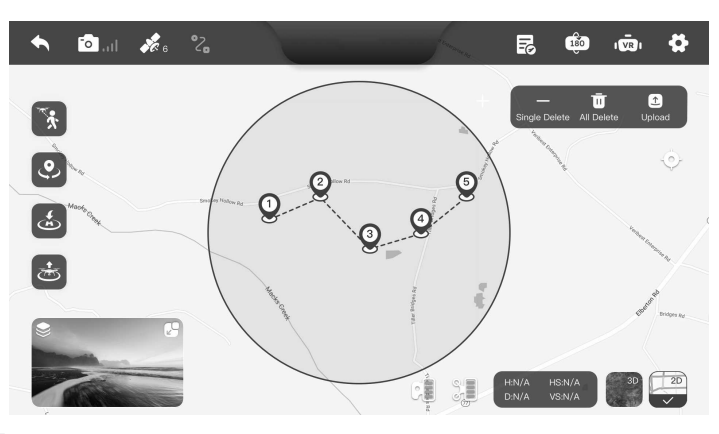

Tap to exit this mode.

Notes:
- * Up to 15 waypoints can be set at a time. It's recommended that you set 8 waypoints or less for better flying experience.
- * This function can't be activated when the battery of the drone is low.

Photo/Video

Tap to take one photo.

Tap to start recording, tap again to end and save the video to your memory card and mobile device.

Go to **Media Gallery**, select the photo or video preferred and tap Share to share with your friends.

Gestures for Photo/Video

Tap to activate this function. Within 3m under light-filled circumstances, please make a ✌ gesture with your **Right Hand** for taking a photo, a ✋ gesture for starting and ending the video recording.

Smart RTH

Tap to activate **Smart RTH** during the flight and have the drone returned to the last recorded **Home Point**. Slide rightward on the pop-up window to start RTH; tap **Cancel** to exit this window.

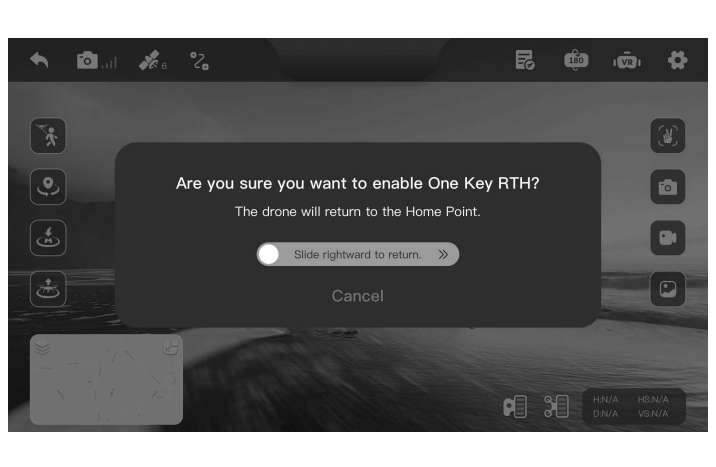

Are you sure you want to enable One Key RTH?
The drone will return to the Home Point.
Slide rightward to return
Cancel

During the path of RTH, tap again to cancel RTH and regain control.

Landing

Tap and slide rightward on the pop-up window to land the drone during the flight.

TROUBLESHOOTING

Q1. The motors of the drone don't spin.
- * Ensure that you've turned on the drone and the remote.
- * Ensure that the drone battery and the remote battery have enough power.
- * Ensure that the remote has been paired with the drone successfully.

Q2. The LEDs of the drone flash abnormally.
- * Ensure that the drone battery has enough power.
- * Try to calibrate the compass.
- * Try to calibrate the gyro.

Q3. The drone's propellers start rotating after I unlock the motor, but the drone fails to take off.
- * Ensure that the drone battery has enough power.
- * Push the **Left Control Stick** forward to take off after unlocking the motor.
- * Ensure that the propellers (A/B) are installed correctly.
- * Check if the rotating speed of each motor is the same. If not, the motor is broken, please contact us directly.

Q4. The drone tilts to one side after taking off.
- * Calibrate the gyro.
- * Ensure that the propellers (A/B) are installed correctly.
- * Check if the motor is stuck by any small object or if there is a burning smell from the motor. If yes, please remove the small object or contact us directly.
- * Check if the wheel of the motor is working well. If not, please contact us directly.

Q5. The drone's propeller fails to rotate.
- * Check if the propeller is over tightened.
- * Check if the motor is stuck by any small object or if there is a burning smell from the motor. If yes, please remove the small object or contact us directly.
- * Check if the wheel of the motor is working well. If not, please contact us directly.

Q6. The drone drifts after taking off.
- * Ensure that **GPS Mode** is **ON** and the GPS signal is strong.
- * Please land the drone and calibrate the gyro.
- * Please land the drone and calibrate the compass.

Q7. The drone is unresponsive or insensitive to the control of the remote.
- * Ensure that the drone flies within control range.
- * Switch the speed of the drone to high speed.
- * Ensure that the remote battery has enough power.

Q8. Why can't I see the live image on App?
- * Ensure that the drone has enough power.
- * Ensure that your mobile device has connected to the drone's WiFi.
- * Please go to your mobile device's setting to turn off your cellular data, or disable the function that allows your phone to automatically disconnect to WiFi with no Internet access.
- * Ensure that the camera isn't blocked.
- * Ensure that the drone flies within FPV range.
- * Please try to use another phone to connect to the drone's WiFi.

SPECIFICATIONS

Drone	
Operating Temperature	32°F to 104°F(0°C to 40°C)
Transmit Power (EIRP)	5.2G: 17.58dBm 5.8G: 12.00dBm
Remote	
Transmit Power (EIRP)	2.4GHz: 14.66dBm

FCC Caution:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
For Remote:
The device has been tested and comply with FCC SAR limits.
For R/C QUADCOPTER:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment . This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISEDC Warning:
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For R/C QUADCOPTER:
The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 20cm.
Operation of this device in the band 5150-5250 MHz is restricted to indoor use only.
L'appareil est conforme aux directives d'exposition aux RF, les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux RF et la conformité.La distance minimale du corps pour utiliser l'appareil est de 20 cm.
Le fonctionnement de cet appareil dans la bande 5150-5250 MHz est limité à une utilisation en intérieur uniquement.
For Remote:
The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.
Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.