

AGPTEK



User Manual

MP4 Music Player Model: T09X、T09PL、T09U

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

Contents

English		01-11
日本語		12-27

Please read this user manual carefully before use. All illustrations in this manual are for reference only, please refer to the actual product.

Notes on Battery Charging


1. Please use a 5V/1A power adapter or via PC USB port to charge.
Note: Different PCs have different current output capabilities of the USB interface, and the charging time will also be slightly different. It's recommended that when charging via the PC USB, power off the player to speed up charging. During charging, it's a normal phenomenon that the charger and the player have a certain temperature rise.
2. New battery needs to charge and discharge several times to achieve optimum performance.
3. Normally the player can be fully charged in about 3h. It's recommended to unplug it after charging, and please do not connect to the power supply for a long time.
4. The polymer lithium battery of the player can be recharged repeatedly.
5. The battery must be replaced by professionals, do not replace it by yourself. Note: if the battery is improperly replaced, there will be a danger of explosion; it can only be replaced with the same type or equivalent type of battery. In order to protect the environment, give the waste battery to a professional organization for recycling.
6. Battery life may vary with usage conditions and production time.
7. Do not expose the battery to overheated environment such as direct sunlight or fire.

Important Tips Before Use

1. Before using headphones, lower the player's volume and gradually increase it to a comfortable level. Avoid high volume to protect your hearing. Listening at high volume for long periods can damage your hearing. When tinnitus occurs, turn down the volume or stop using it.
2. It's recommended to back up the personal data stored in the player before formatting.
3. Ensure the product is placed in a safe place to avoid accidents and falls.
4. Over-voltage, power cable strain, bending or squeezing by heavy objects is not allowed to avoid overheating or fire disaster.
5. Keep the product away from the electromagnetic environment, excessive humidity, smoke, or other harsh environments.
6. Do not immerse the product in water, and do not use any corrosive or abrasive cleaners to clean.

7. Protect from rain or moisture. It may cause malfunctions or complicate repair due to water and moisture penetration.
8. Do not press the product with excessive force.
9. Do not vibrate or hit the product violently.
10. Do not use headphones while driving, riding, operating machinery, or doing work that requires attention to outside sounds.
11. Do not repair or disassemble the product by yourself, otherwise we will not be able to provide you with normal after-sales service.
12. There is an automatic shutdown function in setting. The following conditions must be met for using this function:
 - A. Close all background apps.
 - B. Ensure the device is not charging.Note: The automatic shutdown timer starts after the screen fully turns off.
13. If the actual settings and using method of this product are inconsistent with this manual due to firmware upgrade, please contact us.

Appearance & Buttons

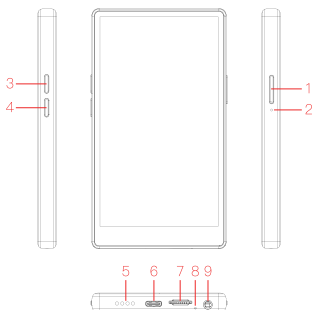

- ① Power Button
- ② Reset Hole
- ③ Volume +
- ④ Volume -
- ⑤ Speaker

- ⑥ Type-C Charging Port
- ⑦ TF Card Slot
- ⑧ Microphone
- ⑨ 3.5mm Headphone Jack

Basic Operation of Buttons

1. Powering On/Off

- Press and hold the Power button (①) to turn on/off the device.
- Short press it (①) to turn screen on/off.

2. Main Interface

- Status Bar: Located at the top of any function menu; displays time, battery life, Bluetooth, and WiFi status.
- Function Icons: Access various device functions or settings by tapping any of the 27 icons on the main screen.

3. Adjusting Volume

- Press button ③ to increase volume. Press button ④ to decrease volume.
- Drag the slider on the volume bar when it appears on the screen.

4. Resetting the Device

- Forced Restart: If the device freezes, insert a pin into the Reset Hole (②) to reset and restart. If the device won't turn on, ensure it is charged.

5. Taking Screenshots

- Method 1: Press the Power button and the Volume – button together
- Method 2: Press and hold the Power button and tap the screenshot shortcut on the main screen
- Method 3: Swipe down the notification bar and select [Screenshot]

6. Basic Operations of Navigation Bar

Navigation bar is located at the bottom of screen:



- **View Hidden Apps:** See the apps running in the background.
- **Return to Main Screen**
- ◀ **Return to Previous Menu**

Notes

1. After the device is running for a long time, especially in a high-temperature environment, it's a normal phenomenon that the surface might be hot. When you feel it is hot, please stop using or charging, turn off some functions as well as move the device to a cool place. Avoid prolonged contact with hot surfaces.
2. If the device is not in use for a long time, please charge and discharge it at least once a month to prevent damage caused by excessive battery consumption.
3. In order to ensure the long-term use of this product, it's recommended that you buy a dedicated charger for digital products.

Configuration of New Device

Connect to Wi-Fi Network

1. Swipe down from the status bar, find [Internet] in the notification bar or find [Wi-Fi] in settings.
2. Turn on Wi-Fi switch and all detected Wi-Fi networks will be listed.
3. Tap the Wi-Fi network you want to connect to. If you choose an encrypted network, you will need to enter a password for access connection.

Connect to Bluetooth

1. Swipe down from the status bar, find [Bluetooth] in the notification bar or in settings.
2. Turn on Bluetooth switch. Enter the Bluetooth settings interface and click to search new device.
3. Tap the name of the Bluetooth address you want to connect to and perform a pairing connection.


Screen and Display

1. Home Screen

Get to know the home screen.

Display Area:
Place APP icons,
desktop files and
window widgets

Shortcut Bar:
Place frequently
used Apps

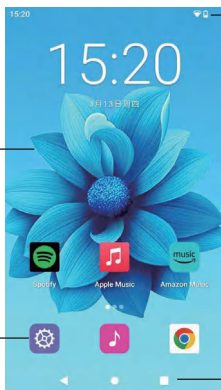

Status Bar:
Display
notifications
and status icons

Navigation Bar

2. Basic Operation of Screen



Tap: Touch the target once.

Example: Tap to confirm selection or open the APP.



Long Press: Touch the target for more than 2s.

Example: Press and hold the blank area on home screen to enter the editing state of home screen.



Swipe: Swipe your finger on screen.

Example: Swipe up, down, left, or right on the screen, allows you to scroll through files, navigate to other home pages, or perform other actions.



Drag: Press and hold the target and move it to another location on the screen.

Example: On the home screen, drag a window widget or icon to any location.

3. Lock & Unlock Screen

You can set a screen lock pattern or password to protect your private information.

1. Open the settings.
2. Tap “Security” > “Screen Lock”.
3. Select swipe, pattern, or password to unlock the screen.

Note: If you can’t unlock the device due to forgetting or entering the wrong password, you can easily unlock it by entering the universal password “1235789”.



4. Notification & Status

• Recognize the Status Bar

According to the status bar, you can know the notification information and running status of the device in real time. When there are notifications, light up the device screen and swipe down from the status bar to view various messages.

• Open Notification Bar

When the notification bar is open, you can quick adjust Screen Brightness, Wi-Fi, Bluetooth, Battery Saver, Do Not Disturb, Alarm, Screen Cast, Color Correction, Night Light mode, Color Inversion, Dark theme, Extra dim, and more.

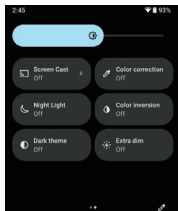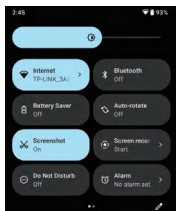

System Functions and Settings

Settings

Tap the Settings icon  on the main interface to enter:

1. **Wi-Fi:** Enable Wi-Fi to automatically search for available networks to connect.
2. **Bluetooth:** Activate Bluetooth, then tap [Pair New Device]. Connect only to Bluetooth speakers and headphones.
3. **Memory:** View the current usage of your device's memory.
4. **Apps:** Check recently opened applications and their notification permissions.
5. **Battery:** Configure [Battery Saver] to manage battery usage efficiently and check the battery usage.
6. **Storage:** Review used storage and analyze storage occupied by applications.
7. **Sound:** Adjust volumes for media, alarms, and notifications. Toggle sounds for screen lock, charging alerts, and touch feedback.
8. **Display:** Customize brightness, screen lock, screen timeout, dark theme, display & text size, night light mode, auto-rotate screen, simulate color space, wallpaper, screen saver, etc.
9. **Security:** Set up Find My Device and screen lock to protect your data.
10. **Google:** Log into your Google account for backup, parental controls, Find My Device, devices & sharing, set up & restore, etc.
11. **Auto Shutdown:** Select a shutdown timer of 5, 10, 15, 20, 30, or 60 minutes, or choose Never. (**Note:** The auto shutdown timer only starts if: a. No applications are running in the background; b. The device is not charging; c. The screen is completely off.)
12. **Schedule Power On/Off:** Set a timer for scheduled power on/off times.
13. **System**
 - A. **Languages & Input**
 - **Languages:** Add a new language. To set it as the default, drag

the icon = to the top.

- **On-Screen Keyboard:** Tap [Gboard] to enter its settings. Go to Languages > Add keyboard to add input languages as needed.
- B. Gestures:** Select the navigation style as Gesture navigation or 3-button navigation.
- C. Date & Time:** Automatically update date and time when connected to the internet, or adjust manually.
- D. System Updates**
- E. Reset Options:** Choose to “Reset Wi-Fi, mobile & Bluetooth”, “Reset app preferences”, or “Erase all data (all data will be erased; backup before resetting)”.

14. Device Infos: View detailed information about your player.

Music

Tap the Music icon  on the main interface to enter.

1. You will see the Music categories where you can choose Artists, Albums, Songs, and Playlists.



2. Tap II to play/pause the current track.
3. Tap ◀/▶ to skip to the next/previous song.
4. Press and hold the ◀/▶ to fast forward/Rewind, or drag the progress bar  to quickly move through a track.
5. Tap ≡ to view and manage the currently playing playlist.
6. Tap ✂ to enable or disable random playback.
7. Tap ↺ to switch between repeat all and repeat the current track.
8. Tap ⋮ to access Party Shuffle, Add to Playlist, Delete, Sound Effects (equalizer), or Music Library.

Video

1. Tap the Video icon  on the main interface to enter. Select the video you want to play.
2. Drag the progress bar  to move forward or backward through the video content quickly.
3. Tap the top right corner icon ⋮ for Stop, Loop, or Trim.
4. Tap II to toggle between playing and pausing the video.

FM Radio

1. Connect your wired headphones, and tap the Radio icon  on the main interface to enter.
2. The player will start scanning for available radio stations automatically.
3. Use ◀/▶ to jump to the next or previous station with a clear signal. Use < / > to decrease or increase frequency by 100 KHz.
4. Tap ☆ to save the current station as a favorite.
5. Tap ● to play or pause the radio broadcast.

6. Tap **:** to Start Recording, access Saved Recordings, choose Frequency Region from Europe (CN/UE), Japan, or Japan Wide.
7. Tap the top right corner icon **≡** to Re-scan **all** available stations or Choose from stations previously found.

Sound Recorder

1. Tap the icon **🎤** on the main interface to enter sound recorder function.
2. Tap **●** to begin recording audio.
3. Tap **||** to pause recording.
4. Tap **■** to end the recording, then choose to Discard or Save.
5. Tap **≡** to access and view your Saved Recordings files.

TF Card Instructions

Equipped with a TF card slot, you can put videos, pictures, e-books, and more into the memory card. When using, insert the memory card correctly according to the instructions, and push in until you hear a "click". To remove, push the card into the slot and release it, the memory card will pop out automatically and you can then take it out.

Note:


1. Insert the card properly into the slot to avoid damage.
2. Do not remove the card when operating such as reading, copying, etc., otherwise the data may be in error.
3. Keep the TF card away from high temperature, humidity, liquids, and corrosive materials.

FAQ

▲ The computer does not display the USB symbol when transferring files.

Since the device is 32-bit Android system, the computer cannot display the USB symbol. However, you can open Computer or My Computer in your computer to view the disk name "AGP-T09" and continue the transmission.

▲ The computer reminded that the format is not supported during the transmission of files.



Due to system reason, some formats may cause the computer to pop up format not supported window when transferring files. In fact, they can be supported. When this window pops up, please select [Yes] and Execute the operation on all files. The transmission will continue without appearing this window.

▲ **Navigation bar disappears when opening apps**

1. Check navigation settings: Settings > System > Gestures > Select “3-button navigation”.
2. If settings are correct: Swipe up from the bottom edge of screen to reveal hidden navigation.

▲ **Built-in video player can't open some formats**

Since the built-in video player supports limited formats, you can download a third-party video player or use the preinstalled “KMPlayer” to play videos. Note: RMVB files are unsupported due to copyright restrictions.

▲ **Memory card not recognized/inserted**

1. Format requirement: Only FAT32 format supported (you can check it via computer).
2. Recommended cards: Use genuine Kingston/SanDisk TF cards.
3. Use fingernail or thin tool to fully seat deep card slots.

▲ **How to play music through car audio?**

1. Use 3.5mm audio cable for audio output (not included).
2. Included USB cable only charges/transfer files – no audio output.
3. Avoid pairing with car audio via Bluetooth due to possible compatibility issues.

▲ **Song/Audiobook files mixed up**

Consider renaming files in numeric or alphabetical order.
Example: “0001_SongTitle”, “0002_SongTitle” up to “0999_SongTitle”.

▲ **Music player can't find a Bluetooth device or connects unsuccessfully**

1. Ensure both the music player and the target device have Bluetooth turned on. Then, search and pair them.
2. Check if the target device is already paired elsewhere. If it is, unpair it, then search and pair again.
3. Check if the music player is already connected to multiple devices. If so, delete all pairings and reconnect to the target device.
4. Ensure your headphones or speakers are Bluetooth 2.1 or higher. Sometimes connection issues arise from compatibility problems.

▲ **Frequent disconnection and reconnection after successful Bluetooth connection**

1. First of all, please confirm the use environment of the music player. If it is used in close proximity to other 2.4G signal sources or under obstacles, such as indoor wall penetration, signal base stations, routers, high-speed rail, subway, etc., it will be interfered by the signal and thus cause disconnection, and you can try it in an open place.

2. If the direct distance between the music player and Bluetooth device exceeds 8–10m, or the distance from the back to the obstacle exceeds 4–5m, the connection will be disconnected. Please use the Bluetooth function within the Bluetooth range of the product.

Specifications

Size	12.5*7.03*0.98cm		
Screen	5 inch (1080*1920)		
Weight	About 170g		
Music Format	MP3, FLAC, AAC, WAV, WMA, APE, etc		
Video Format	RM, AVI, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, etc		
Recording Format	WAV		
Picture Format	JPEG, BMP, GIF, PNG		
Ebook	TXT		
Local Playback (WiFi/Bluetooth off, play local files only; medium volume & brightness)	Music (Screen off)	Wired Headphone	About 24H
		Speaker	About 20H
	Video	Wired Headphone	About 7H
		Speaker	About 7H
	FM Radio (Screen off)	Wired Headphone	About 50H
Play Online (WiFi/Bluetooth on; medium volume & brightness)	Music (Screen off)	Wired Headphone	About 20H
		Speaker	About 18H
		Bluetooth	About 17H
	Video	Wired Headphone	About 6H
		Speaker	About 4H
		Bluetooth	About 3.5H
	FM Radio (Screen off)	Wired Headphone	About 40H

RAM	3/4GB (*The actual machine shall prevail)
Built-in Memory	32/64/128GB (*The actual machine shall prevail)
TF Card Expansion	1TB
Bluetooth	V5.0
Compatible System	Android 13
Charging Time	about 2h
Battery	3000mAh
Recommended Charger	5V/1A input
Interface	Type-C
Using Temperature	0-45°C

始める前に

この度は、AGPTEK メディアプレーヤーT09をお買い上げいただき誠にありがとうございます。この取扱説明書では、本製品の使用方法や安全にお取扱いいただくための注意事項を記載しています。ご使用前によくご覧ください。読み終わったあともこの取扱説明書は大切に保管してください。

本取扱説明書の内容は、予告なしに変更になる場合があります。
最新の情報は、商品詳細ページまたは弊社WEBサイト
(<http://www.agptek.com/support/download.html>)をご覧ください

充電方法について

- 同梱のUSBケーブルを使って、起動しているパソコンに接続して充電する。
- 市販の5V/500mAまたは5V/1AのUSB ACアダプターやモバイルバッテリーなどの外部電源を使って充電することもできます。
- ★ はじめてご使用になるときは、30分以上充電してください。

ご注意:

- パソコンやACアダプターで充電中はプレーヤーの操作はできません。
- 充電が充分でないと、パソコンがプレーヤーを認識しないことがあります。
- 電池の劣化を抑えるために、プレーヤーを長期間使わない場合でも、半年から1年ごとに充電するようにしてください。
- 充電時間は電池の使用状態により異なります。

バッテリー充電に関する注意事項

1. 5V/1Aの電源アダプターまたはPCのUSBポートを使用して充電してください。
注: PCによってUSBインターフェースの出力電流が異なり、充電時間が若干異なることがあります。PCのUSBで充電する際は、プレーヤーの電源を切ってから充電すると、充電が早くなります。充電中、充電器やプレーヤーに温度上昇があるのは正常な現象です。
2. 新しいバッテリーは最適な性能を発揮するために、数回の充電と放電が必要です。
3. 通常、プレーヤーは約3時間でフル充電できます。充電後はプラグを抜くことをおすすめします。長時間電源に接続しないでください。
4. プレーヤーのポリマーリチウムバッテリーは繰り返し充電できます。
5. バッテリーは専門家によって交換してください。自分で交換しないでください。

注: バッテリーを誤って交換すると爆発の危険があります。必ず同じ種類または同等のタイプのバッテリーに交換してください。環境保護のため、使用済みのバッテリーは専門の機関でリサイクルしてください。

6. バッテリーの寿命は使用状況や製造時期によって異なる場合があります。
7. バッテリーを直射日光や火の近くに置かないでください。過熱された環境にさらさないでください。

パソコンに接続してオーディオファイルを転送する

Windowsエクスプローラーを使って、ドラッグアンドドロップで直接プレーヤーに音楽コンテンツを転送できます。

Step.1 USB-Cケーブル(同梱)でプレーヤーとパソコンを接続する。

Step.2 パソコンで、[AGP-T09]を開く。

- Windows 10、11:

[スタート]メニューから[エクスプローラー]を開き、左画面から[AGP-T09]を開く。

- Windows 8.1:

[デスクトップ]の[エクスプローラー]を開き、[PC]のリストから[AGP-T09]を開く。

※名前が[AGP-T09]ではない場合もあります。

Step.3 パソコン内のファイルやフォルダーを[AGP-T09]フォルダーにドラッグアンドドロップする。

Step.4 転送が終わったことを確認し、パソコンからプレーヤーを外してください。

★ ご注意:

1. USBケーブルを抜く前に、コンピューターが安全な取り出しを確認するまで待ちます。
2. ファイルの転送中にUSBプラグを切断しないでください。プレーヤーやファイルの故障の原因となる可能性があります。

TFカードについてご注意


- TFカードが認識されない場合は、TFカードを取り出し、再度入れ直してください。
- 大量のコンテンツを保存したTFカードを入れた場合、プレーヤーのデータベース更新に10分以上かかる場合があります。
- プレーヤーの電源を切ってから、TFカードを取り付けることをおすすめします。
- すでにデータが書き込まれているTFカードを初期化すると、そのデータが消去されてしまいます。誤って大切なデータを消去することがないように、ご注意ください。

使用前の重要な注意点

1. ヘッドホンを使用する前に、プレーヤーの音量を下げてから、快適なレベルに徐々に音量を上げてください。高音量は聴力に悪影響を与える可能性があるため、避けてください。長時間の高音量での使用は聴力にダメージを与えることがあります。耳鳴りがした場合は音量を下げるか、使用を中止してください。

2. フォーマットする前に、プレーヤーに保存されている個人データをバックアップすることをおすすめします。
3. 製品を安全な場所に置き、事故や落下を避けてください。
4. 過電圧、電源ケーブルの過度な引っ張り、曲げや重い物による圧迫を避けてください。これにより過熱や火災の原因になることがあります。
5. 製品を電磁環境や湿度の高い場所、煙、その他の過酷な環境にさらさないでください。
6. 製品を水に浸さないでください。また、腐食性や研磨剤を使用して掃除しないでください。
7. 雨や湿気から保護してください。水分が浸入すると故障の原因となり、修理が複雑になることがあります。
8. 製品を過度に力を入れて押さないでください。
9. 激しい振動や衝撃を与えないでください。
10. 運転中、乗車中、機械の操作中、または外の音を注意深く聞く必要がある作業中にヘッドホンを使用しないでください。
11. 自分で製品を修理したり分解したりしないでください。そうしないと、通常のアフターサービスを提供できません。
12. 設定に自動シャットダウン機能があります。この機能を使用するためには、次の条件を満たす必要があります：
 - A. 背景アプリをすべて閉じる。
 - B. デバイスが充電中でないことを確認する。注：自動シャットダウンタイマーは、画面が完全に消灯した後に開始されます。
13. この製品の実際の設定や使用方法がファームウェアのアップグレードによりこのマニュアルと異なる場合は、お問い合わせください。

各部一覽

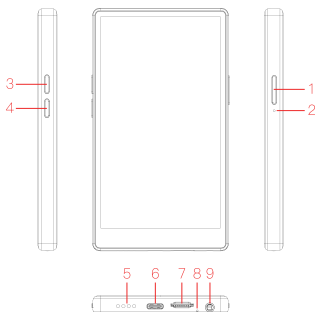

- | | |
|--------------|-----------------|
| 1. 電源オン / オフ | 6. USB Type-C端子 |
| 2. リセットホール | 7. TFカードスロット |
| 3. 音量を上げる | 8. マイクホール |
| 4. 3.5mmジャック | 9. 3.5mmジャック |
| 5. スピーカー | |

基本的な使い方

1. 電源オン:

電源が切れた状態で電源ボタンを5秒以上長押しする。

電源を入れてから「AGPTEK」の動画が終了するまでの間は、タッチパネルの初期設定を行っているため、画面に触れないでください。タッチパネルが正常に動作しなくなる場合があります。

初期状態で、初めて本製品の電源を入れたときは、自動的に初期設定画面が表示されます。

電源オフ: 電源ボタンを3秒以上長押しする。

再起動する: 電源ボタンを長押しする。

2. 画面の基本操作



タップ: 対象を1回タッチします。

例: タップしてアプリを開いたり、選択を確定したりします。



長押し: 対象を2秒以上タッチします。

例: ホーム画面の空白部分を長押しして、ホーム画面の編集モードに入ります。



スワイプ: 画面上で指を滑らせます。

例: 上下左右にスワイプしてファイルをスクロールしたり、別のページに移動したりします。



ドラッグ: 対象を長押しして、画面上で移動します。

例: ホーム画面でウィジェットやアイコンを任意の位置にドラッグして配置します。

3. ホーム画面について

ステータスバー: 特定の機能メニューに入ると、画面上部にステータスバーが表示され、時間、バッテリー残量、Bluetooth、WiFiなどの情報が確認できます。

機能アイコン: ホーム画面には、システムに標準で27個のアイコンがあります。アイコンをタップすると、その機能や設定画面に移動します。

4. 音量調節:

側のボタンで調整: ボタン③を押すと音量が大きくなります。ボタン④を押すと音量が小さくなります。

タッチ調整：音量バーが表示された時、スライダーをドラッグして音量を調整できます。

5.リセット:

プレーヤーがフリーズした場合、細いピンなどで「②Reset」ボタンを押してシステムをリセットし、強制的に再起動できます。

それでも電源が入らない場合は、バッテリー残量を確認してください。

初期設定

初期状態で、初めて本製品の電源を入れたときは、自動的にの初期設定画面が表示されます。画面の指示に従って、各機能の設定を行います。

STEP1: 言語の設定



STEP2: Googleサービスポリシーについて確認



言語を選択→「開始」

「もっと見る」 「同意する」

無線LAN (Wi-Fi) 接続について

ステータスバーを下にスワイプし、通知バー画面を表示→[インターネット]を選択するか、設定から[Wi-Fi]を選びます。

家庭内で構築した無線LAN(Wi-Fi®)環境や、外出先の公衆無線LAN環境を利用して、インターネットサービスに接続できます。

Wi-Fiを利用してインターネットに接続するには、あらかじめ接続するアクセスポイントの登録が必要になります。

Wi-Fiネットワークへの接続

1. Wi-Fiスイッチをオンにすると、システムが検出したWi-Fiネットワークのリストが表示されます。

2. 接続するWi-Fiネットワークをタップします。暗号化されたネットワークの場合は、接続するためにパスワードを入力する必要があります。



ホーム画面で画面を上
にスワイプ/フリック
し、通知画面を表示
→[インターネット]

アクセスポイントを
選択

パスワードを入力
→ 接続

Bluetooth接続について

ステータスバーを下にスワイプし、通知バー画面を表示→[Bluetooth]を選択するか、設定から[Bluetooth]を選びます。

Bluetooth通信技術に対応した機器同士を無線で接続できます。見通しのよい場所なら最長約10mまで離れて通信できます。

たとえば、ヘッドホンやスピーカーなどのBluetoothオーディオ機器とプレーヤーを無線で接続して音楽を聞くことができます。

初回利用の方

Bluetoothオーディオ機器同士を初めてワイヤレス接続するときは、お互いの機器を登録しあう必要があります。このことを「ペアリング」と言います。一度機器登録（ペアリング）すれば、以降は簡単に機器同士を接続できます。

以下では、プレーヤーをBluetoothオーディオ機器と接続するための基本的な手順について説明しています。

Step.1 Bluetoothオーディオ機器のBluetooth機能をオンにする。そしてプレーヤーの隣に置く。

Step.2 「ホームメニュー」→「Bluetooth」→「Bluetoothオン/オフ」→「Bluetoothオン」を選ぶ。

Step.3 「デバイスを検索」を選択して、検索したリストで「相手機器名」→「ペアリング」を選ぶ。

ヒント:

Bluetoothでラジオを聴くには、有線ヘッドホンがラジオアンテナとして必要です。

BTアップグレード機能はメーカー専用であり、ユーザーは利用できません。

Bluetooth接続の使用上のご注意:

- 1) 本製品のBluetoothはカーナビ、スマホやパソコンなどに接続することができません。
- 2) Bluetooth無線技術では約10mまでの距離で接続できますが、障害物（人体、金属、壁など）や電波状態によって接続有効範囲は変動します。
- 3) 人体は電波の吸収性を有するため、衣類のポケットに入れる等、人体と密着させたり、混雑した電車内での使用時に電波の減衰が生じます。Bluetooth接続に障害を起こす場合があります。このような場合、音が途切れたり接続に失敗することがありますが故障ではありません。使用環境を変えてご使用ください。
- 4) プレーヤーはすべてのBluetoothオーディオ機器とのワイヤレス接続を保証するものではありません。機器の特性や仕様によっては、接続できない、操作方法や表示・動作が異なるなどの現象が発生する場合があります。
- 5) 接続する機器によって、Bluetooth接続ができるようになるまで時間がかかることがあります。
- 6) スマホや他のBluetooth機能のある機器のBluetooth機能をオフすると、干渉を減少し、デバイスの検索はしやすくなります。

ホーム画面と表示

ホーム画面の各部:

表示エリア:

アプリのアイコン、デスクトップファイル、ウィジェットが配置されます。

ドックバー:


スクロールしても位置が固定されているアイコンです。よく使うアプリを配置します。

ステータスバー:

通知と状態アイコンが表示されます。

ナビゲーションバー:

ホーム画面や他の操作を管理します。

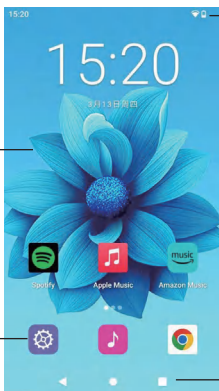

- ◀ 「戻る」ボタン: ひとつ前の画面や Web ページなどに戻れます。
- 「ホーム」ボタン: ホーム画面以外の画面からホーム画面へジャンプします。また、長押しすると Google アシスタントを起動できます。(先に Google アシスタントを有効に設定が必要)
- 「アプリ履歴」ボタン: 開いているアプリの一覧を表示できます。アプリの切り替えや、起動中のアプリを終了させるなどの操作が可能です。

ナビゲーションバーの設定方法:

「設定」 「システム」 「ジェスチャー」 「システムナビゲーション」で変えます。

ジェスチャーナビゲーションでは、ディスプレイ下部の中央に白く細長いラインが表示されるだけで、「戻る」ボタンなどが表示されません。

その代わり、スワイプ操作という「ジェスチャー」をすることで、同じ効果を持つ操作が可能です。
ジェスチャーナビゲーションモードで、を開くと、感度を設定できます。
3ボタンナビゲーションモードで、を開くと、アシスタントの起動を無効に設定できます。

ロック画面について

画面を点灯するとロック画面が表示されます。

- 「」が表示されている場合は、画面を上にはスワイプすると画面ロックを解除できます。
- 「」が表示されている場合は、画面を上にはスワイプして「画面ロック」で設定したパスワードなどを入力します。

プライベート情報を守るために、画面にロックパターンやパスワードを設定できます。

設定を開きます。

「セキュリティ」>「画面ロック」を選択します。

画面をロック解除するために、スライド、パターン、またはパスワードを選びます。

注：パスワードを忘れた場合や間違えて入力した場合は、共通のパスワード「1235789」で簡単にロック解除できます。

スクリーンショット

方法1：電源ボタンと音量－ボタンを同時に押すとスクリーンショットが撮れます。

方法2：電源ボタンを長押しすると、「画面の保存」をタップしてスクリーンショットが撮れます。

方法3：通知バーを下にはスワイプし、「スクリーンショット」のオプションをタップするとスクリーンショットが撮れます。

通知画面と表示

ステータスバー部分を下にスワイプして出てくる画面が通知画面です。



ステータスバーを使うと、デバイスの通知や動作状態をリアルタイムで確認できます。通知があるときは、スクリーンを点灯させ、ステータスバーを下にスワイプすると、さまざまなメッセージが確認できます。

もう一度下にスワイプしてクイック設定パネルになります。



画面の明るさ、インターネット、Bluetooth、バッテリーセーバー、自動回転、スクリーンショット、スクリーン録画、サイレントモード、アラーム、キャスト、カラー補正、アイケアモード、色反転、夜間モード、ダークモードなどを素早く設定できます。

システム機能と設定

設定画面

- ①ホーム画面で  アイコンをタップして開きます。
- ②他の画面でクイック設定パネルで右下隅の  アイコンをタップして開きます

Wi-Fi: Wi-Fiをオンにすると、接続可能なネットワークを自動的に検索します。

Bluetooth: Bluetoothをオンにして「新しいデバイスを検索」をタップすると、接続可能なBluetoothデバイスが表示されます。BluetoothスピーカーやBluetoothイヤホンのみサポート。

メモリ: デバイスの使用メモリを確認できます。

アプリ: 最近使用したアプリを確認したり、通知権限を管理できます。

バッテリー: スマート省電力モードを設定したり、バッテリーの使用状況を確認できます。

ストレージ: 使用中のストレージやアプリの占有状況を確認できます。

着信音とバイブレーション: メディア、アラーム、通知の音量を調整し、スクリーンロック、充電、タッチ音などの機能音を設定できます。

ディスプレイ: 画面の明るさ、ロック画面、スリープ時間、ダークテーマ、表示サイズ、文字サイズ、アイケアモード、画面回転、壁紙、スクリーンセーバーなどを設定できます。

セキュリティ: 画面のロックやデータ保護の設定ができます。

Google: Googleアカウントでログインして、バックアップ、ペアレンタルコントロール、デバイスの検索、共有などの機能を使用できます。

省エネシャットダウン: 5分、10分、15分、20分、30分、60分、または「永遠にシャットダウンしない」を選択できます。

定時電源オン/オフ: 定時で電源のオン/オフを設定できます。

システム:

言語と入力: 言語を追加して、システムを希望の言語に変更できます。

ジェスチャー: ナビゲーション方法（ジェスチャーナビゲーション、三つのボタンナビゲーション）を設定できます。

日付と時間: ネットワーク接続後、日付と時間が自動的に更新されます。また、手動で設定も可能です。

システム更新

リセットオプション: 「Wi-FiとBluetooth設定のリセット」、「アプリの設定リセット」、「すべてのデータの消去（工場出荷時設定に戻すとすべてのデータが消去されるので、リセット前にバックアップしてください）」が選べます。


デバイス情報: プレーヤーの詳細情報を確認できます。

音楽

ホーム画面で  アイコンをタップして入ります。



画面上で、メニューがあります。音楽分類の選択：アーティスト、アルバム、曲、プレイリストなど、必要な分類を選択します。

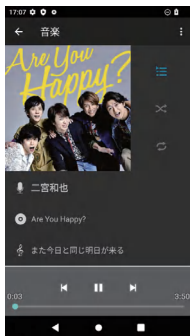

音楽再生画面で

再生/一時停止：音楽を再生または一時停止するには、II をタップします。

次/前の曲に切り替え：次の曲または前の曲に切り替えるには、⏮/⏭ をタップして操作します。

早送り/巻き戻し：早送りまたは巻き戻しには、⏮/⏭ を長押しするか、進行バーを長押ししてスライドします。

☰ をタップして再生中の曲を確認し、プレイリストに移動します。

⌘ をタップしてシャッフル再生を設定します。

🔄 をタップして全曲リピートまたは単曲リピートを設定します。

⋮ をタップしてシャッフル再生、プレイリストへの追加、削除、エフェクト（イコライザー設定）などを行えます。

動画

ホーム画面で アイコンをタップして入ります。

再生するビデオを選択します。

再生中、進行バーをスライドさせて早送りや巻き戻しができます。

画面右上で ⋮ をタップしてサブメニューに入って、停止、ループ再生、トリミングなどのオプションを選べます。

II をタップして再生/一時停止ができます。

FMラジオ

ご注意：FM機能をご使用前に、有線耳机をアンテナとして接続してください。

ホーム画面で アイコンをタップして入ります。プレーヤーが自動的に放送局を検索します。

⏮/⏭ をタップして登録された前後のチャンネルに移動します。

</> をタップして0.1MHzごとに送られます。お聞きになりたい放送局の周波数に合わせます。

- ☆ をタップして今流している放送局を登録します。
- をタップして一時停止できます。
- ⋮ をタップして「FM録音」また「FM地域設定」があります。
- ≡ をタップして放送局の再検索または検索済み局を選択できます

録音

ホーム画面で  アイコンをタップして入ります。

- をタップして録音を開始する。
- || をタップして録音を一時停止する
- をタップして録音を終了し、保存または放棄を選択する。
- ≡ をタップして保存された録音ファイルを表示する。


よくある質問

Q1 伝送中にPCがUSBアイコンを表示しない?

このデバイスは32ビットのAndroidシステムを使用しているため、PCではUSBアイコンが表示されません。しかし、PCの「コンピュータ」または「マイコンピュータ」でディスク名「AGP-T09」を確認し、ファイル転送を続行できます。

Q2 伝送中にPCが「フォーマットがサポートされていない」と表示

システムによって特定のフォーマットではファイル転送中に「フォーマットがサポートされていません」と表示されることがありますが、実際にはサポートされています。このウィンドウが表示されたら、「はい」を選択し、「すべてのファイルに対して実行」を選ぶと、転送が続行されます。



Q3 戻るボタンがない?

ナビゲーションバーが消える場合、設定で隠しナビゲーションバーが有効になっている可能性があります。設定 > システム > ジェスチャー > 「3ボタンナビゲーション」を選択して確認してください。設定が正しい場合は、画面下部からスワイプアップして隠れたナビゲーションバーを表示できます。

Q4 内蔵の動画再生アプリで一部の動画フォーマットが再生できない

内蔵の動画再生アプリが対応できるフォーマットが限られているため、サードパーティの動画プレーヤーをダウンロードするか、内蔵のサードパーティオフライン動画プレーヤー「KMPlayer」を使用してください。また、RMVB形式のファイルは著作権保護のためサポートされていません。

Q5 TFカードを認識しない/挿入できない

音楽プレーヤーは「FAT 32」形式のTFカードのみサポートしています。PCでTFカードの形式を確認してください。

おすすめカード：正規のKingstonまたはSanDisk製のTFカードを使用してください。

一部の音楽プレーヤーはカードスロットが深いため、爪や薄い工具を使ってTFカードを完全に挿入してください。

Q6 車載オーディオで音楽プレーヤーの音楽を再生する方法

1. 3.5mmオーディオライン（含まれていません）を使って音楽を送送することをおすすめします。

*プレーヤーに付属のUSBケーブルは充電とデータ転送のみ対応で、オーディオ機能はありません。

2. Bluetooth接続について、カーオーディオのシステムによって接続できない可能性があります。（カーオーディオがBluetooth発信デバイスなら接続できません）おすすめしません。

Q7 曲ファイルとオーディオブックのファイルが混乱する

ファイル名を数字やアルファベット順でリネームすることをお勧めします。例えば、1000曲の音楽ファイルは「0001_曲名」から「0999_曲名」と順番に名前を付けると良いでしょう。

Q8 音楽プレーヤーがBluetoothデバイスを認識しない/接続できない

1. デバイスとプレーヤー両方を再起動してください。再起動を行っても問題が解決しない場合は、次の手順に進みます。

2. プレーヤーとBluetooth機器のBluetoothが有効になっているかを確認してください。有効した上で、もう一度Bluetooth機器がプレーヤーに認識できるかを確認します。

3. Bluetooth機器がペアリング済み状態になっているかチェックする。以前にペアリングしたBluetoothデバイスを切断してから、再度検索とペアリングを行ってください。

4. 複数のデバイスに接続されている場合は、MP3プレーヤーのペアリングリストからすべてのBluetoothデバイスを削除してください。必要に応じて再接続してください。

5. 接続するBluetooth機器が有効接続範囲にあるか確認してください。

6. Bluetoothヘッドフォンやスピーカーが4.0以上のバージョンを持っているか確認してください。互換性がないと、デバイスの発見に失敗する可能性があります。

7. ヘッドセットを充電ケースにセットし、ふたを一度閉めてから再度ふたを開けてください。充電ケースにセットすることで問題が解決することがあります。

8. ヘッドセットをリセットしてください。

9. ヘッドセットを初期化し、もう一度ペアリングをしてください

Q9 Bluetooth接続後に頻繁に切断される。

1. 使用環境で、近くの2.4GHzの源や障害物（室内の壁、基地局、ル

ーター、高速列車、地下鉄など）からの干渉がないか確認してください。開放的な場所でBluetoothを使用してみてください。

- Bluetooth接続が途切れないように、8-10メートル以内の距離を保ってください。障害物がある場合は、最大4-5メートル以内にしてください。製品の指定された範囲内でBluetooth機能を使用してください。

主な仕様

サイズ	12.5*7.03*0.98cm		
スクリーン	5インチ TFT （解像度：1080*1920）		
重さ	約170g		
音楽フォーマット	MP3/APE/FLAC/WMA/WAV/AAC/DRMなど		
Bluetoothフォーマット	MP3/APE/FLAC/WMA/WAV/AAC/DRM/ACELP		
画像フォーマット	JPEG、BMP、GIF、PNG		
動画フォーマット	RM、AVI、RMVB、FLV、MP4、DAT、MKV、MPG、MOVなど		
電子ブック	TXT		
ファイル再生時間 (WiFi/Bluetooth オフ; ファイル再生のみ; ちょうどよい音量と 明るさ)	音楽 (スクリーンオフ)	有線イヤホン	約 24H
		スピーカー	約 20H
	動画	有線イヤホン	約 7H
		スピーカー	約 7H
	FM ラジオ (スクリーンオフ)	有線イヤホン	約 50H
Online再生 (WiFi/Bluetoothオン; ちょうどよい音量と 明るさ)	音楽 (スクリーンオフ)	有線イヤホン	約 20H
		スピーカー	約 18H
		Bluetooth	約 17H
	動画	有線イヤホン	約 6H
		スピーカー	約 4H
		Bluetooth	約 3.5H
	FM ラジオ (スクリーンオフ)	有線イヤホン	約 40H

RAM	3/4GB
ストレージ	32/64/128GB
TFカード拡張	1TBまで (別売り)
Bluetoothバージョン	V5.0
システムバージョン	Android 13
充電時間	約2時間 (5V/1A)
バッテリー	3000mAh
USB端子	Type-C
おすすめ環境温度	0-45℃

保証について

本商品は購入日から6ヶ月の品質保証が付いておりますので、商品の欠陥や不良など当社原因による場合には、返品・交換を受け付けさせていただきます。

AGPTEKブランド会員を対象に12ヶ月保証へ自動延長します。（楽天でご購入する方は販売店の保証ポリシーに適用するため、ご購入先までお問い合わせしてください。）

ブランド会員を初回登録する方は、ご購入する注文番号をメールアドレスにご連絡してください。

お問い合わせのご案内

本機についてご不明な点や技術的なご質問、故障と思われるときのご相談については、下記のお問い合わせ先をご利用ください。

メールアドレス: dreameaterjp@163.com

お問い合わせの際は、次のことをお知らせください。

- ご購入する注文番号（アマゾン/楽天）
- ご相談内容：できるだけ詳しく
- 接続にお使いの機器の情報（機器メーカー名、型名）
- 不具合状態での写真あるいは動画

質問の内容によっては、お客様のシステム環境についてご質問させていただきます場合があります。上記内容に加えて、システム環境を事前にわかる範囲でご確認いただき、お知らせください。

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



FCC ID: 2A48J-T07

Manufacturer:

AGPTEK

Address:

7706 18TH AVE, BROOKLYN, NY, 11214



FR

Cet appareil,
ses accessoires
et ses piles se
recyclent.

À DÉPOSER
EN MAGASIN À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr



LE TRI
+ FACILE



BARQUETTE

ÉTUI



BAC
DE
TRI



FR

Vous êtes responsable de remettre tous les appareils
électroniques et électroniques usagés à des points de
collecte correspondants.
Pour en savoir plus: www.quefairedemesdechets.fr



® 219-229170



Made In China