Cover

75mm

140mm

正

反

eTOE | Google TV

T2 Stick



Hey Google

OK Google

Quick Reference Guide

Please read the user manual before operating the T2 stick

Accessory List

Please open the package and check the following accessories:


T2 Stick x1



Remote Control x1


User Manual x1



Power Cable x1

HDMI Extension Cable x1

Hardware Structure

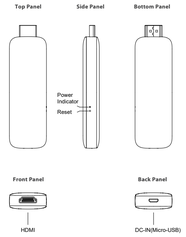

Remote Control

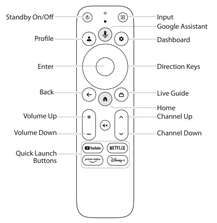

Instructions

- **Indicator Light:** Pressed any keys and indicator light flashes and the indicator will flashes quickly when the voltage is low.
- **Bluetooth Pairing:** Pressed the " ⌂ + ↩ "keys together on your Remote Control for 10 seconds.
- **Google assistant:** Press the Google Assistant button and use your voice to search what's on now, change channels, control your TV, open apps, and more.

*Note: The pictures are only for reference.

Google TV is the name of this device's software experience and a trademark of Google LLC. Google and YouTube are trademarks of Google LLC.


Netflix is a trademark of Netflix, Inc.

All brands contained herein are trademarks of their respective owners.

System Connection

Please refer to the below instructions to connect TV, Power, Network and other devices.

Note: Please turn off all equipment before connecting.

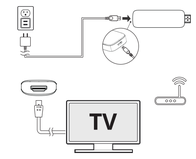

Step1: Connection with Power
Connect one end of the USB cable to your 2K Stick and the other end to a 5V ⎓1A power adapter.

Step2: Connection with TV
Plug your 2K Stick into the HDMI port on your TV and then plug the power adapter into a nearby electrical socket.

Note: If you have trouble fitting your 2K Stick into an HDMI port on your TV, you can use the included HDMI Extension Cable.

Step3: Set up your device
Turn on your TV and follow the on-screen to set up your device.

Troubleshooting

- **No display after power on?**
 Confirm your device and TV are powered and turned on.
 Confirm your HDMI is plugged in and the TV is set to the correct HDMI input.
- **TV has images but no sound?**
 Make sure your TV is not in mute and volume up; then enter your A/V setting menu and select the appropriate sound channel and language .
- **Fail to connect to the network?**
 Make sure your Wi-Fi is functional and your box has a strong enough signal from your router.
- **Remote Control Failure?**
 Replace your Remote Control batteries with new ones, then repair it by holding the reset key on the side of the device for more than 3 seconds.
- **Please use our accessories to avoid any risk.**

Safety Instructions

WARNING!

- Presence of live parts inside the device! Do not open. Risk of electric shock !
- No parts should be repaired by users.
- Place the device in a well-ventilated location to prevent the accumulation of internal heat.
- Protect the device from high temperatures, humidity, water and dust.
- Do not place any objects near your device that may damage it (e.g. liquid-filled objects or candles).
- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cd, ni-mh, etc.) batteries.
- Operating Temperature: 0°C~40°C.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
(Example: use only shielded interface cables when connecting to computer or peripheral devices).
This equipment complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:
The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with ***minimum distance 20 cm*** between the radiator and your body.

eTOE
EXPLORE INFINITE ENTERTAINMENT

Product Name: ETOE T2 Stick
Model: D2861

© **HUNAN ETOE Technology Limited.**
All rights reserved. ETOE and the ETOE logo are trademarks of Hunan ETOE Technology Limited, which is registered in the United States and other countries. **All** other trademarks are the property of the irrespective owners.

Manufacturer: HUNAN ETOE Technology Co., Ltd
Address: Room 2003-2, Junda Building, 1599 Fenglin 3rd Road, Lufeng Street, Xiangjiang District, Hunan.
E-mail: support@etoeofficial.com

Made in China

FC CE

eTOE | Google TV

T2 Stick



OK Google

取扱説明書

安全上のご注意

警告

●装置内部に通電部品があります。絶対に分解しないでください。感電の危険があります。

●お客様による修理、内部部品の交換は絶対にしないでください。

●内部の熱がこもらないように風通しのいい場所で使用してください。

●本製品を高温になるところや、湿気やほこりの多いところ、油煙や湯気が当たるところに置かないでください。

●ろうそくなど、炎が出るものを近くに置かないでください。

●リモコンの電池の注意事項
・古い電池と新しい電池を混ぜないでください。
・乾電池は正しい方向に入れてください。
・異なる種類の電池（アルカリ電池とニッケル水素電池など）を混ぜて使用しないでください。

●使用温度範囲：0℃ ～ 40℃

同 梱 物



※リモコンをご利用の場合、単４形電池（市販品）が２本必要です。

システムの初期設定

1. リモコンのペアリング
 電源を投入して初期設定画面に入ったら「Pair you remote」と表示されます。LED 指示ライトが緑になるまで ⏎ + Ⓐ を同時に５秒以上押します。

2. 言語と地域を設定
 「Welcome」が表示されたら、利用したい言語を選択してください（日本語は一番下にあります）

3. インターネットの接続
 「Wi-Fi ネットワークの選択」が表示されたら利用したい SSID を選択し、パスワードを入力してください。

4. Google のユーザー登録
 「Google ようこそ」が表示されたら、お客様のユーザー情報を入力してください。
 Google アカウントがない場合は表示の手順に従ってアカウントの新規登録を行ってください。
 Google アカウントにログインしたら利用規約や Google サービスなどの案内が表示されます。内容を確認して「同意する」を選択してください。


5. リモコン音量の調整
 「リモコンを使った音量や電源の操作」が表示されたら、好みの内容を選択してください。

6. 利用するアプリを選択
 「サービスの選択」が表示されたら、お客様が利用したいアプリを選択し、確認ボタンを押してください。
 選択せずにスキップすることも可能です。アプリをダウンロードする場合は時間がかかりますので、しばらくお待ちください。

7. 設定完了
 GoogleTV のホーム画面が表示されたらセットアップ完了となります。

※初期設定の設定手順は予告なく変更される場合があります。

T2Stick 本体

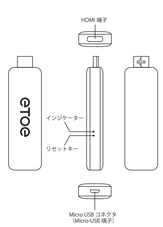

※地域の設定により見れない場合があります。


注意：

・電圧が低い場合はインジケーターが高速で点滅します。

・Bluetooth のペアリングを行う場合は、ペアリング設定の表示が出ている間にリモコンの「戻るボタン」と「ホームボタン」を同時に５秒間押し続けてください。

・Google アシスタントボタンを押すことで、音声を使用して現在放送中の番組を検索したり、チャンネルを変更したり、テレビを操作したり、アプリを開くことができます。


リモコン

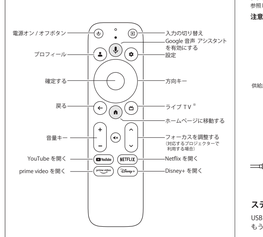


接続手順

テレビやプロジェクターなどの外部機器に接続するには、以下の手順を参照してください。

注意：接続する前にすべての機器の電源をオフにしてください。

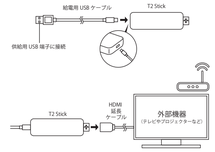

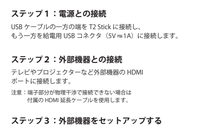

ステップ１：電源との接続
USB ケーブルの一方の端を T2 Stick に接続し、
もう一方を給電用 USB コネクタ（5V ⎓1A）に接続します。

ステップ２：外部機器との接続
テレビやプロジェクターなど外部機器の HDMI ポートに接続します。
注意：端子部分が物理干渉で接続できない場合は付属の HDMI 延長ケーブルを使用します。

ステップ３：外部機器をセットアップする
外部機器の電源を入れ、画面の指示に従って初期セットアップをします。

トラブルシューティング

●電源を入れても何も表示されない
T2 Stick と外部機器の電源がオンになっていることを確認します。
HDMI が接続され、外部機器が正しい HDMI 入力に設定されていることを確認します。

●映像は出るが音がでない
外部機器がミュートになっていないことを確認し、音量を上げてから AV 設定メニューに入り、適切なサウンドチャンネルと言語を設定します。

●ネットワークに接続できない
Wi-Fi が接続されていて、ルーターからの信号が十分に強いことを確認してください。

●リモコンの反応がない
リモコンの電池を新しいものに交換し、T2 Stick の側面にあるリセットキーを３秒以上押して修復します。

●映像がスムーズに表示されない
ストレージの空き容量が少なくなると動画がスムーズに表示されない場合があります。使用していないアプリを削除して空き領域を確保してください。

●トラブルを防ぐため、付属品のケーブルをご利用ください。

●本製品はサウンド拡張技術「Dolby」および「DTS」には対応しておりません。

製品にプリインストールされていないアプリケーション・ソフトウェアに関する動作保証はいたしません。


Google TV は、このデバイスのソフトウェアエクスペリエンスの名称であり、Google LLC の商標です。YouTube は、Google LLC の商標です。Google、Google Home、Google Chrome、Google Cast、および上記その他のマークは Google LLC の商標です。

Netflix は、Netflix Inc. の商標です。

HDMI、HDMI High-Definition Multimedia Interface、HDMI のトレードドレスおよび HDMI ロゴ ℠は、HDMI Licensing Administrator, Inc. の商標または登録商標です。

ここに含まれるすべてのブランドは、それぞれの所有者の商標です。

折页方式

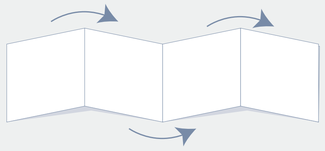

折叠方式示意图

技术要求：

1）尺寸公差±2mm
2）颜色△E<2
3）环保要求RoHS、Reach

	孙景 首发	2024-11-29
	DESCRIPTION 备注说明	DATE 日期
历史修订版本记录		
华曦达科技股份有限公司		
资料名称：DV6131K-Manual		单位:mm
物料编号：-	工艺描述汇总：	
设计：	说明书,100x140mm,80g书写纸,折页	
校对：		
审核：		
会签：	Size / Scale / Rev	
批准：	A1 / 1:1	