蓝牙音频适配器

用户手册

使用前请仔细阅读本手册

1

使用说明书

蓝牙音频适配器

基本参数

产品名称：蓝牙音频适配器

型号：JS4

音频解码：SBC

支持协议：HSP、HFP、A2DP、AVRCP

传输范围：≤10m

产品输入：5V/1A

输入接口：AUX

产品尺寸：114.5mm*51mm*14.6mm

产品材质：ABS

2

包装清单

功能键说明

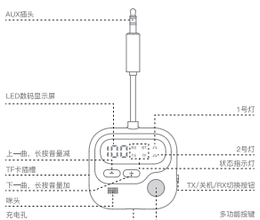

3

配对操作

TX模式(蓝牙发射模式)

1.首先将适配器插入到您需要连接的娱乐设备的耳机插孔；

2.将模式按钮推到TX，TX灯常亮，1号灯、2号灯闪烁；

3.打开蓝牙设备，调整到蓝牙配对模式；

4.双击多功能键搜索蓝牙，1号灯2号灯闪烁，连接成功后，1号灯常亮，双击搜索第二个设备，2号灯闪烁，第二个设备连接成功后2号灯常亮，再次双击断开蓝牙。

（首次连接可能需要等待数秒，连接成功后下次连接时自动连接。）

5.长按多功能键可切换AUX和TF卡模式

注：

如果配对失败，则可以关闭电源，然后重新启动蓝牙适配器和蓝牙耳机/蓝牙扬声器，重复上述步骤，然后尝试几次；

如果您在电视上使用该产品，请确认哪个RCA接口是音频输出端口。设备需要连接RCA或3.5mm音频输出端口，而不是音频输入端口。

4

RX模式(蓝牙接收模式)

1.首先将适配器插入扬声器的AUX-IN端口；

2.将模式按钮推到RX，RX灯常亮，1号灯、2号灯闪烁；

3.适配器等待配对时，打开手机蓝牙设置，搜索“JS4”，选择配对；

4.第一个手机连接成功后，1号灯常亮，第二部手机连接成功后2号灯常亮。连接成功即可使用适配器进行无线播放音乐。

（首次连接可能需要等待数秒，连接成功后下次连接时自动连接。）

5.长按多功能键切换蓝牙和TF卡；

6.TF卡模式时，TF卡灯常亮，BT/1号灯/2号灯熄灭；

7.您的手机第一次配对成功，下次开机时会自动重新连接您的手机。

5

常用操作说明

1.开机/关机

调到OFF关机，
调到TX/RX开机

2.音乐状态功能定义

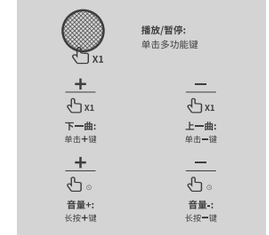

6

3.通话状态功能定义

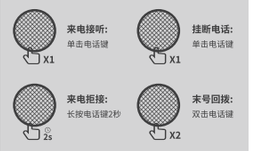

安全准则

1.请遵循本说明书的使用说明，勿以任何理由拆卸或改装设备，否则可能导致适配器发生故障或烧毁；

2.请勿将产品浸入任何液体或用水冲洗产品；

3.请使用符合国家/地区安全性标准的充电线给适配器充电，否则容易造成适配器电池损坏或发生危险；

4.请在常温环境中使用和存放本产品，勿将设备置于温度过低或过高的环境中；

5.请勿在雷暴天气下使用设备，雷暴可以导致设备工作不正常，信号中断等现象。

7

保修卡

用户姓名：_____

用户电话：_____

用户地址(含邮编)：_____

购机日期：_____

发票编号：_____

销售单位名称：_____

销售单位地址(含邮编)：_____

销售单位电话：_____

保修服务：_____

A.在正常使用本产品过程中,如果本产品出现非人为损坏的性能故障，自购买之日起,消费者享受免费保修服务。保修期为12个月。

B.有下列情况之一,消费者不能享受免费保修权益：

* 人为损坏；
* 超过保修期；
* 不能提供有效的购买凭证；
* 未按说明书要求使用、维护、保养而造成产品损坏；
* 未经授权擅自拆卸、维修产品或产品漫水；
* 其他不可抗力造成的损坏。

Wireless audio adapter

User's manual

Please read this manual carefully before use

1

operation instructions

Wireless audio adapter

Basic parameters

Name: Wireless Audio Adapter

Model: JS4

Audio decoding: SBC

Supported protocols: HSP, HFP, A2DP, AVRCP

Transmission range: ≤ 10m

Product input: 5V/1A

Input port: AUX

Product size:114.5mm*51mm*14.6mm

Product material: ABS

2

packing list

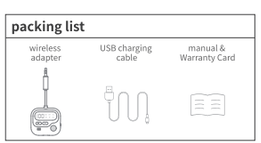

Product diagram

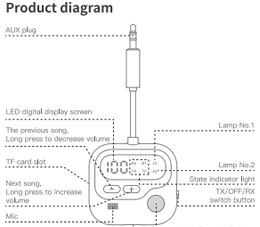

3

Pairing operation

TX Mode (wireless transmit mode)

1.Firstly, insert the adapter into the headphone jack of the entertainment device you need to connect to;

2. Push the mode button to TX, where the TX light stays on and the 1st and 2nd lights flash;

3. Turn on the wireless device and adjust it to wireless pairing mode;

4. Double click the multifunction key to search for wireless, and the first and second lights will flash. After successful connection, the first light will remain on. Double click to search for the second device, and the second light will flash. After successful connection of the second device, the second light will remain on. Double click again to disconnect wireless.

(The first connection may take a few seconds, and it will automatically connect the next time the connection is successful.)

5. Long press the multifunction key to switch between AUX and TF card modes

Note:

If pairing fails, you can turn off the power and then restart the wireless adapter and wireless headphones/Wireless speaker, repeat the above steps, and then try several times; If you are using this product on a TV, please confirm which RCA connector is the audio output port. The device needs to be connected to an RCA or 3.5mm audio output port instead of an audio input port.

4

RX Mode (wireless receive mode)

1.Firstly, insert the adapter into the AUX-IN port of the speaker;

2. Push the mode button to RX, the RX light stays on, and lights 1 and 2 flash;

3.When the adapter is waiting for pairing, open the wireless settings on the phone, search for "JS4", and select pairing;

4.After the first phone is successfully connected, the first light stays on, and after the second phone is successfully connected, the second light stays on. Once the connection is successful, you can use the adapter to play music wirelessly.

(The first connection may take a few seconds, and it will automatically connect the next time the connection is successful.)

5. Long press the multifunction key to switch between wireless and TF cards;

6.When in TF card mode, the TF card light is always on, and the BT/1/2 lights are off;

7. Your phone was successfully paired for the first time and will automatically reconnect to your phone the next time it is turned on.

5

Operation instructions

1.Turn on/off

Switch the button to OFF to turn off
Switch the button to TX/RX to turn on

2. Music Function

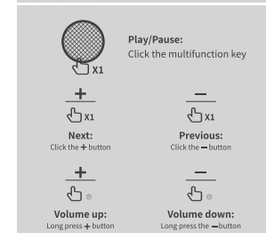

6

3.Call Function

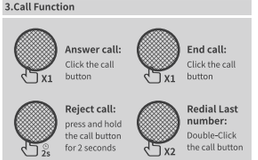

Safety Criterion

1. Please follow the instructions in this manual and do not disassemble or modify the equipment for any reason, otherwise it may cause the adapter to malfunction Malfunctioning or burning;
2. Do not immerse the product in any liquid or rinse the product with water;
3. Please use a charging cable that meets national/regional safety standards to charge the adapter, otherwise it may cause damage to the adapter battery Damage or danger;
4. Please use and store this product in a room temperature environment, and do not place the equipment in an environment with low or high temperatures;
5. Do not use the equipment in thunderstorm weather, as thunderstorms can cause abnormal operation of the equipment, signal interruption, and other phenomena.

7

Warranty card

User Name:_____

User Tel:_____

User address (with postcode):_____

Purchase of date :_____

Invoice NO.:_____

Dealer Name:_____

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

说明书尺寸：45x65mm 正反双面折页