


Smart watch

User Manual

TECHNOLOGY INSPIRES LIFE

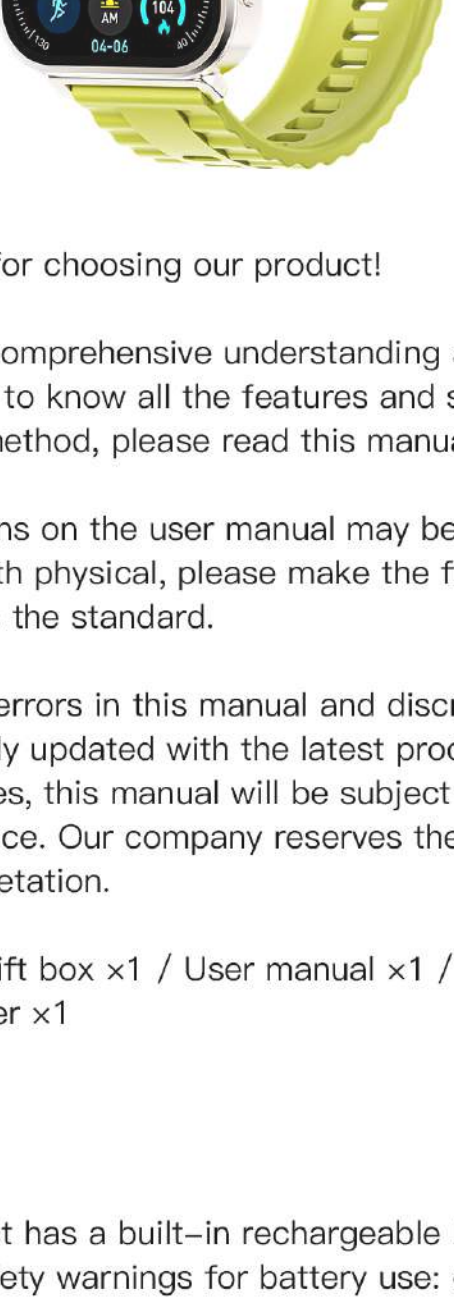

Thank you for choosing our product!

To have a comprehensive understanding and using this device, to know all the features and simple operation method, please read this manual first.

The functions on the user manual may be little different with physical, please make the final products as the standard.

The typing errors in this manual and discrepancies will be timely updated with the latest products. If we have updates, this manual will be subject to change without notice. Our company reserves the right of final interpretation.

Package: Gift box x1 / User manual x1 / Device unit x1 / Charger x1

Remark

This product has a built-in rechargeable lithium battery. Safety warnings for battery use: do not disassemble, strike, squeeze or put into fire; if it is severely swollen, do not continue to use it; do not place it in a high temperature environment; do not use the battery after it is immersed in water.

Do not use it when have a hot shower/bath or sauna, the vapors will get into the watch, scratch damage of peripheral components. All these are beyond the scope of the warranty.

This product is not a medical device. The health data and suggestions provided are for reference only, not as a basis for diagnosis and treatment.

Message settings


In App — Device — Notifications, select the corresponding Apps, turn ON the switch.

What if I don't get the notice?

1. The watch's notification only synchronous phone notifications from notification center, such as incoming calls, SMS, WhatsApp, WeChat etc., if the phone doesn't receive notifications in notification center, then the watch cannot receive them either, it must set as phone able to receive notifications of the corresponding Apps, turn ON the notification permission in phone setting.
2. Enter the APP to unbind the watch. After unbinding, enter the mobile phone's Bluetooth device to see if connected the device "Fit 4 Pro", please cancel the pairing if have, turn off the your phone Bluetooth, then turn it on again to connect.

Connection

Watch connects to Phone, download the App in the Phone at very first, reference following methods.

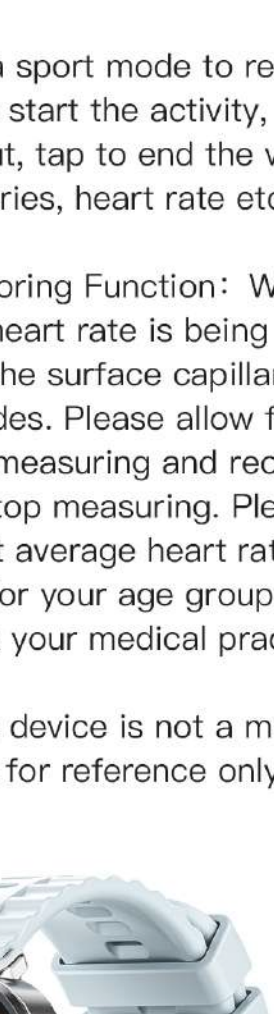

Android/iOS Phone: Scan aboveing QR code image by browsers or by any Scanner to Download.

After installation, turn on phone Bluetooth and go to App, confirm the notifications and all others permission App asks are enabled, and fill up personal information. Tap "Add device", search "Fit 4 Pro" device (turn on the GPS in the smart phone before binding) and tap connect.

3. If all above 2 steps cannot solve the notification issue, uninstall the App and download it again. Remember agree all permissions App asks when the installation done and very beginning turn the App on, and then reconnect again.

Firmware upgrade

As Bluetooth connected, in App, Tap "Device— "Firmware version"— it will remind you if there's a new version available for update. During the updating, it will show a process bar, wait it until complete. Watch will restart and reconnect the phone App. Do not operate the watch during the update. It takes 3-5 mins.



Charging instructions:

Charging instruction: This product adopts a wireless charger that supports portable phone chargers within 5V and computer USB port. Put the watch on the charging puck and it will automatically charge. A full charge takes about 3-4 hours.

Main Features

Phone connect watch audio: Enter the status bar on the standby interface, click the Bluetooth icon to turn it off, and then click to turn it on.

Phonebook: After connected to the phone App, you can add 500 frequently used contacts to the watch phonebook from the App.

Language/Time/Date: Synchronizing of language/date/time between the mobile phone and the Smart Watch after being connected.

Standby watch faces: There are couples of watches faces for options, long press 3 seconds at home screen to switch different watch faces; also allows download new watch faces in the App; it is able to customize your photos as watch face background.

Sleep monitor: Sleep monitoring will be automatically activated from 10:00 pm to 8:00 am the next day. You can check the details of sleep quality with the app in the phone.

Notifications: Synchronizing and display of app notifications such as Facebook, WhatsApp, SMS, Email etc., between the mobile phone and the Smart Watch. Up to 8 notifications can be displayed on the watch. Please adjust the settings in the MActive Pro app and allow notifications to be displayed (app permissions). It is able to decline incoming calls via watch.


Stopwatch Function: Press the start and pause, again press for stop.

Activity info: Showing the workout and health data including Steps, Distance, Calorie's consumption. This data will be saved until midnight (12:00 am) every day and then reset to 0 values for coming day. You can look up previous data in History.

Exercise: Select a sport mode to record your workout. Enter to start the activity, slide right to pause the workout, tap to end the workout. It records the duration, calories, heart rate etc.

Heart Rate Monitoring Function: When this function is activated, the heart rate is being measured by the device scanning the surface capillary of the skin with green optical diodes. Please allow for about 2 seconds to start measuring and recording. Slide to other menus to stop measuring. Please refer to information about average heart rate, heart rate while exercising for a age group and gender online and/or ask your medical practitioner for advice.

[Please note: The device is not a medical device. Any values shown are for reference only.]

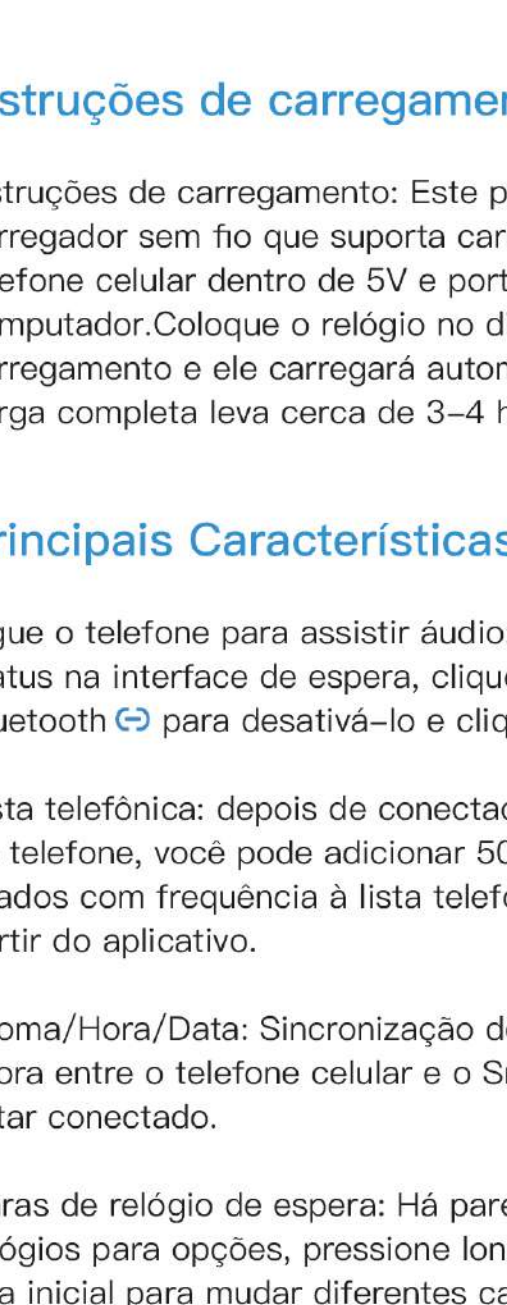

Upper Button

Bottom Button

Upper crown: Rotate to scroll the menu up and down. Click to enter the main menu. After entering the main menu, double-click to switch the menu style. Press and hold to enter the voice assistant standby interface. Double-click to enter the background management.

Bottom button: Long press to enter the turn on and off, short press to enter the shortcut menu and status bar, also to customized function. **Press and hold for 15 seconds to reset if crashes.**

Remote Control (Music): Allows to activate and control music playback on the phone via the Smart Watch (a music playback app should be installed on the phone).

About: Check model number, Bluetooth address, version number.

Reset: Tap to reset all data (factory mode).

Alarm Function: You can set several alarm times via the MActive Pro app on the phone.

Sedentary, drink reminder: Via the App set a time for exercise and/or a reminder to drink.

Find Phone Function: As the device and phone are connected, the Find Phone Function can support locating your mobile phone. Tap "Find Phone" and locate your phone via the ringtone/sound coming from your phone.

Wrist Wakeup: You can "wake up" the watch with wrist movement. Please set this function with the app. Please note that this might increase power consumption.

Warranty Details

The manufacturer/distributor warrants the product to be free from defects in workmanship for a period for 12 months from date of purchase. Defects that will occur under normal use and care will be compensated, replaced or refunded at our discretion.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable. Please keep your purchase docket, tax invoice or receipt as the best proof of purchase, and as proof of date on which the purchase was made.

Extent of Warranty

This warranty only covers defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not cover batteries or any other consumable items.

Normal Wear and Tear

Normal wear and tear of the product or parts of the product is not covered by this warranty.

Not Included in the Warranty Terms

This warranty does not include:

Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.

Any product that has not been installed, operated or maintained in accordance with the manufacturer's instruction manual provided with the product.

Any product that has been used for purposes other

Relógio inteligente

Manual do Utilizador

A TECNOLOGIA QUE INSPIRA VIDA

Obrigado por escolher o nosso produto!

Para ter uma compreensão abrangente e usar este dispositivo, para conhecer todos os recursos e método de operação simples, leia este manual primeiro.

As funções no manual do usuário podem ser pouco diferentes com o físico, por favor, faça os produtos finais como o padrão.

Os erros de digitação neste manual e discrepâncias serão atualizados em tempo hábil com os produtos mais recentes. Se tivermos atualizações, este manual estará sujeito a alterações sem aviso prévio. A nossa empresa reserva-se o direito de interpretação final.

Pacote: Caixa de presente x1 / Manual do usuário x1 / Unidade de dispositivo x1 / Carregador x1

Observação

Este produto tem uma bateria de lítio recarregável embutida. Advertências de segurança para uso em bateria: não desmontar, golpear, apertar ou colocar em fogo; se estiver severamente inchado, não continue a usá-lo; não o coloque em um ambiente de alta temperatura; não use a bateria depois que ela estiver imersa em água.

Não usá-lo quando tiver um chuveiro / banho quente ou sauna, os vapores entrarão no hospedeiro, arranhão de danos de componentes periféricos. Todos estes estão além do âmbito da garantia.

Este produto não é um dispositivo médico. Os dados e sugestões de saúde fornecidos são apenas para referência, e não como base para diagnóstico e tratamento.

Configuração da mensagem

Em App — Dispositivo — Notificações, selecione os Aplicativos correspondentes, ative o interruptor.

E se eu não receber o aviso?

1. notificação do relógio apenas notificações síncronas do telefone do centro de notificação, como chamadas recebidas, SMS, WhatsApp, WeChat etc., se o telefone não receber notificações no centro de notificação, então o relógio também não pode recebê-los, ele deve definir com o telefone capaz de receber notificações dos aplicativos correspondentes, ative a permissão de notificação na configuração do telefone.
2. Digite o APP para desbloquear o relógio. Depois de desligar, insira o dispositivo Bluetooth do telefone celular para ver se conectou o dispositivo "Fit 4 Pro", cancele o emparelhamento se tiver, desligue o Bluetooth do telefone e ligue-o novamente para se conectar.

Conexão

Assista se conecta ao telefone, baixe o aplicativo no telefone no início, consulte os seguintes métodos.

Android / iOS Phone: Digitalize acima da imagem do código QR por navegadores ou por qualquer Scanner para baixar.

Após a instalação, ligue o telefone Bluetooth e vá para App, confirme que as notificações e todas as outras permissões solicitadas pelo App estão ativadas e preencha informações pessoais. Toque em "Adicionar dispositivo", pesquise o dispositivo "Fit 4 Pro" (ligue o GPS no smartphone antes de ligar) e toque em conectar.

3. Se todas as etapas acima não puderem resolver o problema de notificação, desinstale o aplicativo e baixe-o novamente. Lembre-se de concordar com todas as permissões que o App pede quando a instalação estiver concluída e logo no início ative o App e, em seguida, reconecte-se novamente.

Atualização do firmware

Como Bluetooth conectado, no App, toque em " Dispositivo— "Versão de firmware"— ele irá lembrá-lo se há uma nova versão disponível para atualização. Durante a atualização, ele mostrará uma barra de processo, aguarde até ser concluído. O Watch reiniciará e reconectará o aplicativo do telefone. Não opere o relógio durante a atualização. Demora 3-5 minutos.

Instruções de carregamento:

Instruções de carregamento: Este produto adota um carregador sem fio que suporta carregadores de telefone celular dentro de 5V e porta USB do computador.Coloque o relógio no disco de carregamento e ele carregará automaticamente. Uma carga completa leva cerca de 3-4 horas.

Principais Características

Ligue o telefone para assistir áudio: insira a barra de status na interface de espera, clique no ícone Bluetooth para desativá-lo e clique para ativá-lo.

Lista telefônica: depois de conectado ao aplicativo do telefone, você pode adicionar 500 contatos usados com frequência à lista telefônica do relógio a partir do aplicativo.

Idioma/Hora/Data: Sincronização do idioma/ data /hora entre o telefone celular e o Smart Watch após estar conectado.

Caras de relógio de espera: Há pares de caras de relógios para opções, pressione longo 3 segundos na tela inicial para mudar diferentes caras de relógio; também permite baixar novos mostradores de relógio no App; é capaz de personalizar suas fotos como fundo de face de relógio.

Monitor de sono: O monitoramento de sono será ativado automaticamente das 22:00 às 8:00 do dia seguinte. Você pode verificar os detalhes da qualidade do sono com o aplicativo no telefone.

Notificações: Sincronização e exibição de notificações de aplicativos como Facebook, WhatsApp, SMS, E-mail etc., entre o telefone celular e o Smart Watch. Até 8 notificações podem ser exibidas no relógio. Ajuste as configurações no aplicativo MActive Pro e permita que as notificações sejam exibidas (permissões do aplicativo). Ele é capaz de recusar chamadas recebidas via relógio.

Função Cronômetro: Pressione o início e pausa, novamente pressione para parar.

Informação da atividade: Mostrando os dados de treino e saúde incluindo Passos, Distância, Consumo de calorias. Esses dados serão salvos até meia-noite (12:00 am) todos os dias e, em seguida, redefinidos para 0 valores para o dia seguinte. Você pode procurar dados anteriores no Histórico.

Exercício: selecione um modo esportivo para gravar seu treino. Entre para iniciar a atividade, deslize para a direita para pausar o treino, toque para terminar o treino. Ele registra a duração, calorias, frequência cardíaca etc.

Função da monitoração da frequência cardíaca: Quando esta função é ativada, a frequência cardíaca está sendo medida pelo dispositivo que varre o capilar da superfície da pele com diodos ópticos verdes. Aguarde cerca de 2 segundos para começar a medir e gravar. Deslize para outros menus para parar de medir. Consulte online as informações sobre a frequência cardíaca média, frequência cardíaca durante o exercício para a sua faixa etária e sexo e/ou peça conselhos ao seu médico.

[Nota: O dispositivo não é um dispositivo médico. Quaisquer valores apresentados são apenas para referência.]

Botão Superior

Botão Inferior

Coroa superior: Gire para rolar o menu para cima e para baixo. Carregue para entrar no menu principal. Depois de entrar no menu principal, clique duas vezes para mudar o estilo do menu. Pressione e segure para entrar na interface de espera do assistente de voz. Carregue duas vezes para introduzir a gestão em segundo plano.

Botão inferior:Pressione longa para entrar no ligar e desligar, pressione curta para entrar no menu de atalho a barra de status, também para função personalizada. **Pressione e segure por 15 segundos para redefinir se falhar.**

Controle Remoto (Música): Permite ativar e controlar a reprodução de música no telefone através do Smart Watch (um aplicativo de reprodução de música deve ser instalado no telefone).

Sobre: Verifique o número do modelo, endereço Bluetooth, número da versão.

Redefinir: Toque para redefinir todos os dados (modo de fábrica).

Função de alarme: Você pode definir várias vezes de alarme através do aplicativo MActive Pro no telefone.

Lembrete sedentário, bebida: Através do aplicativo definir um tempo para o exercício e / ou um lembrete para beber.

Função Find Phone: Como o dispositivo e o telefone estão conectados, a função Find Phone pode ser usada para localizar de seu telefone celular. Toque em "Encontrar telefone" e localize o telefone através do toque/som vindo do seu telefone.

Despertar do pulso: Você pode "acordar" o relógio com movimento do pulso. Por favor, defina esta função com o aplicativo. Por favor, note que isso pode aumentar o consumo de energia.

Detalhes da garantia

O fabricante/distribuidor garante que o produto está livre de defeitos de mão de obra por um período de 12 meses a partir da data de compra. Defeitos que ocorrerem sob o uso normal e cuidados serão compensados, substituídos ou reembolsados a nosso critério.

Prova de compra

Esta garantia é válida para a compra original e não é transferível. Por favor, mantenha sua ficha de compra, fatura fiscal ou recibo como a melhor prova de compra e como prova da data em que a compra foi feita.

Extensão da garantia

Esta garantia cobre apenas defeitos de mão de obra ou peças. Todos os produtos ou peças defeituosas serão reparados ou substituídos. Esta garantia não cobre baterias ou quaisquer outros itens consumíveis.

Desgaste Normal e Rasgo

O desgaste normal do produto ou partes do produto não está coberto por esta garantia.

Não Incluído nos Termos de Garantia

Esta garantia não inclui:

Quaisquer defeitos causados por um acidente, mau uso, abuso, instalação ou operação inadequada, falta de cuidados razoáveis, modificação não autorizada, perda de peças, alteração ou tentativa de reparo por uma pessoa não autorizada pelo distribuidor.

Qualquer produto que não tenha sido instalado, operado ou mantido de acordo com o manual de instruções do fabricante fornecido com o produto.

Qualquer produto que tenha sido usado para fins diferentes do uso pretendido.

FCC Statement

This device complies with part 15 of the FCC rules.

Operation is subject to the following two

conditions: (1) this device may not cause harmful

interference, and (2) this device must accept

any interference received, including interference that may

cause undesired operation.

Changes or modifications not expressly approved by the

party responsible for compliance could

void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to

comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits

are designed to provide reasonable

protection against harmful interference in a residential

installation. This equipment generates

uses and can radiate radio frequency energy and, if not

installed and used in accordance with the

instructions, may cause harmful interference to radio

communications. However, there is no

guarantee that interference will not occur in a particular

installation. If this equipment does

cause harmful interference to radio or television reception,

which can be determined by

turning the equipment off and on, the user is encouraged

to try to correct the interference by

one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and

- receiver.

- Connect the equipment into an outlet on a circuit

- different from that to which the receiver is

- connected.

- Consult the dealer or an experienced radio/TV

- technician for help.

The device has been evaluated to meet general RF

exposure requirement. The device can be used

in portable exposure condition without restriction.